



ASSEMBLY INSTRUCTIONS

FULL BED

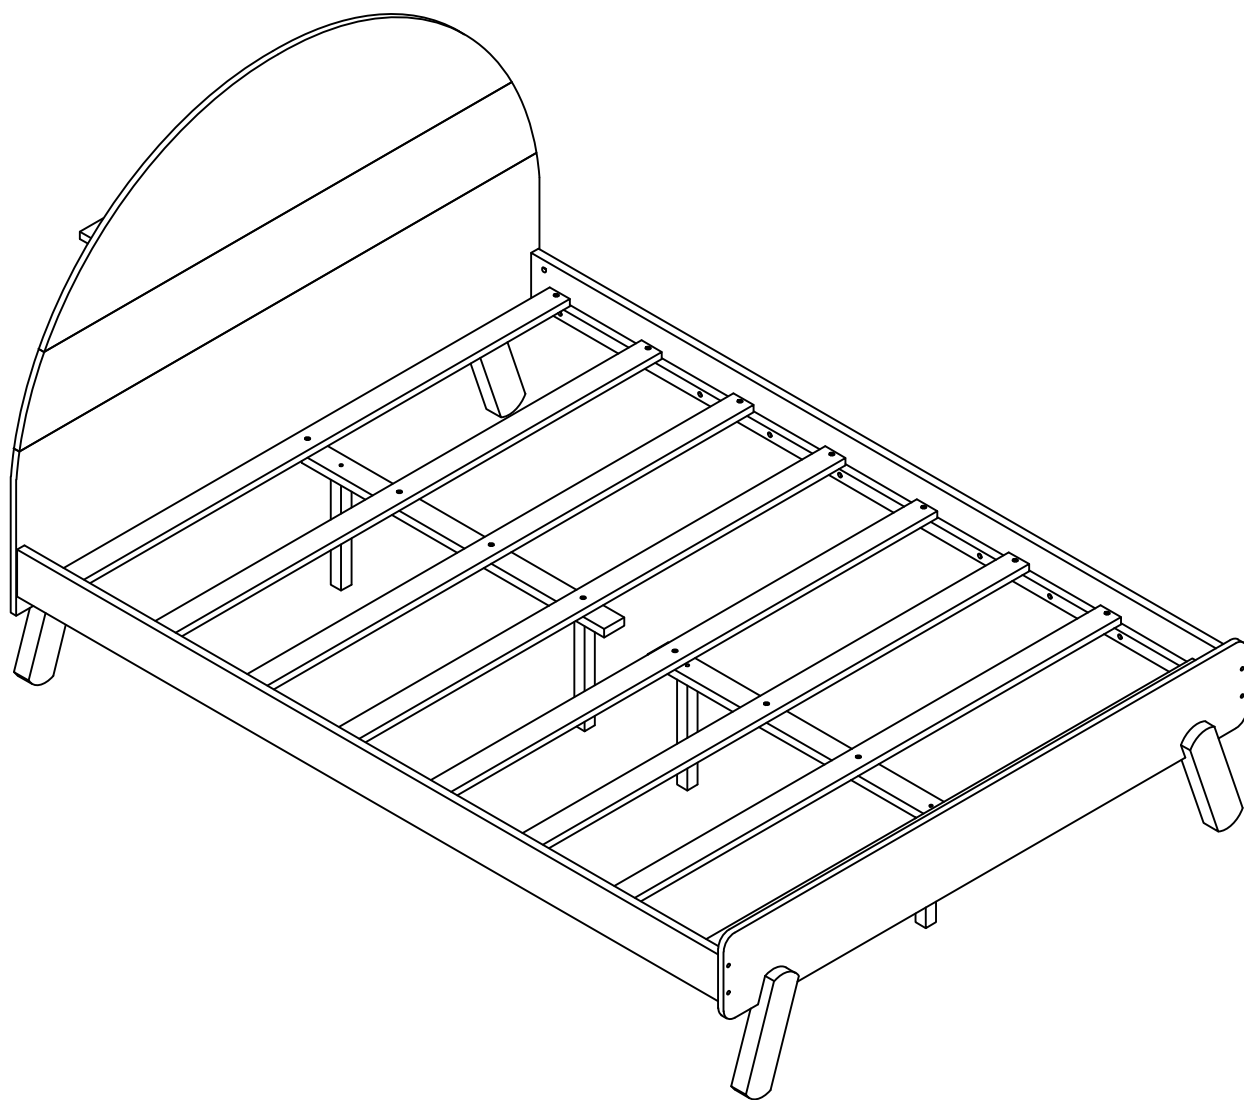













WF295687

ASSEMBLY INSTRUCTIONS

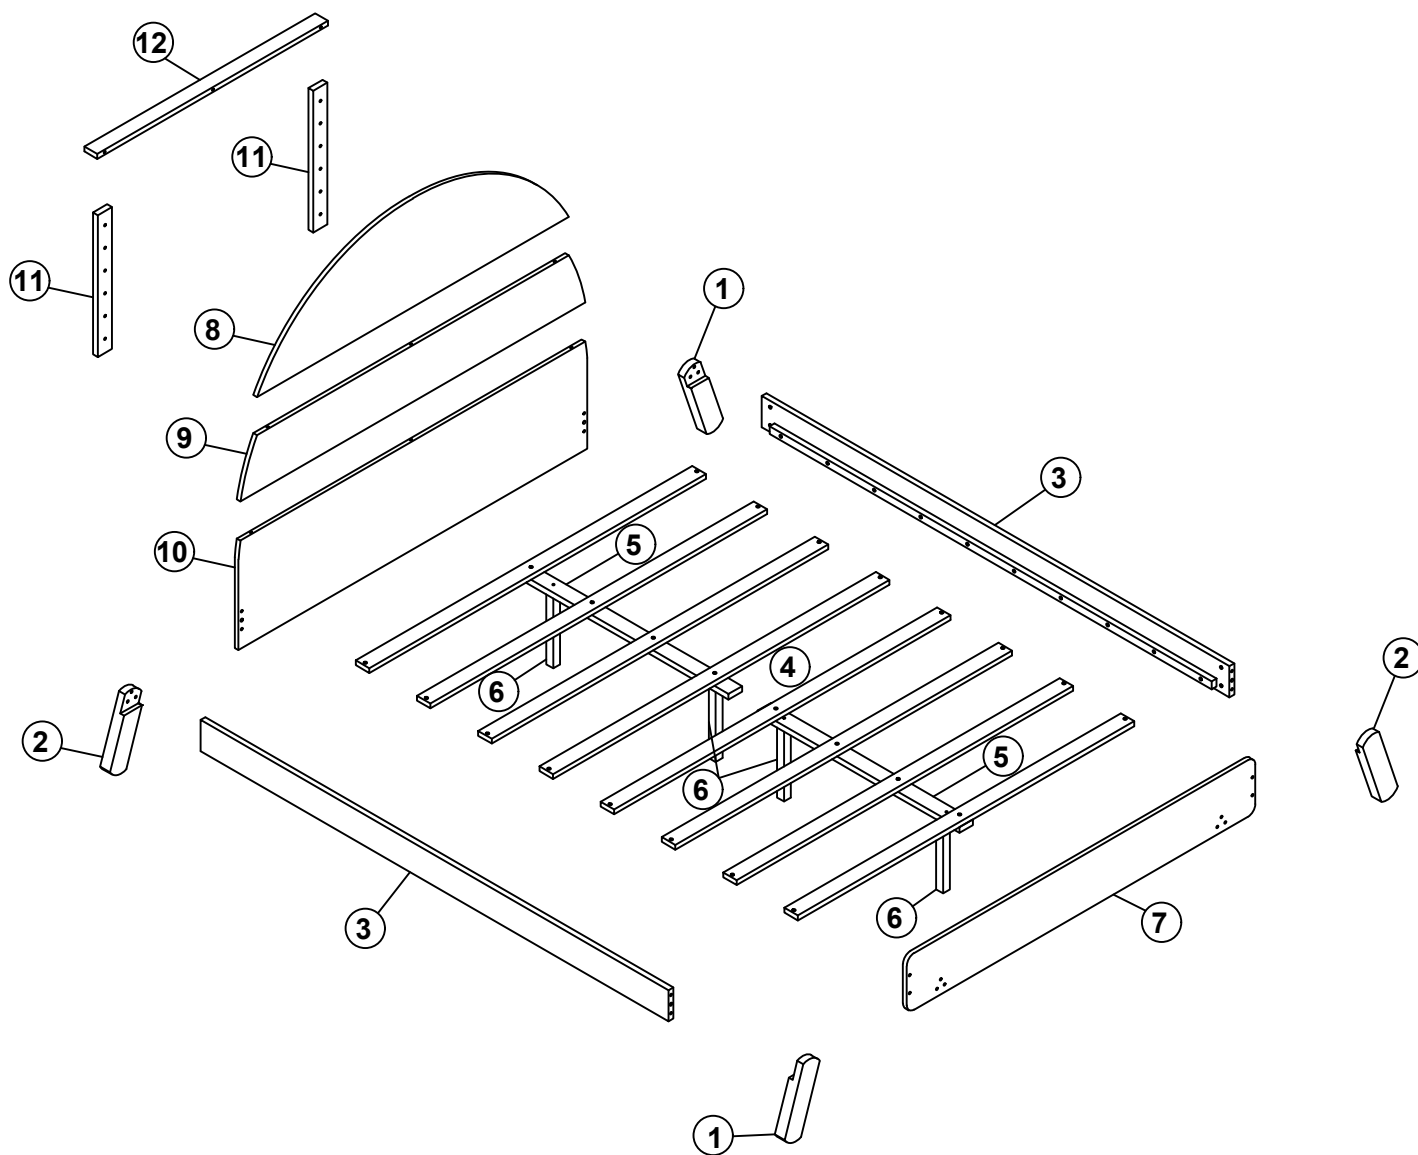










PARTS LIST

WF295687


1	Left front & right back legs 	2pcs	7	Headboard panel 	1pc
2	Right front & left back legs 	2pcs	8	Headboard panel 	1pc
3	Side rails 	2pcs	9	Headboard panel 	1pc
4	Slats 	8pcs	10	Headboard panel 	1pc
5	Center rails 	2pcs	11	Headboard support panels 	2pcs
6	Center rails support legs 	4pcs	12	Headboard support panel 	1pc




ASSEMBLY INSTRUCTIONS

HARDWARE LIST (WF295687)


A	Ø4x30		24PCS	F	Ø8x30		6PCS
B	1/4x65		8PCS	G	6.5x50		4PCS
C	1/4x60		3PCS	H	1/4x25		4PCS
D	1/4x30		24PCS	J	4x58		1PC
E	Ø10x40		4PCS				

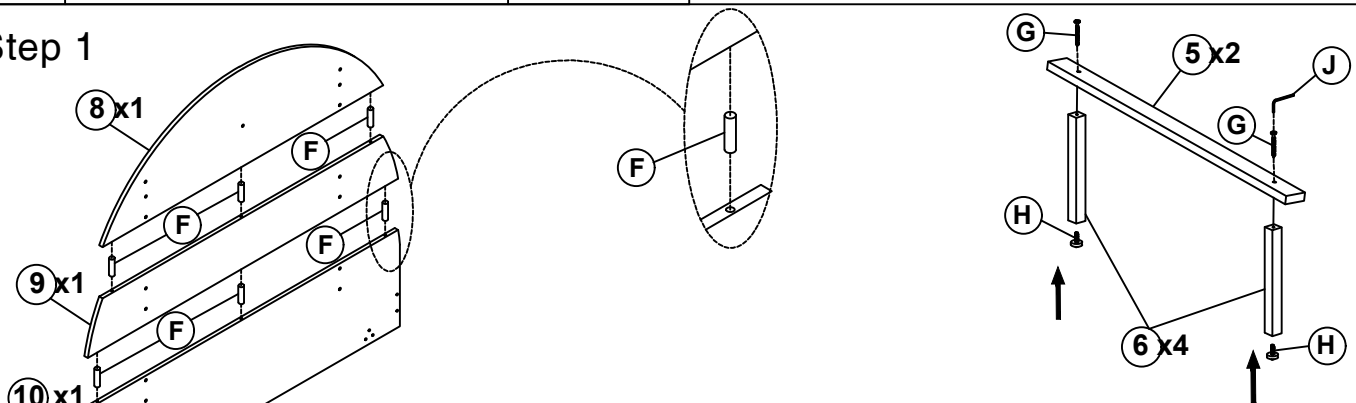


Step 1



F	Ø8x30		6PCS	G	6.5x50		4PCS
H	1/4x25		4PCS				

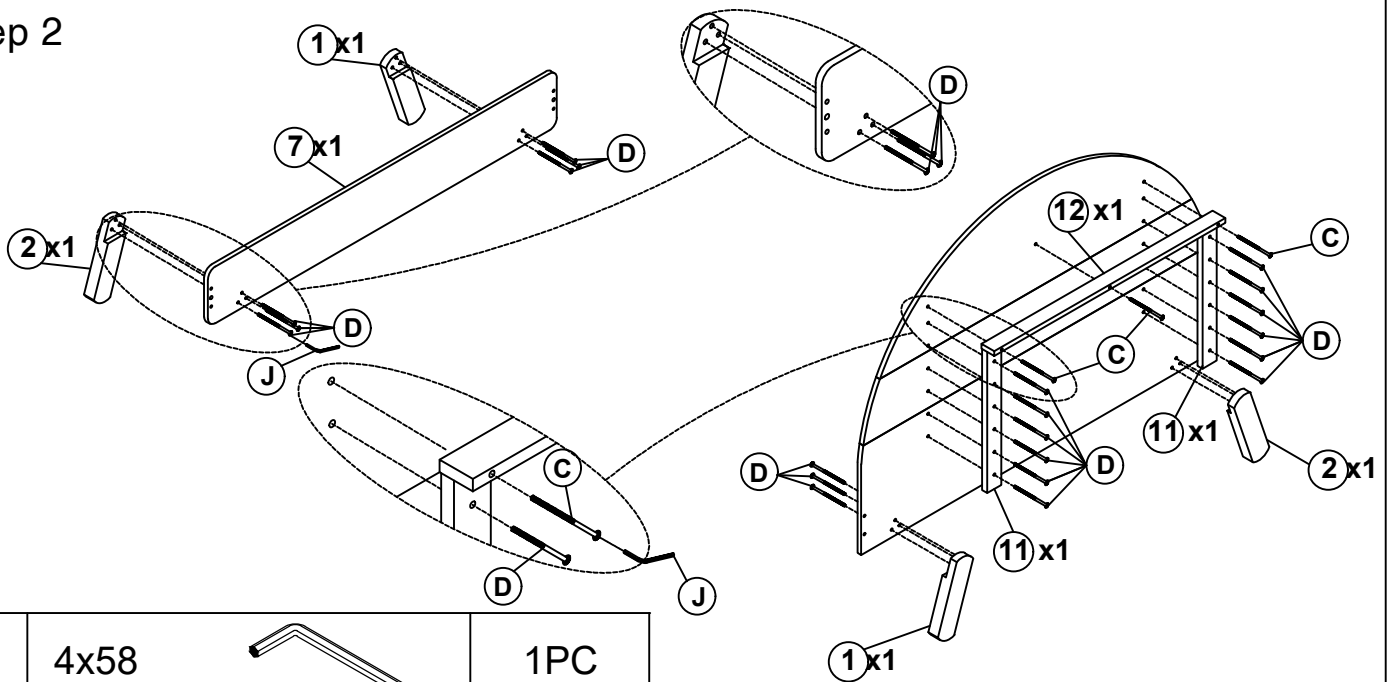
Step 2





J	4x58		1PC	C	1/4x60		3PCS
D	1/4x30		24PCS				


ASSEMBLY INSTRUCTIONS

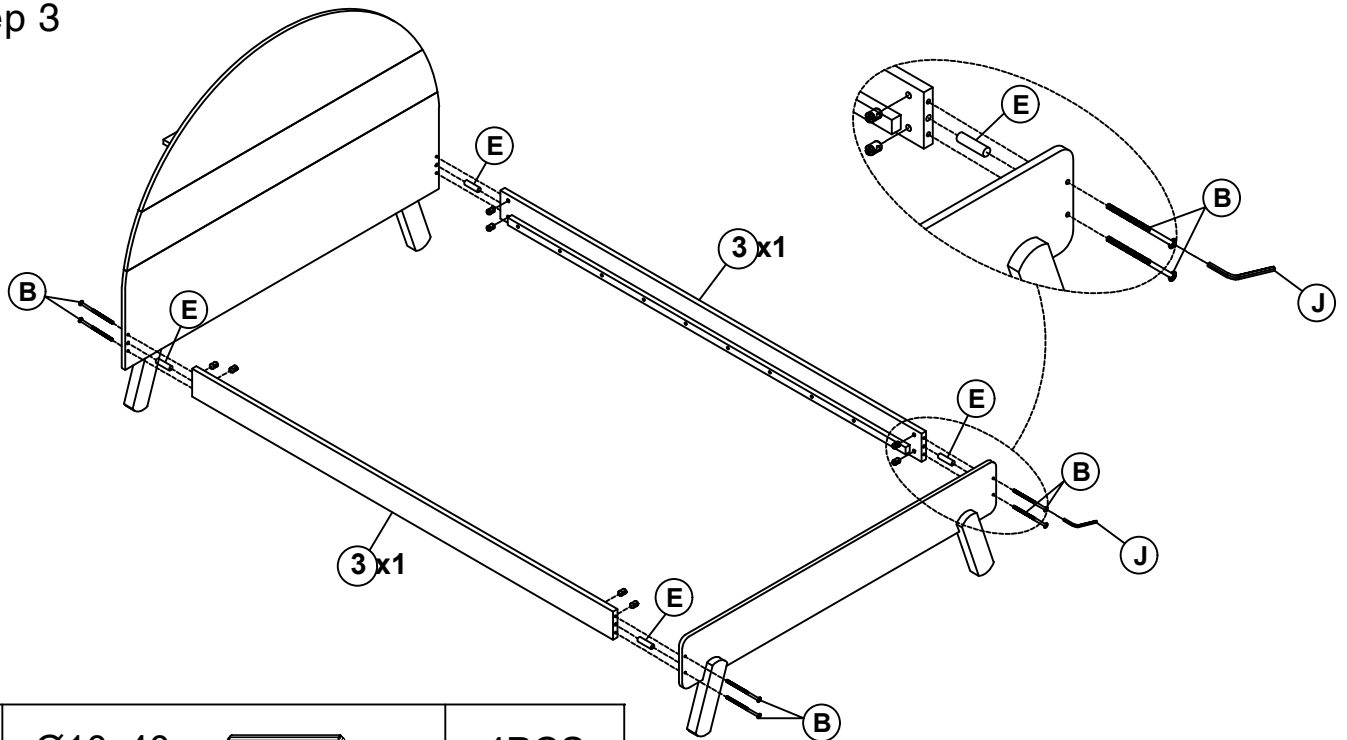Step 3




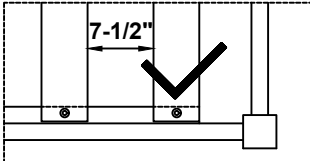
E	Ø10x40 	4PCS
B	1/4x65 	8PCS

Step 4 First attach 2pcs part 4 to the front and end of the frame between headboard. Then attach the remaining part 4 equidistantly between headboard

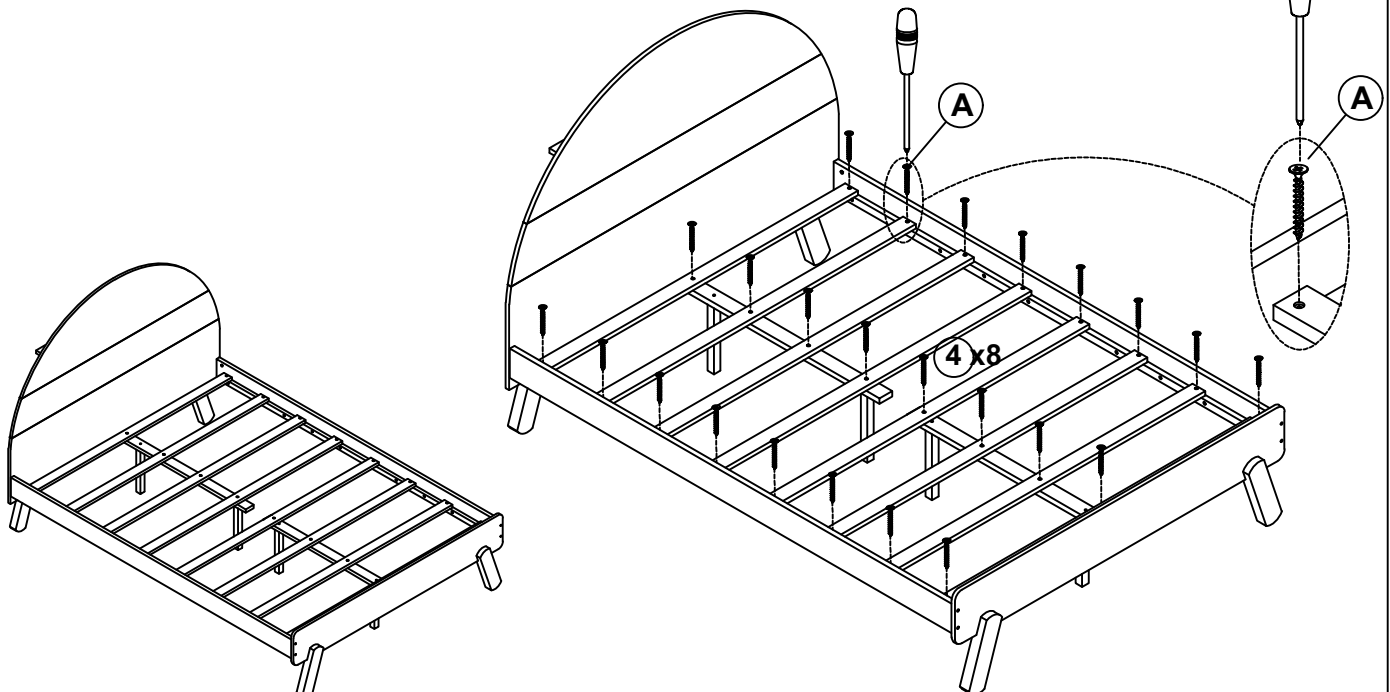


Note : Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

A	Ø4x30 	24PCS
----------	---	-------



7-1/2"

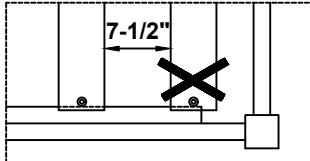

7-1/2"