

## Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND COULD BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

### HEADBOARD CARTON

- (1) HEADBOARD PANEL-1
- (2) FOOTBOARD PANEL-1


### SIDE RAIL CARTON

- (3) LEFT SIDE RAIL -1
- (4) RIGHT SIDE RAIL-1
- (5) CROSS RAILS -4
- (6) SUPPORT LEGS-4

### PART HARDWARE BAG

- (7) 5/16-18 X 1 3/4" FLAT ALLEN HEAD SCREW-4
- (8) 5/16" ID X 3/4" OD FLAT METAL WASHERS-8
- (9) 5/16-18 X 3/4" FLAT ALLEN HEAD SCREW-4
- (10) 1/4-20 X 1 1/2" FLAT ALLEN HEAD SCREW-4
- (11) 1/4" ID X 5/8" OD FLAT METAL WASHER-12
- (12) 1/4" -20 X 3/4" FLAT ALLEN HEAD SCREW-8
- (13) 5MM ALLEN WRENCH-1
- (14) PLASTIC GLIDE-4


NOTE: PLASTIC GLIDE PRE-INSTALLED

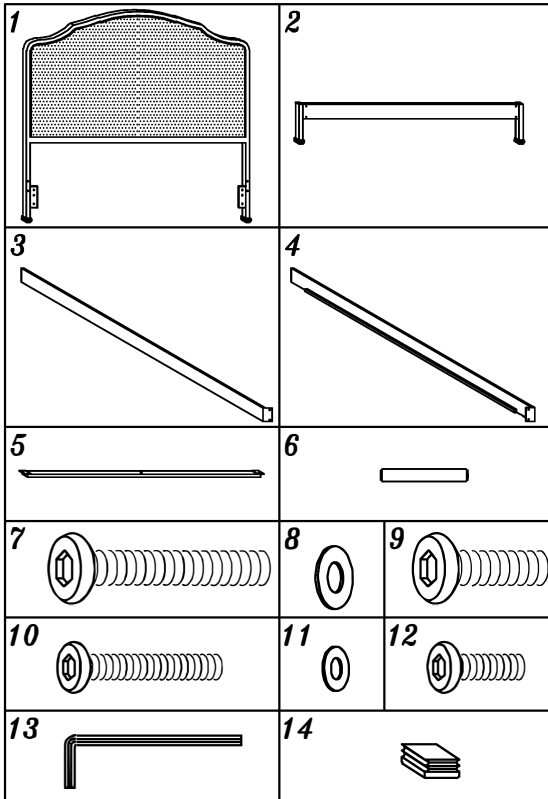

### Step 1- Assembly of Side Rails.

NOTE: FOR EASY ASSEMBLY YOU NEED THE HELP OF OTHER PERSON.

- Align holes on headboard panel (1) post with threaded holes on left side rail (3). SEE FIGURE 1
- Secure left side rail (3) with screw (7) and flat metal washer (8).
- Tighten screw (7) securely with Allen wrench (13).
- DO NOT TIGHTEN SCREWS COMPLETELY
- Repeat same steps with other headboard post.
- Align holes on right side rail (4) metal bracket with threaded insert on footboard panel (2). SEE FIGURE 2
- Secure left side rail (4) with screw (9) and flat metal washer (8). Use Allen wrench (13).
- Repeat same steps with left side rail (3).
- Now tighten screw (7) completely. SEE FIGURE 1

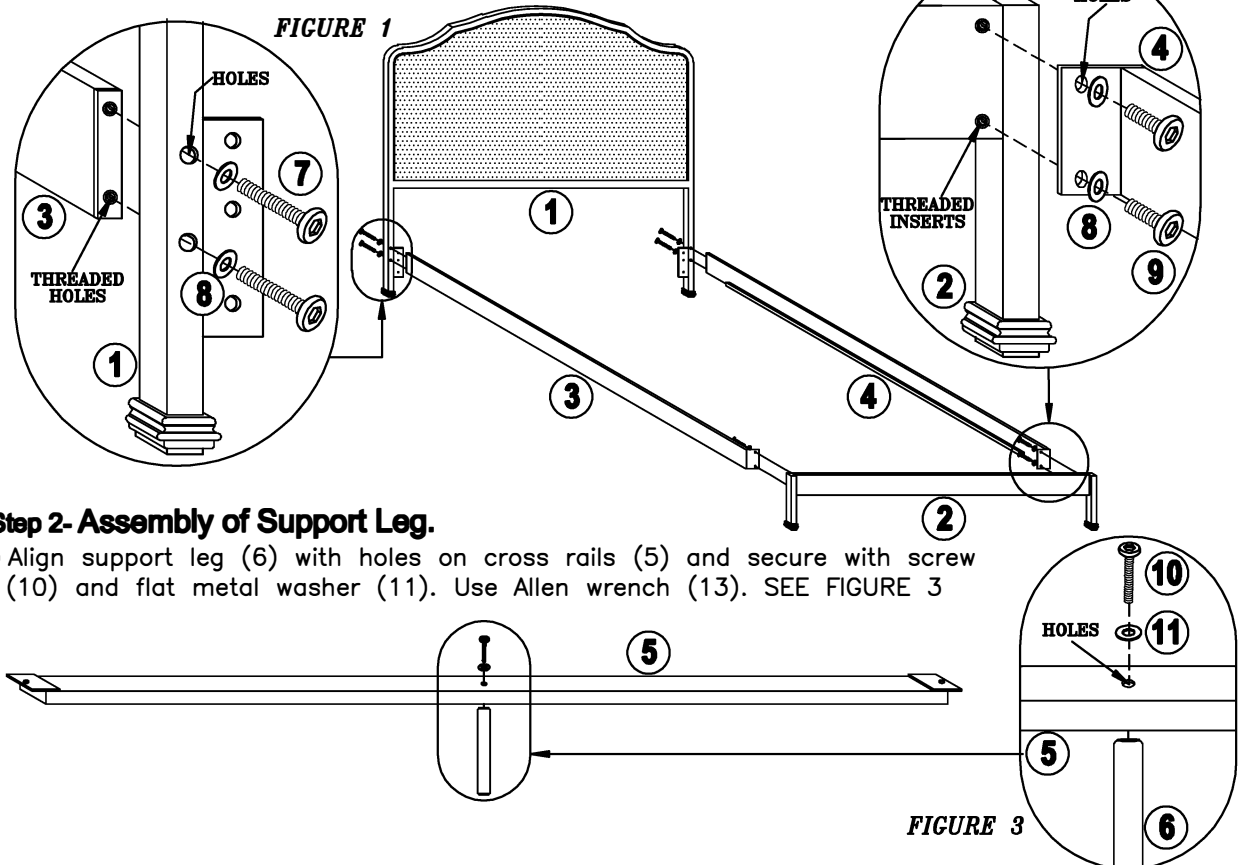

### Step 2- Assembly of Support Leg.

- Align support leg (6) with holes on cross rails (5) and secure with screw (10) and flat metal washer (11). Use Allen wrench (13). SEE FIGURE 3