


End Table

Assembly Instructions -Please keep for future reference

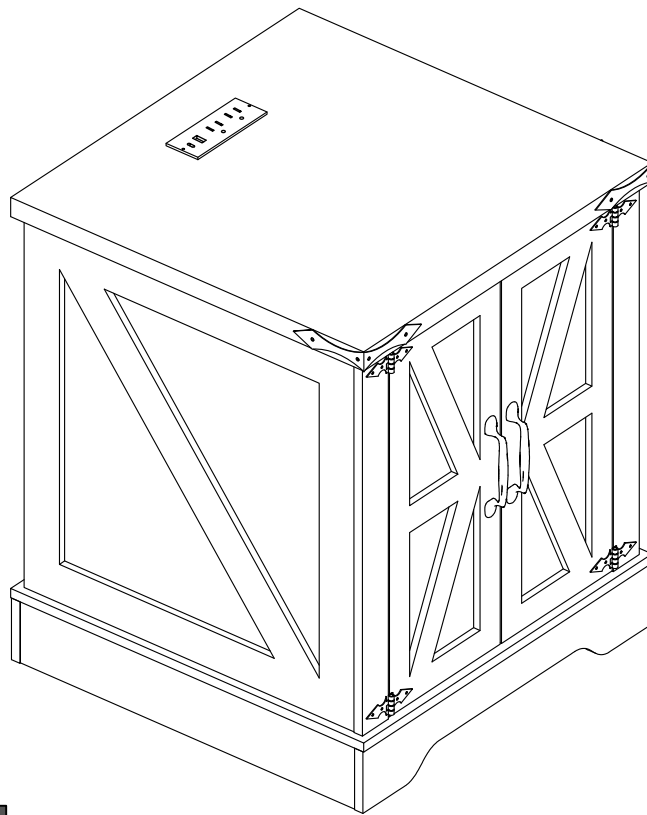

Dimensions





Width-19.7 inch
Depth-19.7 inch
Height-23.6 inch

Important -Please read these instructions fully before starting assembly



Components -Fittings

Please check you have all the panels listed below

Note:The quantitie below are the correcet amount to complete the assembly.In some cases more fittings may be supplied than are required.

(A)  Cam Bolt and lock x 26	(B)  Dowel x 36	(C)  5*40mm Screw x 6	(D)  3.5*15mm Screw x 6
(E)  Sticker Cover x 14	(F)  Hinge x 4	(G)  Handle x 2	(H)  4*20mm Screw x 4
(I)  2AC-1USB-1 TYPE C Power Strip x 1	(J)  Anti -tipping device x 1	(K)  Movable partition bracket x 4	(L)  Angle Iron x 2
(M)  Magnet x 1	(N)  3.5*12mm Screw x 26		

Tools required



Phillips screwdriver
(medium &large)

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

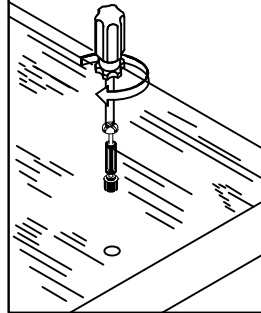

Step 2

Push the male camlock into the entry hole.

2

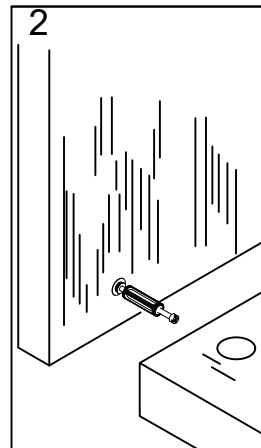


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

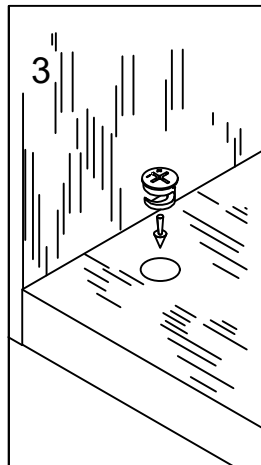


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4











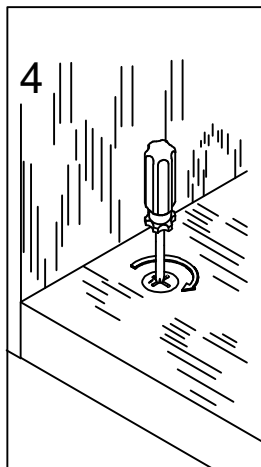


Assembly Instructions


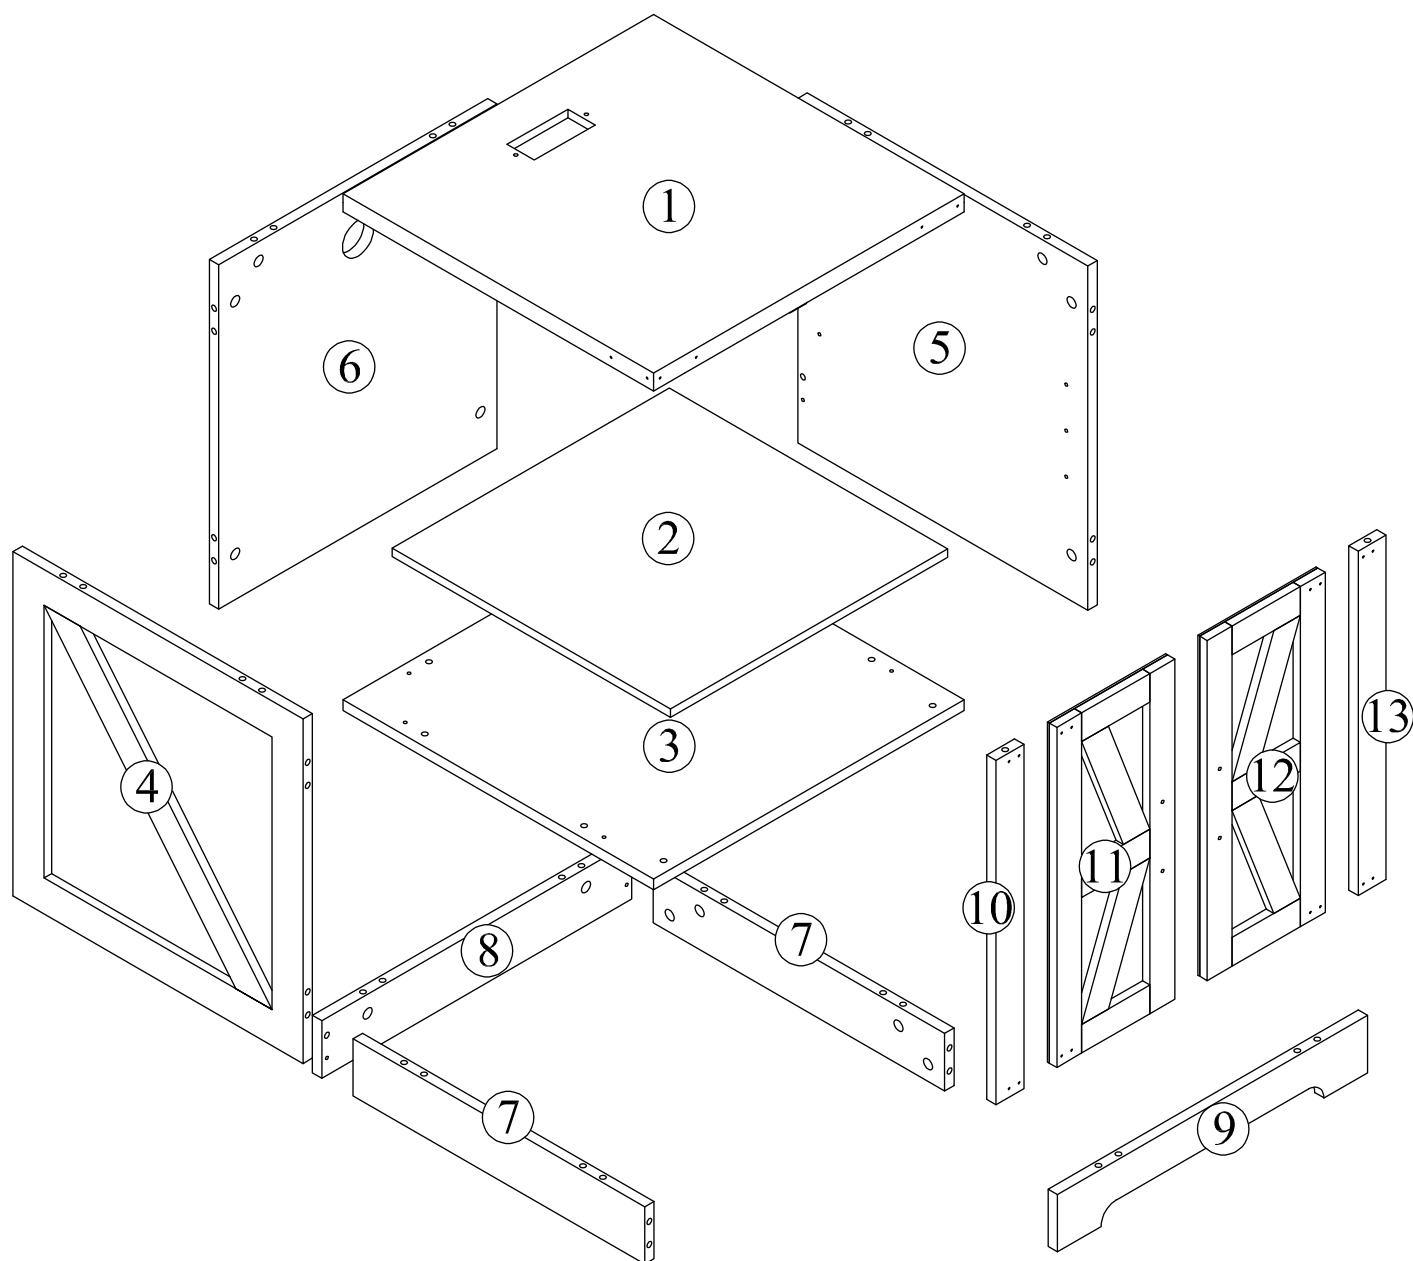


There is 1 box of this product.




N72P472220

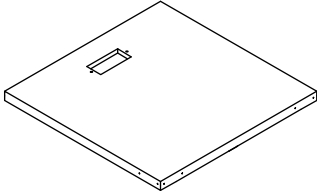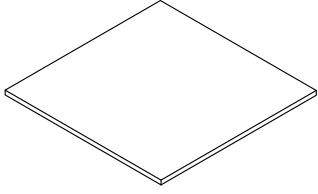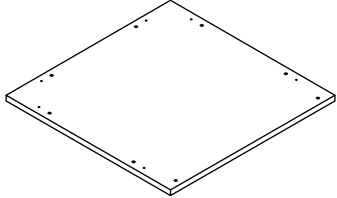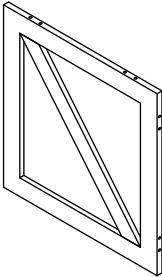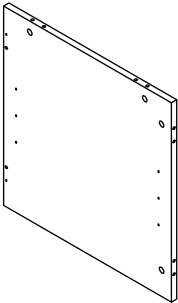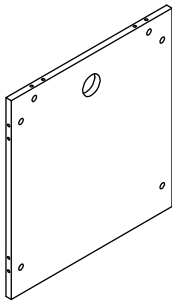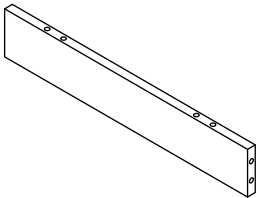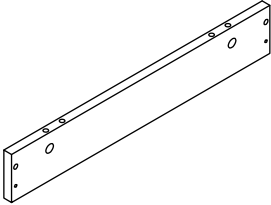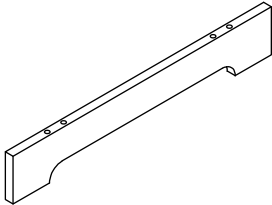① 500*500mm  1PC	② 446*446mm  1PC	③ 500*500mm  1PC
④ 480*467mm  1PC	⑤ 480*467mm  1PC	⑥ 480*448mm  1PC
⑦ 469*80mm  2PCS	⑧ 499*80mm  1PC	⑨ 499*80mm  1PC
⑩ 480*45mm  1PC	⑪ 474*190mm  1PC	⑫ 474*190mm  1PC
⑬ 480*45mm  1PC		

Step 1

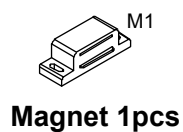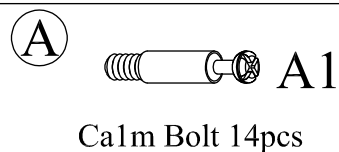


Step 2

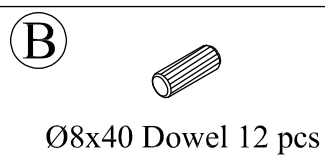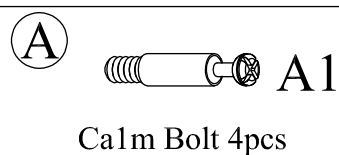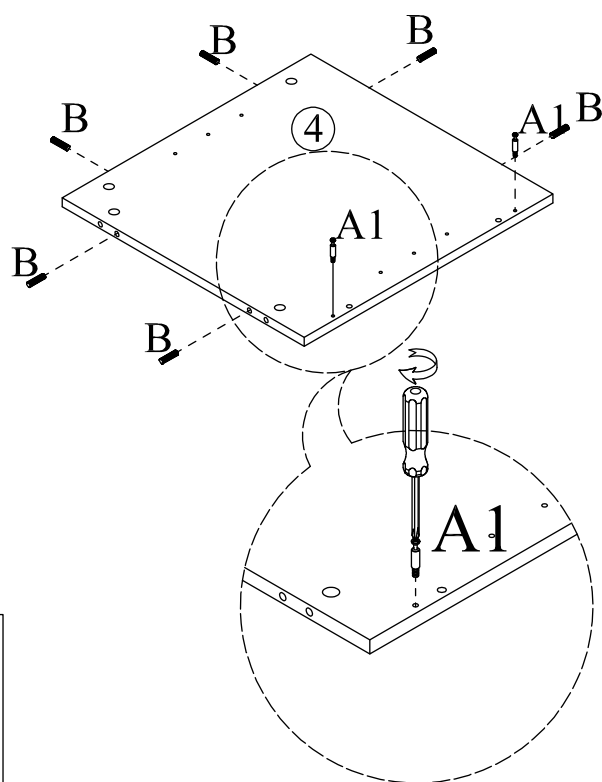

Assembly Instructions

Step 3

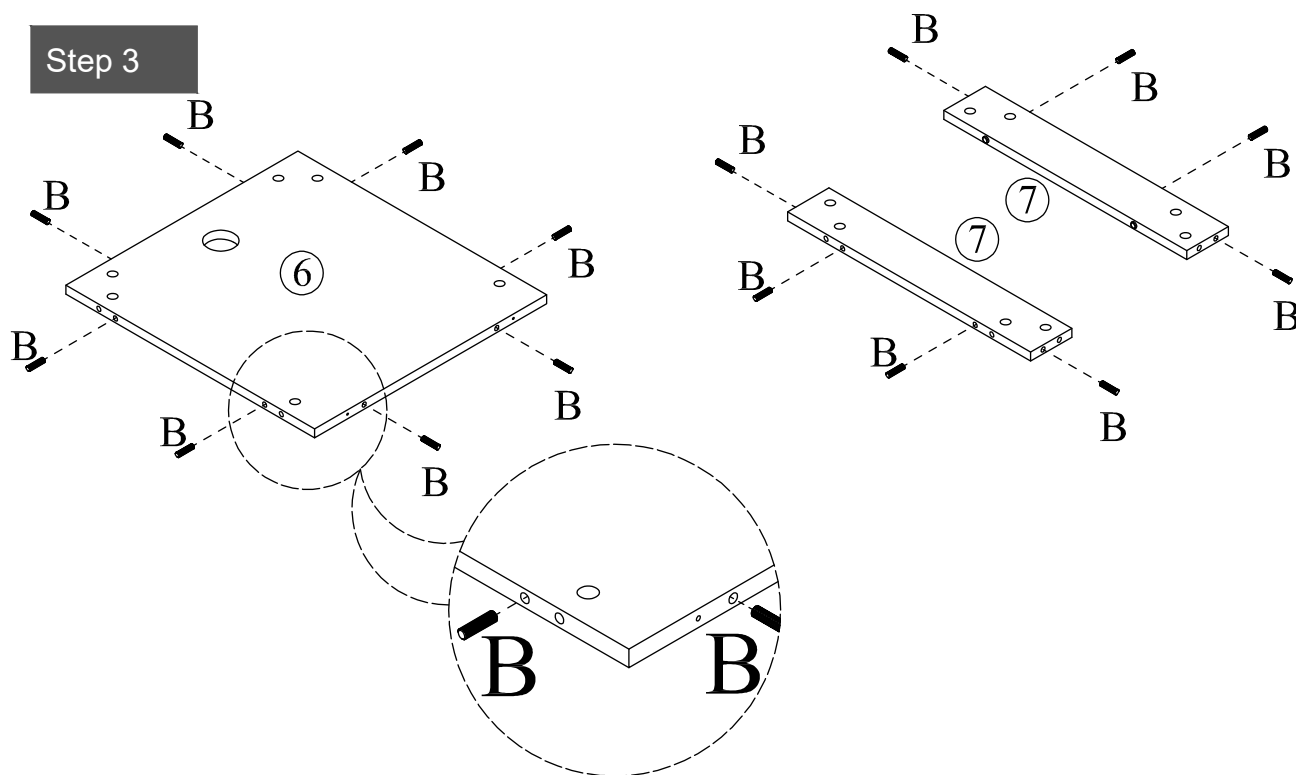


B




Ø8x40 Dowel 16 pcs

Step 4

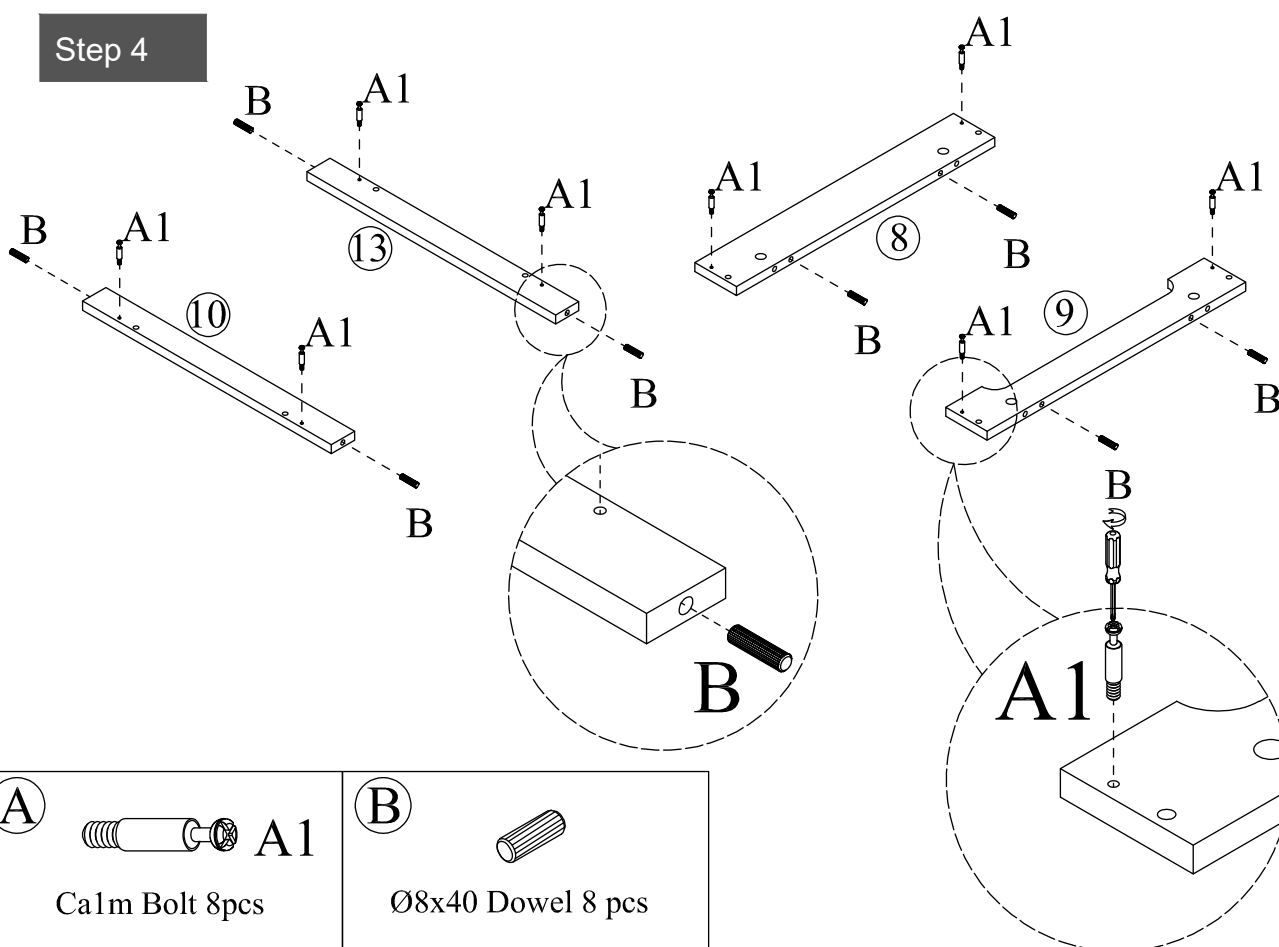

A



A1

Cal m Bolt 8 pcs


B



Ø8x40 Dowel 8 pcs

Assembly Instructions

Step 5

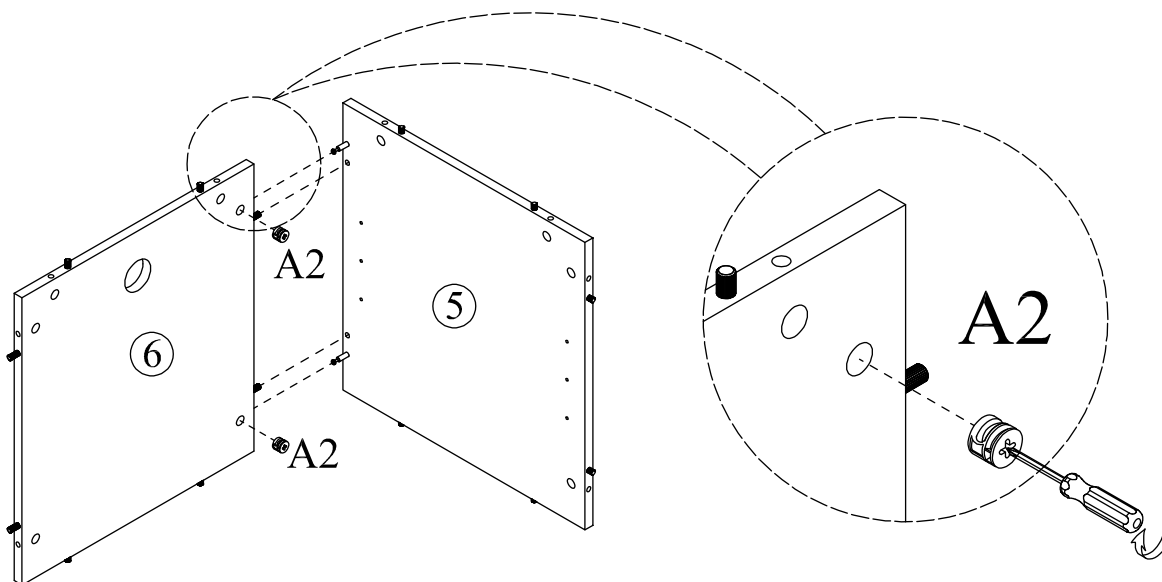


A




A2

Cam Lock 2 pcs

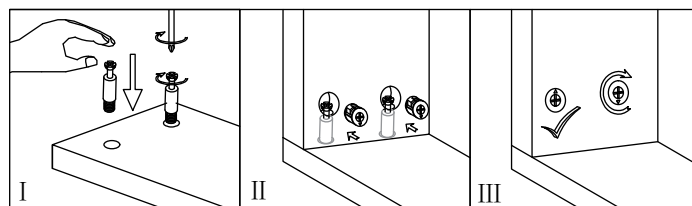

Step 6

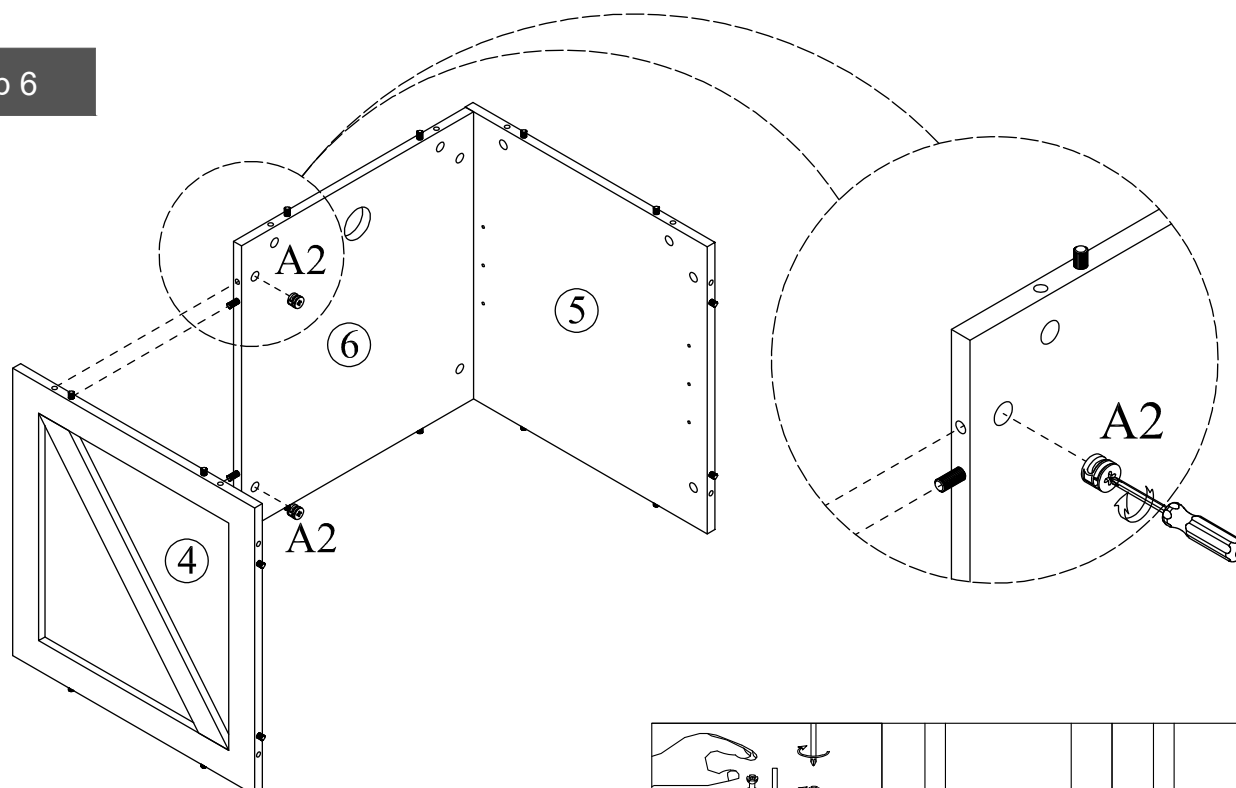


A




A2

Cam Lock 2 pcs

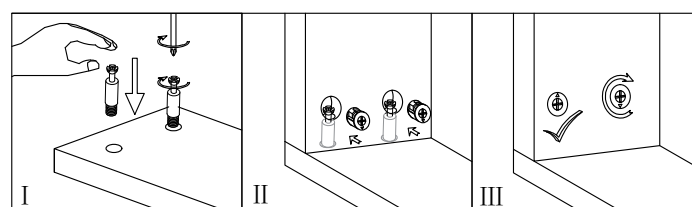

Assembly Instructions

Step 7

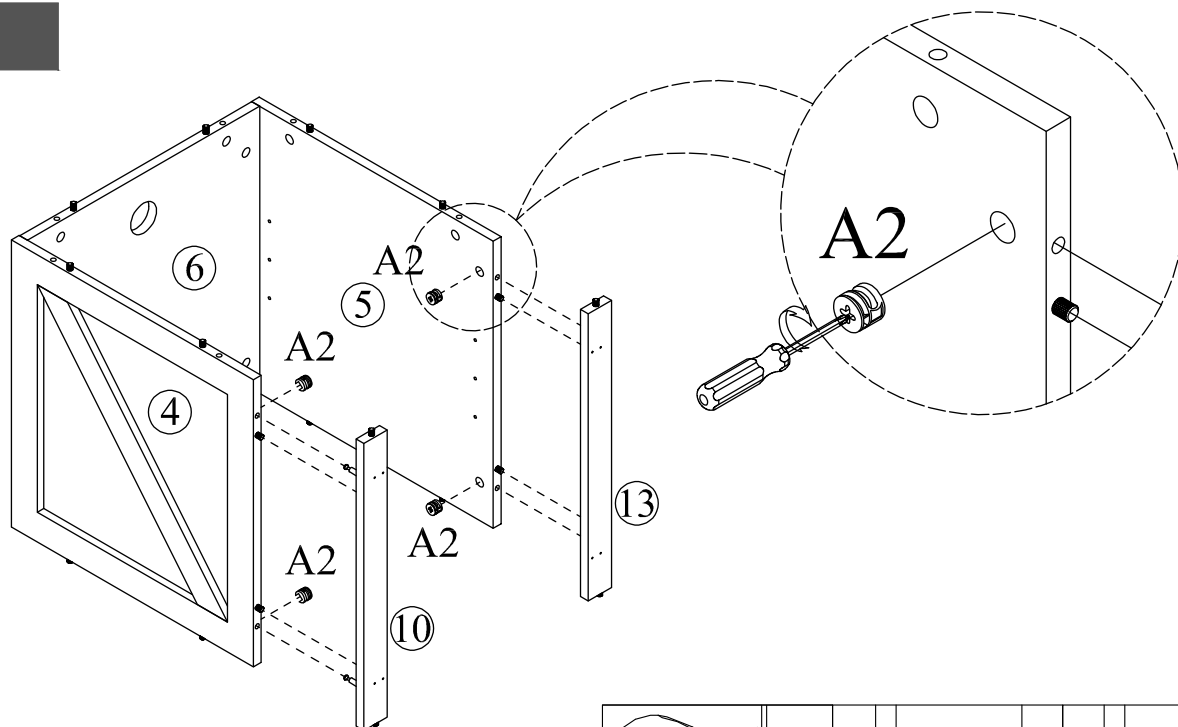


A




A2

Cam Lock 4 pcs

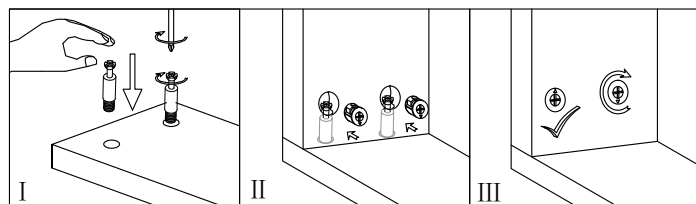

Step 8

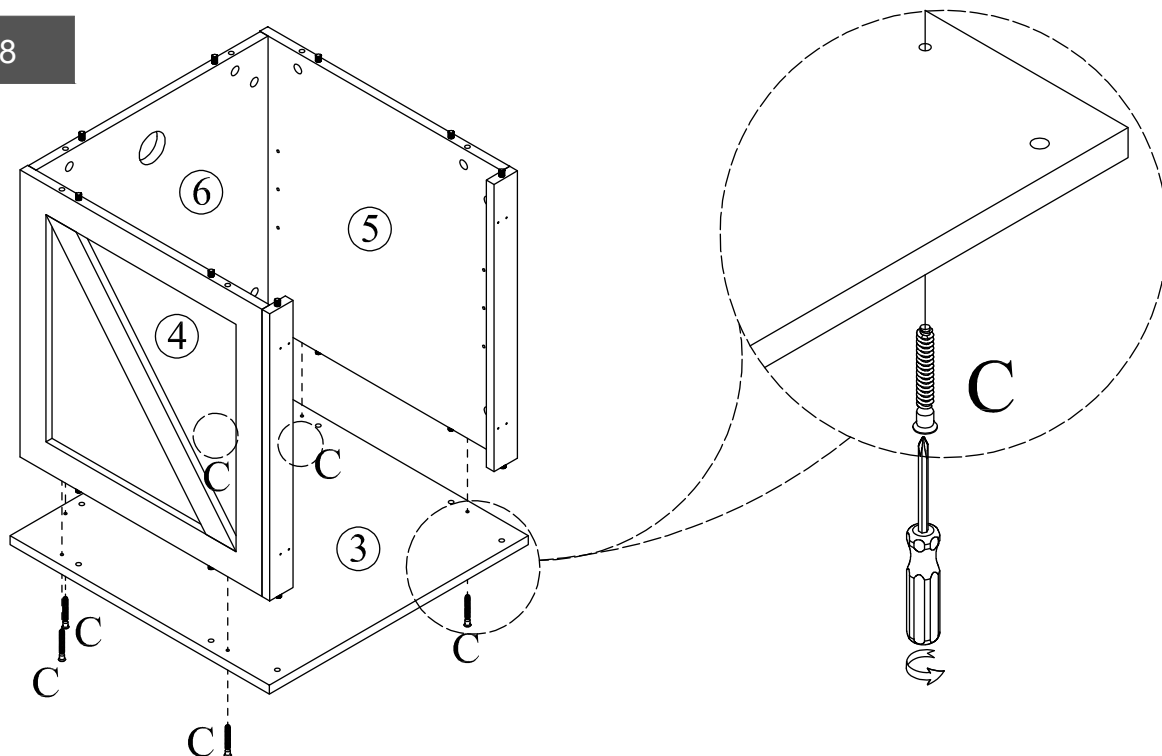


C



Ø5*40mm Screw 6pcs

Assembly Instructions

Step 9

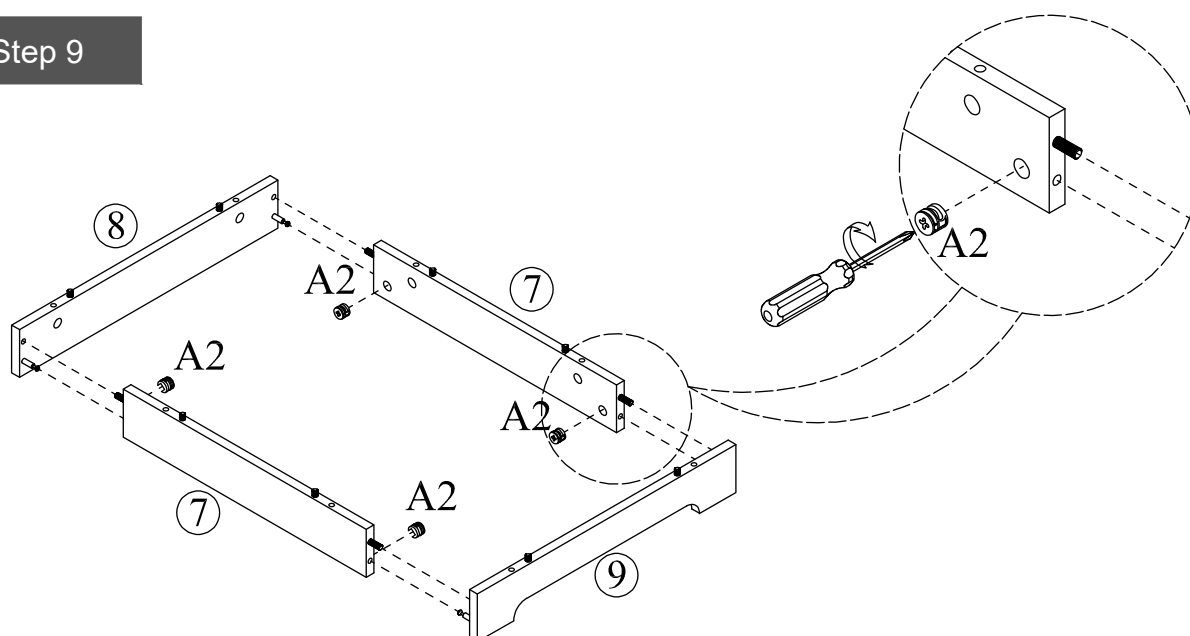


A




A2

Cam Lock 4 pcs

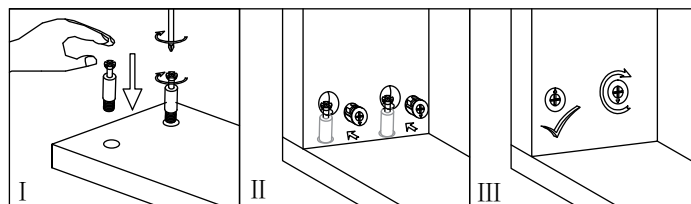

Step 10

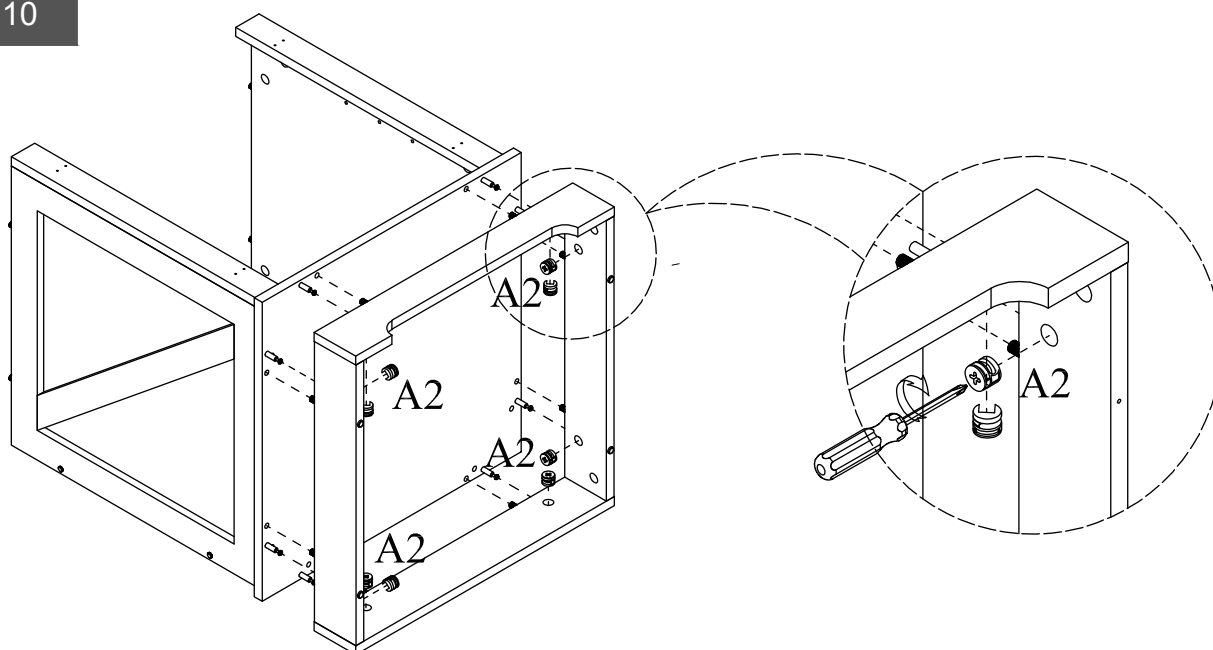


A






A2

Cam Lock 8 pcs


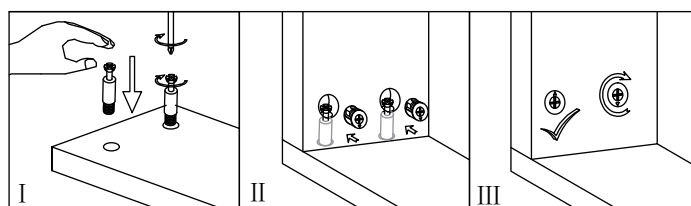


Assembly Instructions

Step 11

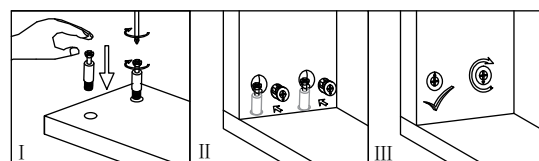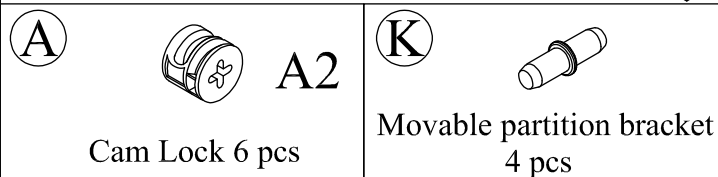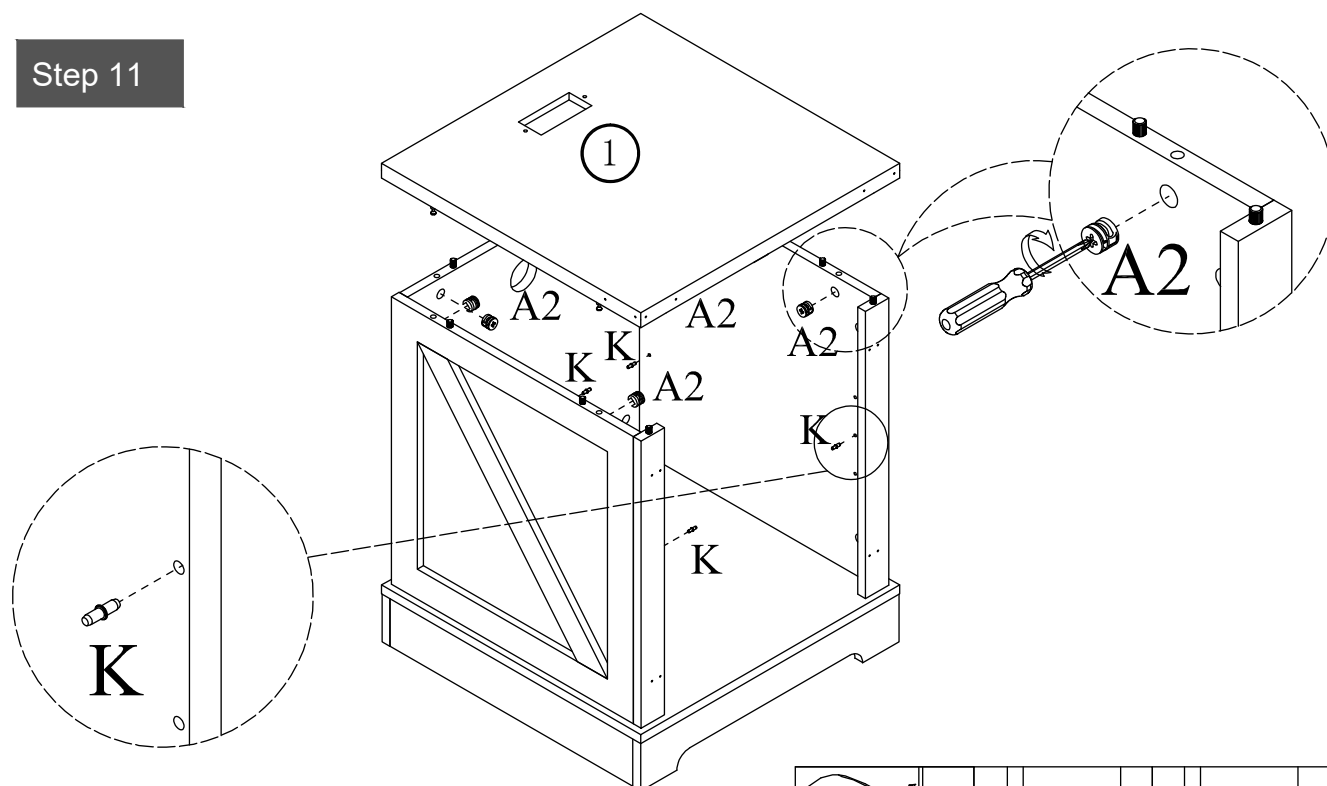


Step 12

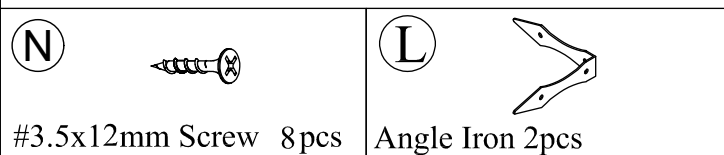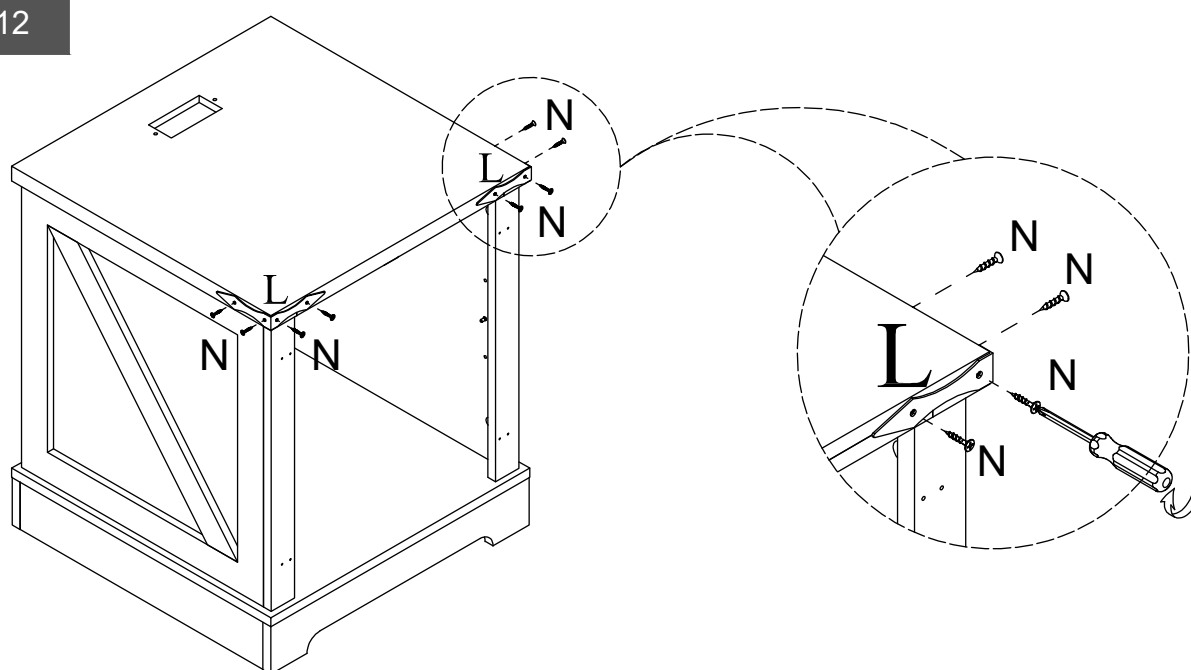

Assembly Instructions

Step 13

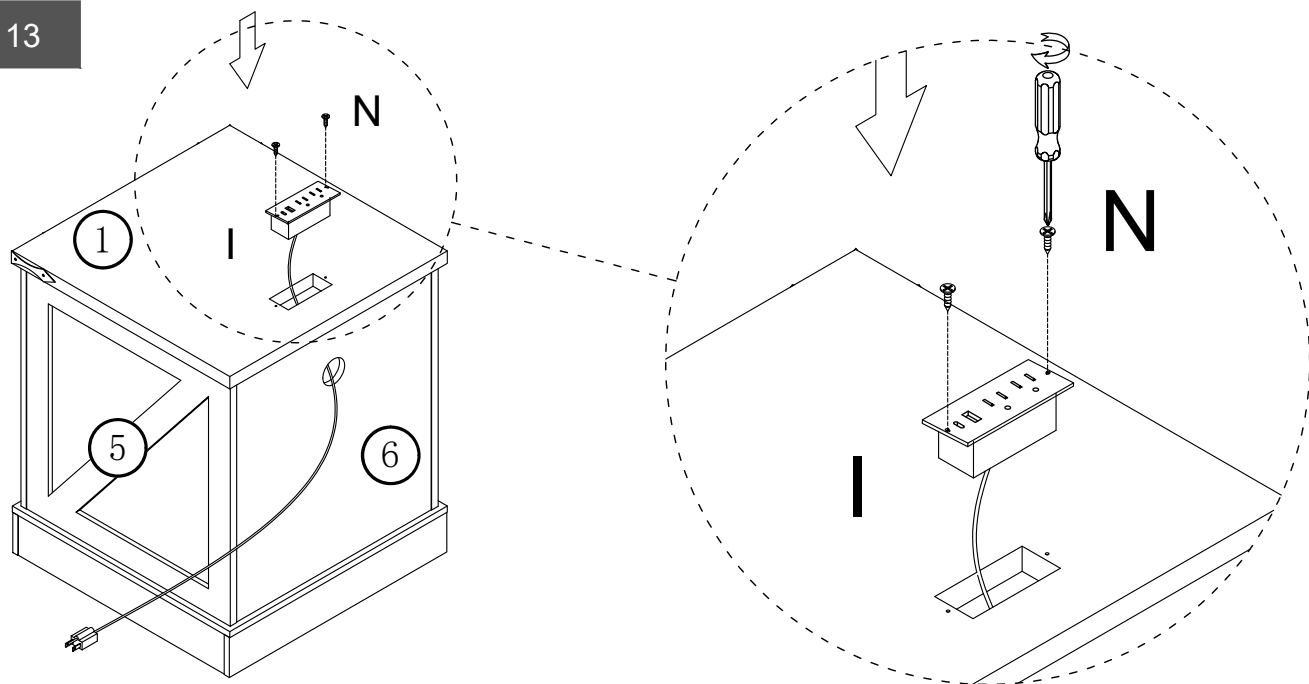


(N)




3.5*12mm Screw 2pcs

(I)



2AC-1USB-1TYPE C
Power Strip x 1

Step 14

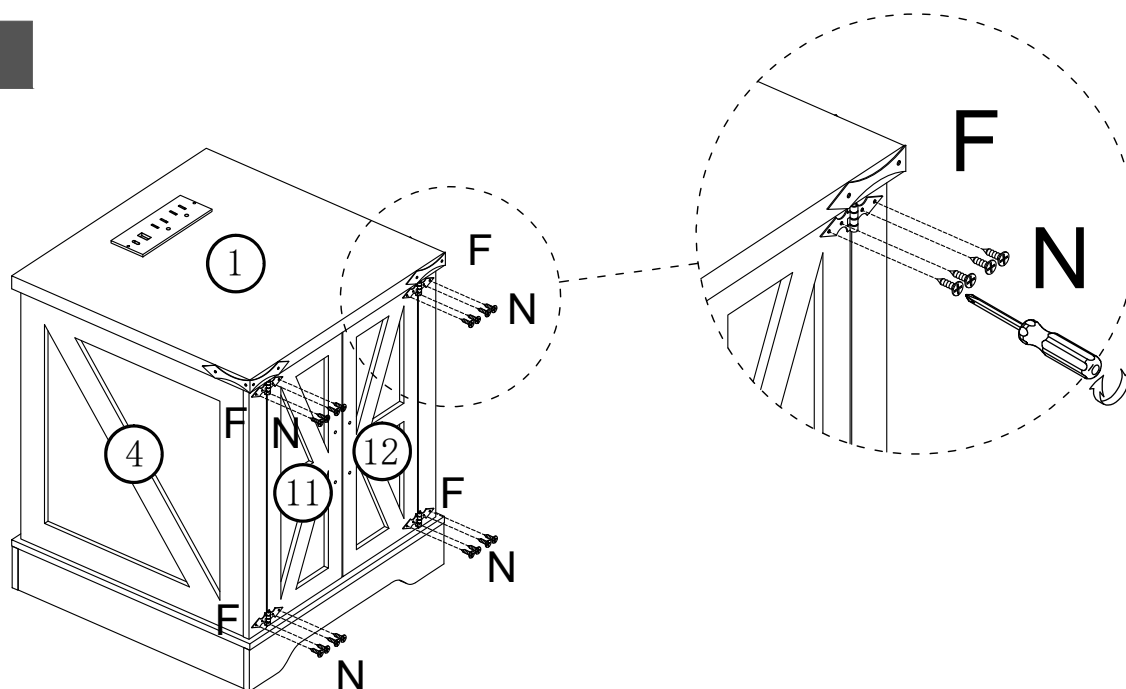

(F)



Hinge 4pcs


(N)



3.5*12mm Screw 16pcs

Assembly Instructions

Step 15

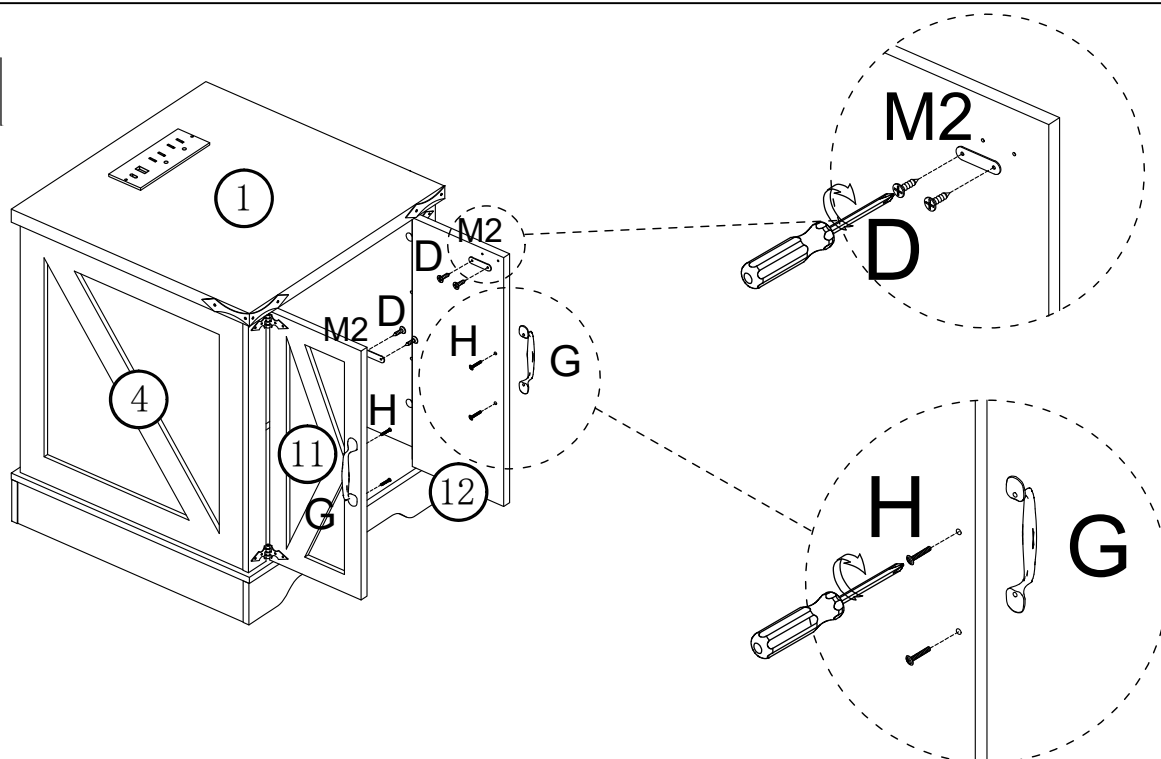

(G)




Handle 2pcs

(H)



4*20mm Screw 4pcs

(D)




3.5*15mm Screw 4pcs

(M2)




Magnet 2 pcs

Step 16

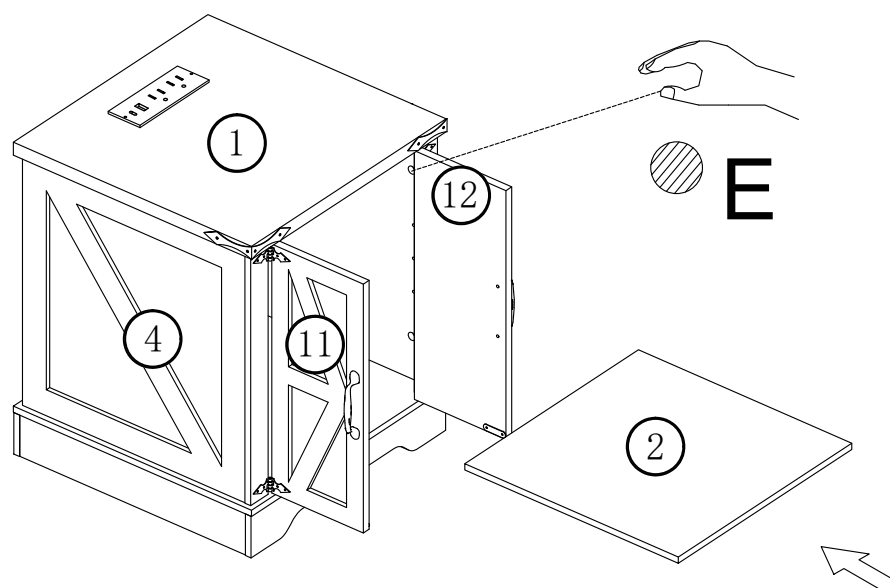

(E)




Sticker Cover x 14


Assembly Instructions

Step 17



step1

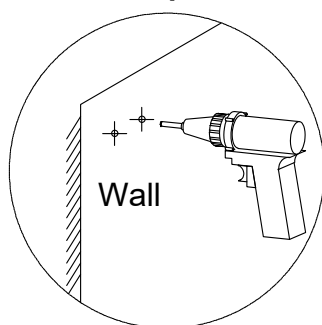


step2

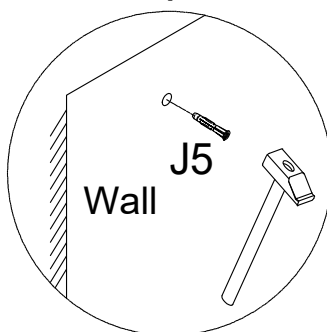



step3

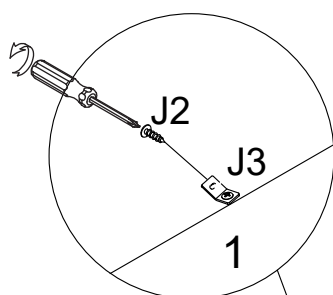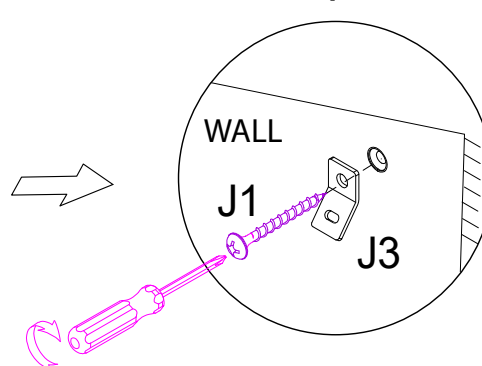

step4

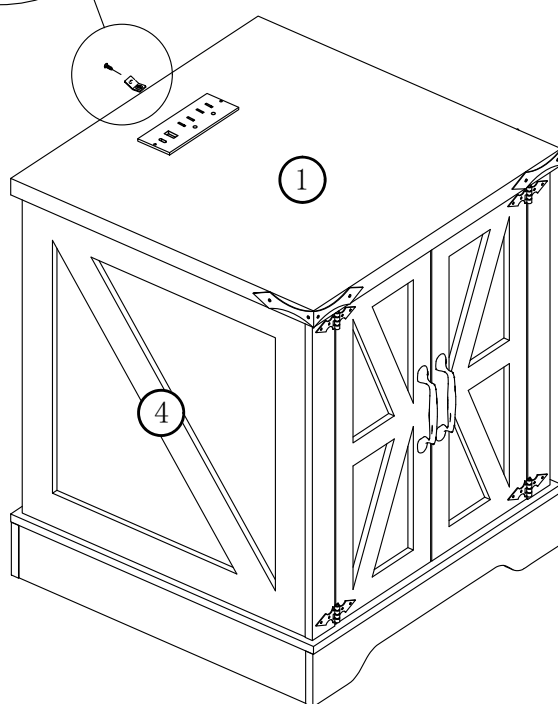

step5

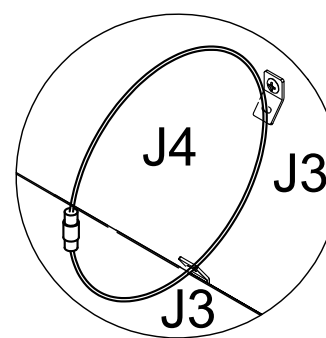

Anti -tipping device x 1

Assembly Instructions

Step 18

