

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED:

Allen Wrench (supplied, part # D)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Lay the barstool upside down on a flat, soft surface such as a carpet or a cloth to prevent scratching the top finish.
2. Remove the turnplate from base of the chair and keep it for next step, as shown in Figure 1.
3. Attach the turnplate onto the seat, using Bolt(A). Spring washer(B), Flat washer(C) tighten with Allen wrench(D), as shown in Figure 2.
4. Attach the seat by aligning swivel with insert in the hole of the stretcher, as shown in Figure 3.
5. Assemble Bolt (A) to the turn metal stick of the top, tighten with Allen wrench (D). as shown in Figure 4.

HARDWARE LIST			
NO.	Drawing	Description	Q'TY
A		Allen Bolt (φ1/4*1")	4pcs
B		1/4" Spring Washer	4pcs
C		1/4" Flat Washer	4pcs
D		Wrench (4mm)	1pc

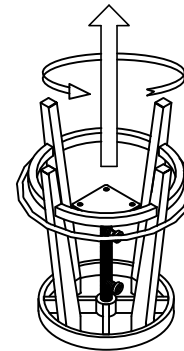
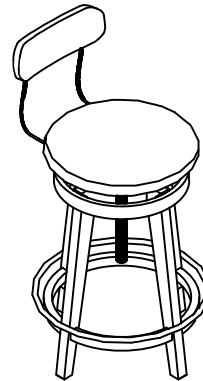


Figure 1




Figure 2

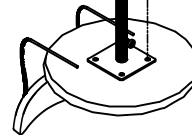


Figure 3

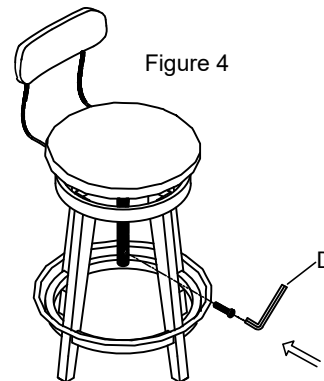


Figure 4

Thank you for purchasing furniture!