



Installation Instructions


1. Add and screw different quantities of A together.




2. Screw each side of A to B and C correctly.

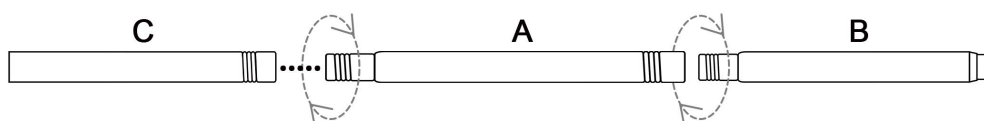


3. Extend telescopic rod slightly to the length you need.

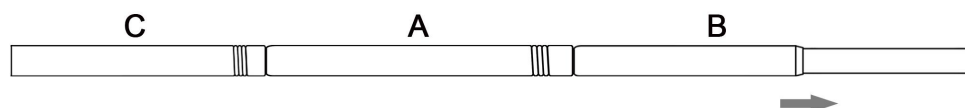


4. Slide the curtain onto the rod.

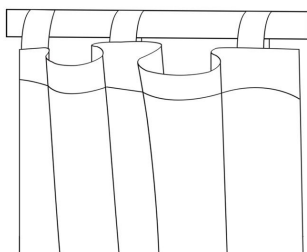

5. Screw the caps onto the end pipes.

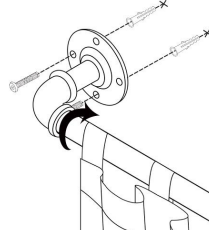

6. Install the central bracket onto the wall as you need.

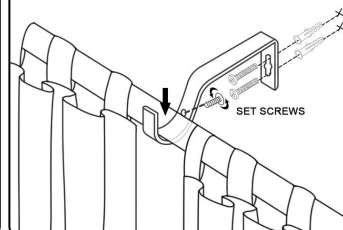

Tips:

The side telescopic pipe is composed of a thicker pipe and a thinner pipe. Make sure that the thinner pipe is at least 5 cm inside the thicker pipe, so that the curtain rod can be sturdy.

