

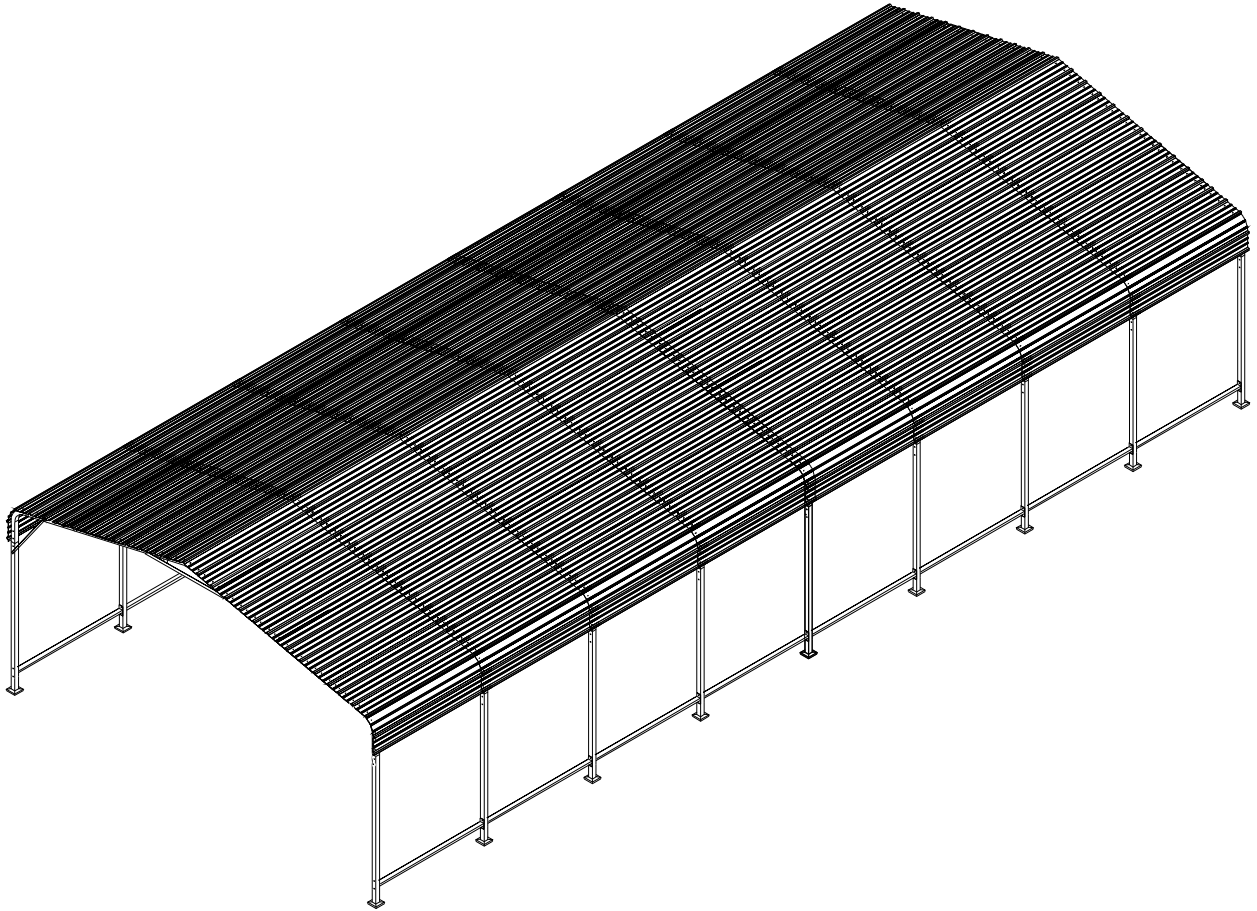
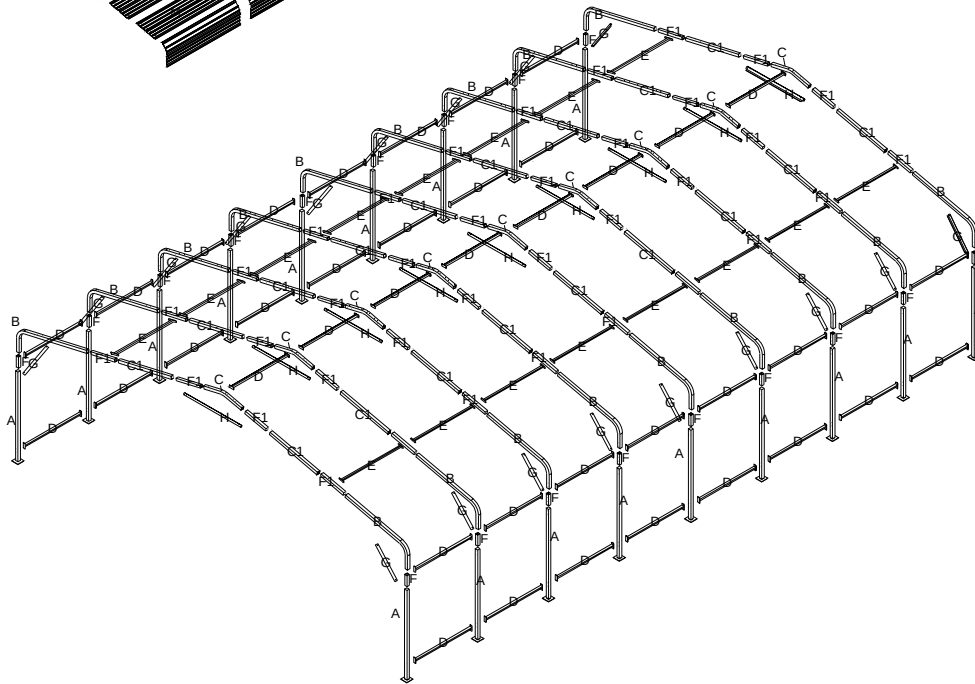
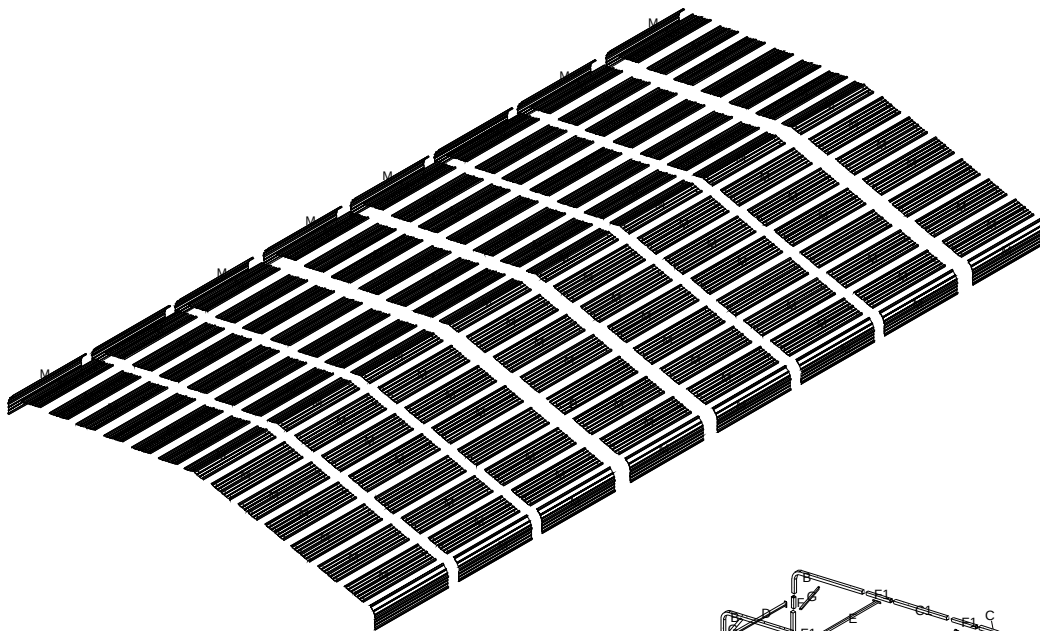














20X40Carport






		A (X18)	
	B (X18)		C (X9)
	C1 (X18)		D (X40)
	E (X16)		F (X18)
	F1 (X36)		G (X18)
	H (X9)		I (X18)
	J (X558 +10)		K (X3)
	L (X1)		M (X120)
	M6*15		M6*62
	N (X36)		O (X288+10)
	Ø3.5		M6
	P (X1)		Q (X324+10)
	M6		
	R (X288+10)		S (X36)
	M6x62		
	T (X36)		U (X18)
	V (X1)		W (X1)
	X (X2)		Y (X4)


Step1

PART	Qty	NO
	A	18
	I	18
	U	18
 M6*15	N	36
	Q	36

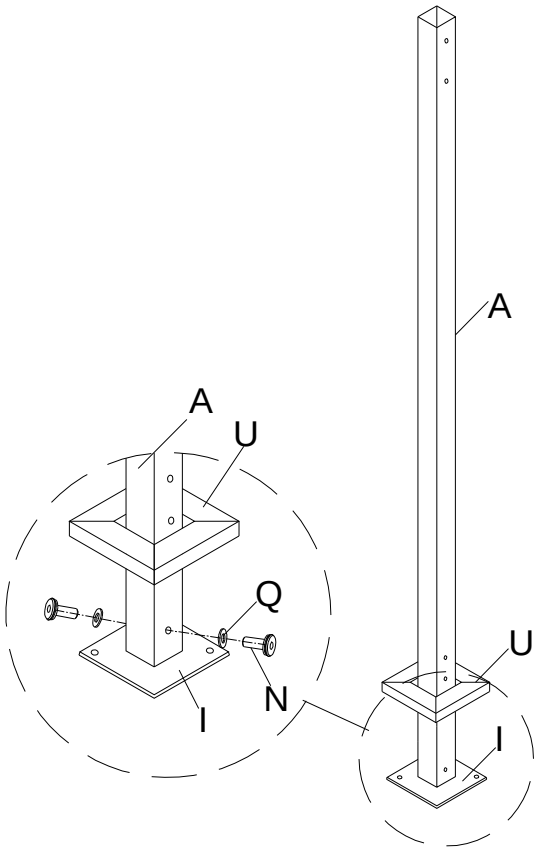

Step2


PART	Qty	NO
	C	9
	F1	18
	O	36
	Q	36
	R	36

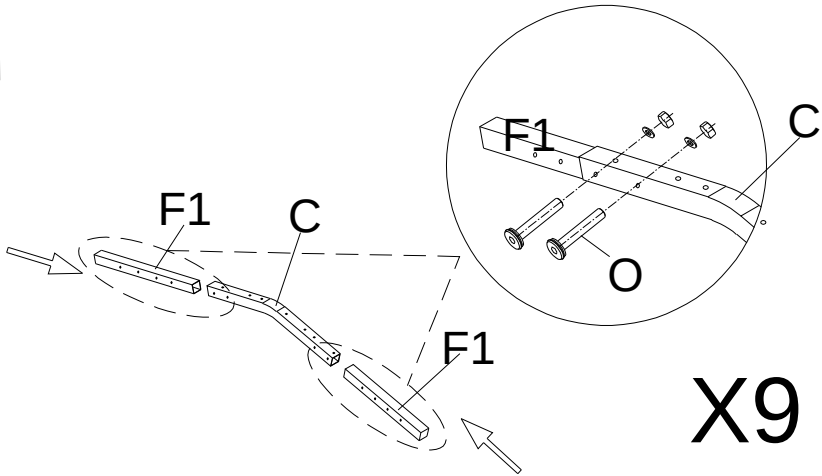

Step3


PART	Qty	NO
	B	18
	C1	18
	F1	18
	O	36
	Q	36
	R	36

Before assembly, measure the hole position of c1 and install it in the correct direction

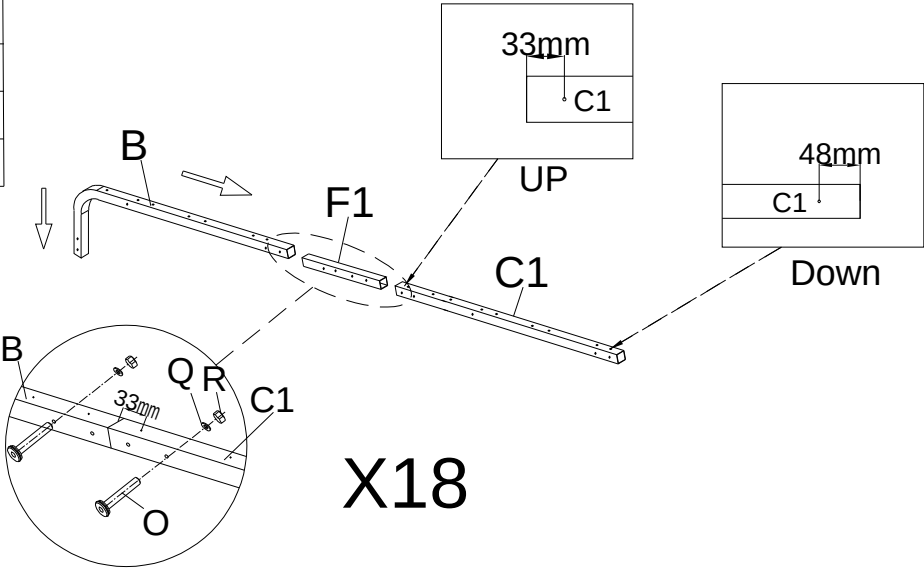



Step4

PART	Qty	NO
	H	9
	O	36
	Q	36
	R	36

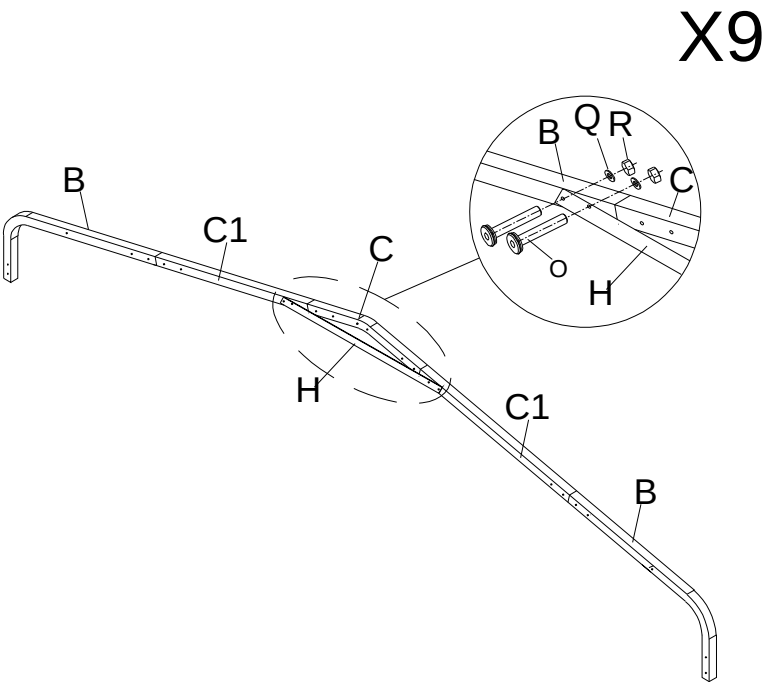


Step5

PART	Qty	NO
	F	18
	D	24
	O	54
	Q	54
	R	54

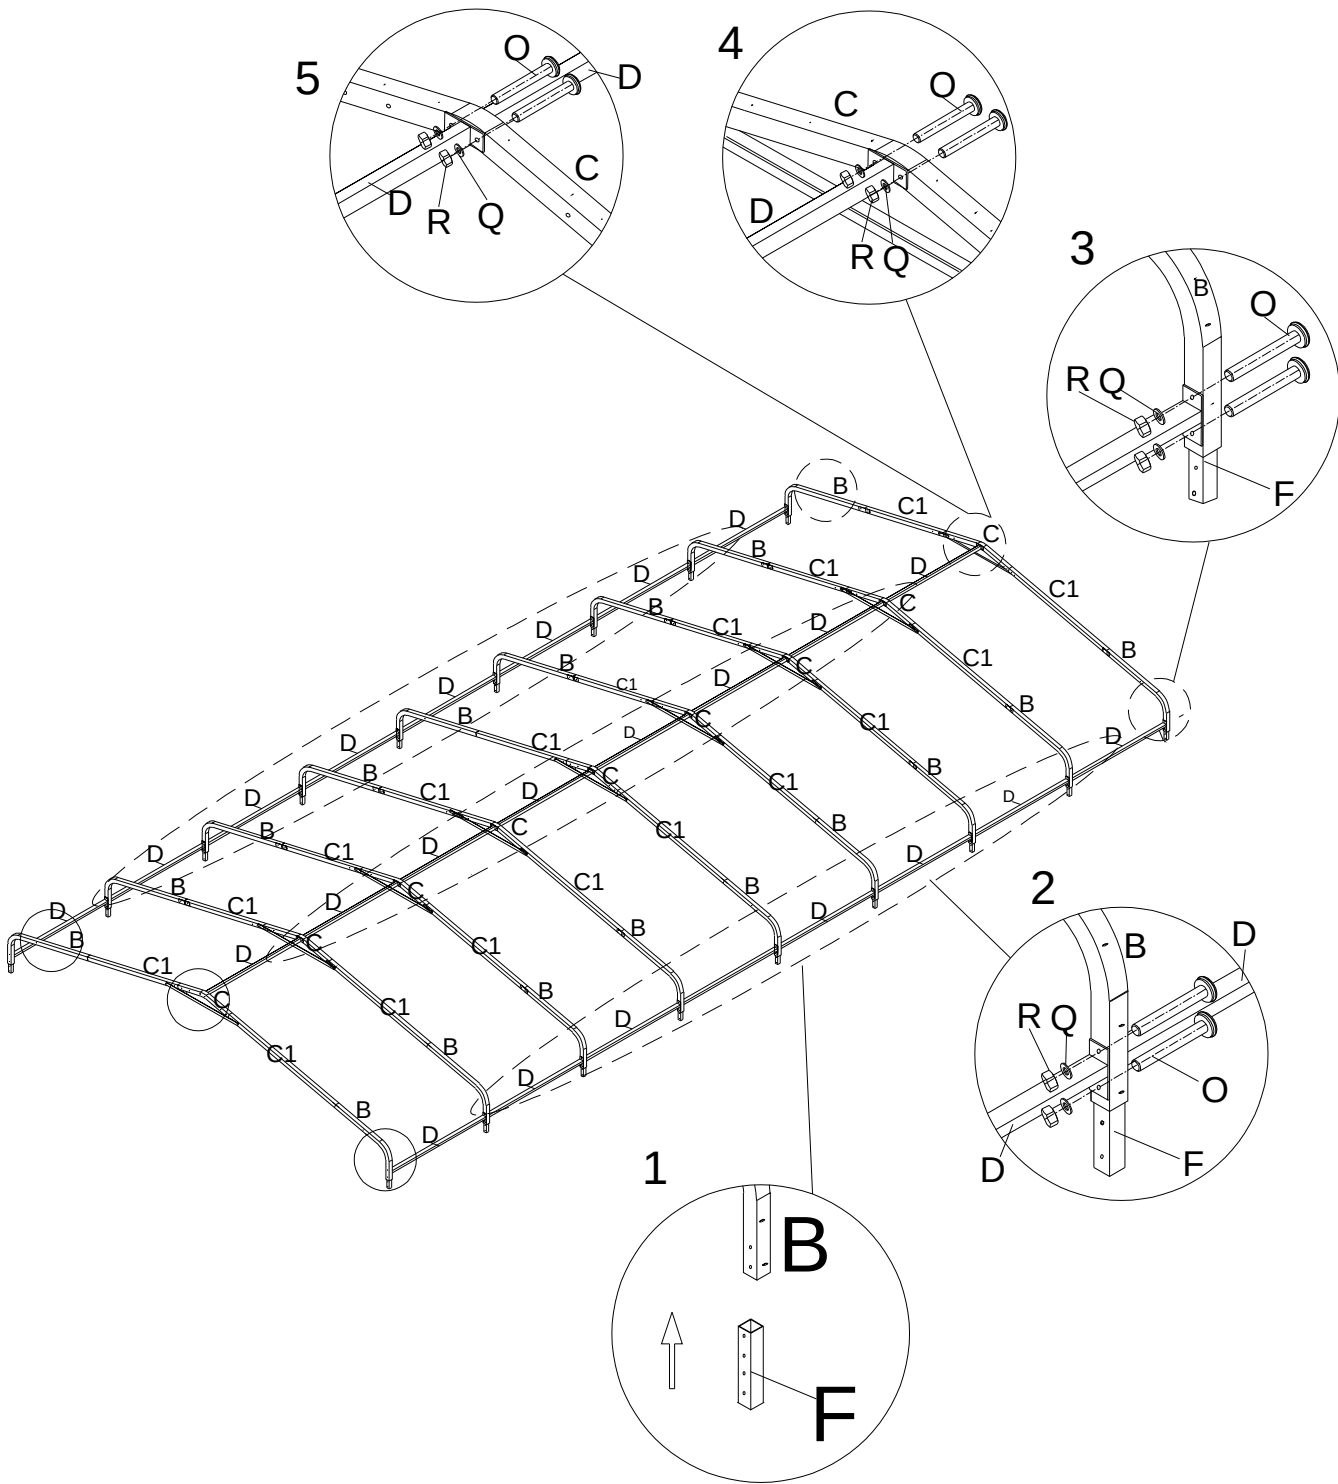


Step6

PART	Qty NO	
	E	16
	O	36
	Q	36
	R	36

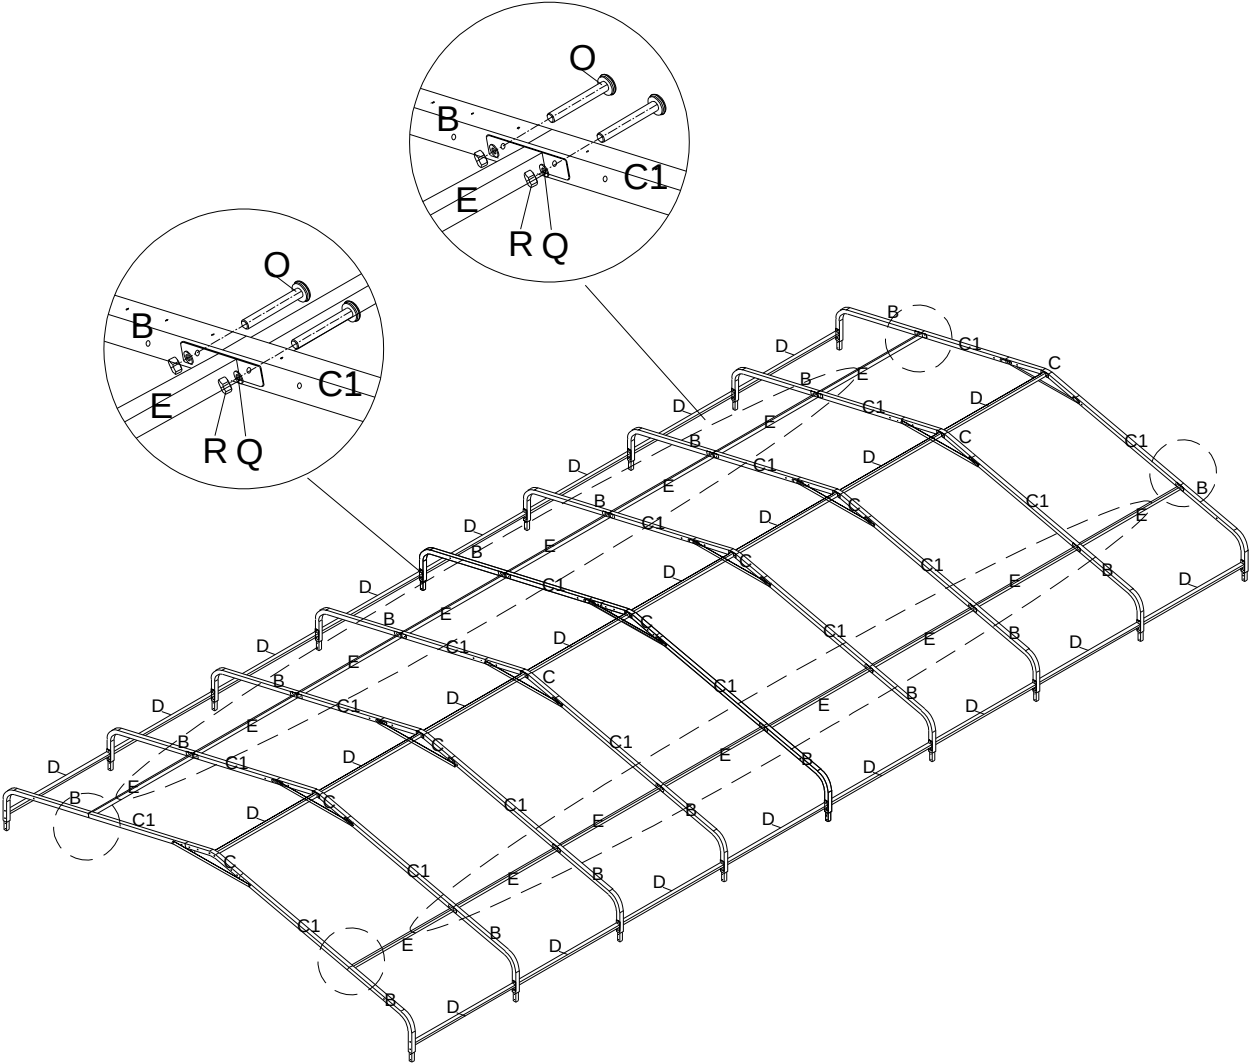






Step7

PART	Qty	NO
	M	8
	J	18
	K	

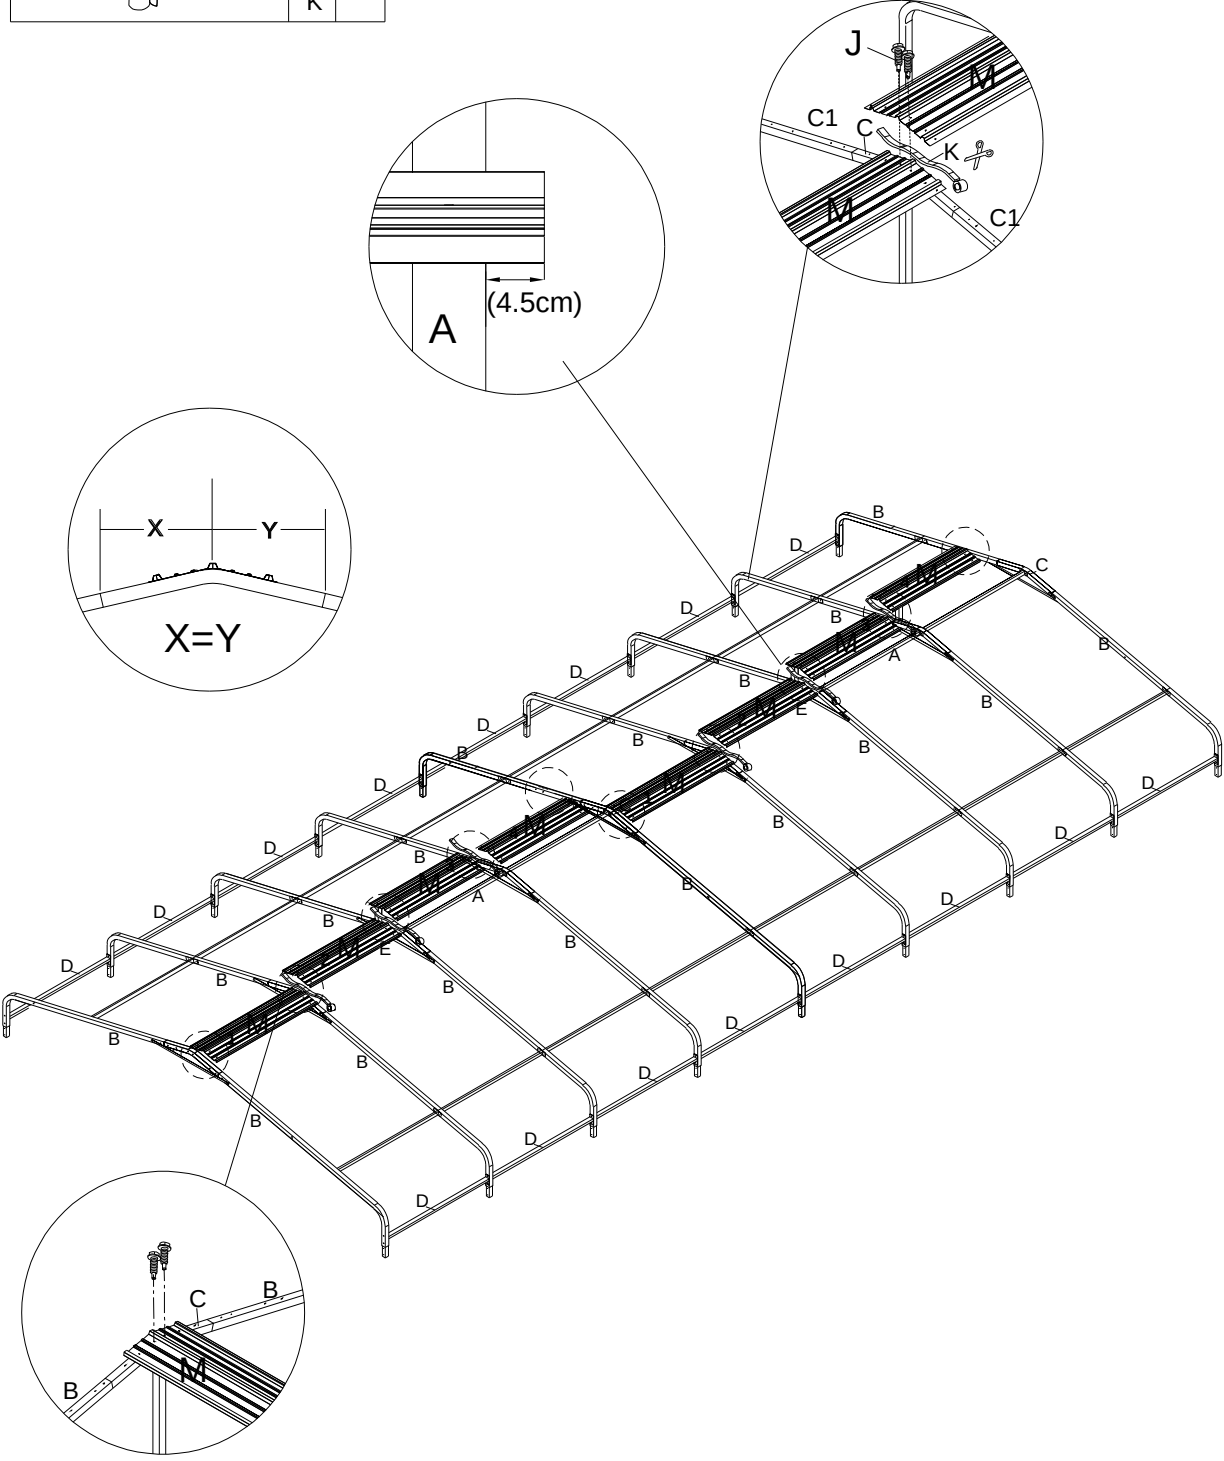


Step8

PART	Qty	NO
	M	8
	J	36
	K	

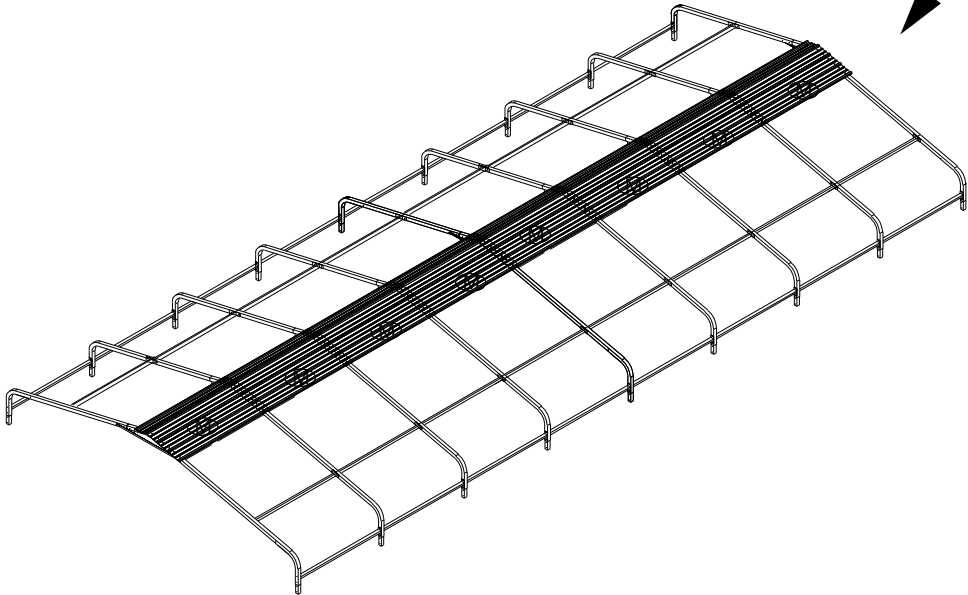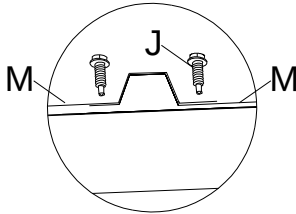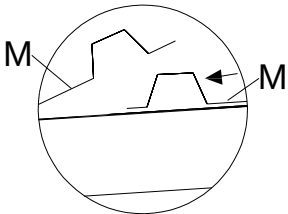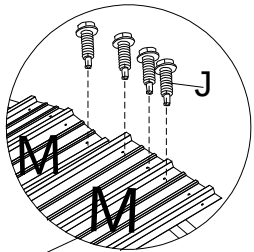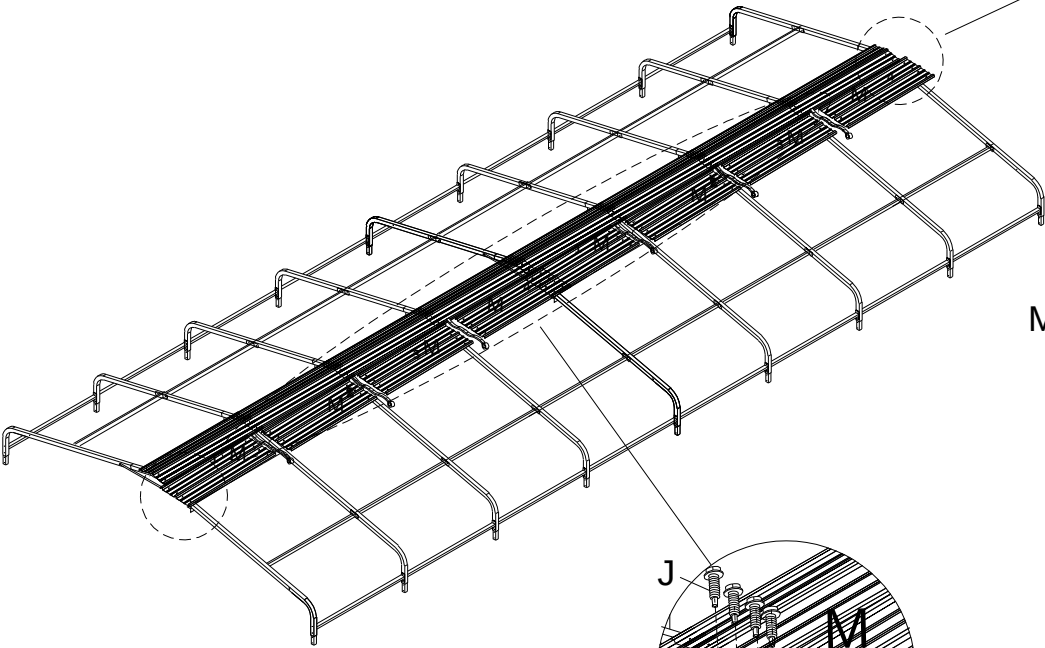


Step9

PART	Qty	NO
	M	8
	J	36
	K	

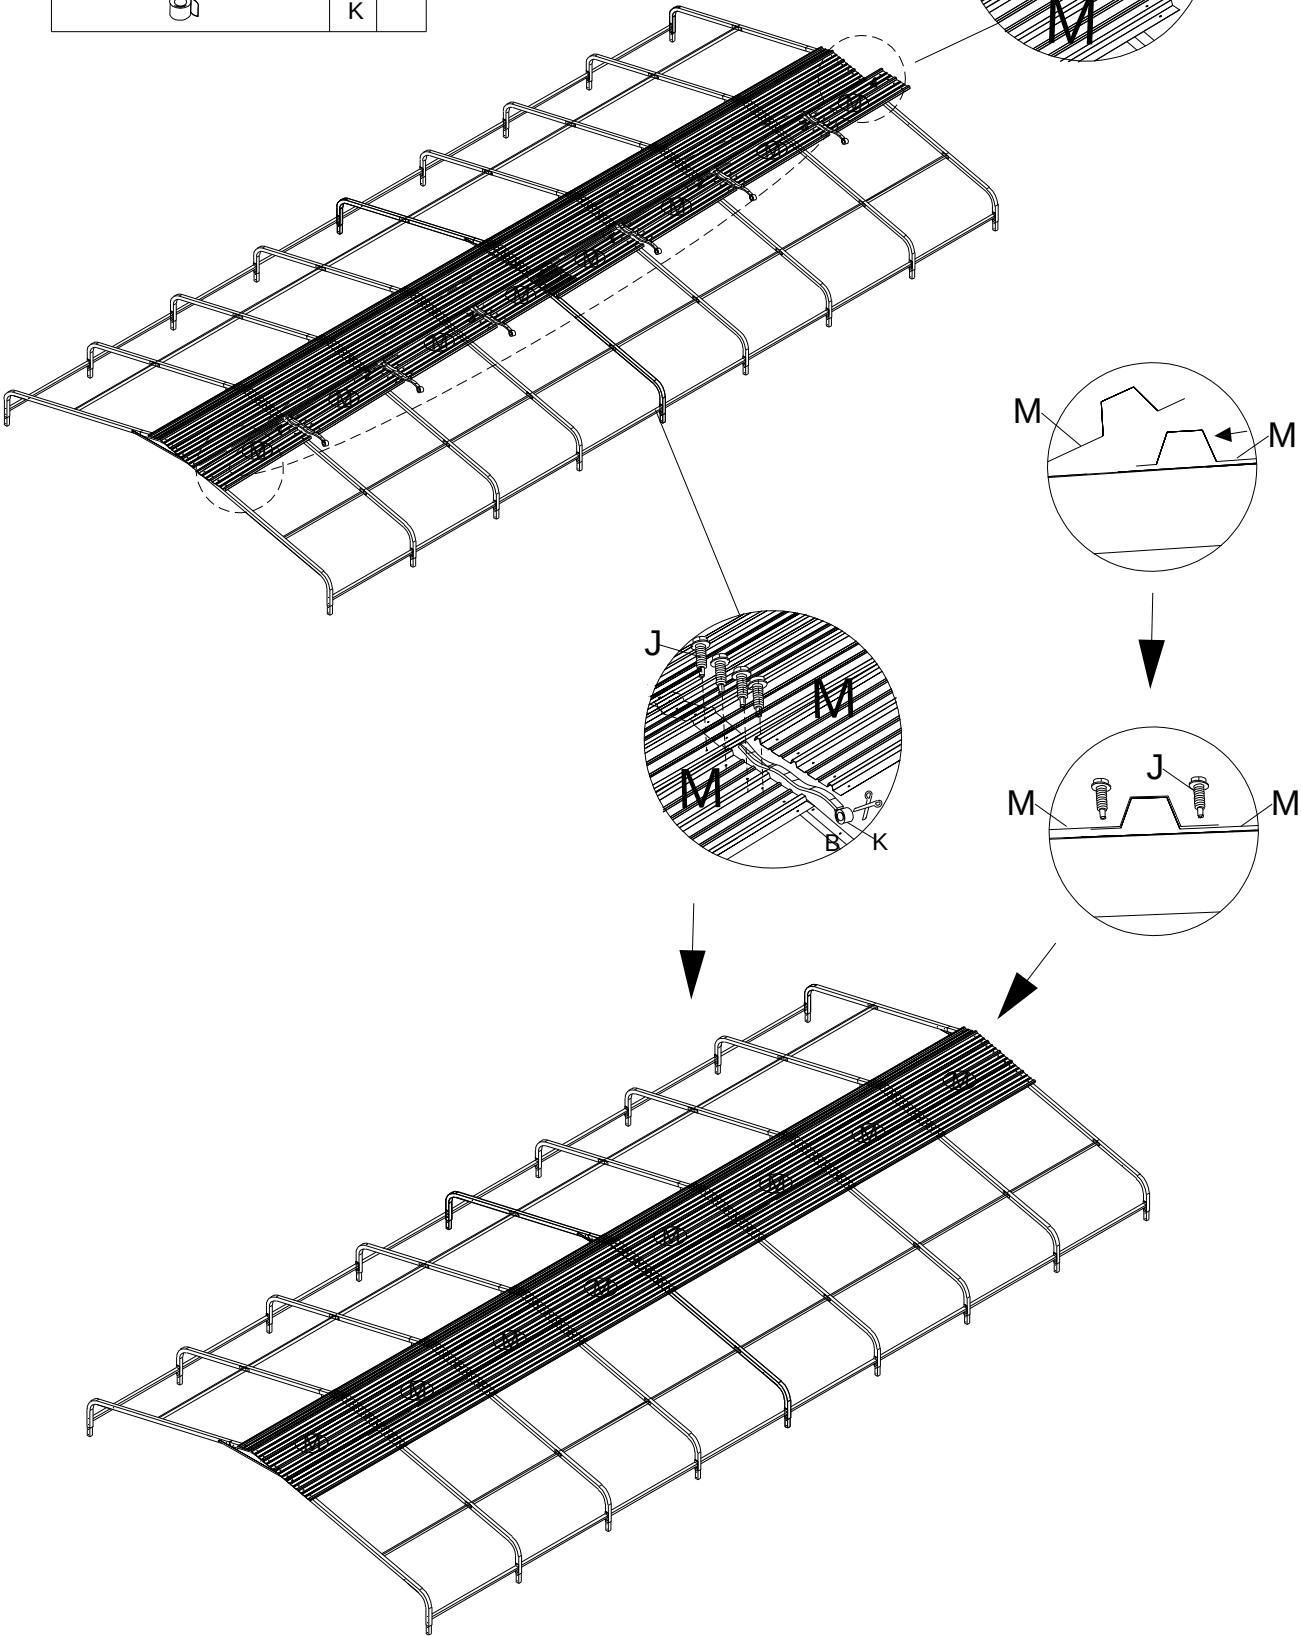


Step10

PART	Qty	NO
	M	8
	J	36
	K	

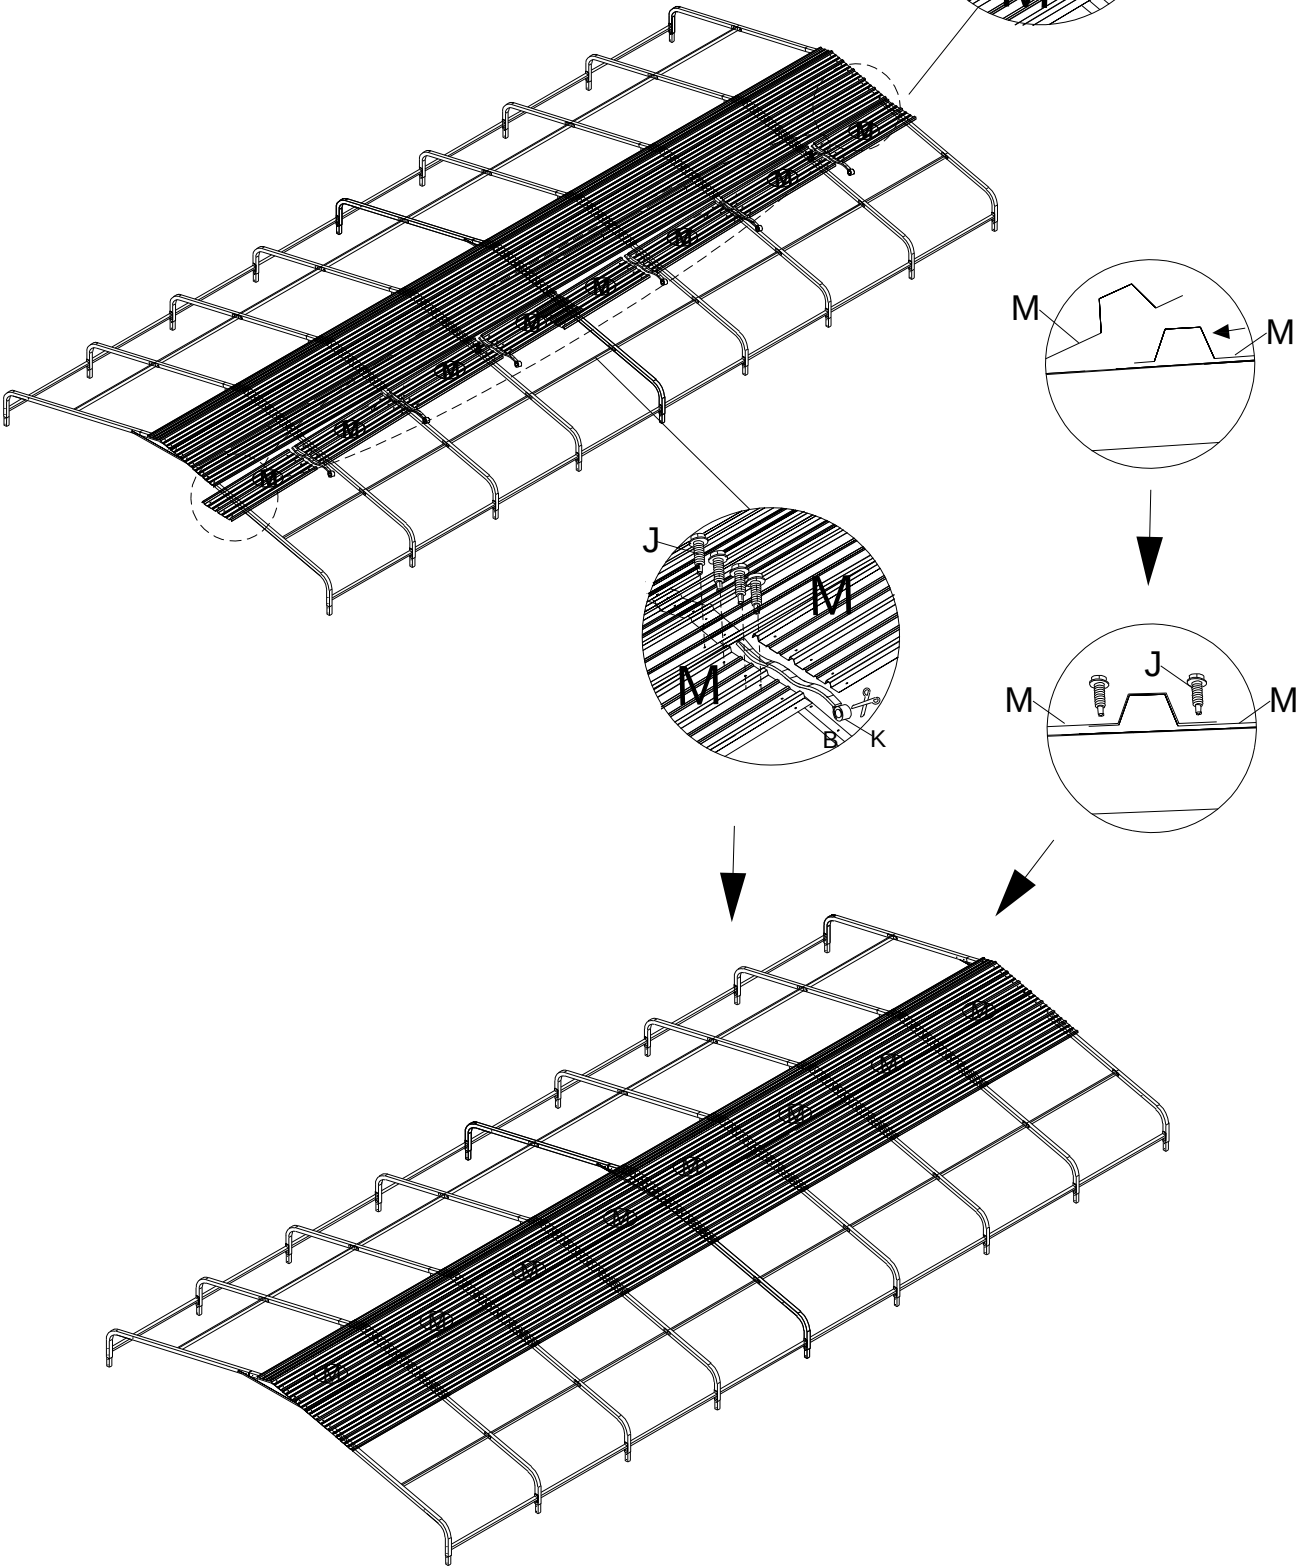


Step11

PART	Qty	NO
	M	8
	J	36
	K	

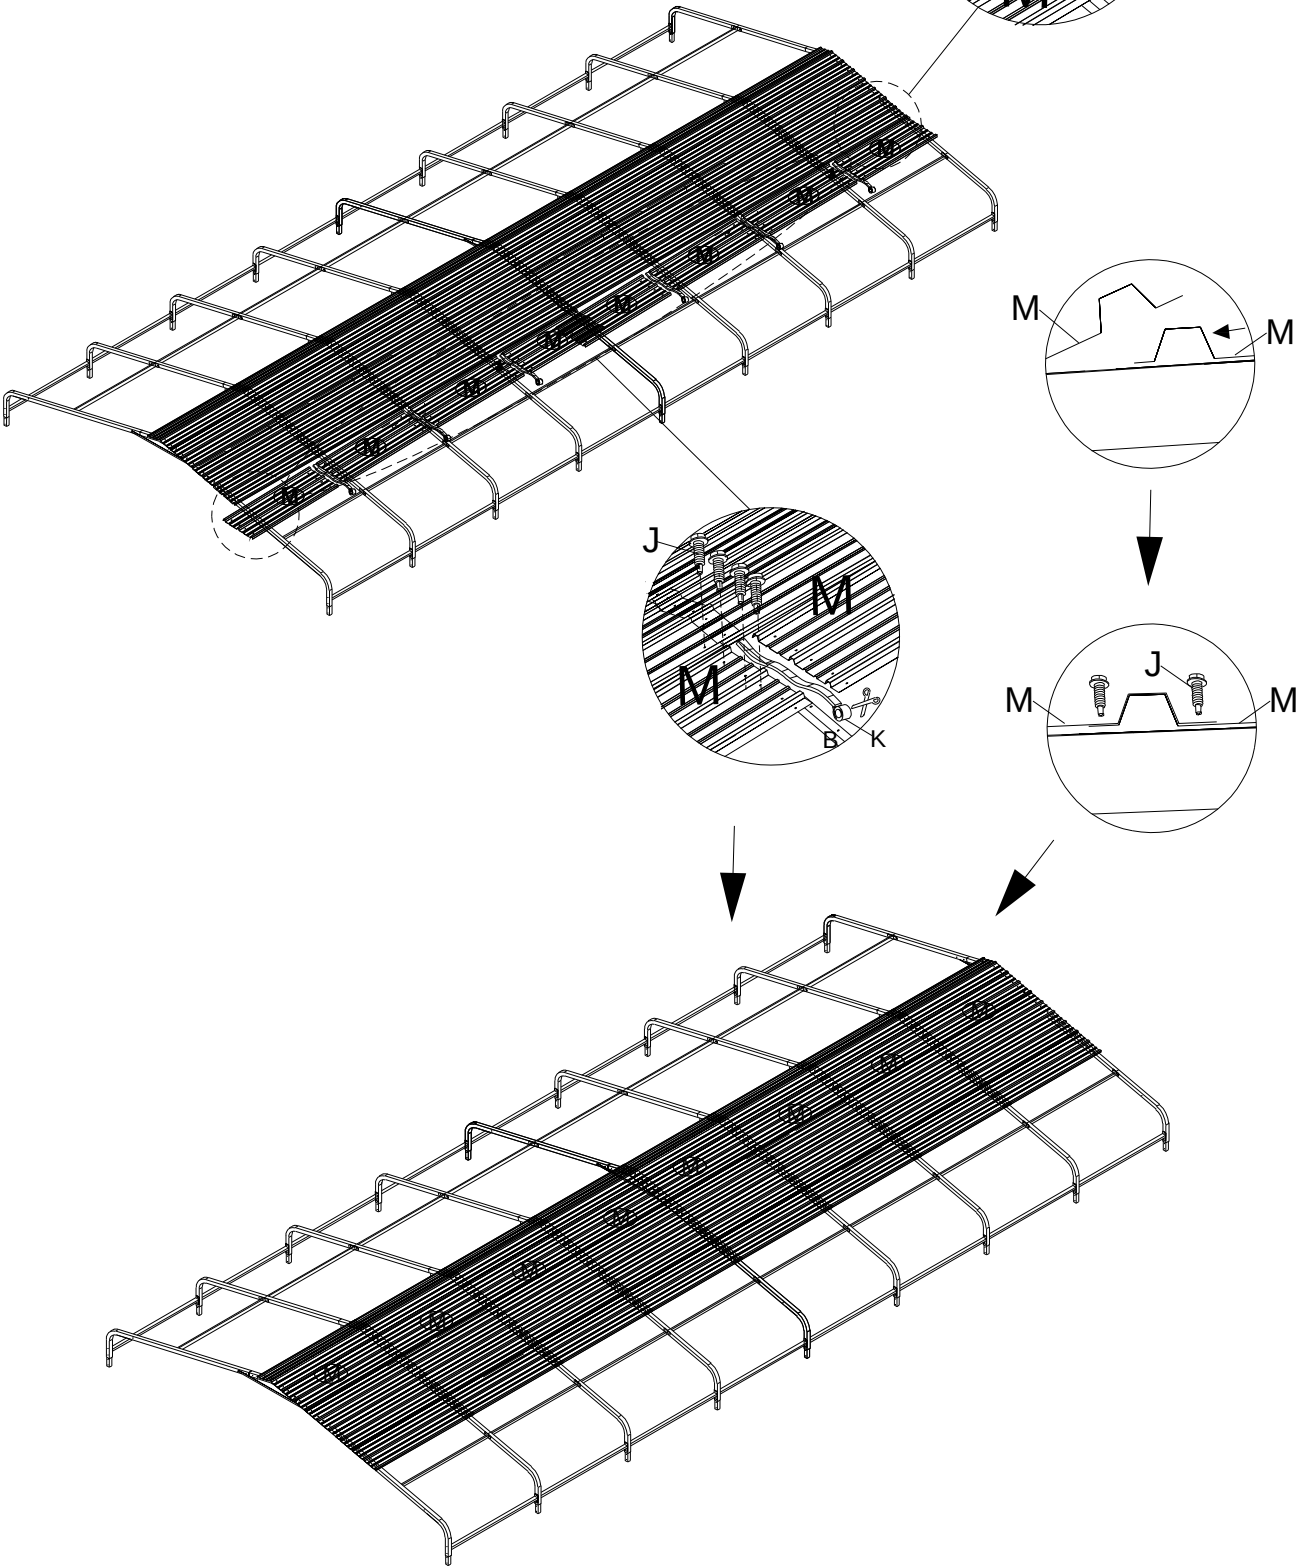


Step12

PART	Qty	NO
	M	8
	J	36
	K	

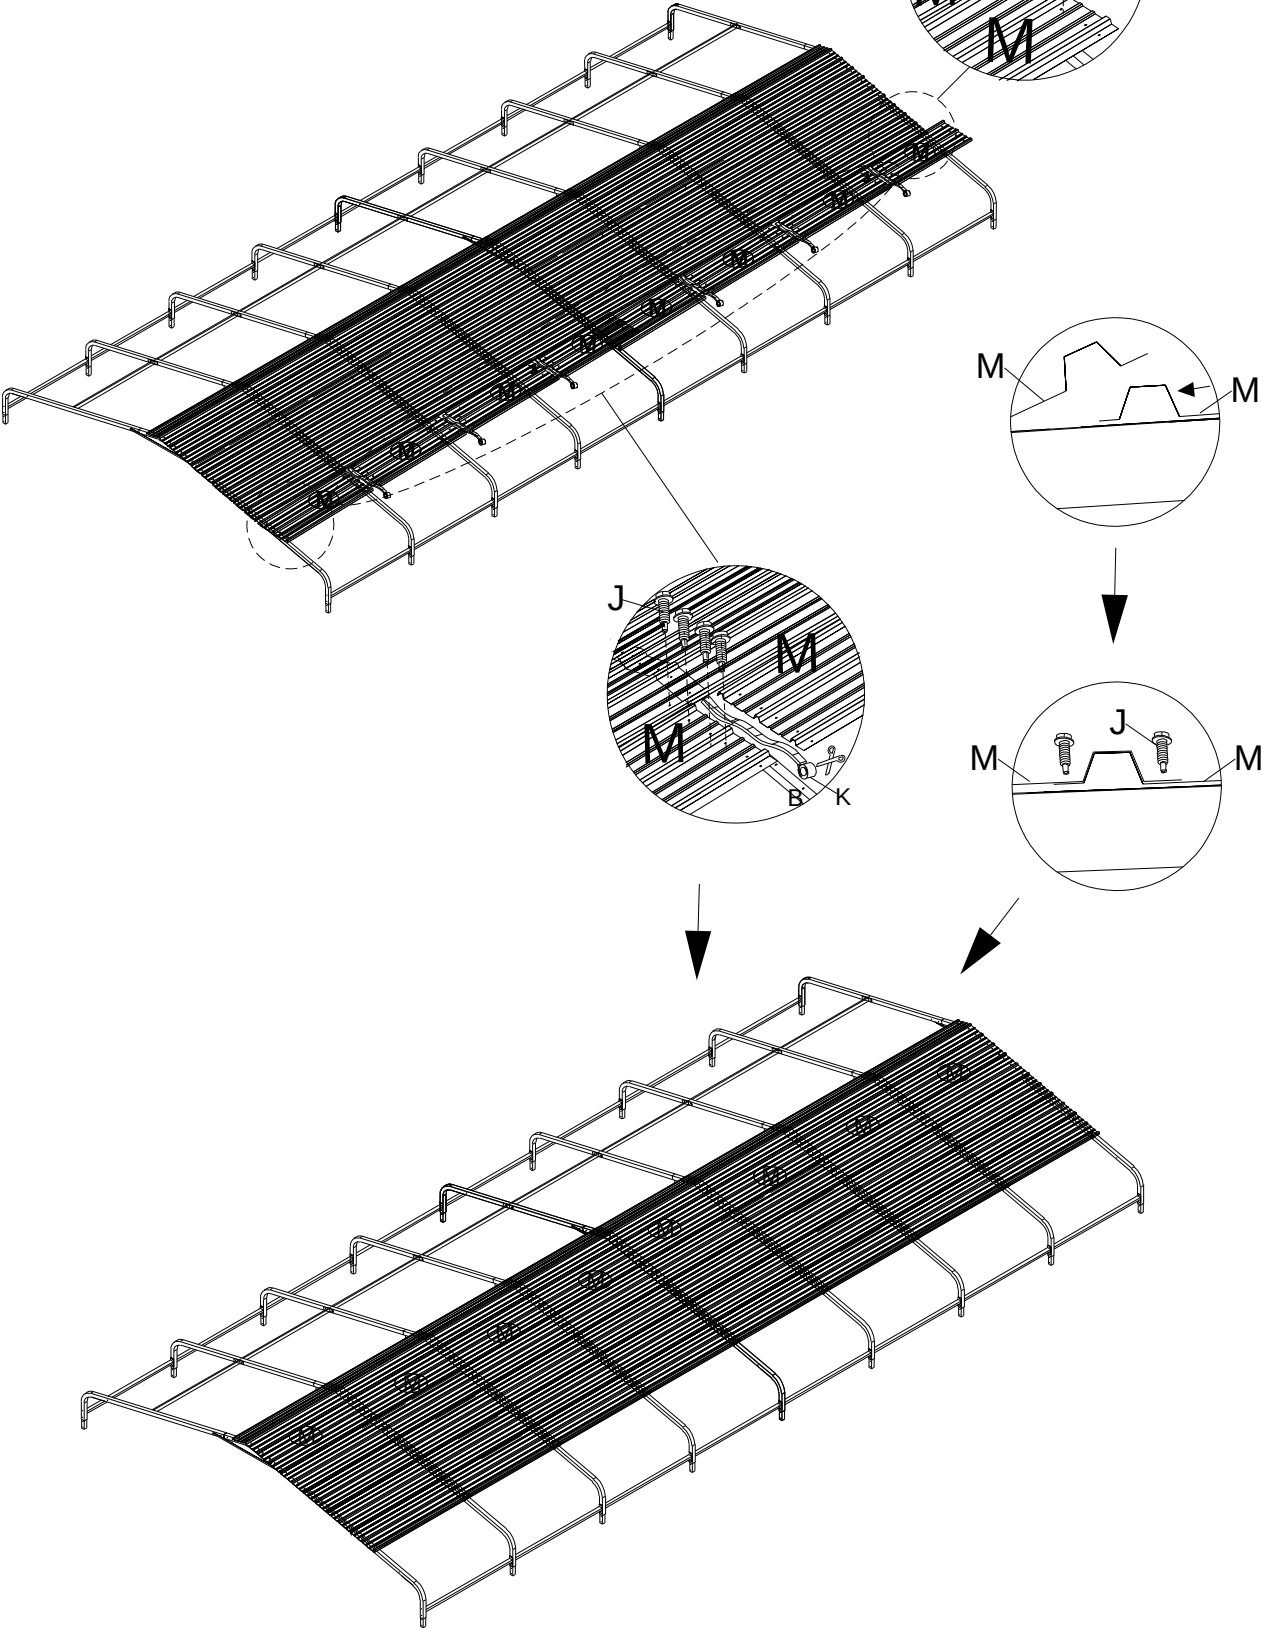


Step13

PART	Qty	NO
	M	8
	J	36
	K	

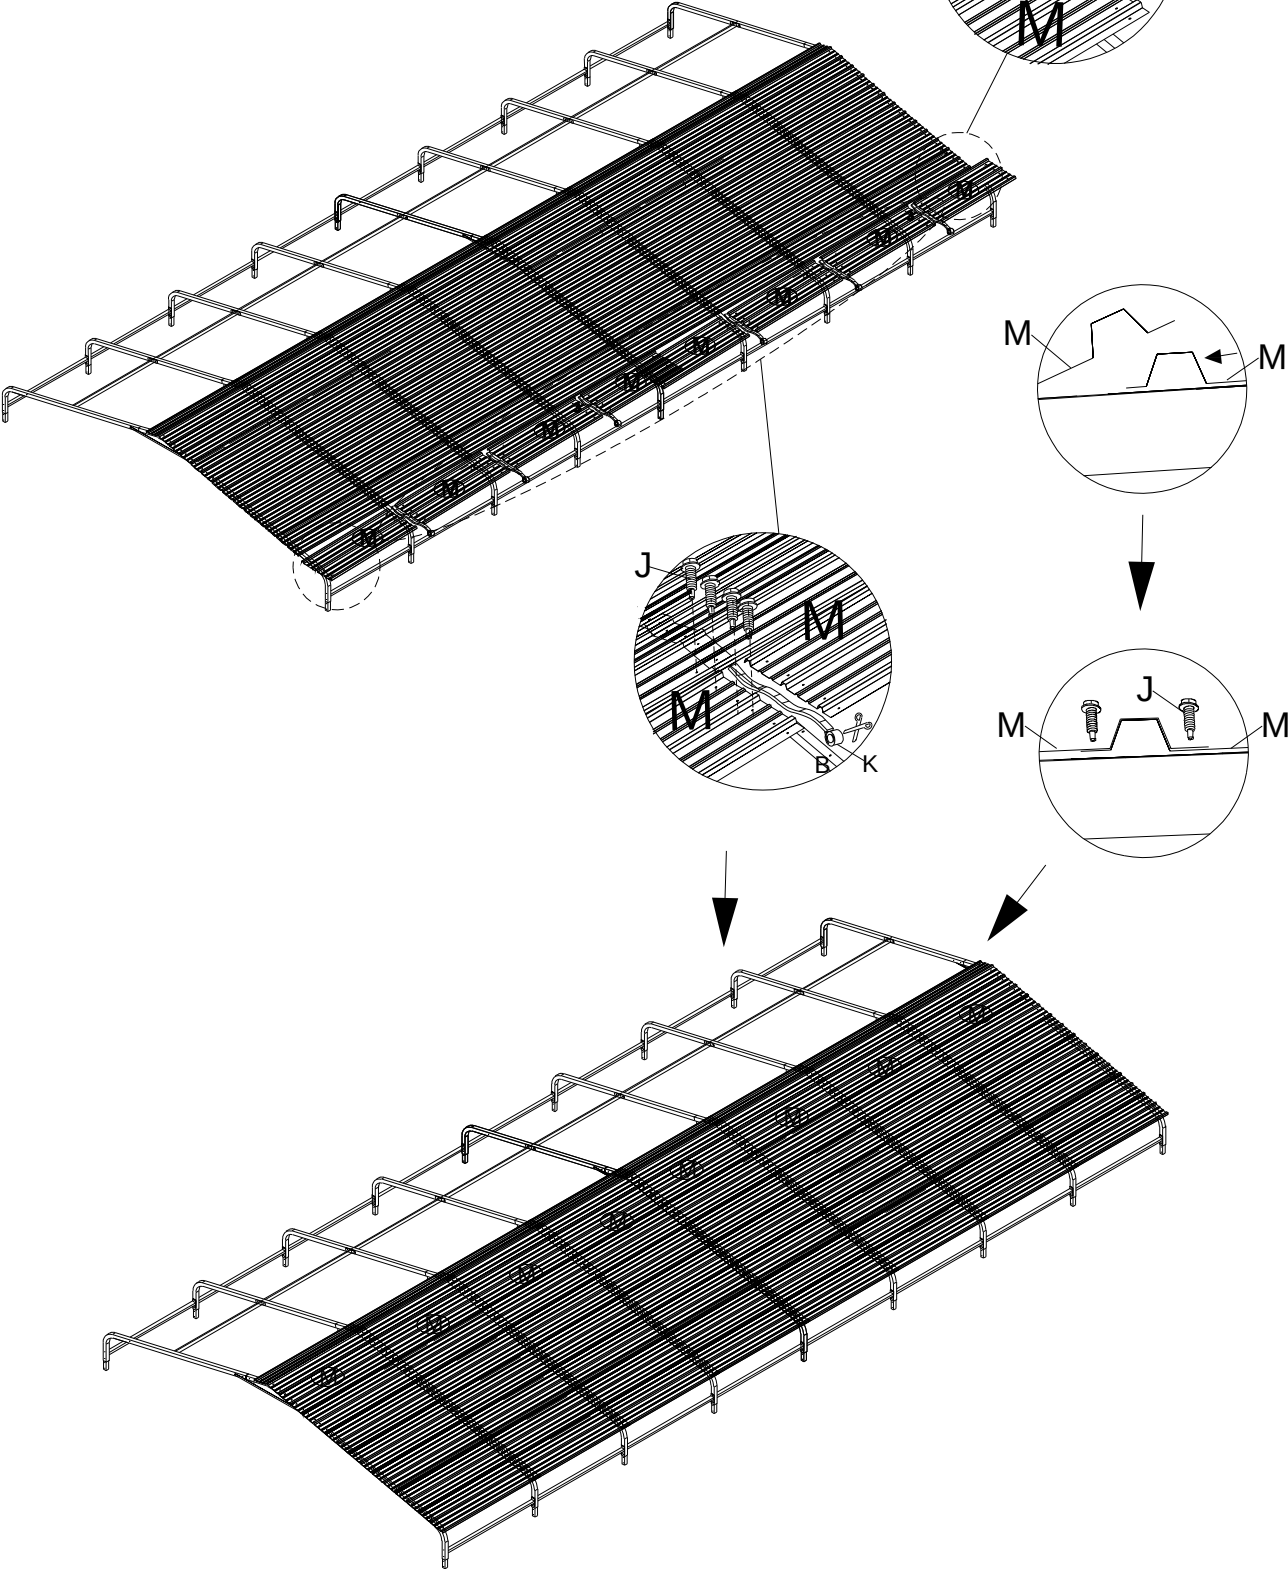


Step14

PART	Qty	NO
	M	8
	J	36
	K	

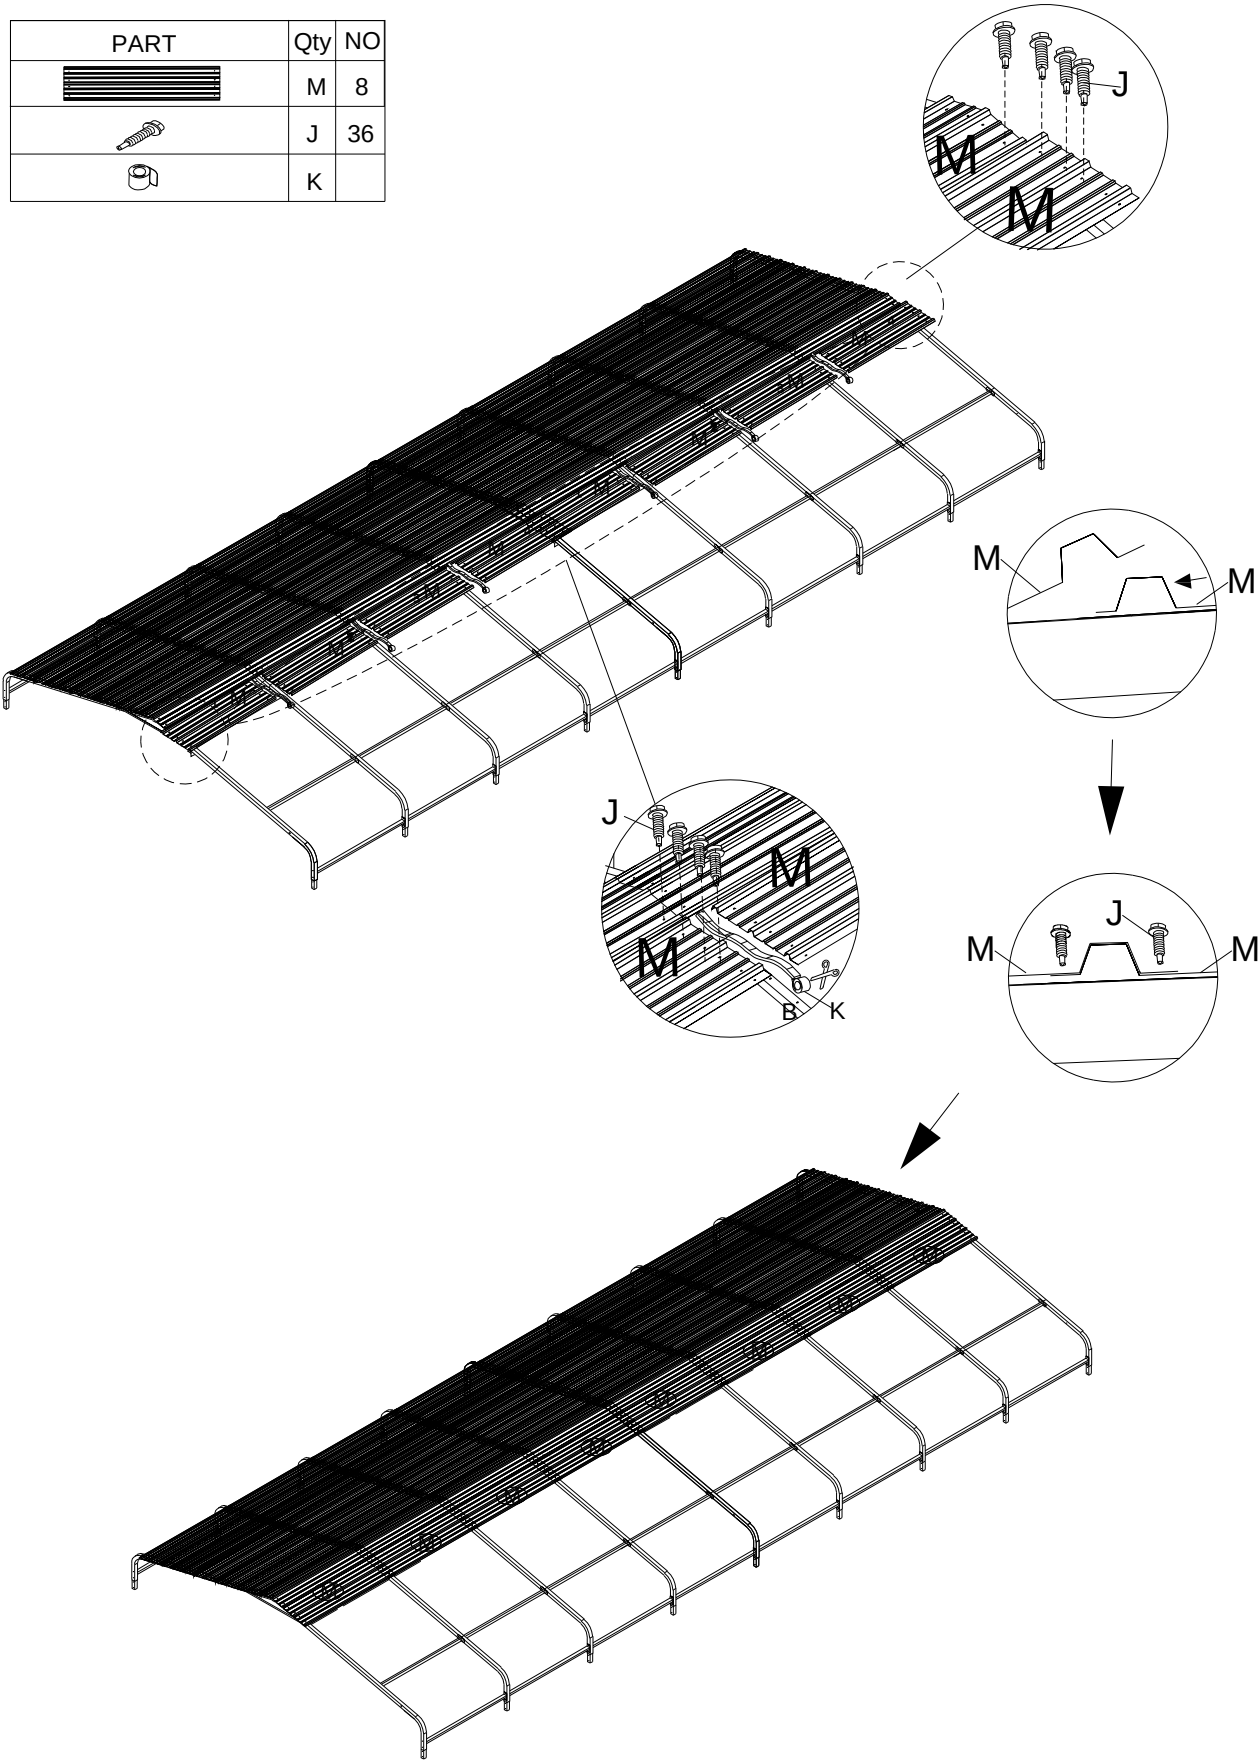







Step15

PART	Qty	NO
	M	8
	J	36
	K	

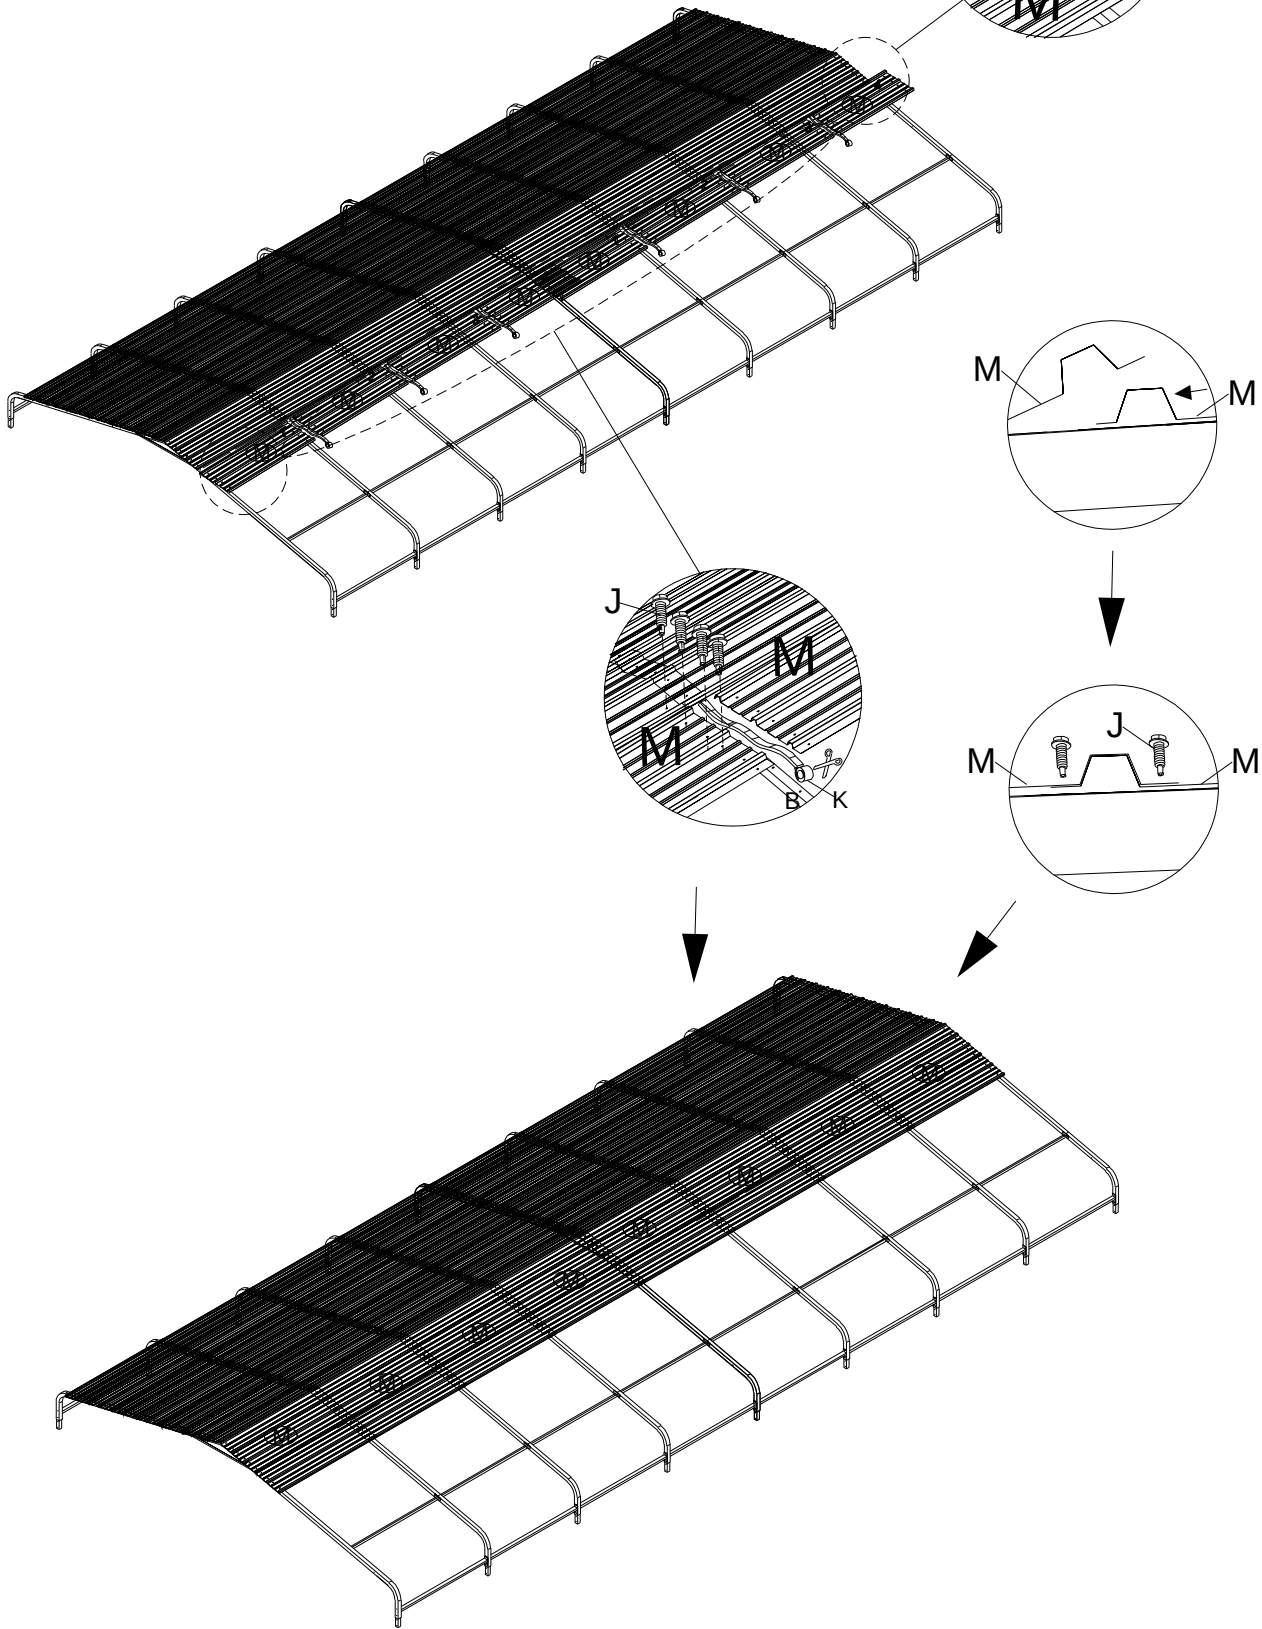


Step16

PART	Qty	NO
	M	8
	J	36
	K	

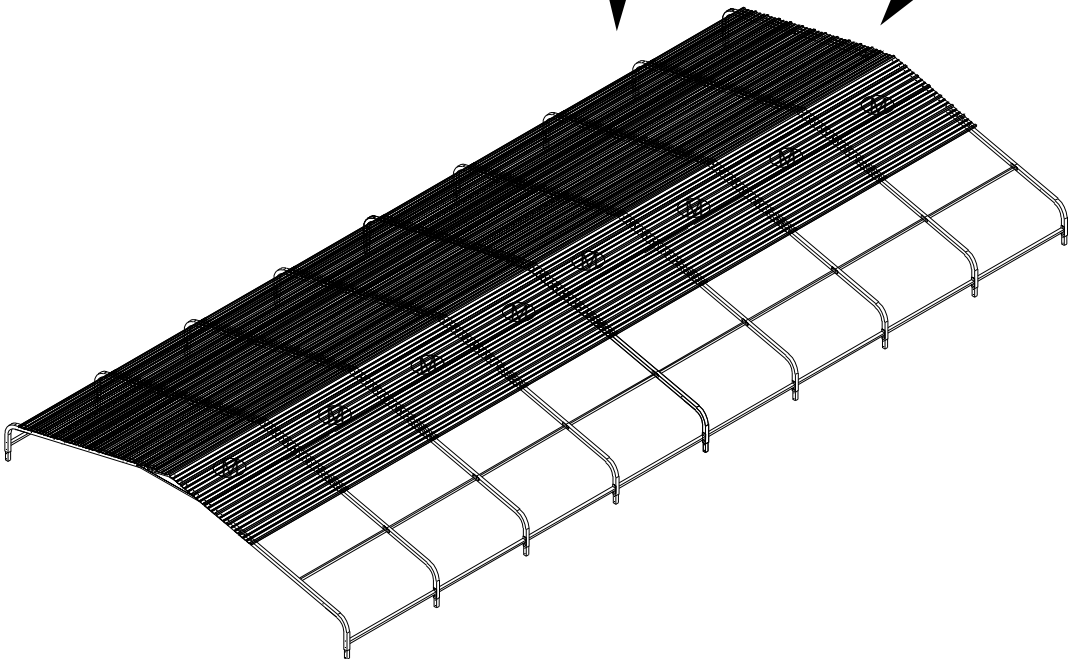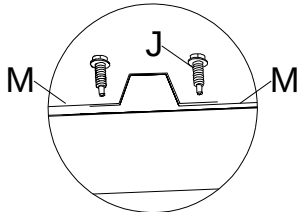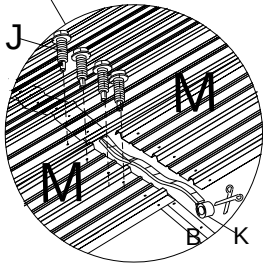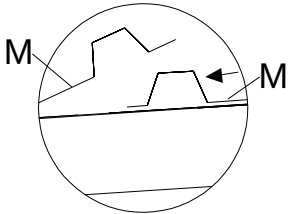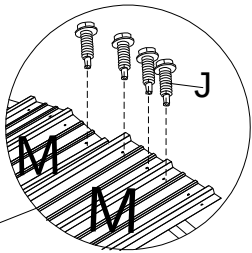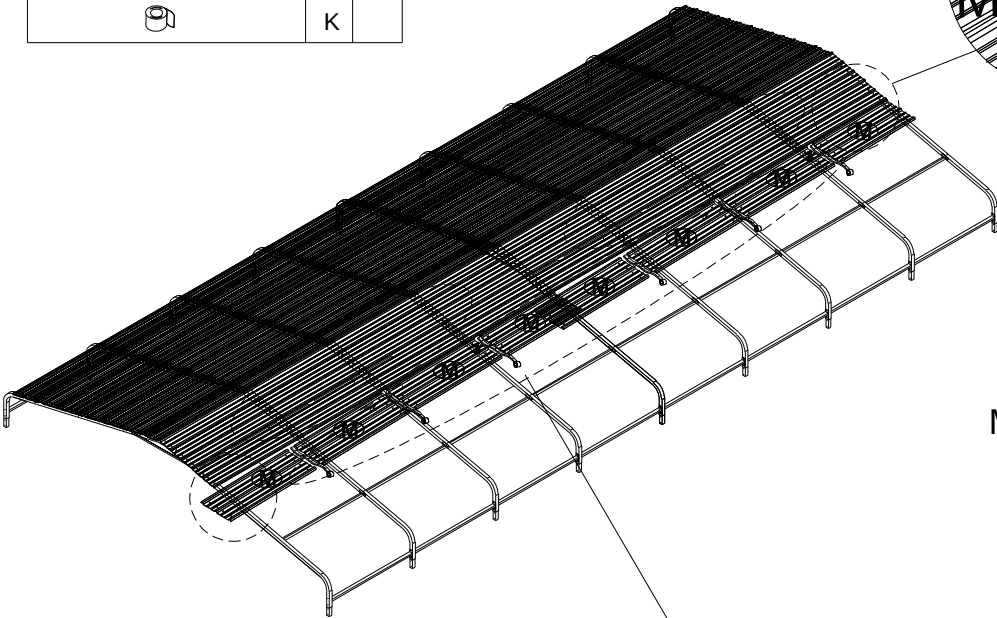







Step17

PART	Qty	NO
	M	8
	J	36
	K	

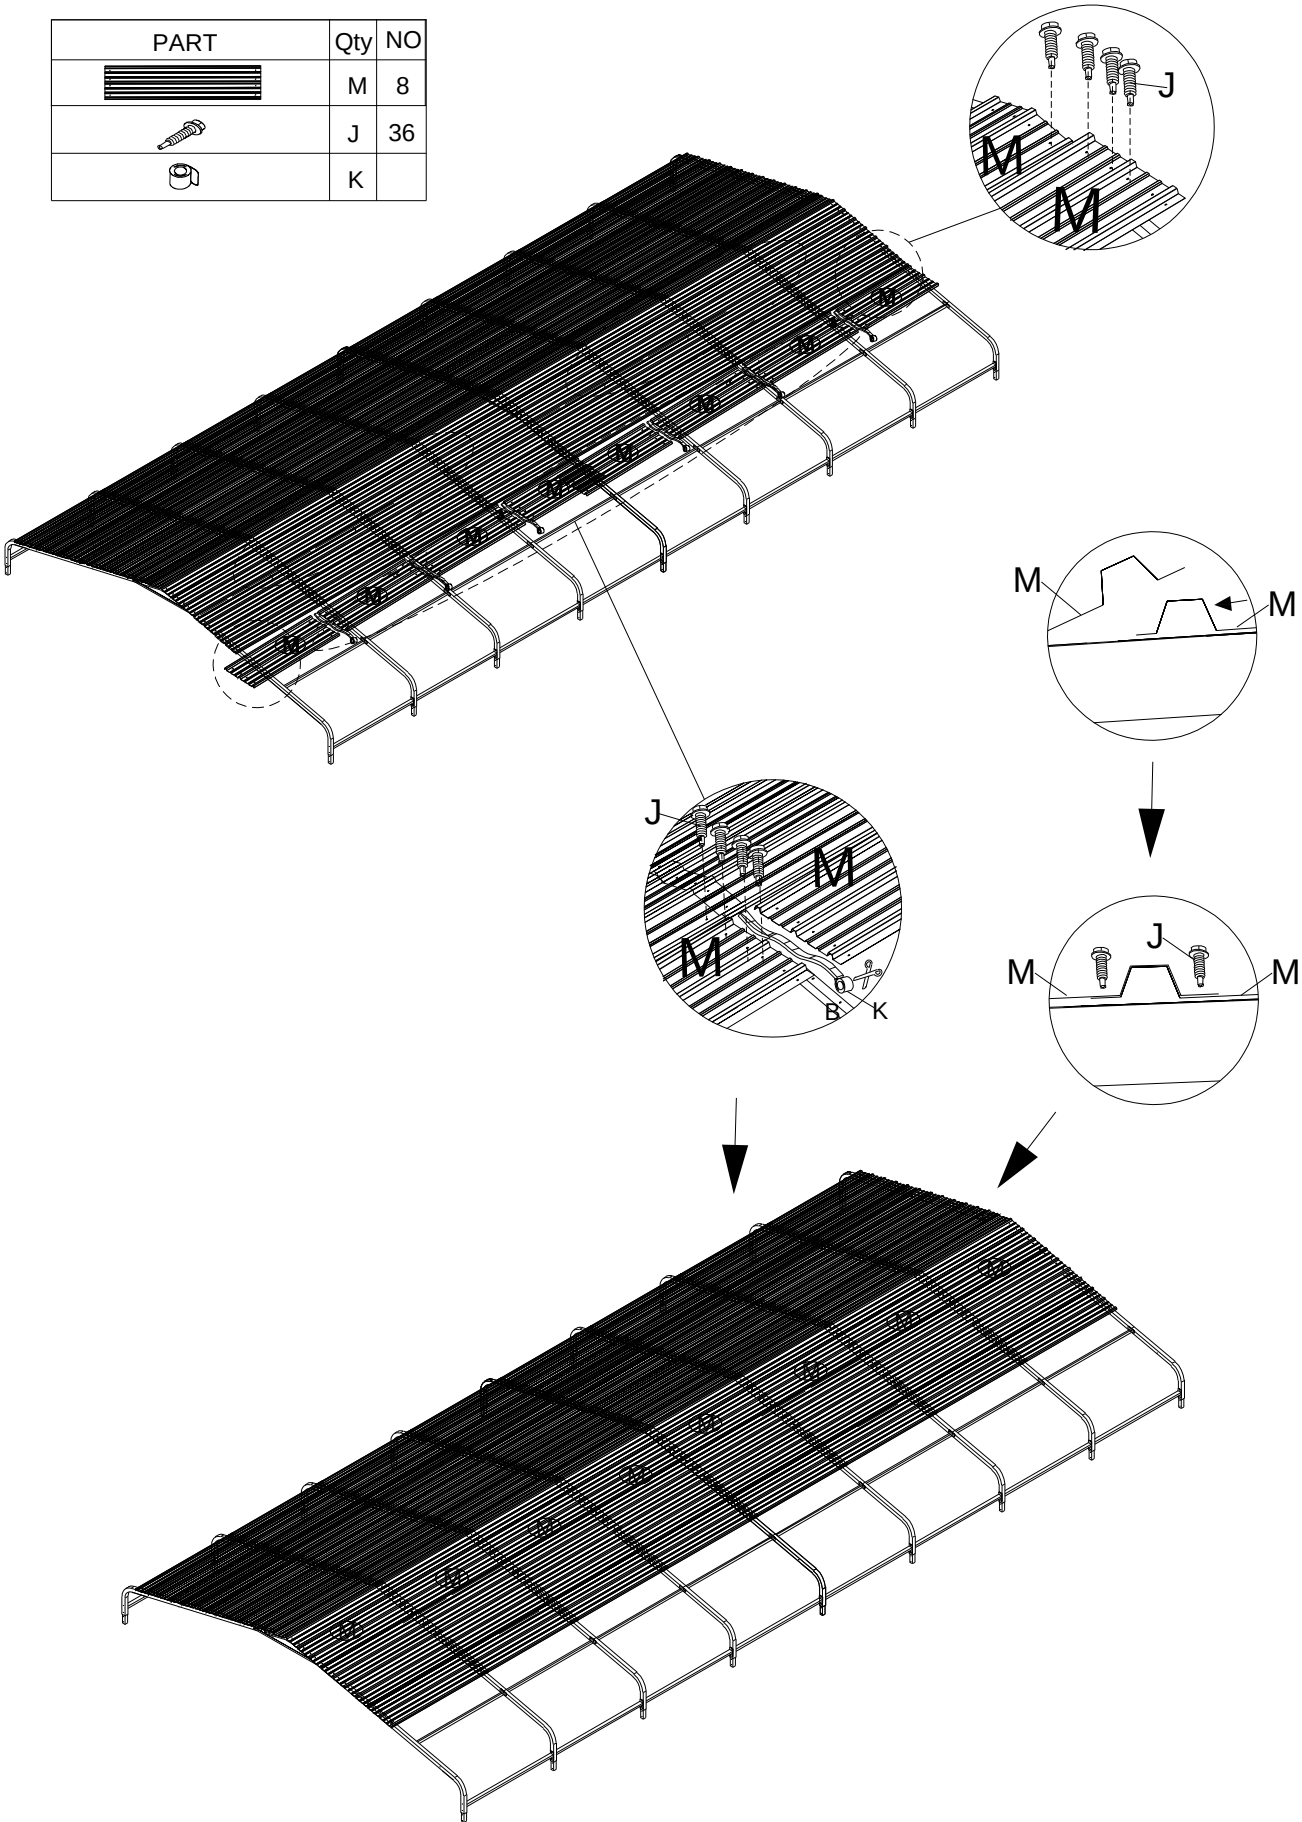







Step18

PART	Qty	NO
	M	8
	J	36
	K	

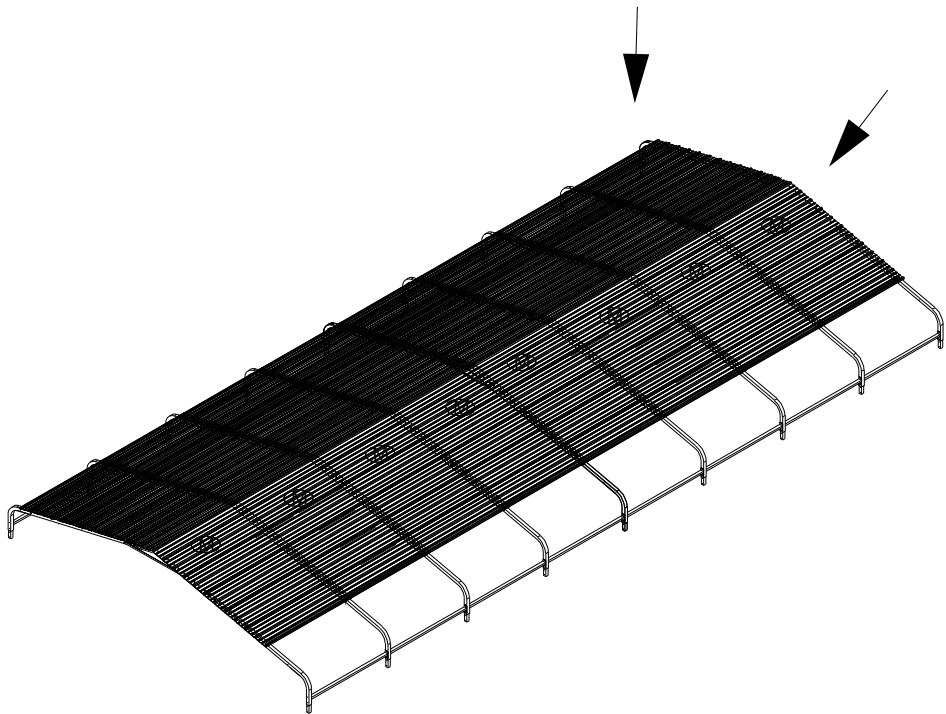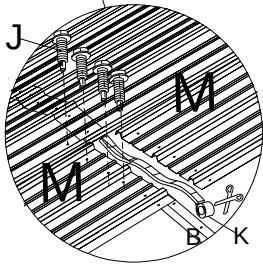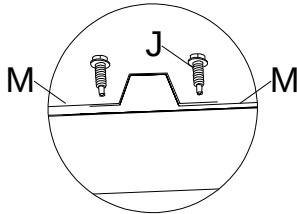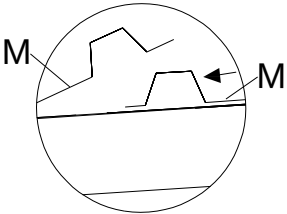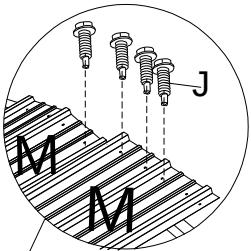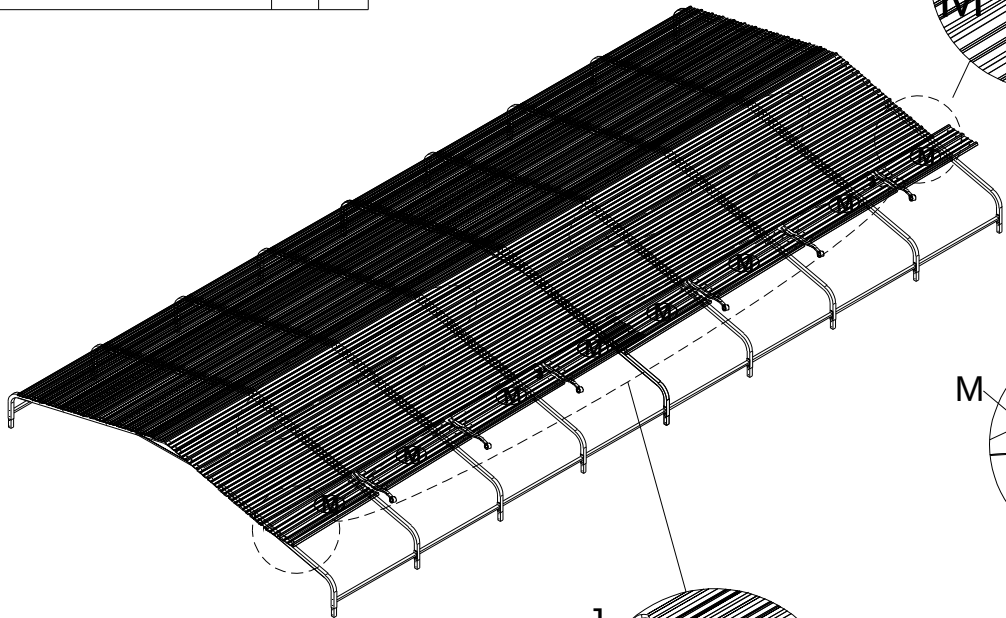




Step19

PART	Qty	NO
	M	8
	J	36
	K	

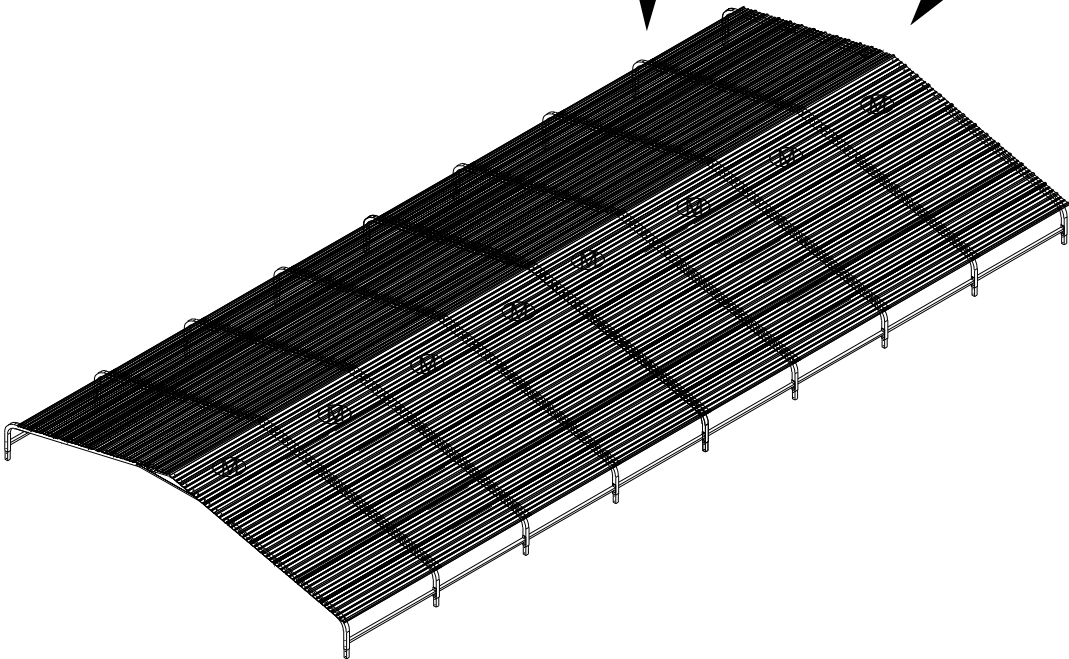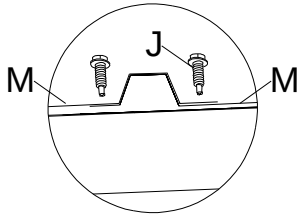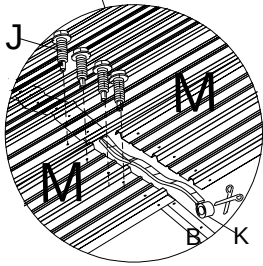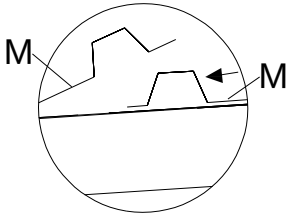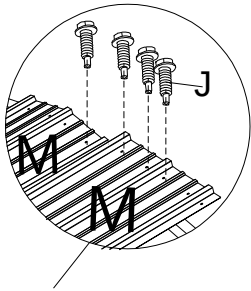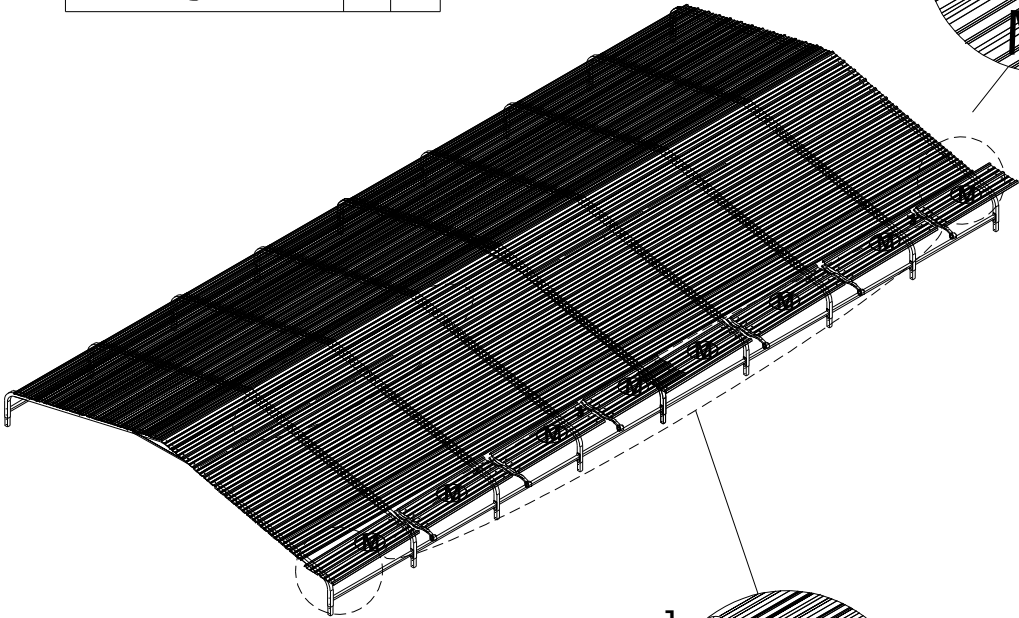


Step20

PART	Qty	NO
	O	18
	Q	18
	R	18

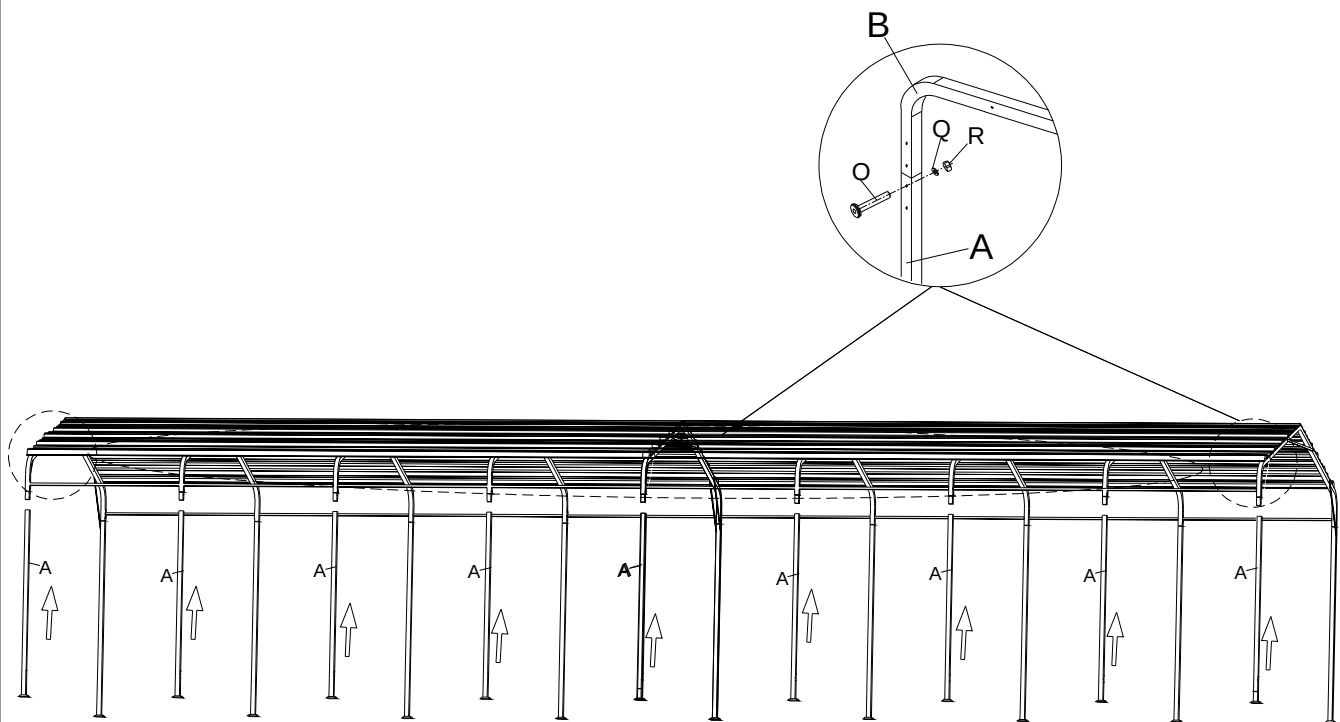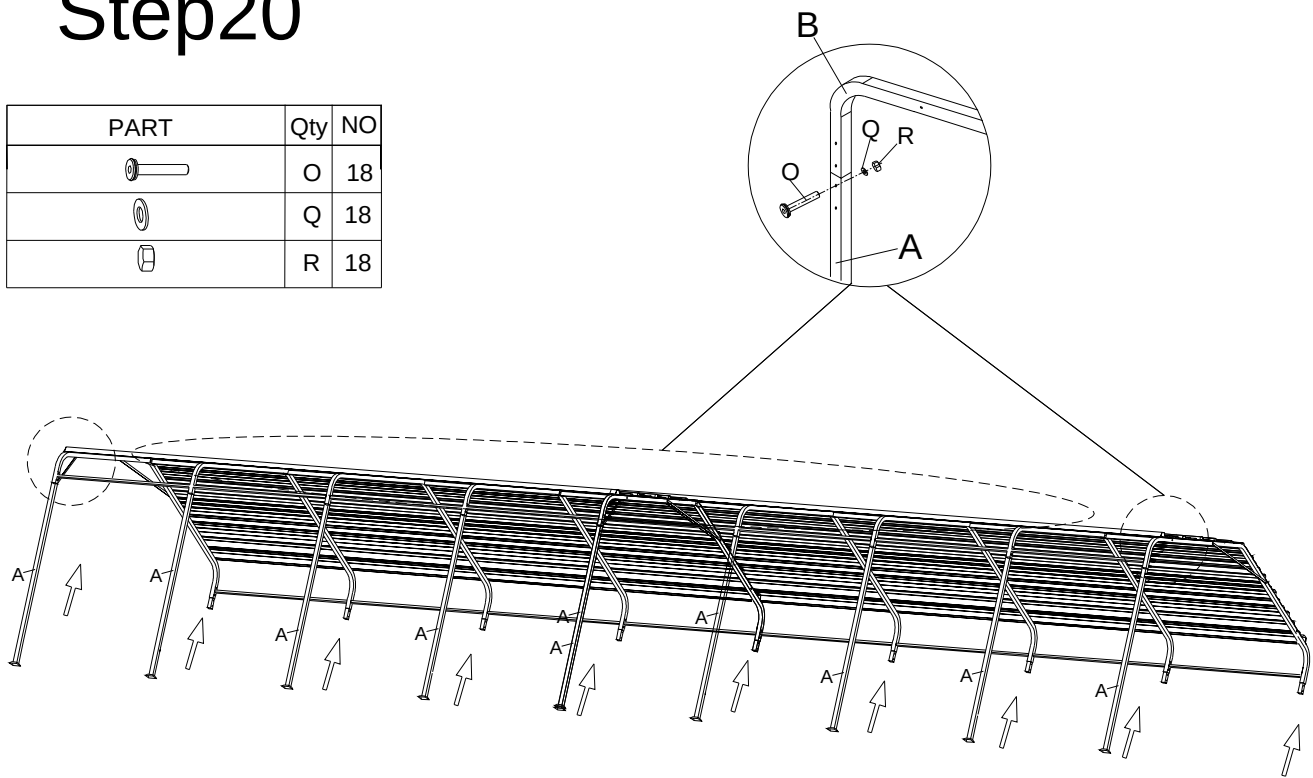






Step21

PART	Qty	NO
	D	16
	G	18
	O	72
	Q	72
	R	72

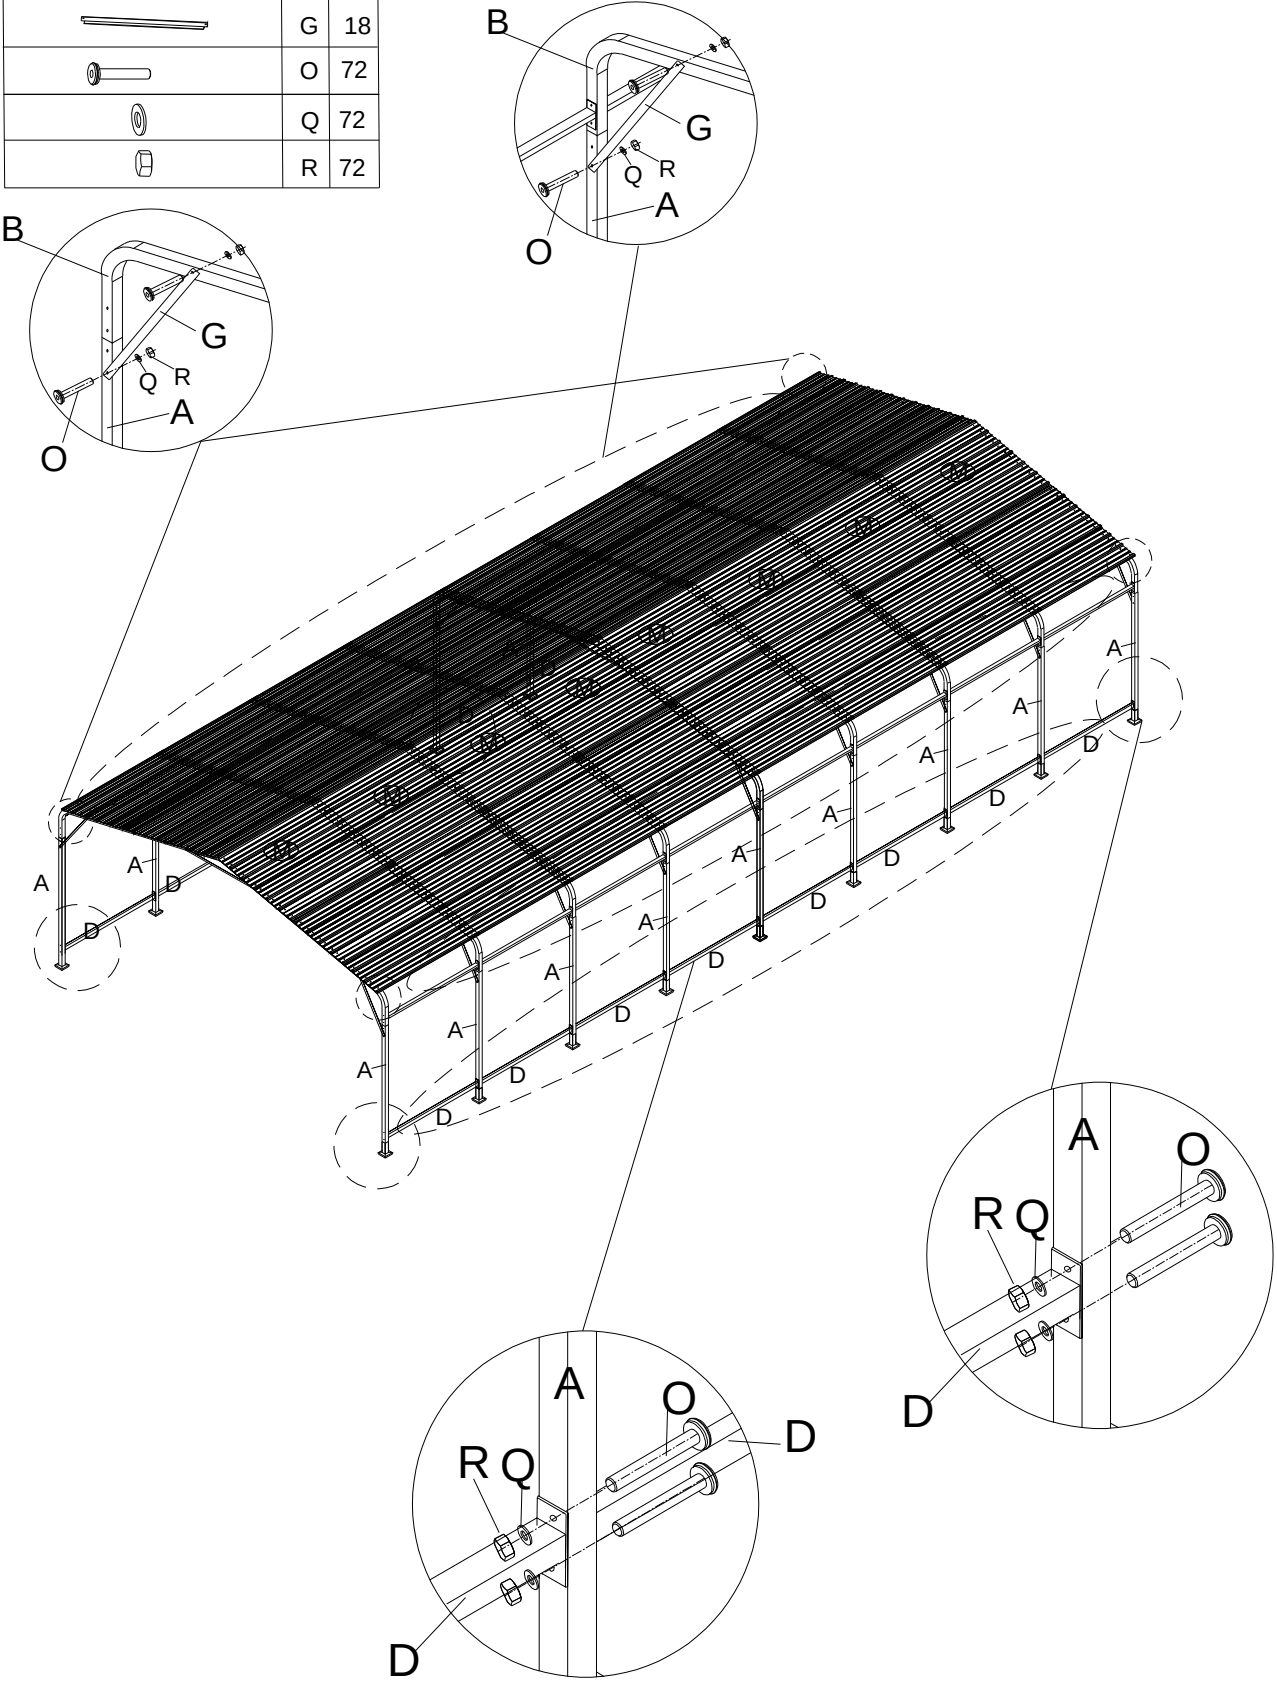






Step22

PART	Qty	NO
	M	8
	J	54
	K	

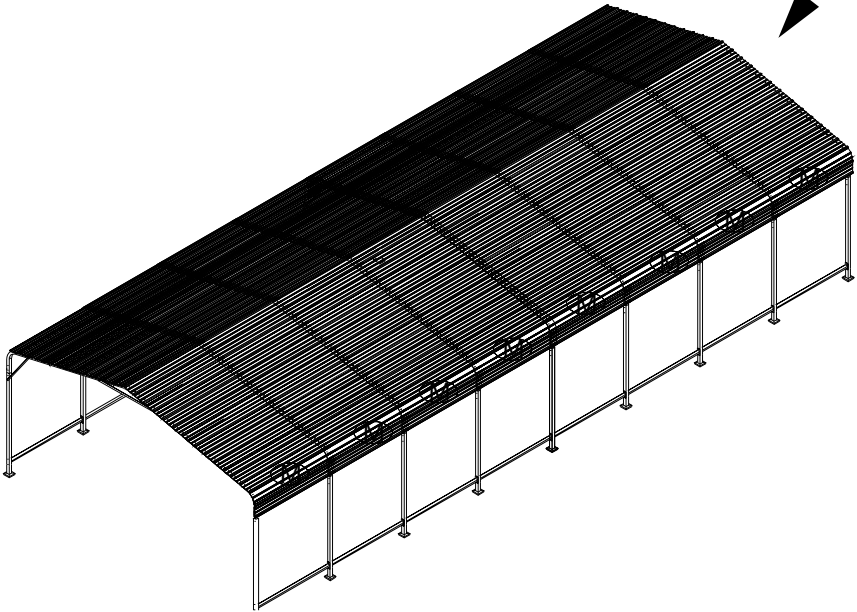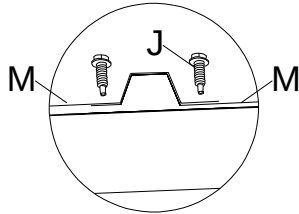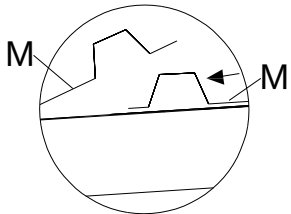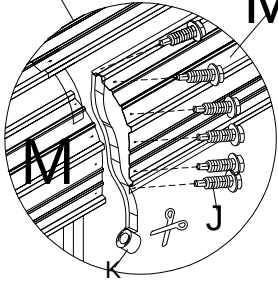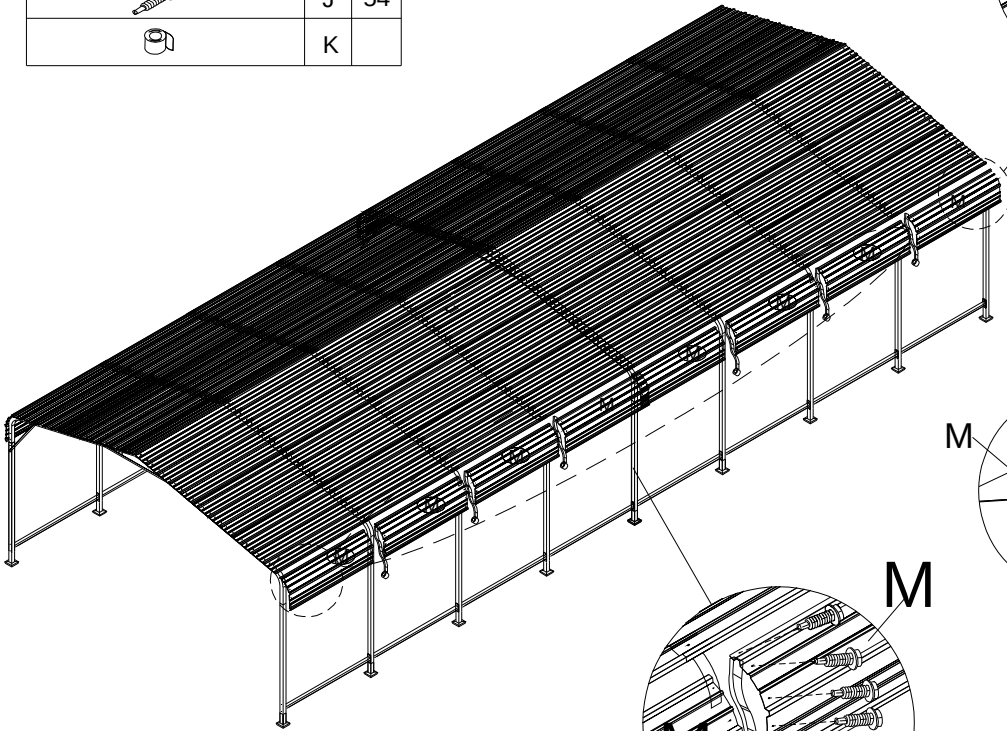


Step23

PART	Qty	NO
	M	8
	J	54
	K	

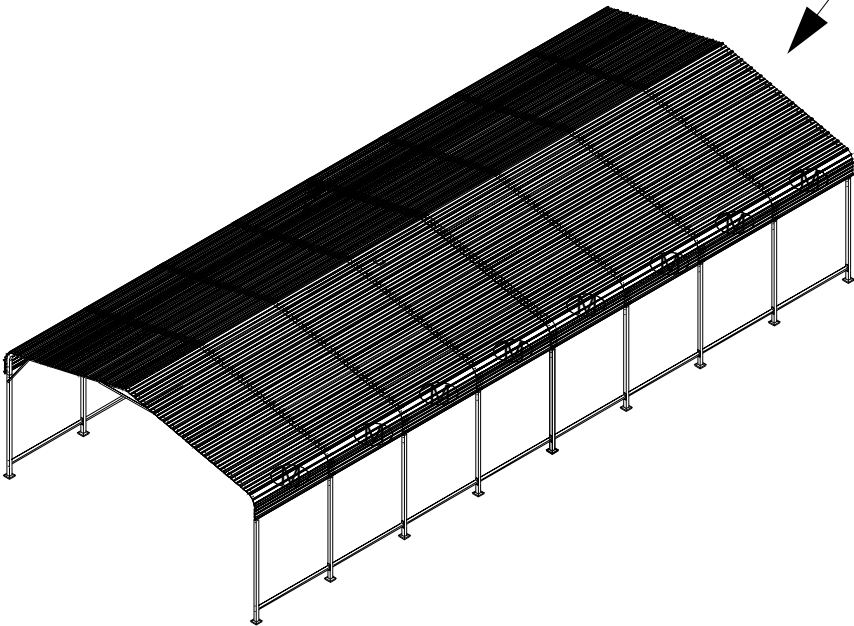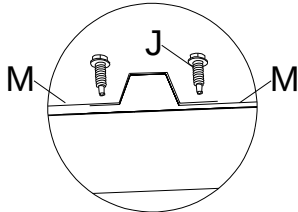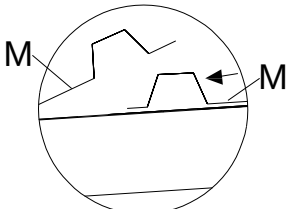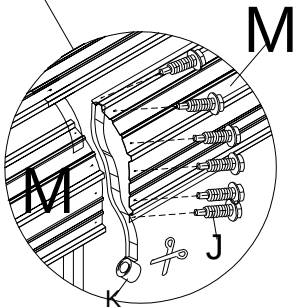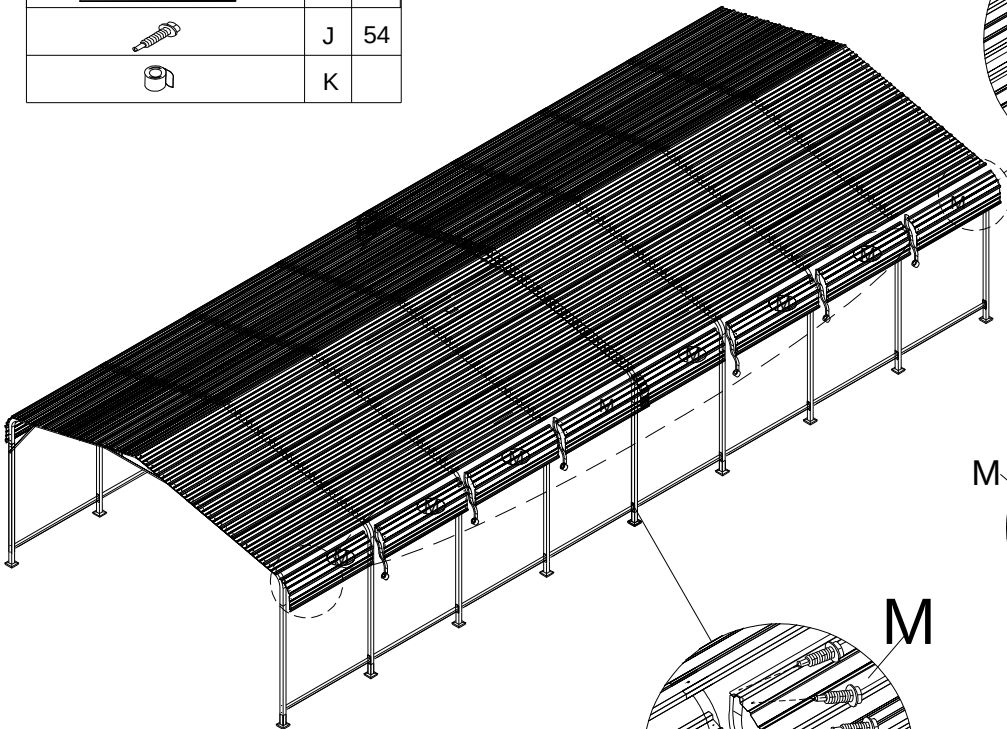



Step24

PART	Qty	NO
	L	1

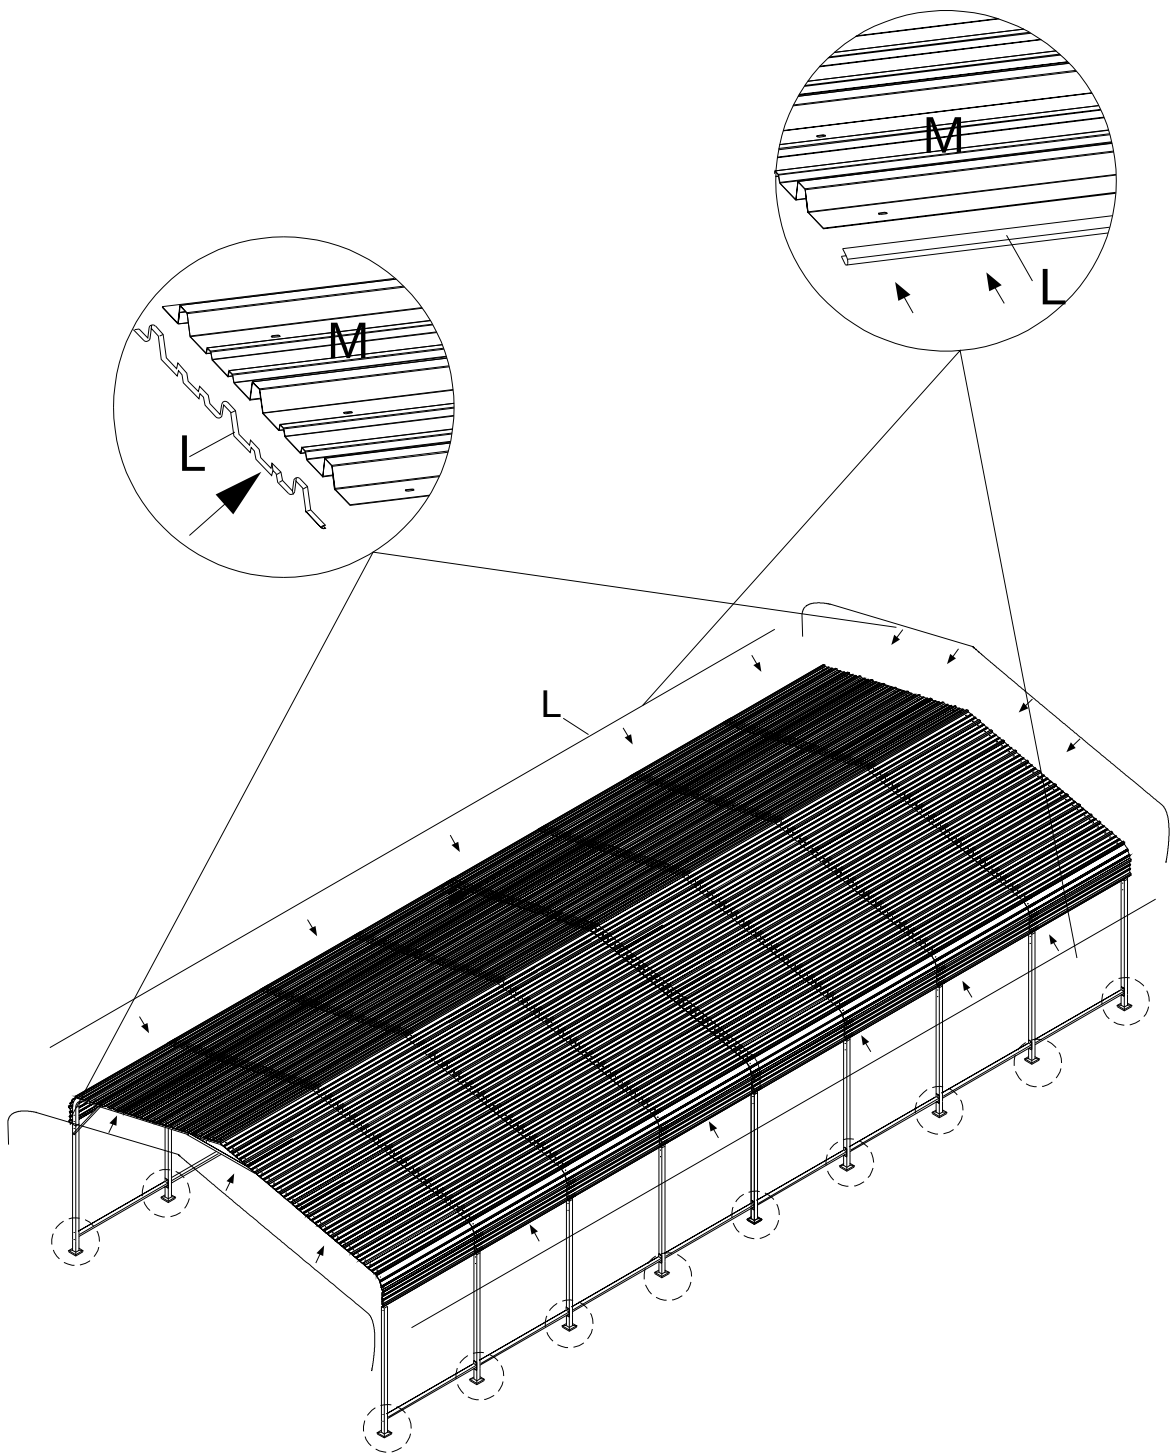


Step25

PART	Qty	NO
	S	36

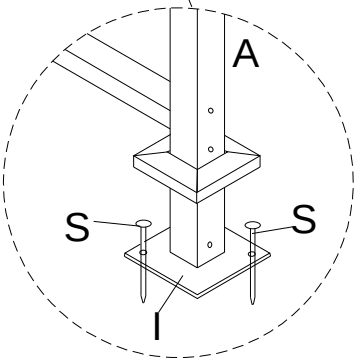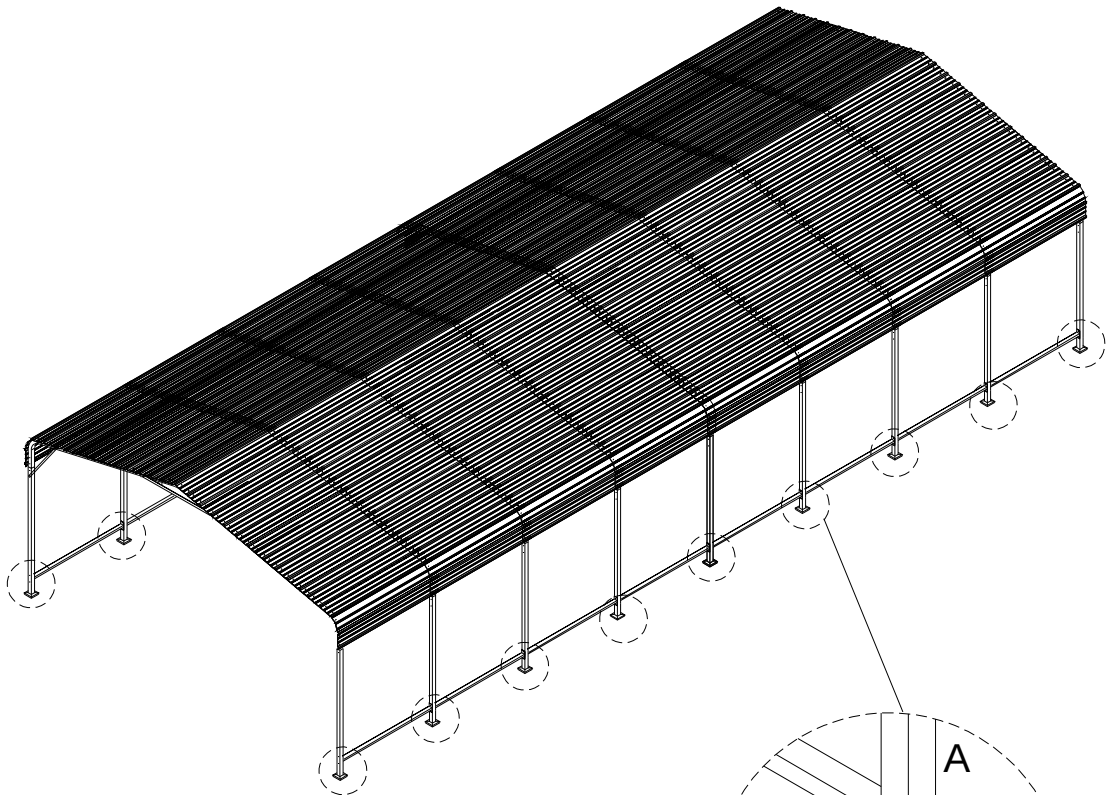

Step26

PART	Qty	NO
	T	36

