


Bed Frame


SE-5.10 A

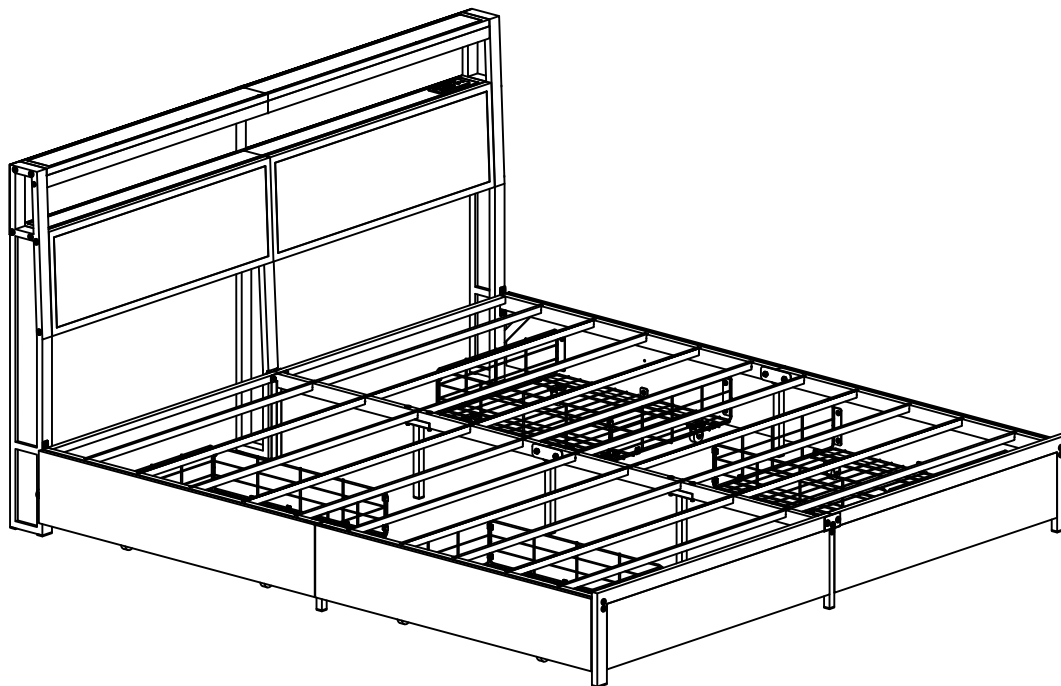






Model:T3963P482853






PRODUCT GUIDE AND INSTALLATION MANUAL
Scan the QR code to watch the installation video








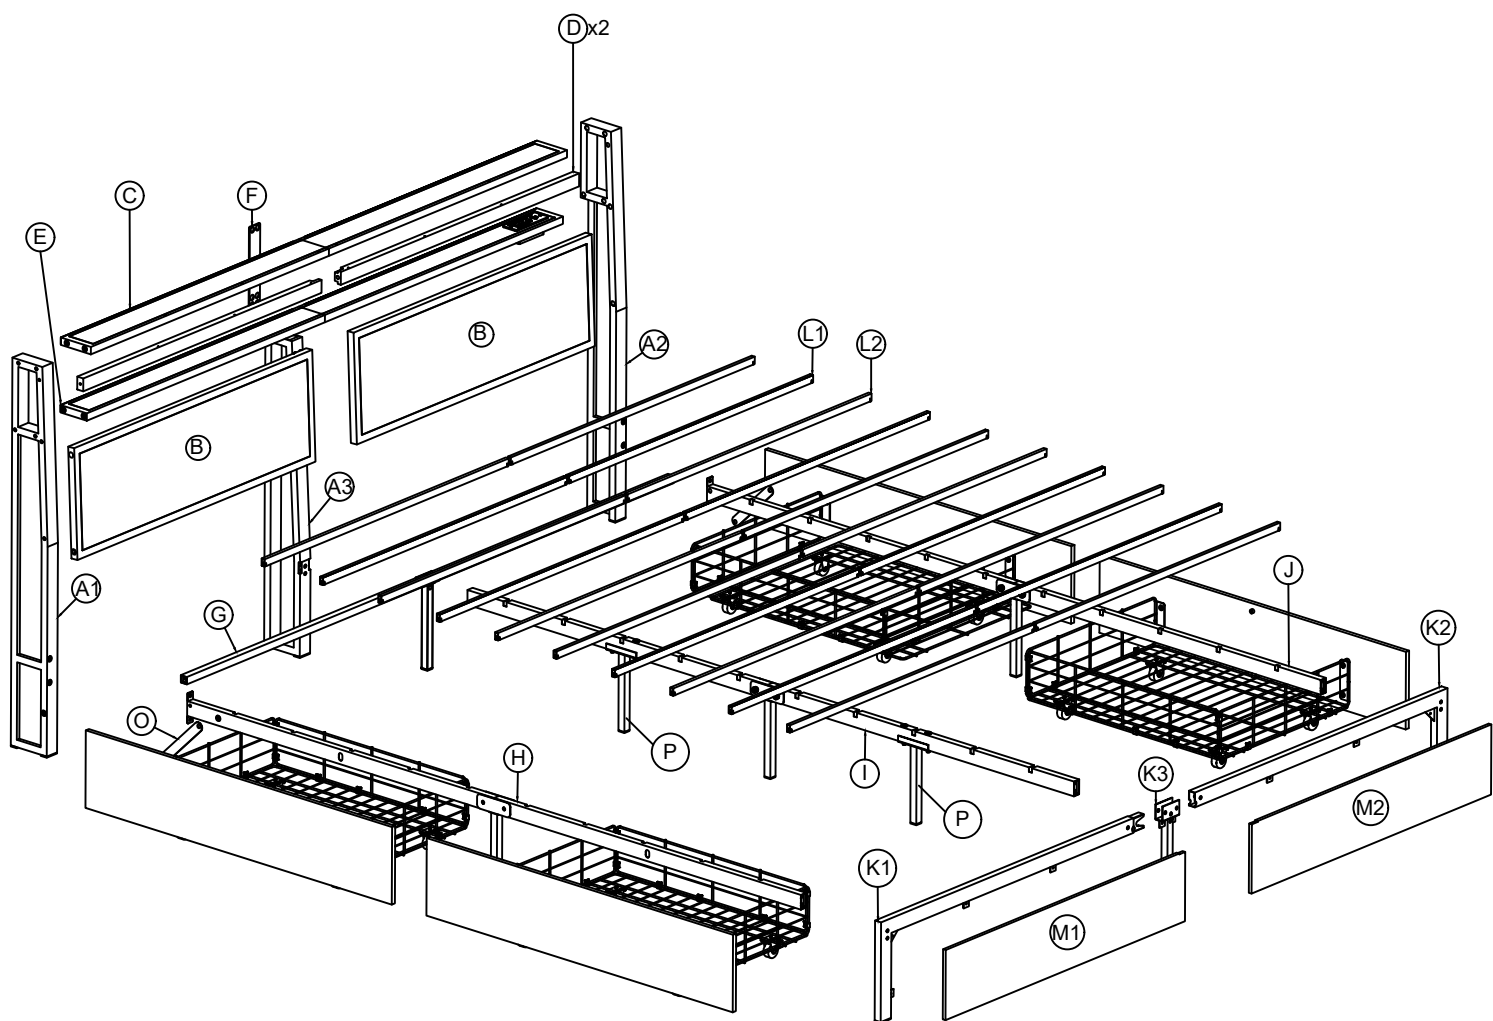







Parts List :

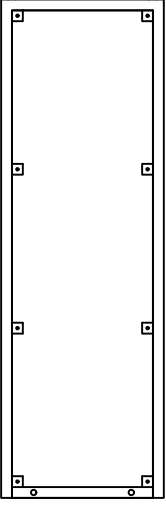								
(A1) 1pcs	(A2) 1pcs	(A3) 1pcs	(B) 2pcs	(C) 1pcs	(D) 2pcs	(E) 1pcs	(F) 1pcs	(G) 1pcs

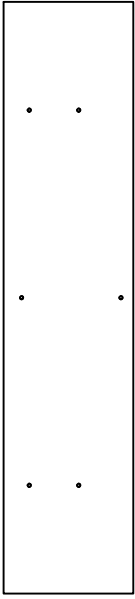

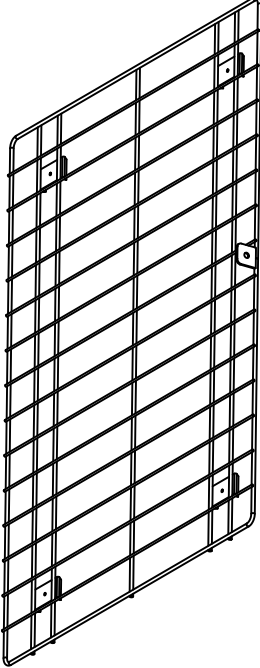
								
(M1) 1pcs	(M2) 1pcs	(Z1) 4pcs	(P) 2pcs	(Z2) 8pcs	(Z3) 4pcs	(Z4) 4pcs		




								
M8x15mm	M8x30mm	M8x35mm	M8x55mm	M6x15mm	M6x30mm	M6x35mm	M6x55mm	M6x10mm
(Y1) 8pcs	(Y2) 2pcs	(Y3) 6pcs	(Y4) 14pcs	(T1) 6pcs	(T2) 4pcs	(T3) 2pcs	(T4) 2pcs	(T5) 20pcs

Parts List :

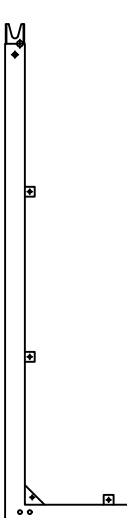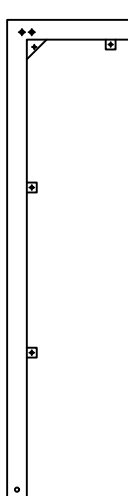							
H	I	J	K1	K2	K3	L1	L2
1pcs	1pcs	1pcs	1pcs	1pcs	1pcs	8pcs	12pcs


Double-sided tape

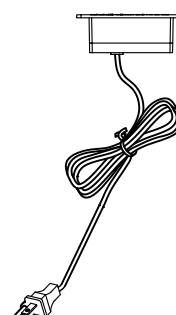					
Q1	Z6	Z8	Z5	U1	U3
42pcs	16pcs	4pcs	x16	1pcs	1pcs

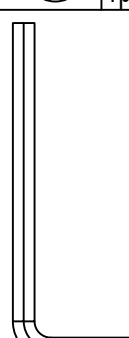
					
M3x10mm	M8x50mm	M4x35mm		Ø6xØ18mm	KEY 4
V	Y5	V3	O	X	W
16pcs	4pcs	6pcs	2pcs	6pcs	1pcs

Step 1

Tear off the double-sided adhesive tape on U1

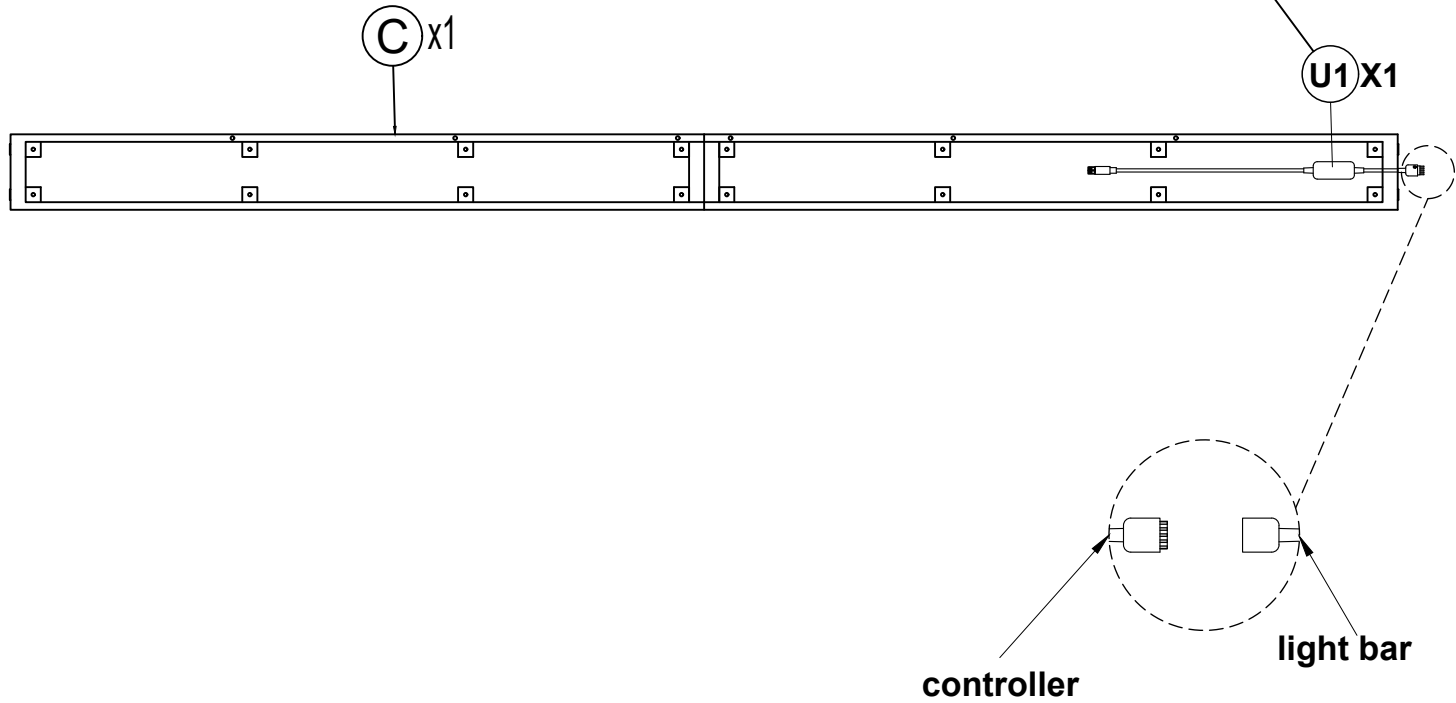


Step 2

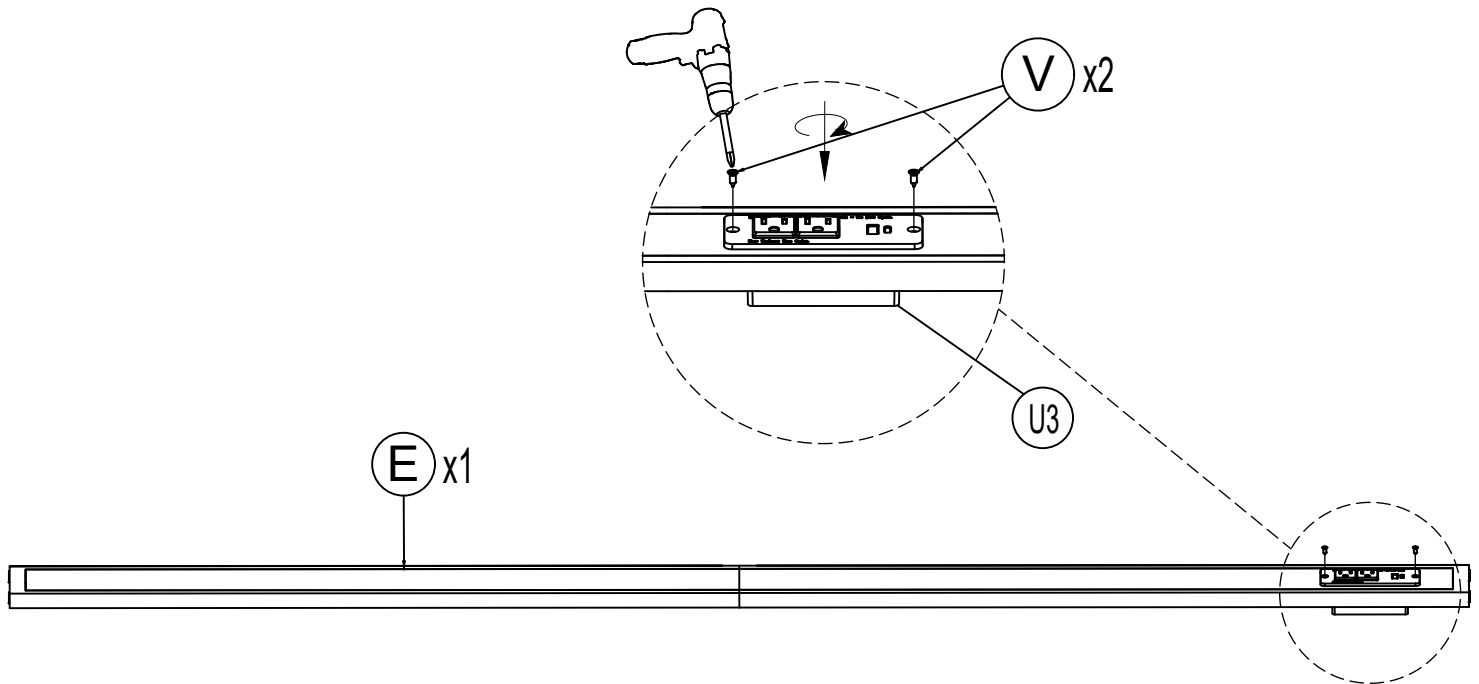


We suggest using drill machine to install V screws
***Note: no holes on the board is normal**


Step 3

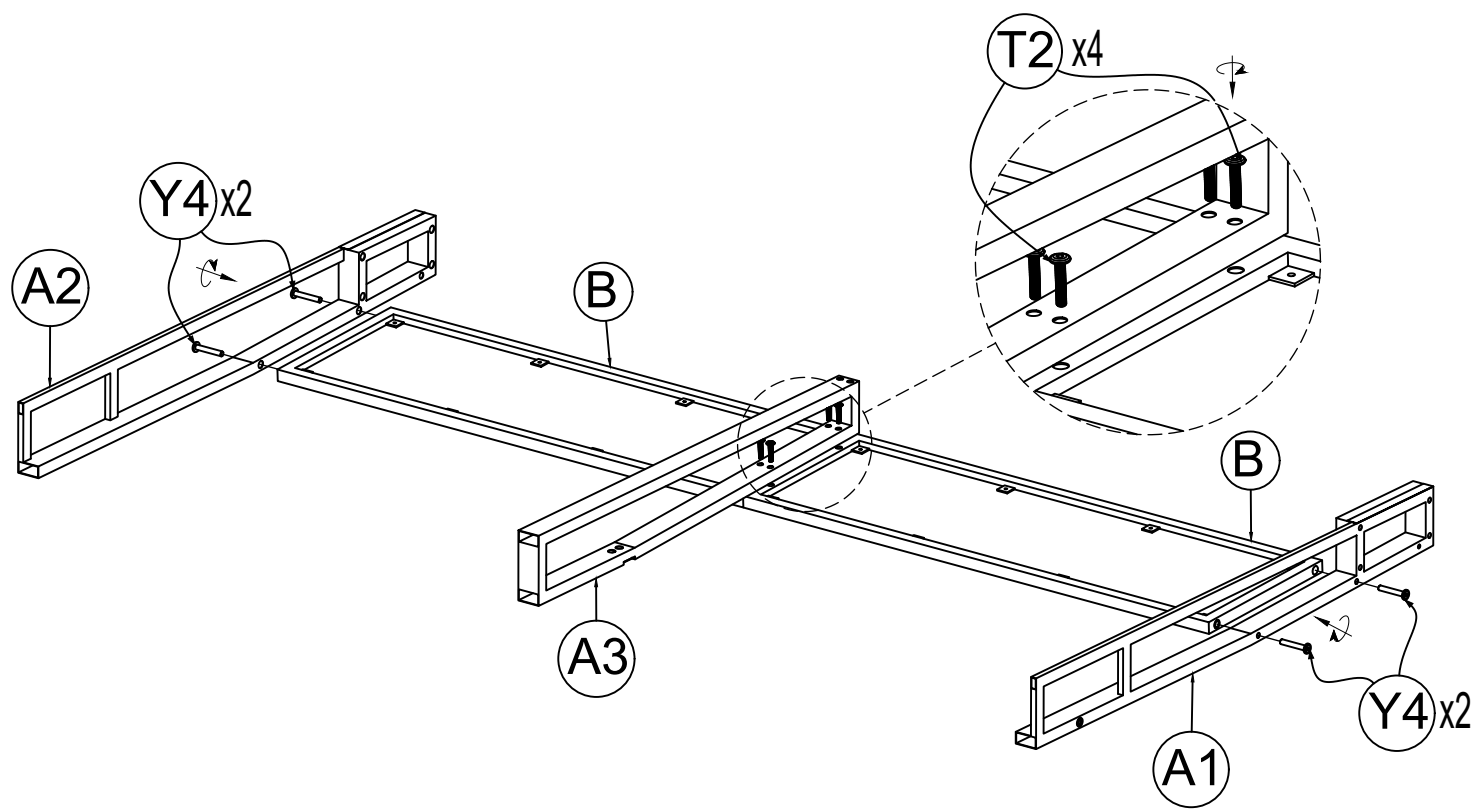


Step 4

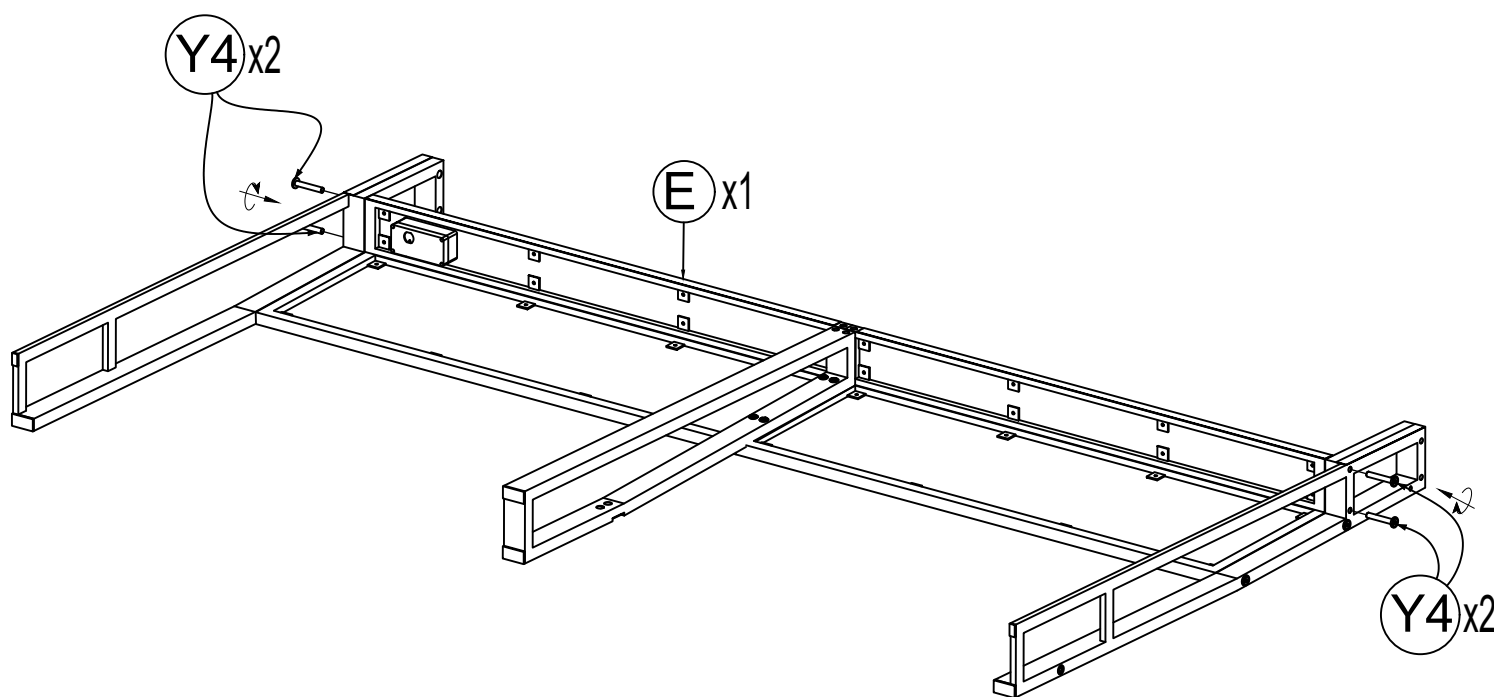

Step 5

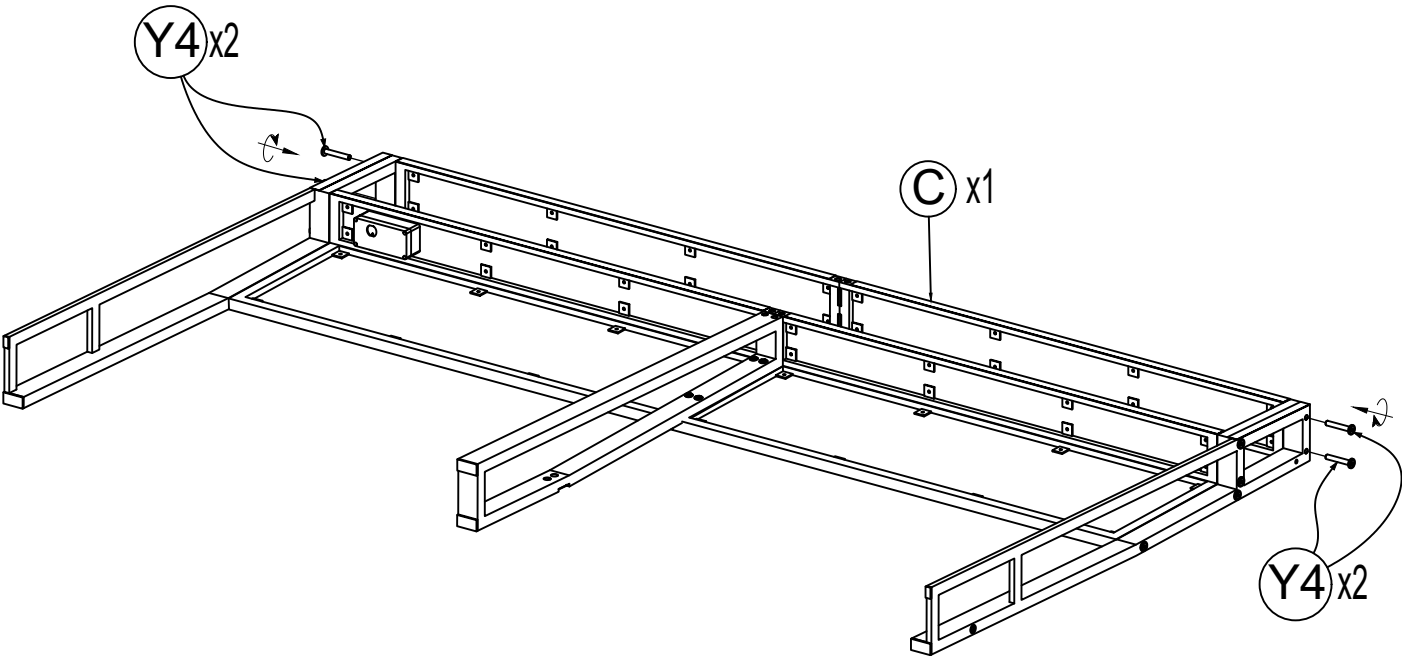


Step 6

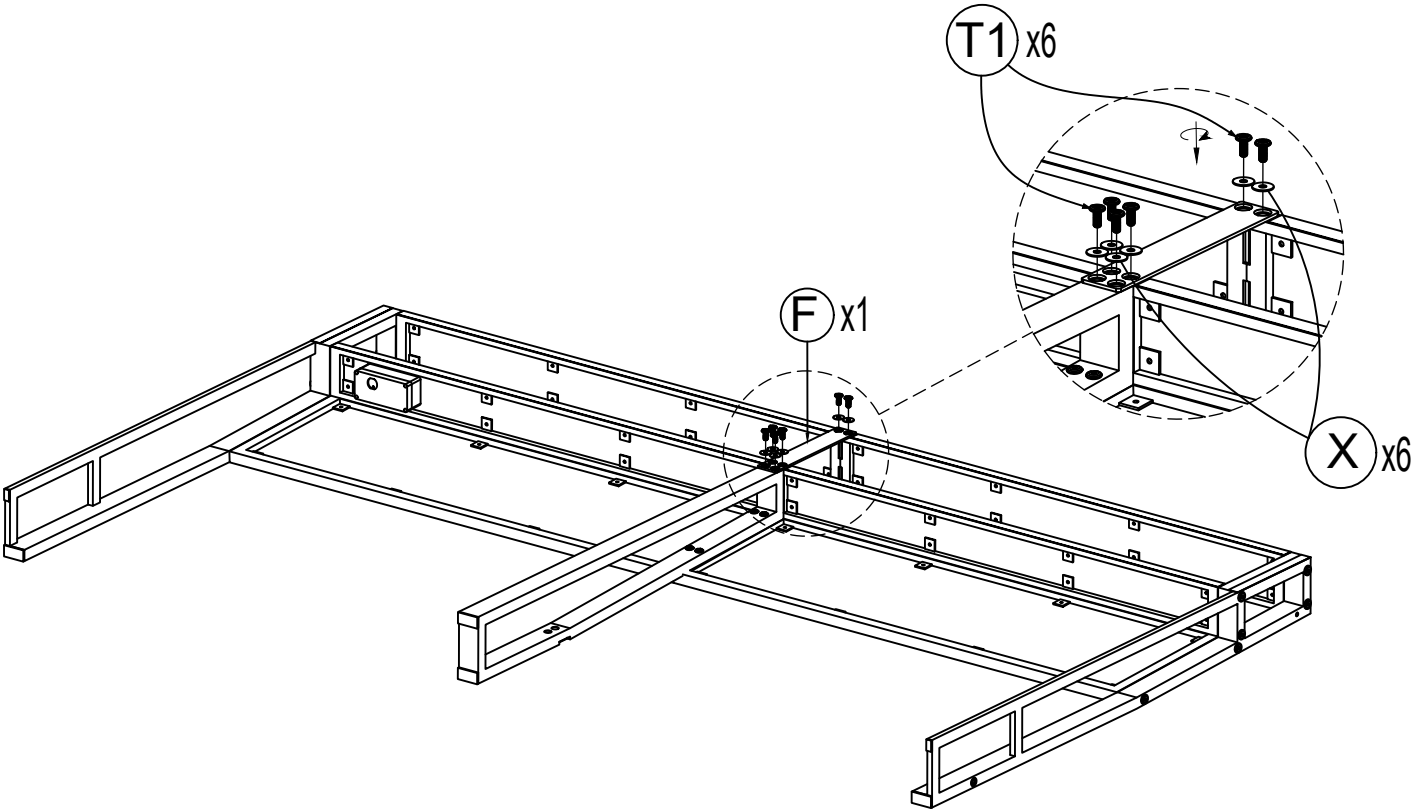

Step 7


We suggest using drill machine to install V3 screws

***Note: no holes on the board is normal**

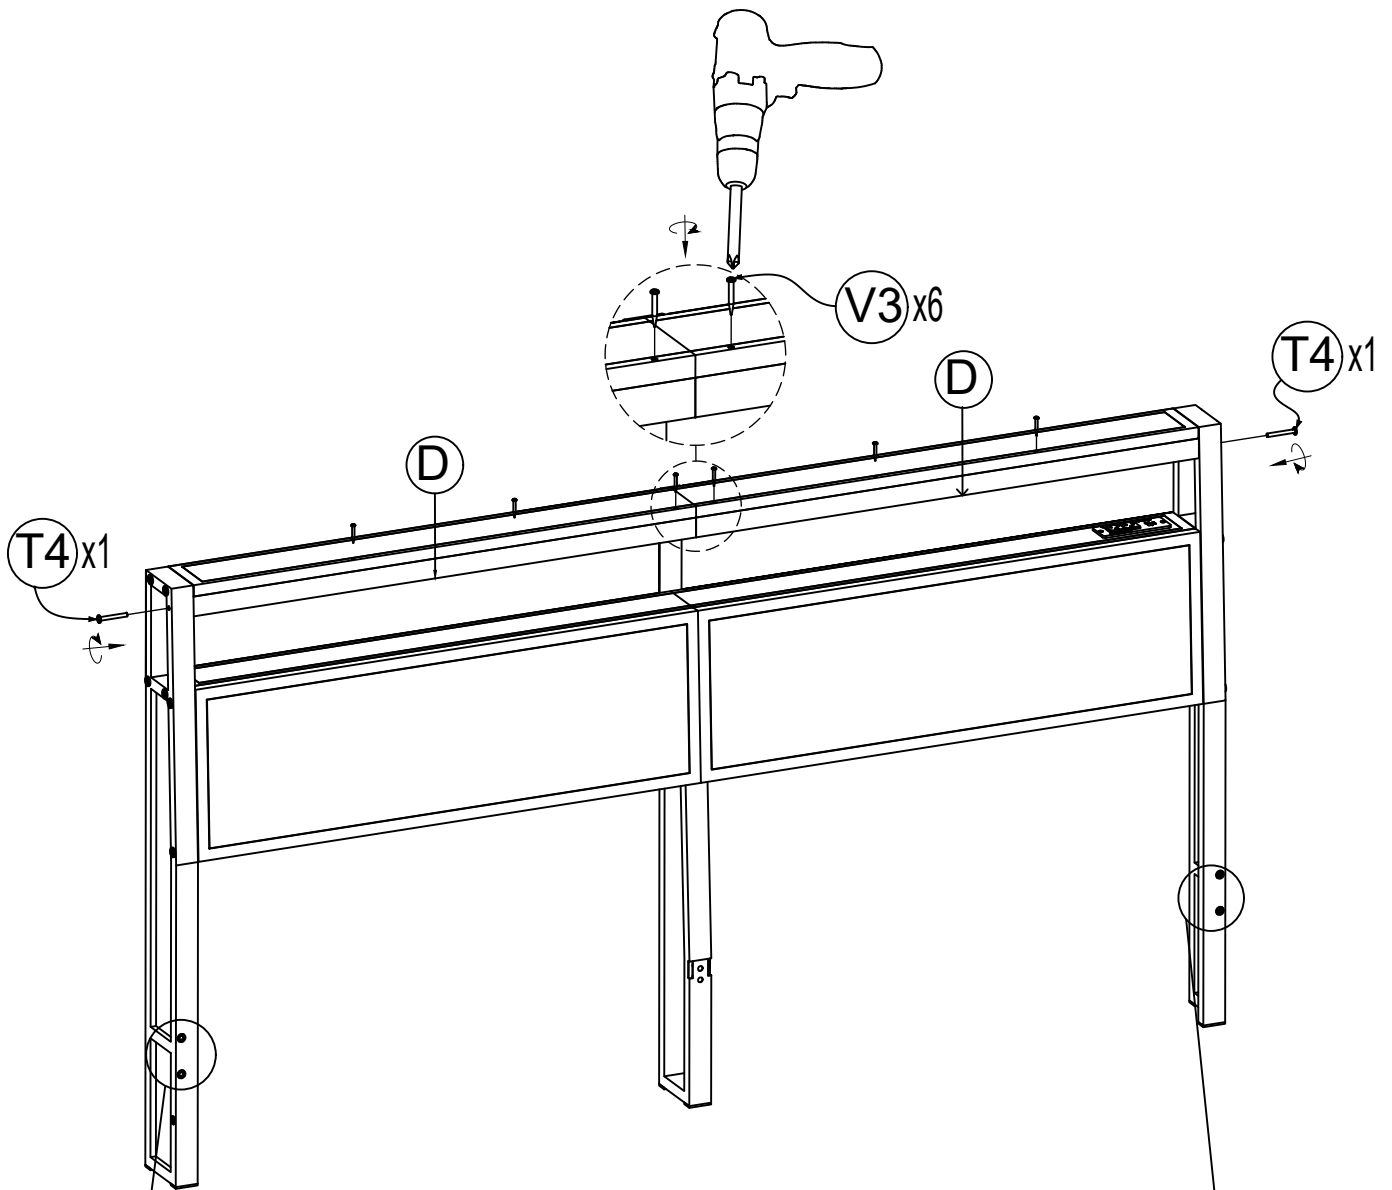


These two holes need to be in this side

Step 8

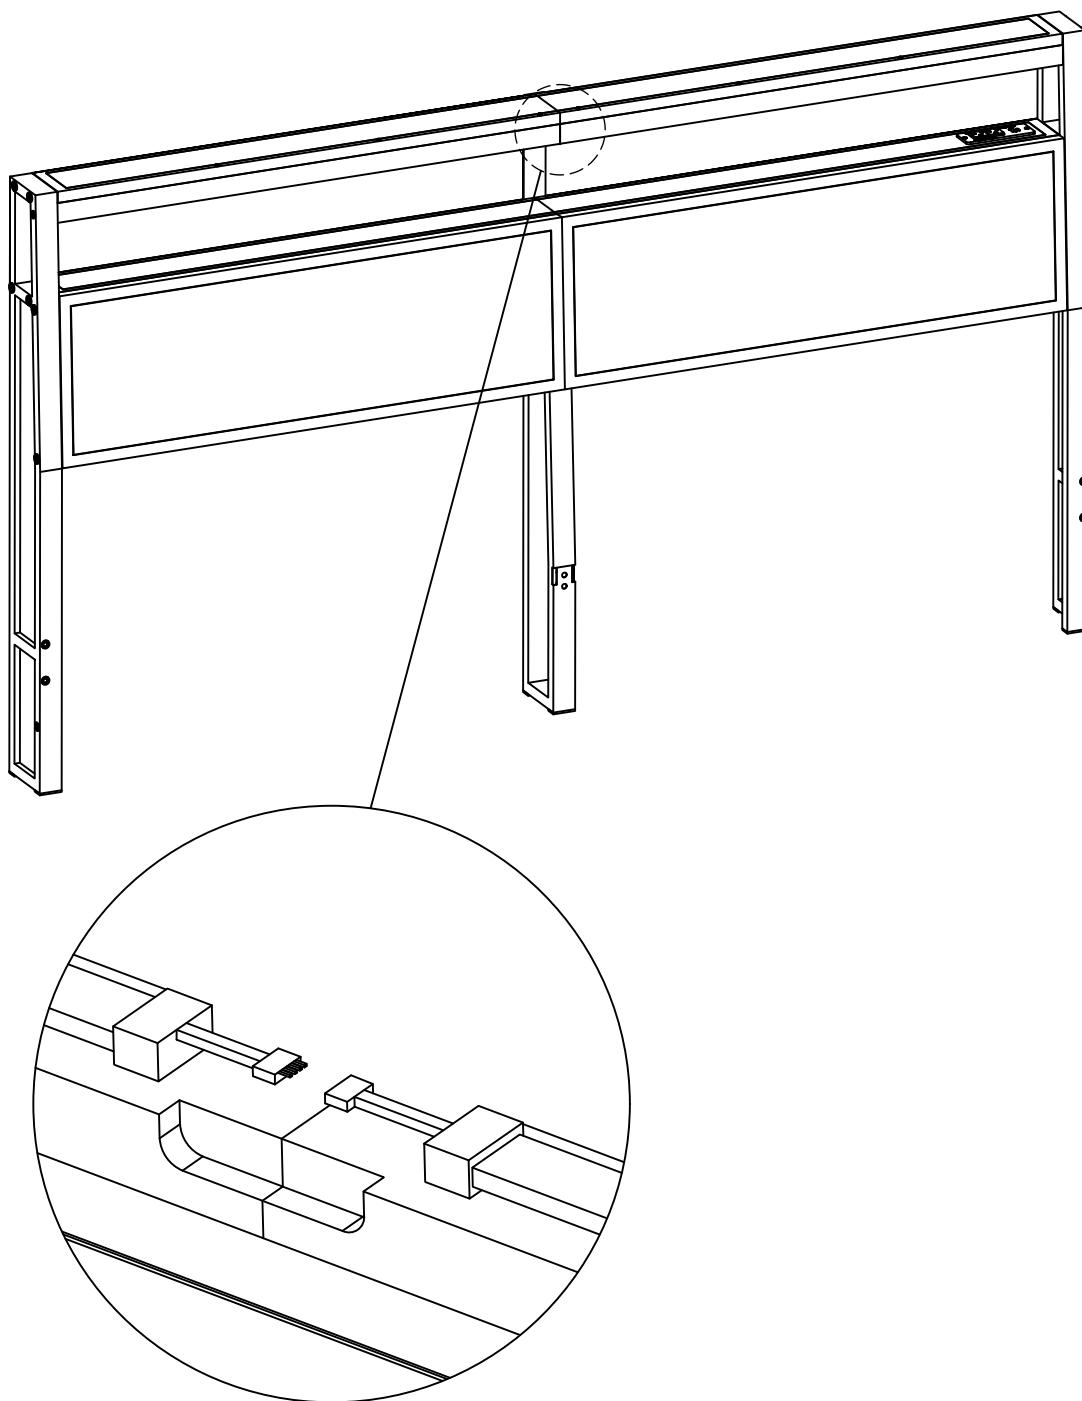


connect them together


Step 9

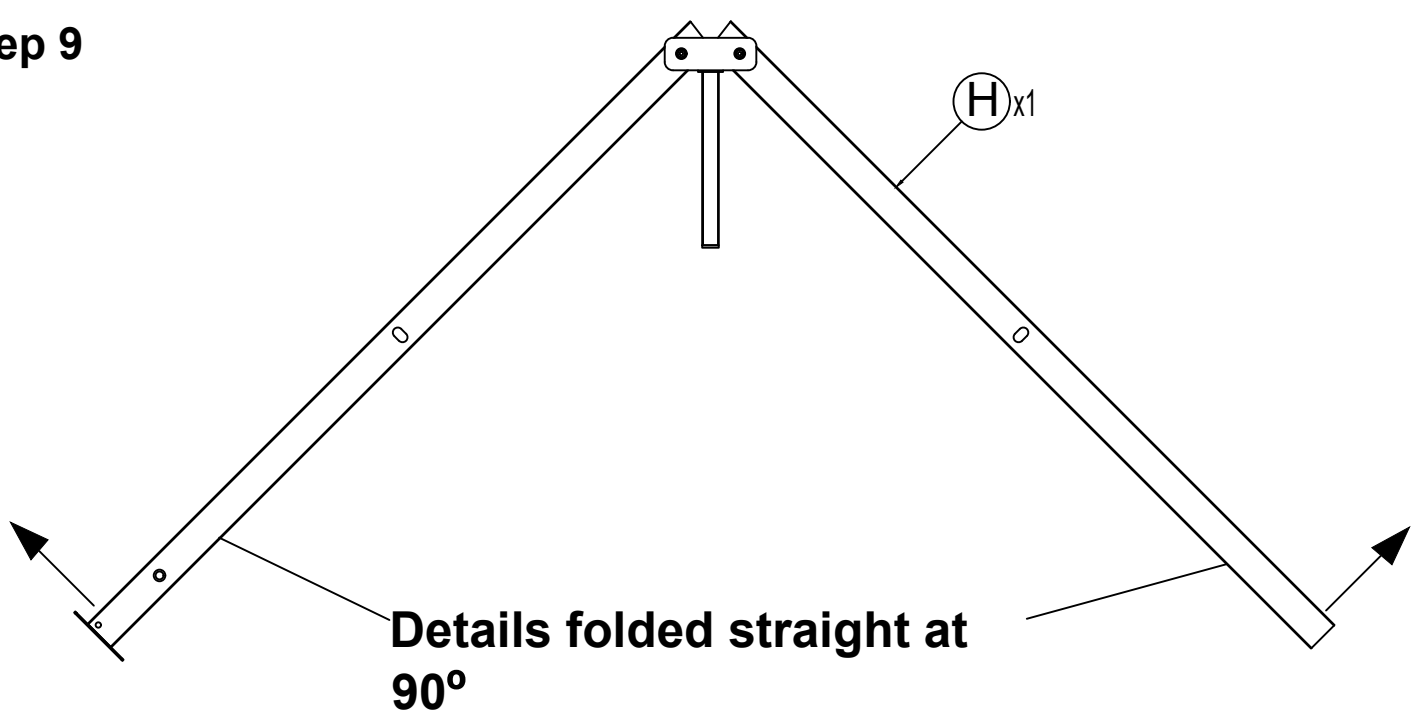


Step 10

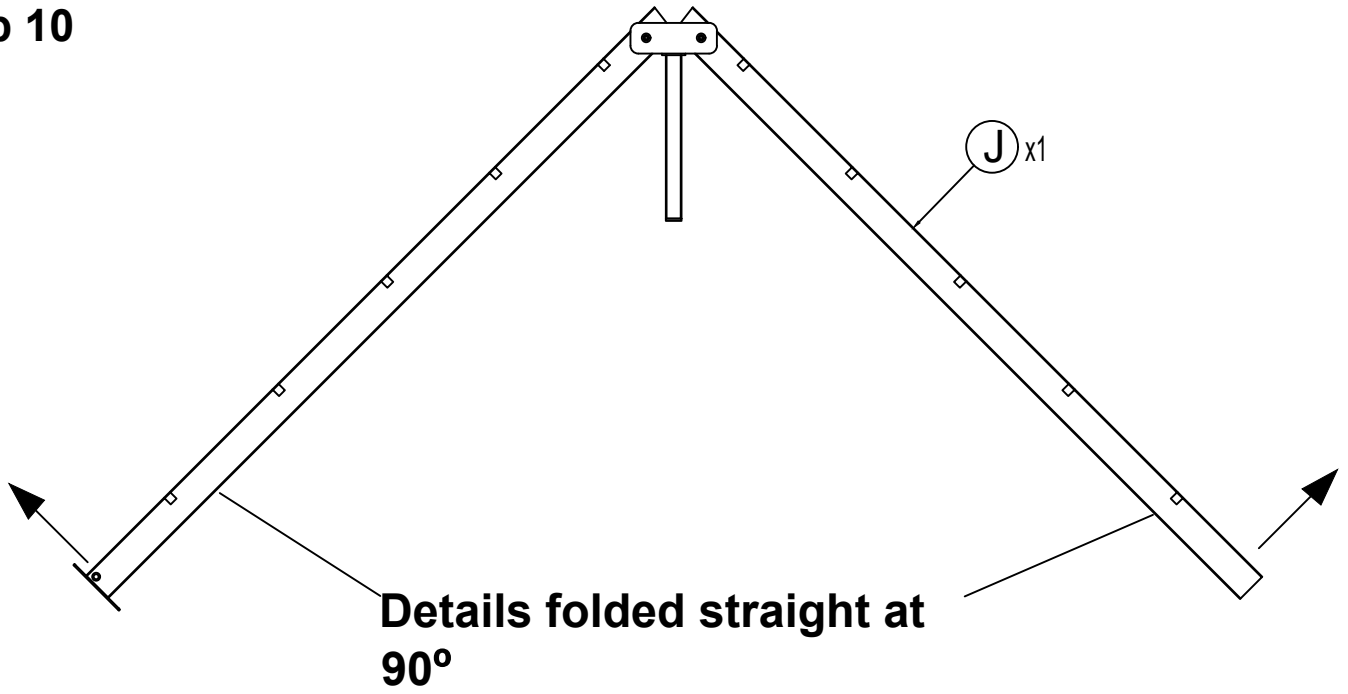


Step 11

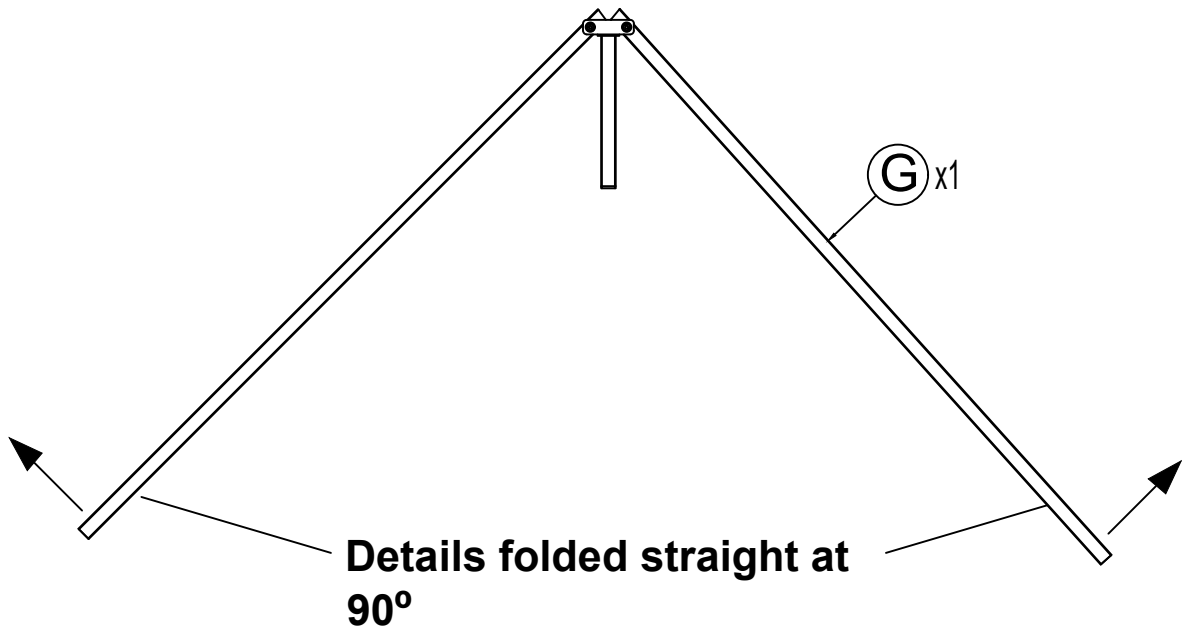


Step 12

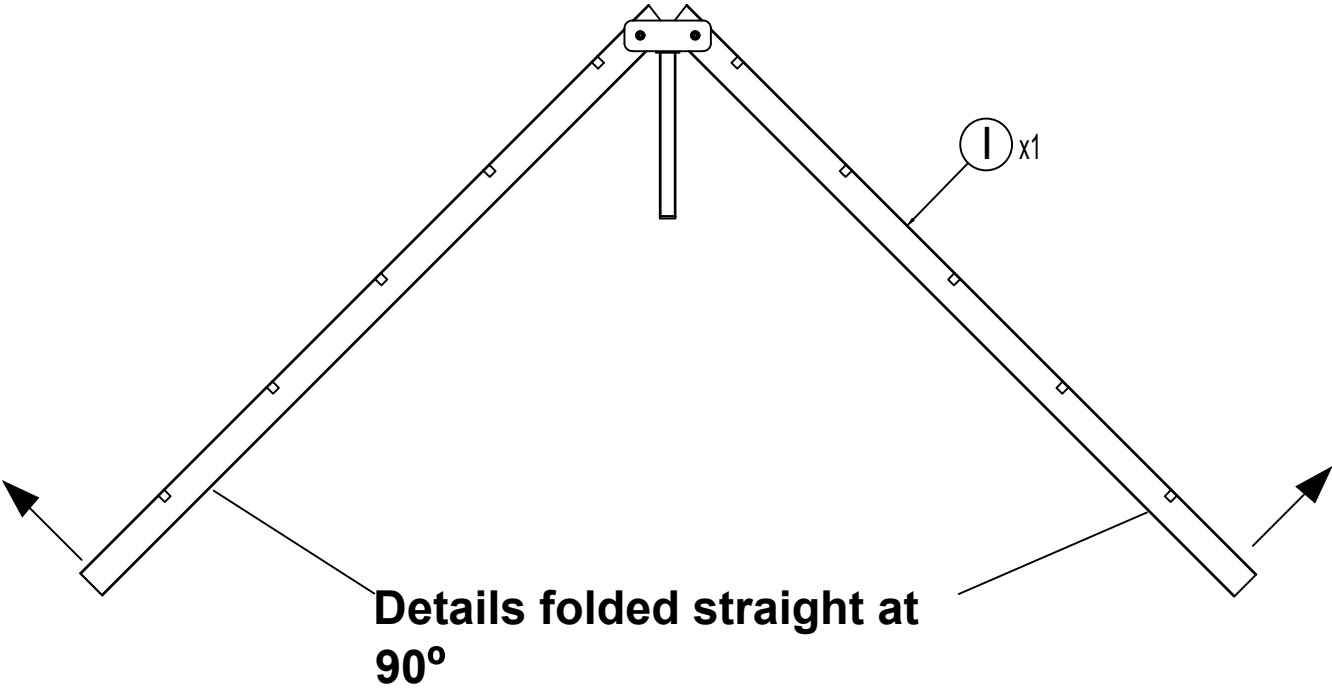


Step 13

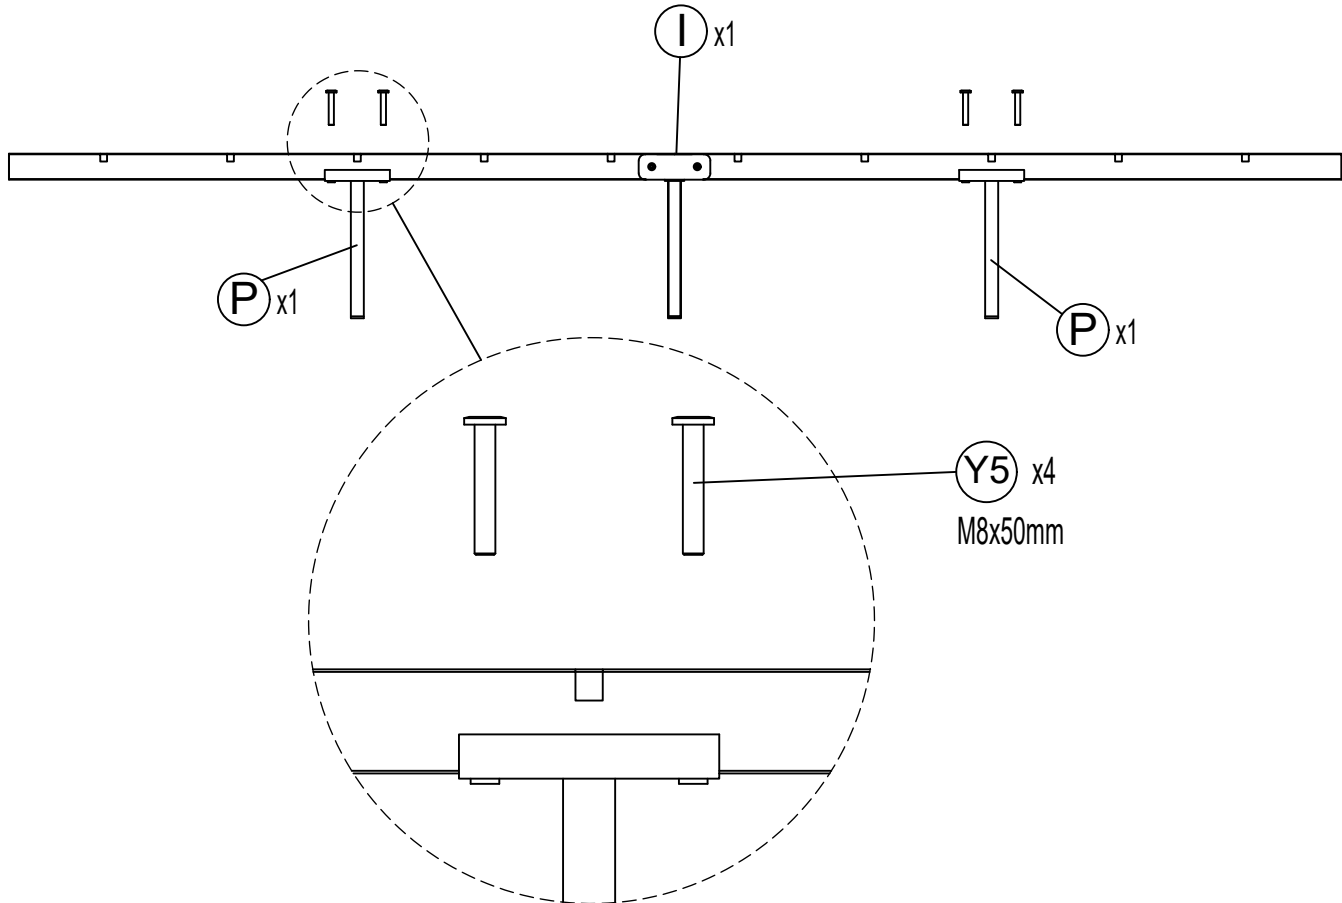

Step 14

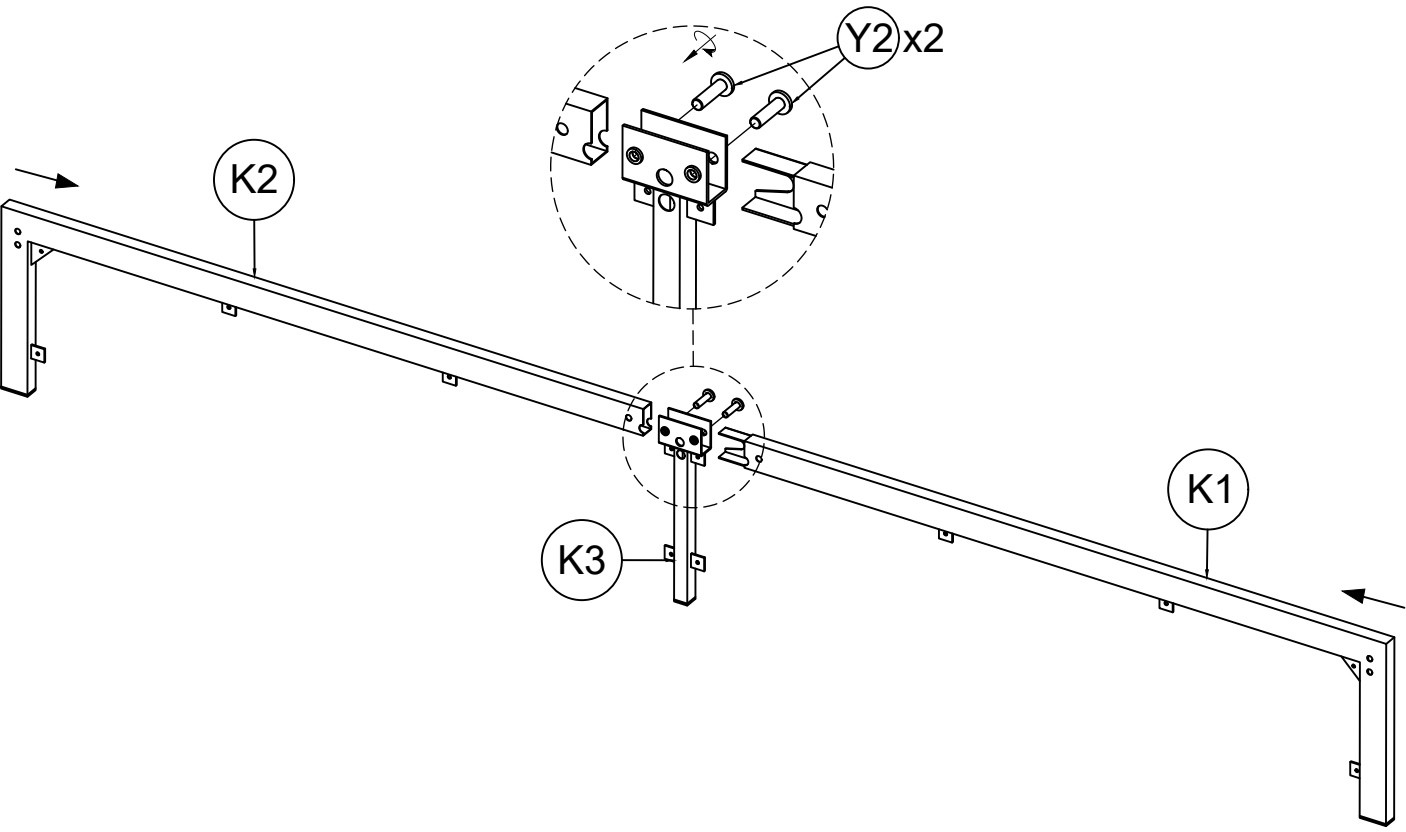


Step 15 We suggest using drill machine to install V screws
*Note: no holes on the board is normal

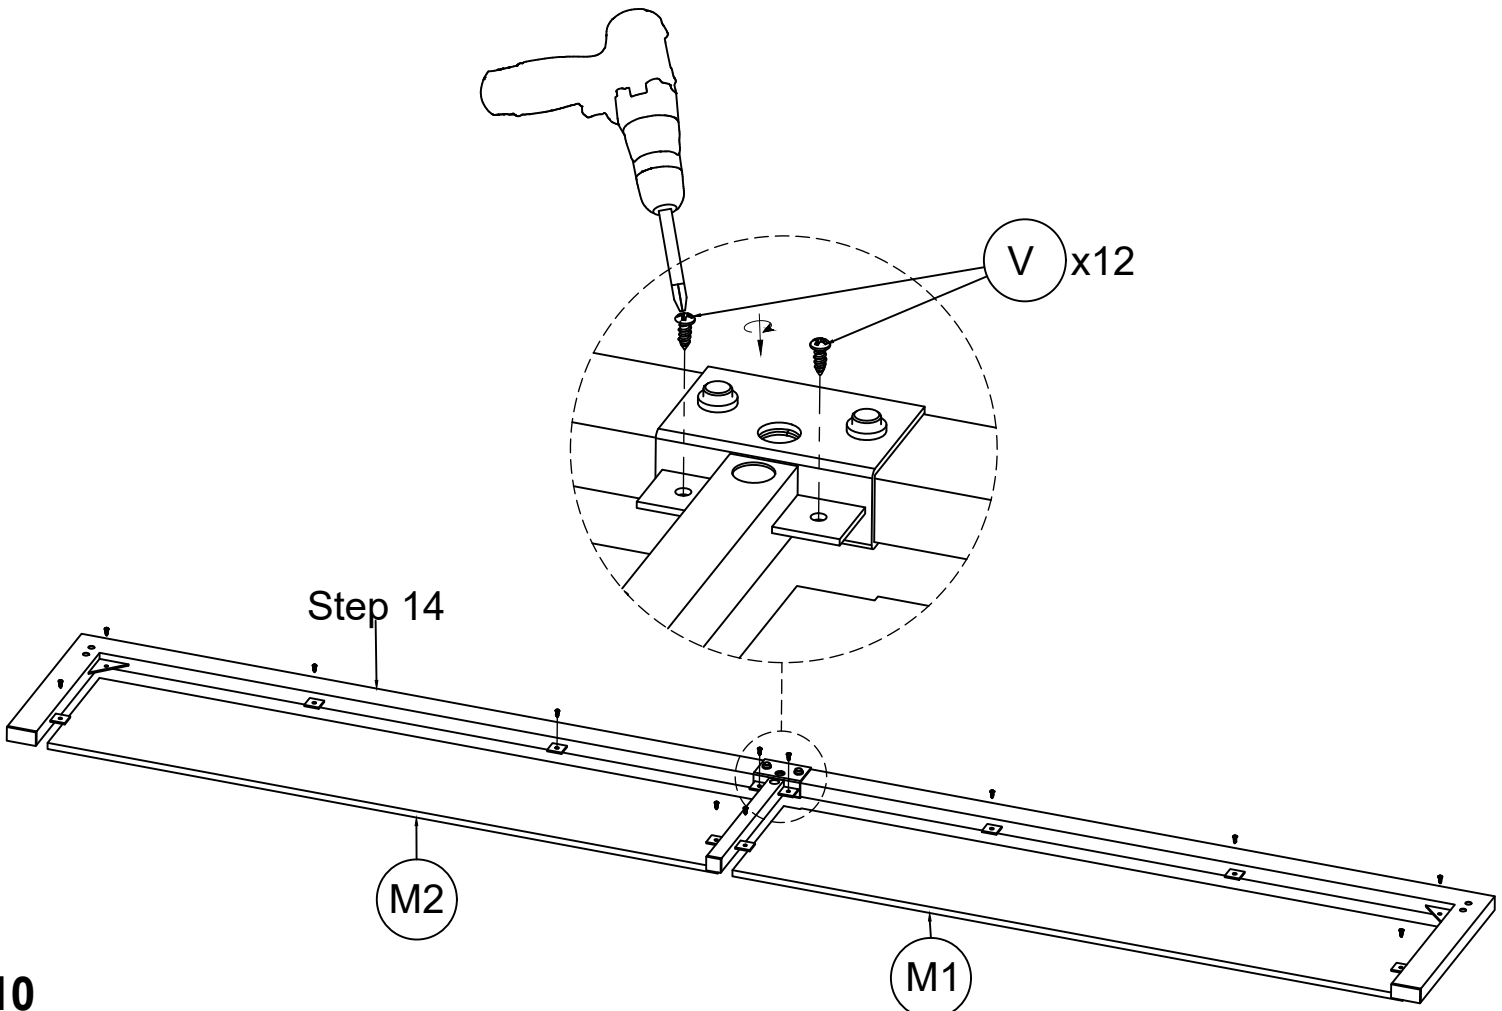


Step 16


Headboard side

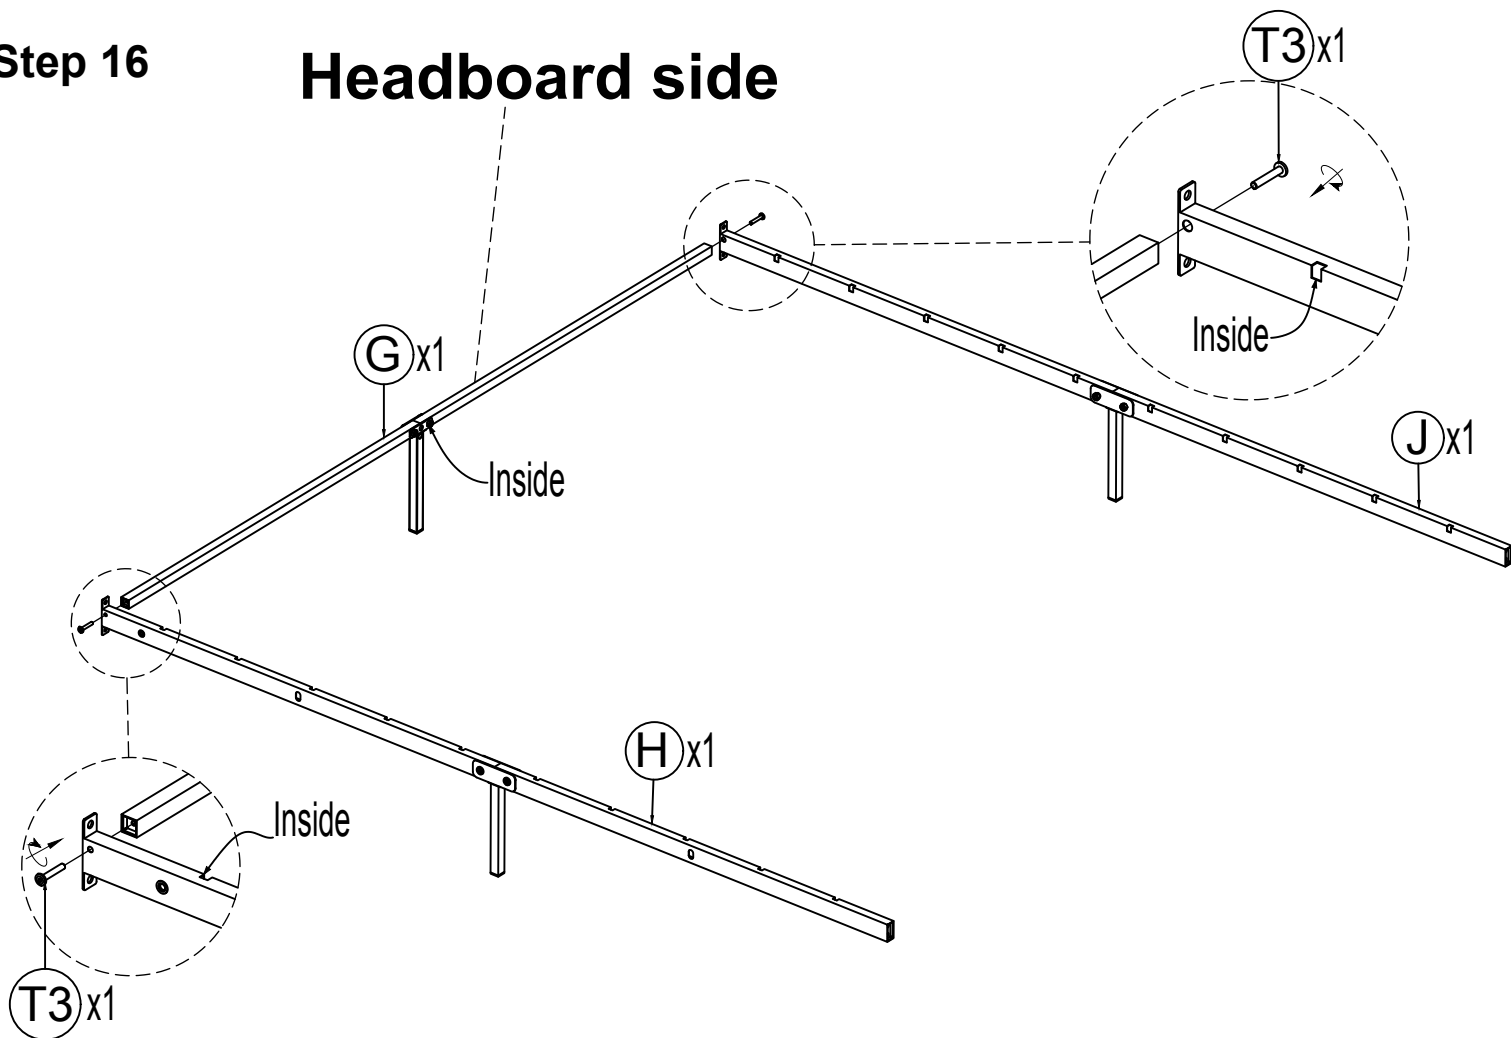


Step 17

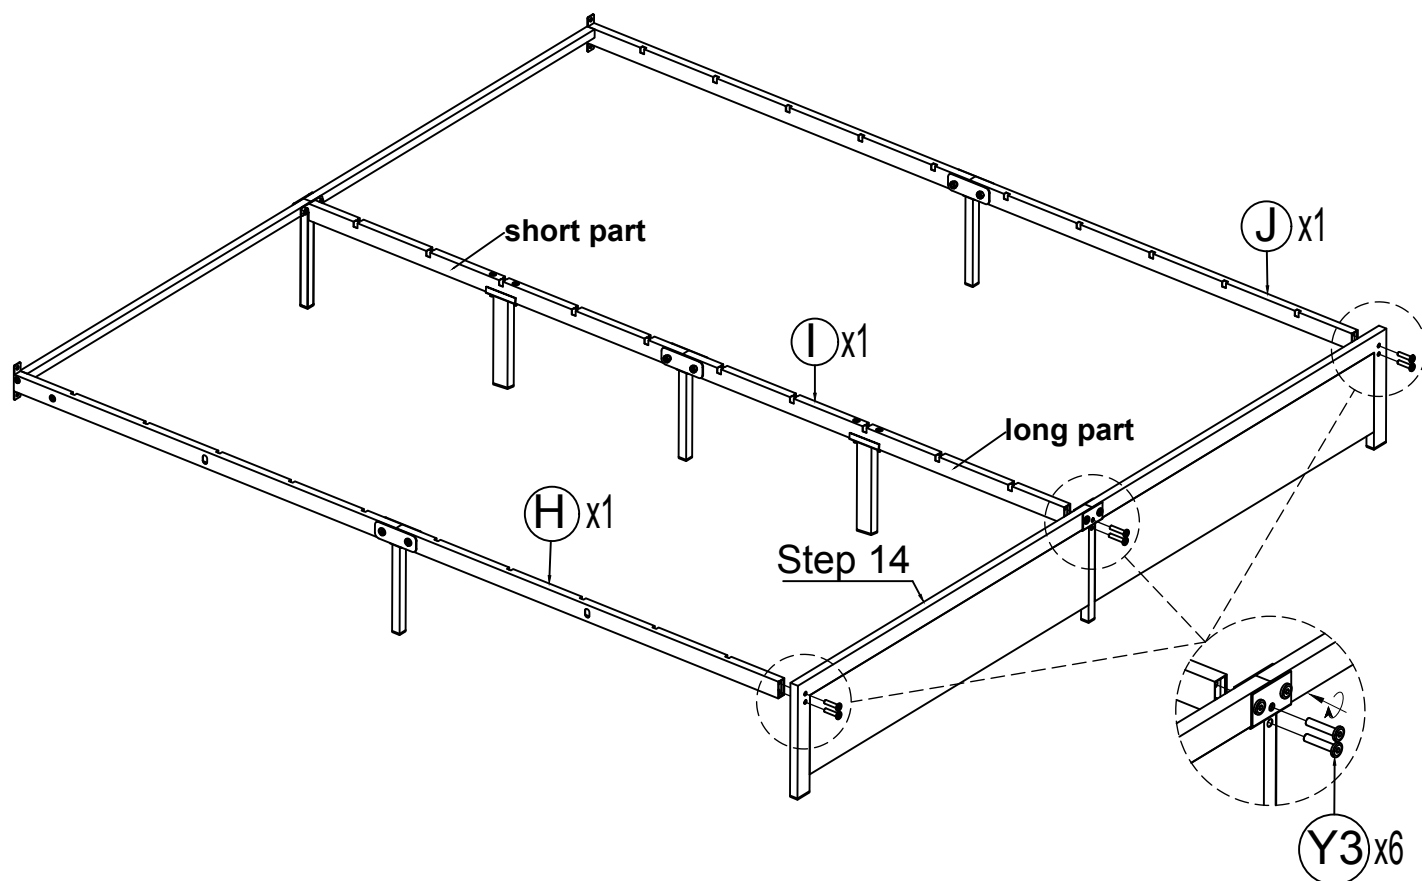


Step 18

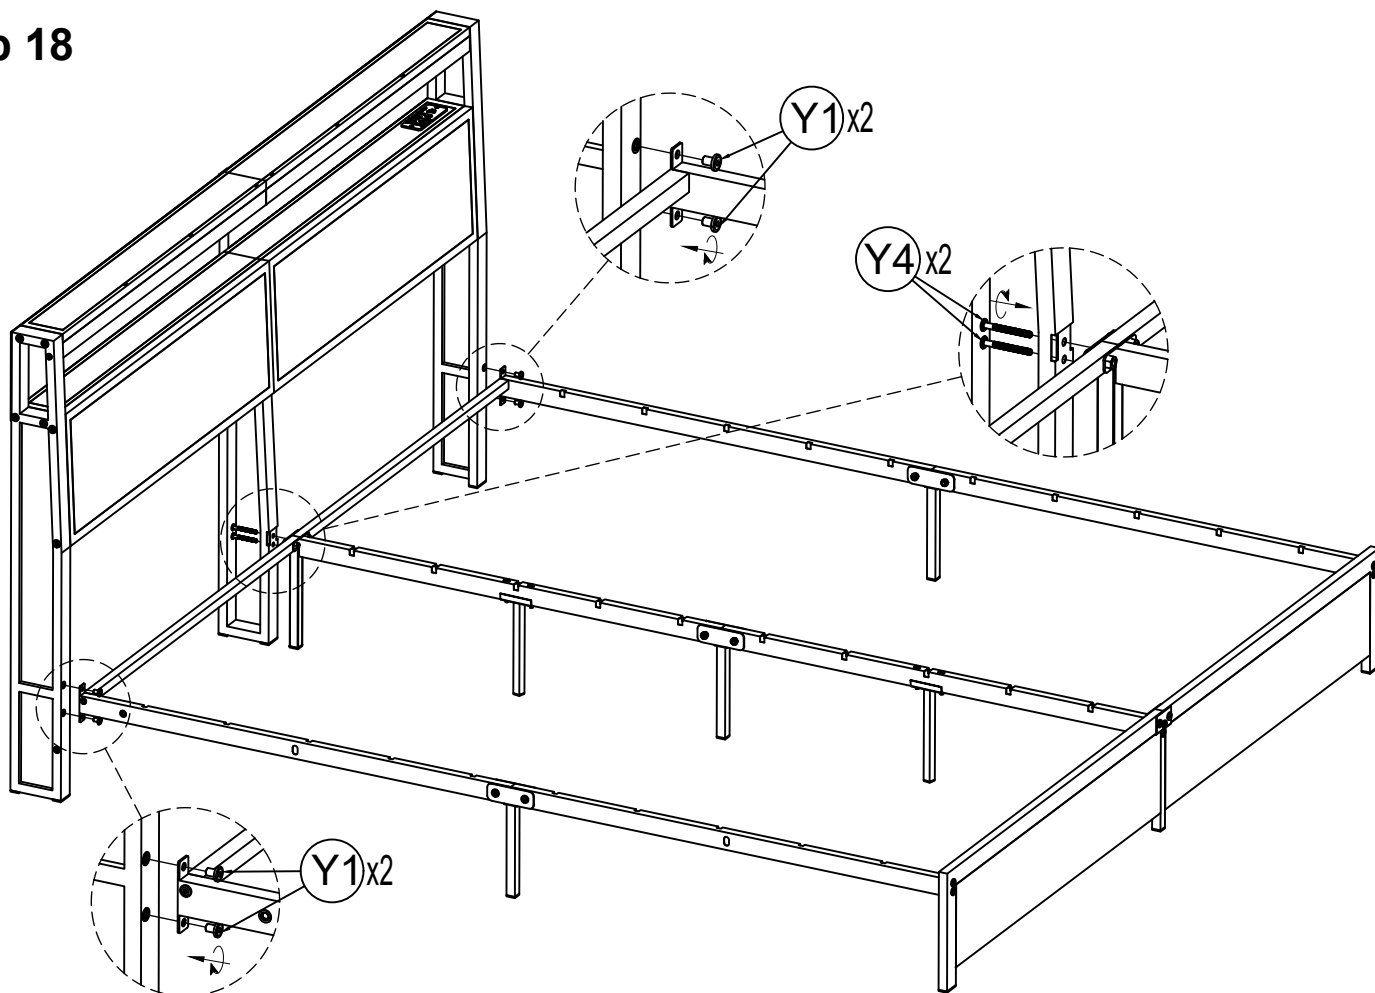

Step 19

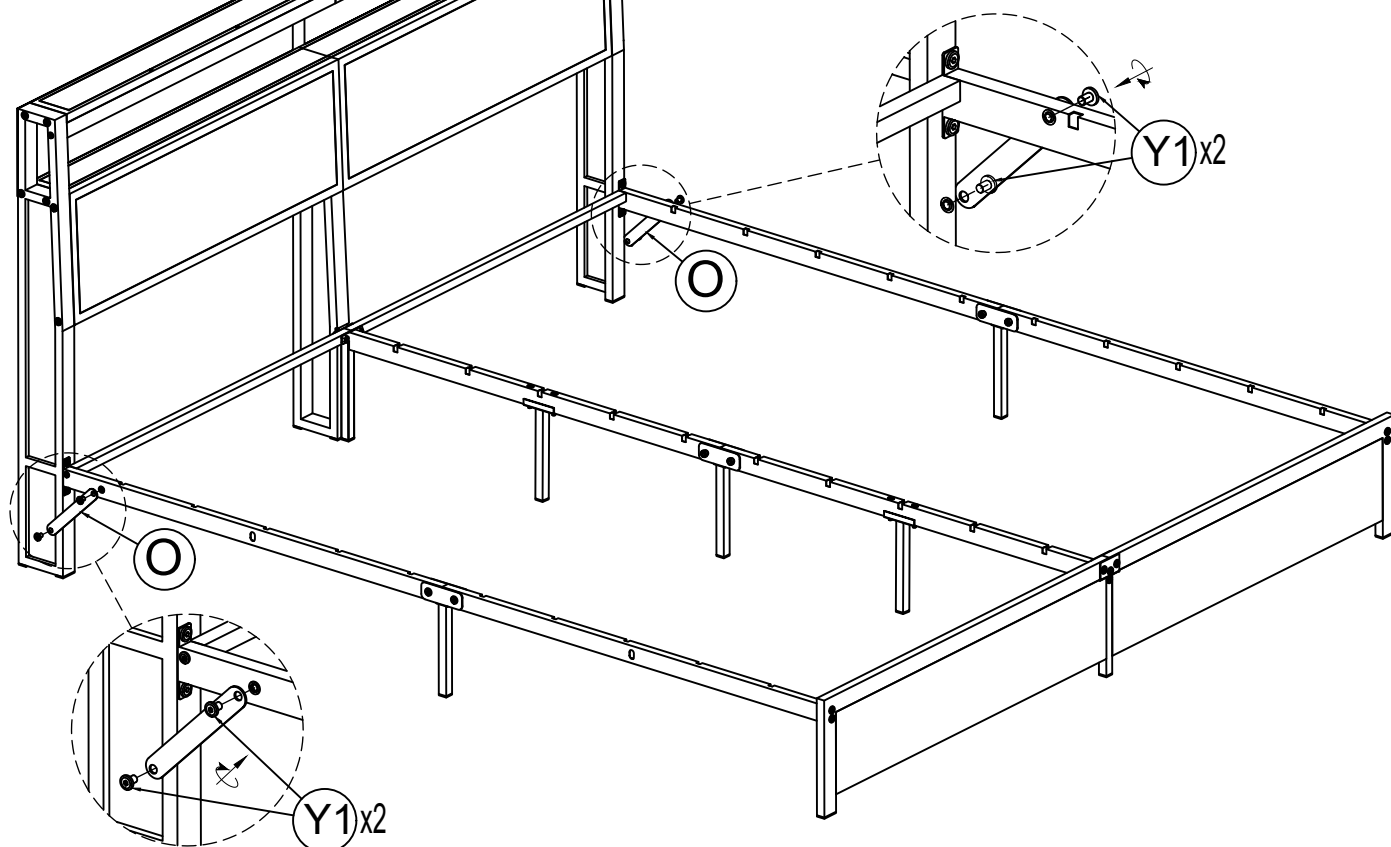




Step20

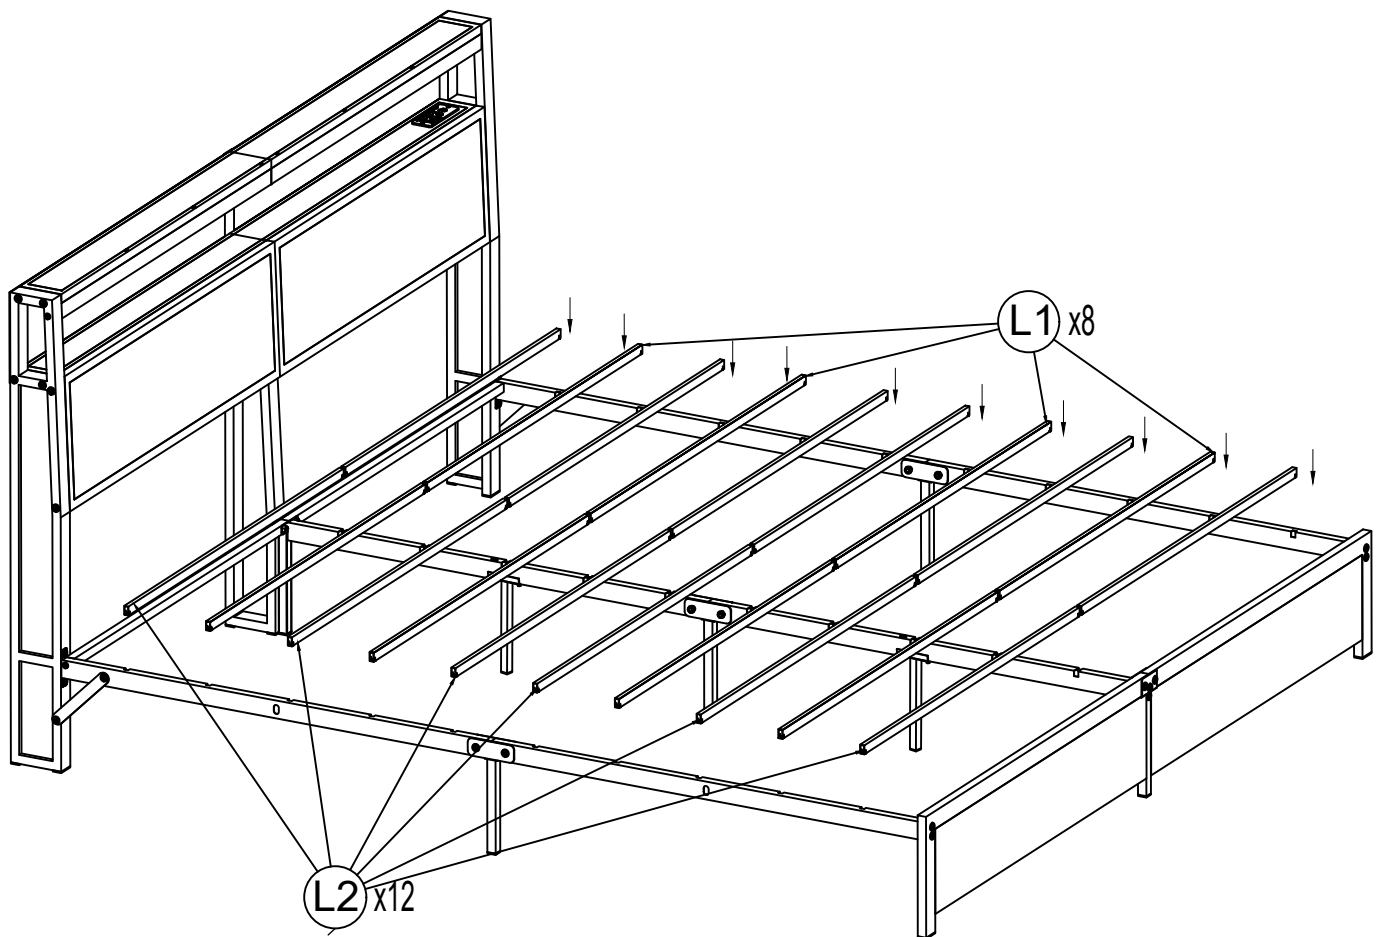

Tear off the double-sided adhesive tape before place the mattress.

Step21

Put all the screw in but not tighten, don't let the screws get through all the wheel's holder

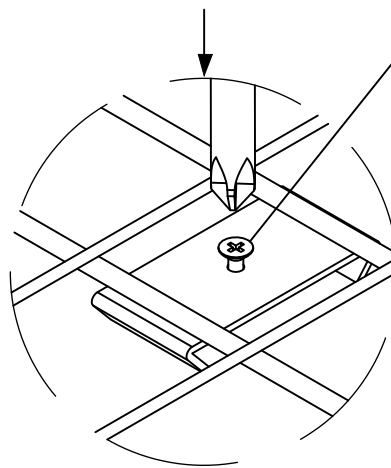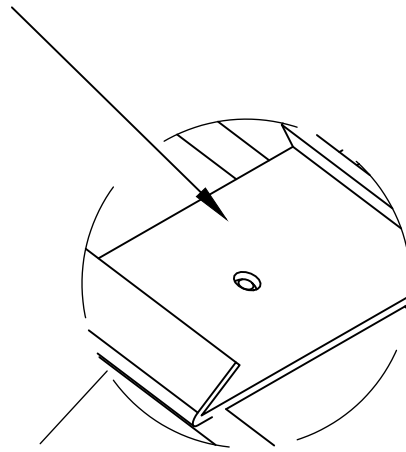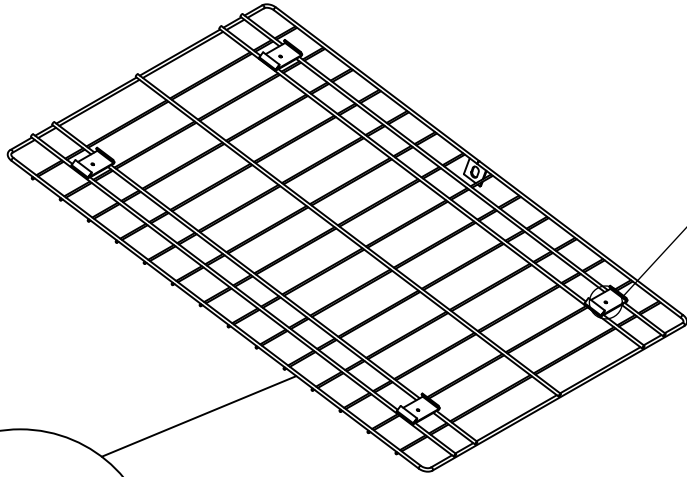


Z6

Z4


Step 22

Slide in

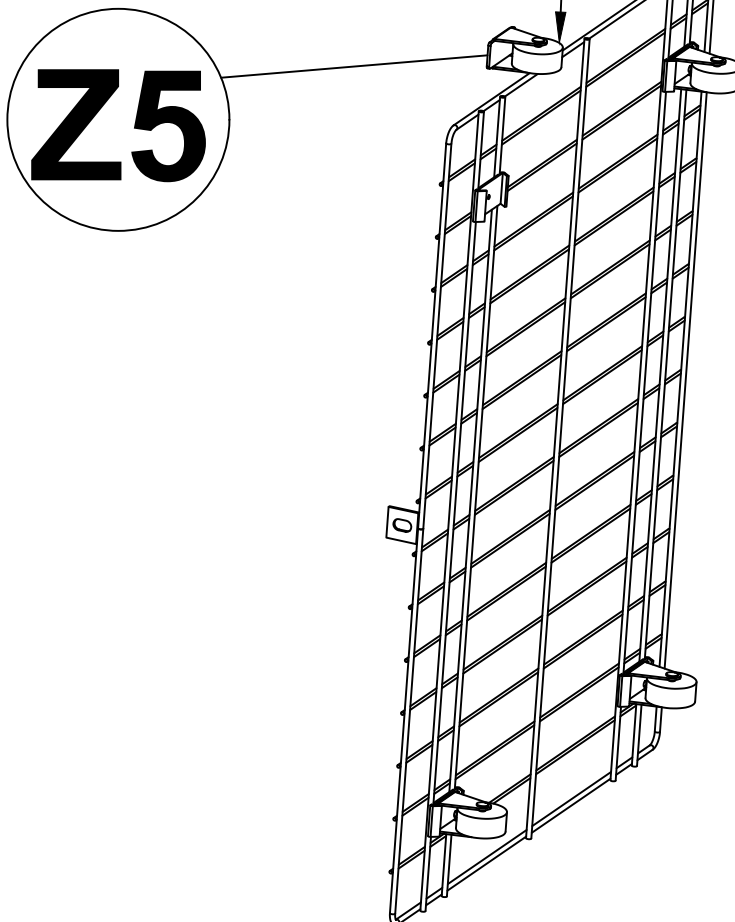

Z5



Re-tighten the screws

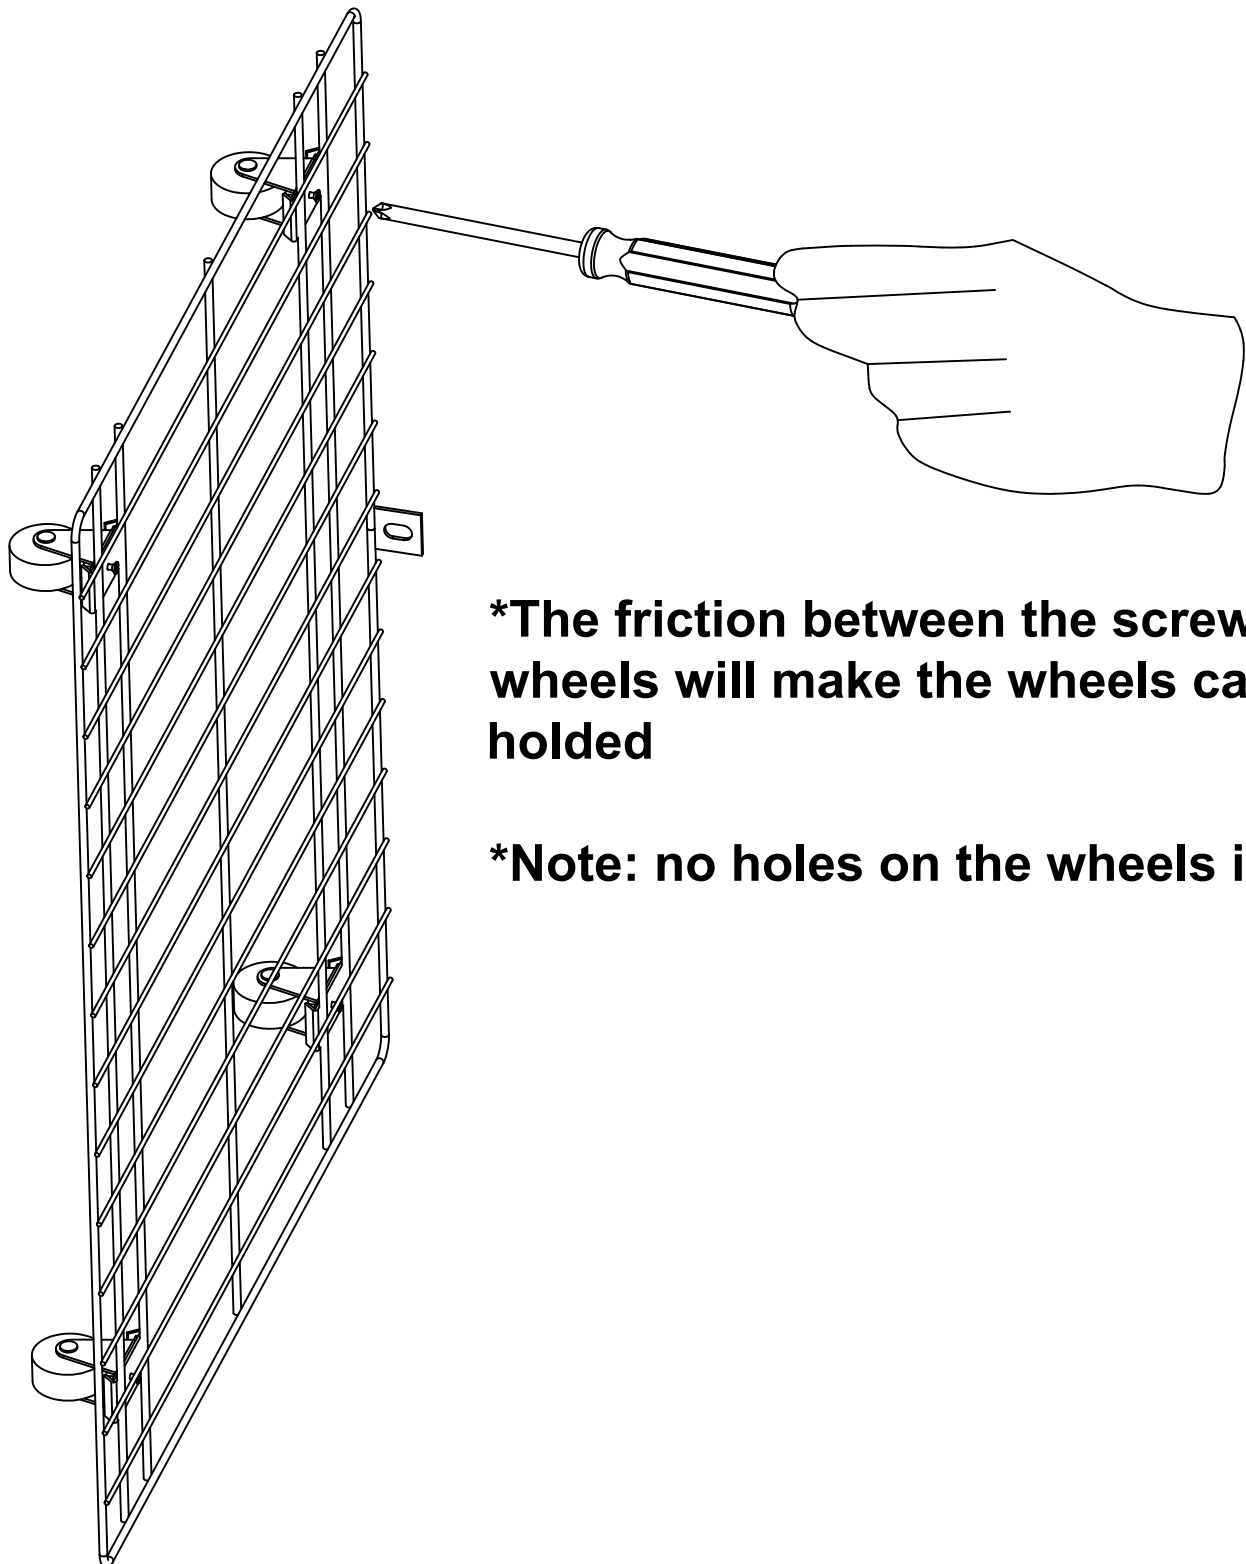



***The friction between the screw and the wheels will make the wheels can be holded**

***Note: no holes on the wheels is normal**


Detailed assembly instructions Q1

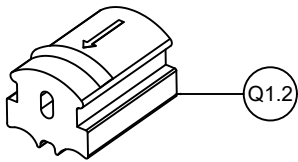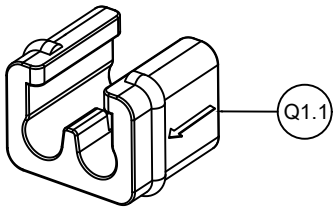


**these two lines on Q1.1
and Q1.2 need to be
matched**

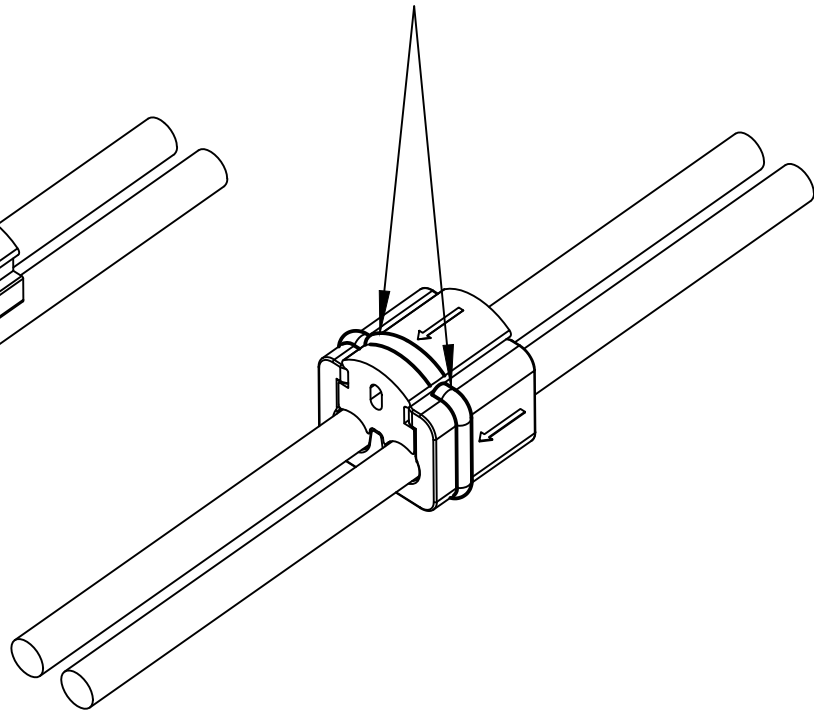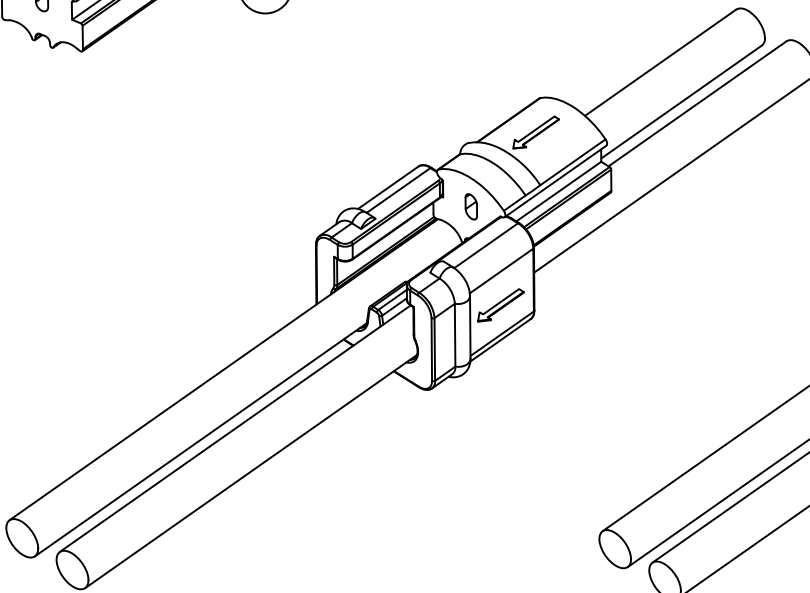


Step 23

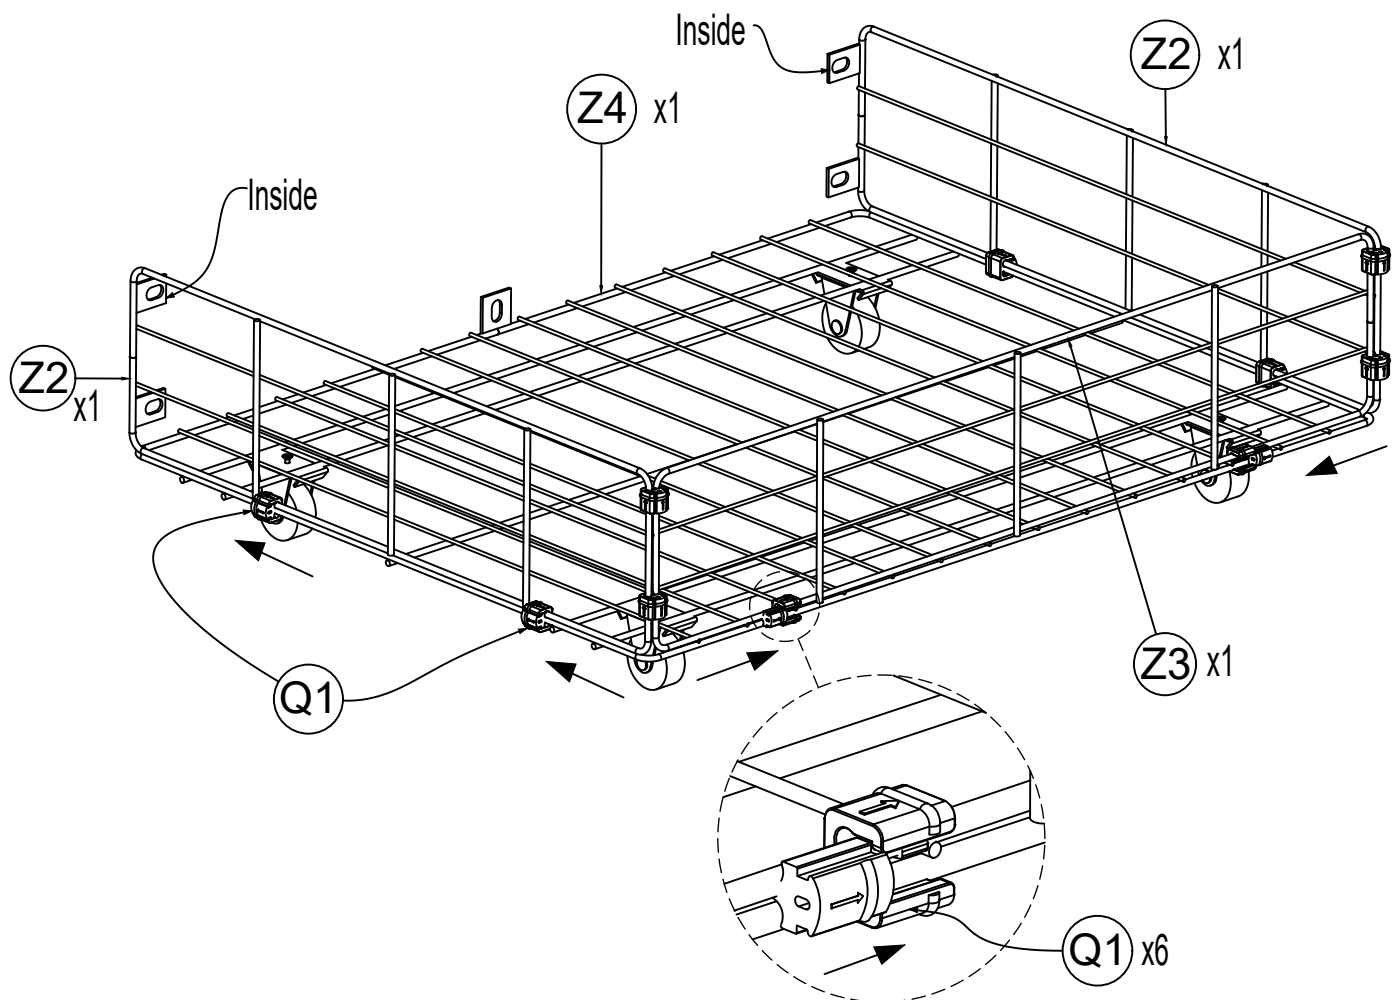

Step 24

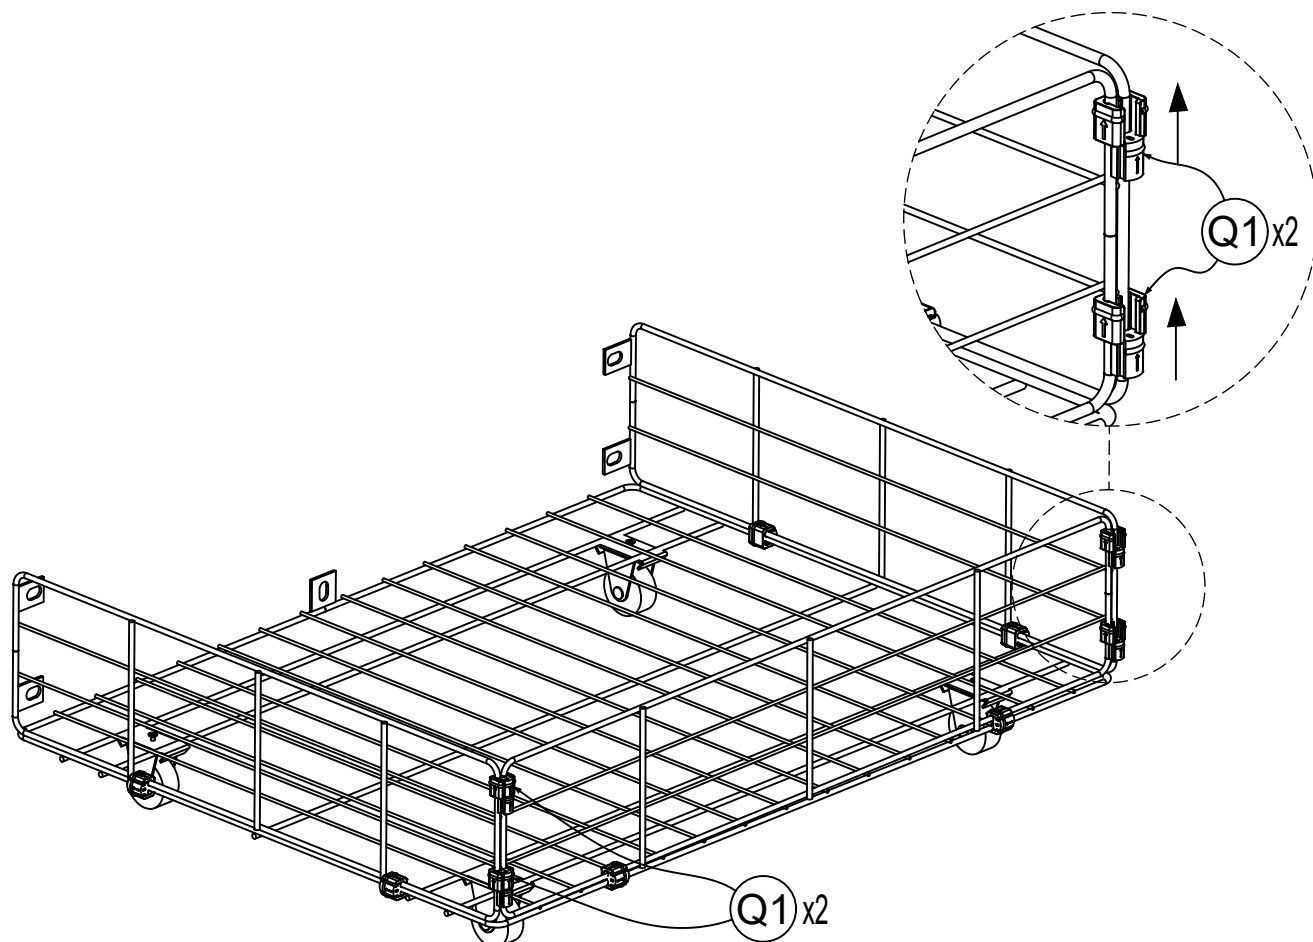



Step 25

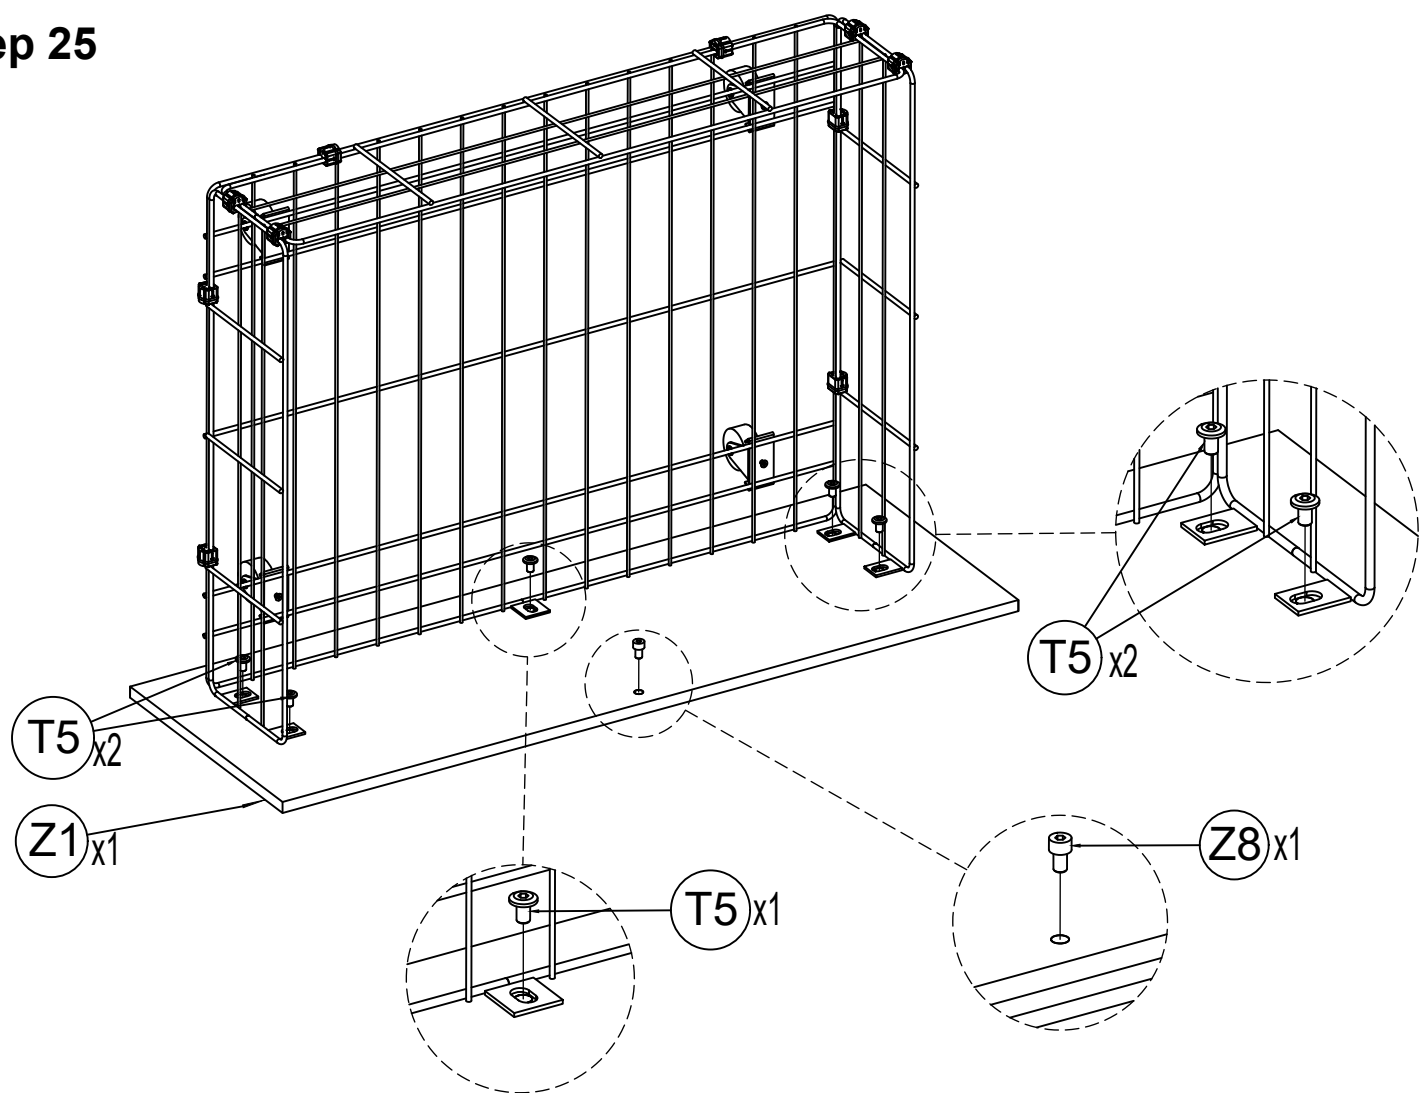

Step 26

4pcs

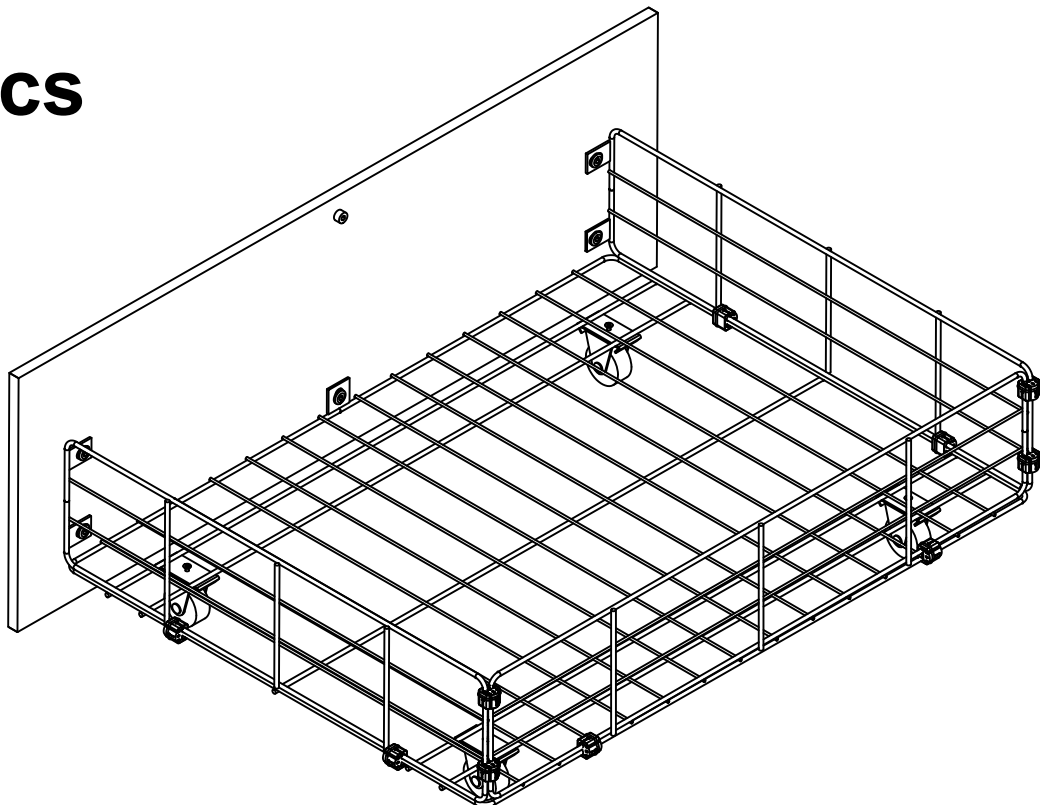

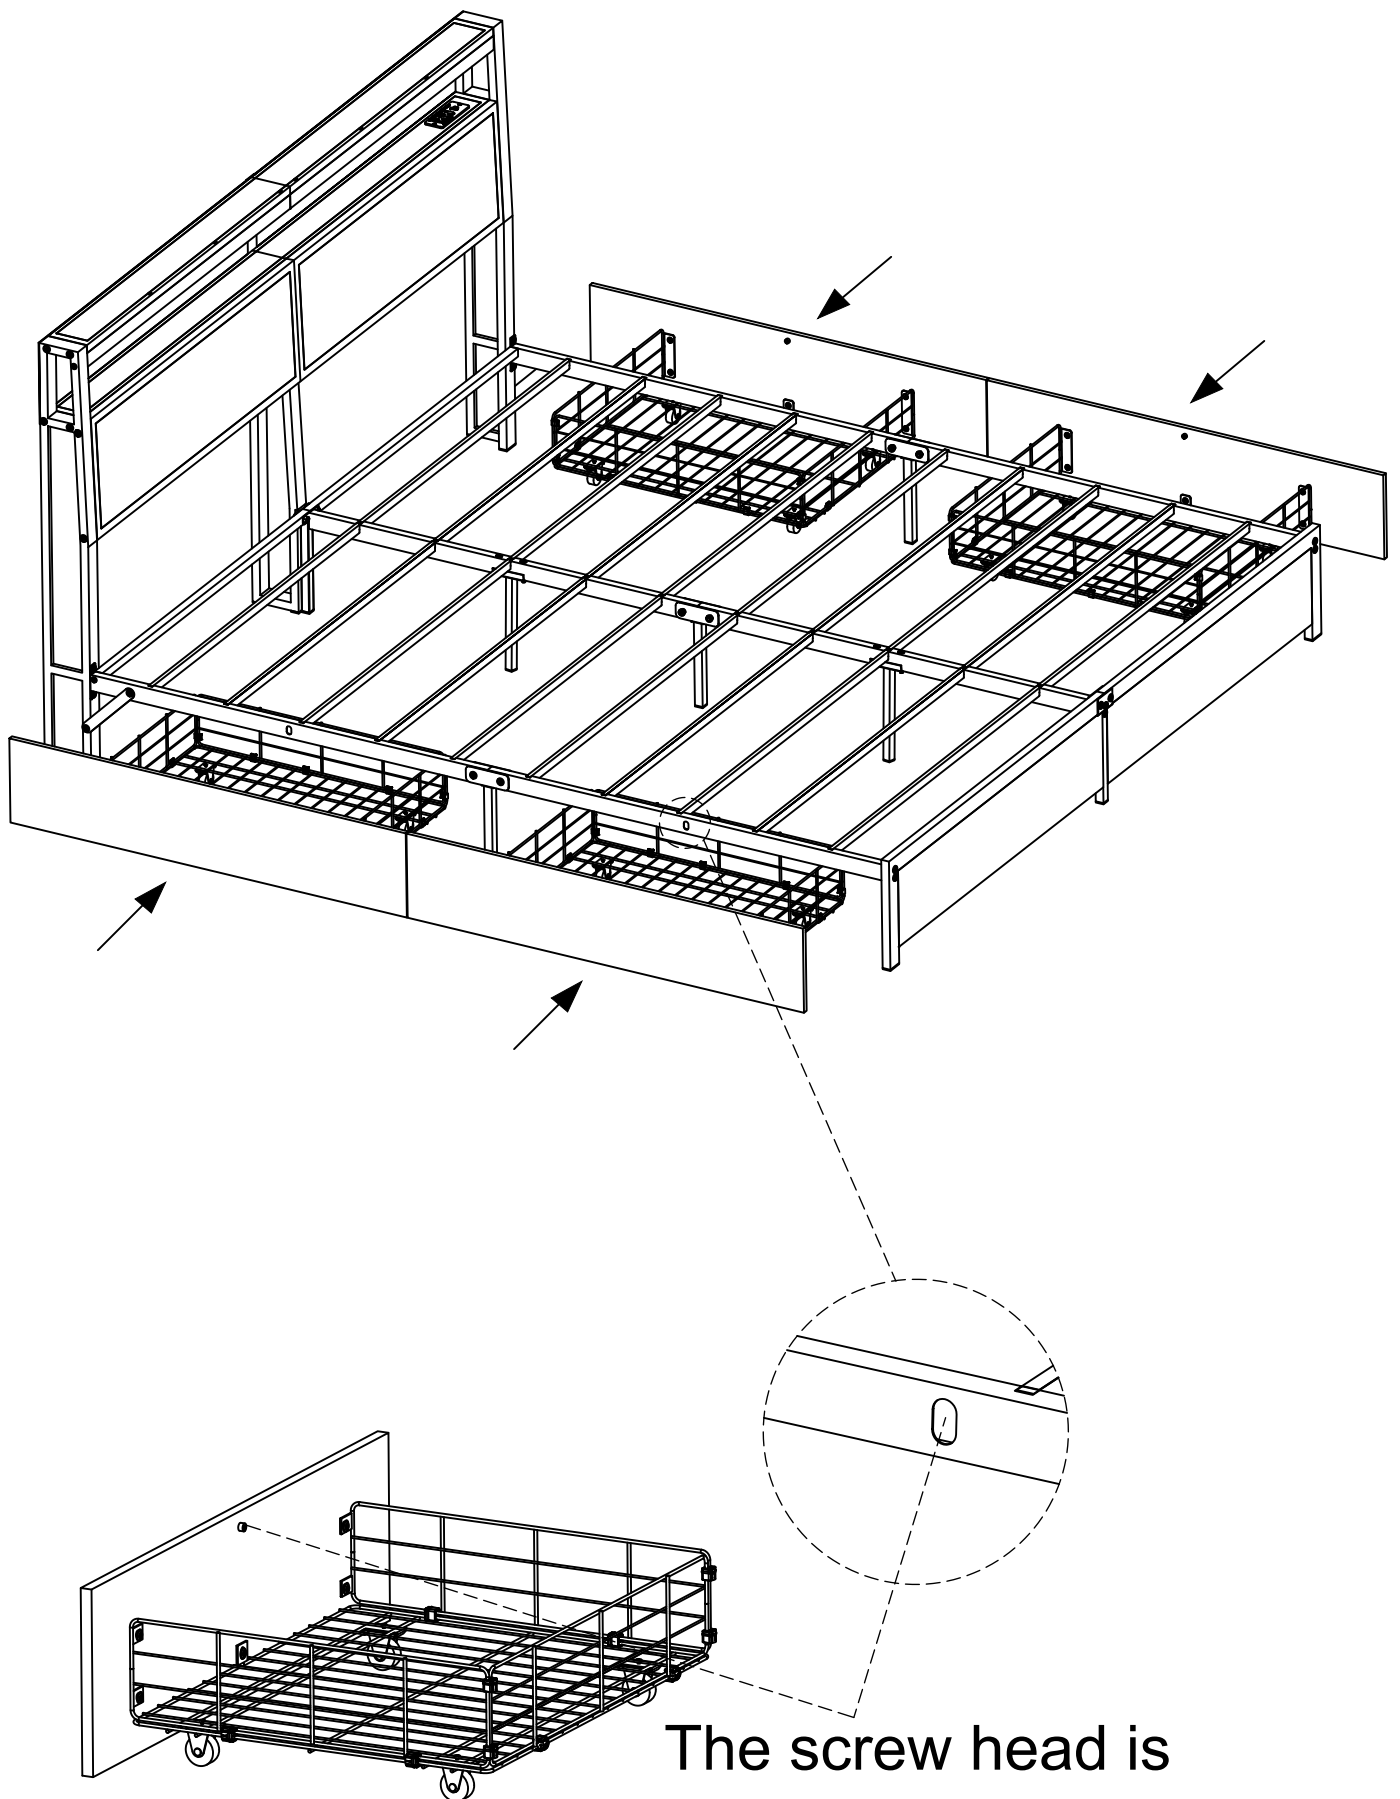

The screw head is inserted into this hole to help the drawer can be in the fixed position.

REMOTE CONTROL

