


# Product Installation Instructions

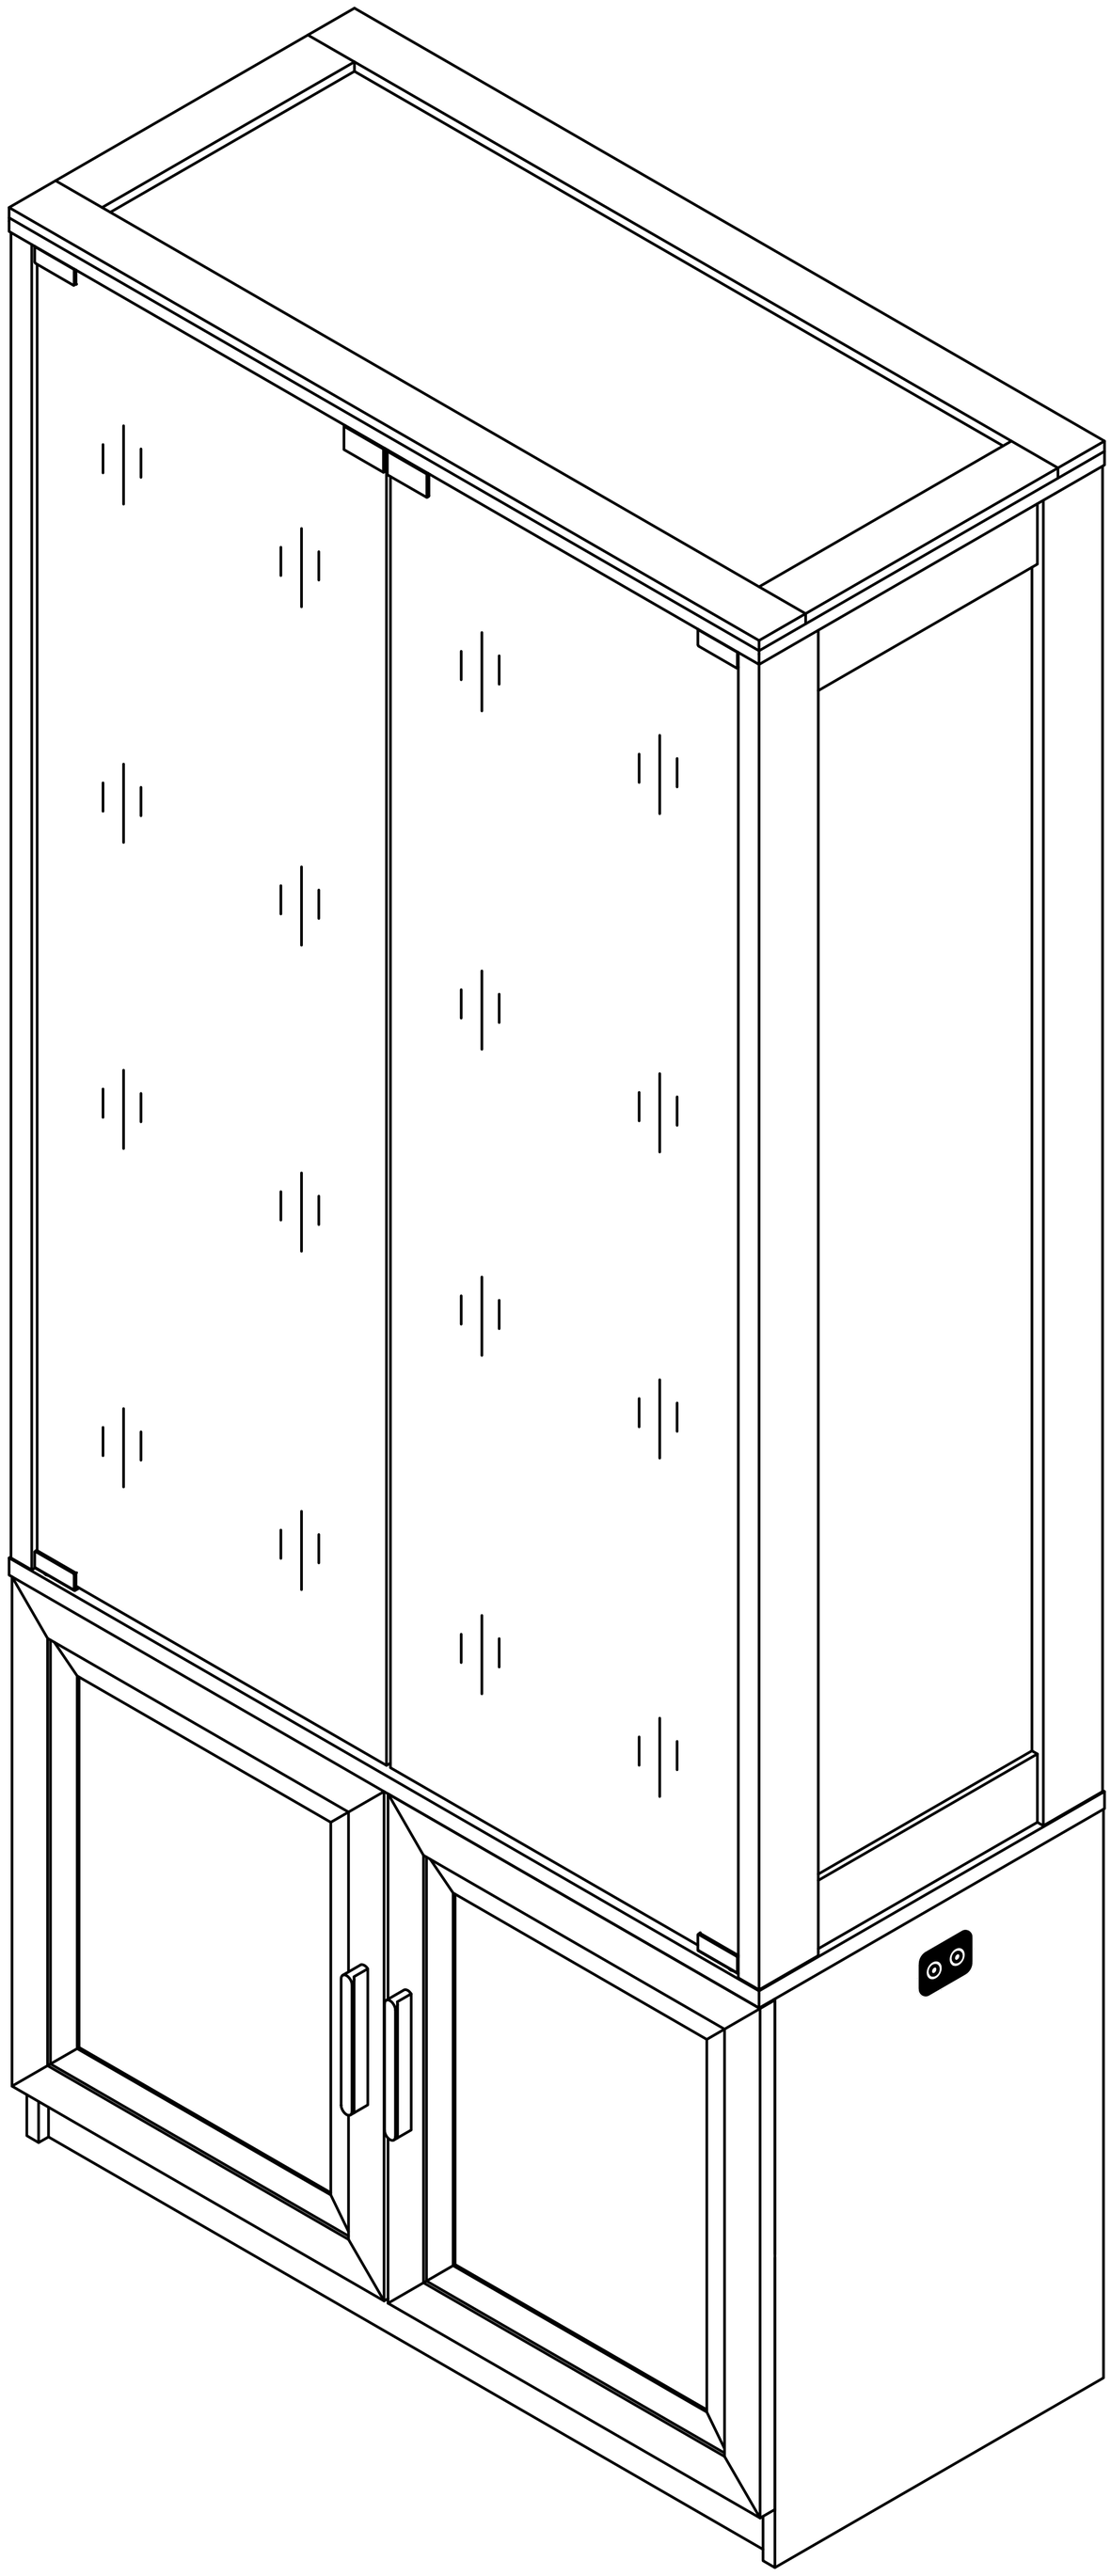


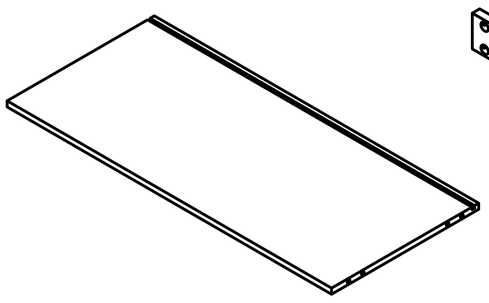


Ax1

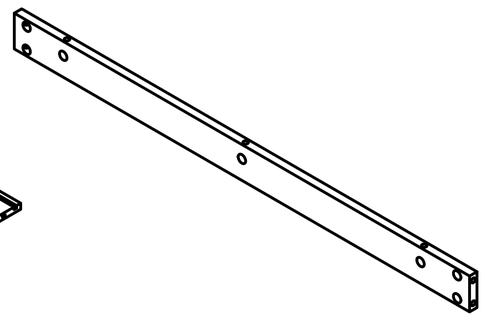


Bx2

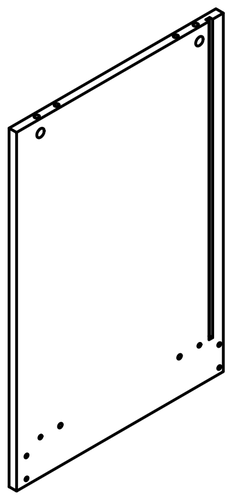


Cx1

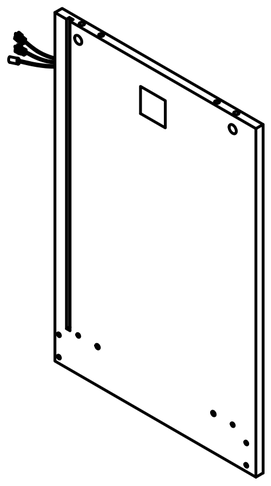


Dx1

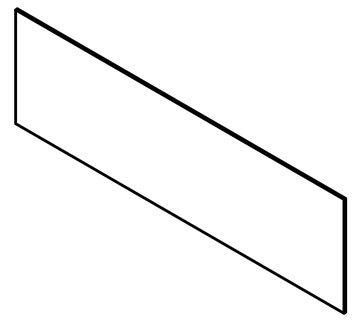


Ex2

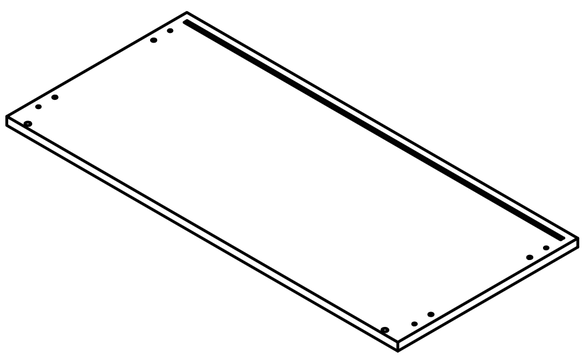


Fx1

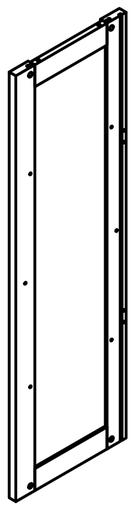


Gx1

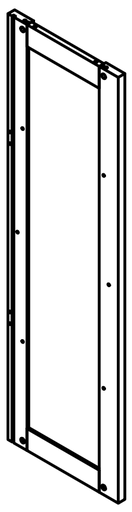


Hx1

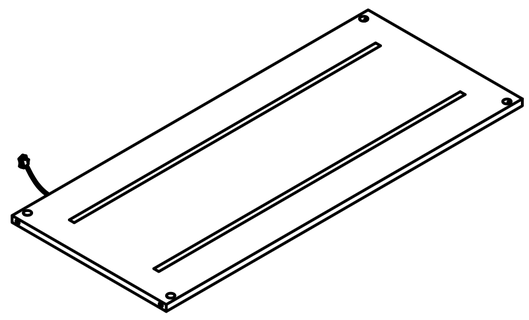


Ix1

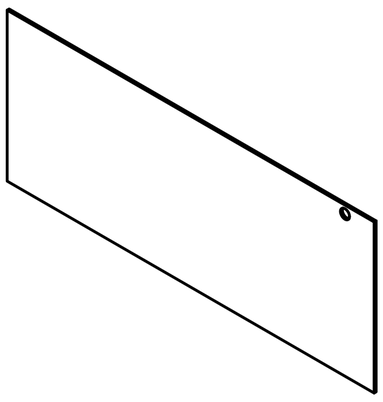


Jx1

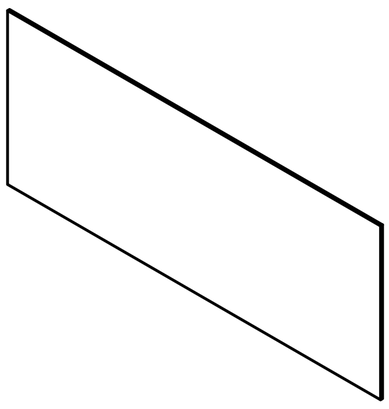


Kx3

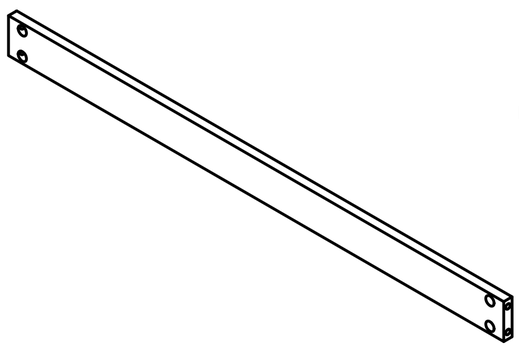


Lx2

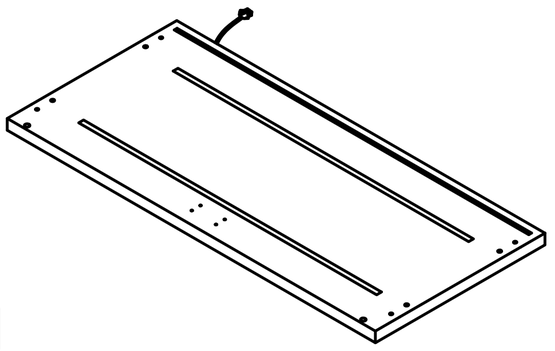


Mx1

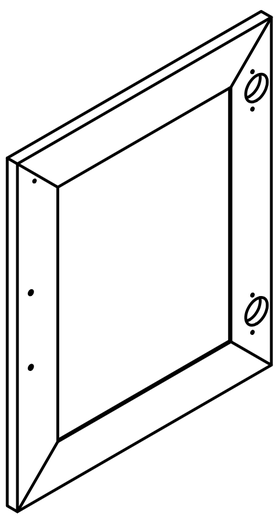


Nx1

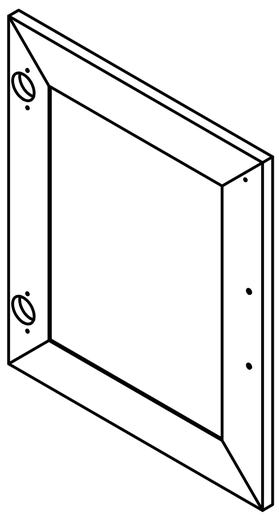

Ox1














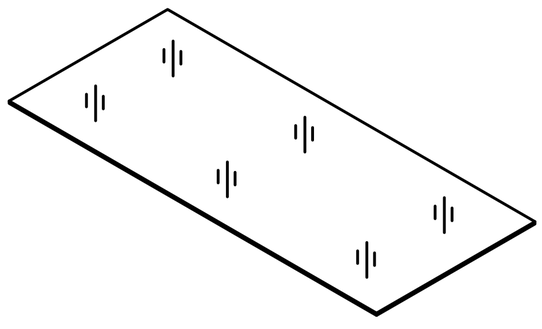


Px2

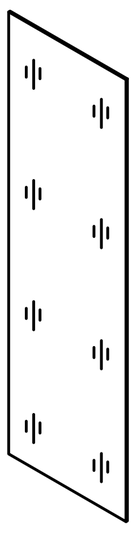


Qx2

1

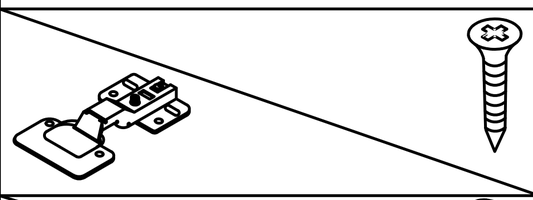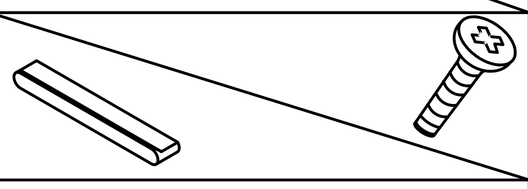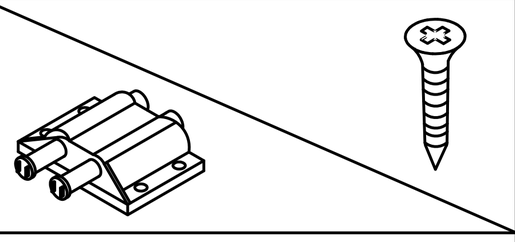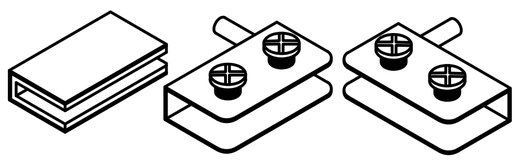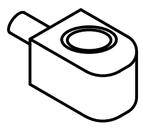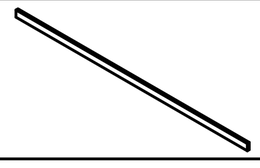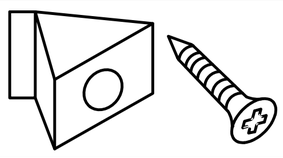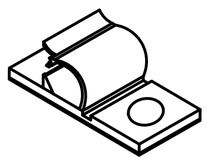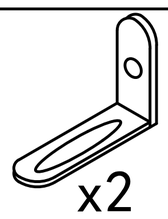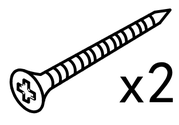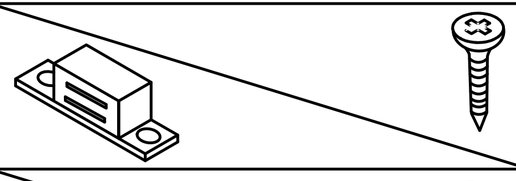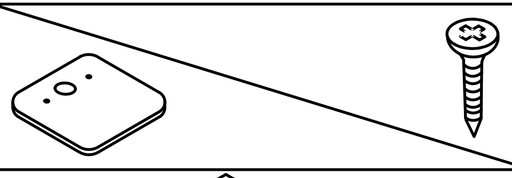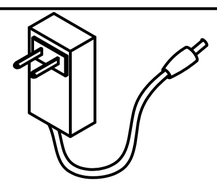
| | | | |
|---|---|---|---|
| 1 |  | Two in one screw<br>(6x28mm) | 42pcs<br>+4pcs |
| 2 |  | Two in one nut<br>(10x12mm) | 42pcs<br>+4pcs |
| 3 |  | Wood chipping<br>(6x30mm) | 16pcs<br>+4pcs |
| 4 |  | Hinge & Screw<br>(3.5x12mm) | 24pcs<br>+4pcs<br>4pcs |
| 5 |  | Handle & Screw<br>(4x18mm) | 4pcs<br>+1pcs<br>2pcs |
| 6 |  | Non-slip pads<br>(50x10) | 6pcs |
| 7 |  | Rebound device & Screw<br>(3x16mm) | 4pcs<br>+1pcs<br>1pcs |
| |  | Rubber ring | 4pcs |
| |  | Iron sheet & Hinge | 2pcs |
| 8 |  | Laminate support nail | 8pcs<br>+1pcs |
| 9 |  | Backboard card strip(714mm) | 2pcs |
| 10 |  | Fixing clip & screw<br>(3x16mm) | 22pcs<br>+2pcs |
| 11 |  | Wire clamp | 3pcs<br>+1pcs |
| 12 | Anti Fall Hardware |  x2  x2  x2 (3. 5x14mm)  x2 (4x45mm) |  x4 |
| 13 |  | Door Magnet & Screw<br>(3x12mm) | 2pcs<br>+1pcs<br>1pcs |
| 14 |  | Iron Sheet & Screw<br>(3x12mm) | 2pcs<br>+1pcs<br>2pcs |
| |  | AC/DC Adapter(12V⎓3.0A) | 1pcs |

Double-head screwdriver, use as required

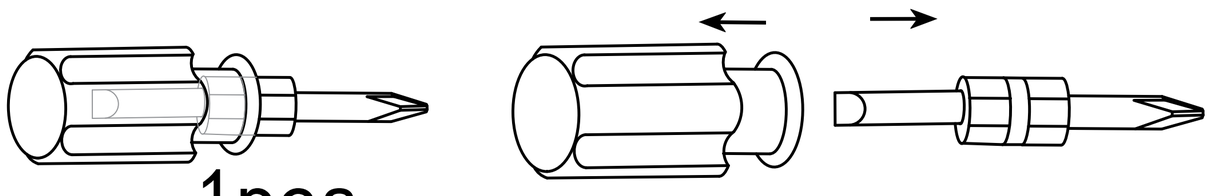


1pcs

# Product structure decomposition

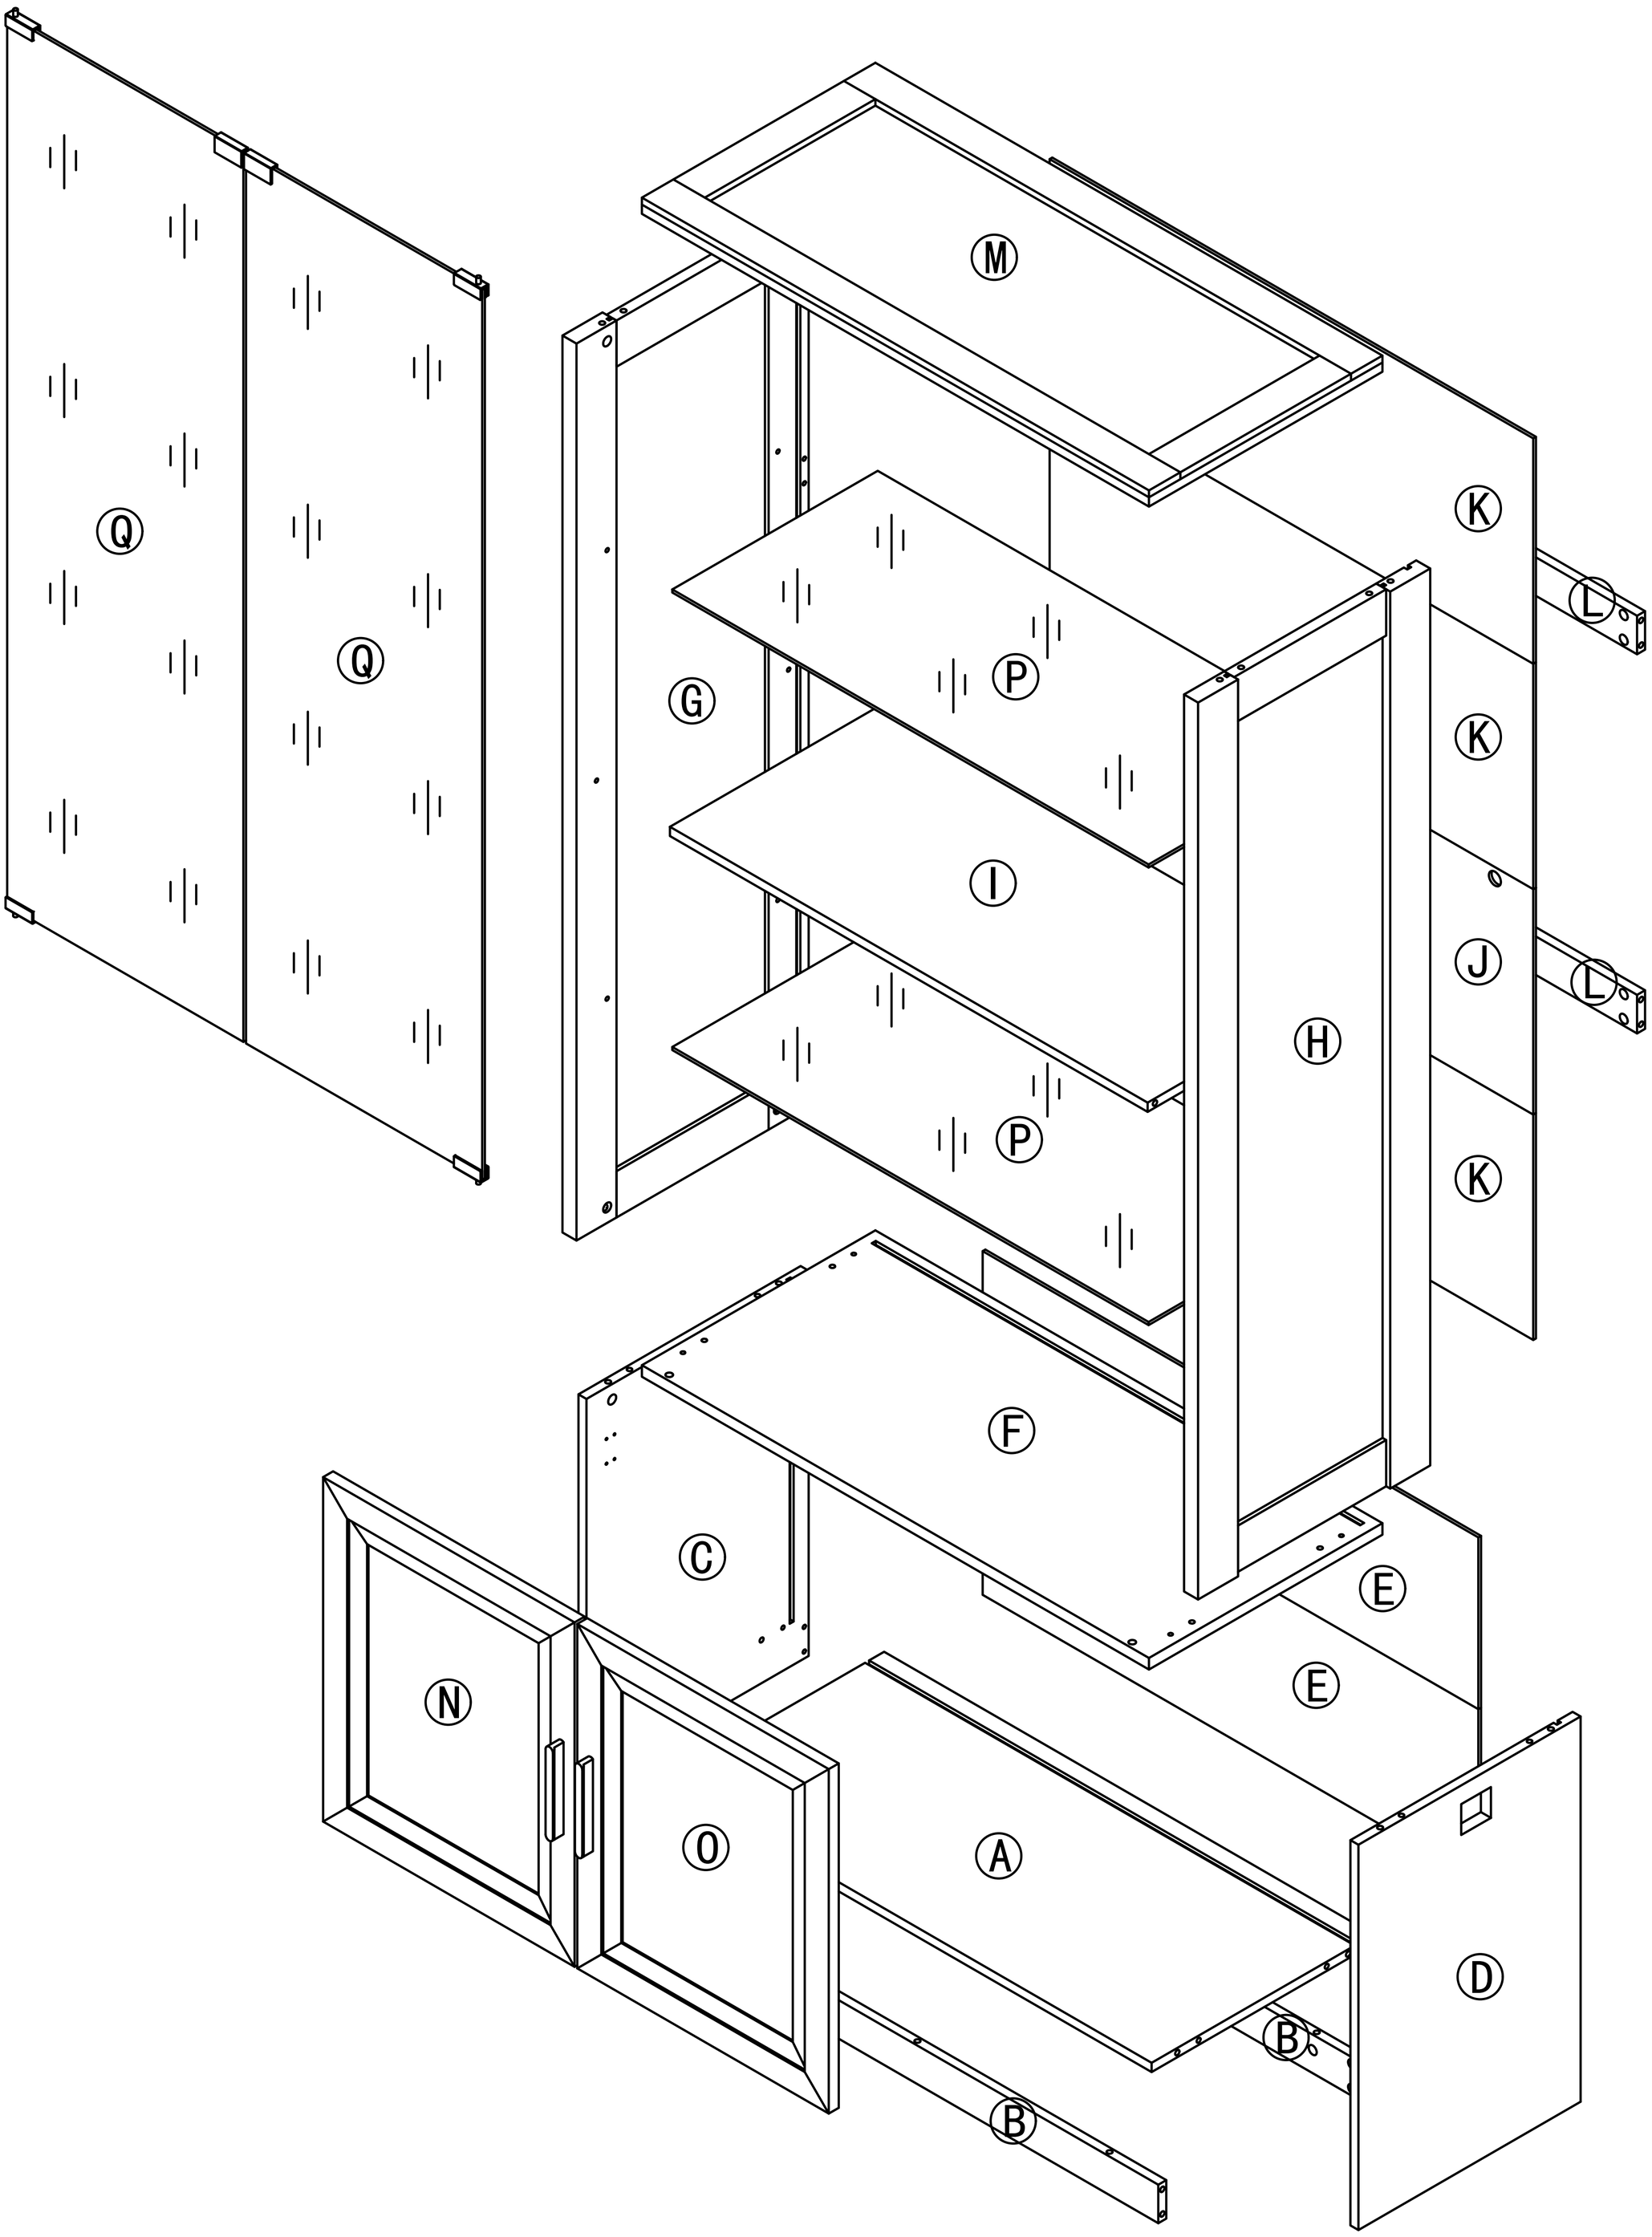


# Use parts ① and ②


Step1

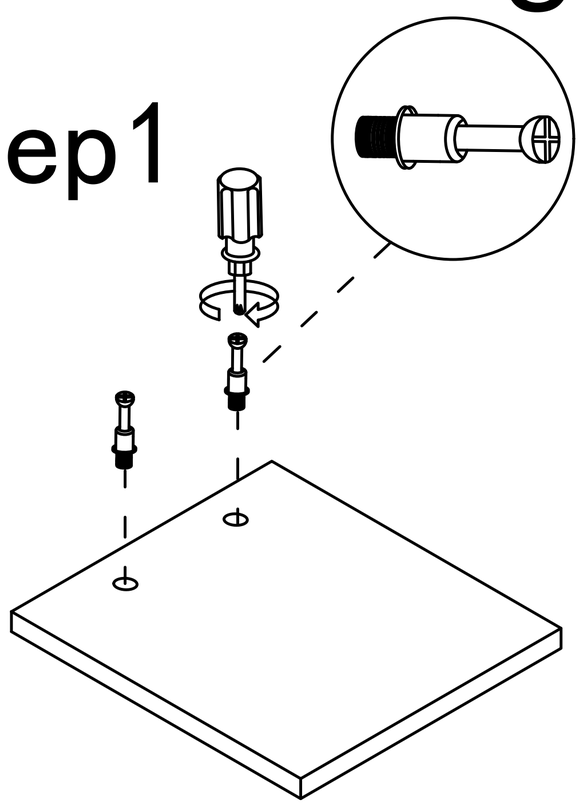


Step2

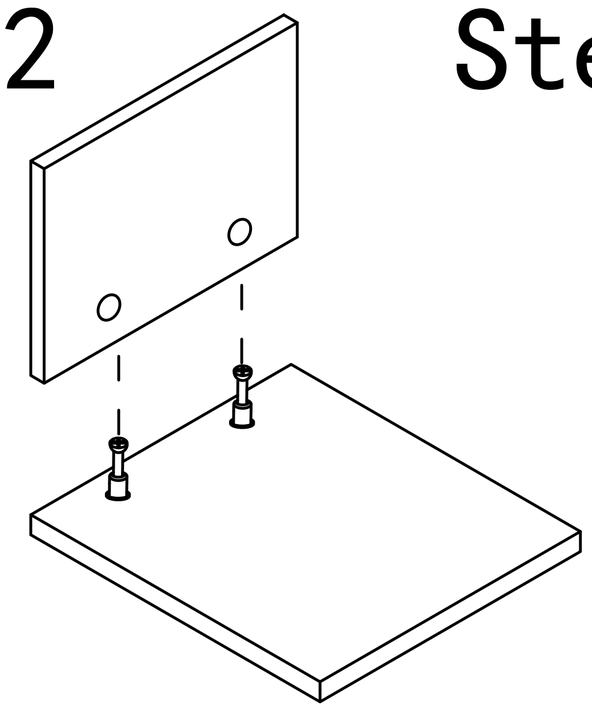


Step3

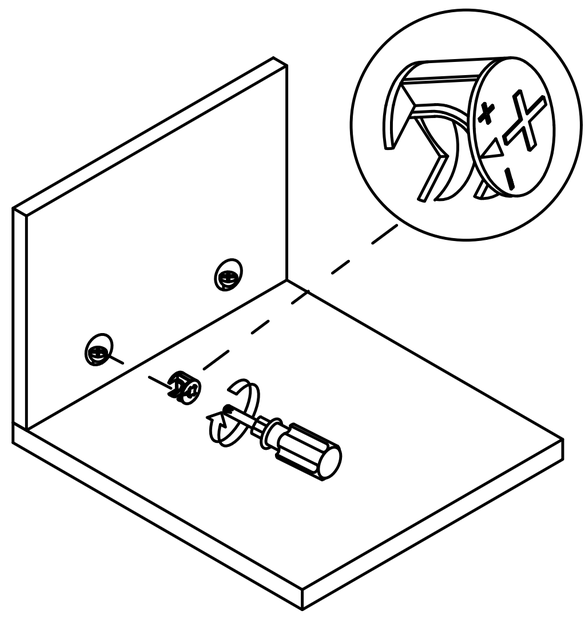

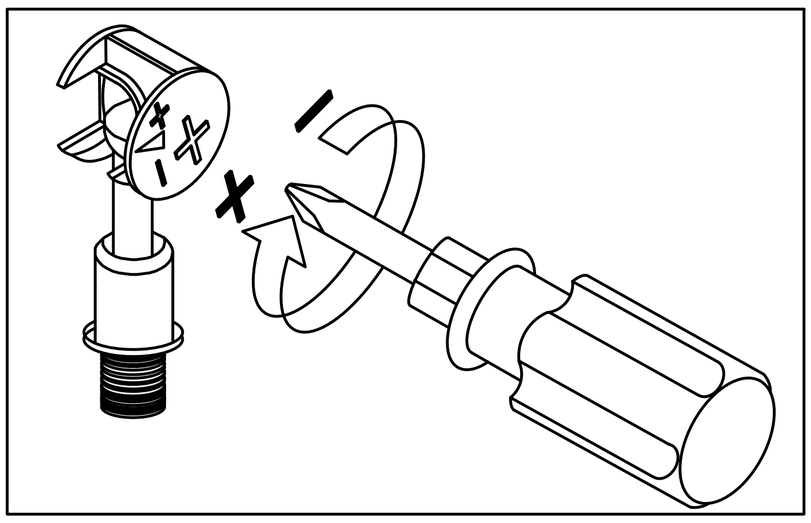



Use a screwdriver to lock in the direction of the "+" sign

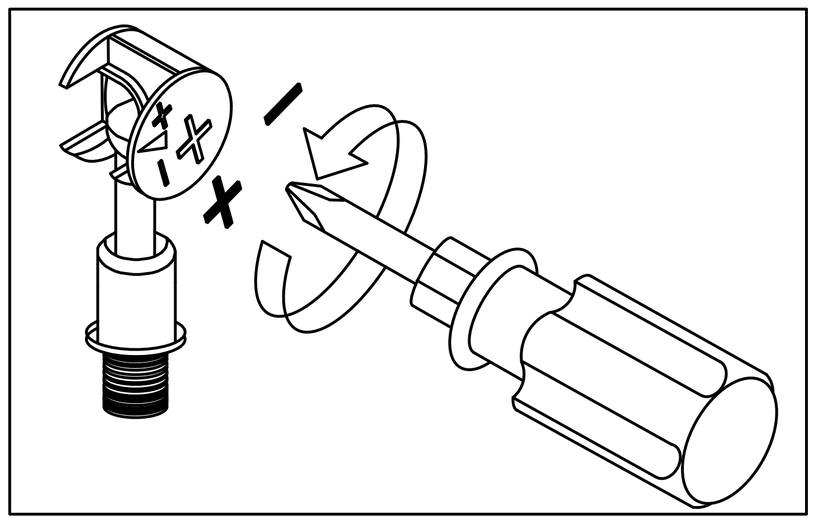


Disassemble along the direction of "-" sign


Step 1

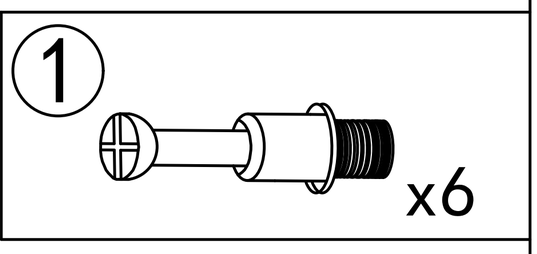

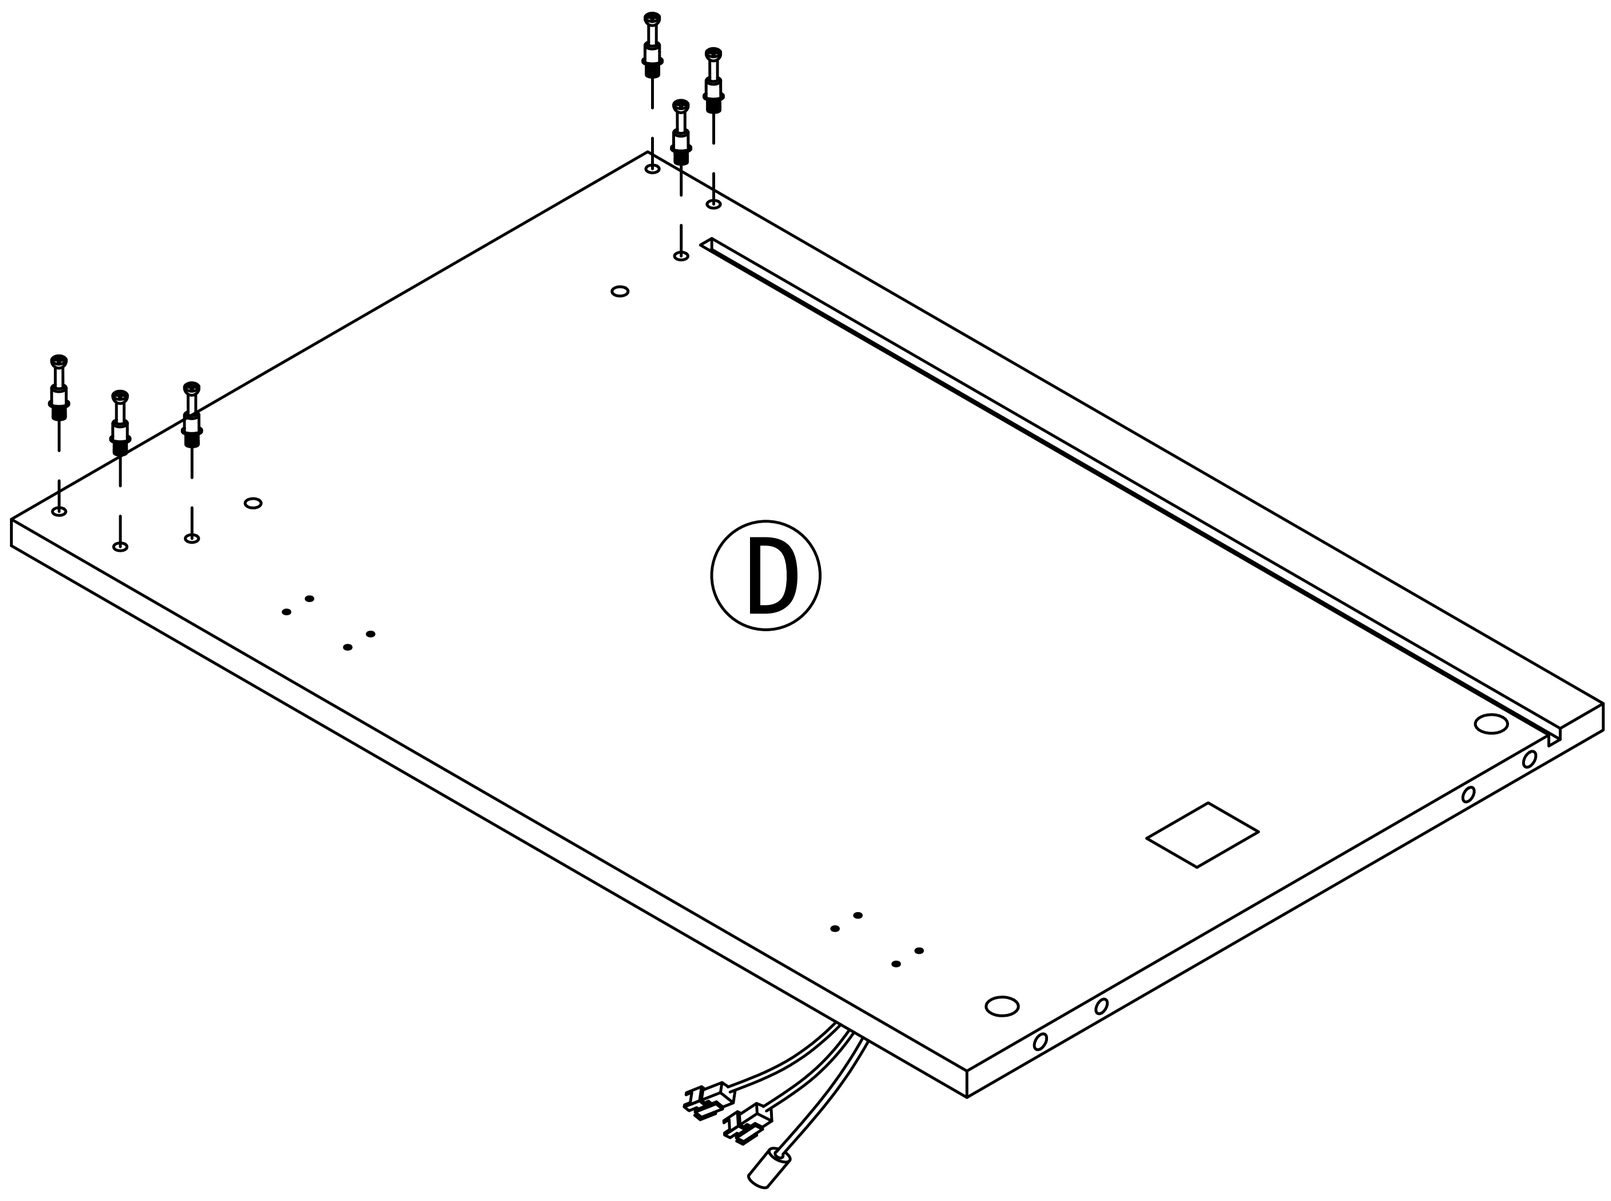



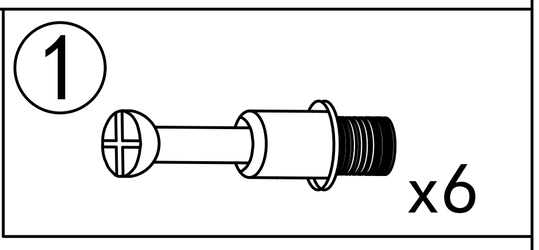
## Step 2

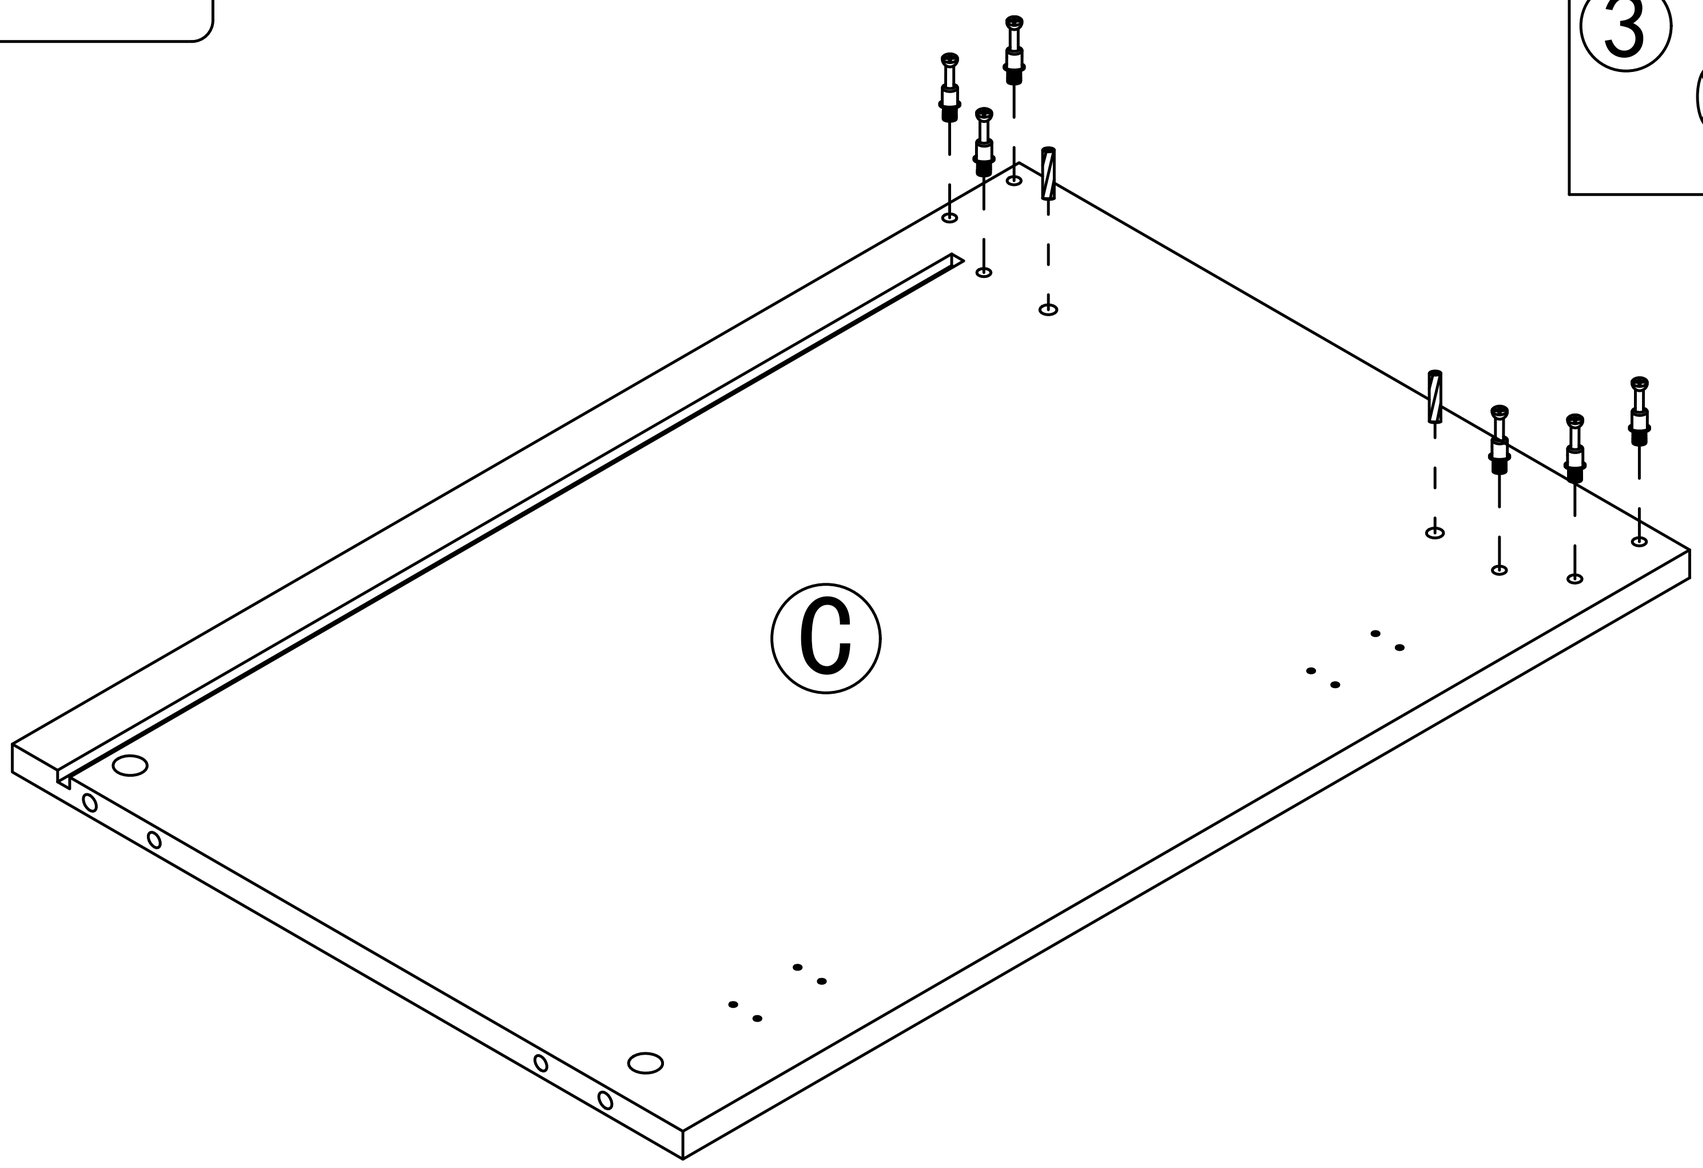

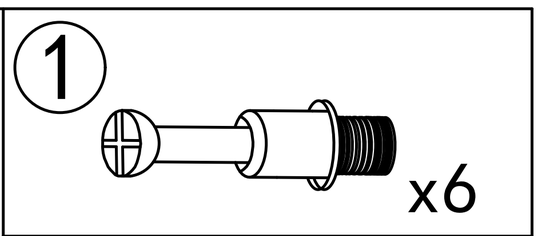


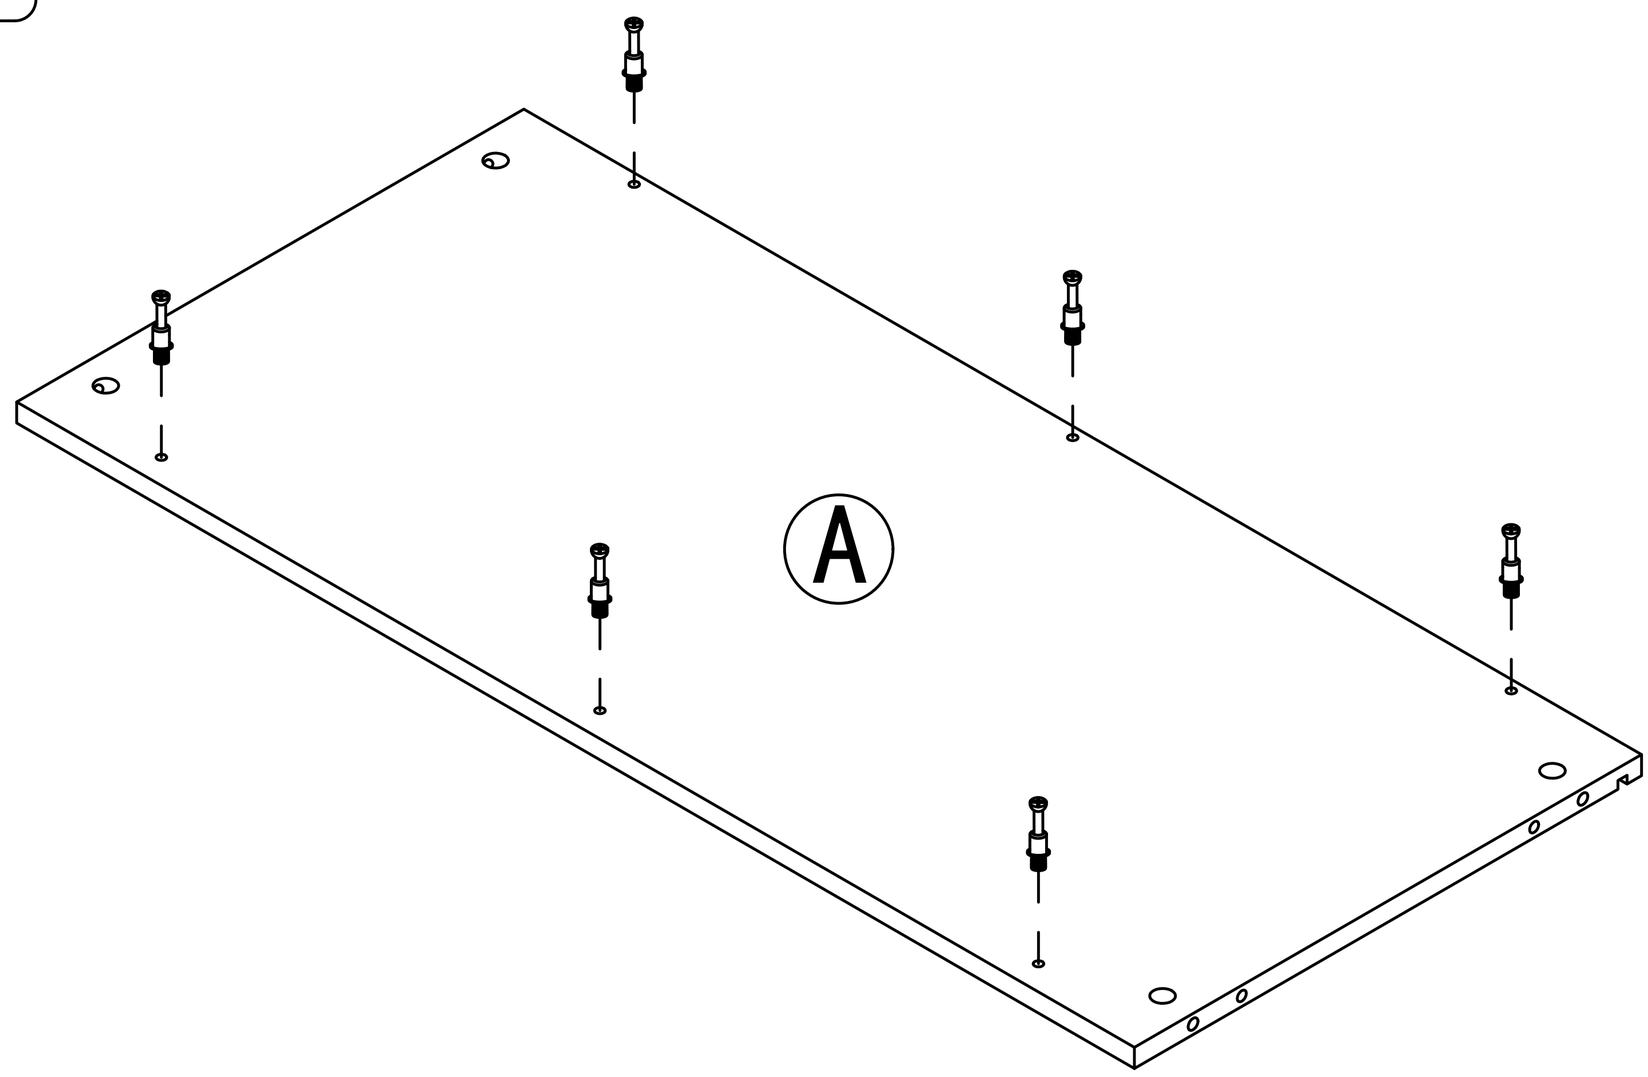

## Step 3



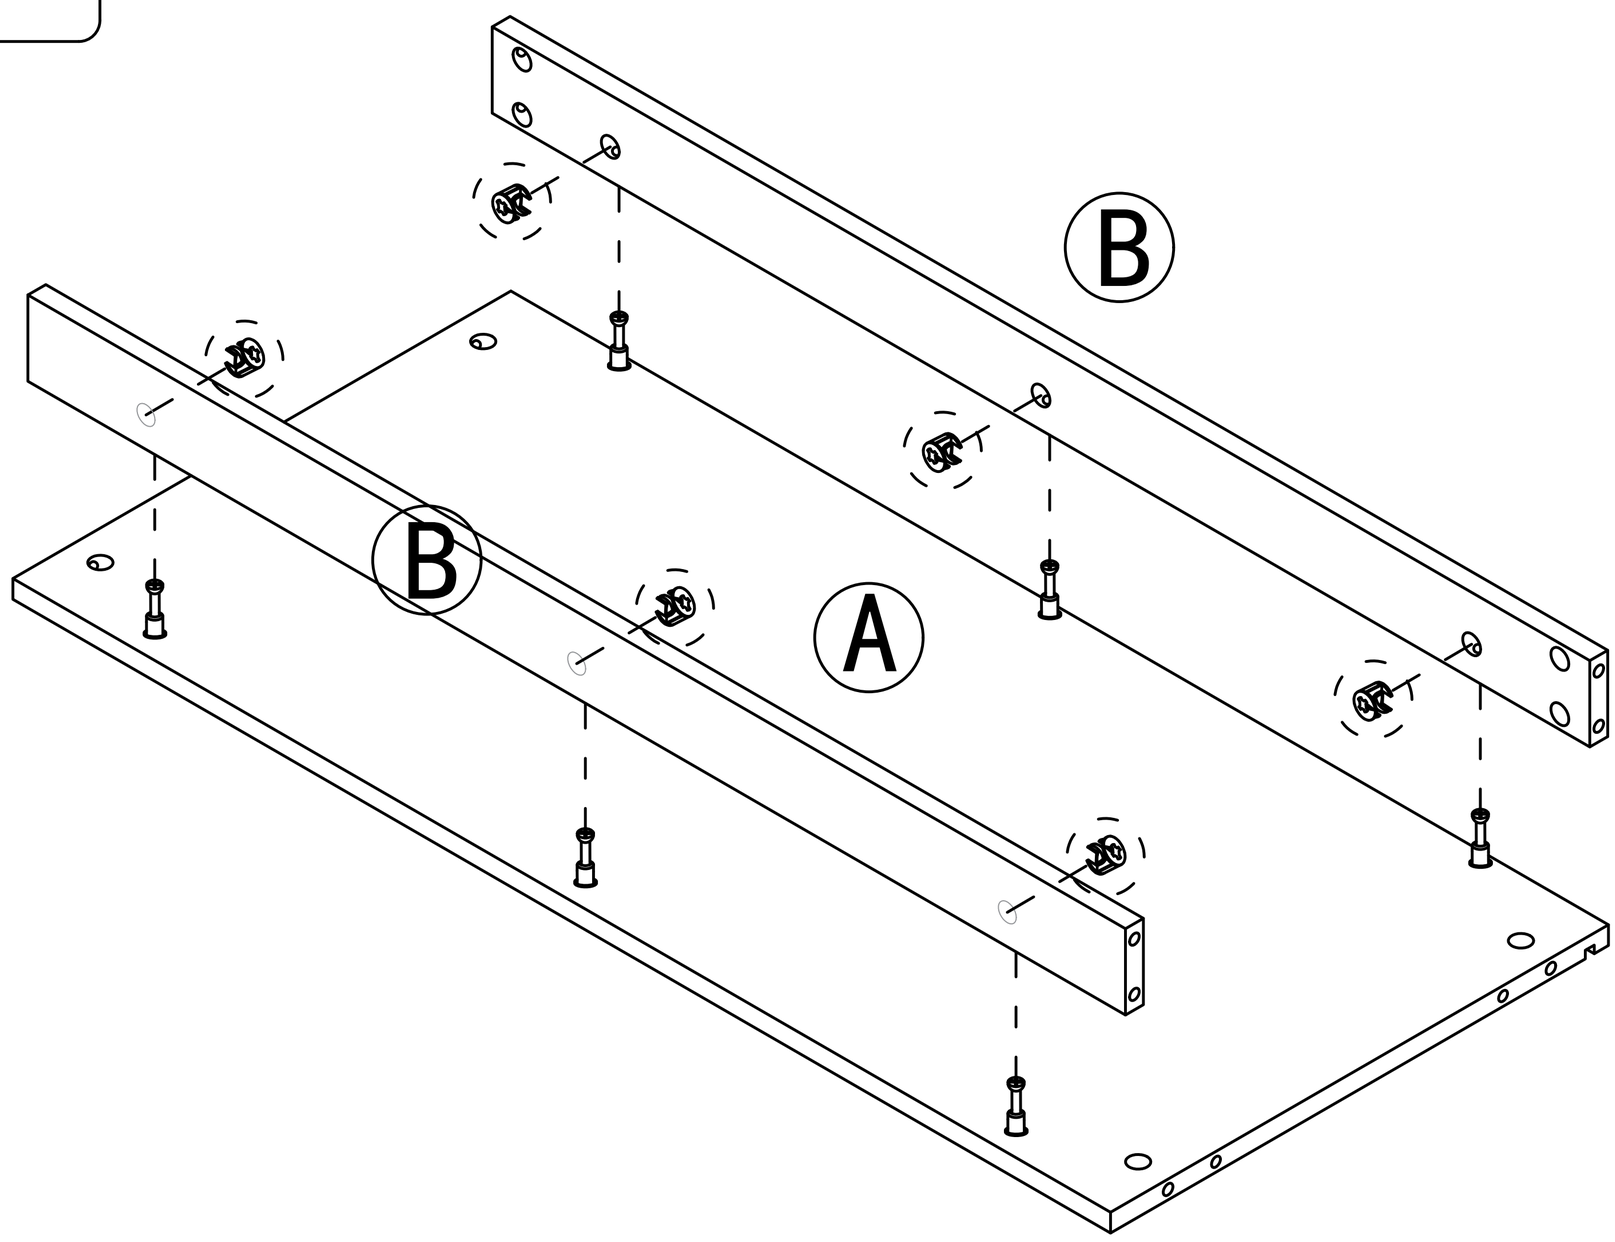



## Step 4




2 x6


## Step 5

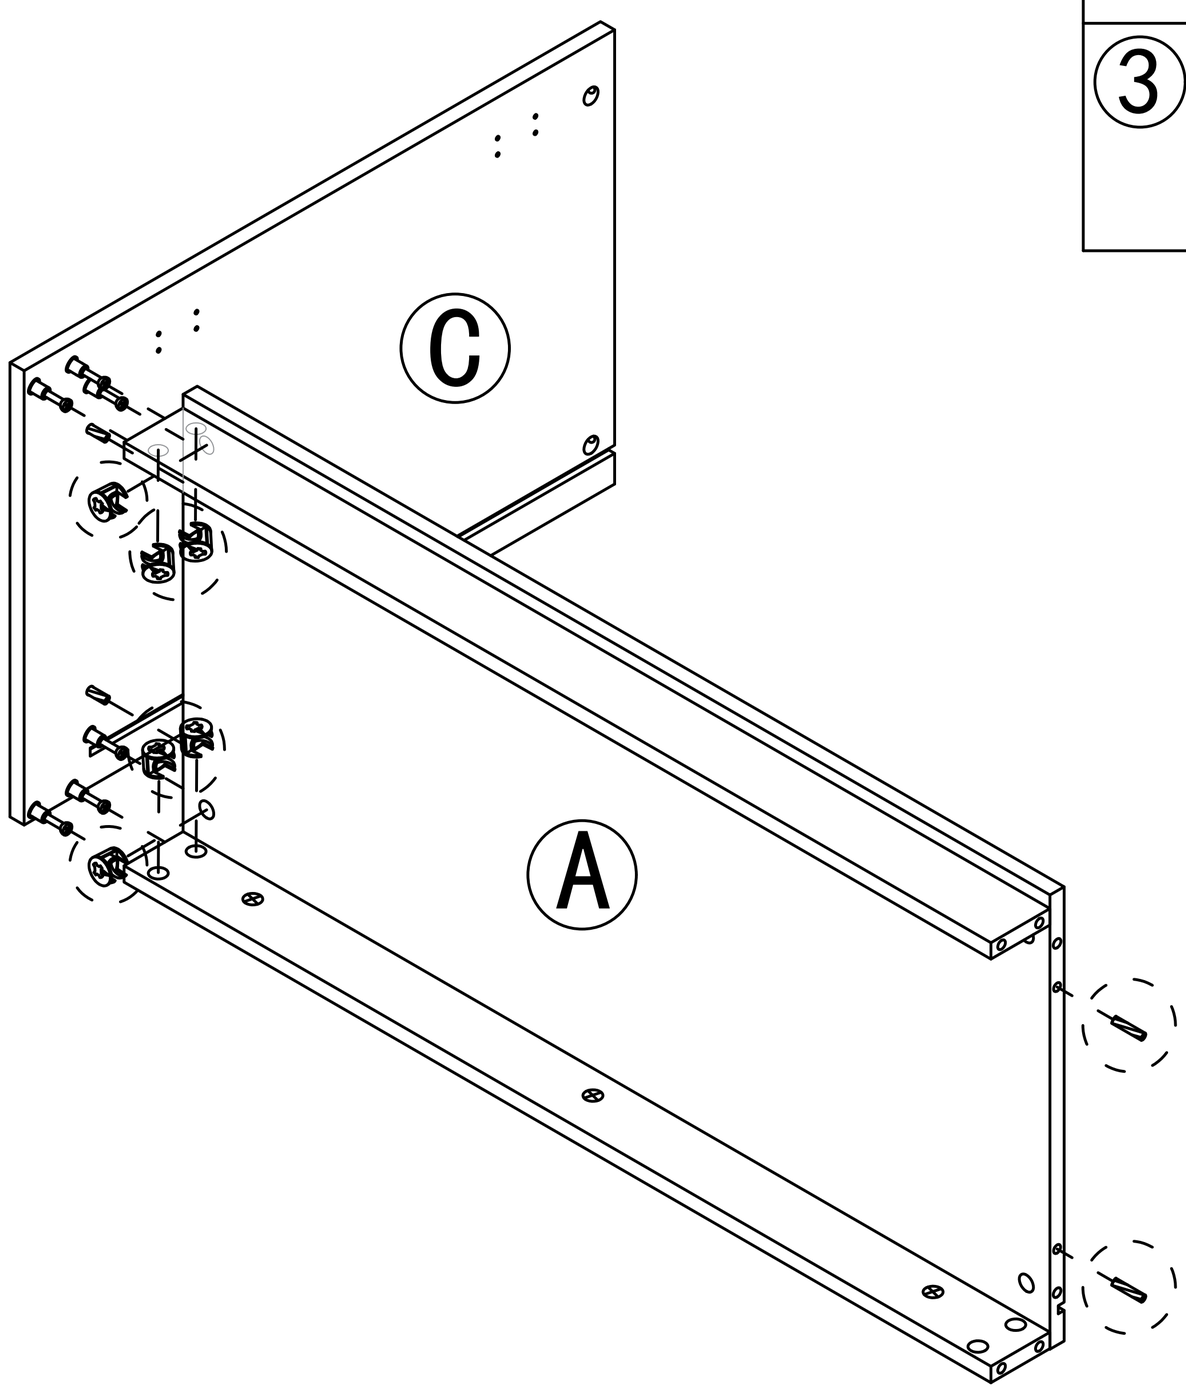



2 x6

3 x2

## Step 6

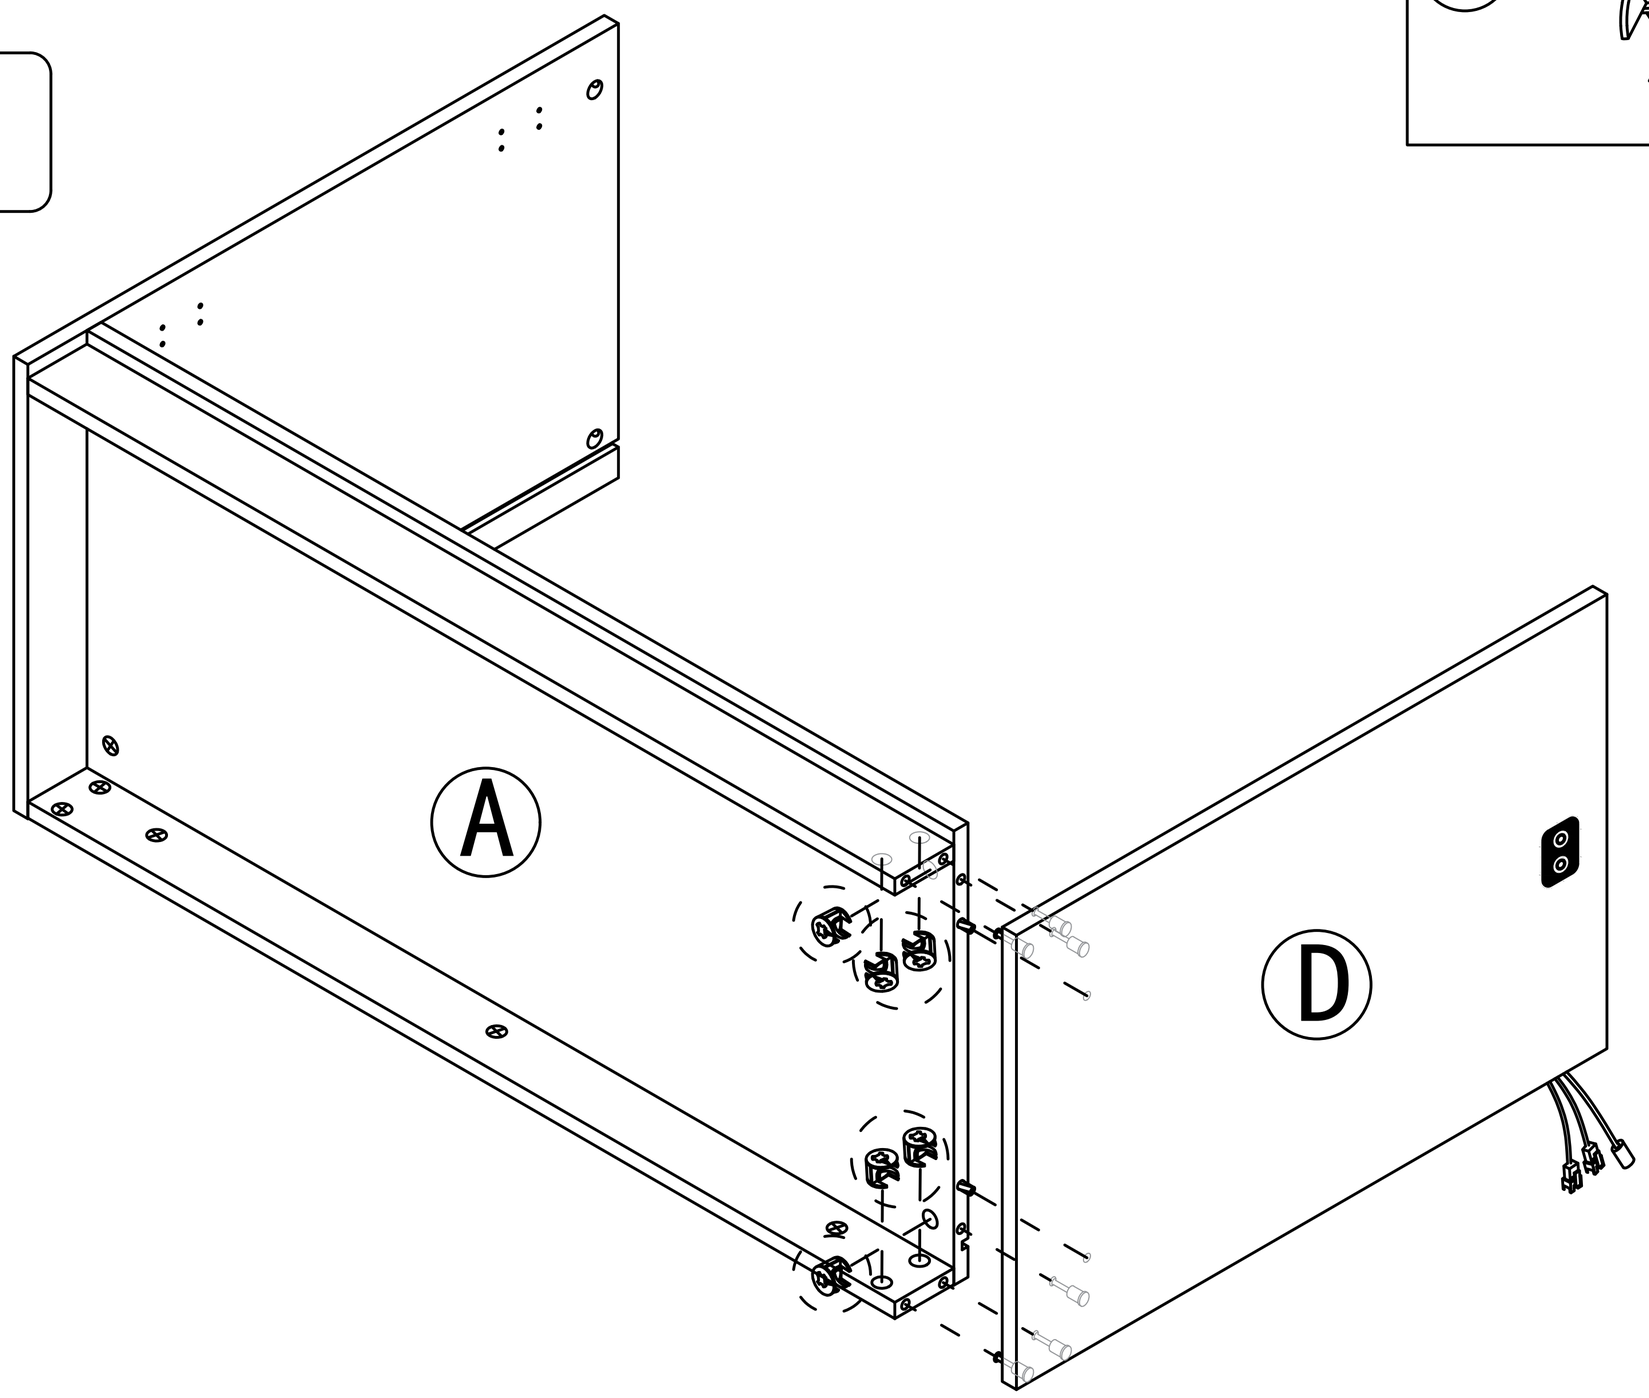



2

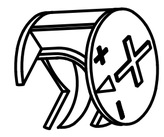

x6

## Step 7

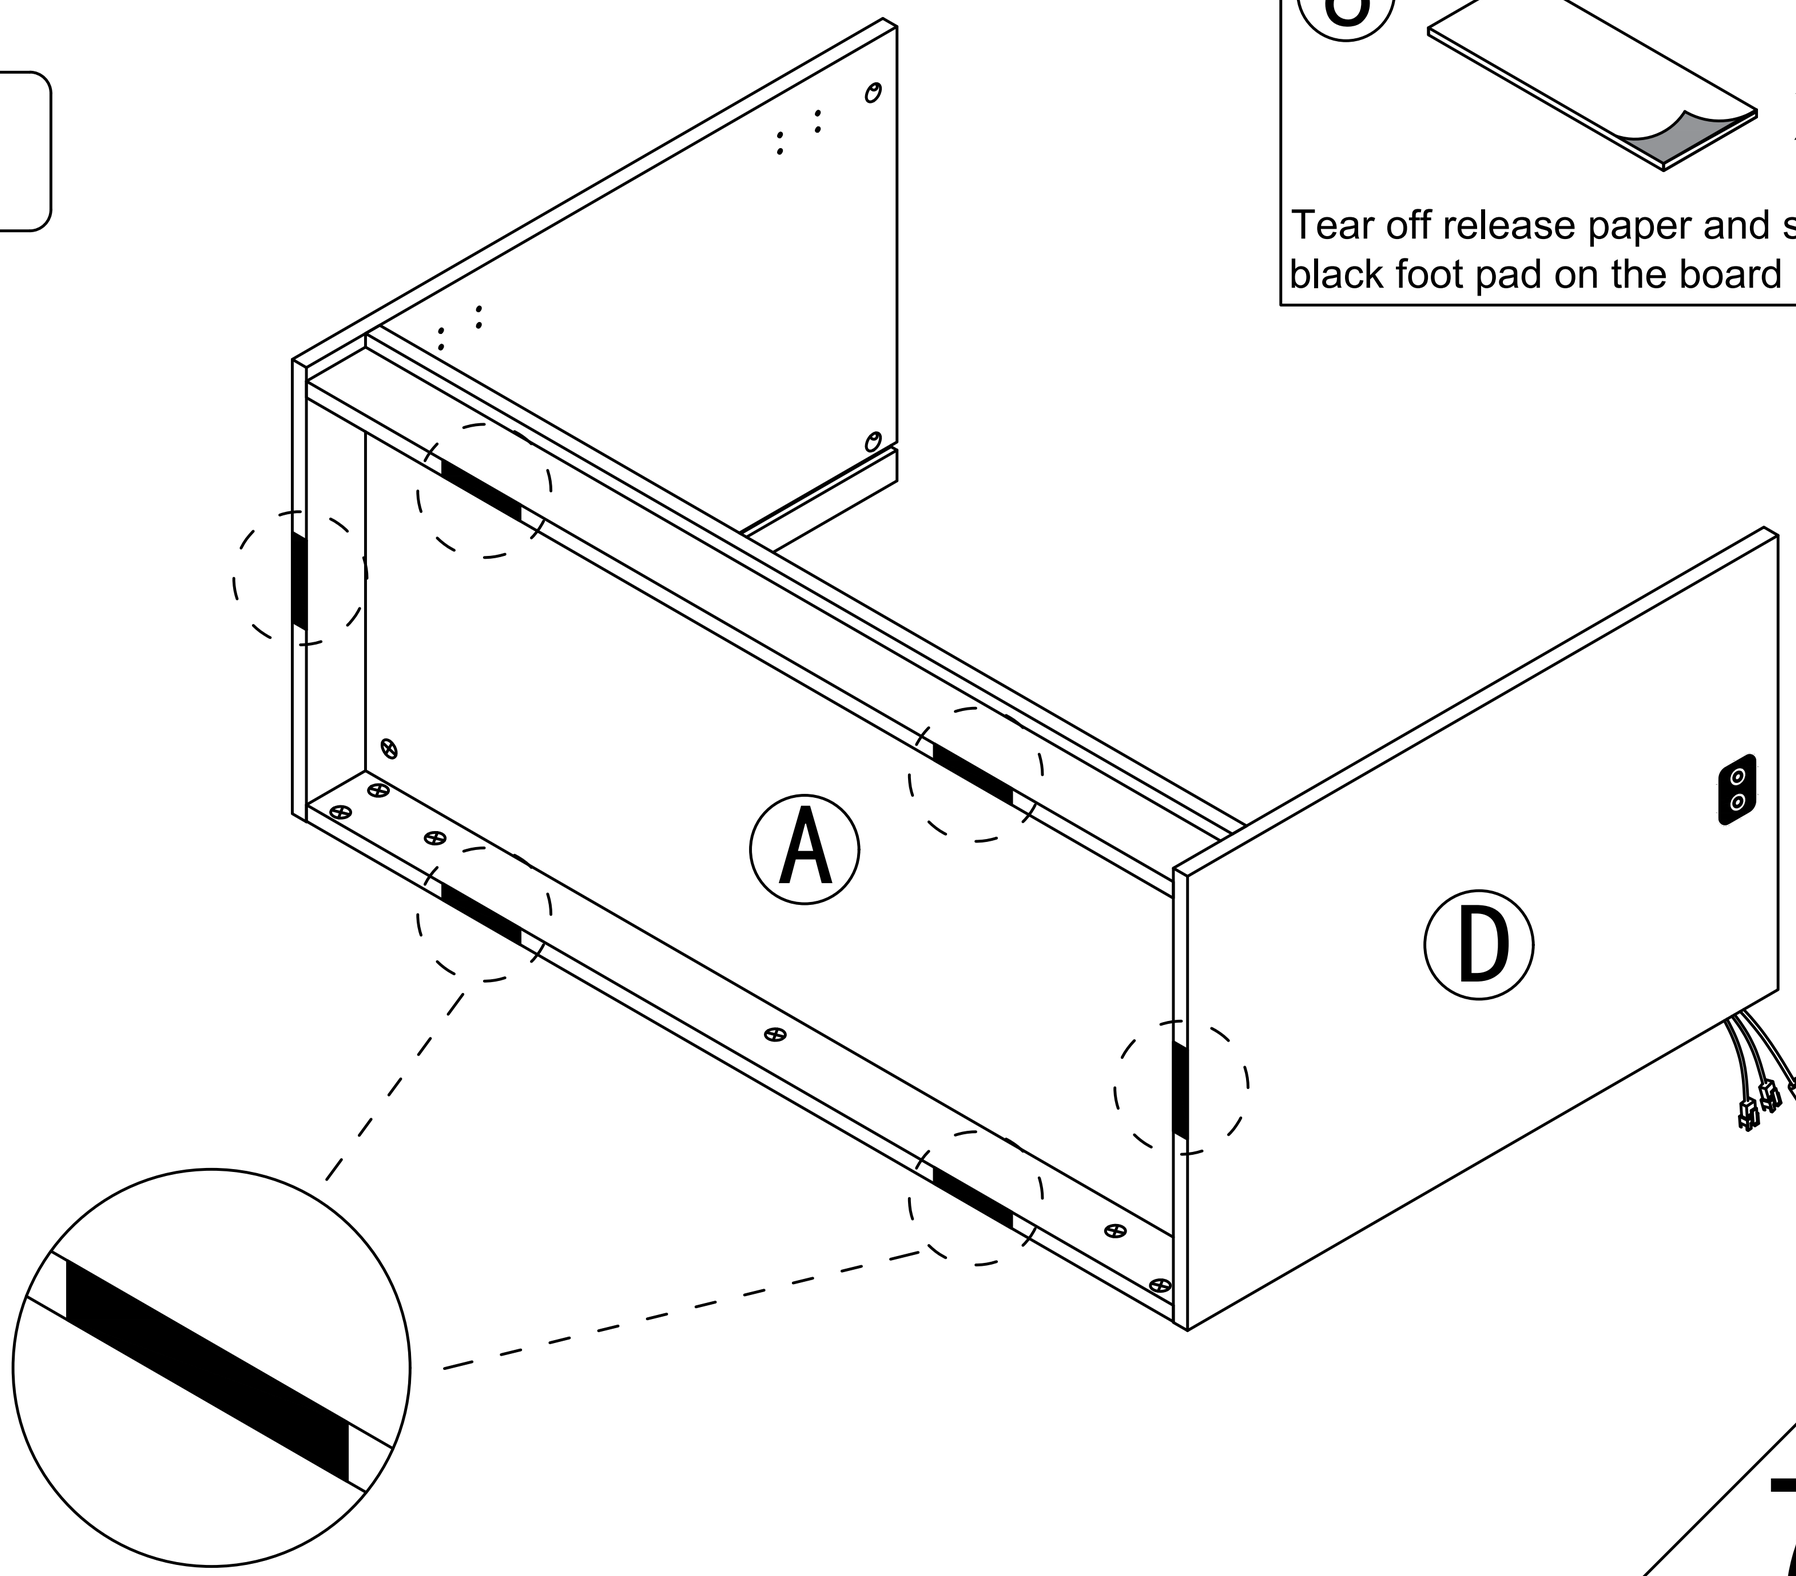


6




x6

Tear off release paper and stick the black foot pad on the board

7


## Step 8

Place the "E" board, Backboard card strip, and "E" board in order

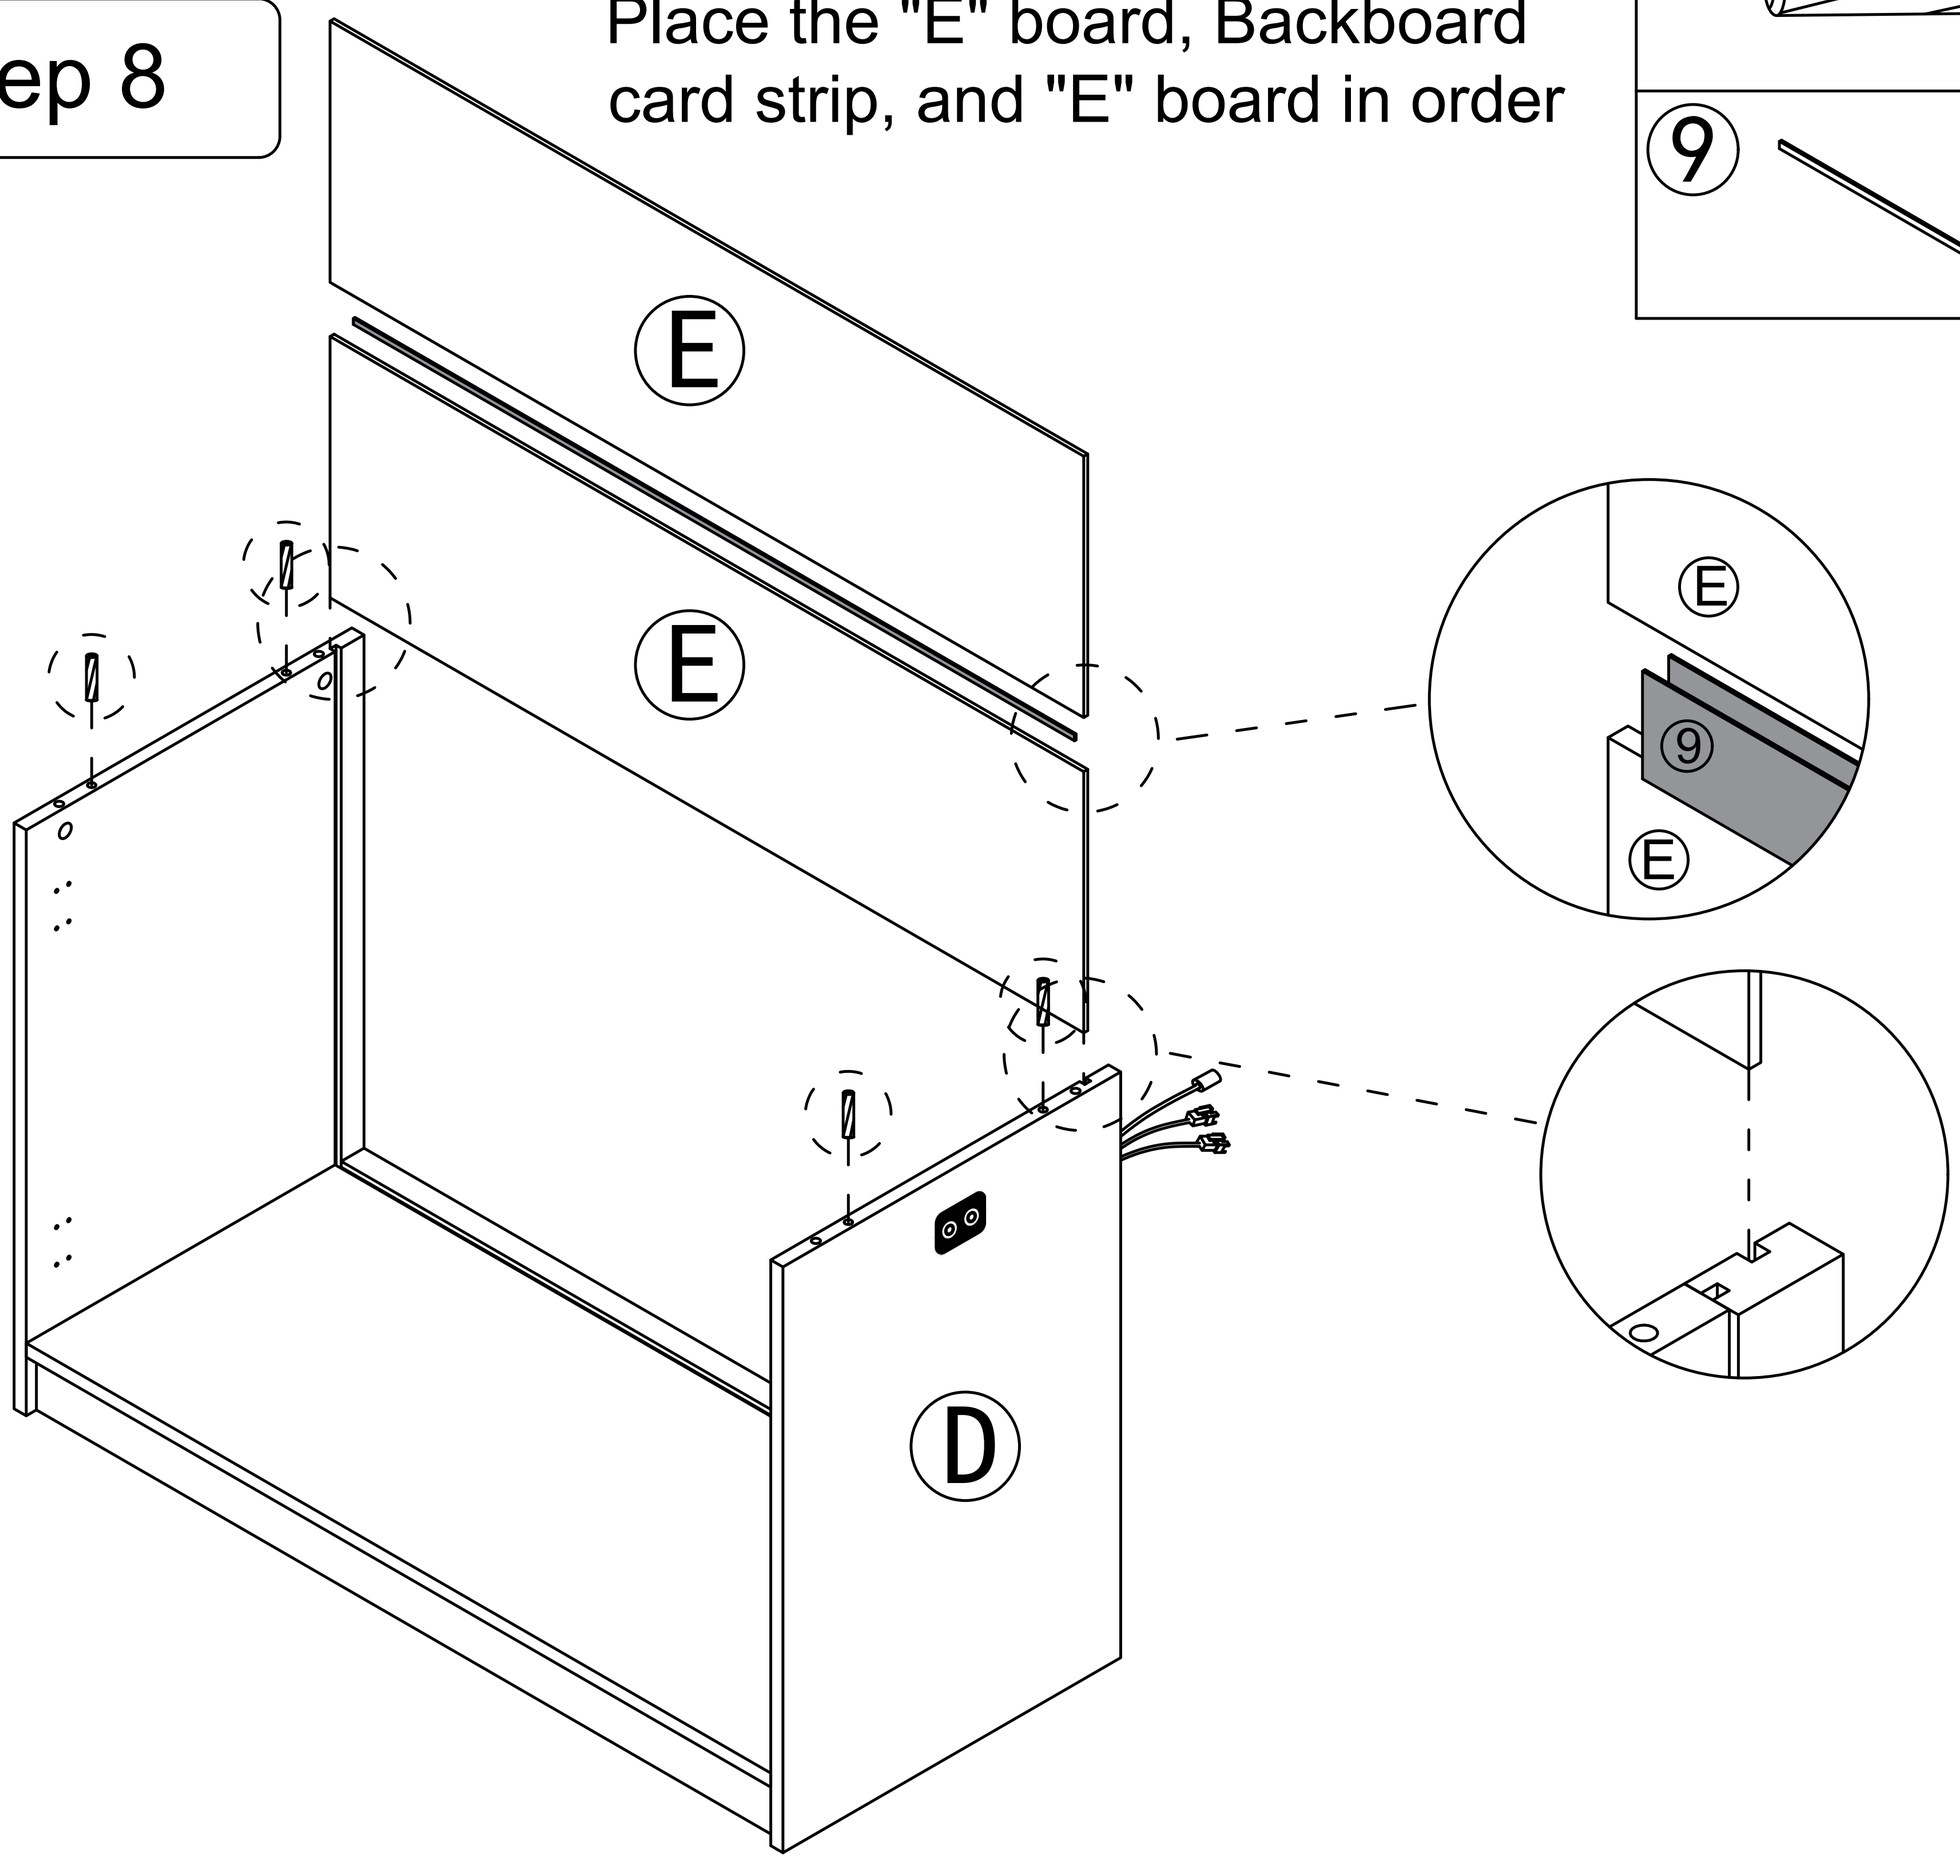


| | |
|---|---|
| 3 | x4 |
| 9 | x1 |


## Step 9

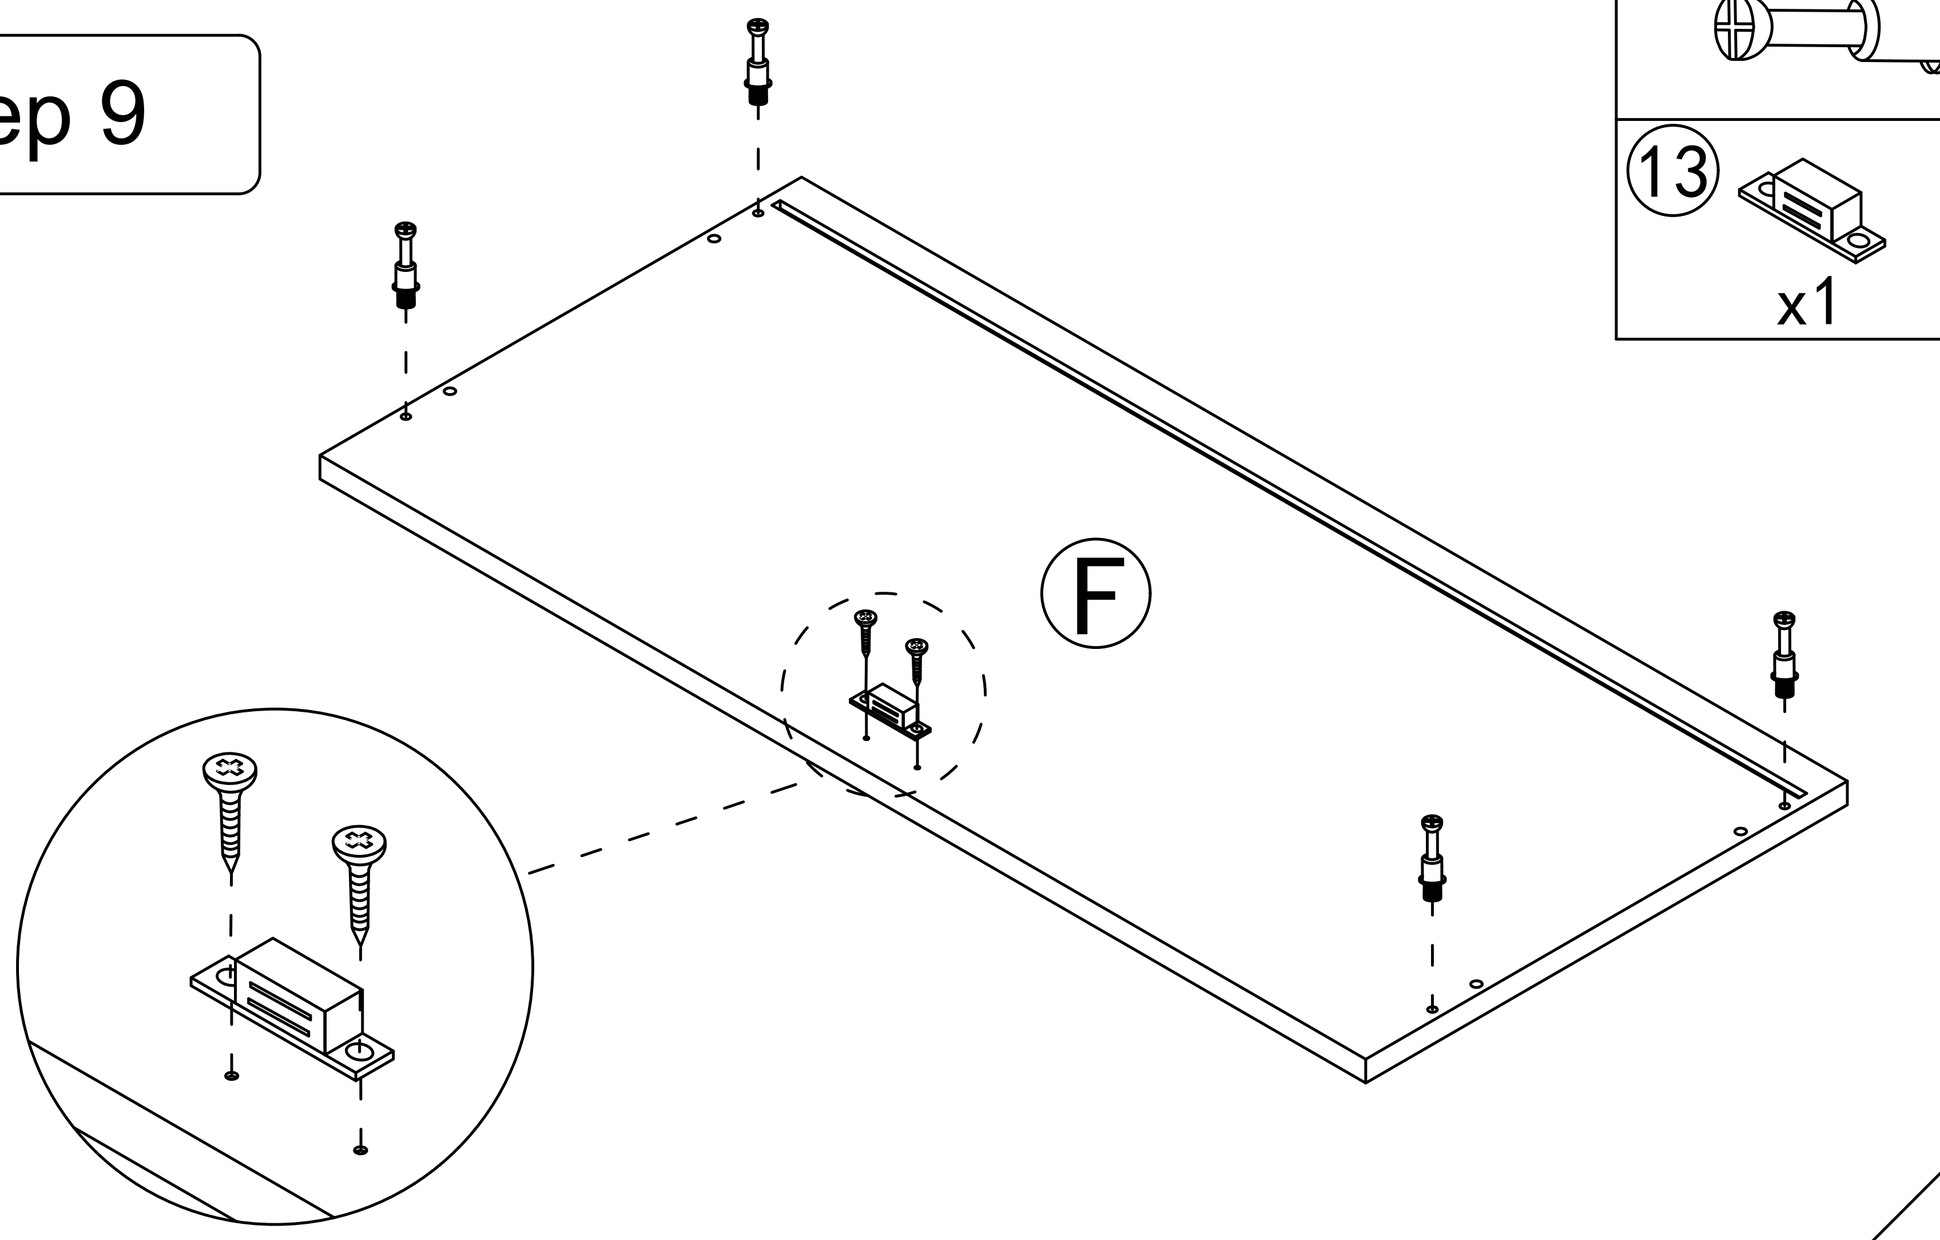


| | |
|---|---|
| 1 | x4 |
| 13 | x1 |
| | x2 |


## Step 10

2 x4

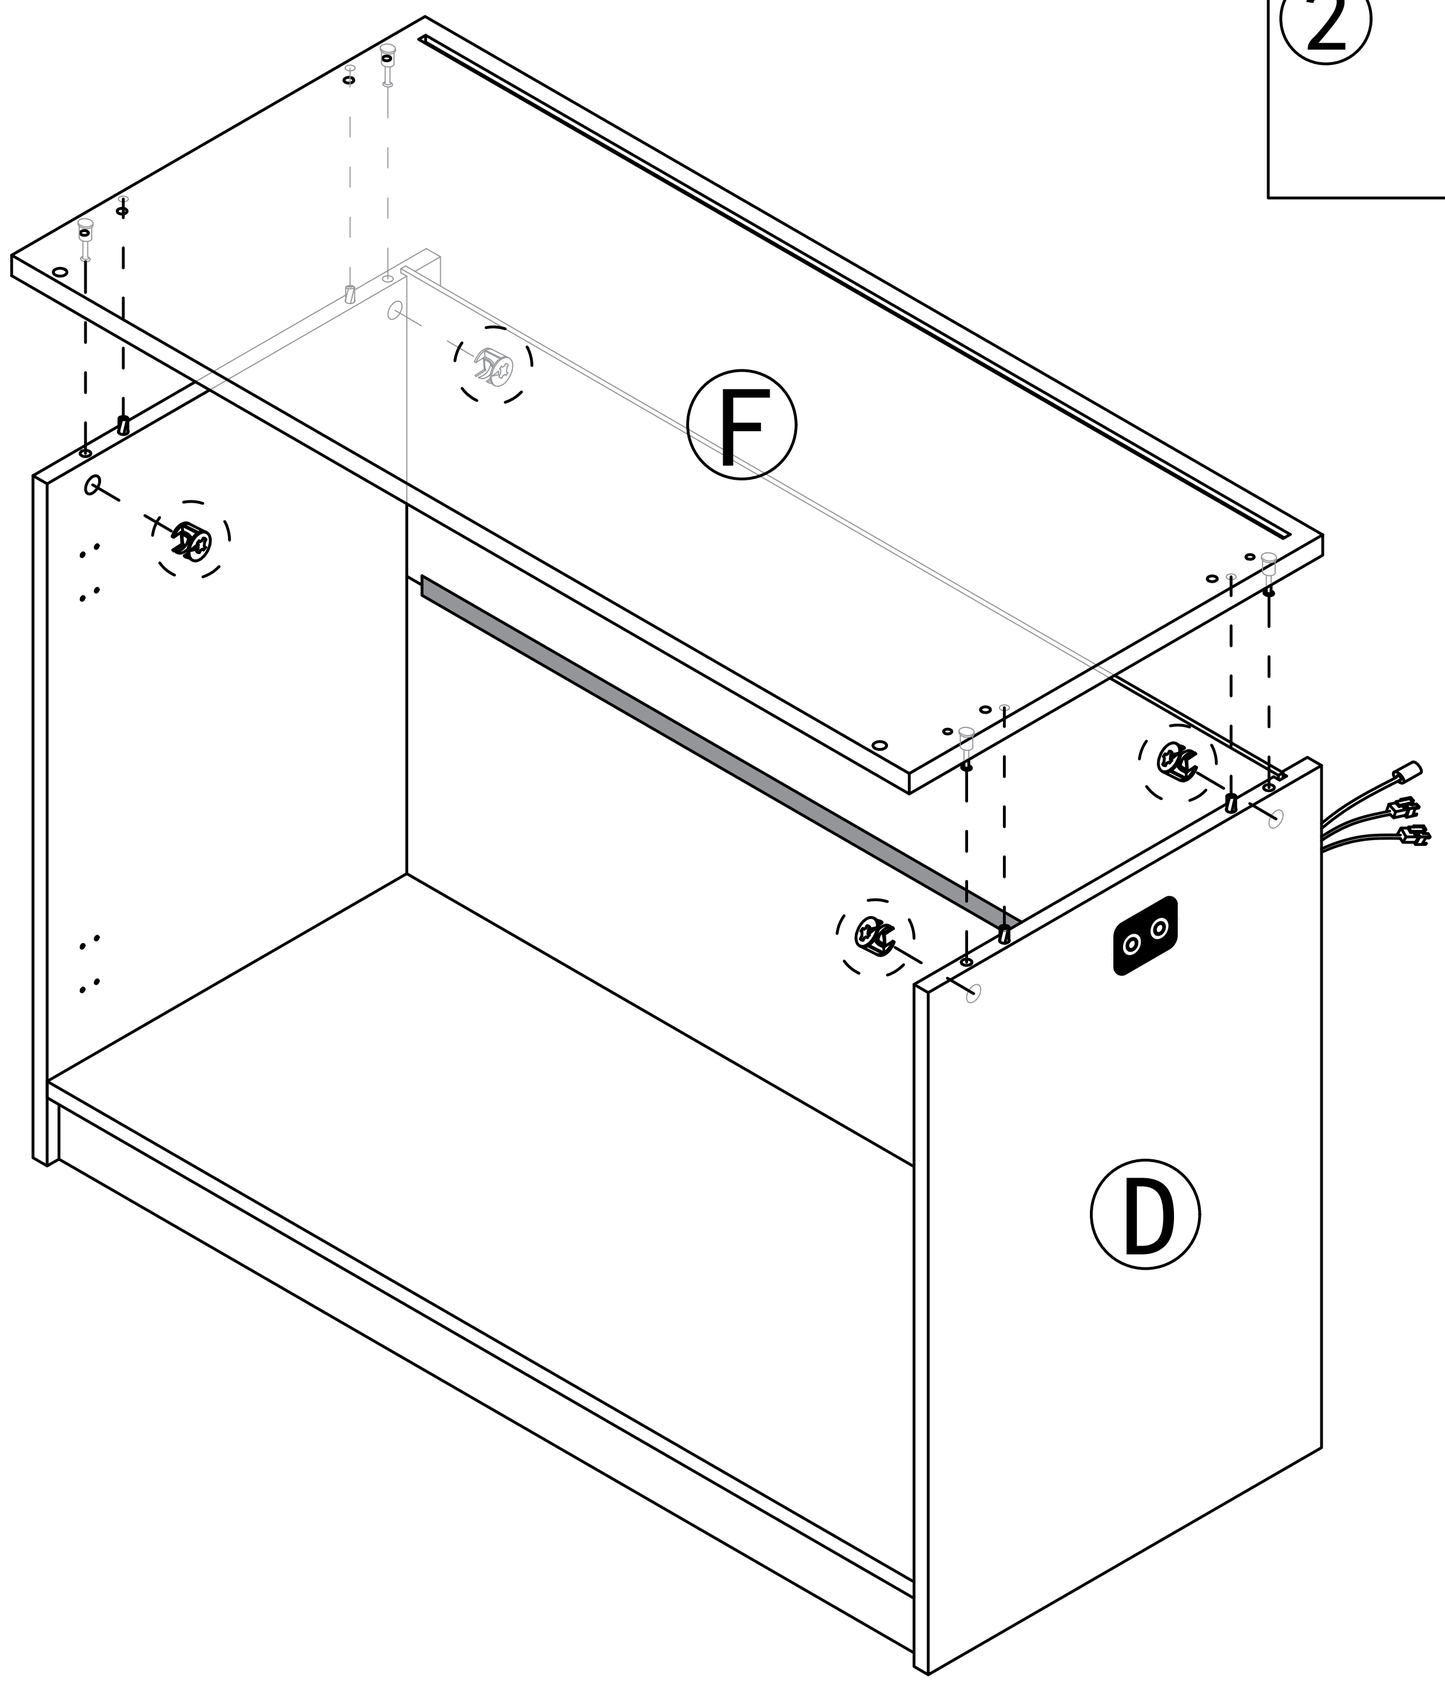




## Step 11

1 x6

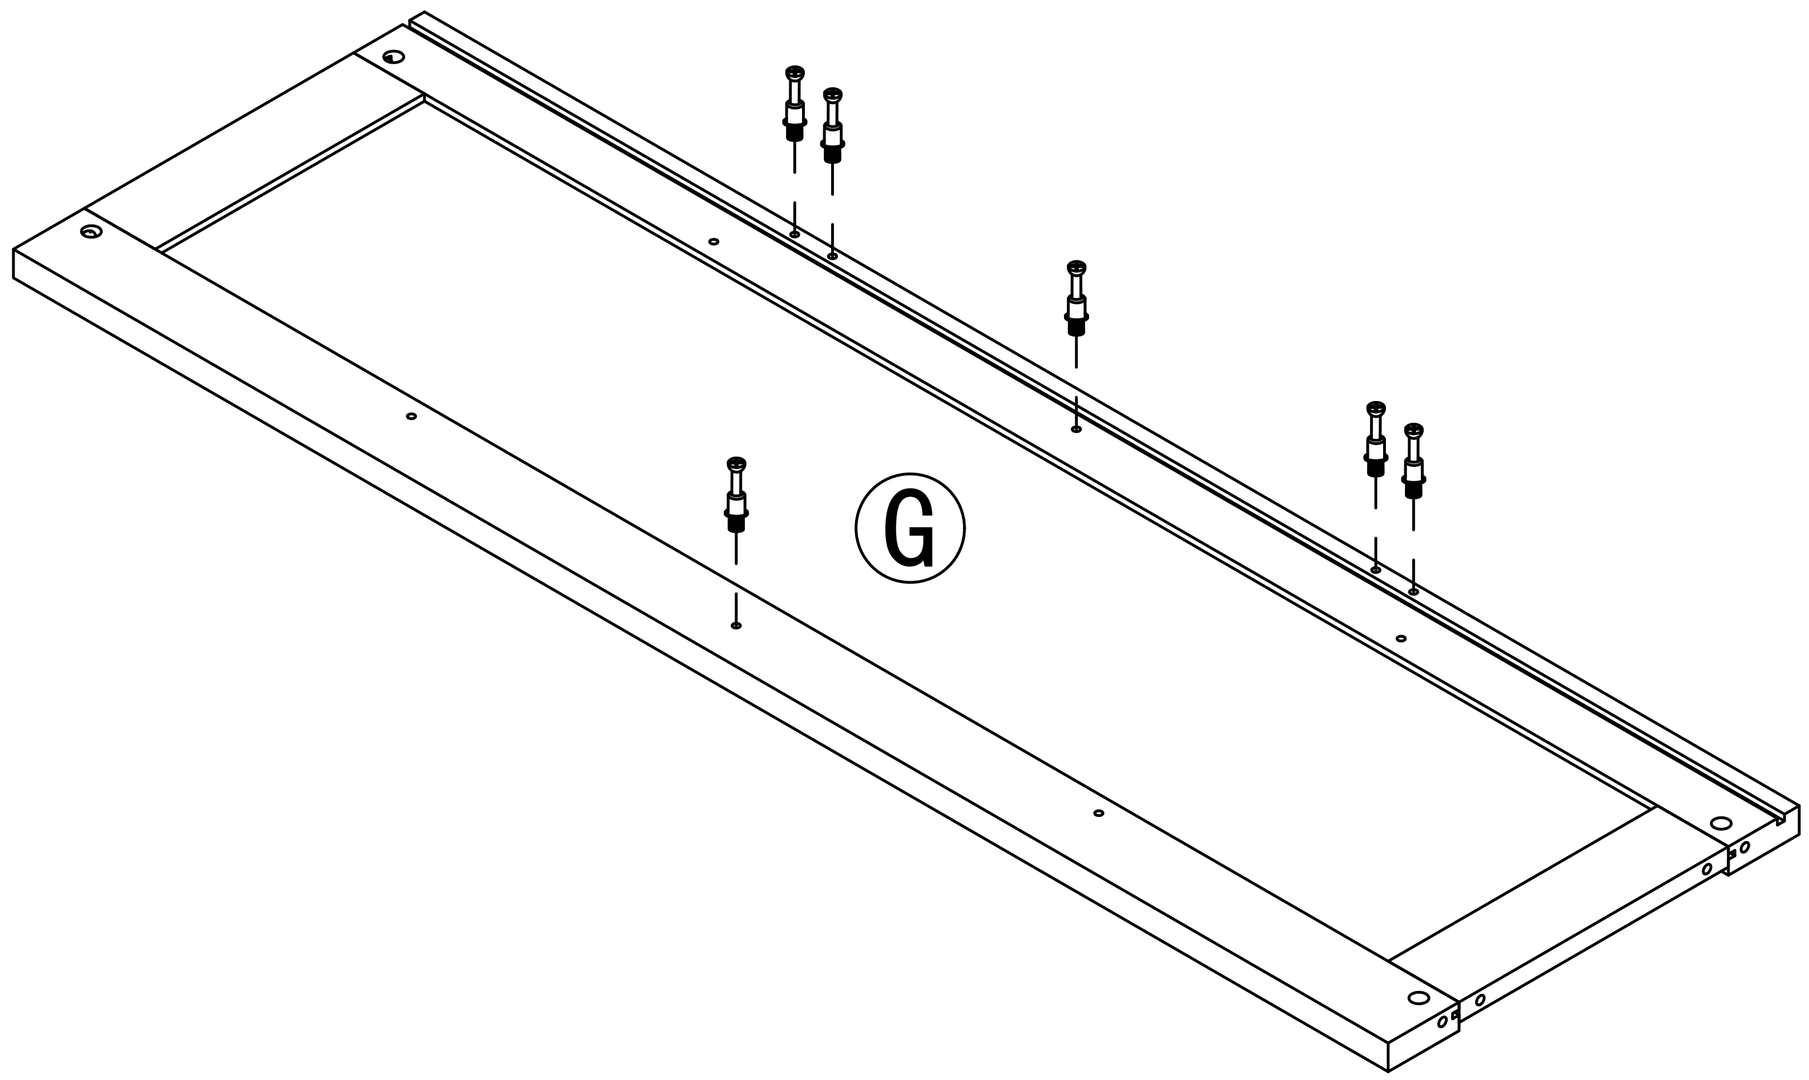


## Step 12

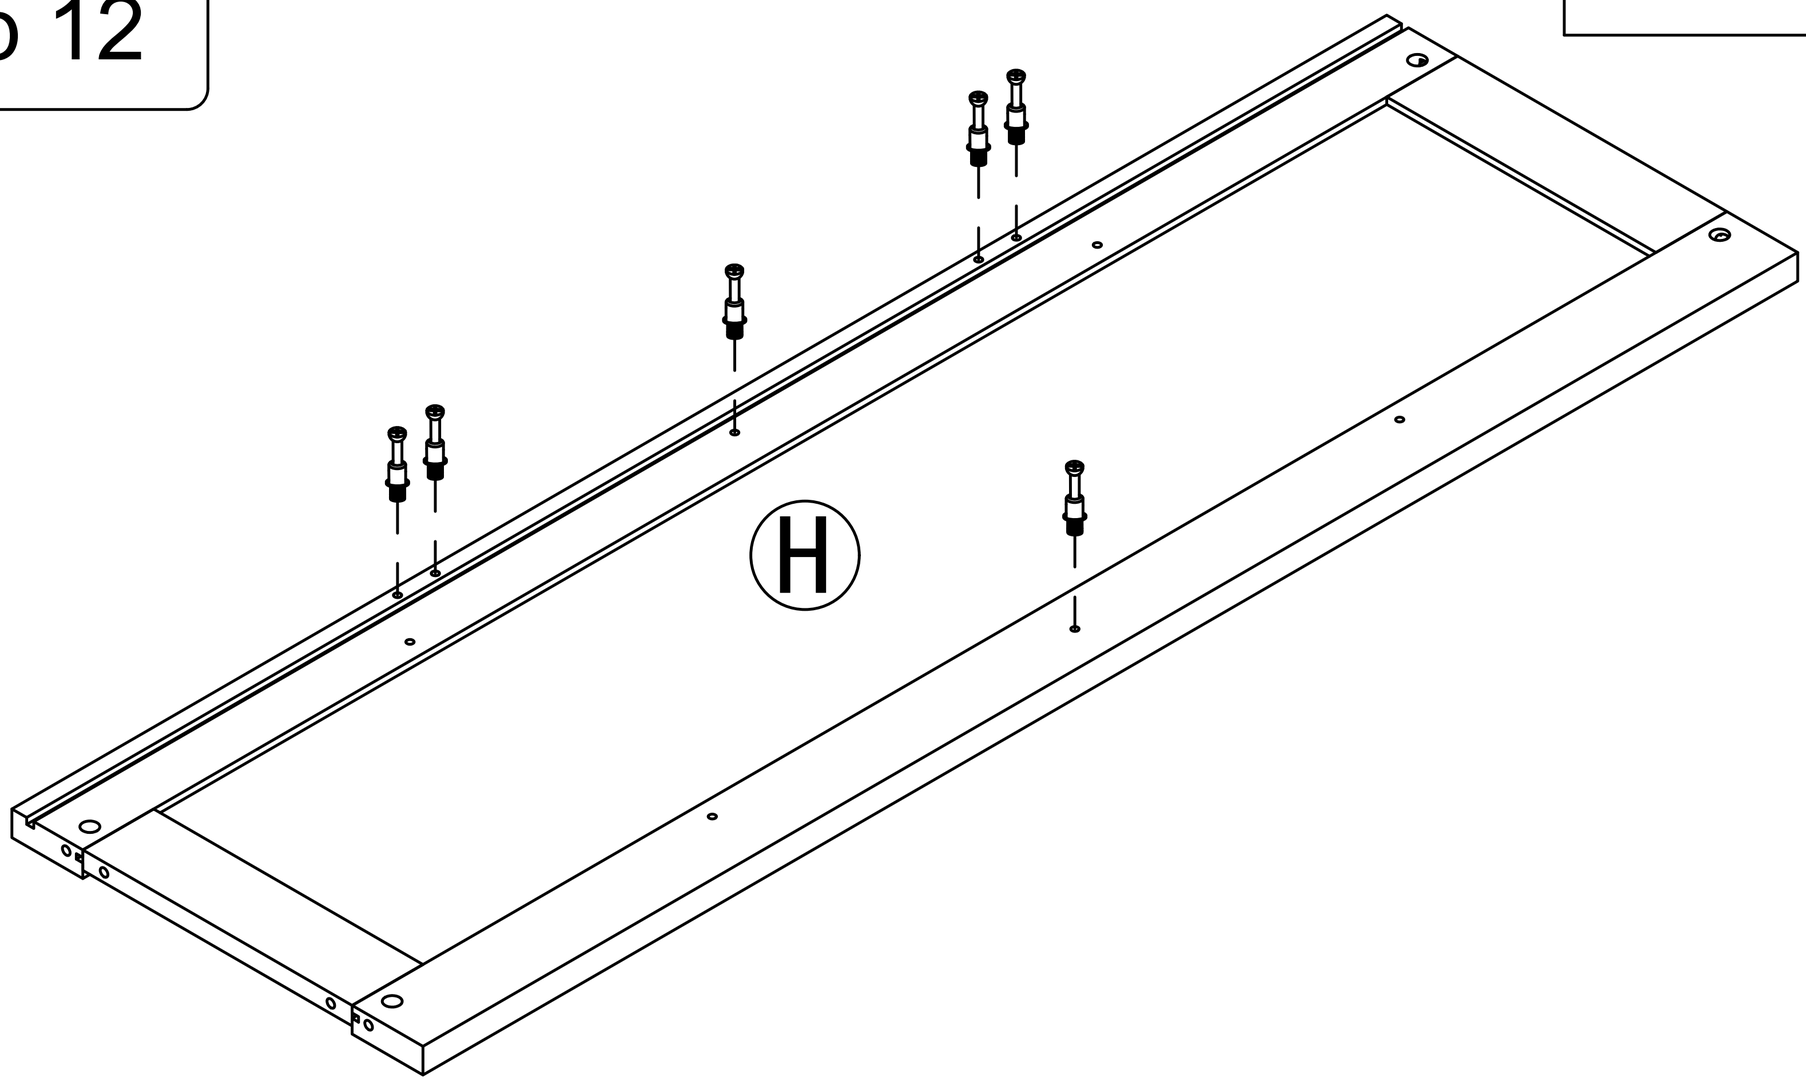



1  x6

## Step 13

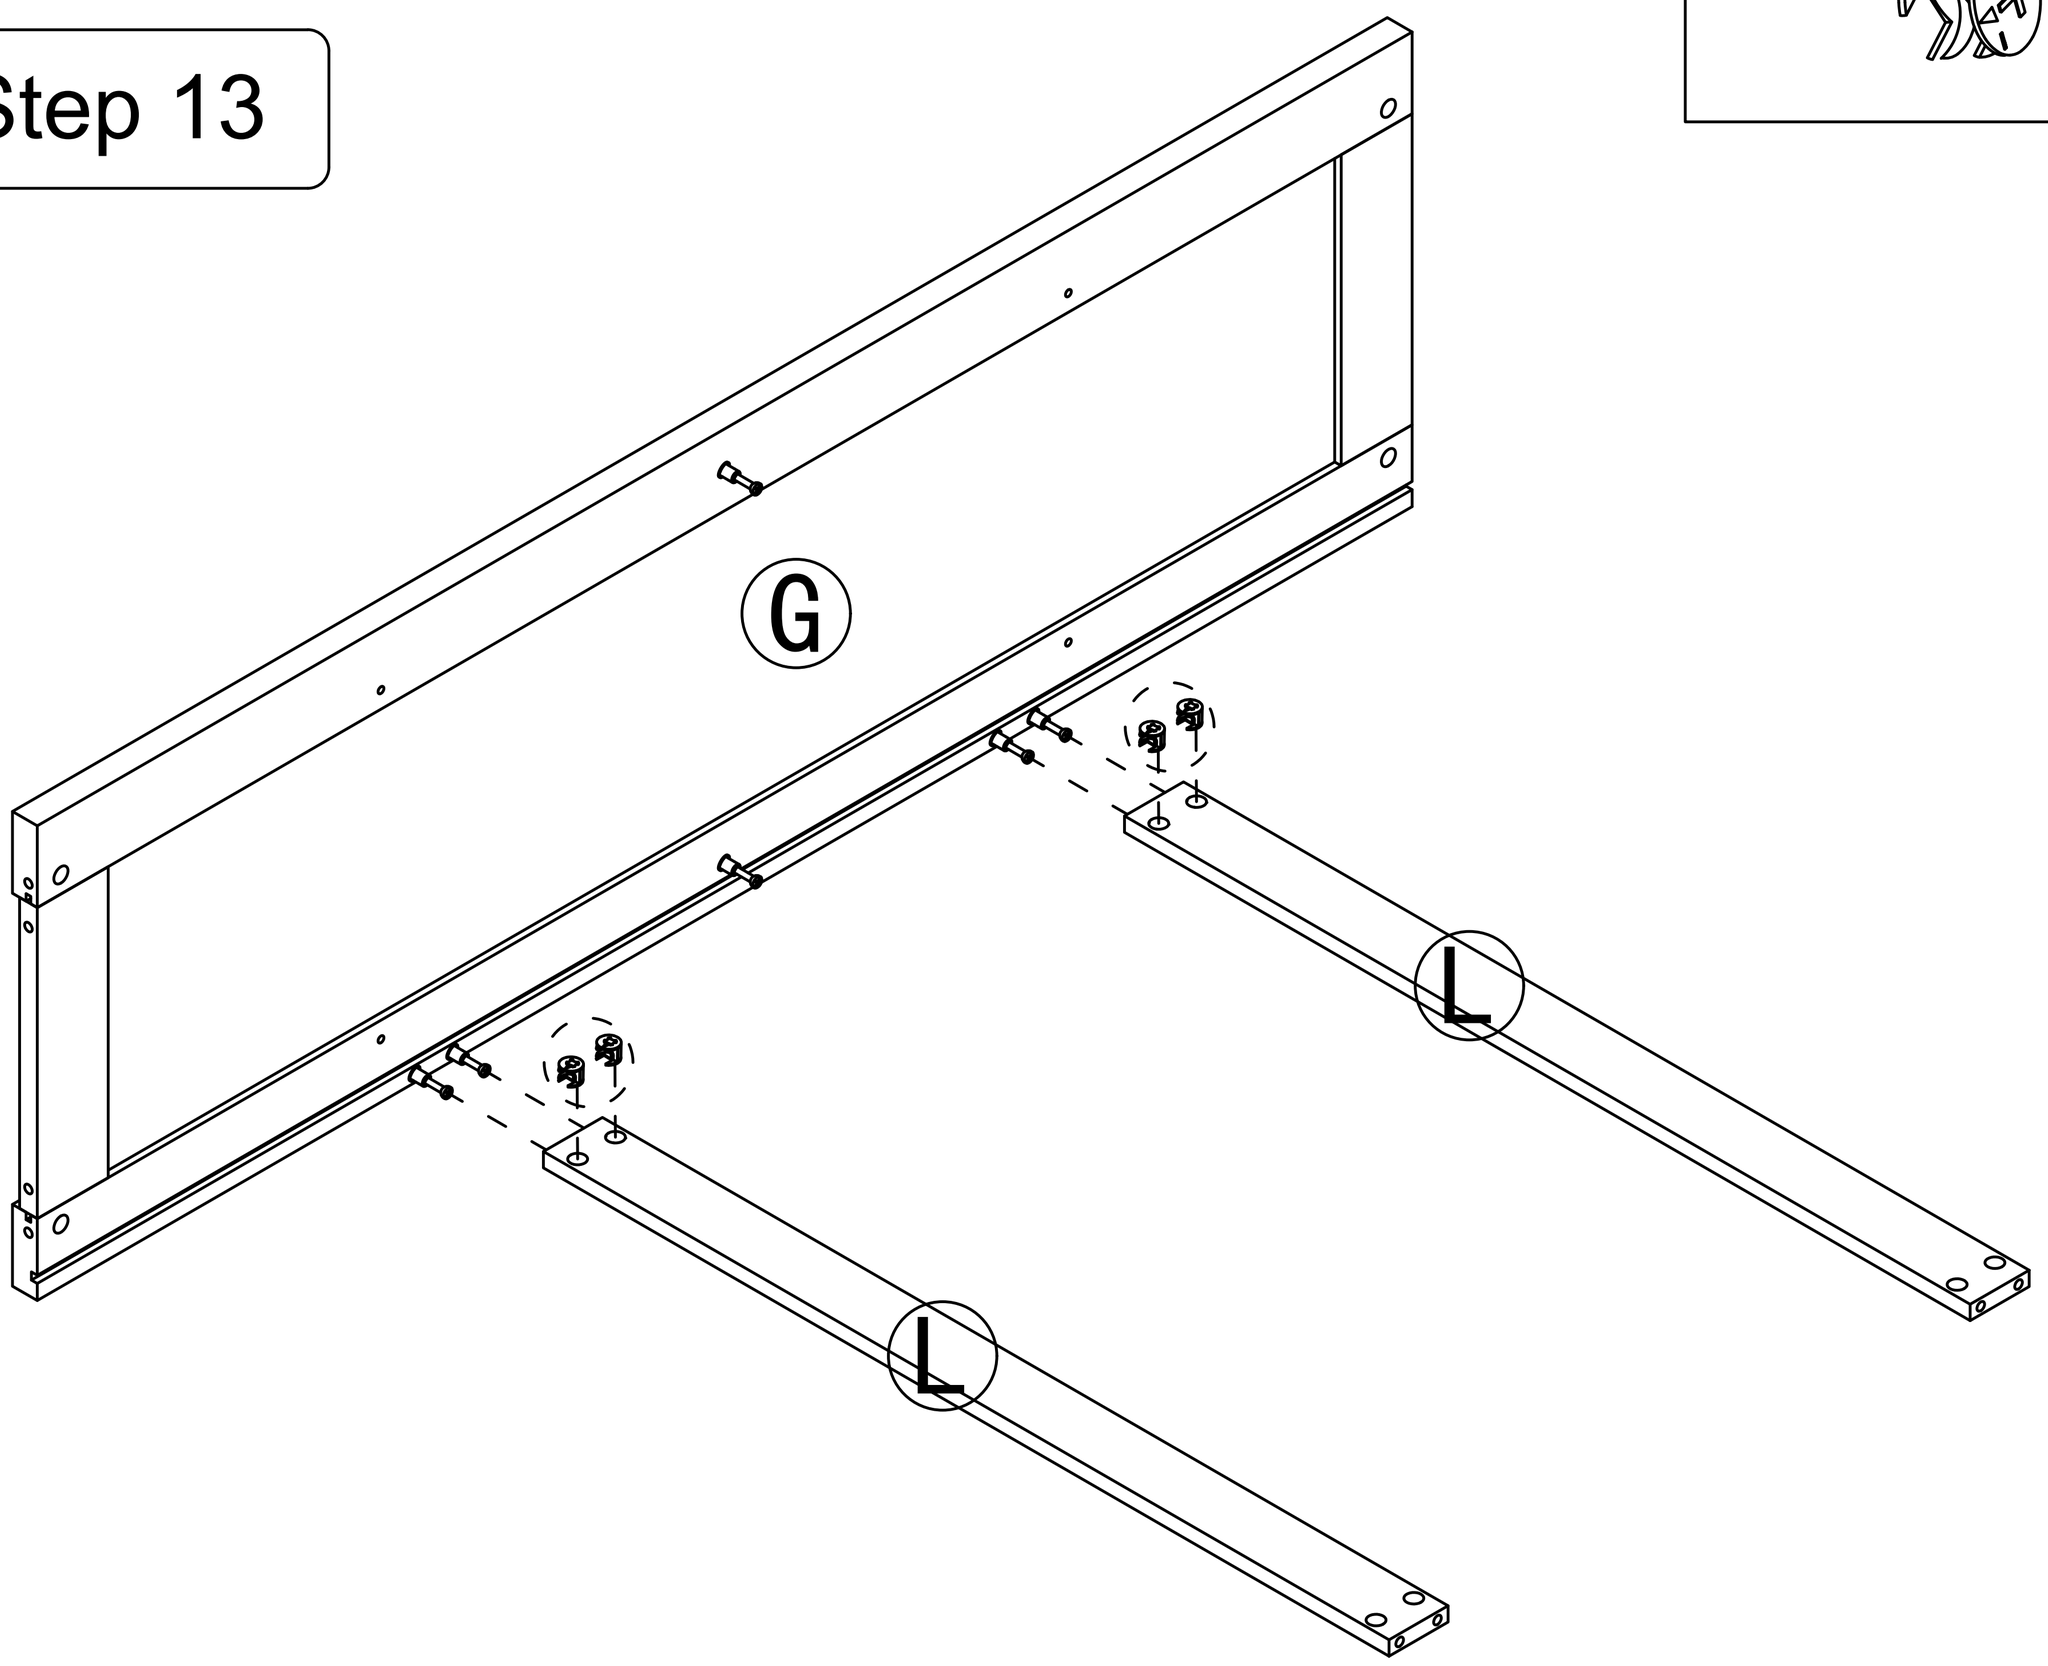



2  x4


Step 14

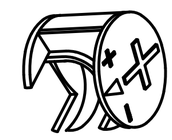


x2

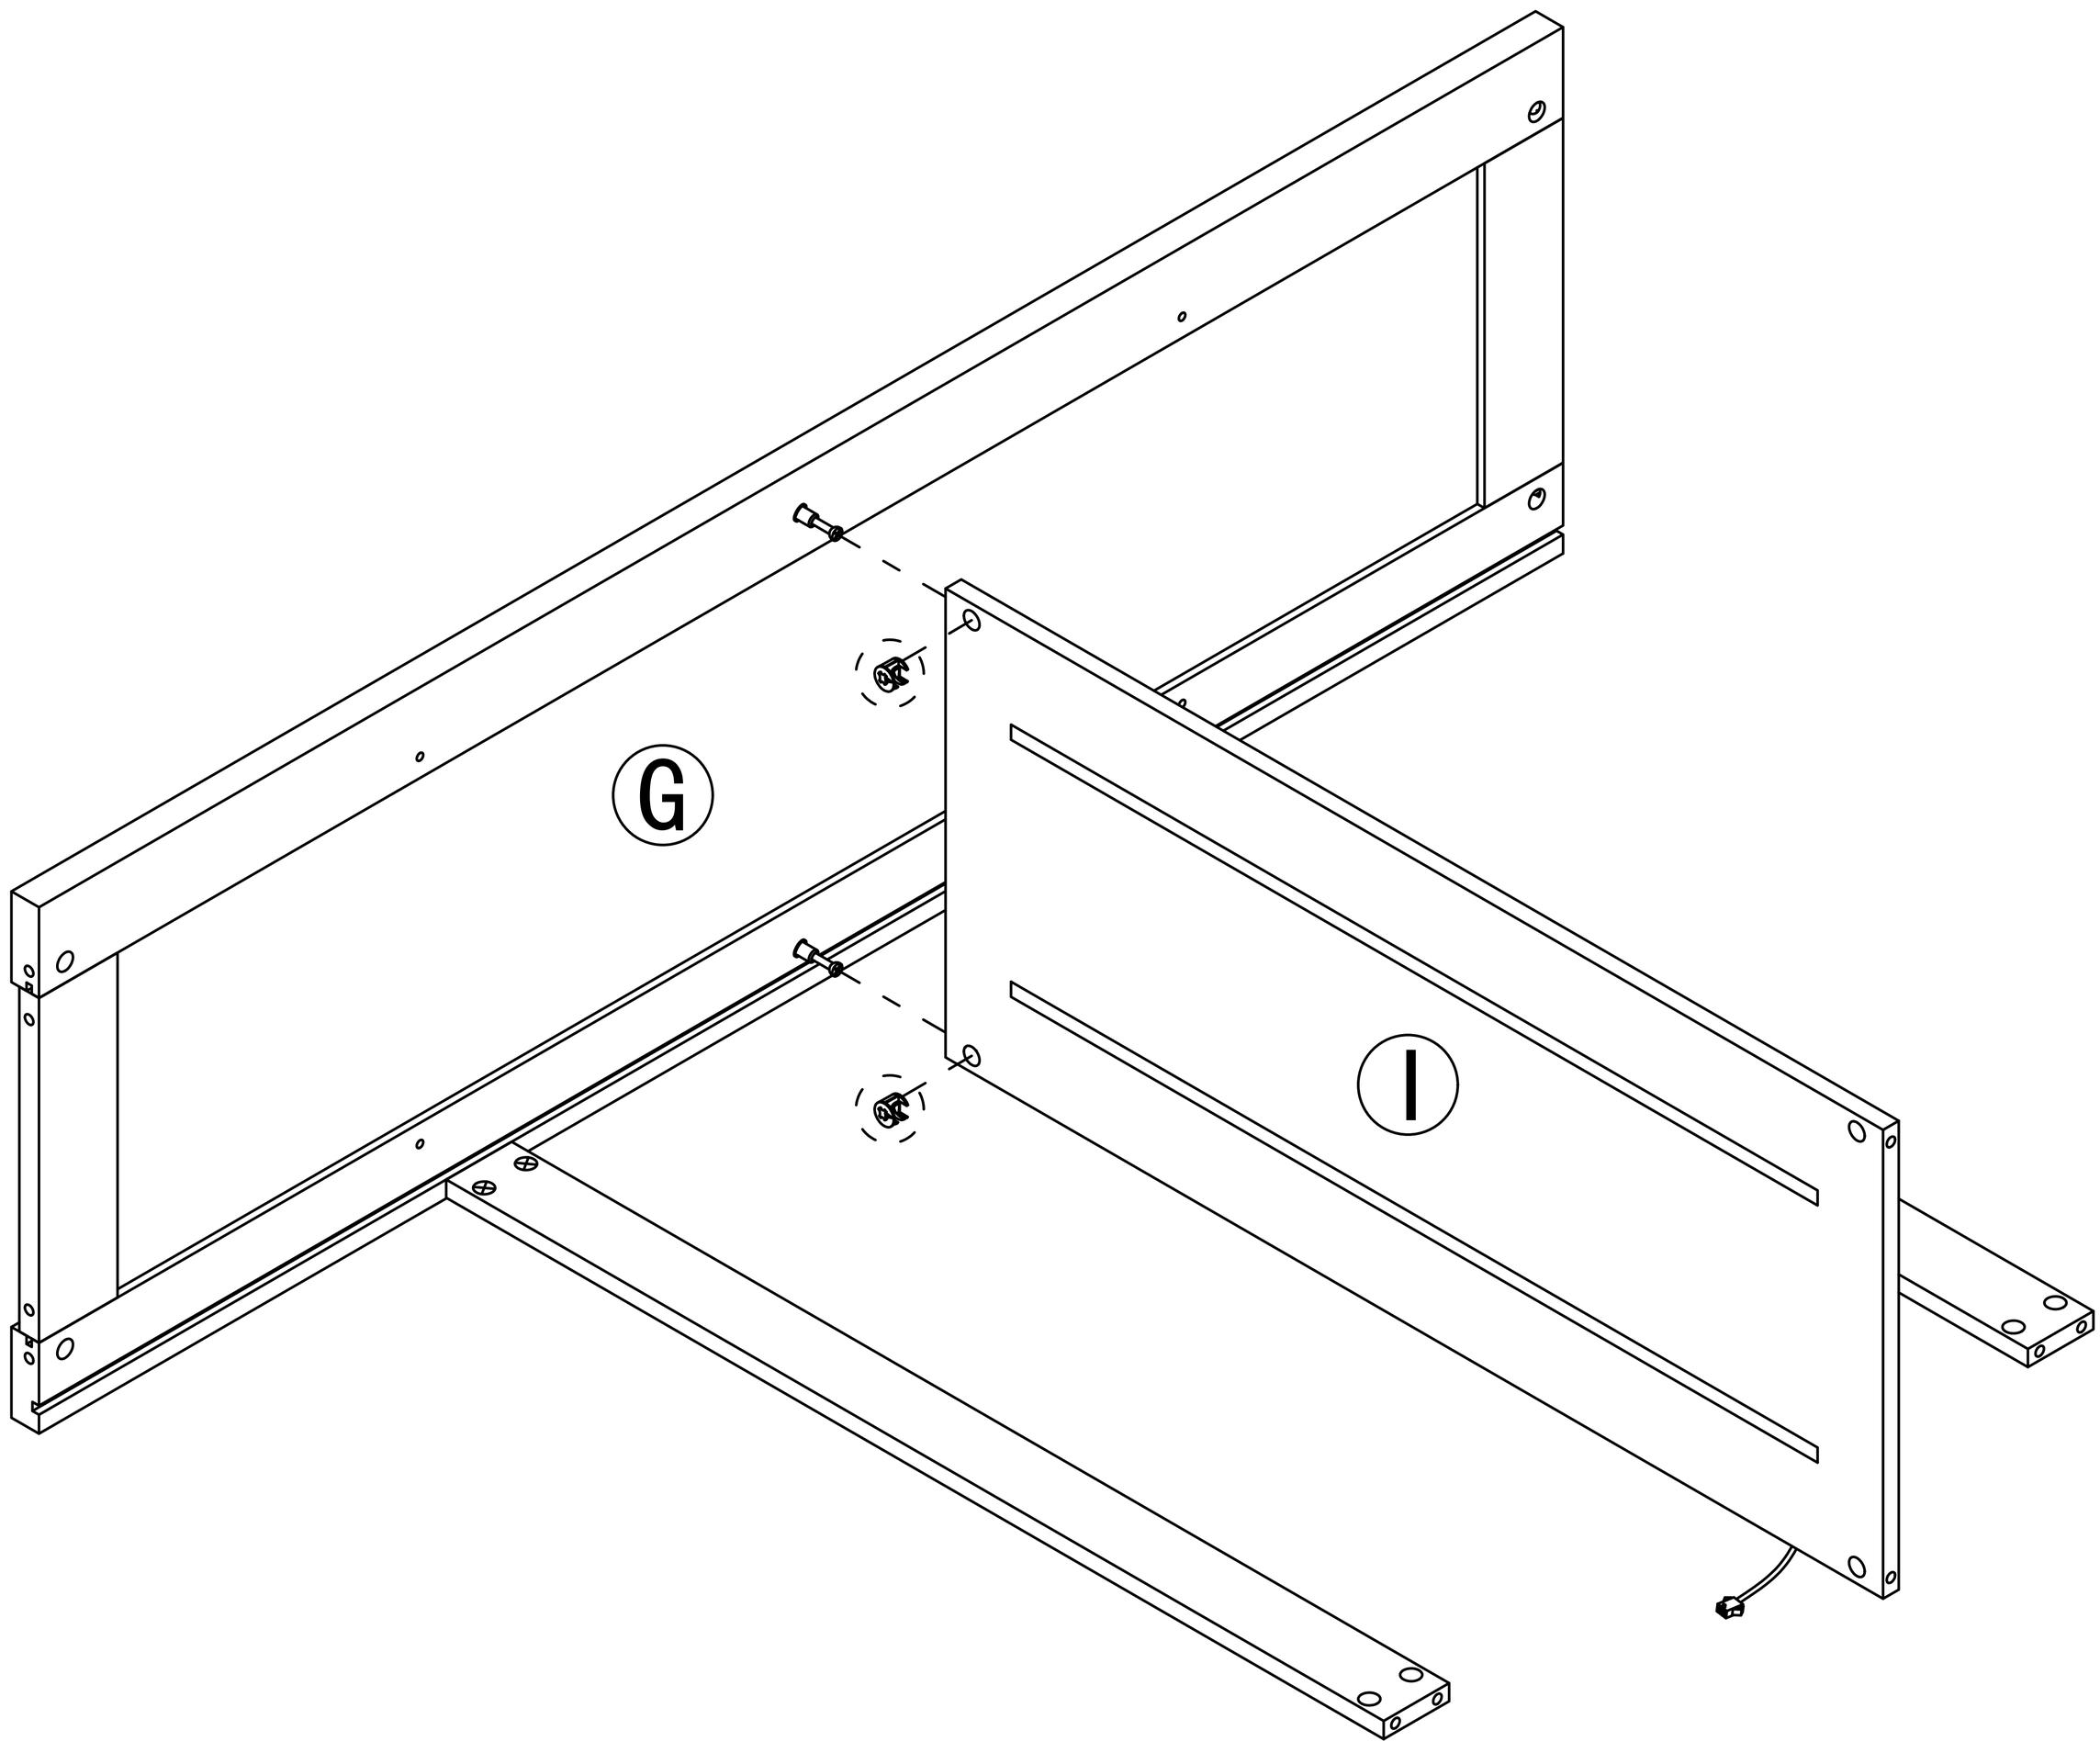


Step 15

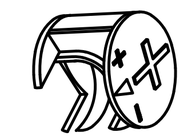


x6

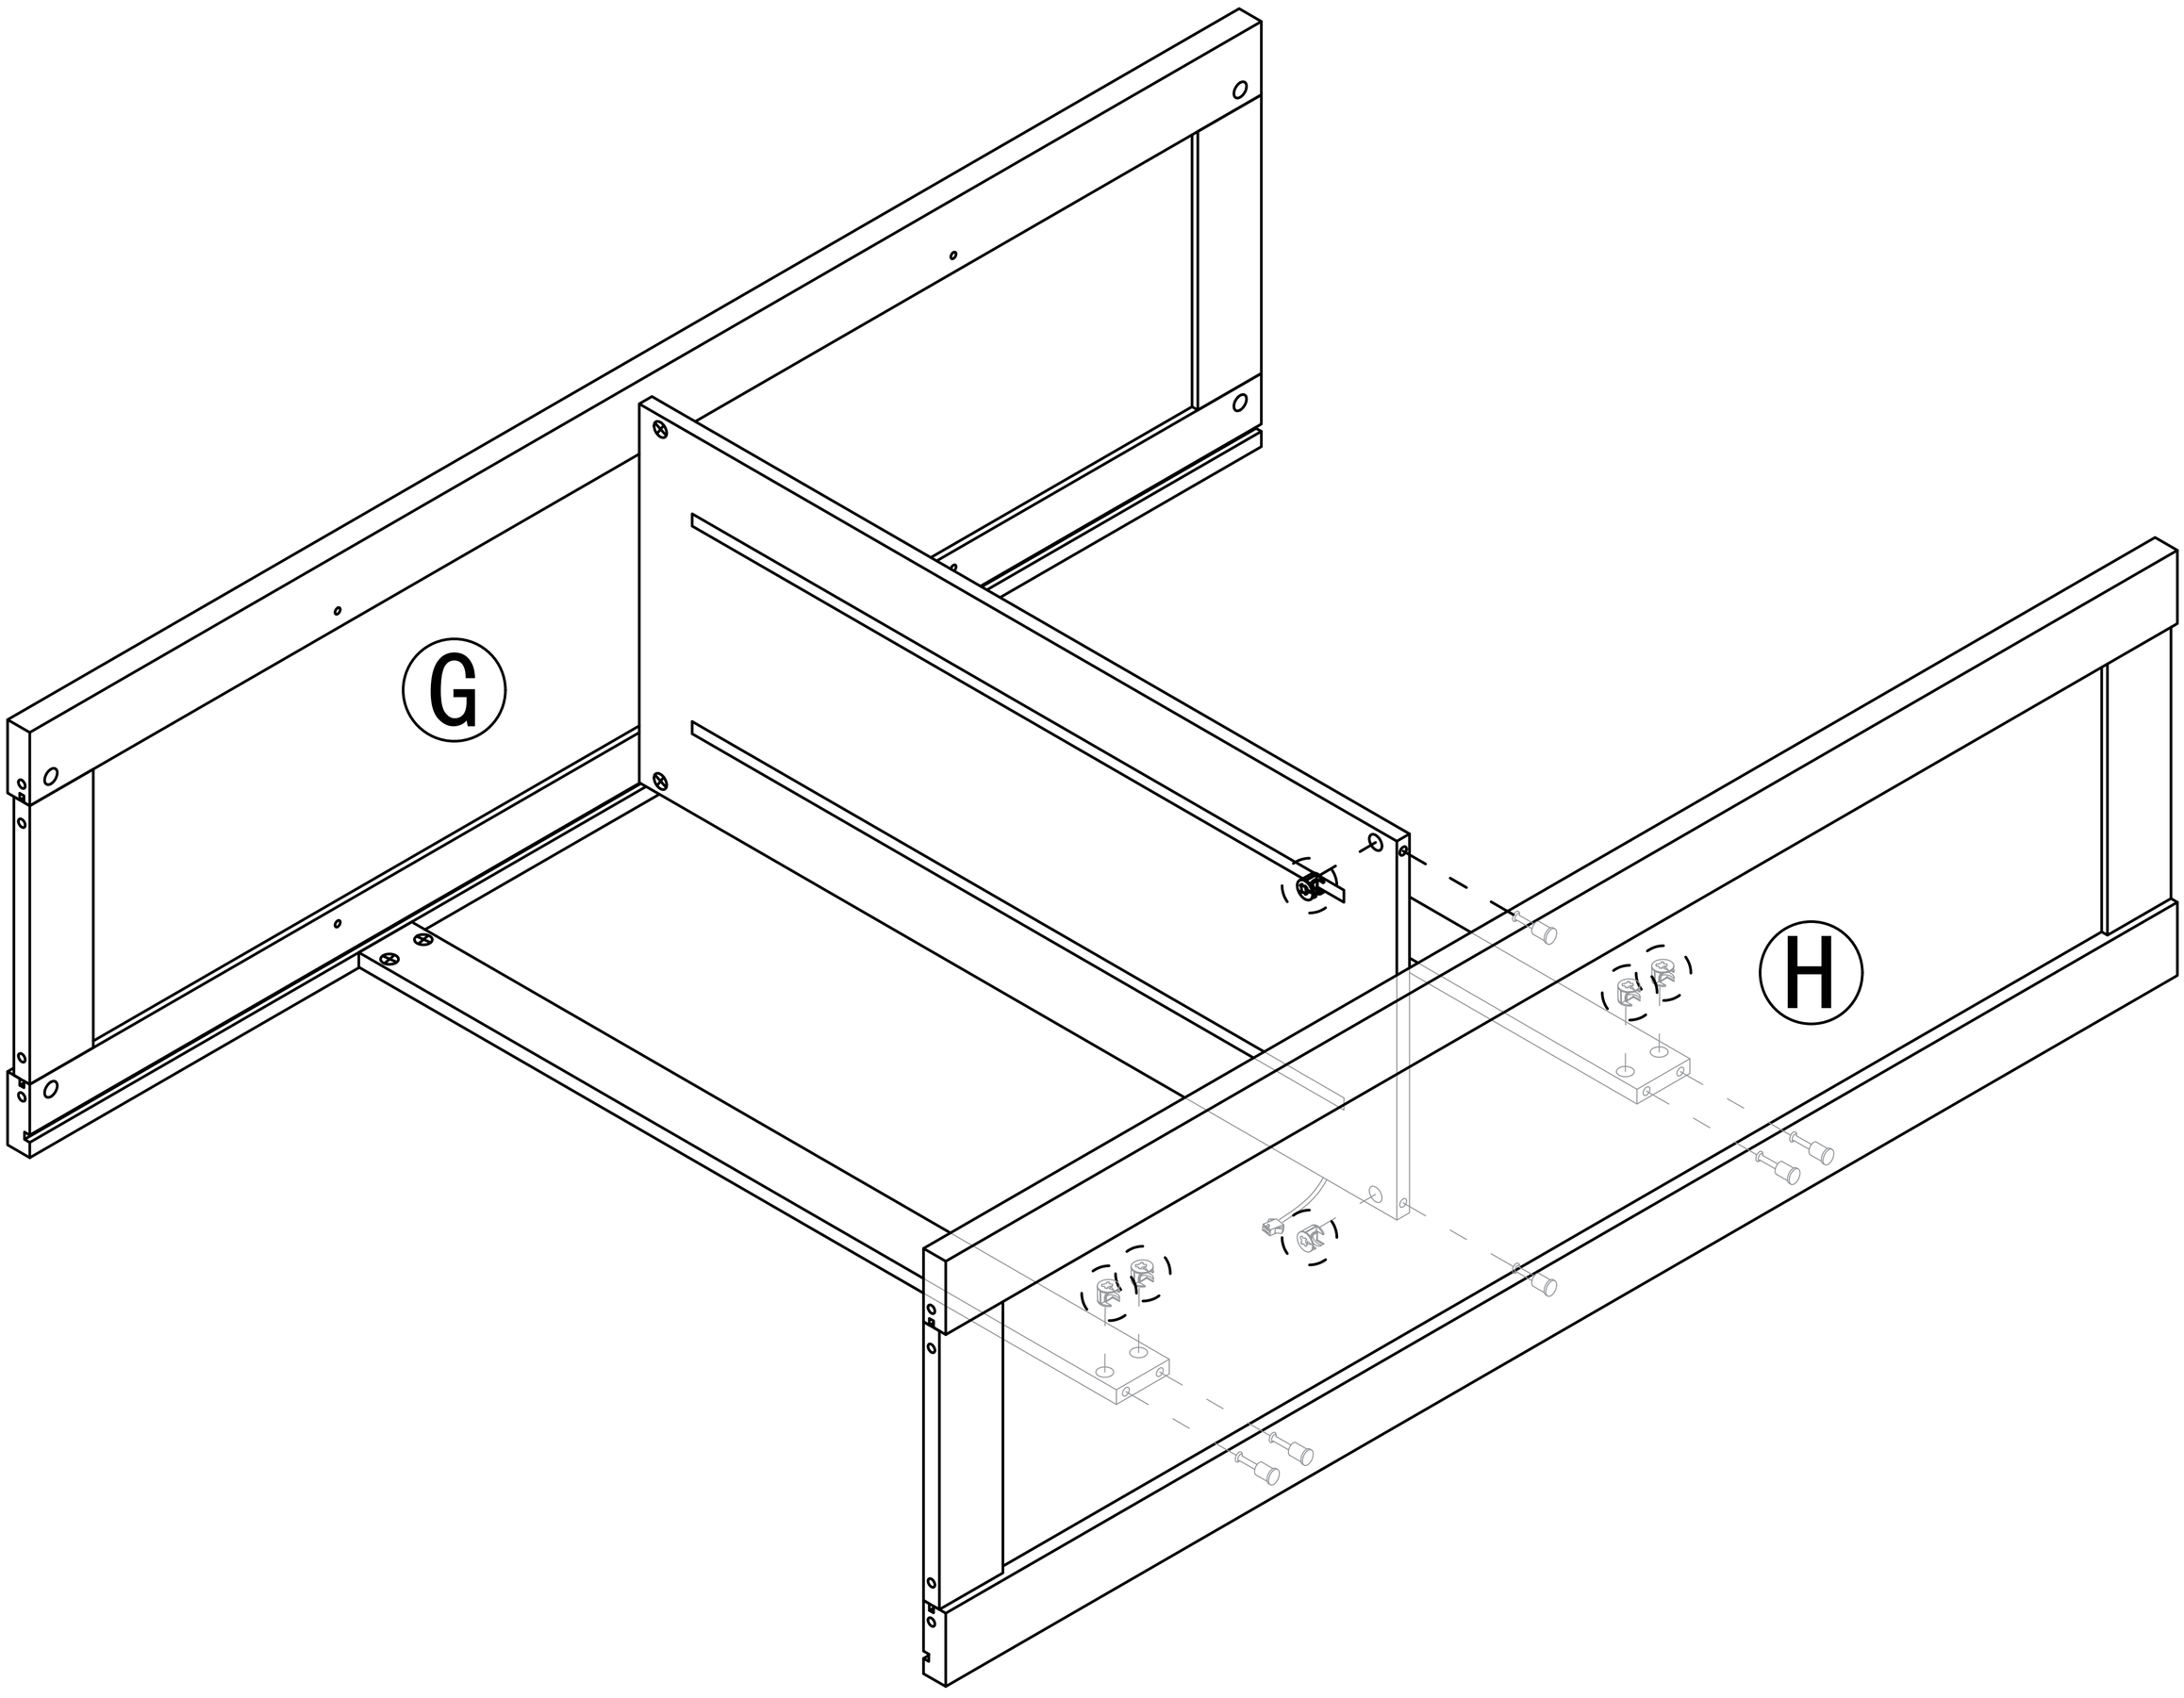



## Step 16

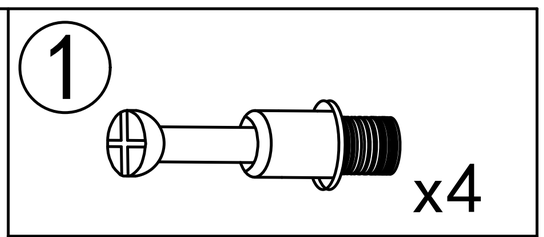

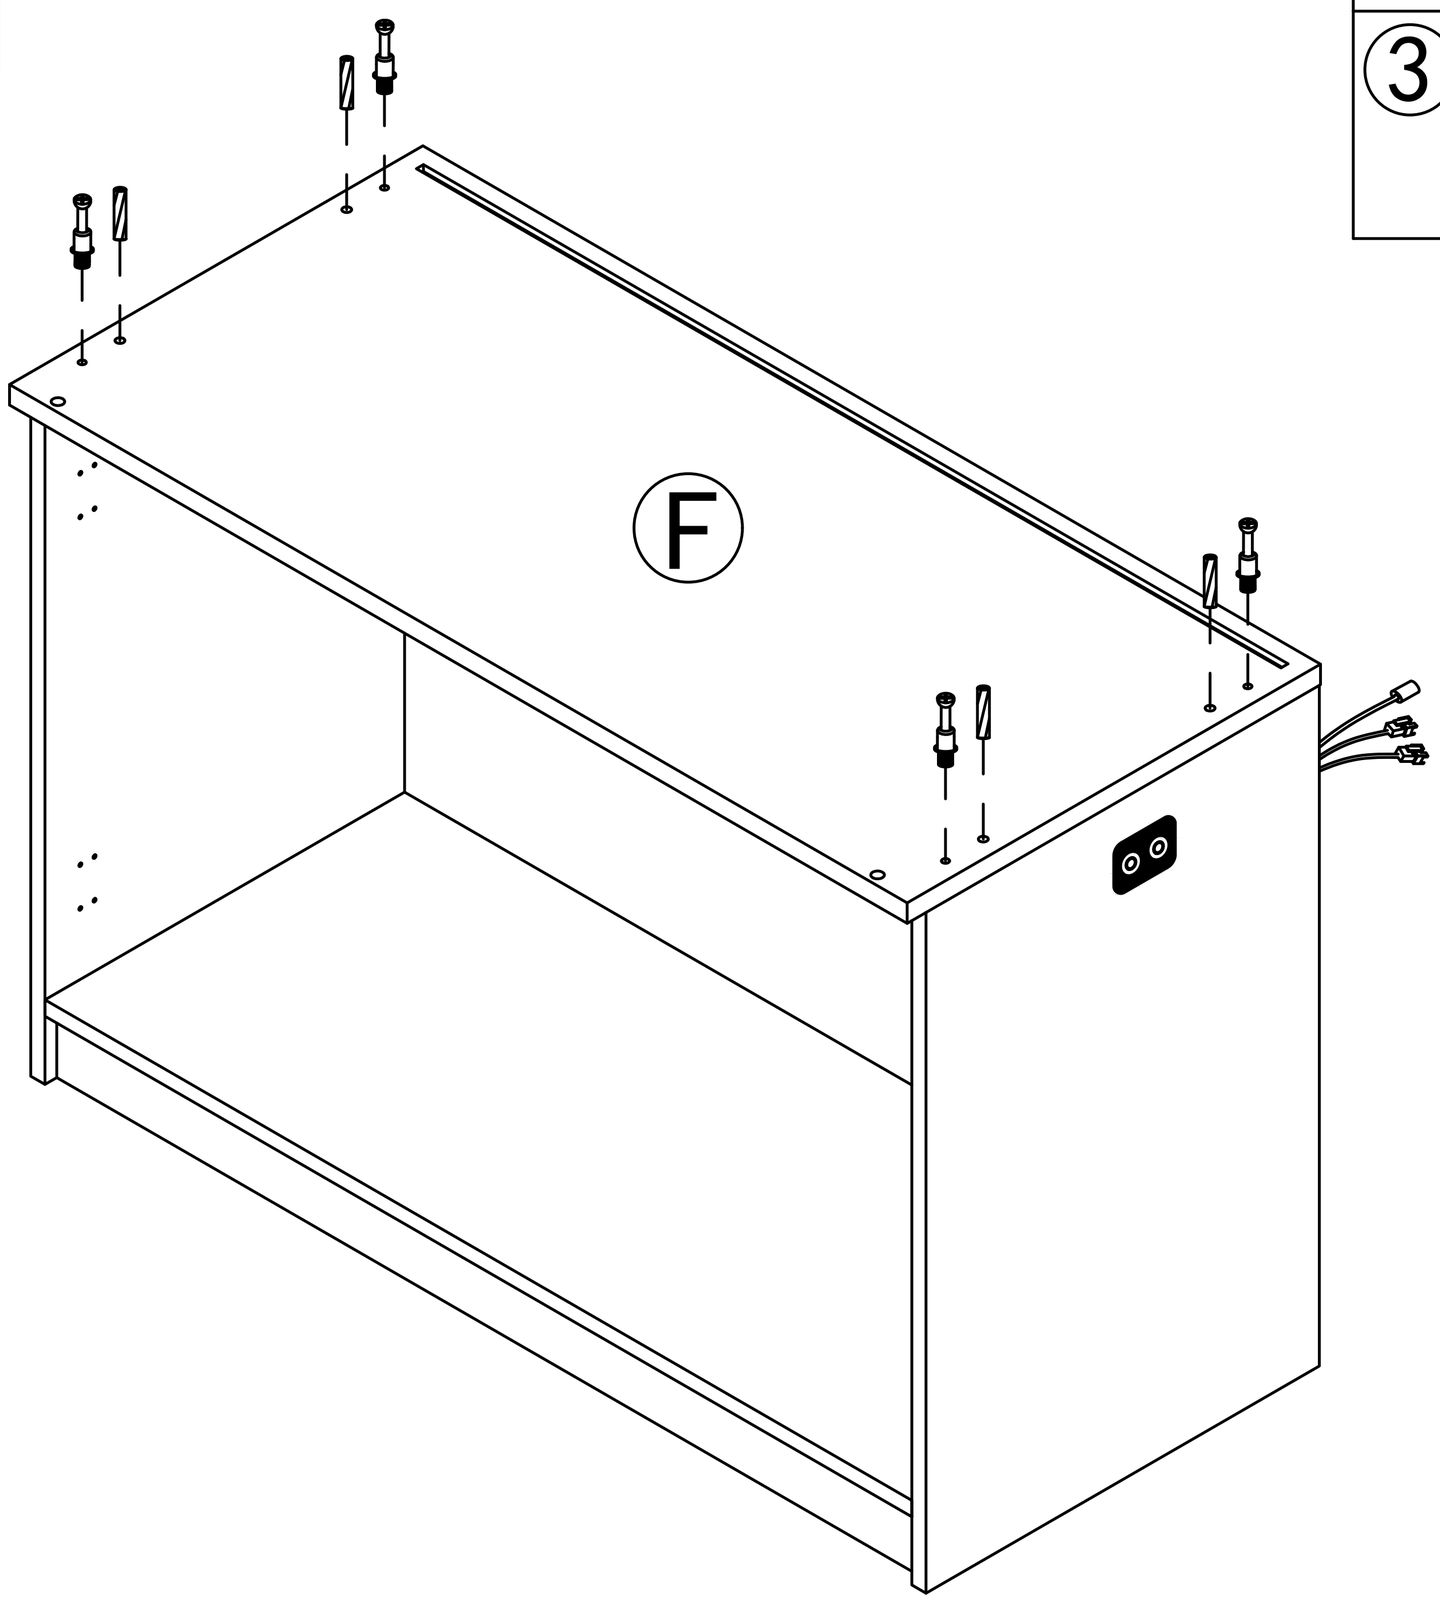

## Step 17

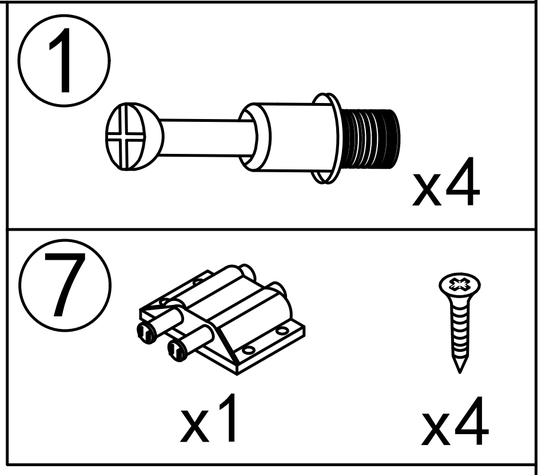


Step 18

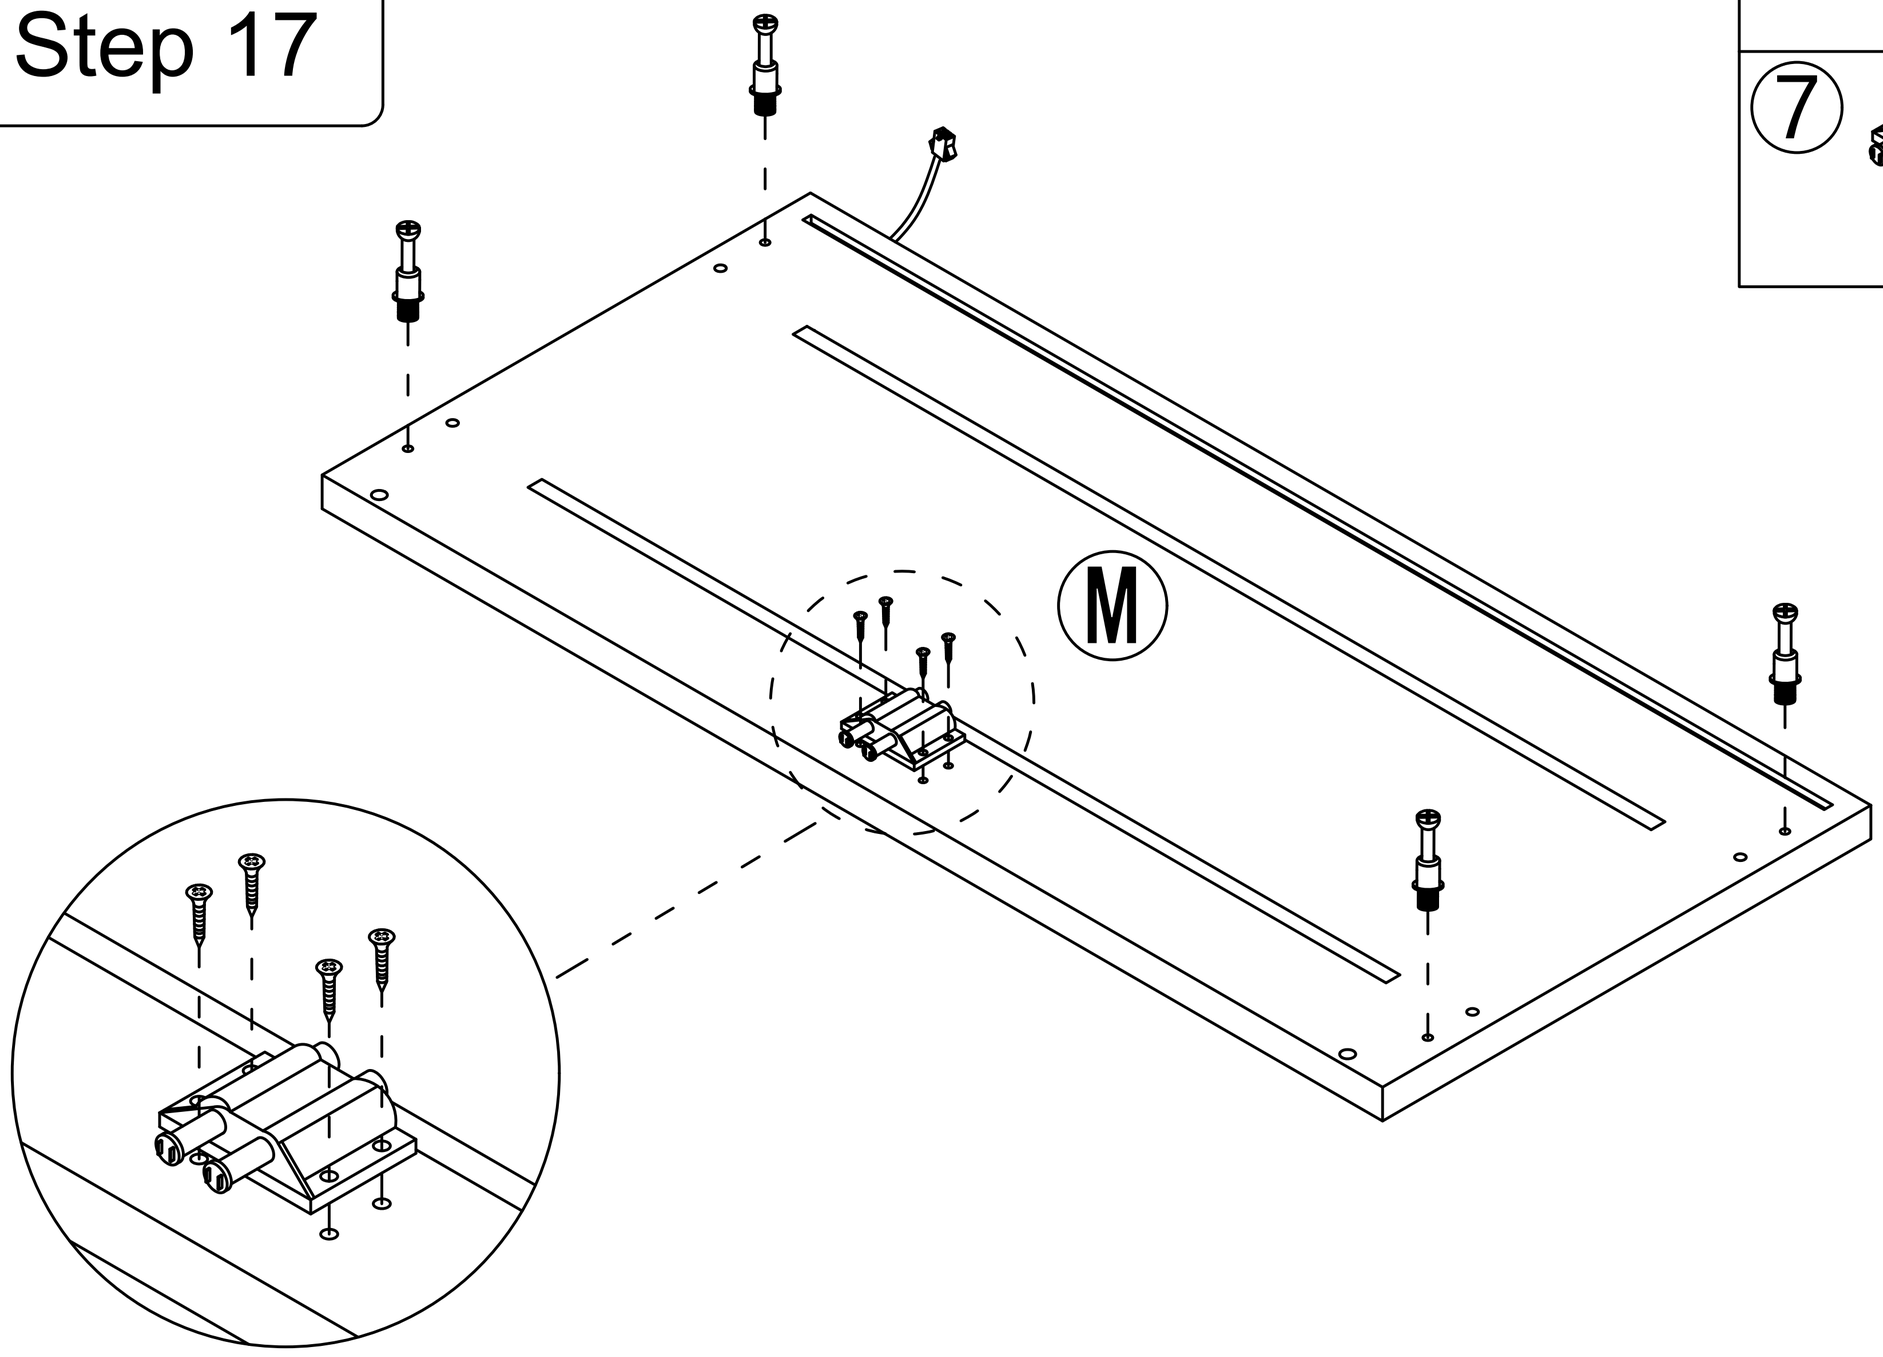2

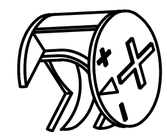



x4

It is recommended that two people work together to install the structural wood panels.

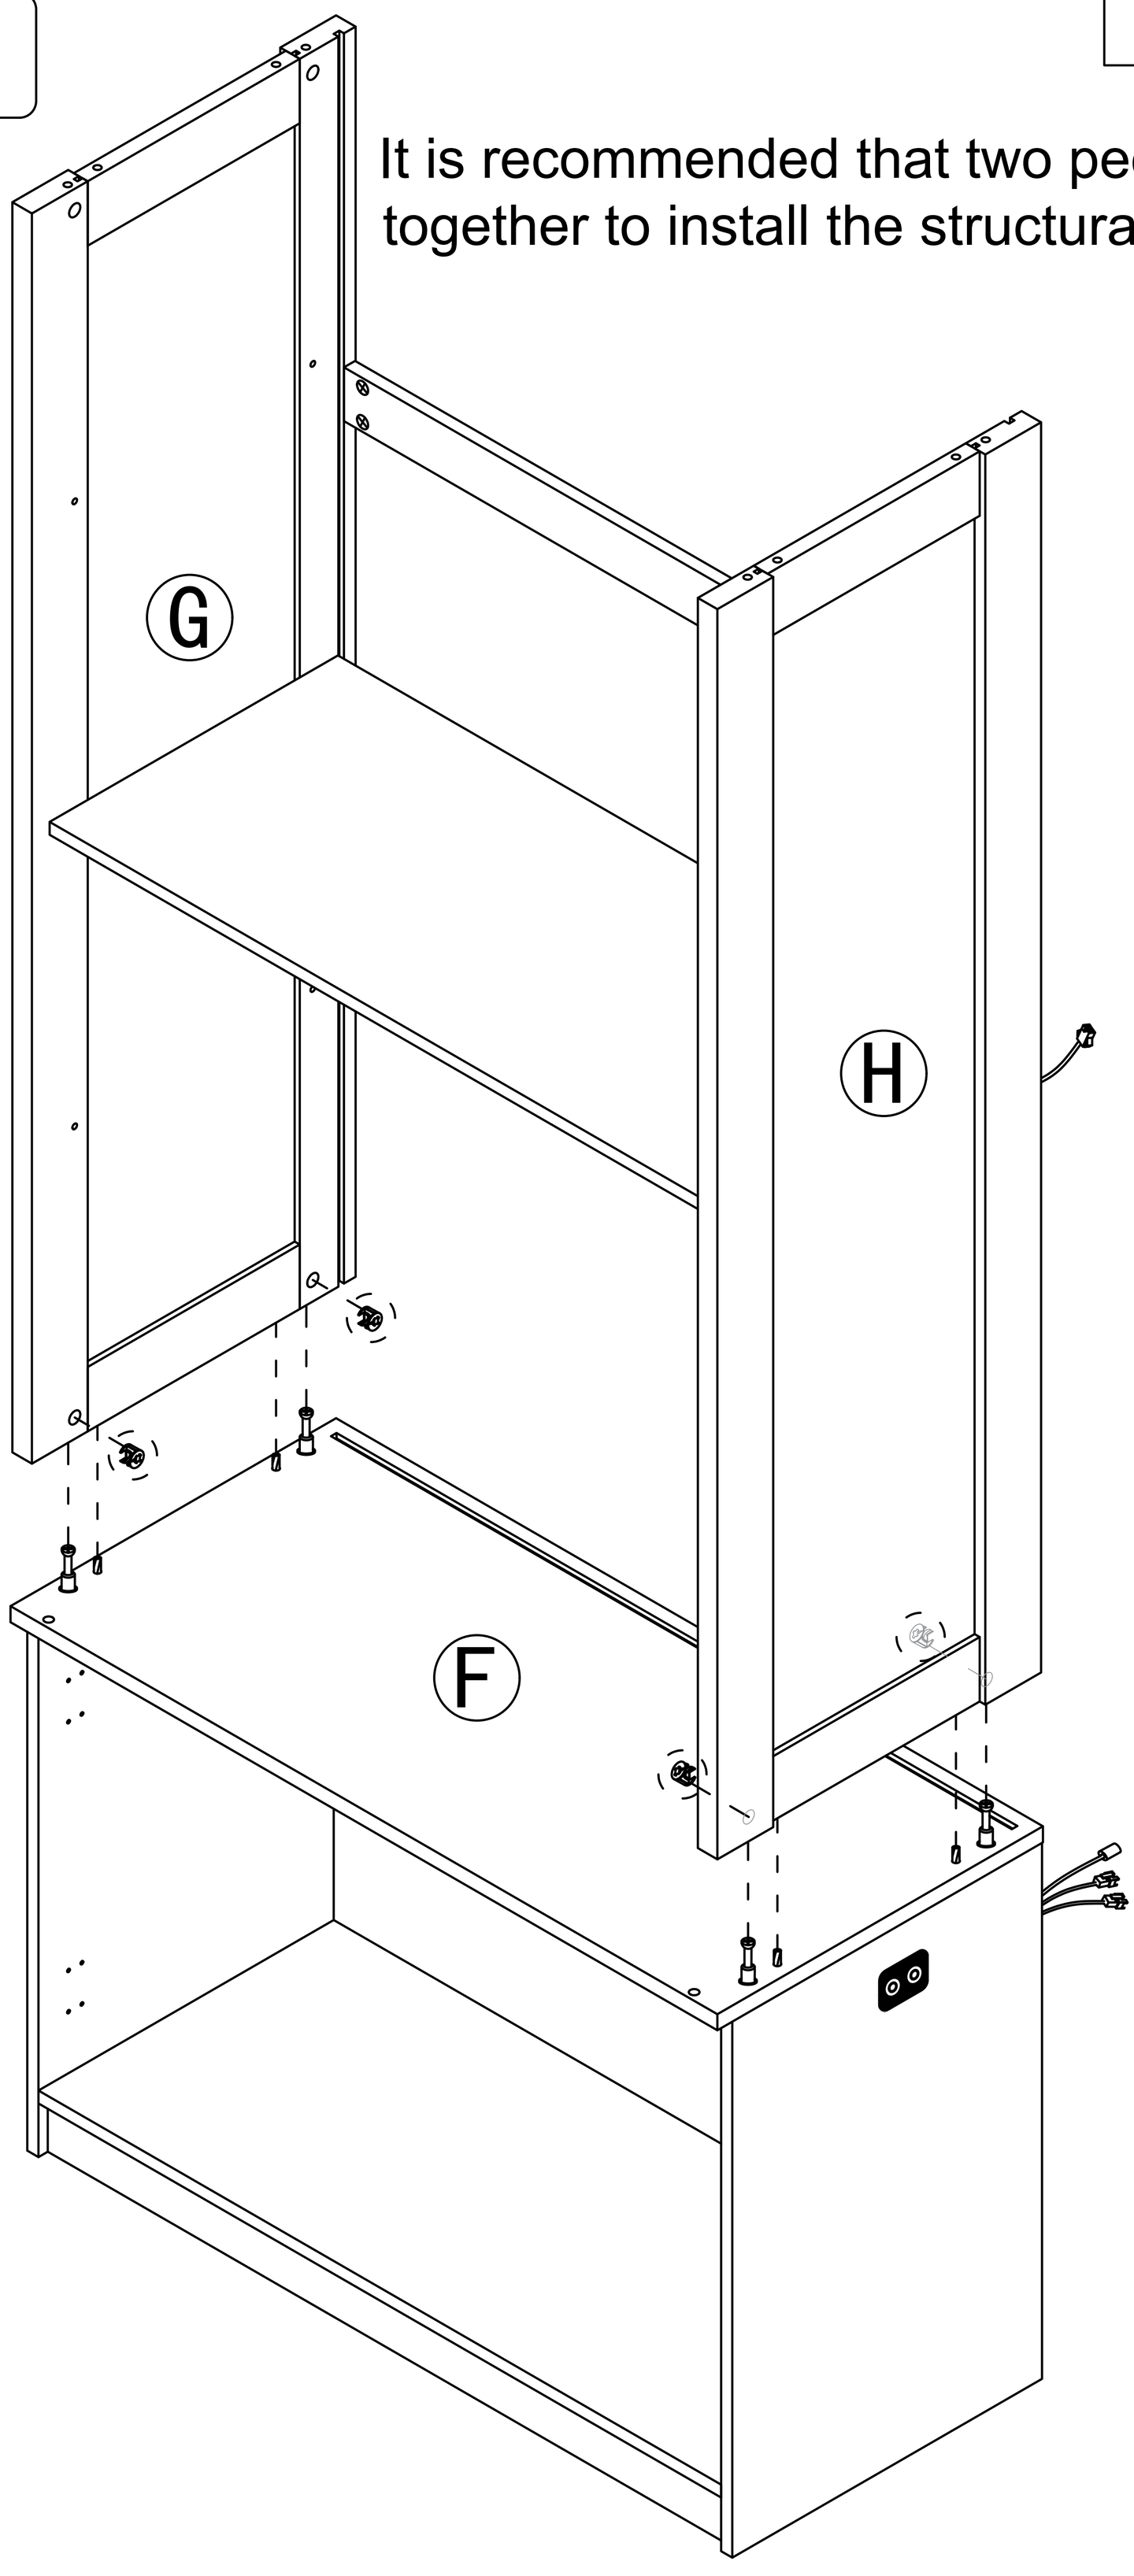



# Step 19

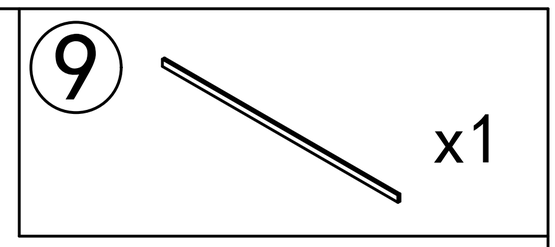

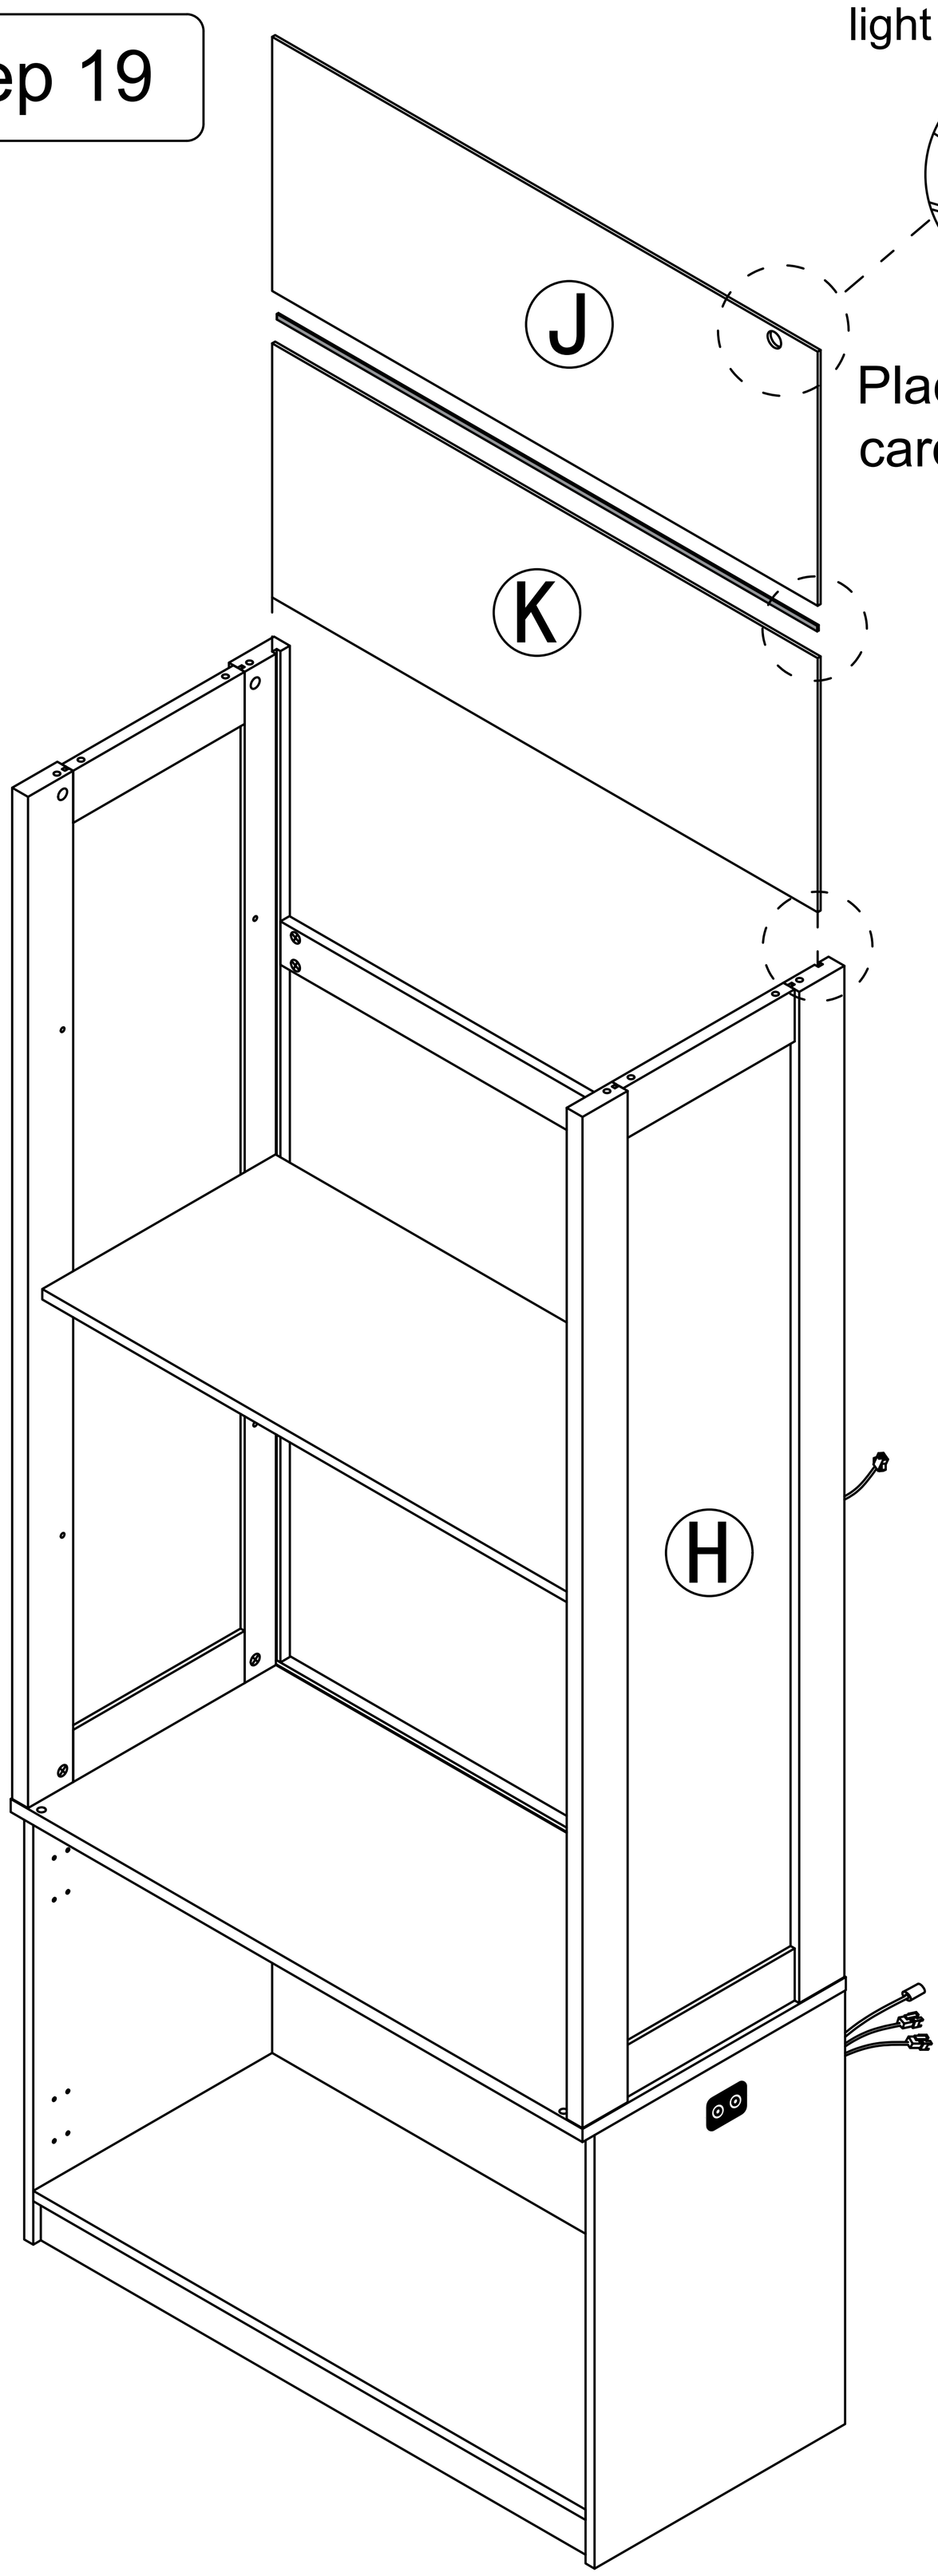



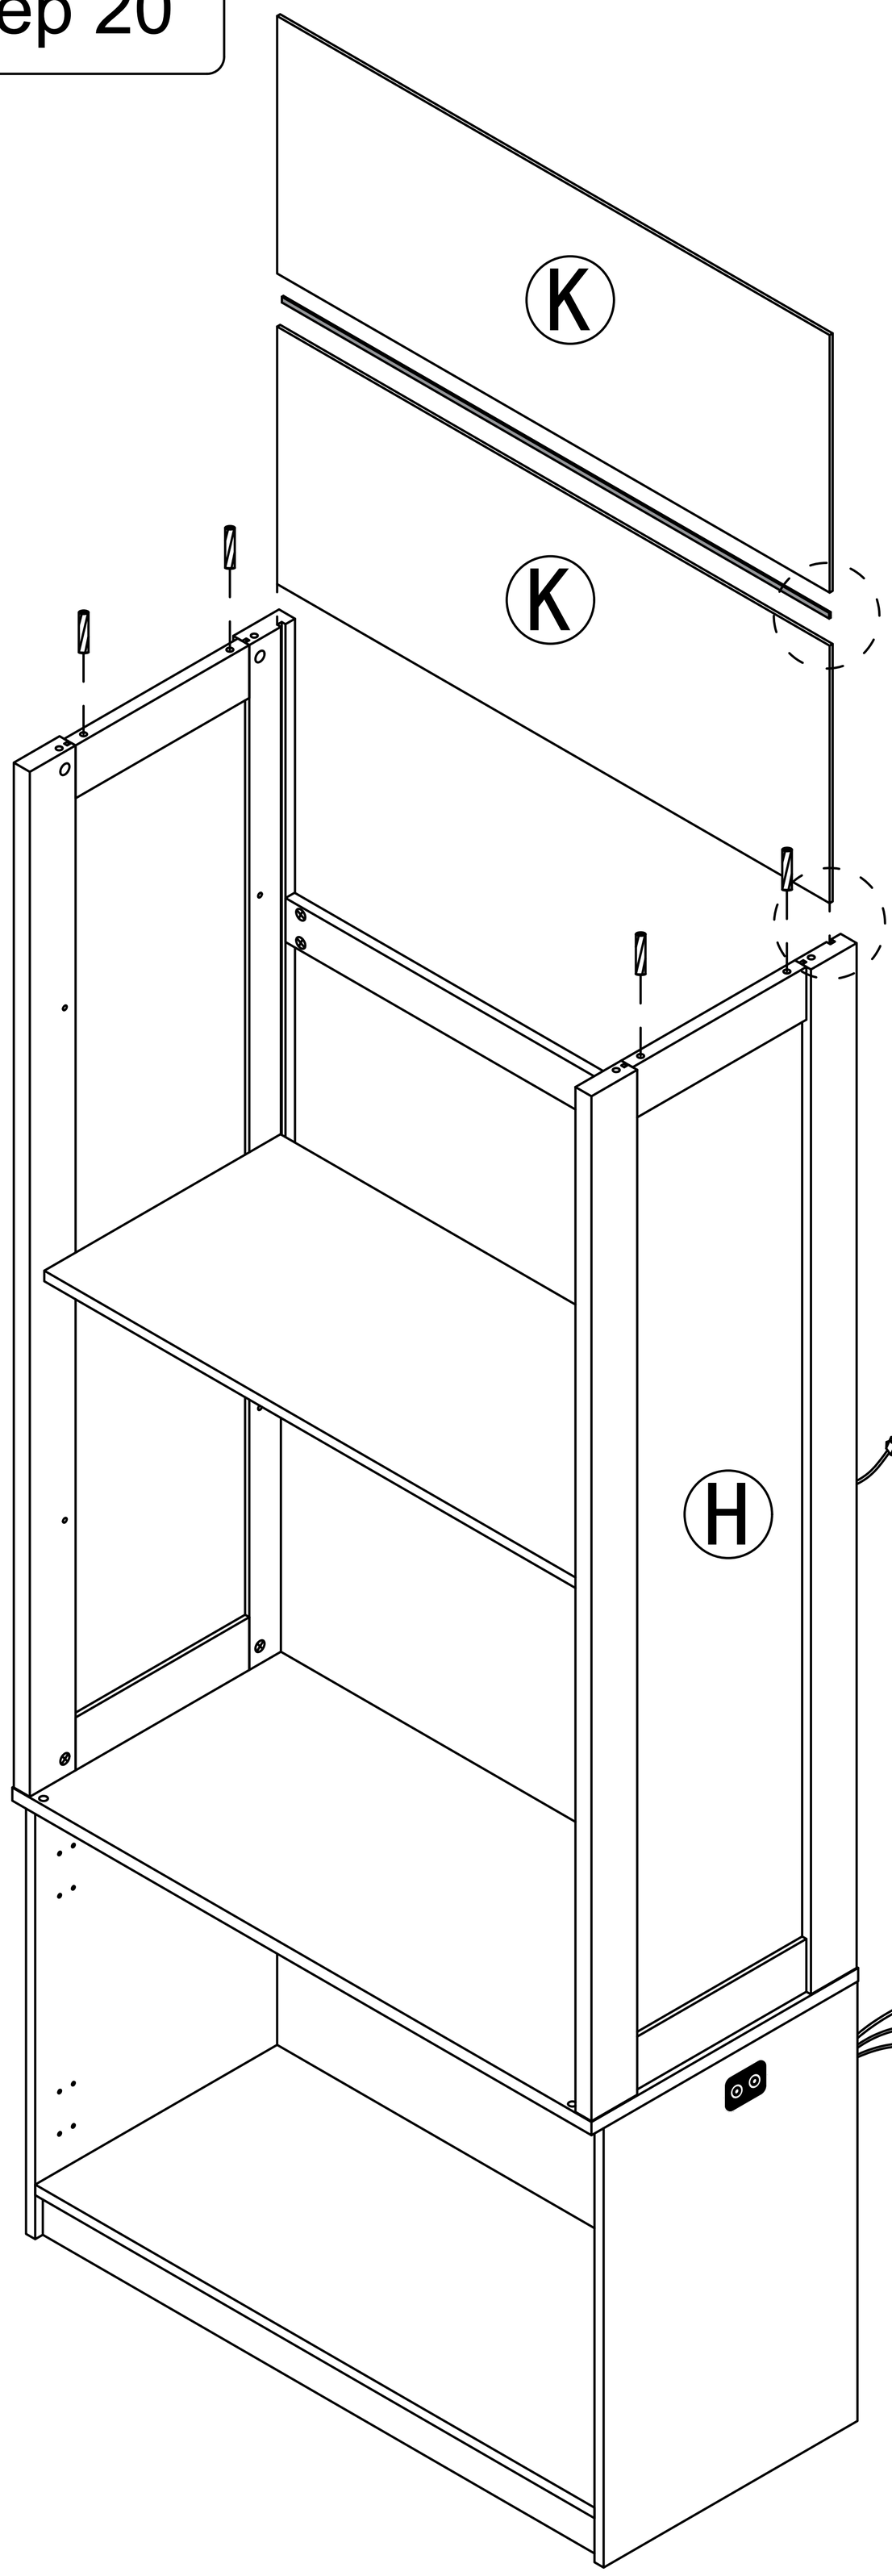

Place the "K" board, Backboard card strip, and "J" board in order

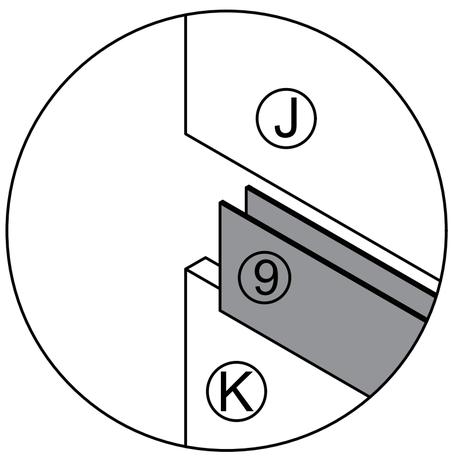

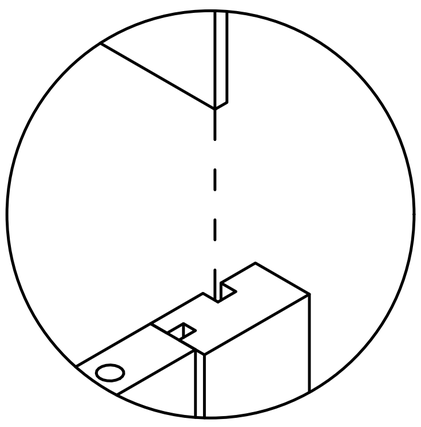



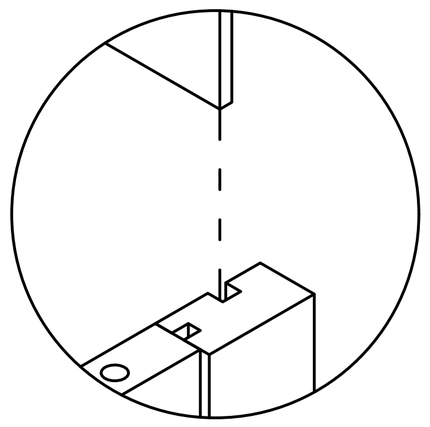
Step 20

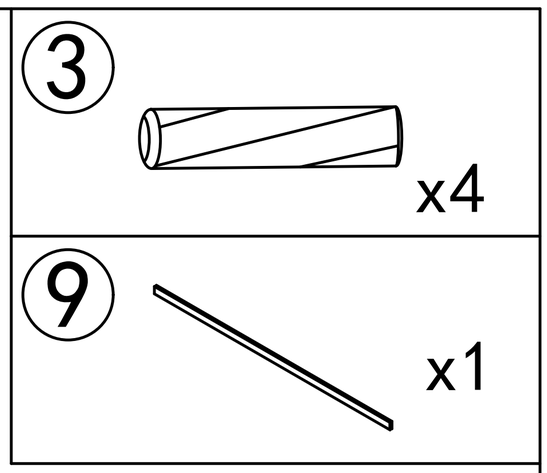



Place the "Q" board, Backboard card strip, and "Q" board in order



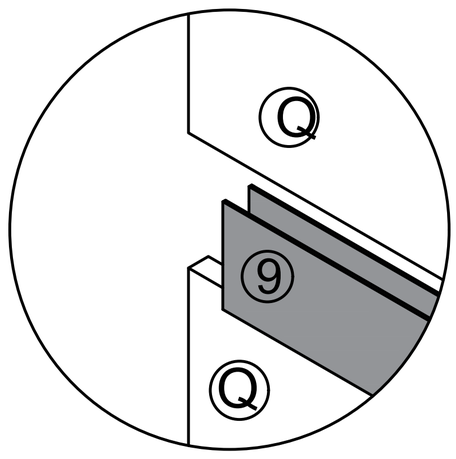



# Step 21


2

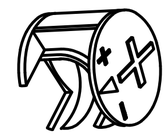



x4

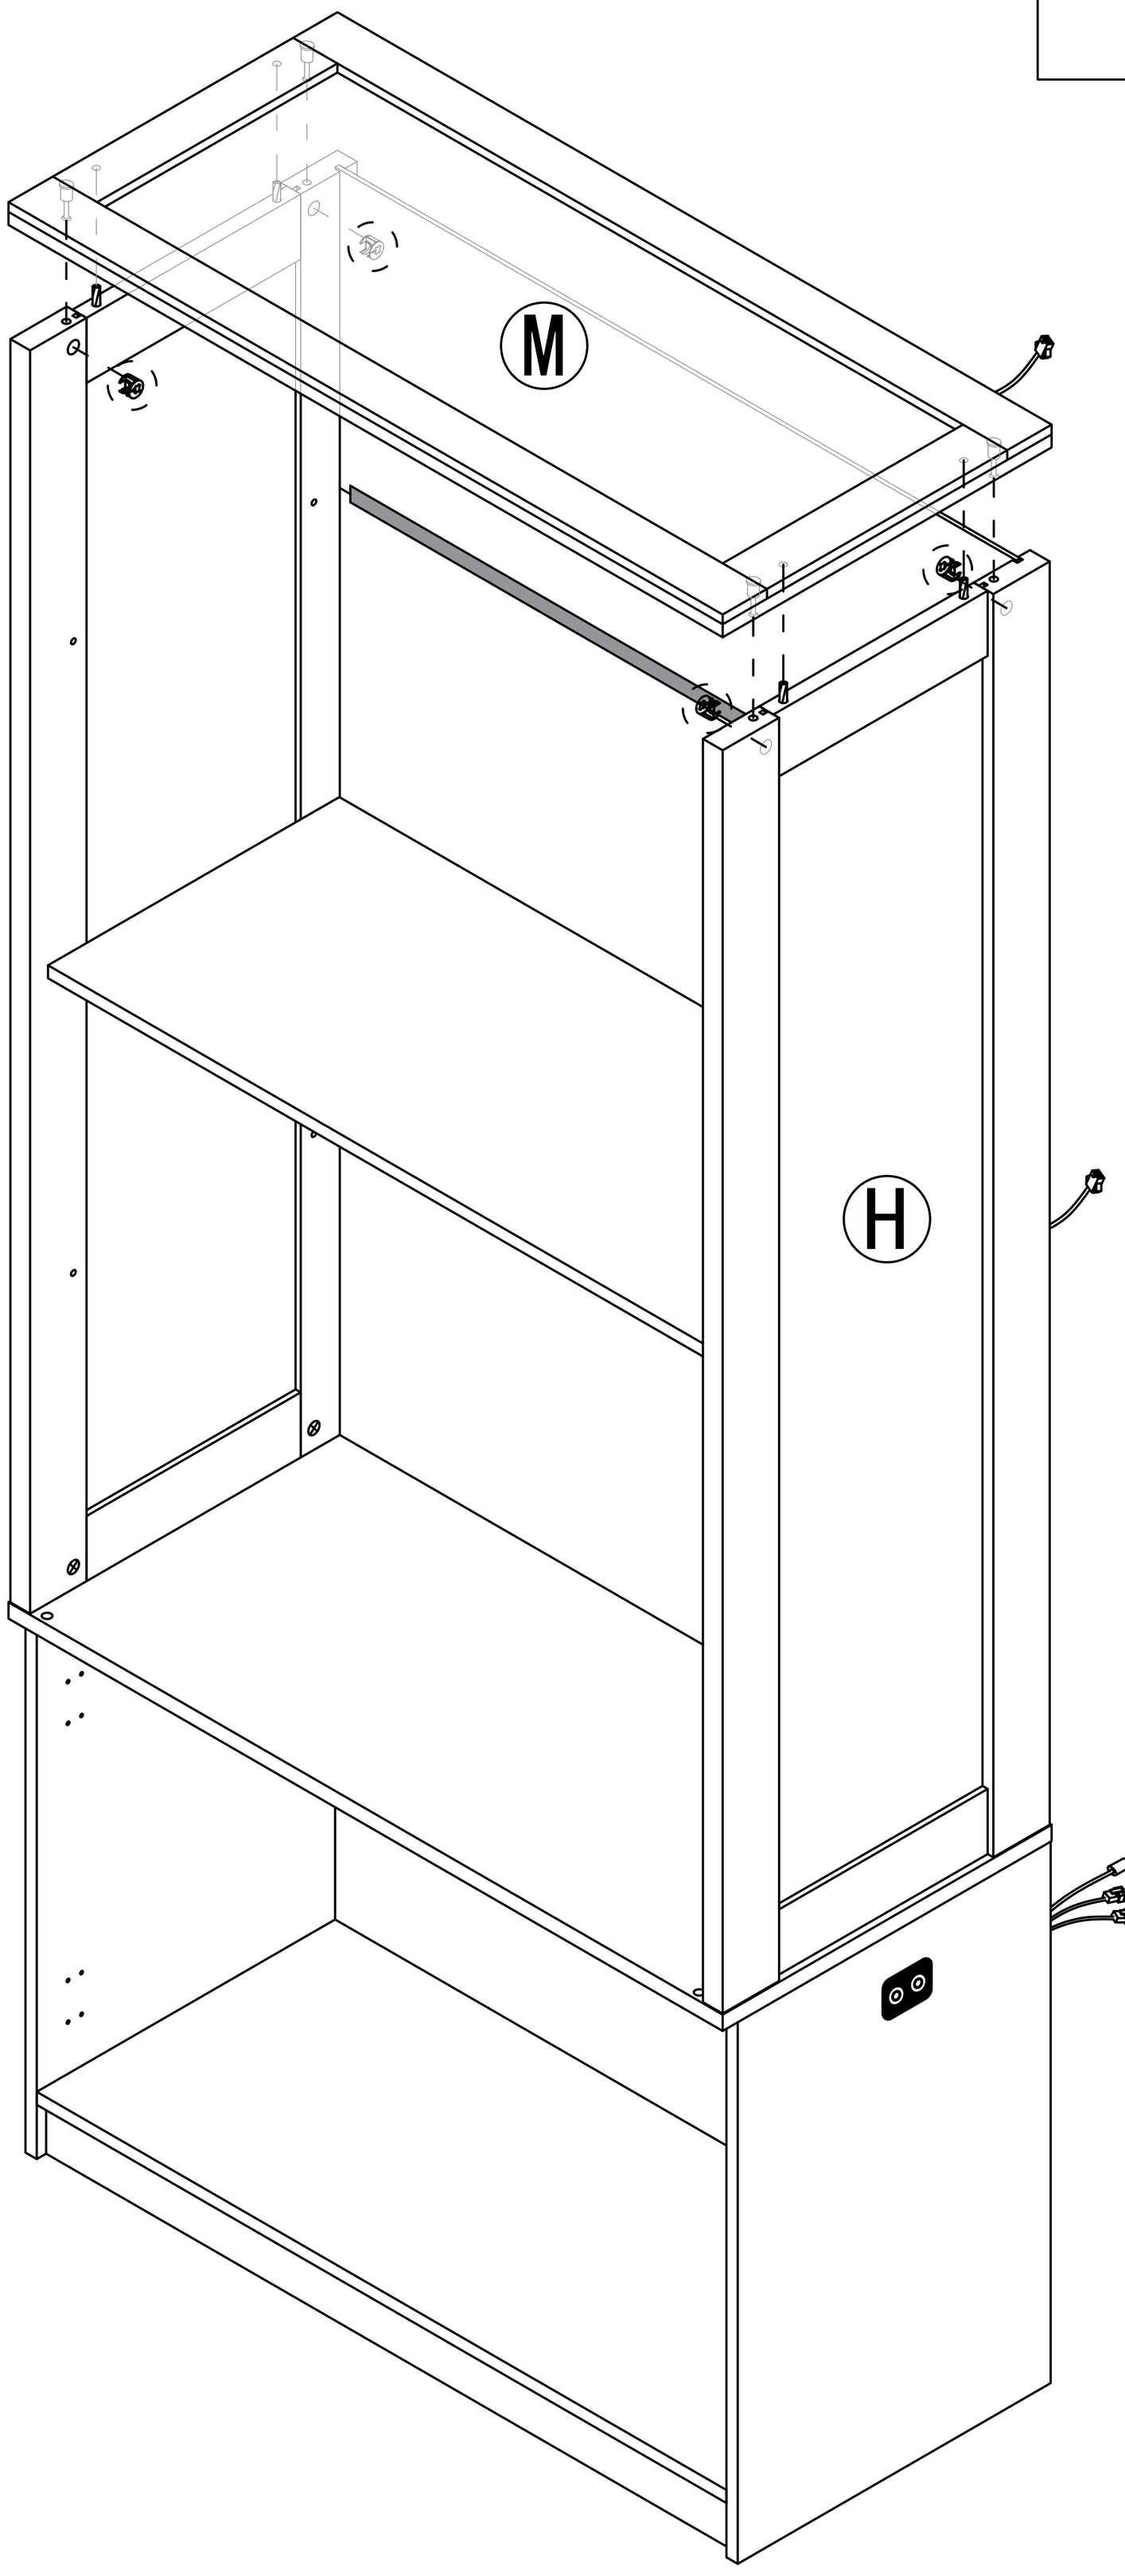

# Step 22

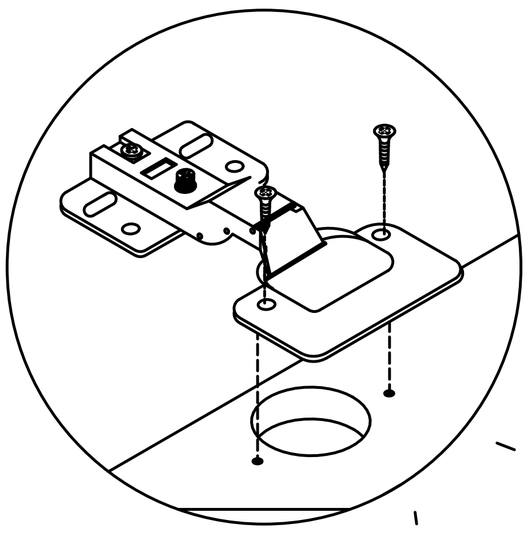

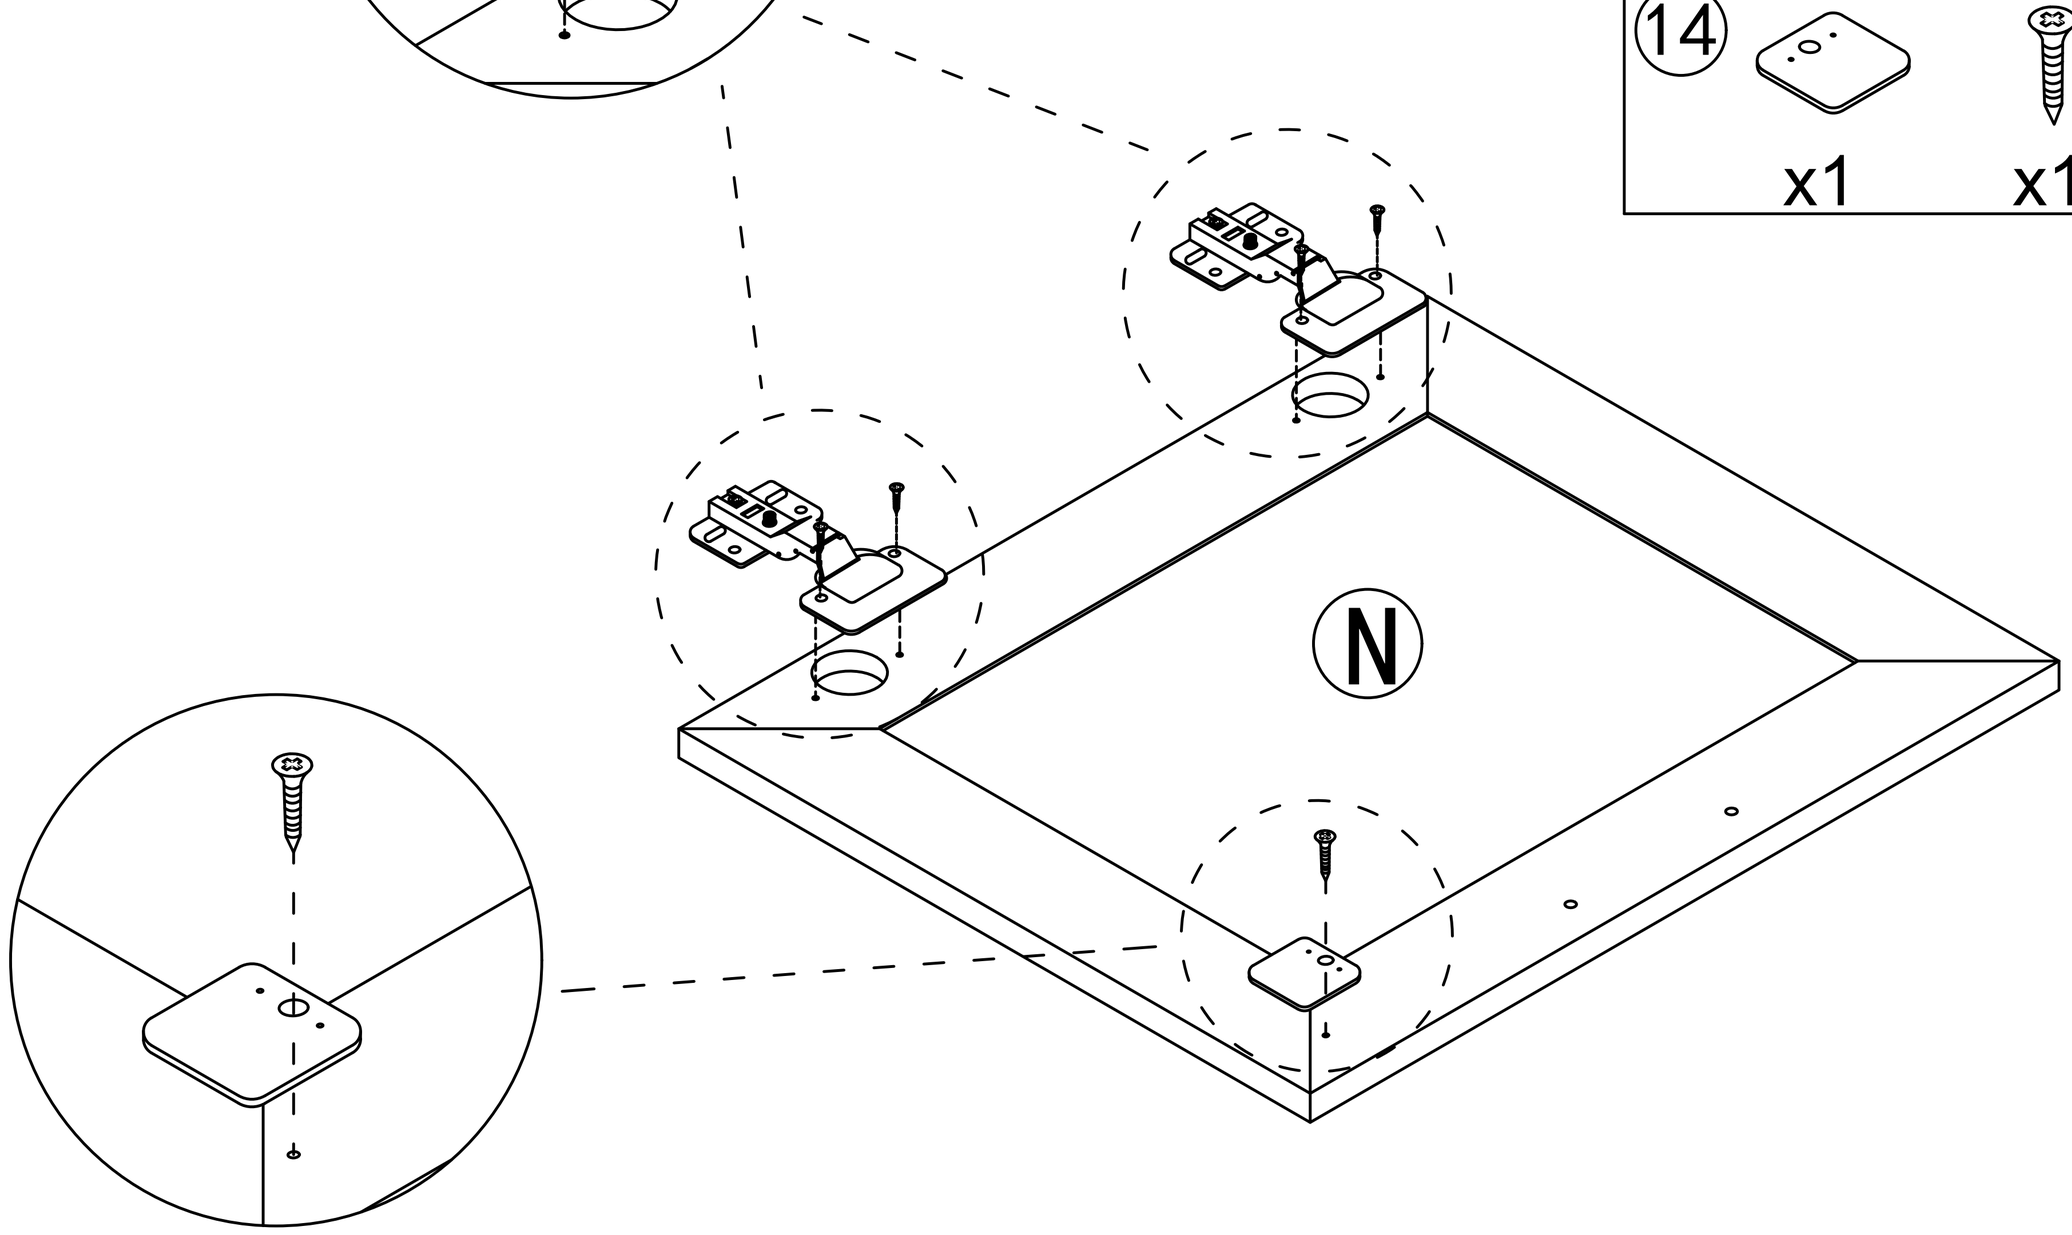




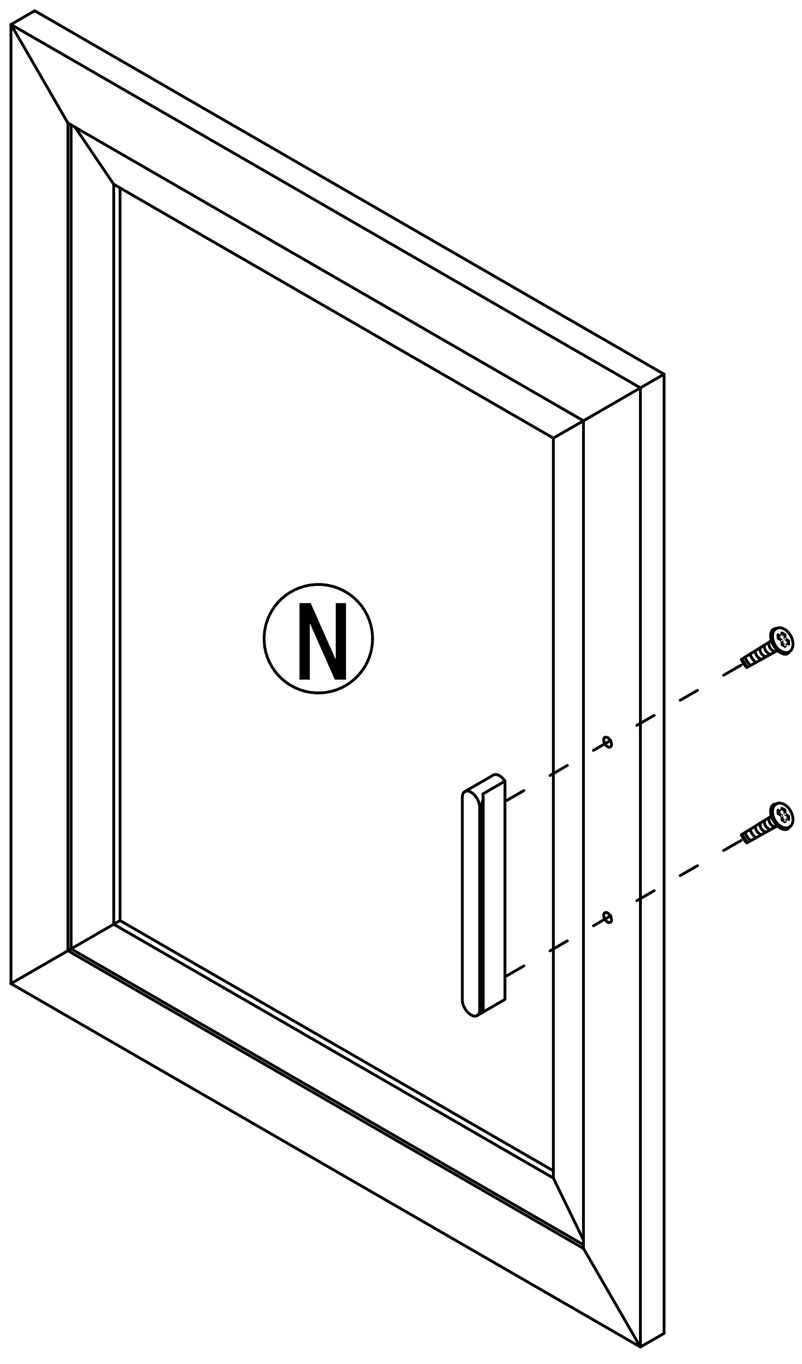




4 x2 x4


5 x1 x2

14 x1 x1

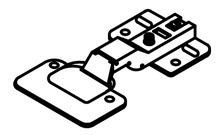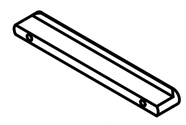
# Step 23

| | | |
|---|---|---|
| 4 |  |  |
| | x2 | x4 |
| 5 |  |  |
| | x1 | x2 |
| 14 |  |  |
| | x1 | x1 |

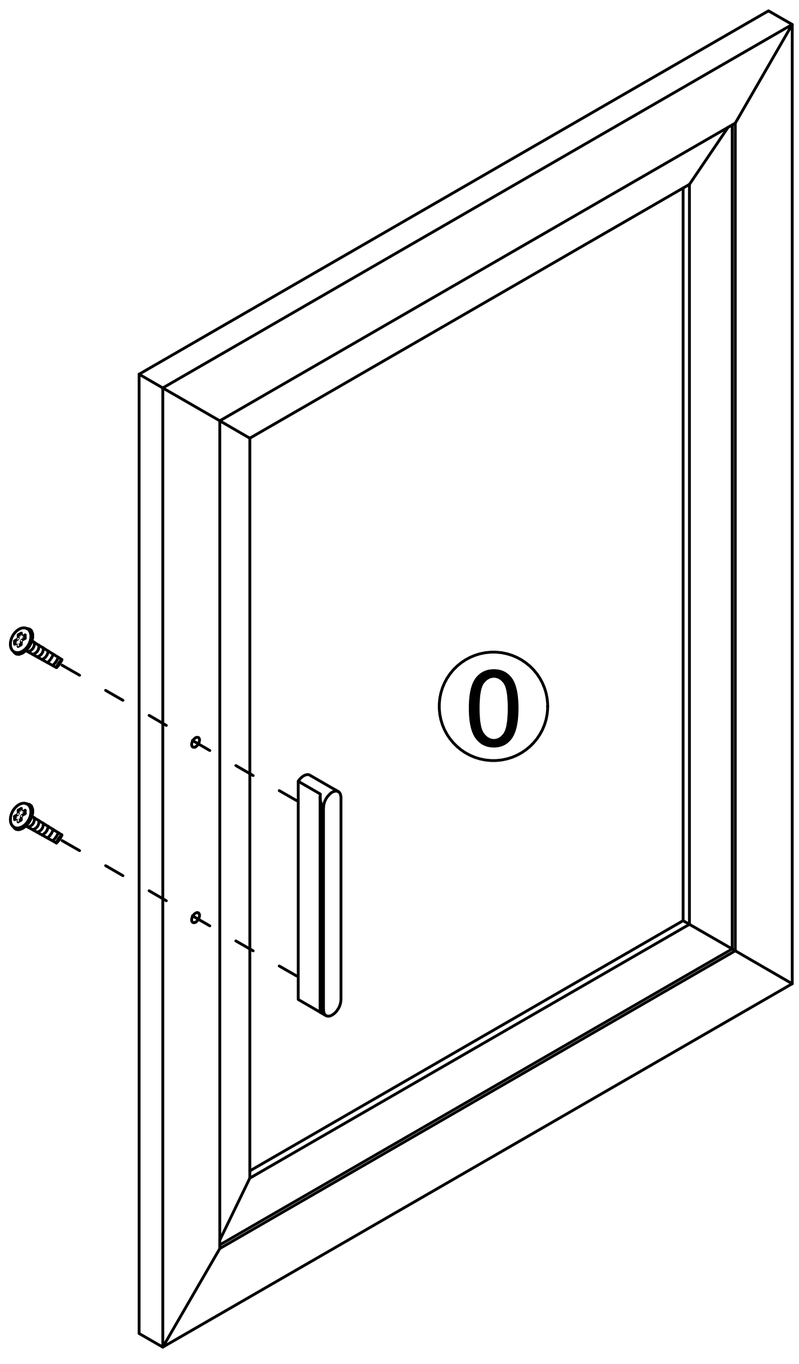


Step 24

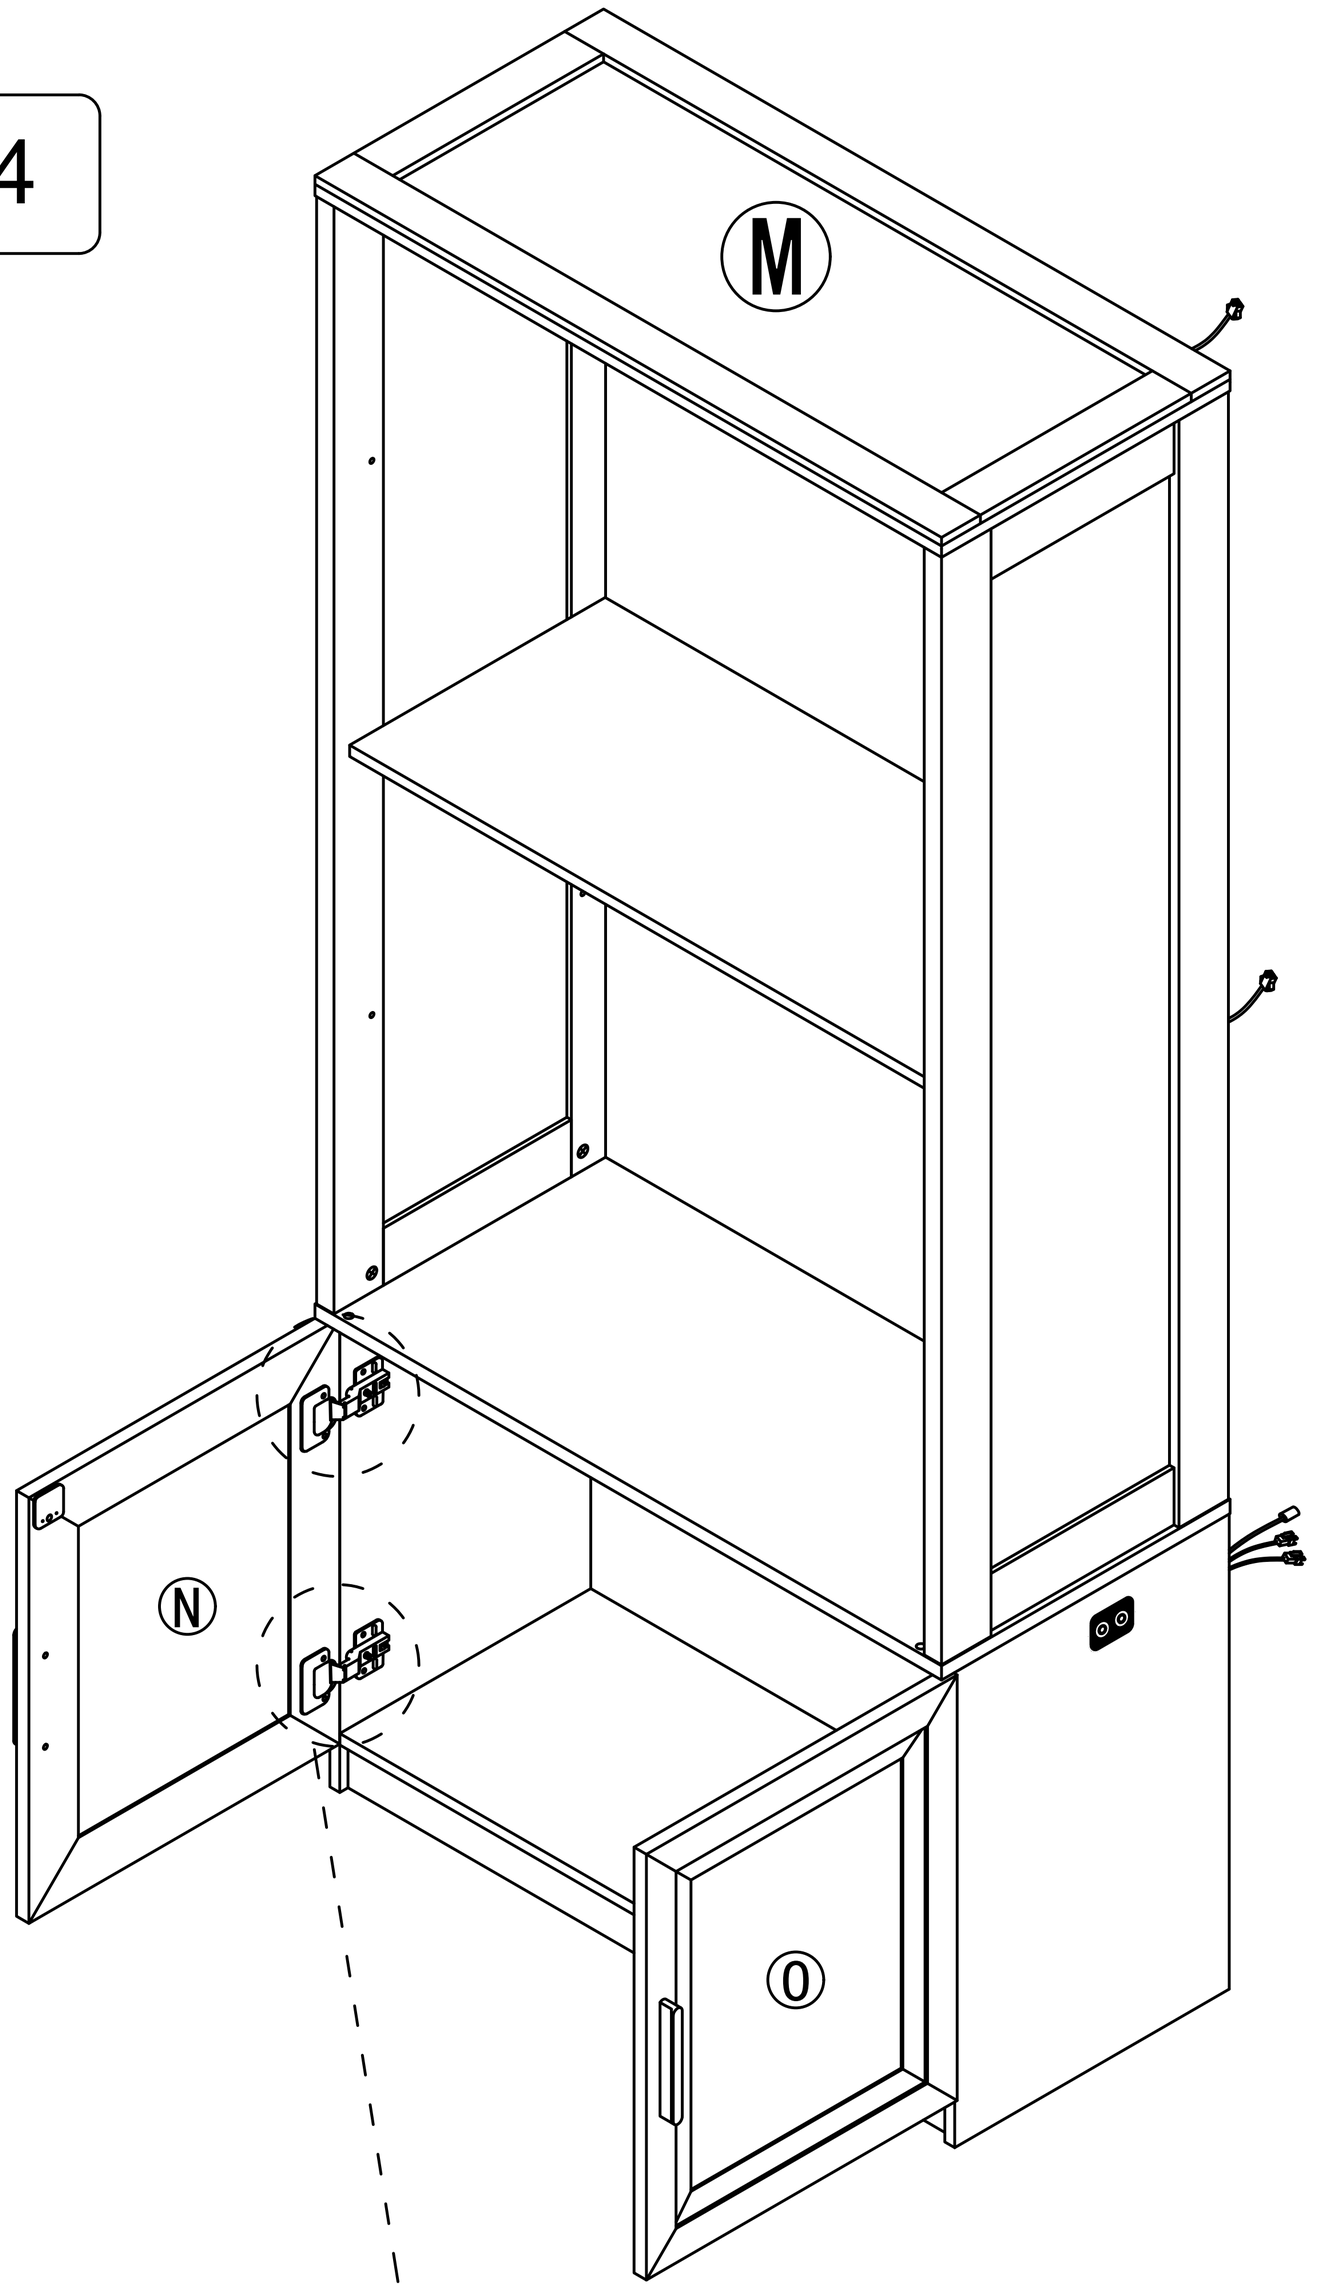



Turning this screw can effectively adjust the size of the door gap.

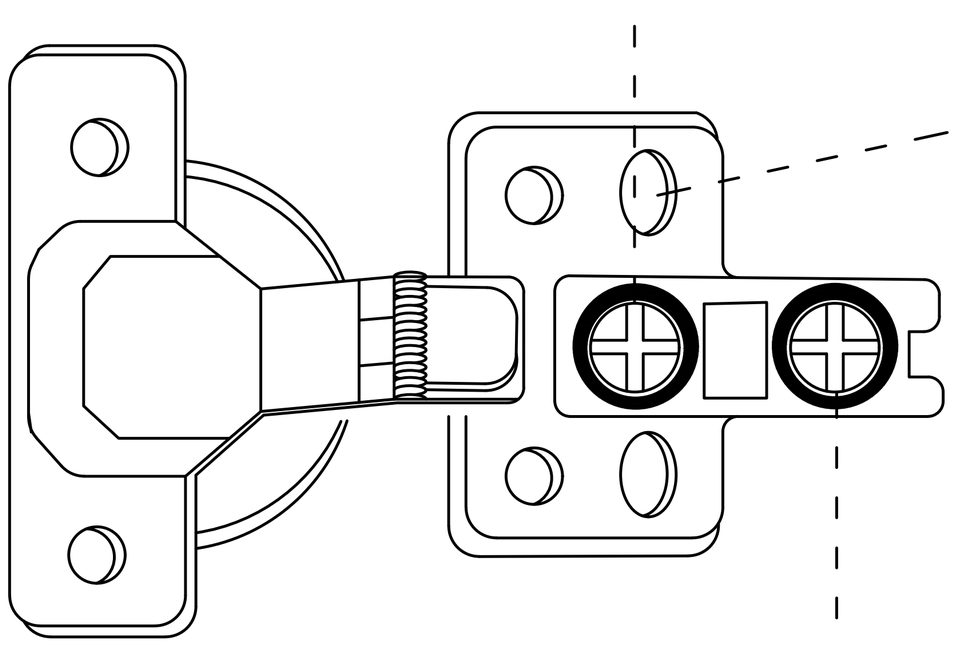



Adiust hole control the up and down height of the door

Turn this screw to adjust the door panel to be flat with the side panel.

Step 25

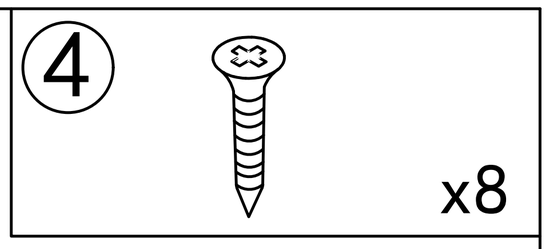

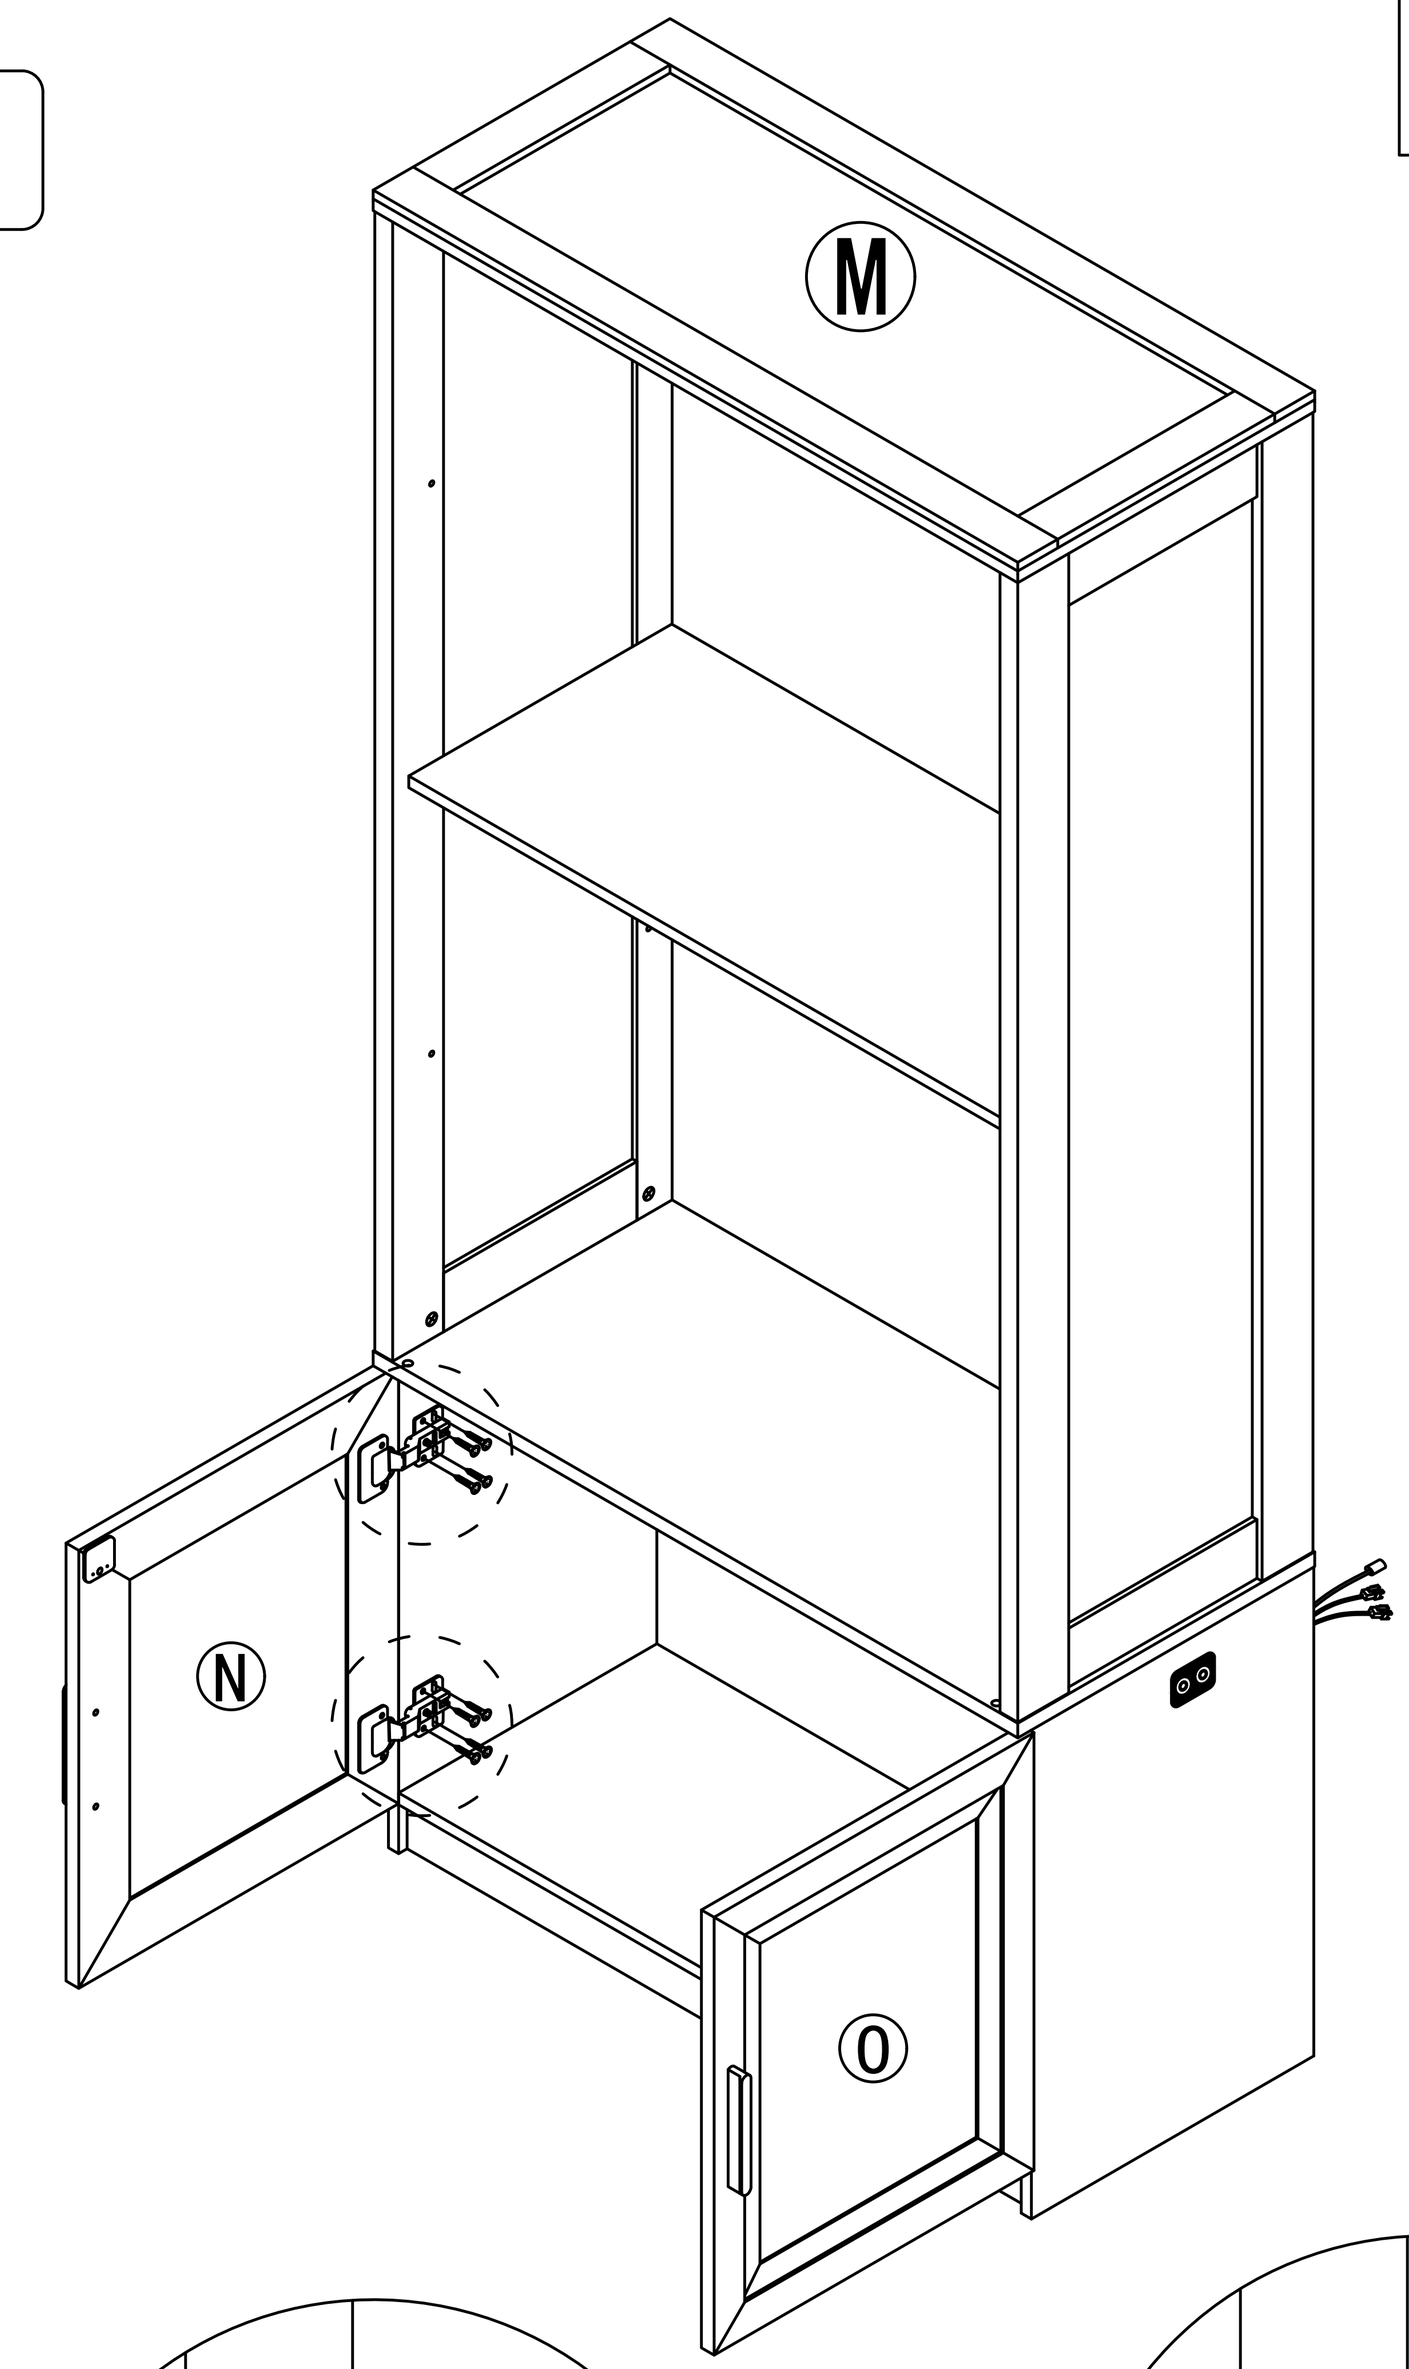


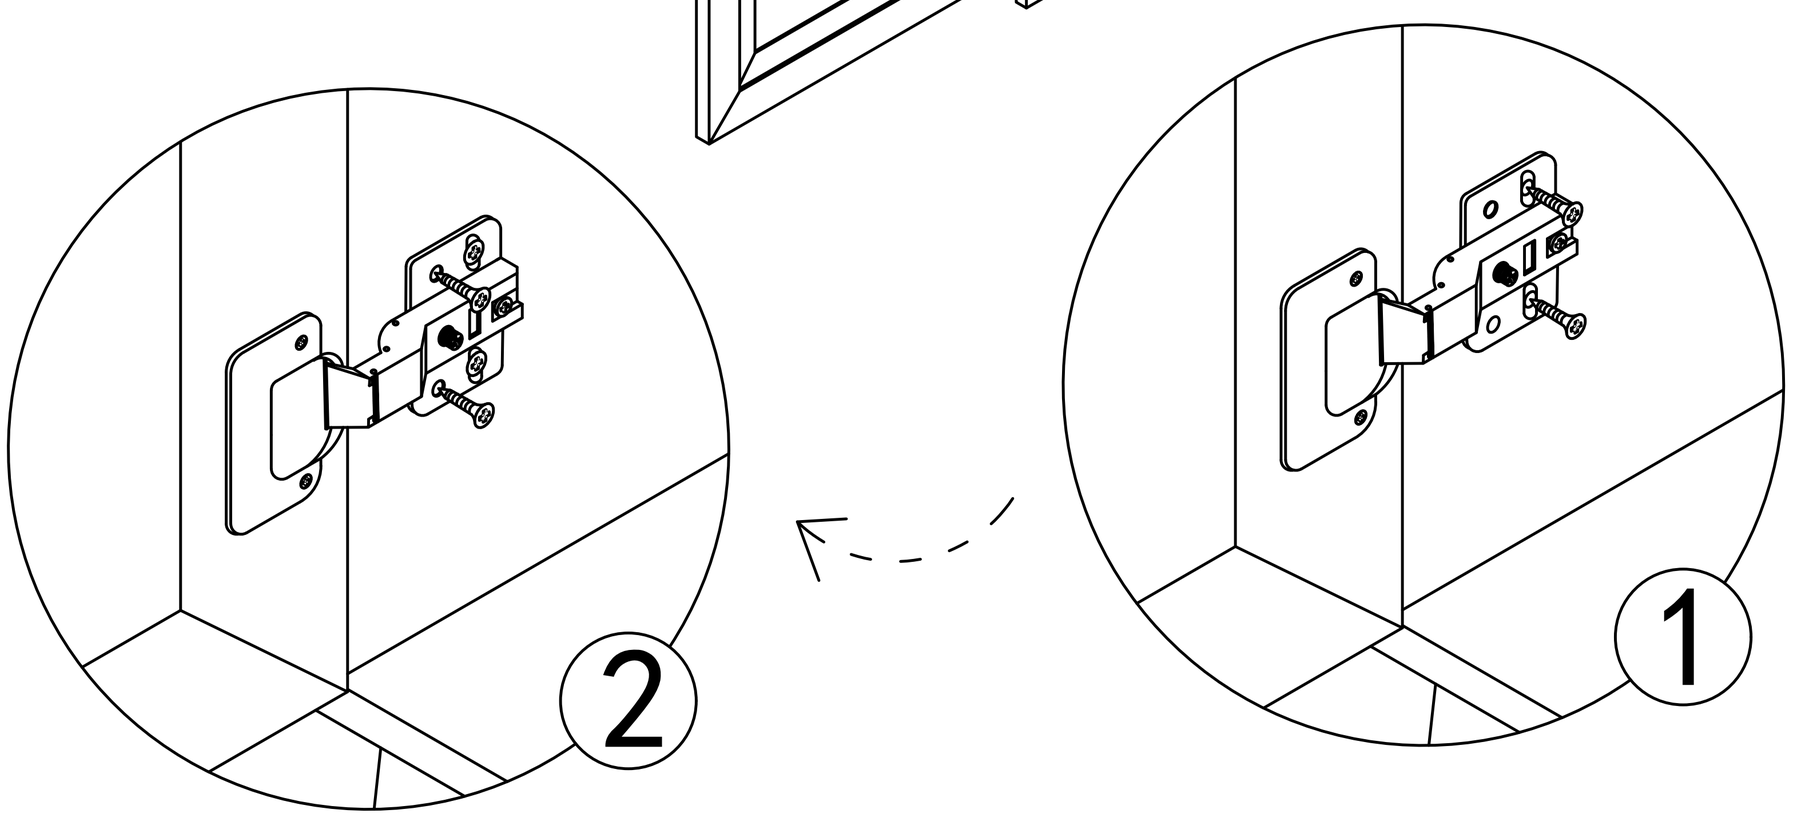
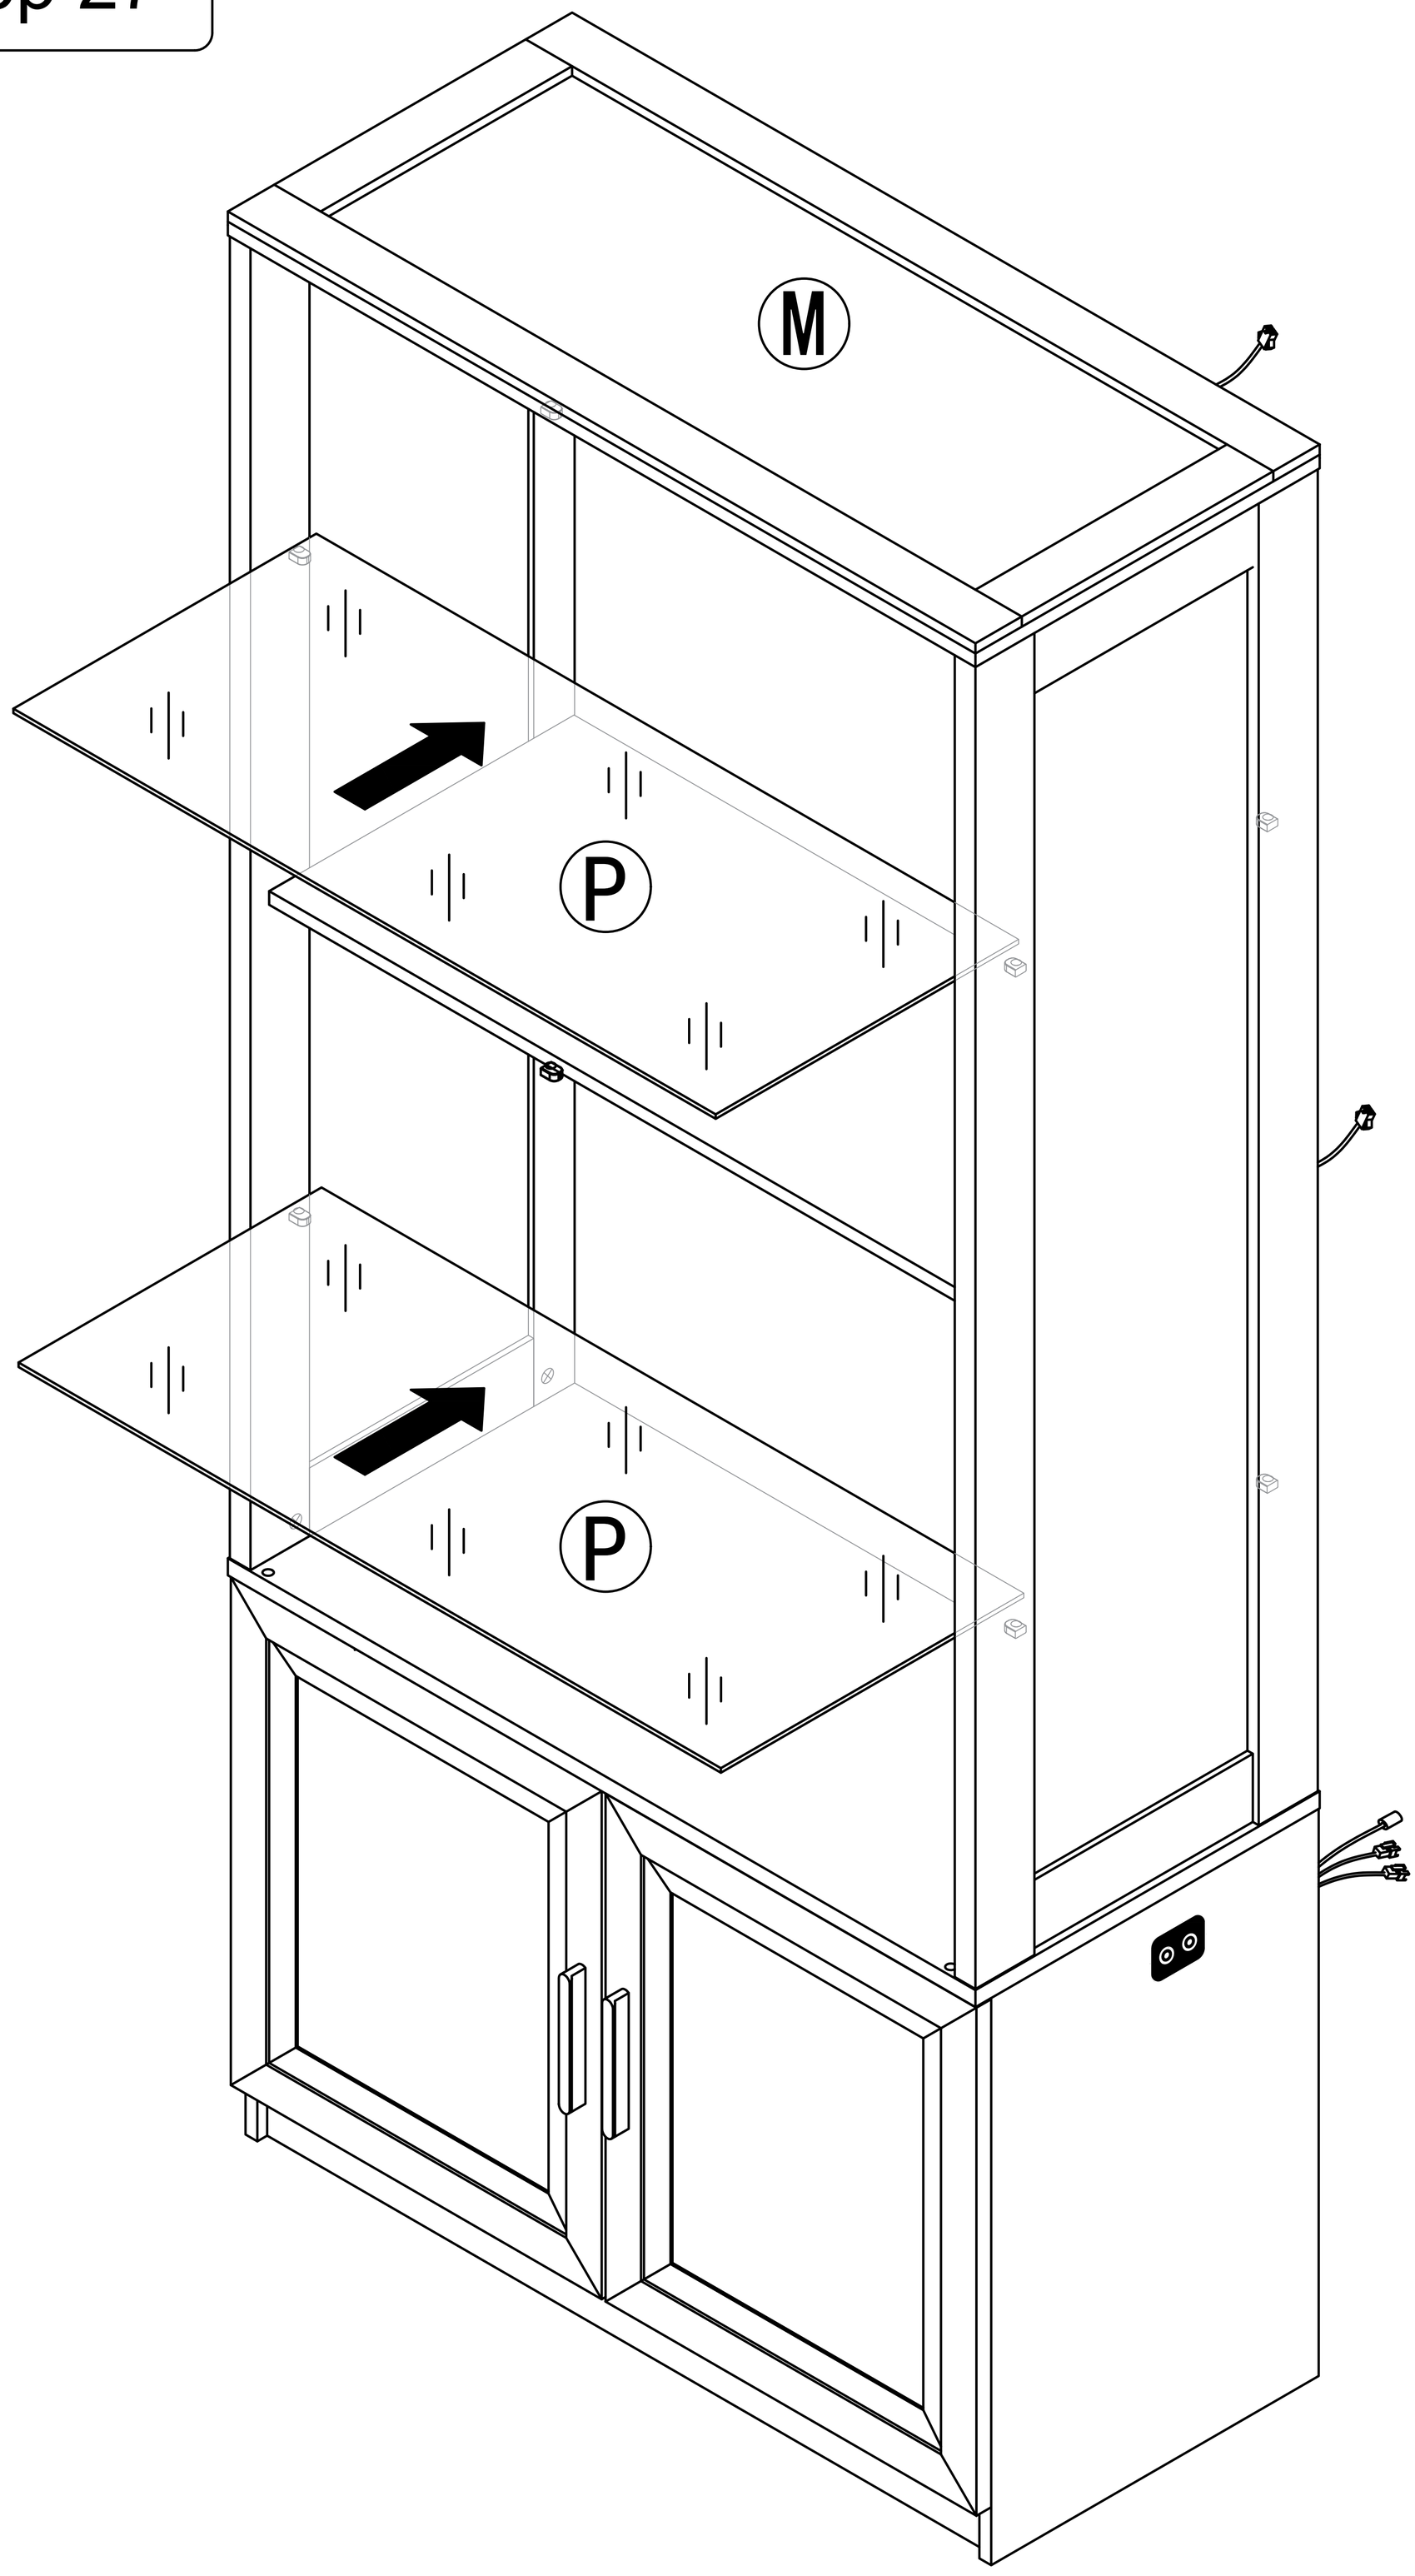

First lock the elliptical hole
then lock the fixed hole

Step 26

8 x8

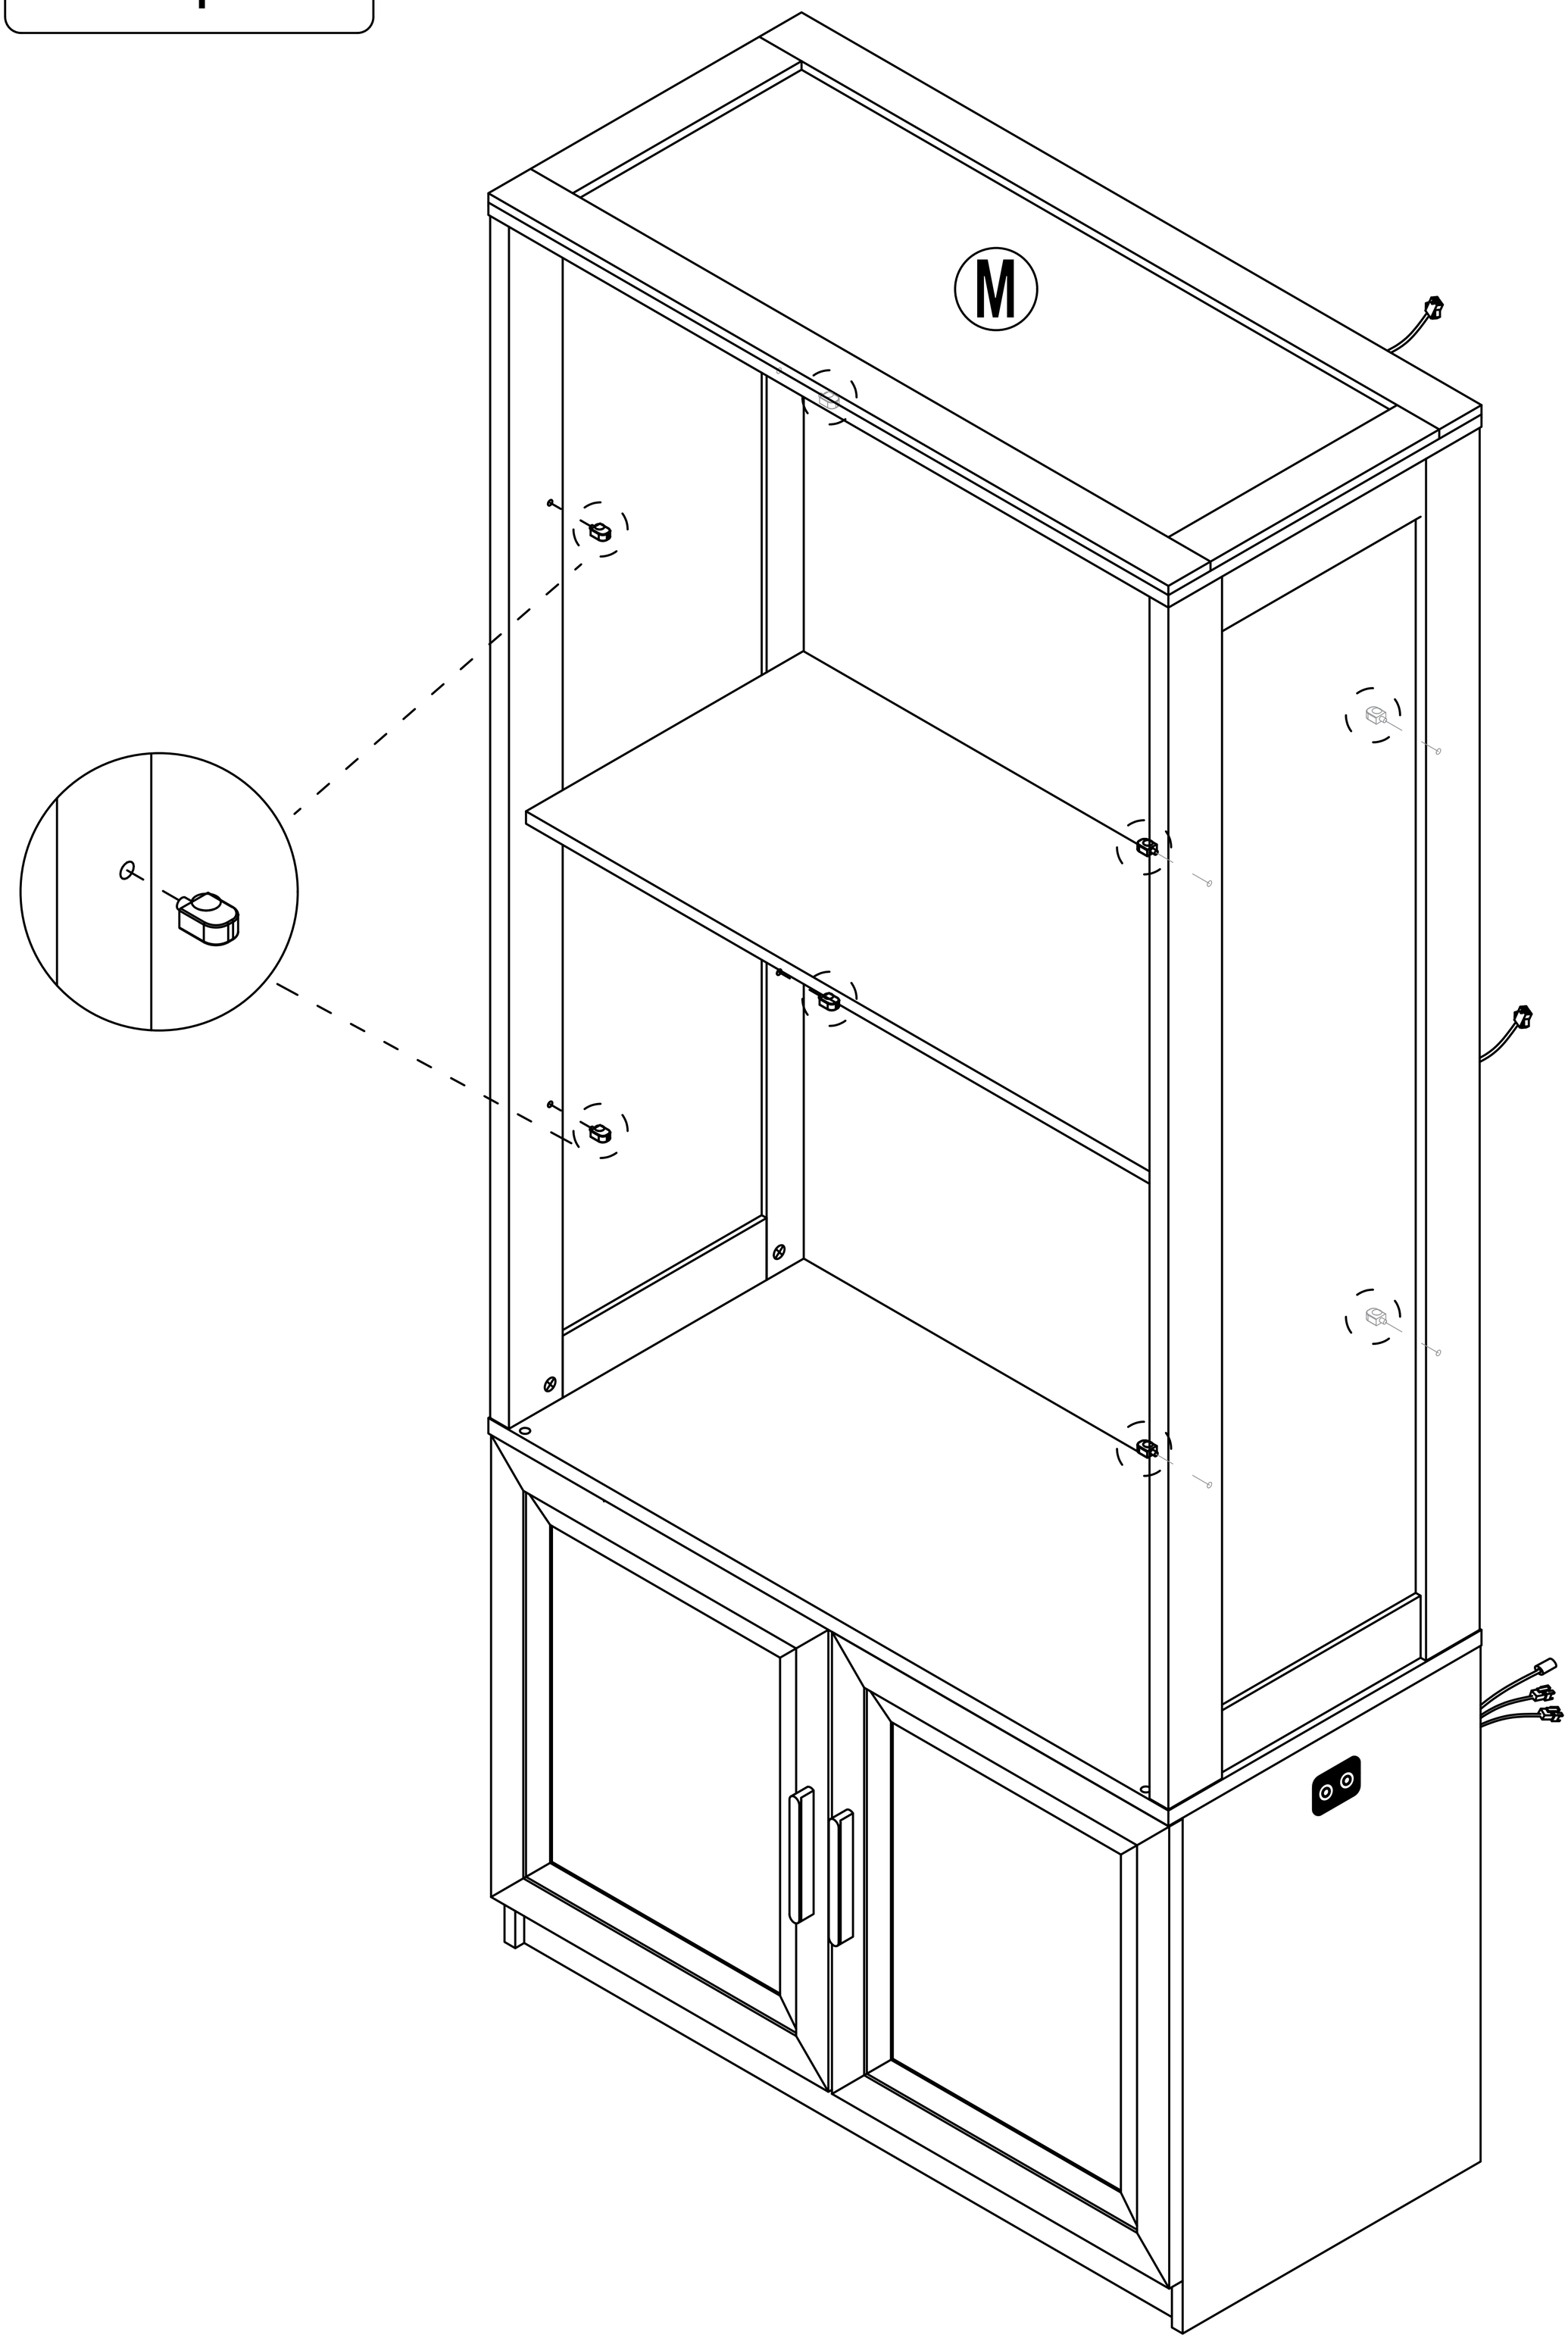


# Step 27




# Step 28


First, completely unscrew the screws on the parts

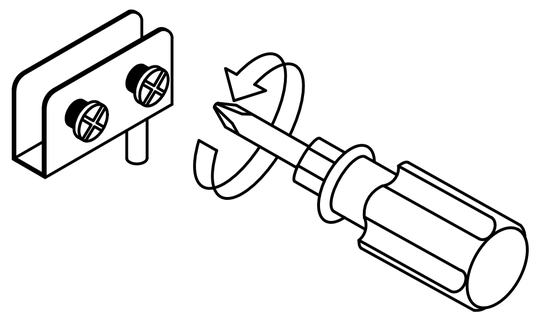


Then take out the black rubber pad from the inside of the part, and the white sponge remains unchanged inside the part.

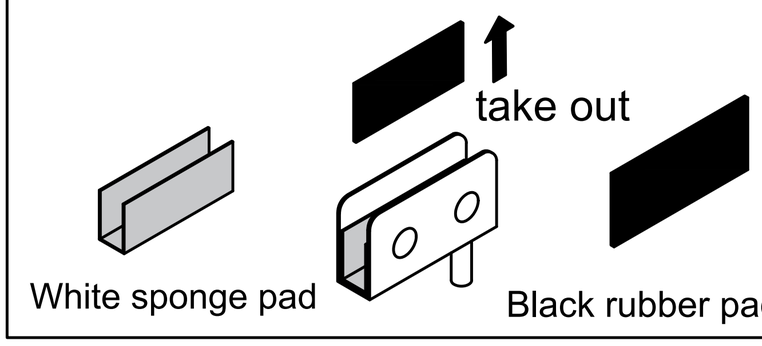



7

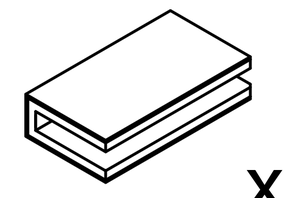

x1

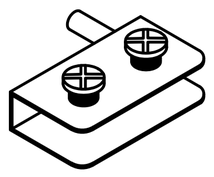


x1

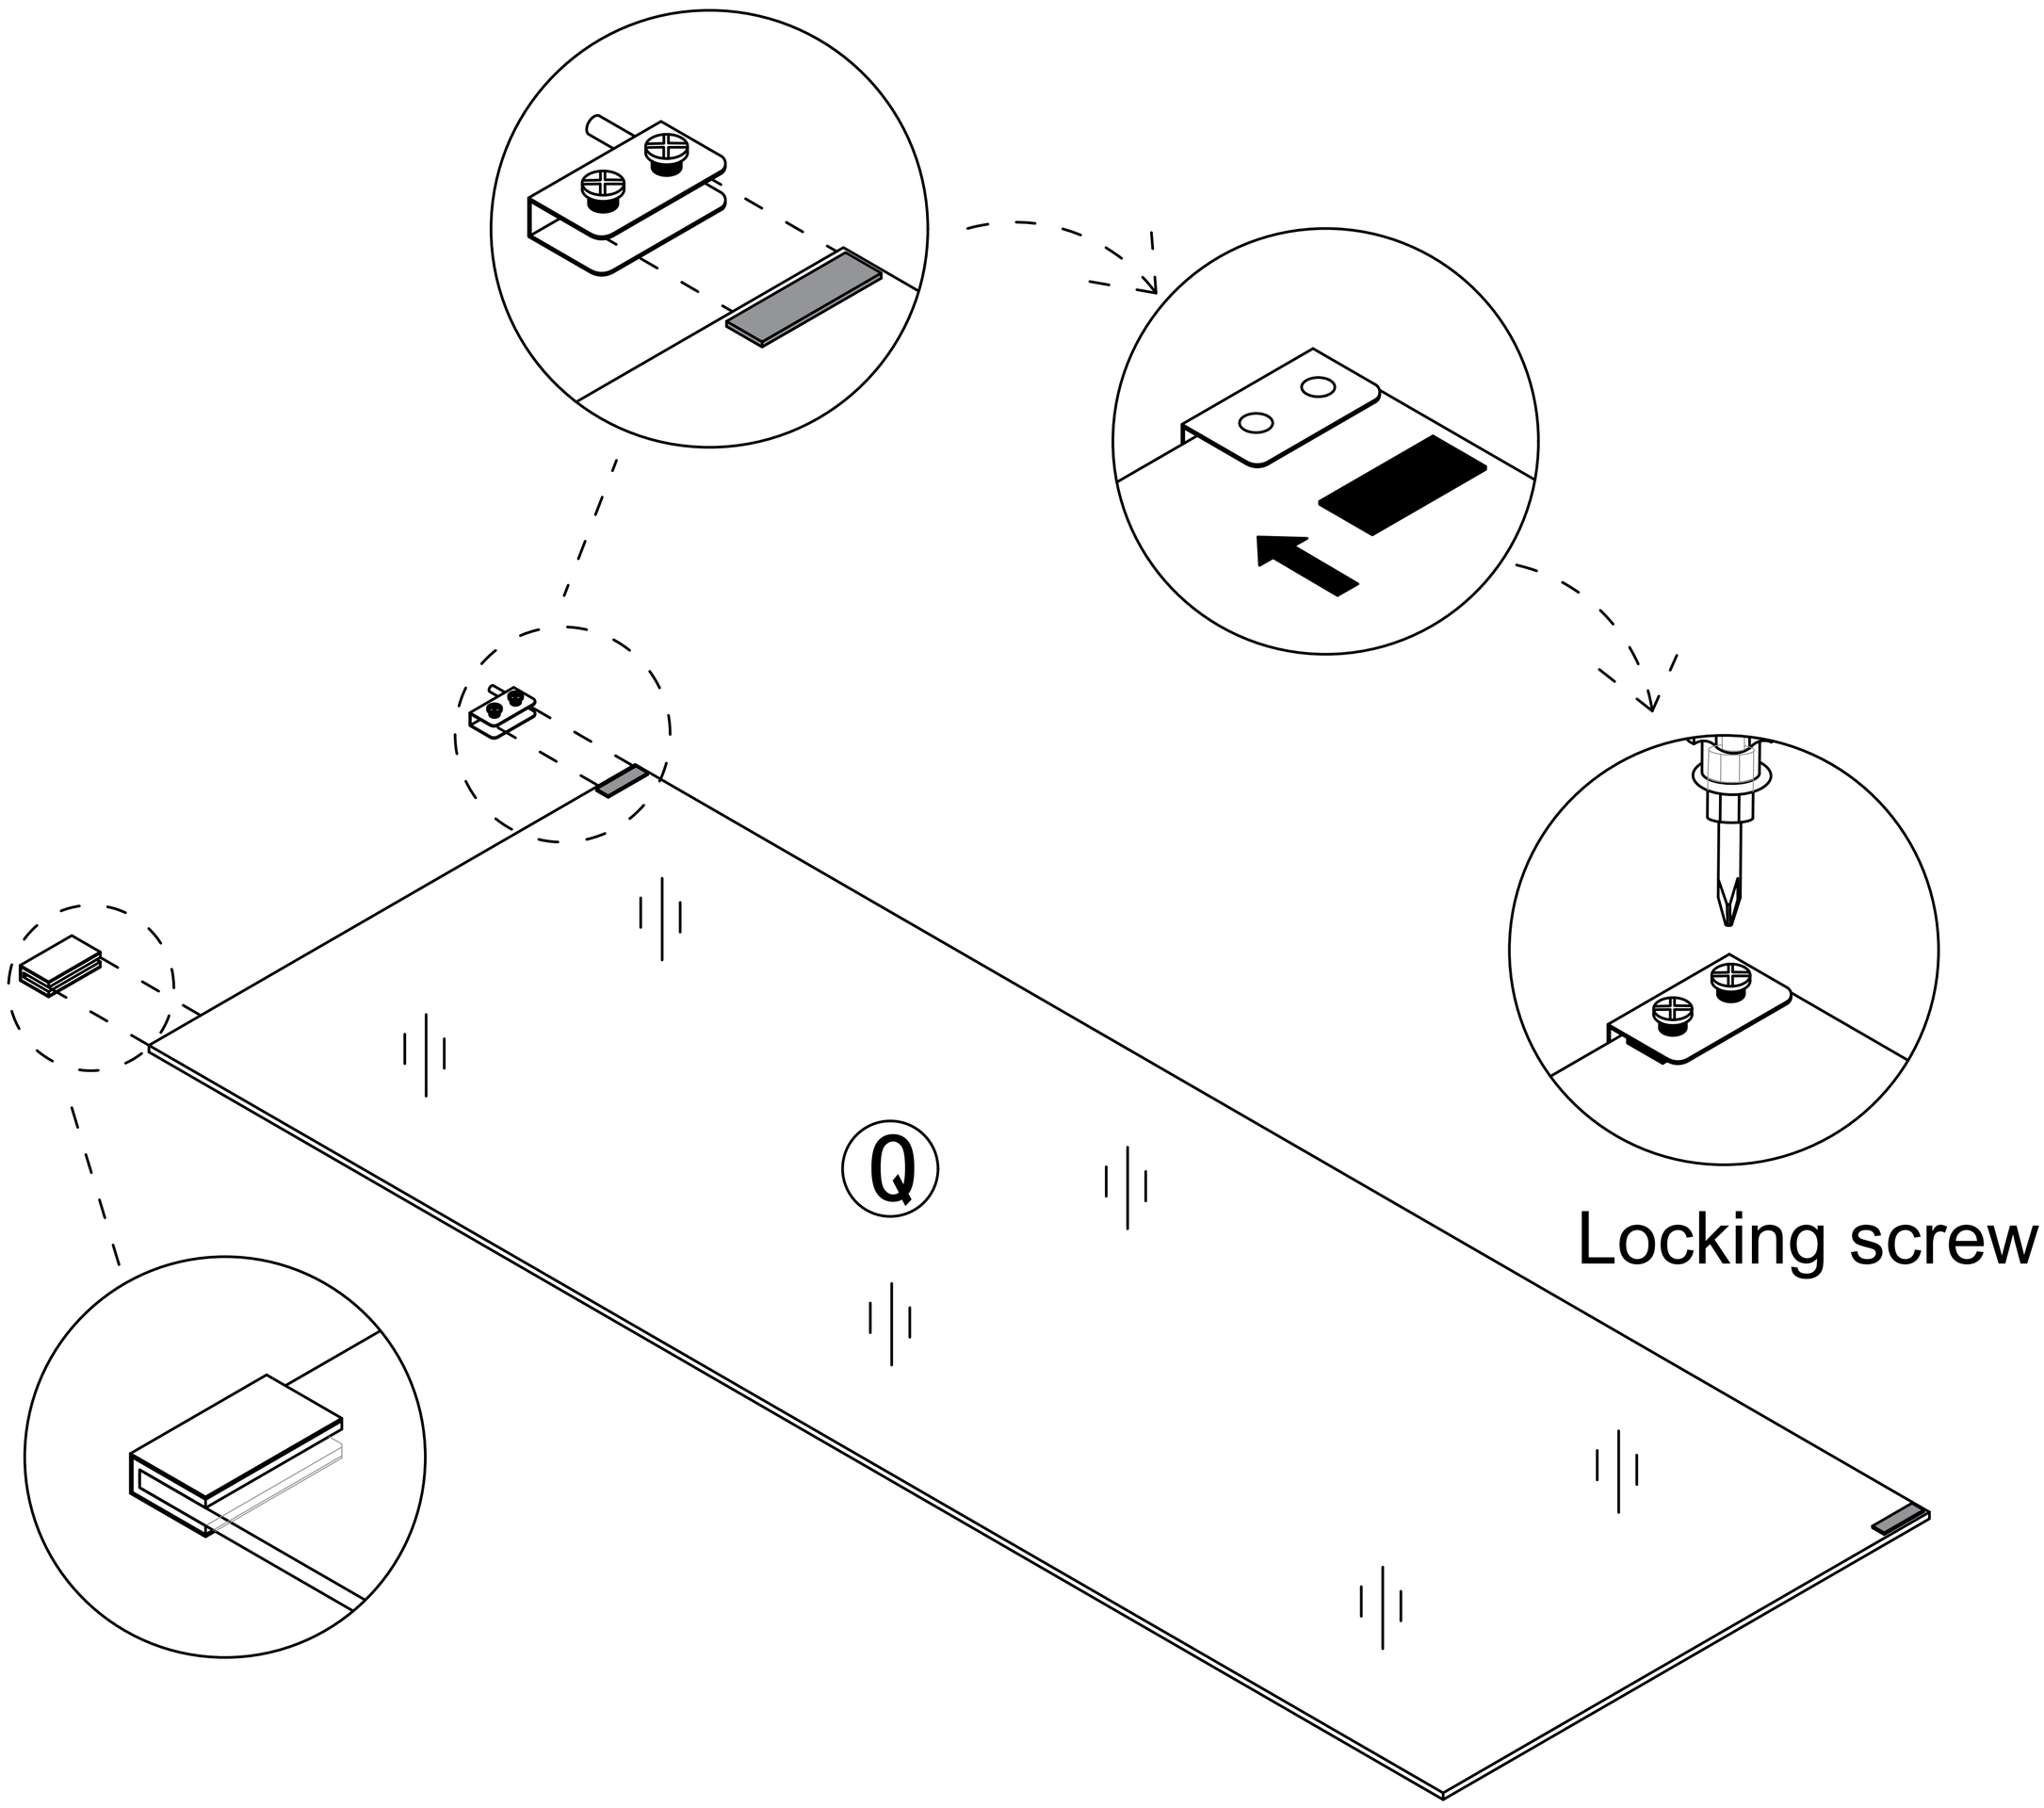



Pay attention to the direction of the door hinge,
rotate the screws to compress the black gasket,
and do not place it in the opposite direction

Place the black gasket on the side
where the screws are installed

# Step 29

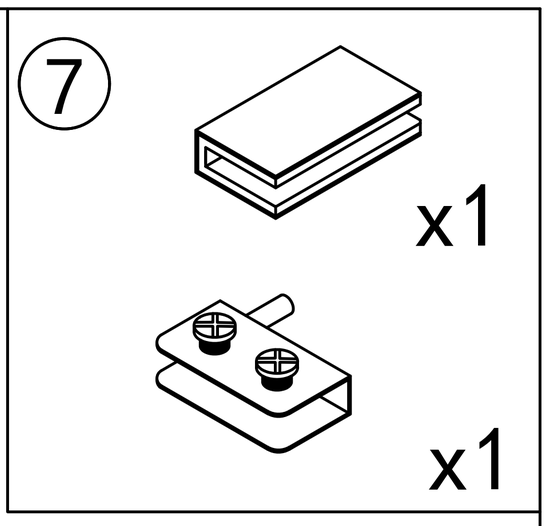


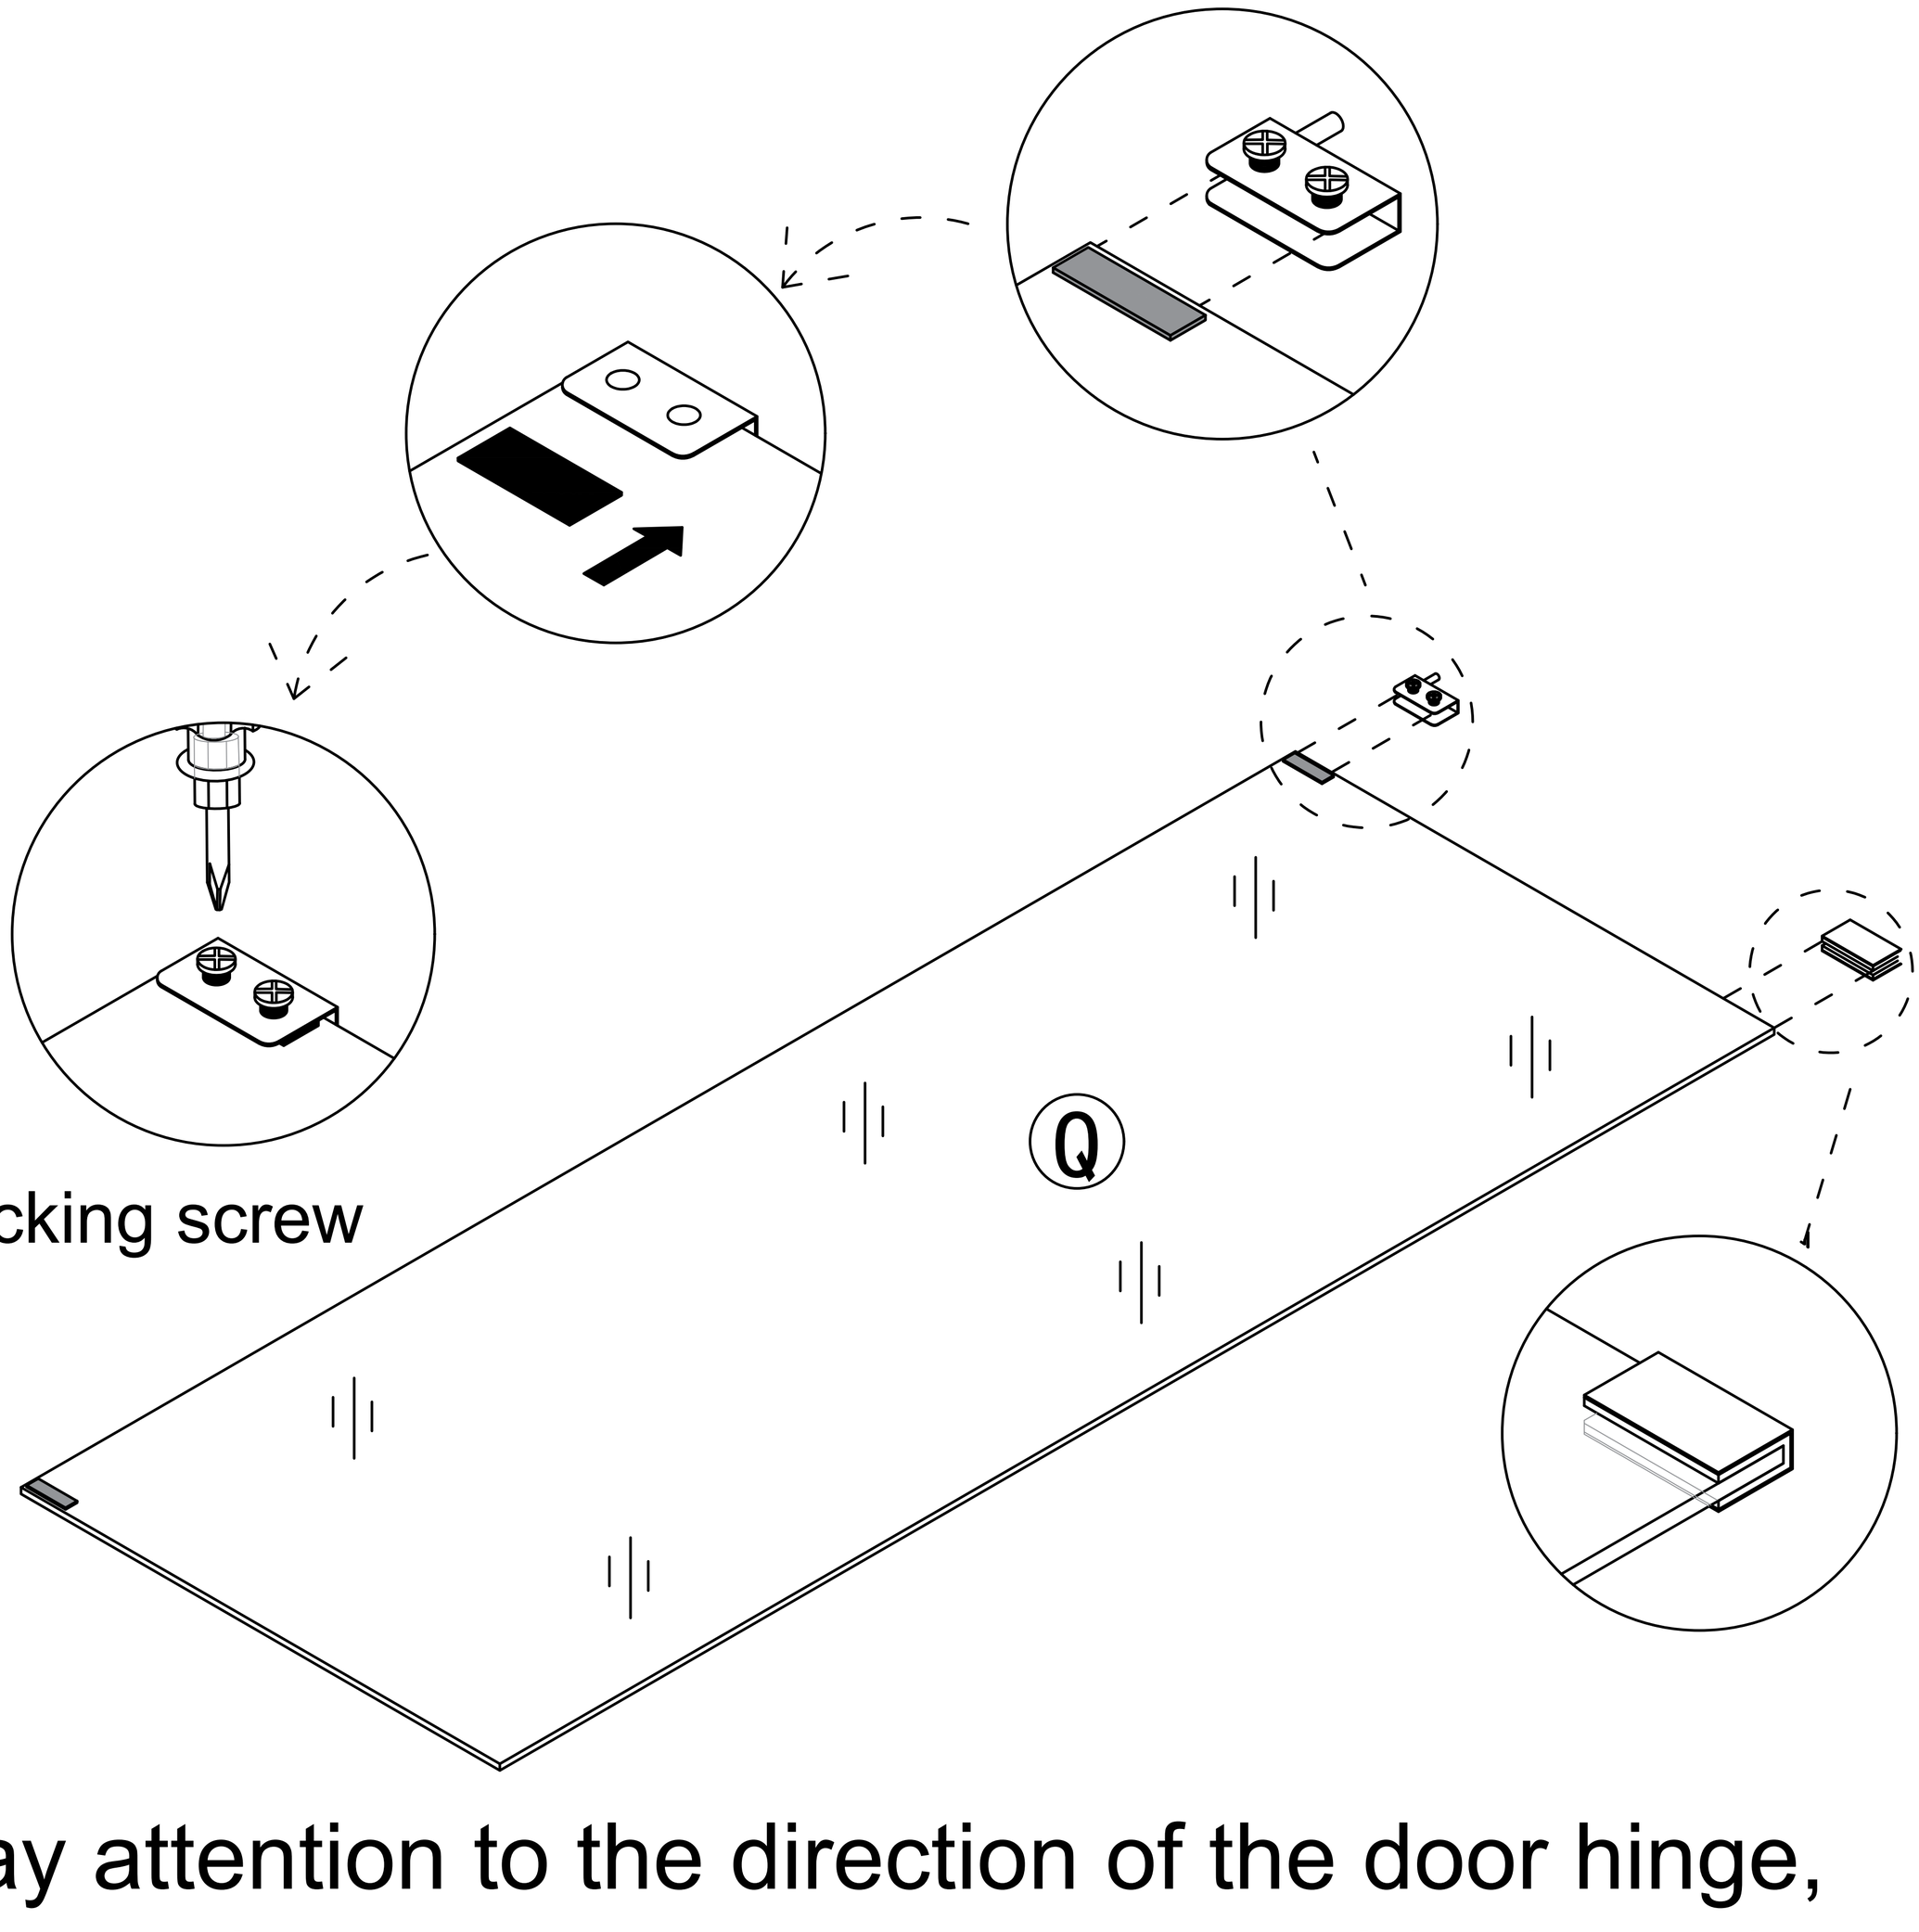




Pay attention to the direction of the door hinge, rotate the screws to compress the black gasket, and do not place it in the opposite direction

Place the black gasket on the side where the screws are installed
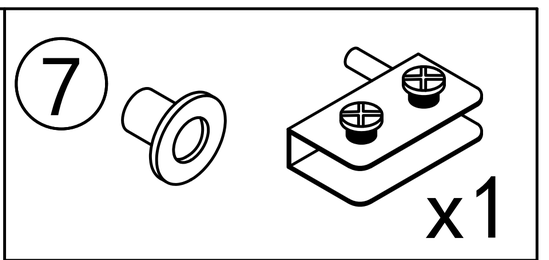
# Step 30

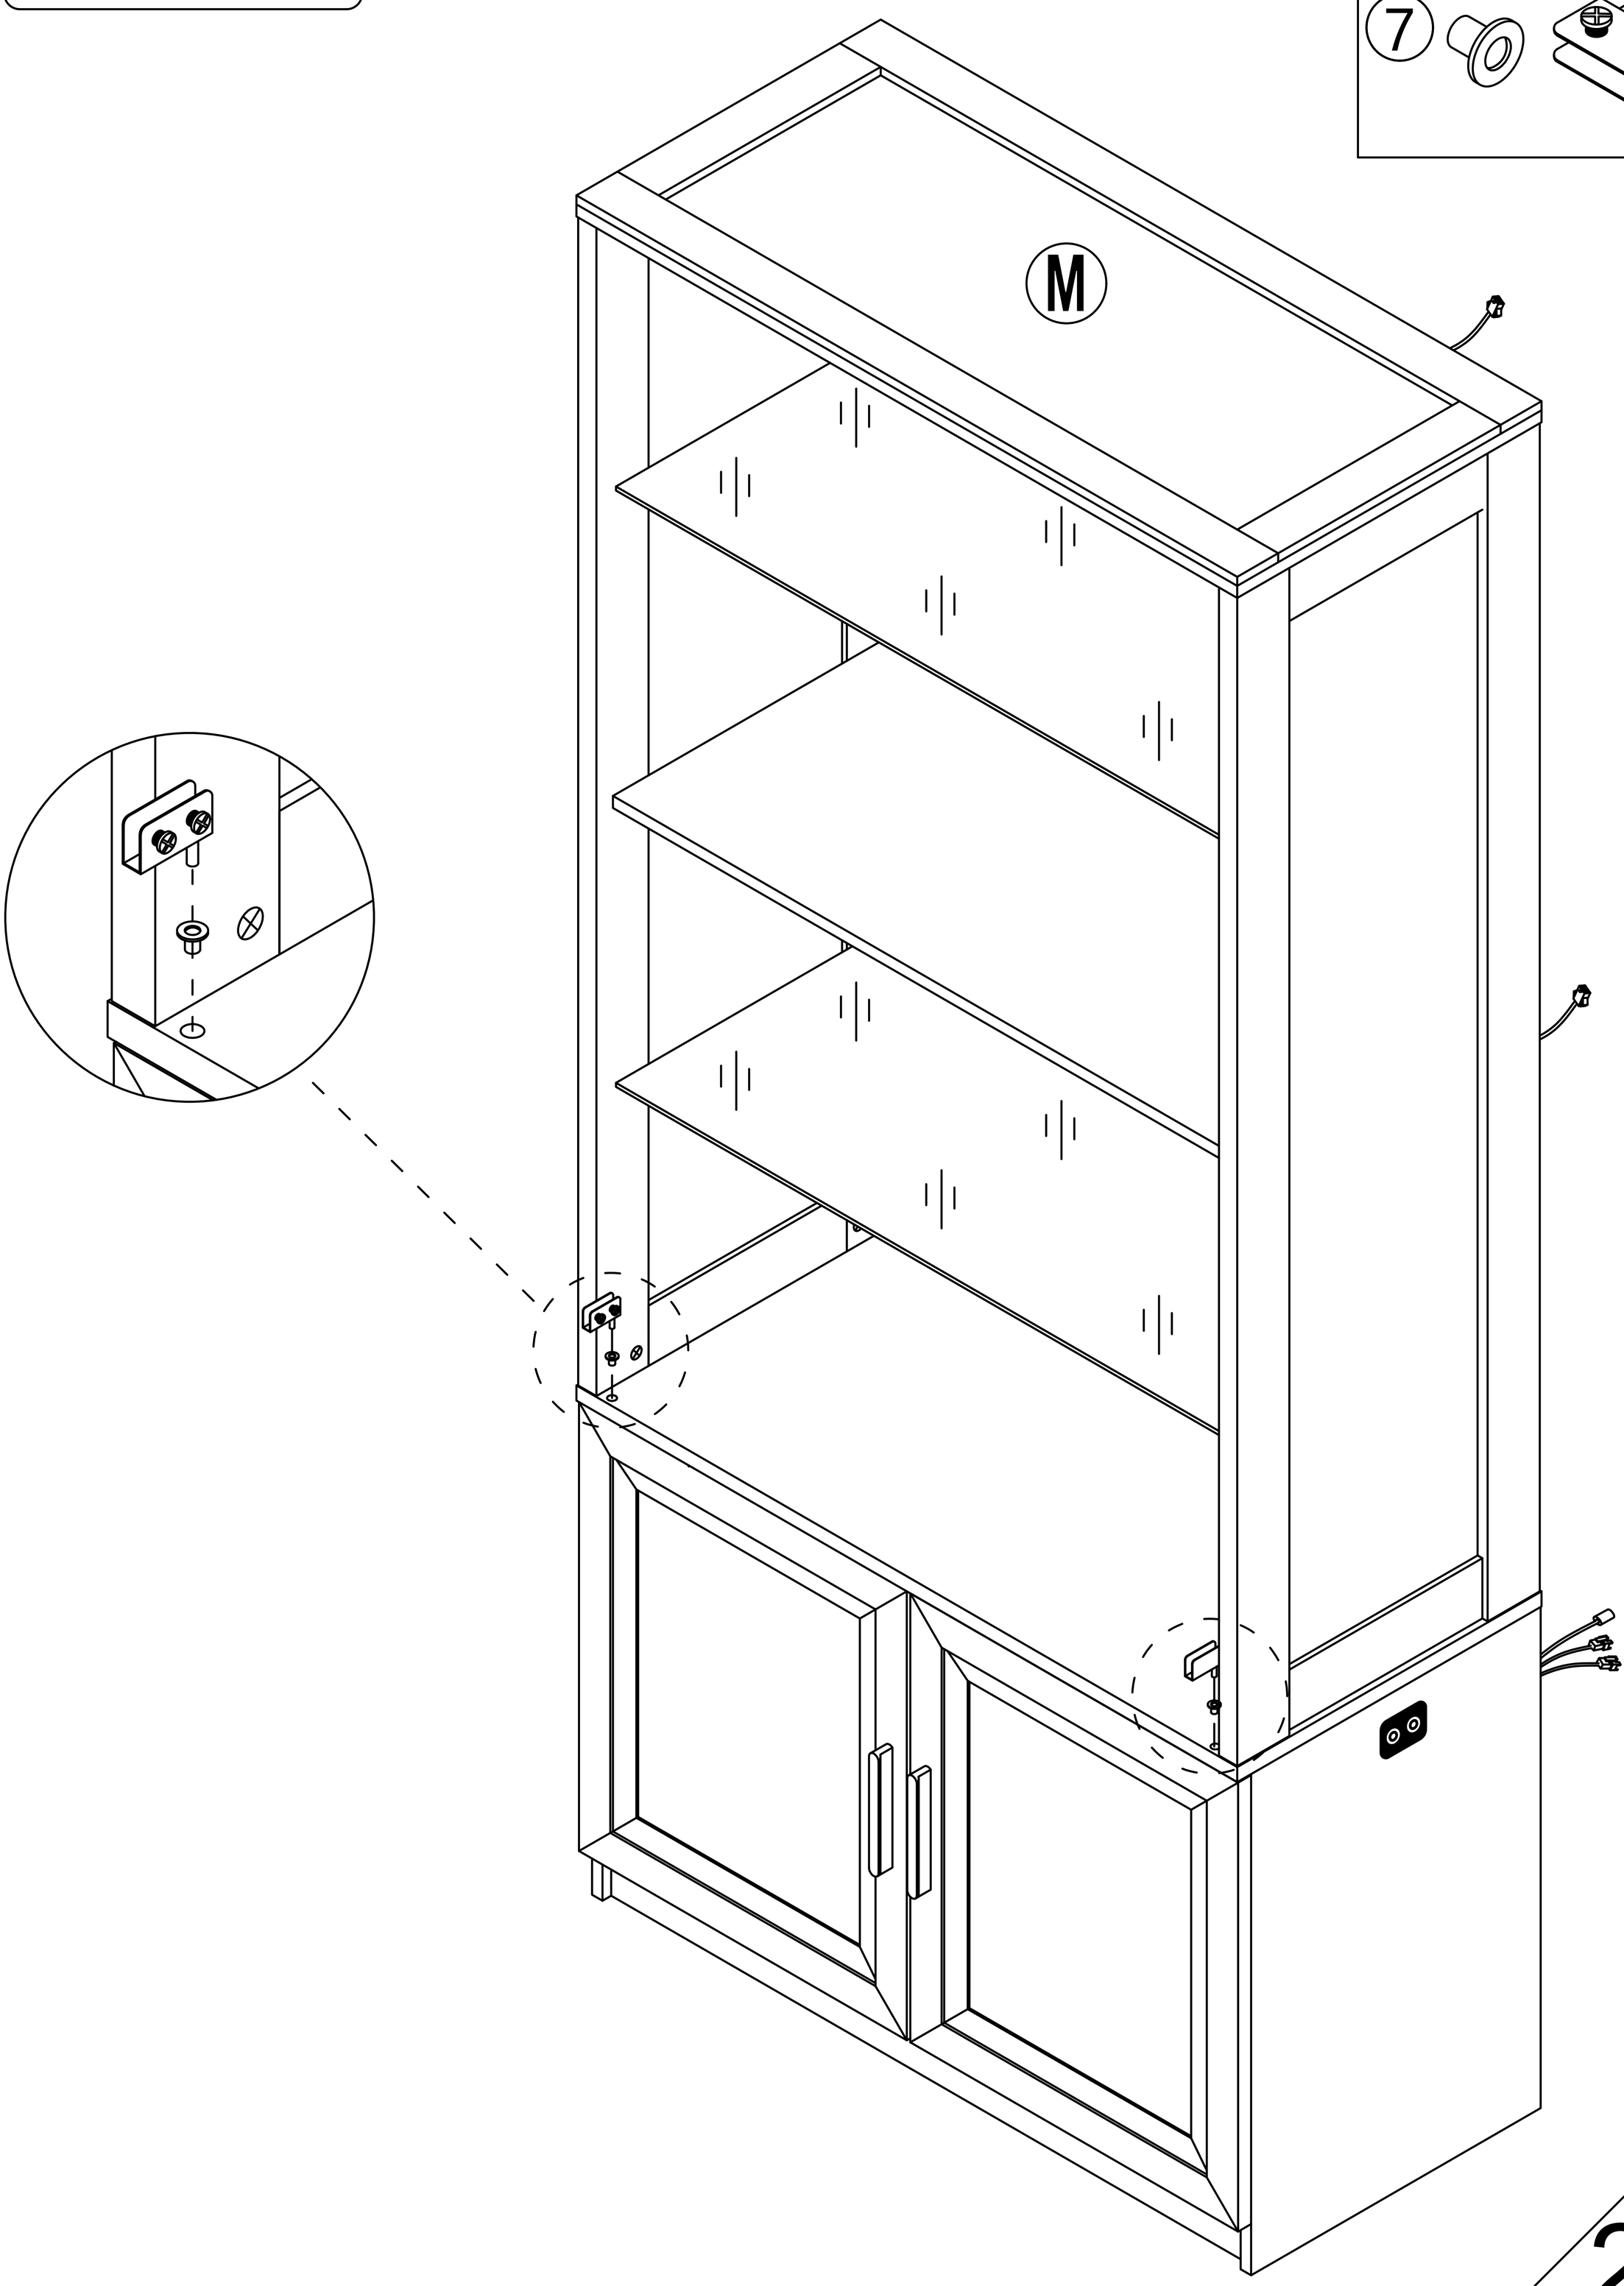





Step 31


Pay attention to the direction of the door hinge during installation

⑦ x2

When installing a glass door, it is recommended to have two people install it to avoid the glass door colliding or hitting oneself.

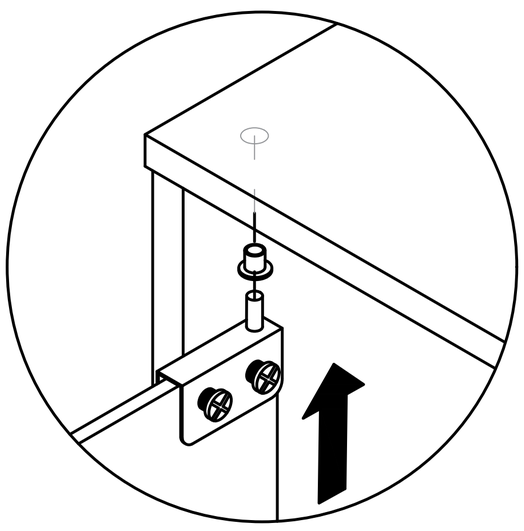


first

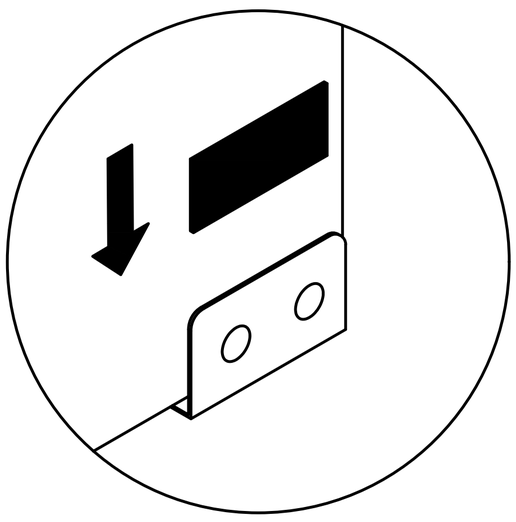


second

After installing the glass door, place the black gasket on the side where the screws are installed

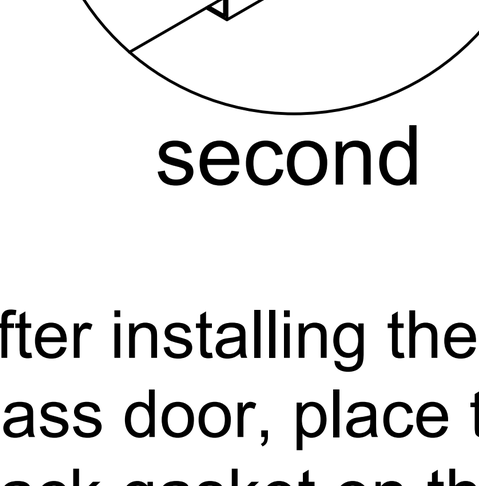

third


Locking screw

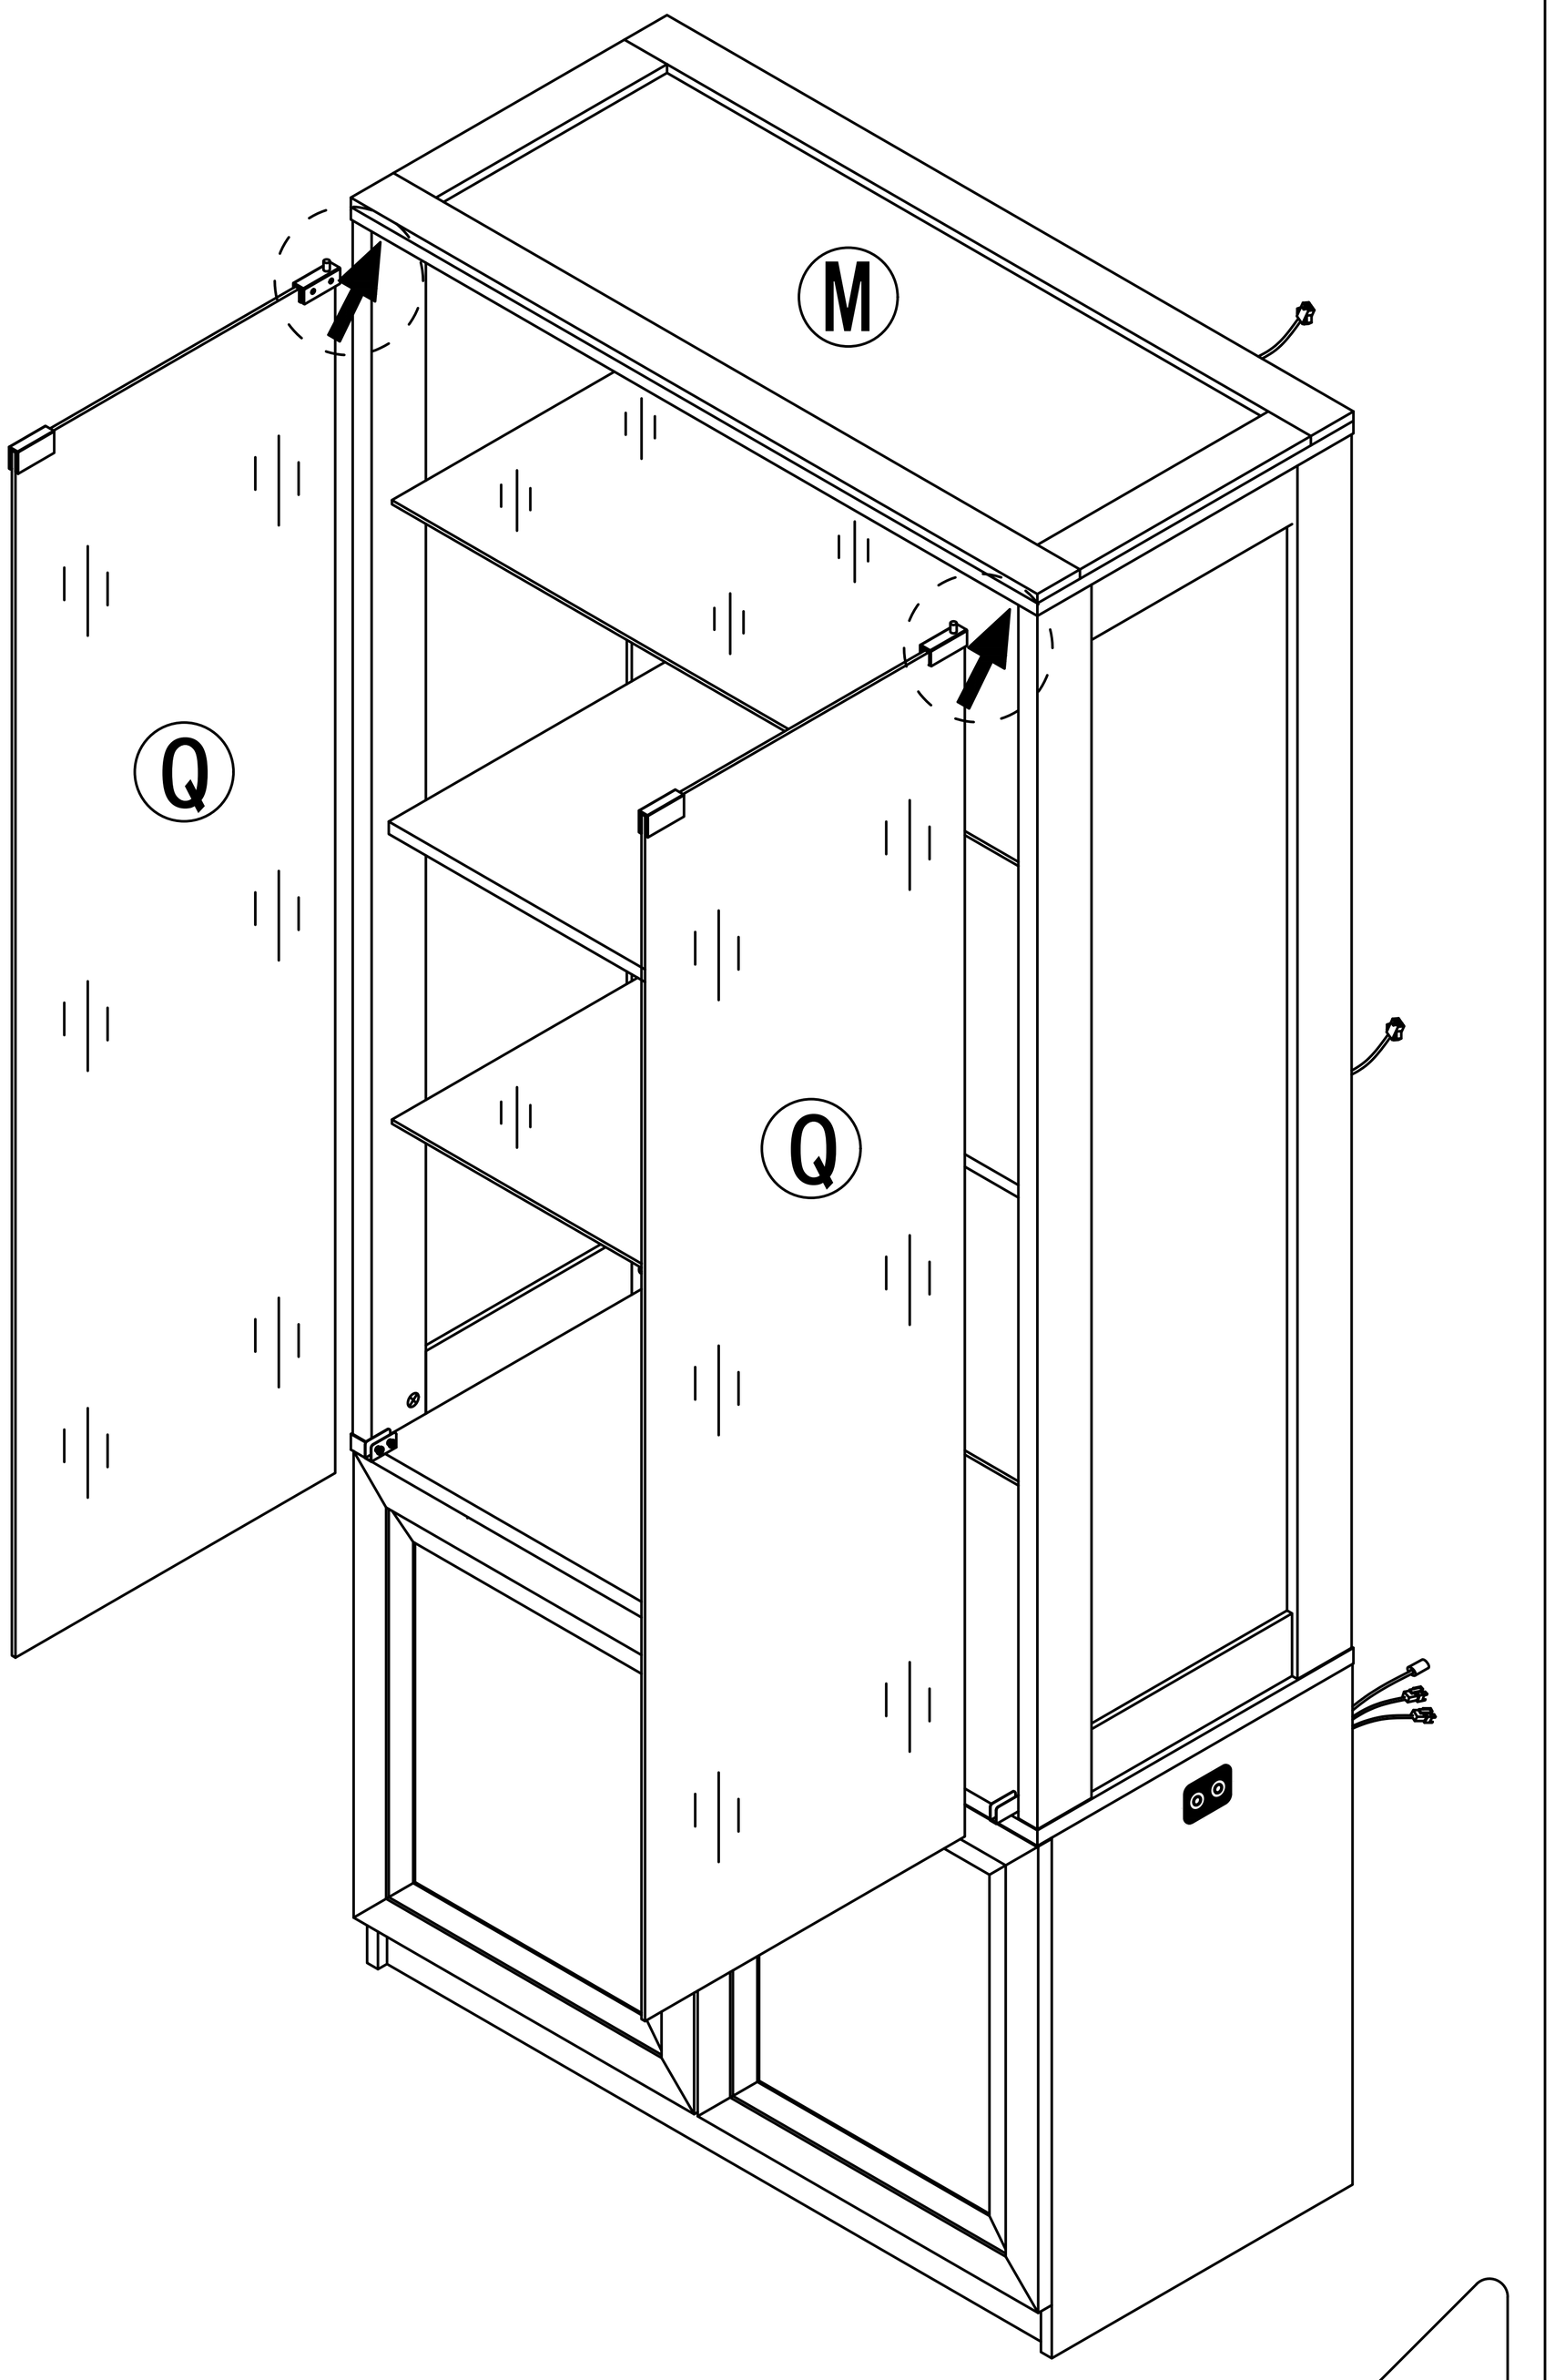


Step 32


The rebound device automatically opens and closes by pressing

Open the glass door

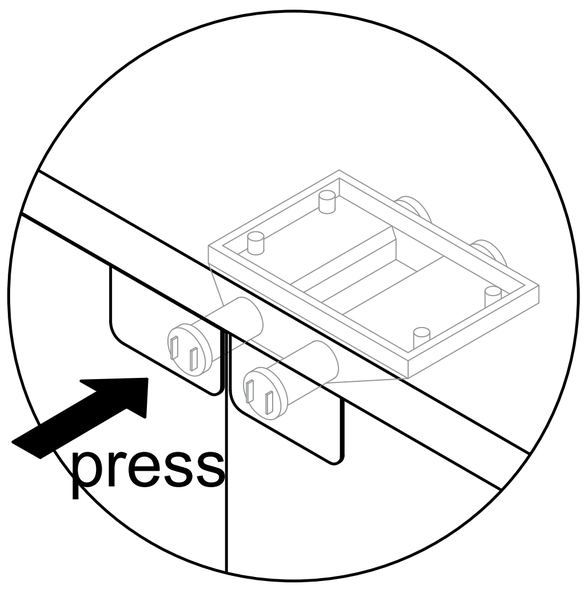




Close the glass door

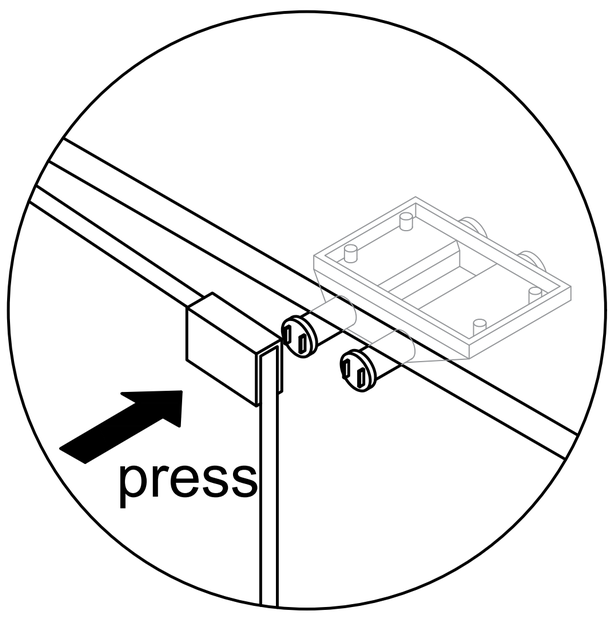


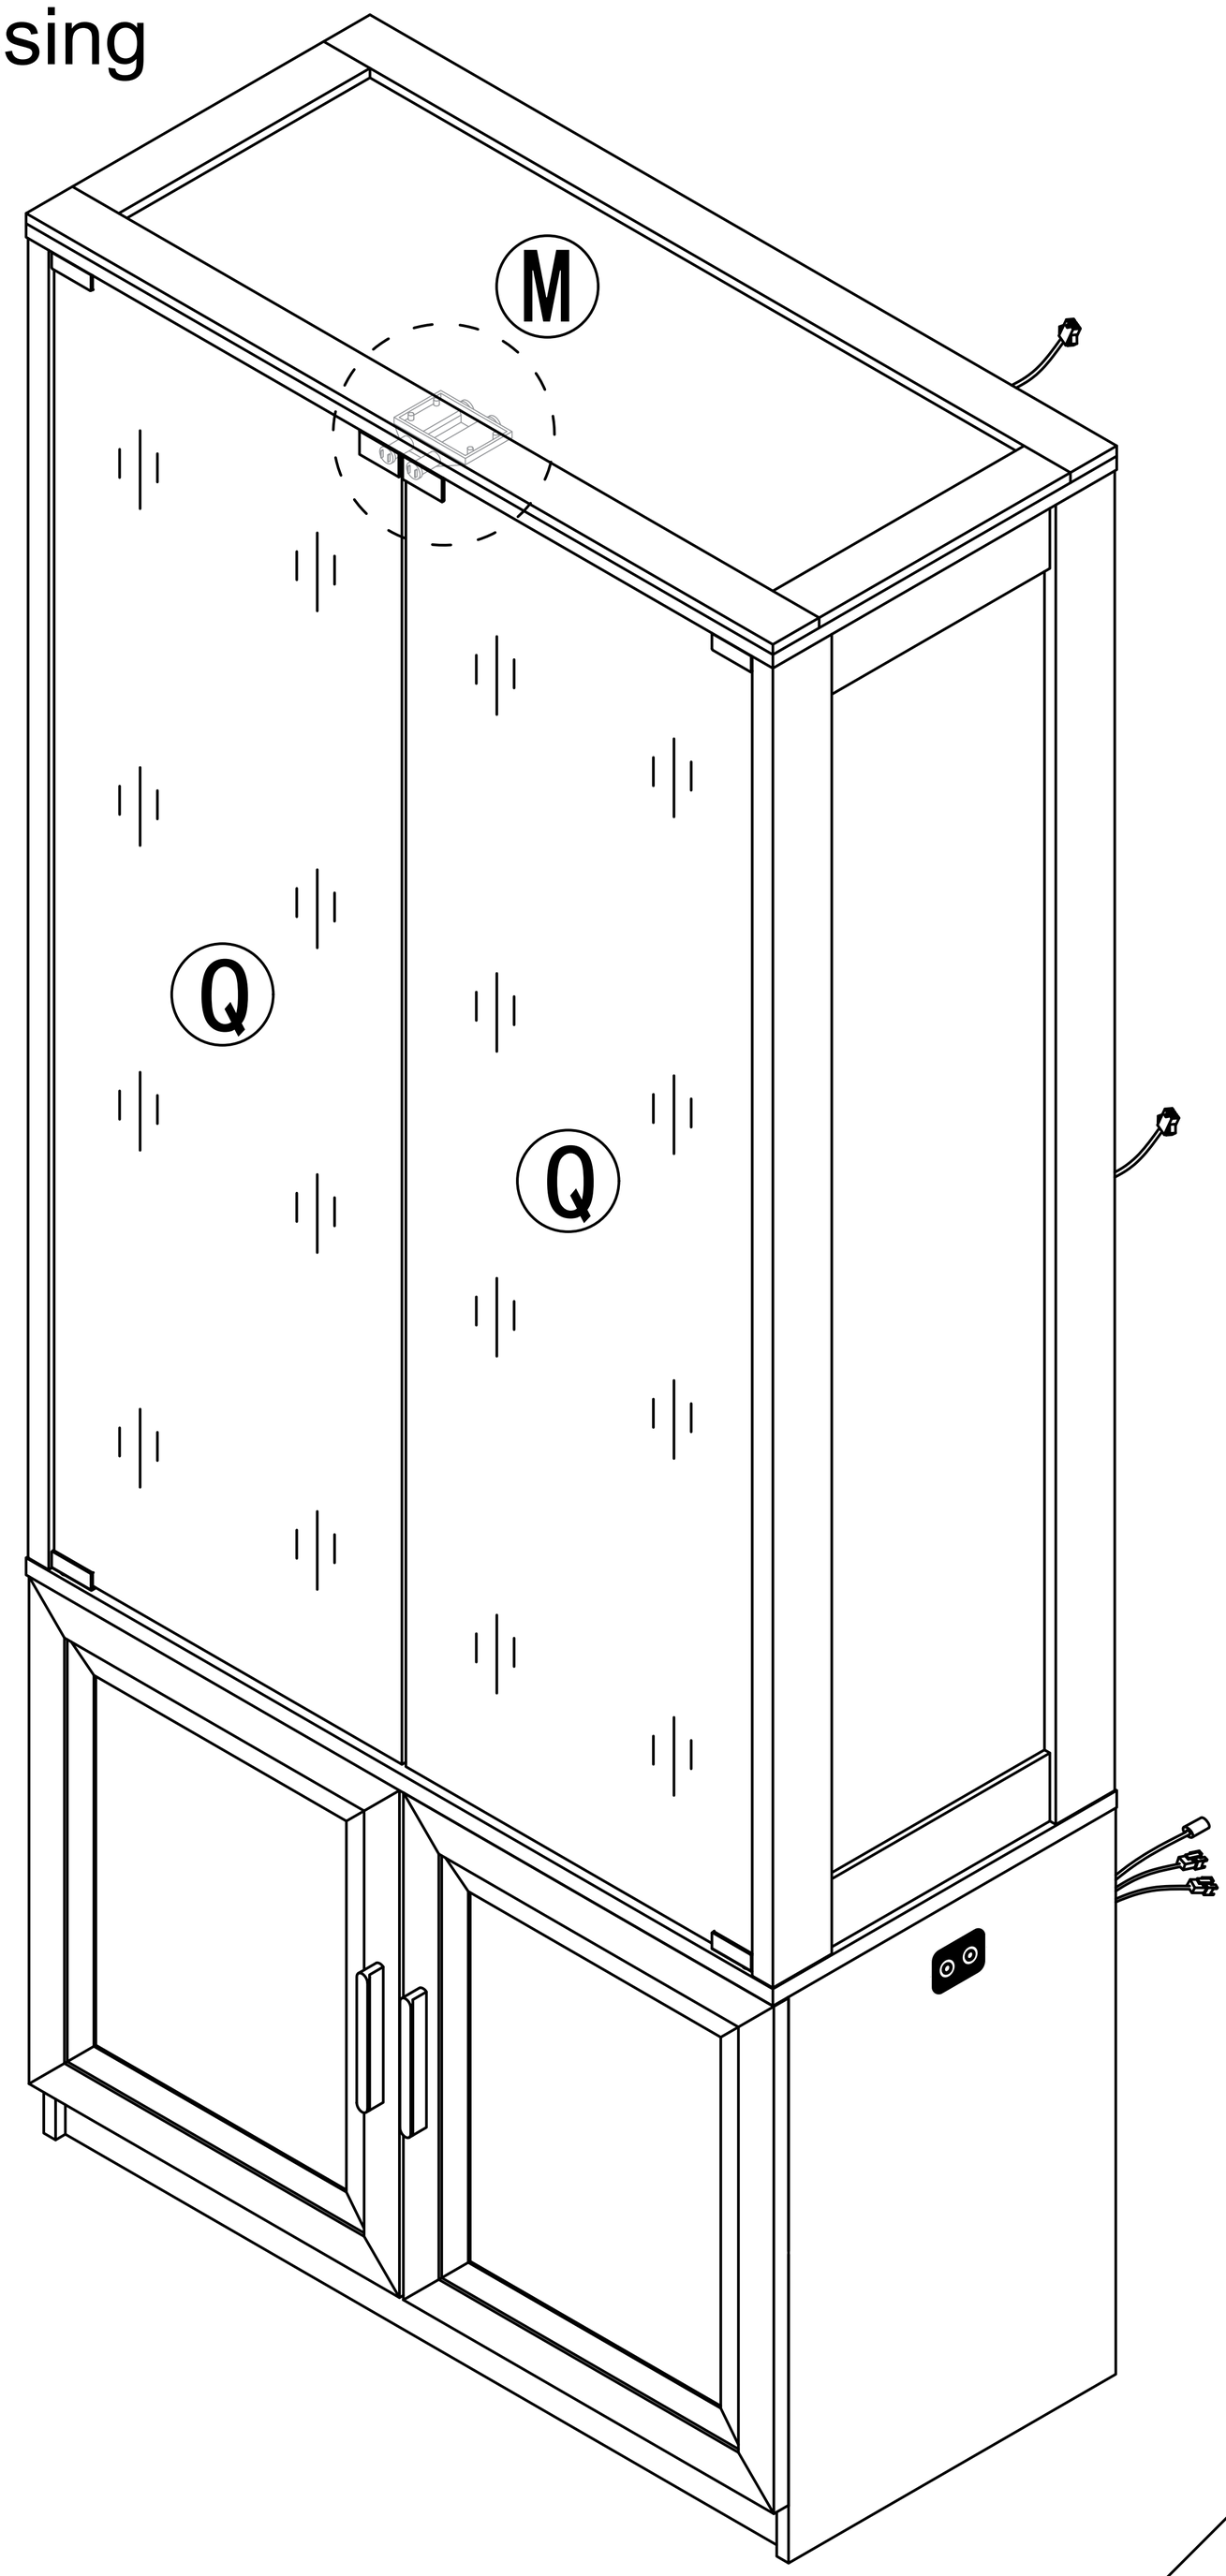
Step 33

10  x22

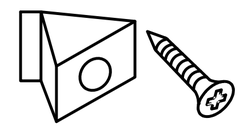


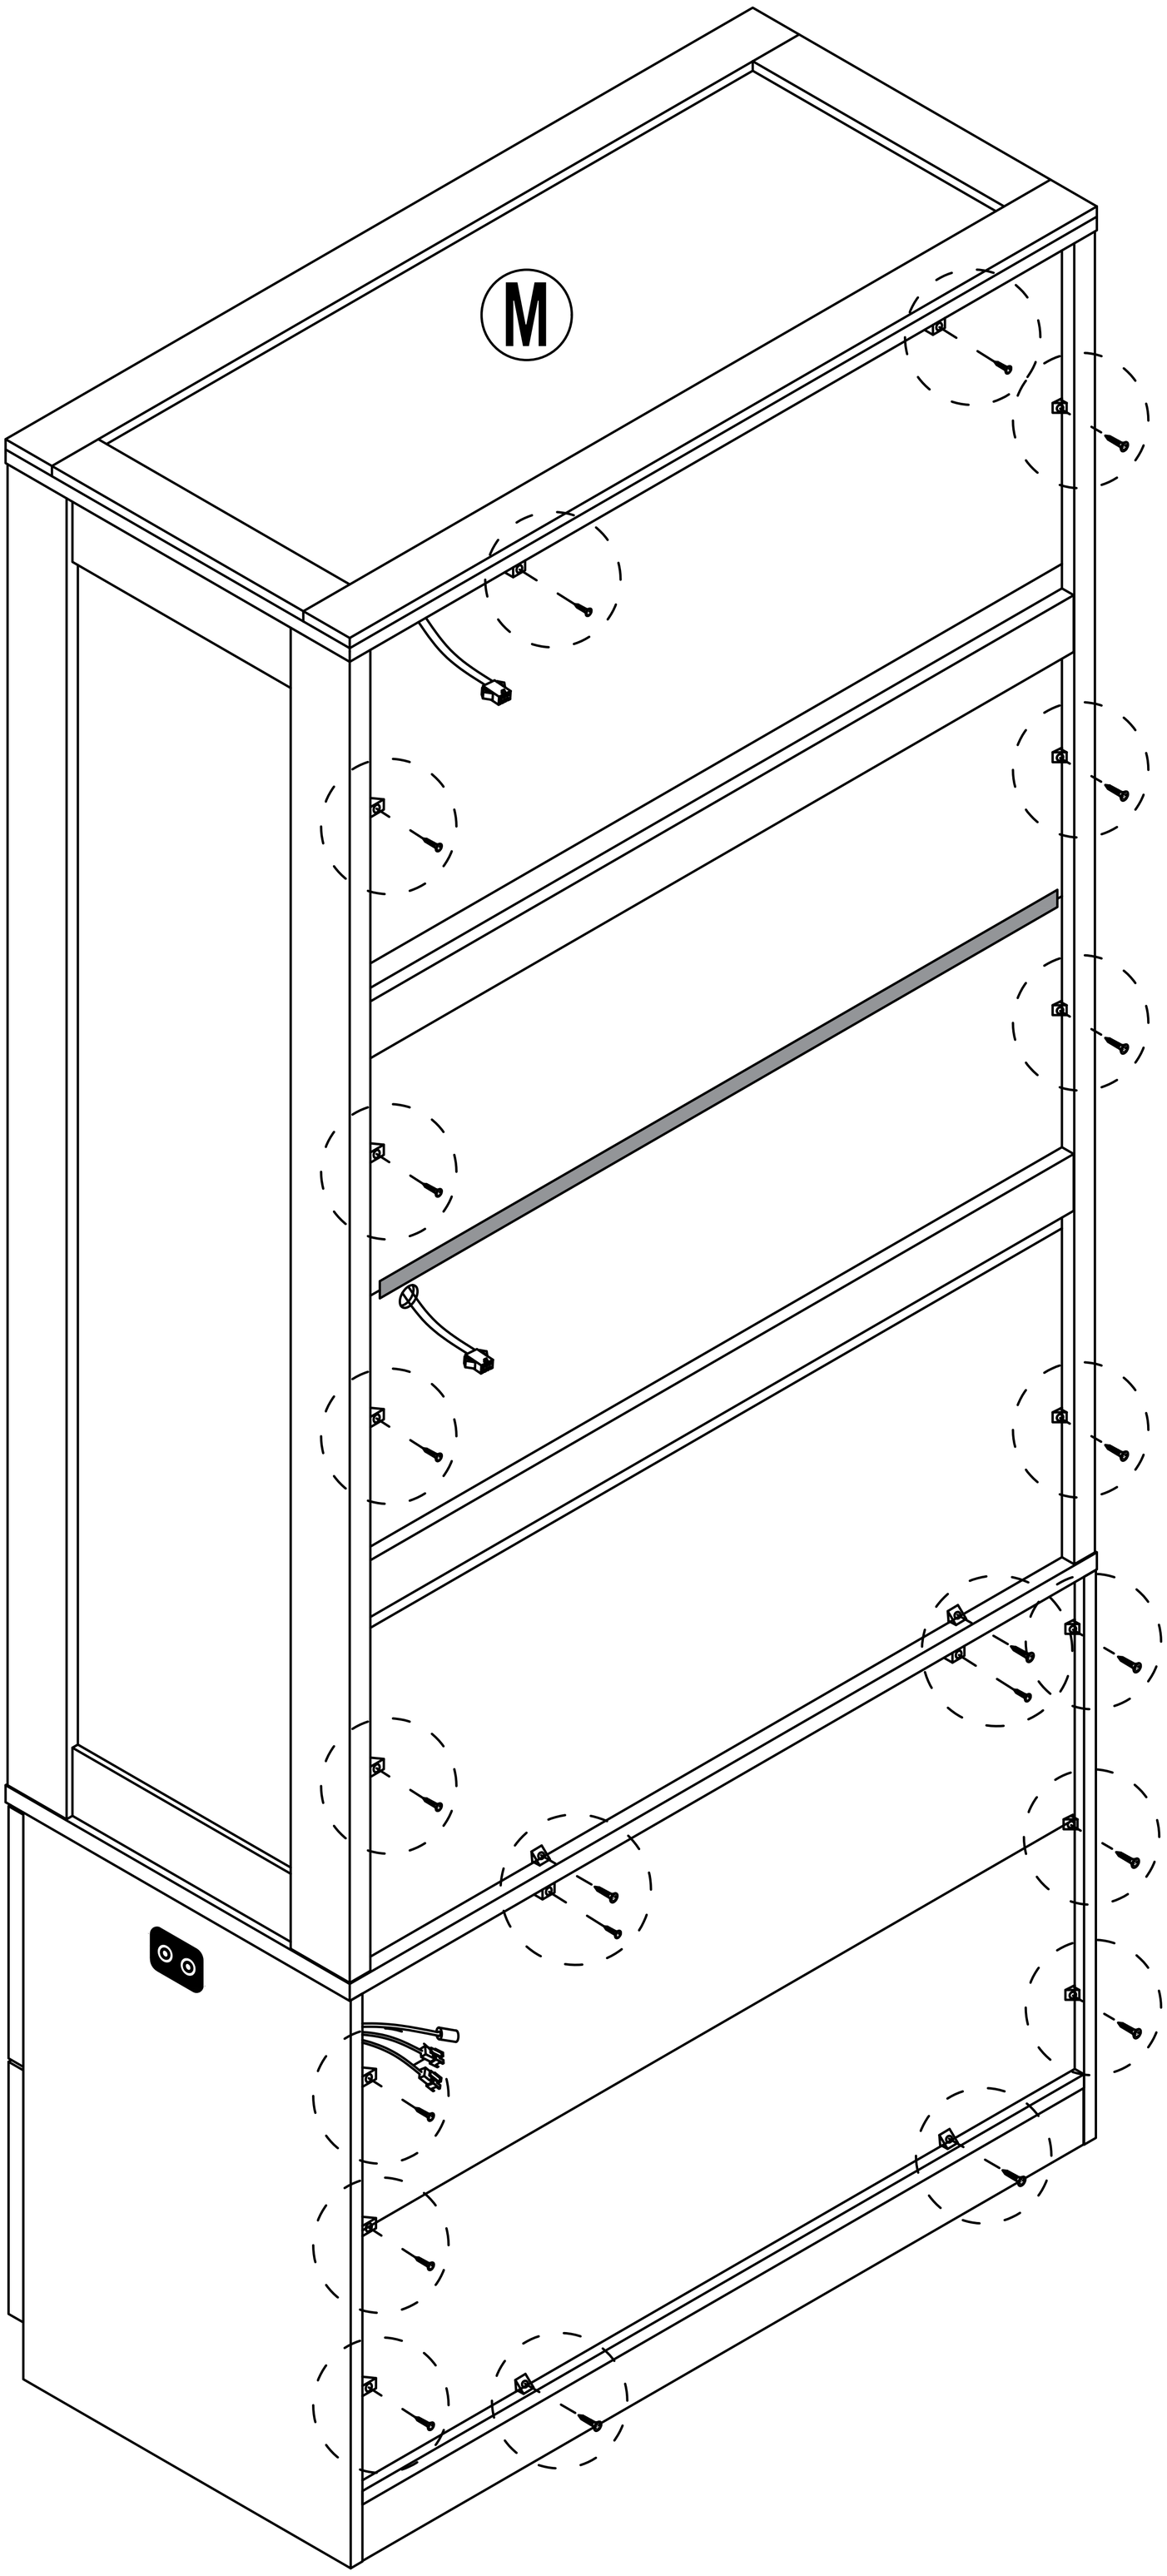


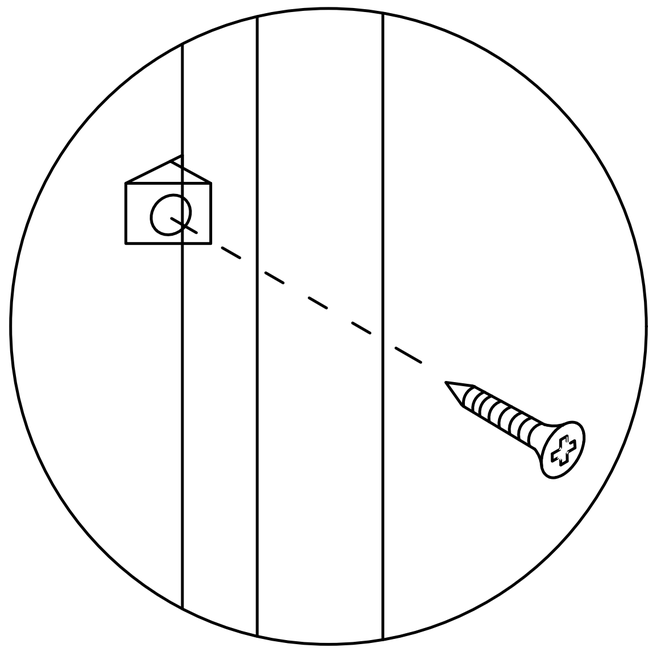
# Step 34

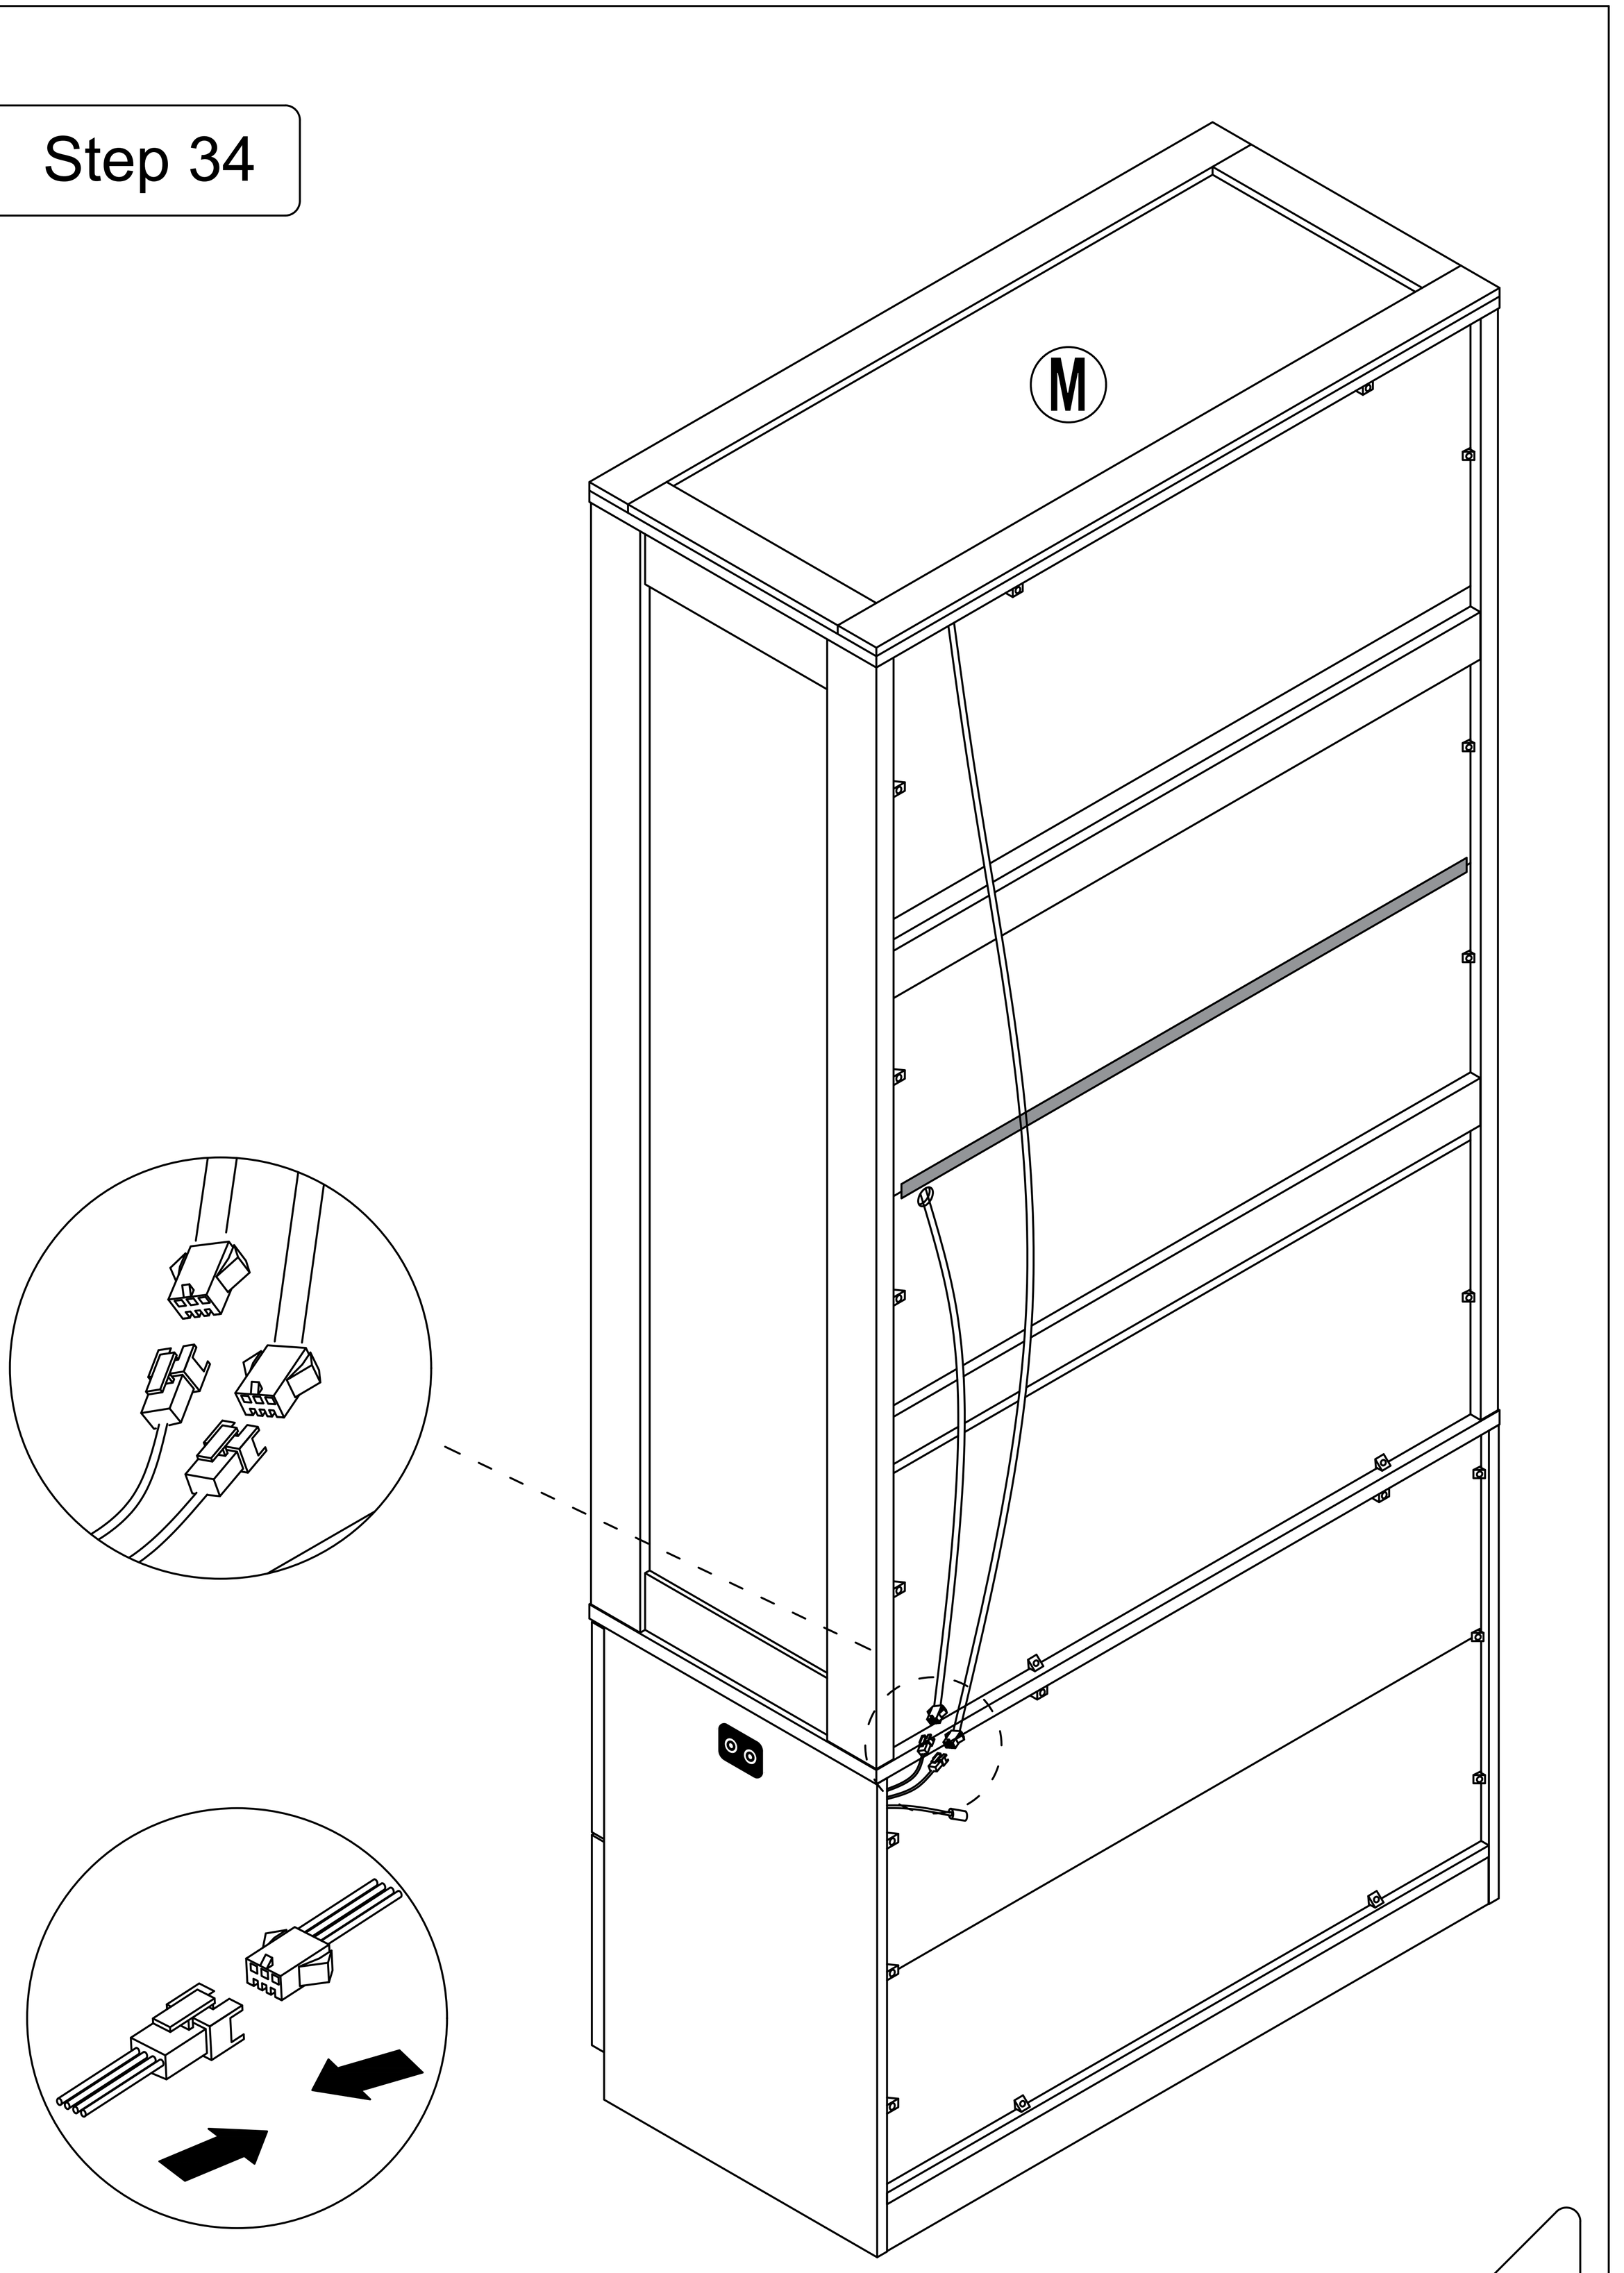


Step 35

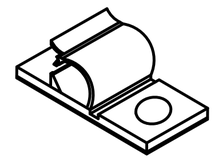
11  x3

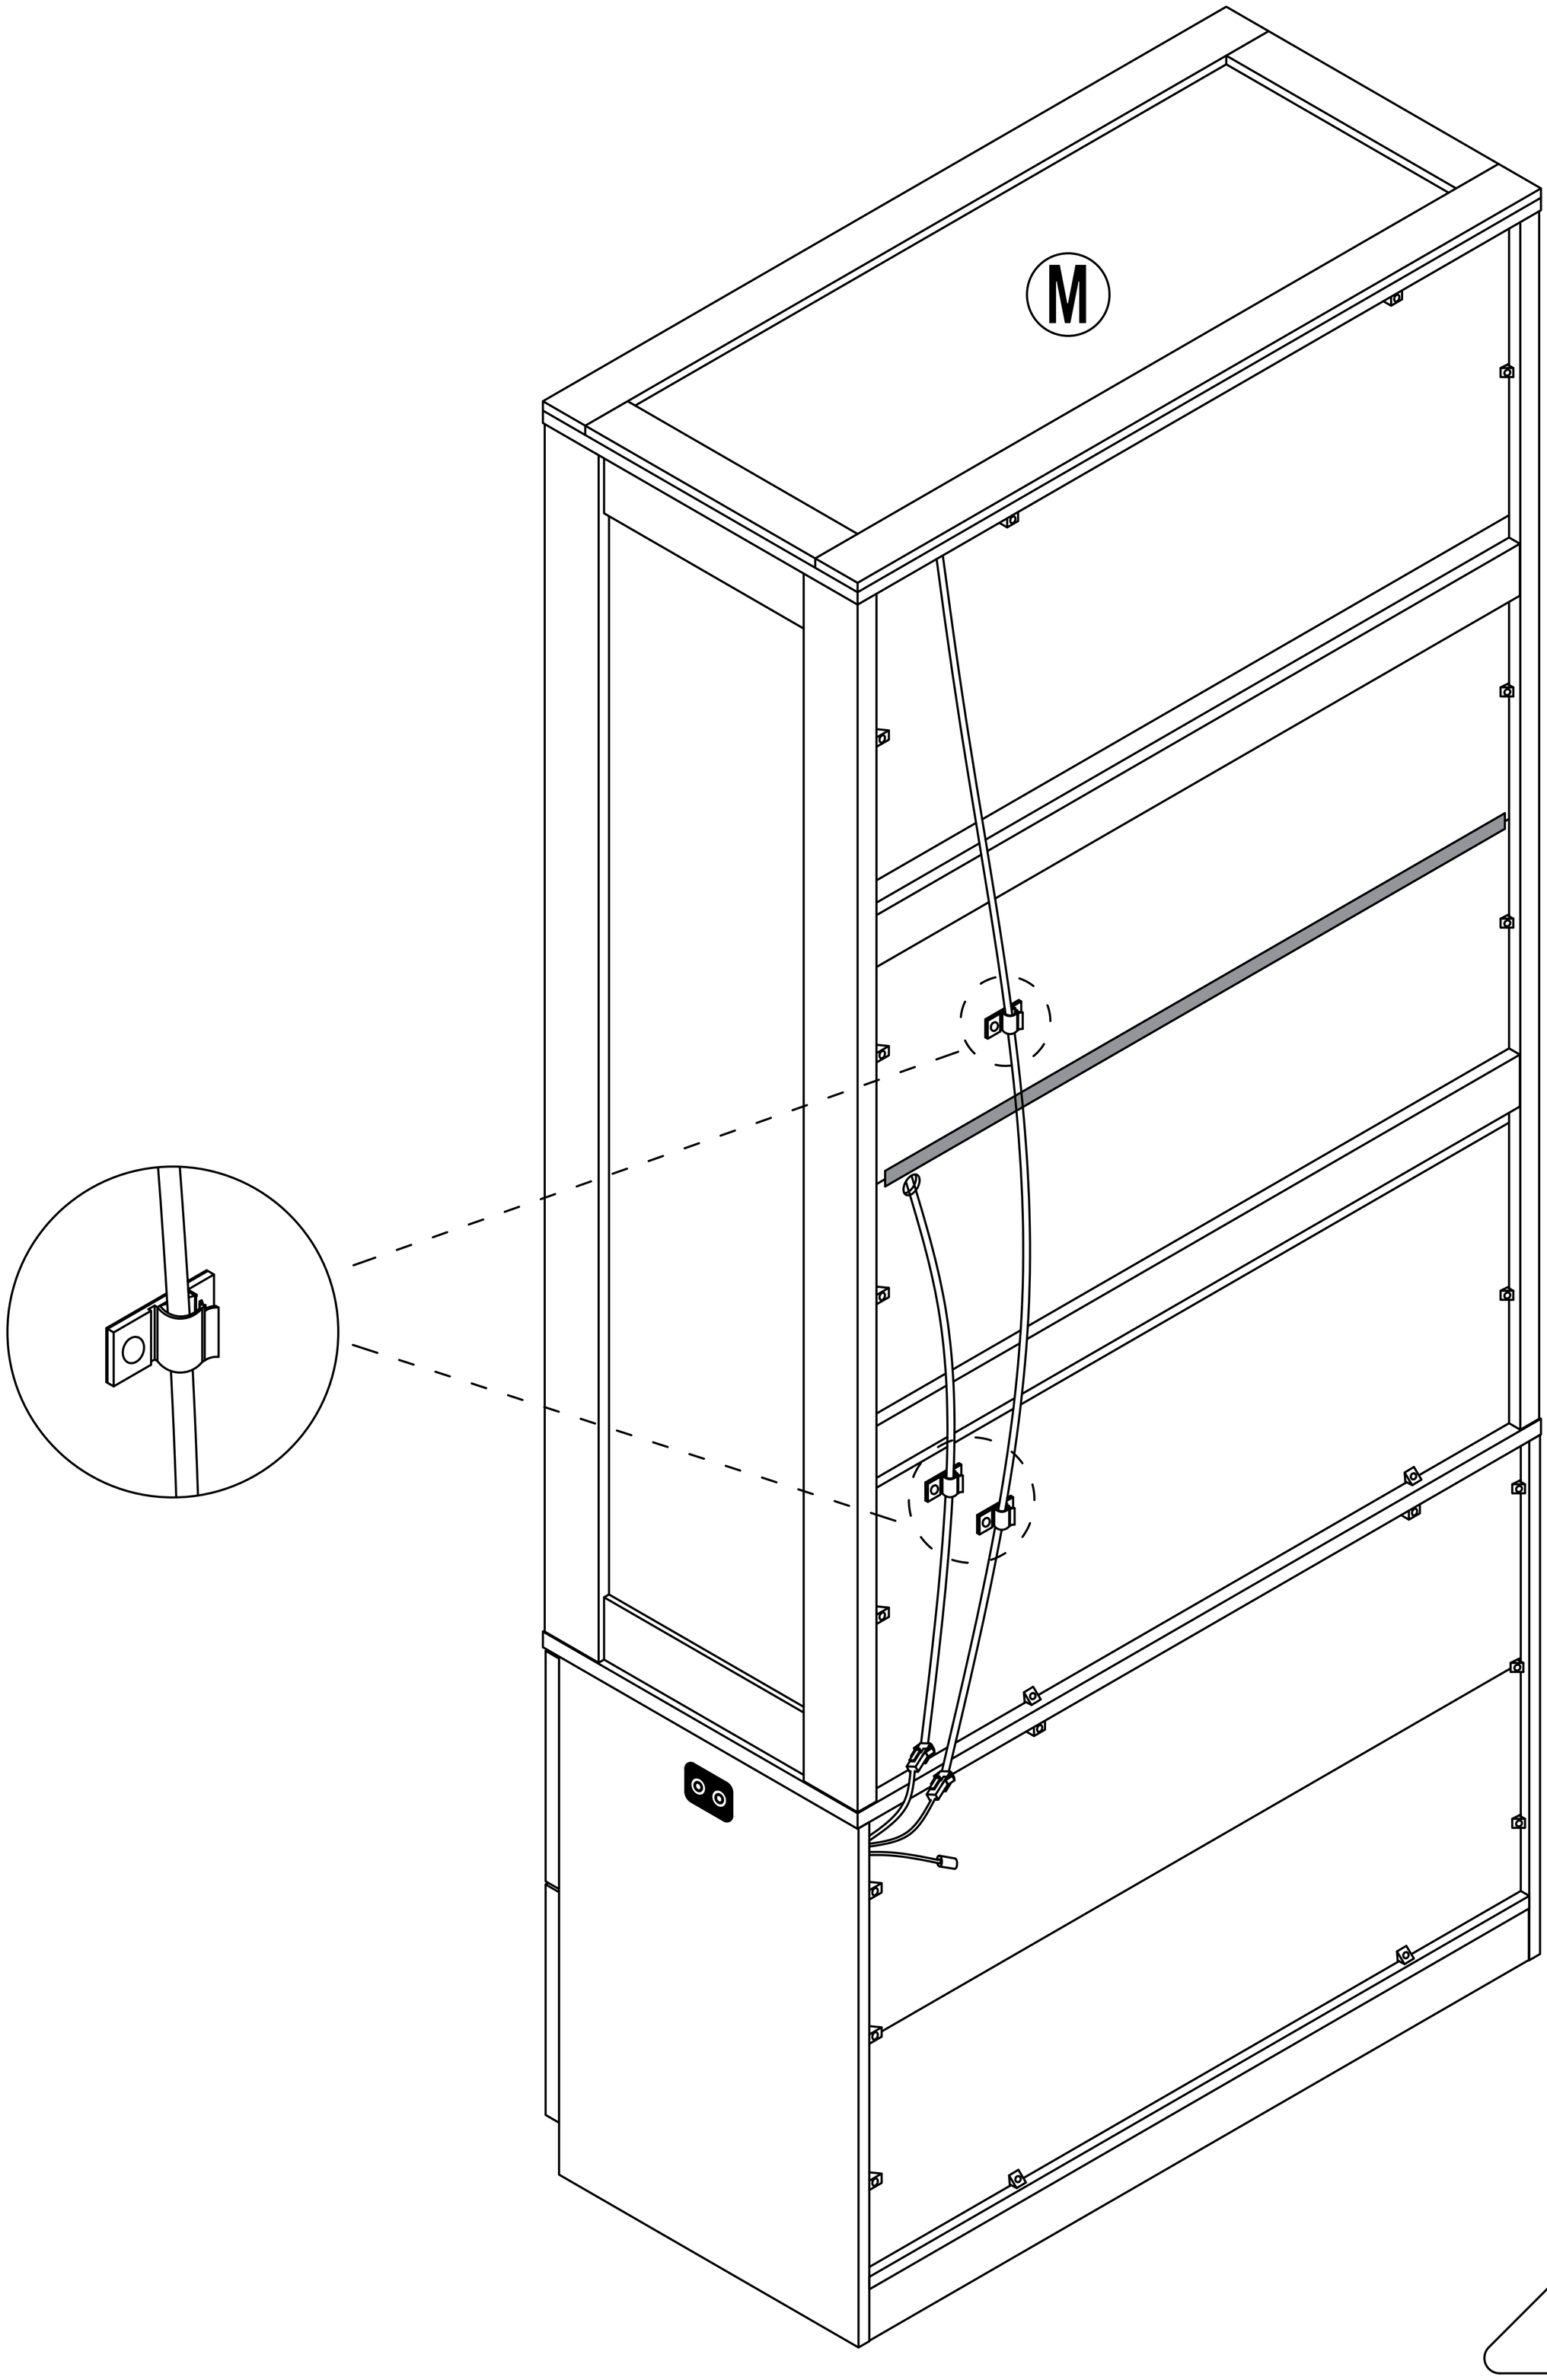

Step 36

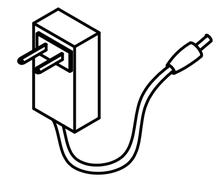

x1

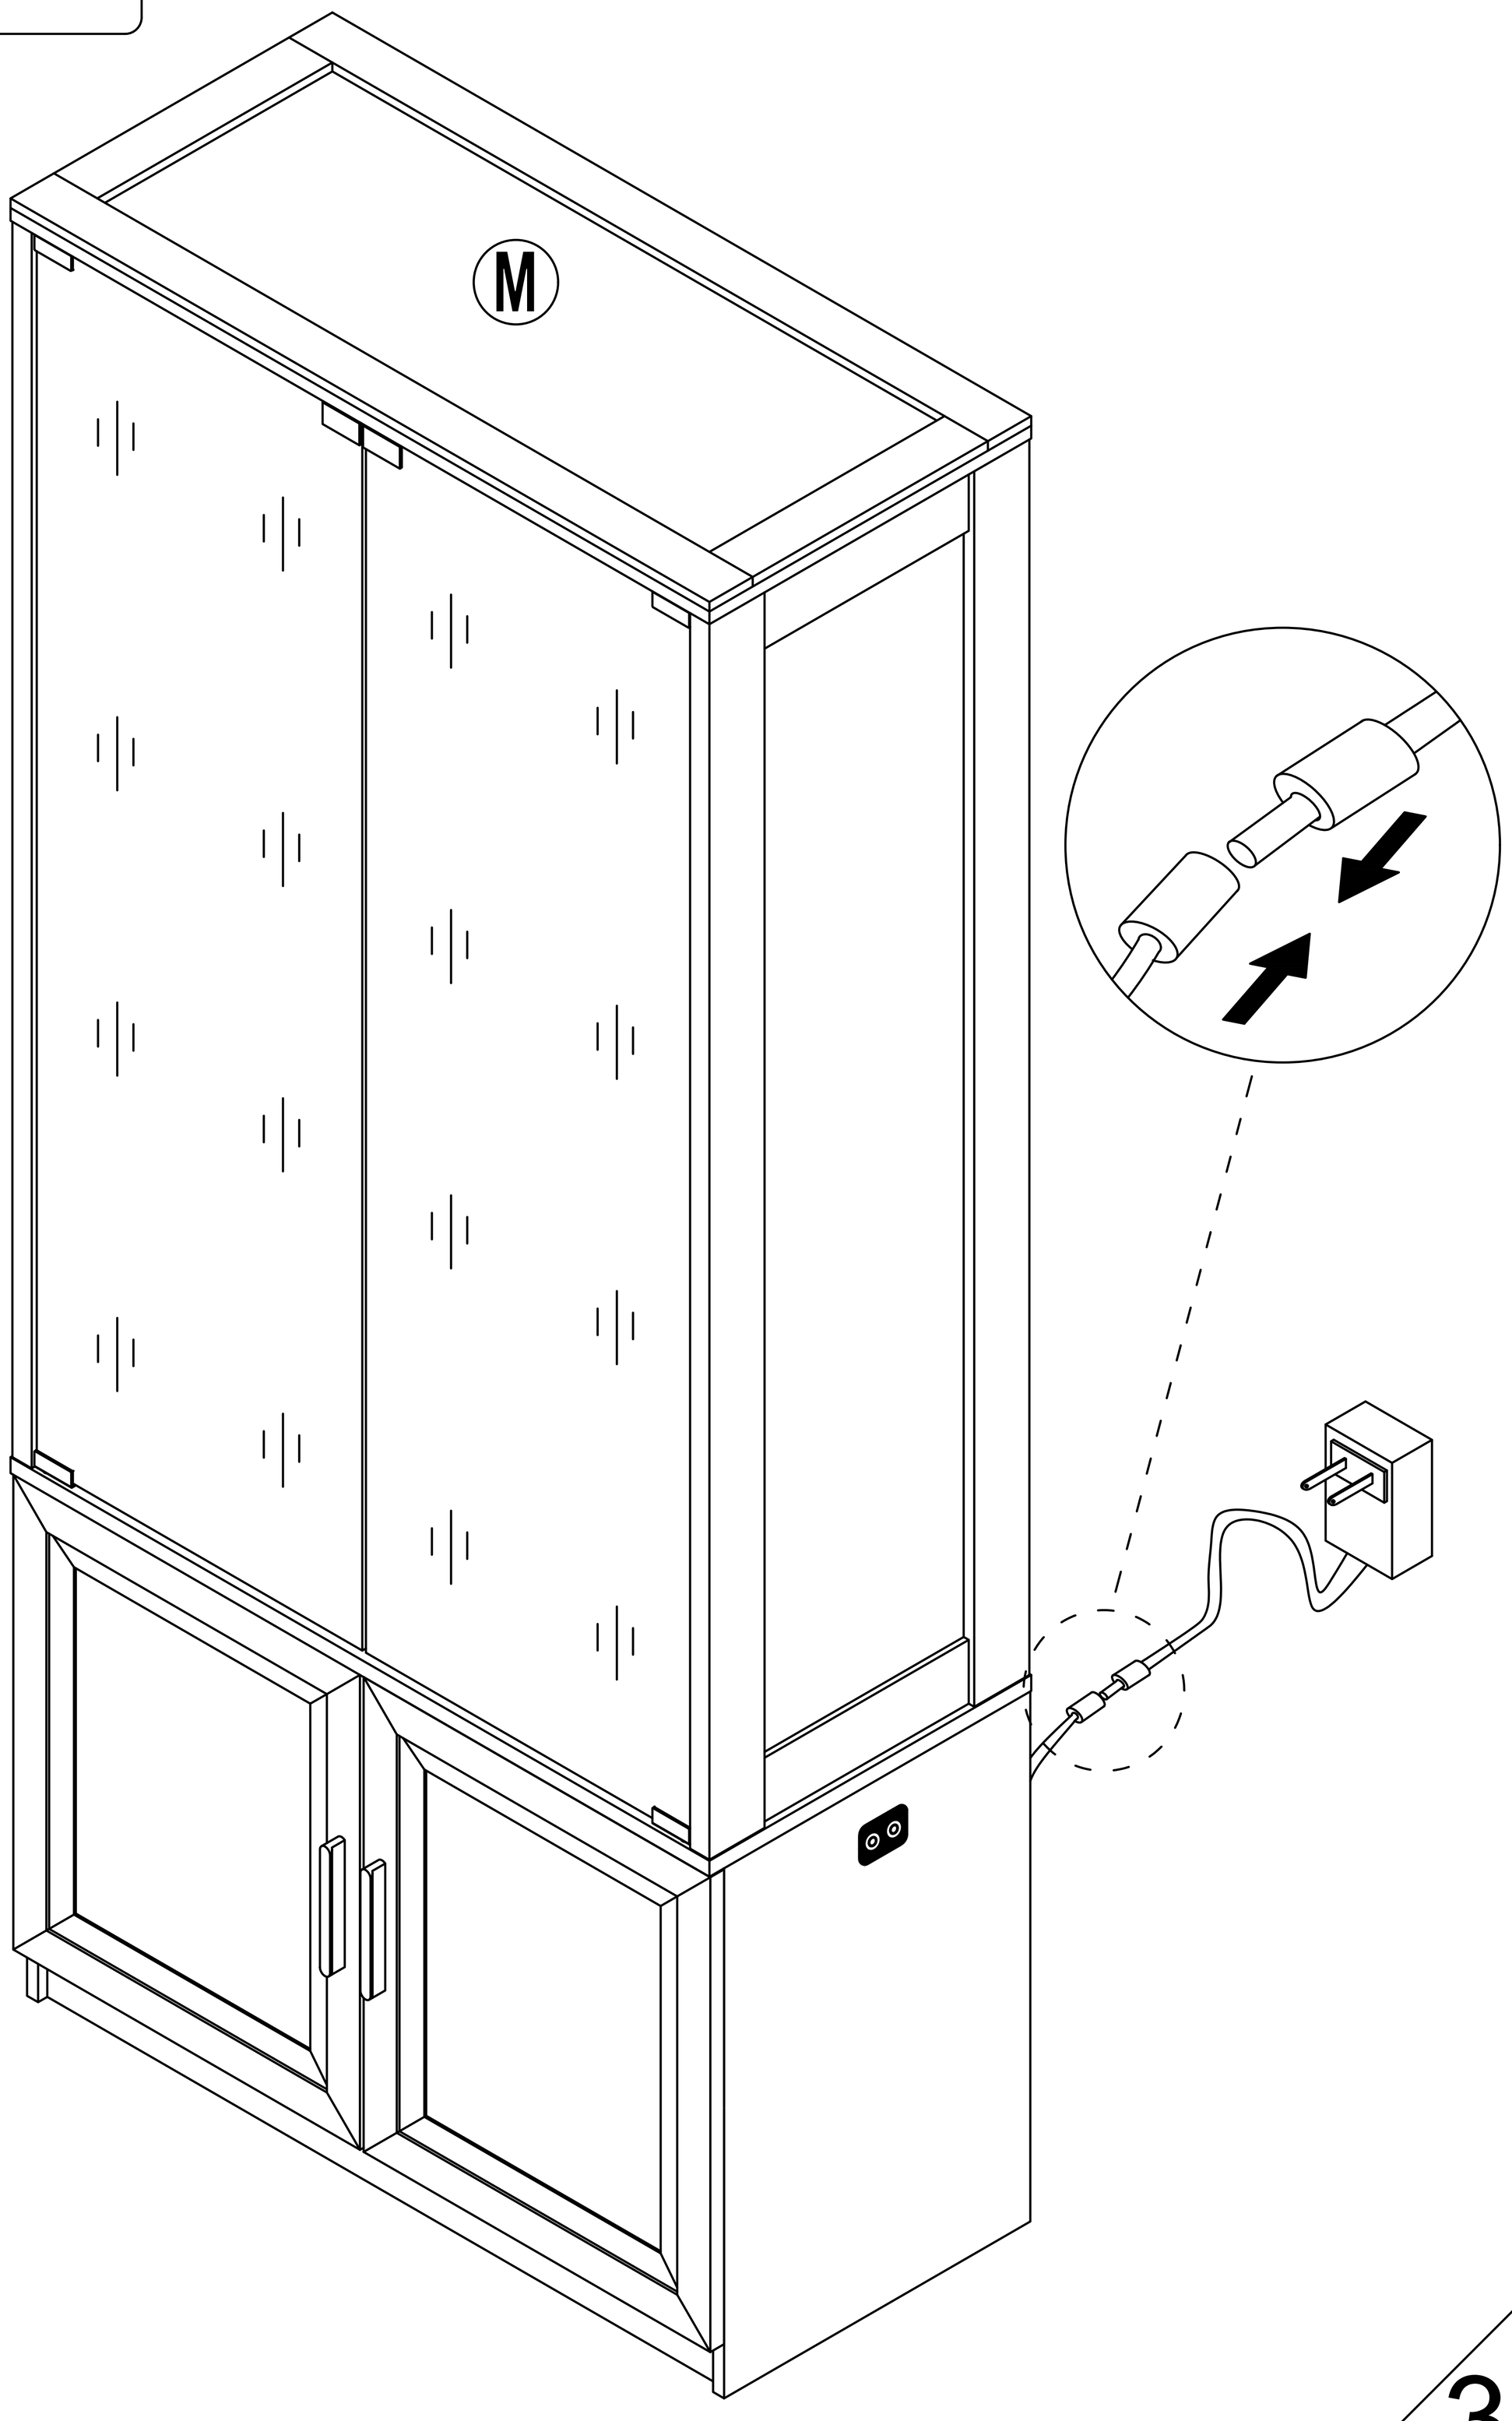


Step 37


# Install as required


12 x2 x2 x2


3.5x14mm

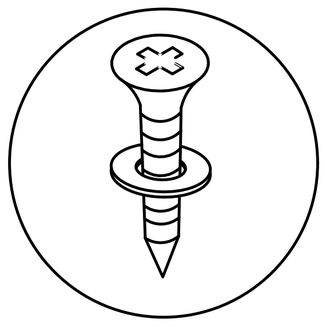

Install the anti fall hardware on the cabinet as shown in the picture first

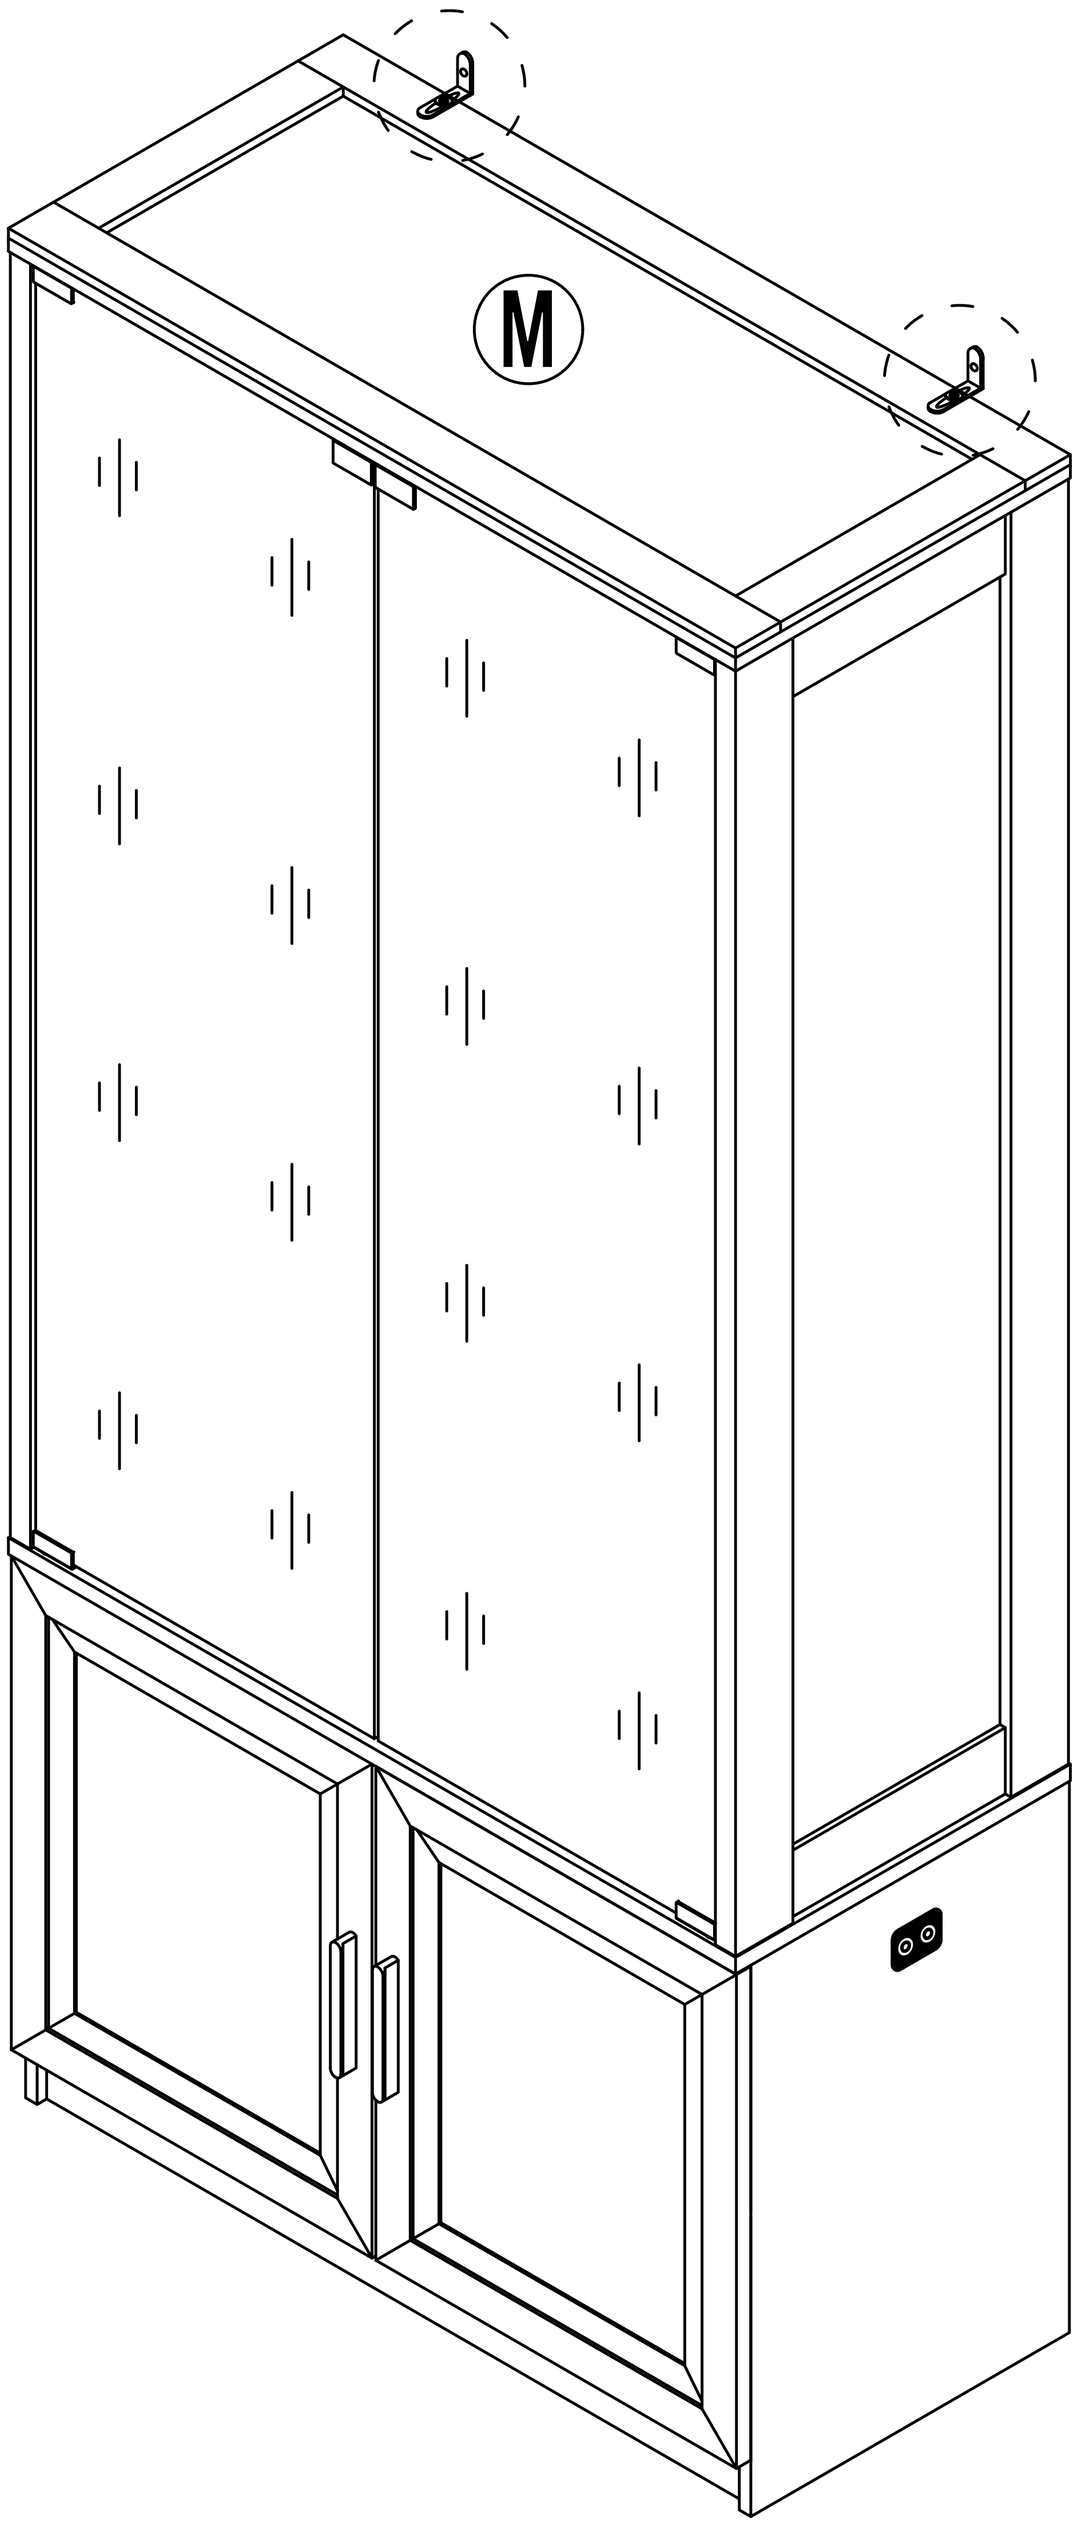


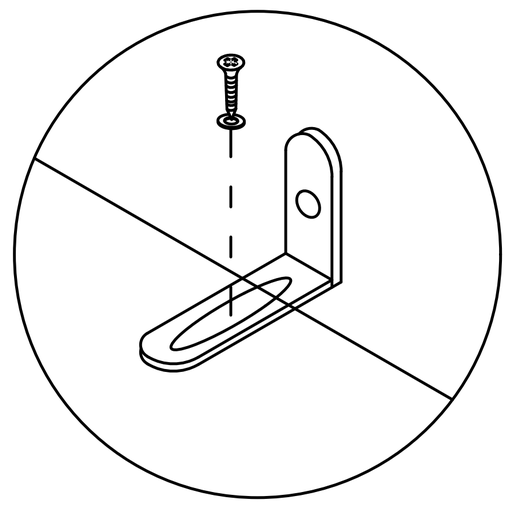

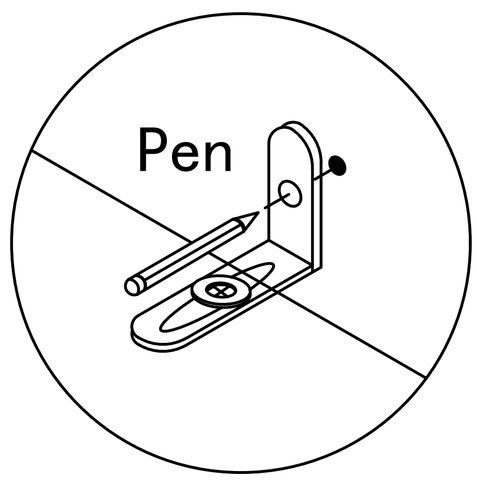
Then mark the wall with a pen through the holes in the anti-fall hardware


# Step 38

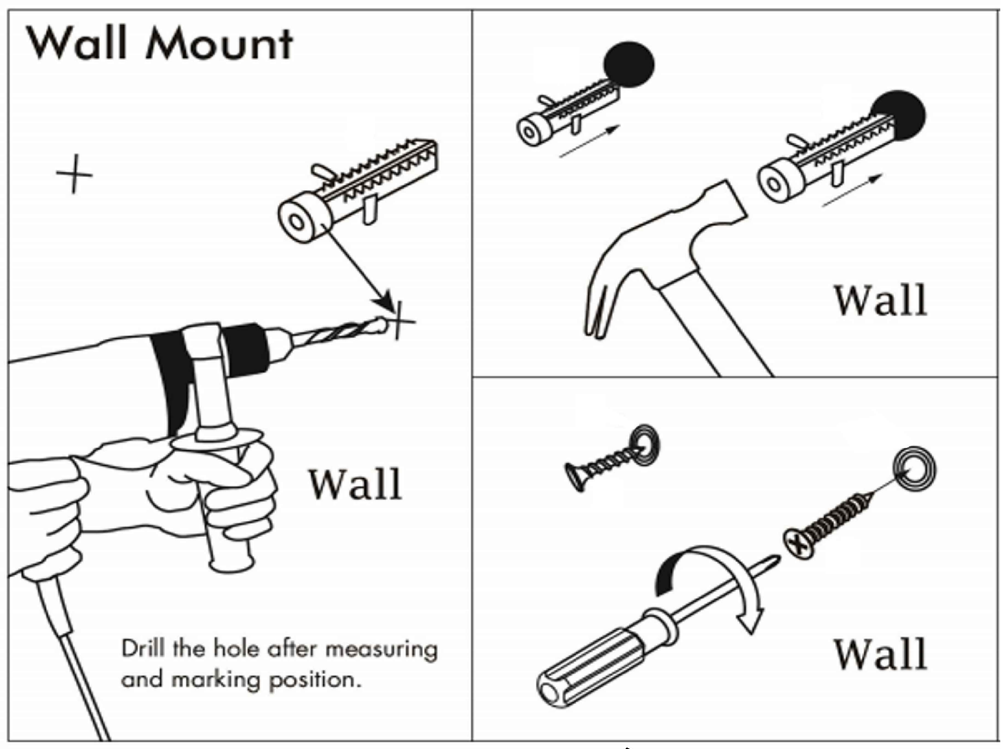




12 x2

x2 x2

Drill the hole with an electric drill and punch in the colloidal particles

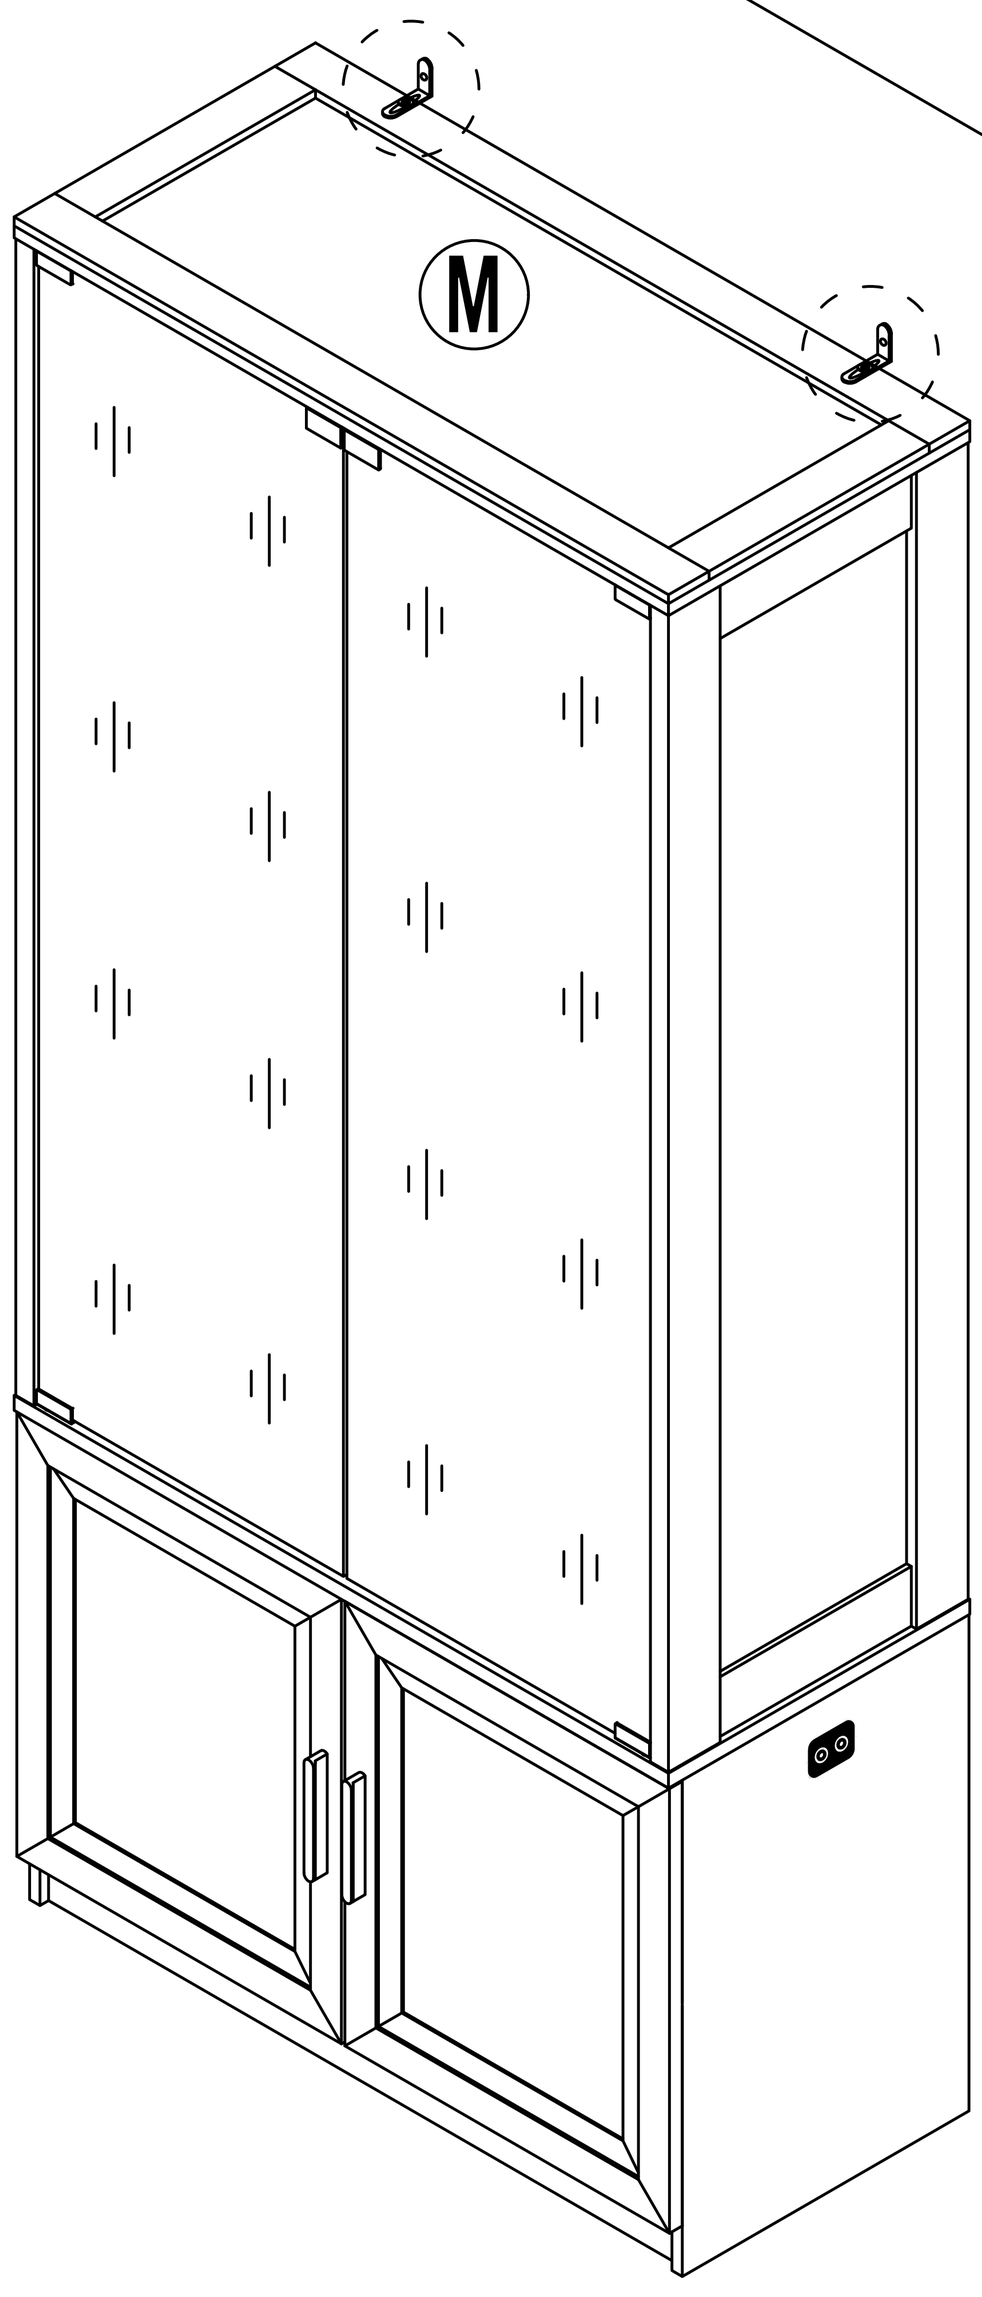

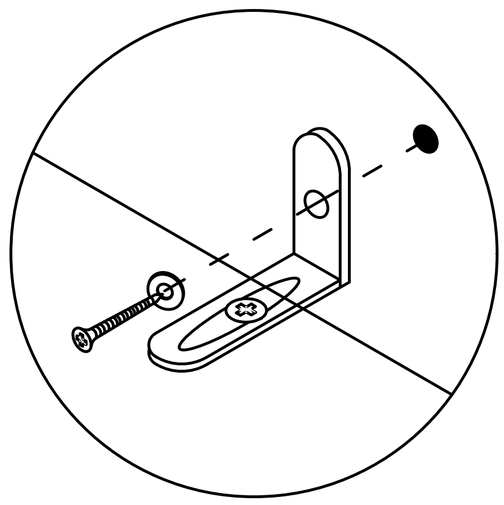

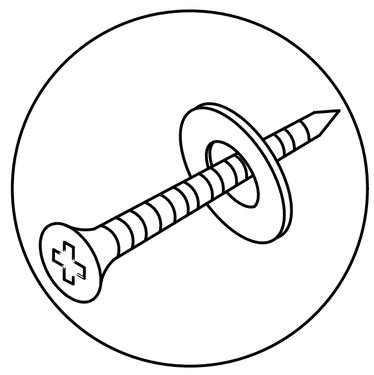4x45mm

Fix the dressing table to the wall


# User's Guide

Thank you for purchasing this product. To use this product, please plug it into a 12V  DC power supply. Please use if the product works normally after connecting to power.

# Introduction

The box is an intelligent controller with 2 touch buttons. It can turn ON/OFF the light, change light colors, and adjust the light luminance.

# Product Show

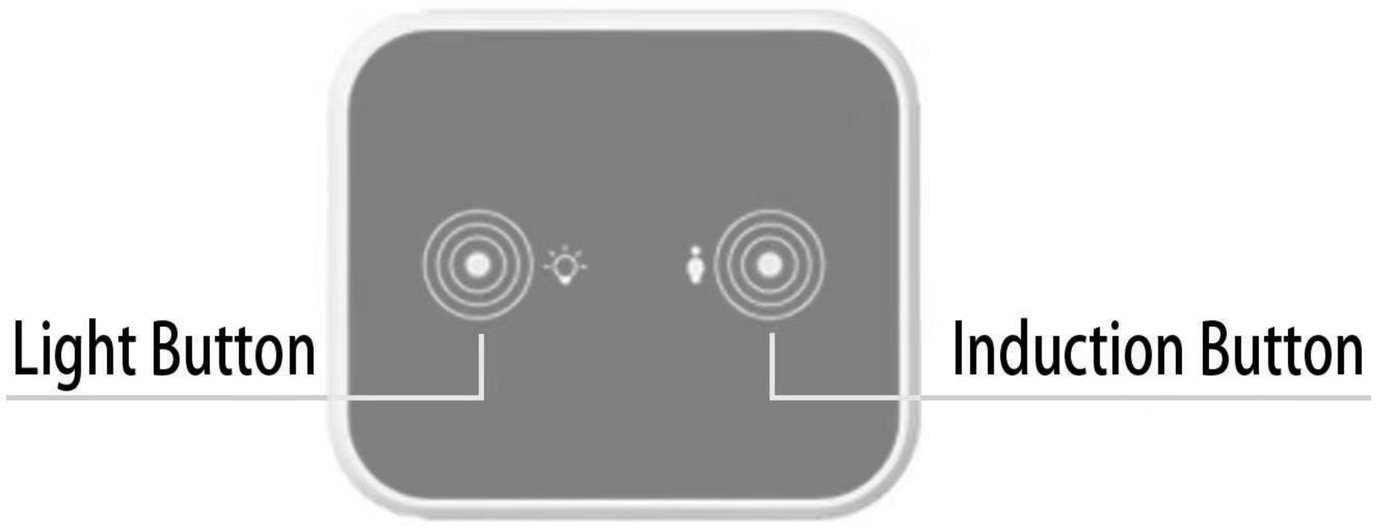


## ATTENTION PLEASE

1. If there is no touch response suddenly, Re-plug the power to reset the touch static electricity.
2. If bubbles appear on the panel, remove the protective film.

# Operation



This touch button is used to turn on/off, change colors, and adjust brightness.

**A**. Short touch -> lighting on -> short touch -> change light color -> short touch -> change light color -> short touch -> lighting off. **B**. Long touch -> adjust the luminance



This touch button is used to turn on/off the induction function.

A. Short touch to turn on the induction function. It can auto-turn on the light when people are close to the controller in 1 meters. It can auto power off the light when the body is far away from the controller after 30 seconds.

B. Long touch to turn off the induction function.

C. Note: When you touch the light button to change the light modes, the induction function will automatically turn off. It is best to turn on this function after selecting the light color and adjusting the brightness you want.