3, 5 and 9 Light Chandelier

Chandelier

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.


GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.


This product is safety listed for damp locations.

This product may be dimmed with a standard incandescent dimmer.

All rights reserved.

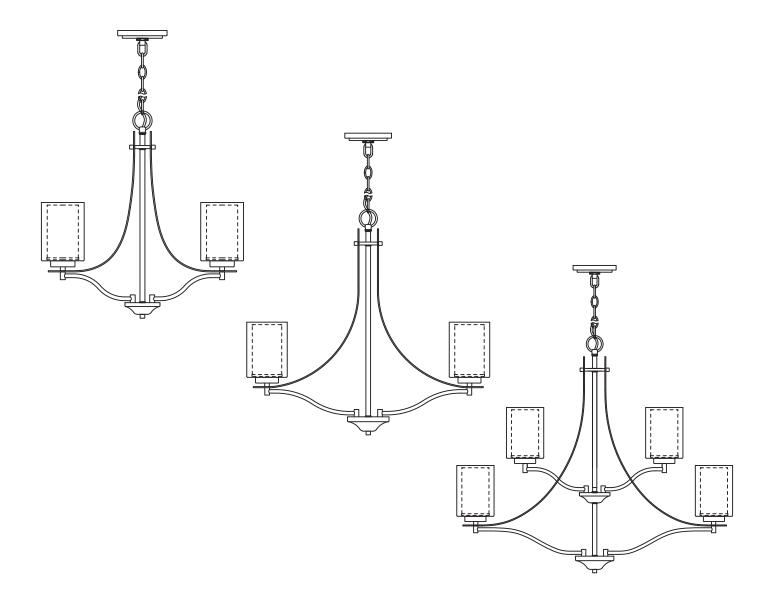

Install the Fixture

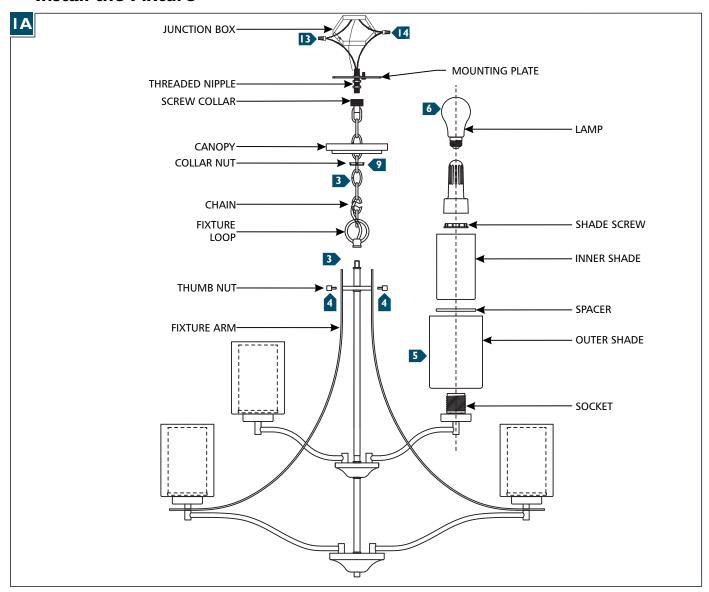

- If necessary, screw the shorter end of the threaded nipple tightly onto the mounting plate and the screw collar onto the threaded nipple.
- 2 Secure the mounting plate to the junction box.
- 3 Feed the fixture wires through the stem, hub, and fixture loop, then screw stem onto the fixture.
- 4 Attach the fixture arms to the fixture with the thumb nuts.
- 5 Place the outer shade, spacer and the inner shade in that order on to the shade base and secure it in place by installing and screwing the shade collar nut onto the socket until snug.
- 6 Screw the lamps into the sockets. Refer to the label on the socket for Max Wattage Information.
- 7 Determine the wanted height of the fixture and remove a portion of the chain from the bottom by opening a link with pliers.
- B Open the chain link with pliers and install the chain on the fixture loop, then re-close the chain link.
- 9 Unscrew the collar nut from the screw collar, install the collar nut and the canopy onto the chain (in that order).
- Open a link on the other end of the chain with pliers and install the chain onto the screw collar to secure the fixture, re-close the link with pliers.
- Weave the cord through the chain, canopy, collar nut, screw collar, threaded nipple, and out of the junction box. Trim the cord leaving enough to make electrical connections.
- Connect the fixture to a suitable ground in accordance to local electrical codes.
- Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- IS Neatly place all the wires into the junction box, place the canopy onto the ceiling, and secure it in place by screwing the collar nut tightly onto the screw collar.