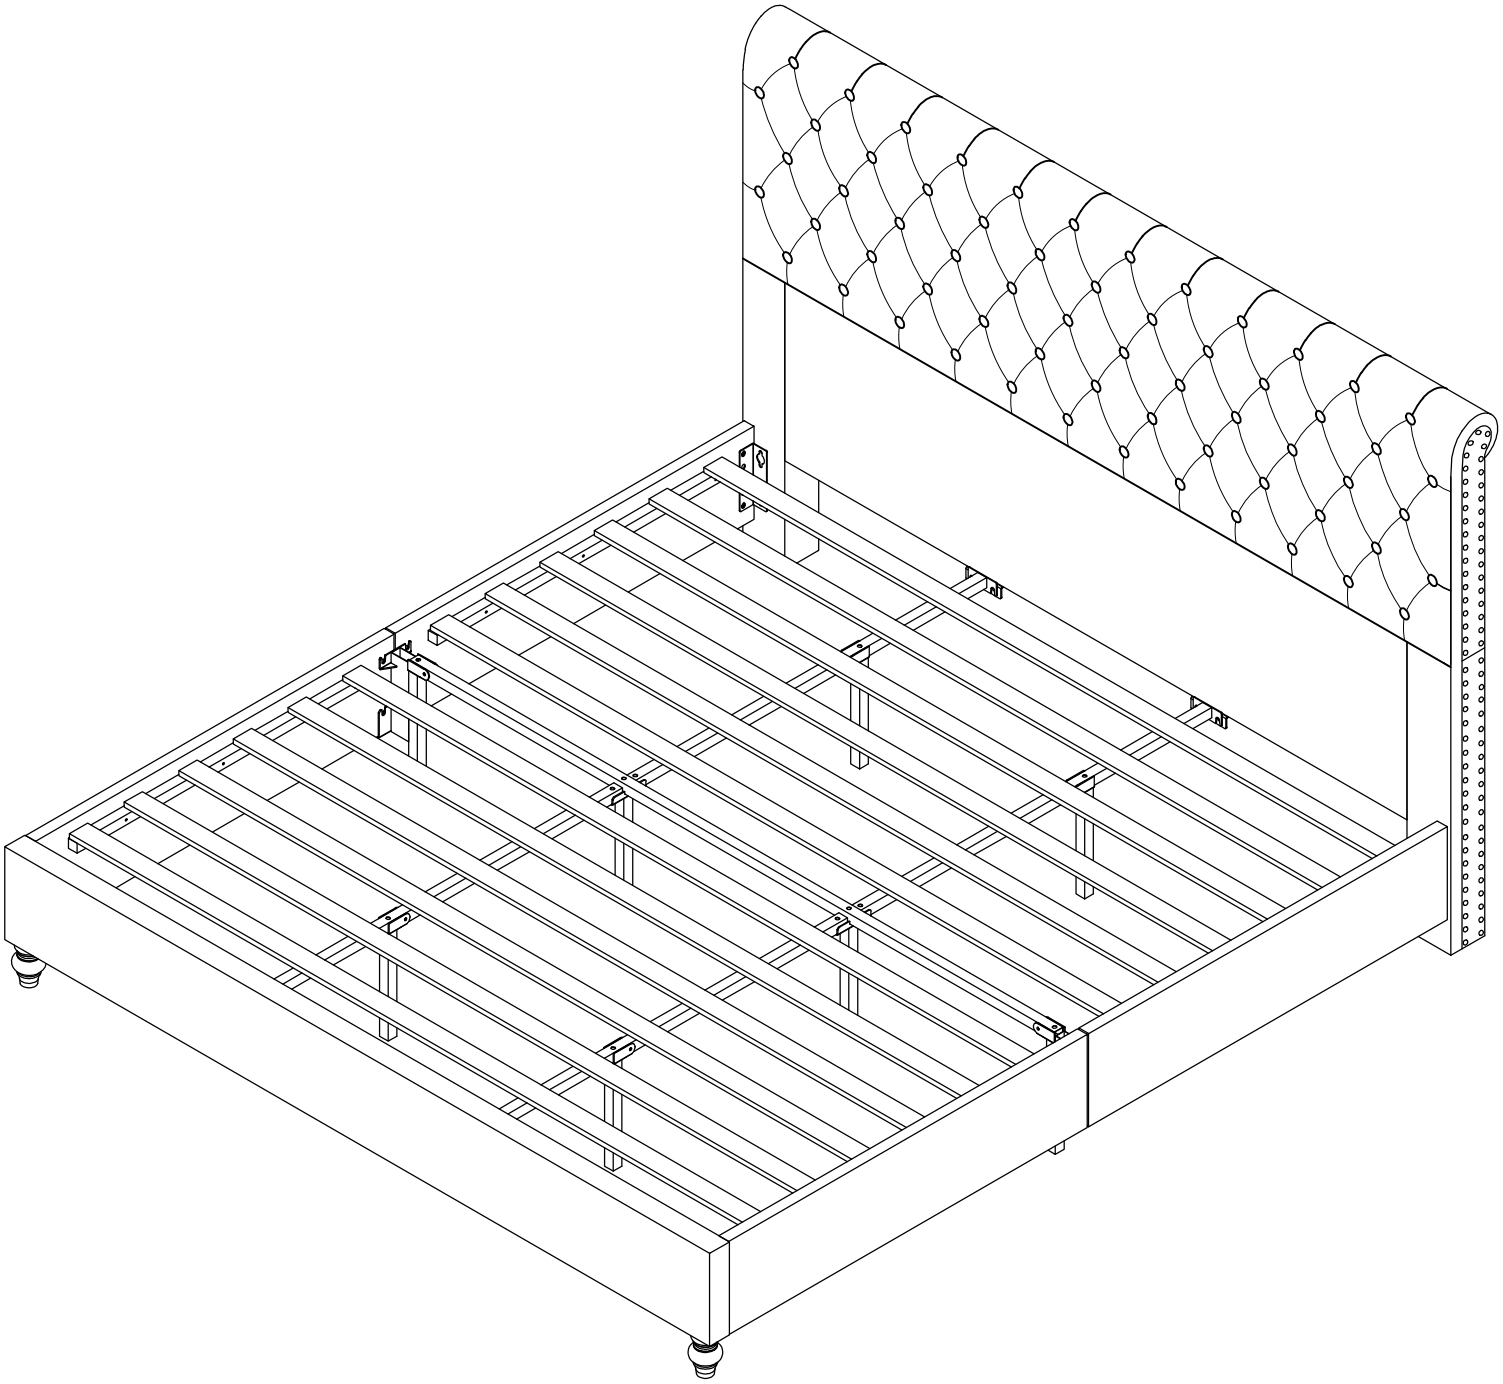
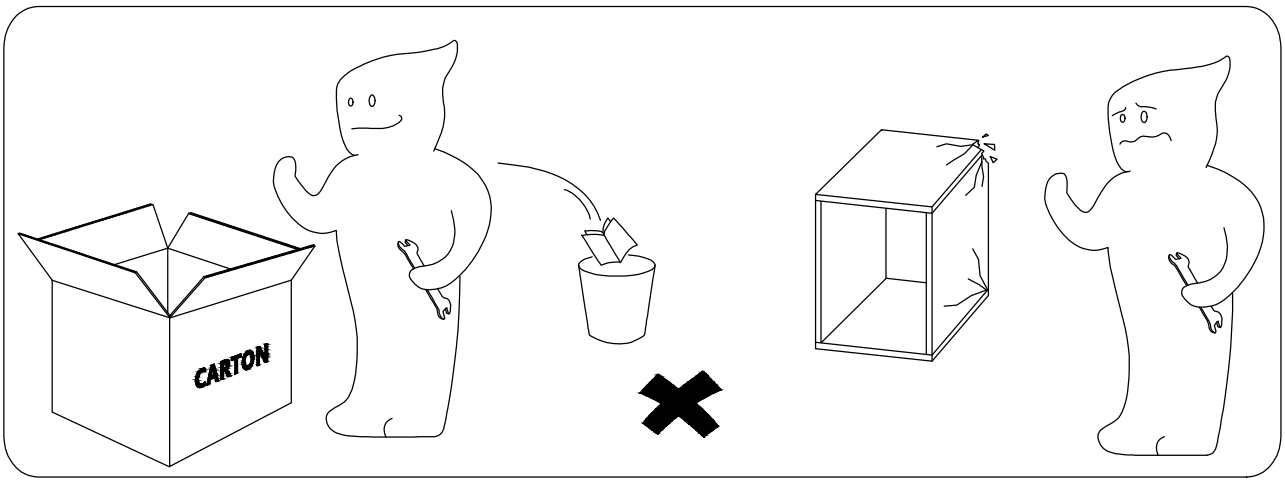
Upholstered Platform Bed with Tufted Wingback Headboard.

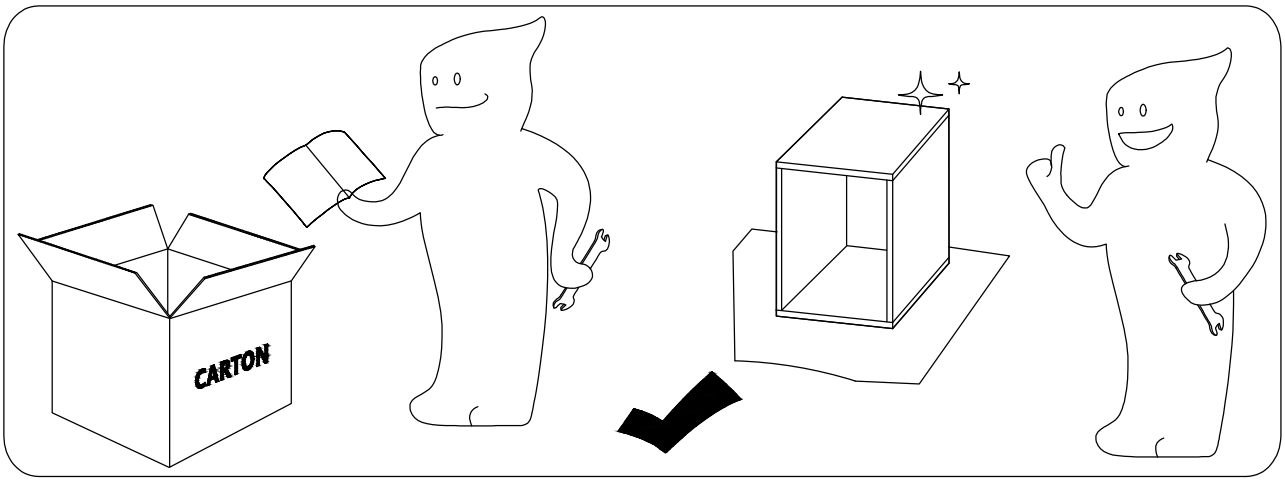


Dear Customers,
Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.


IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.

















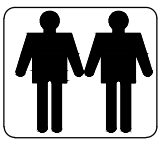
Note:
1.Should be assembled on flat ground to keep balance.
2.Before completing the installation,do not tighten the screws.






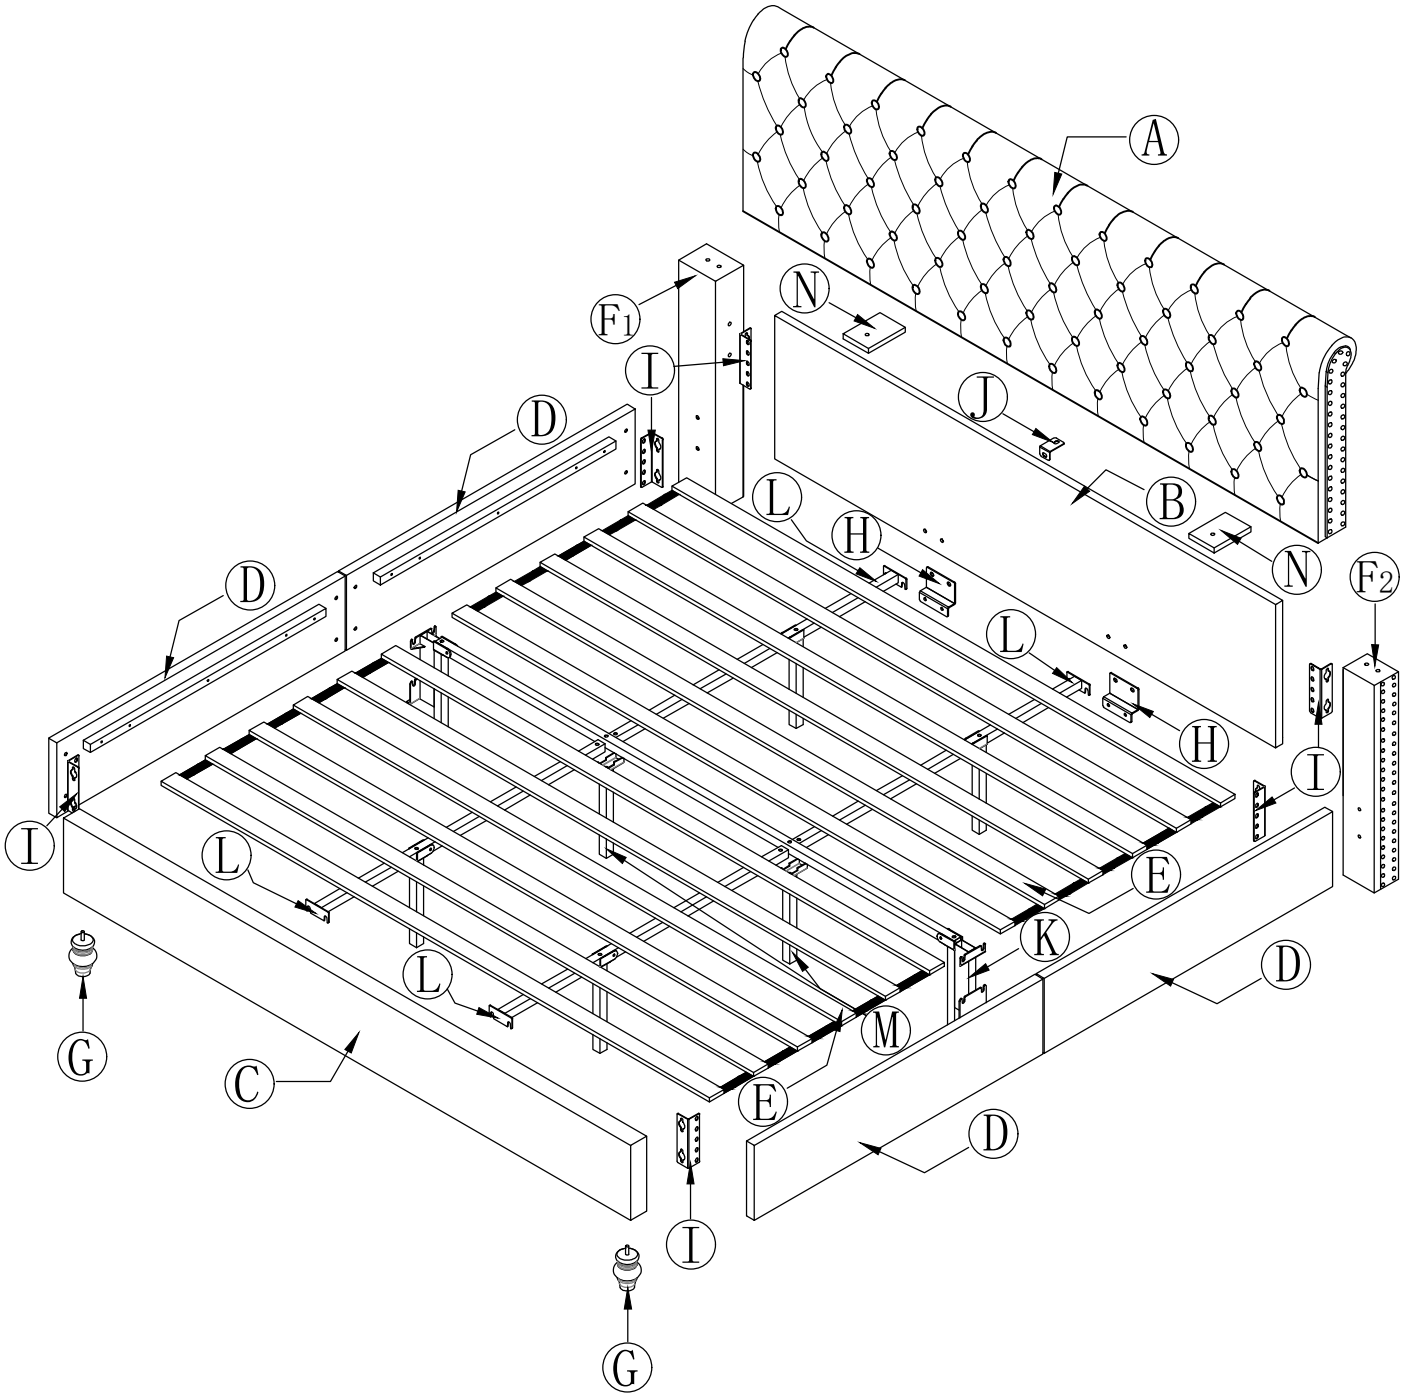For easier and better assembly, 2 or more adults are required.









A
F1
N
I
J
D
B
L
H
N
F2
D
L
H
I
I
L
E
K
L
D
G
M
C
E
D
I
G

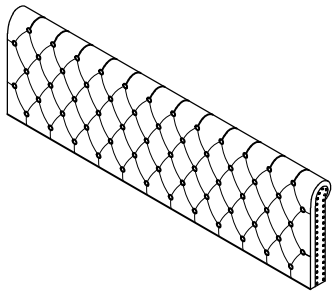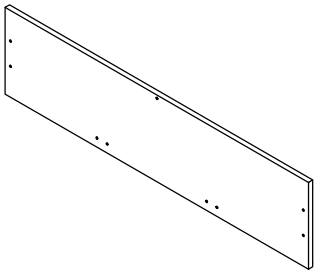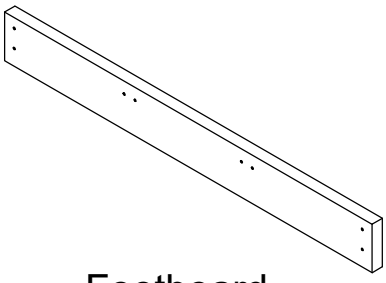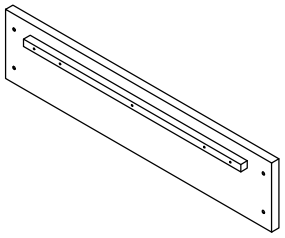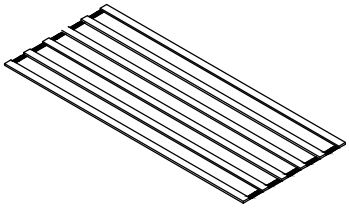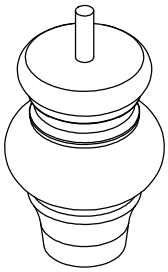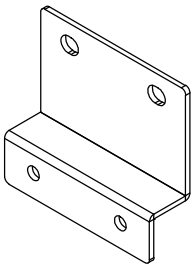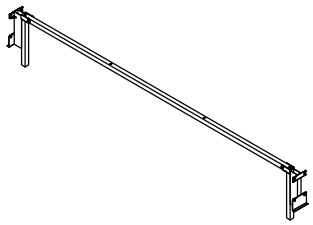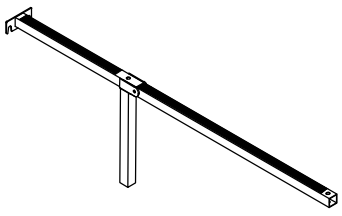Part list


A 1PC  Top headboard	B 1PC  Bottom headboard	C 1PC  Footboard
D 4PCS  side rail	E 2PCS  Slat	F_1 1PC  Left Leg
G 2PCS  Leg	H 2PCS  Connector	I 6PCS  Connector
K 1PC  Cross bar	L 4PCS  Middle support bar	M 2PCS  Support leg

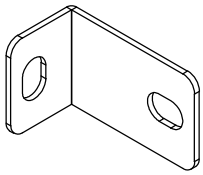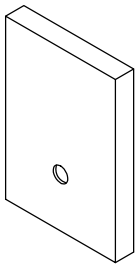F_2 1PC  Right Leg	J 1PC  Connector	N 2PCS  Support block

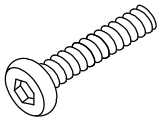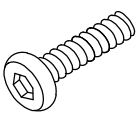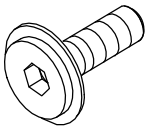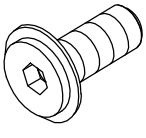Hardware list

O	P	Q	R	S	T	U
 M8*50 6PCS	 M8*40 10PCS	 M8*35 2PCS	 M8*25 42PCS	 M8*16 4PCS	 ϕ22*ϕ8.5 4PCS	 M8 Spanner 1PC

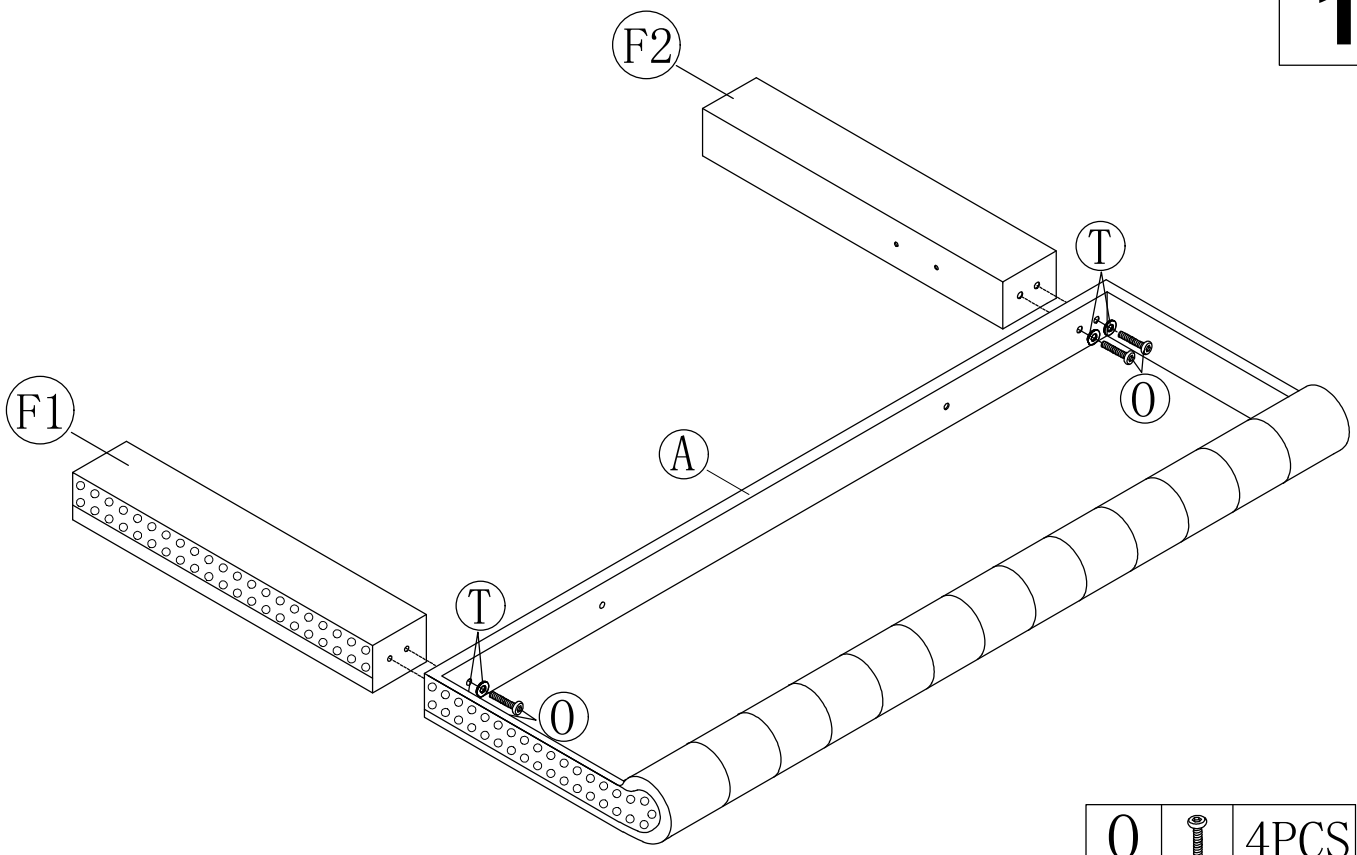
1



O		4PCS
T		4PCS

Back side

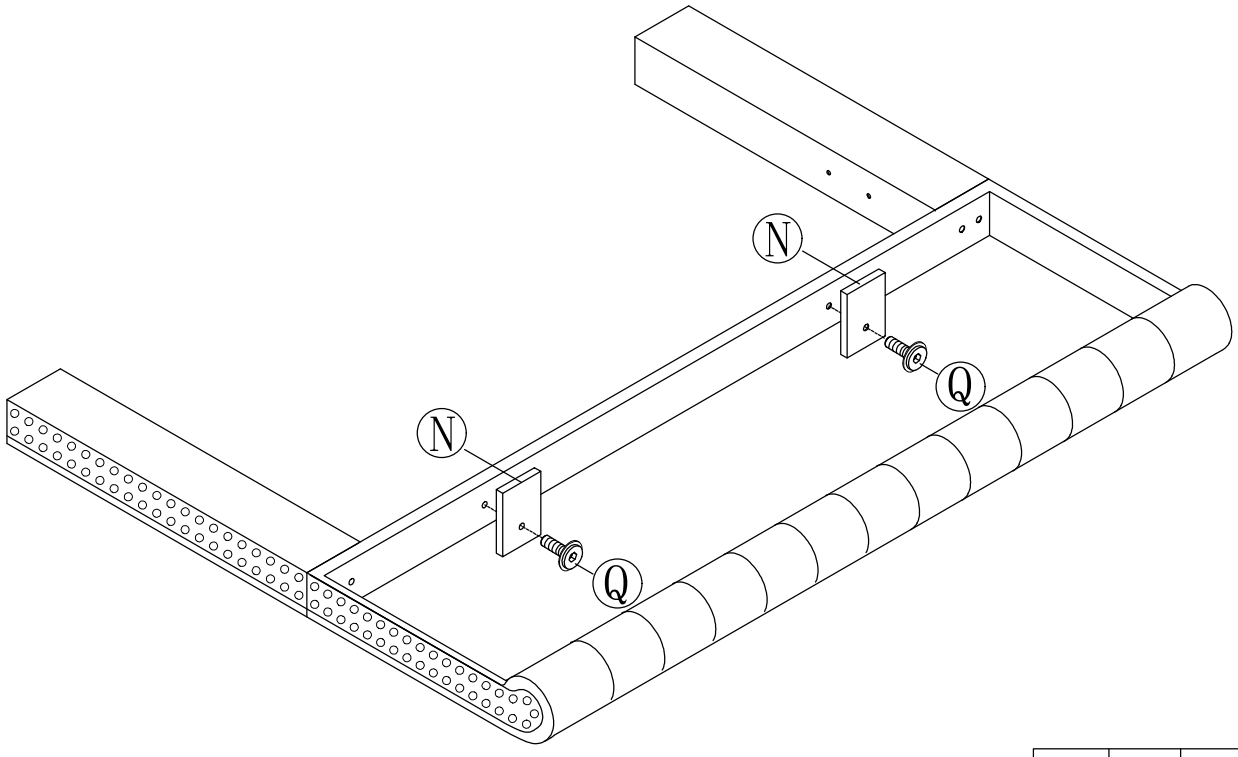
2



Q		2PCS


Back side

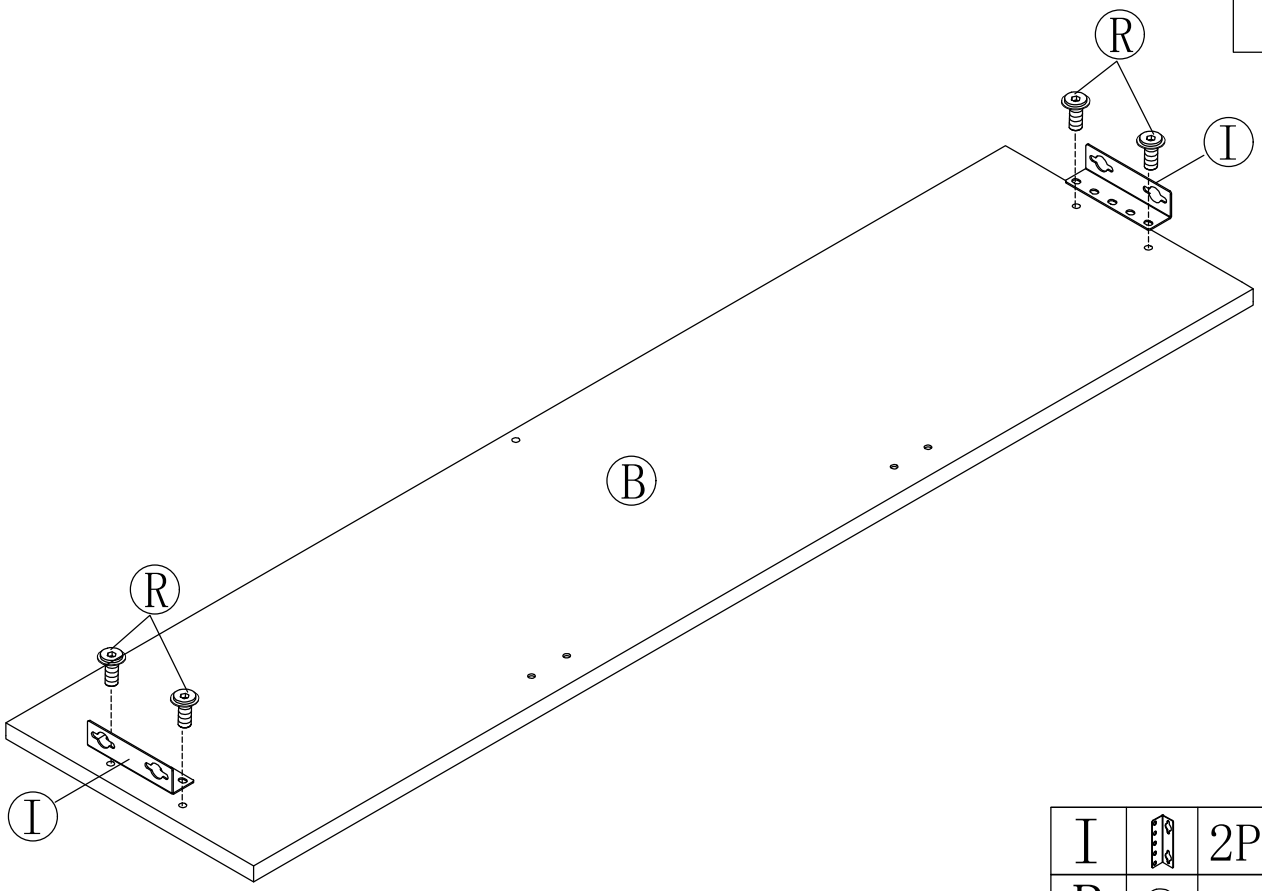3




I		2PCS
R		4PCS

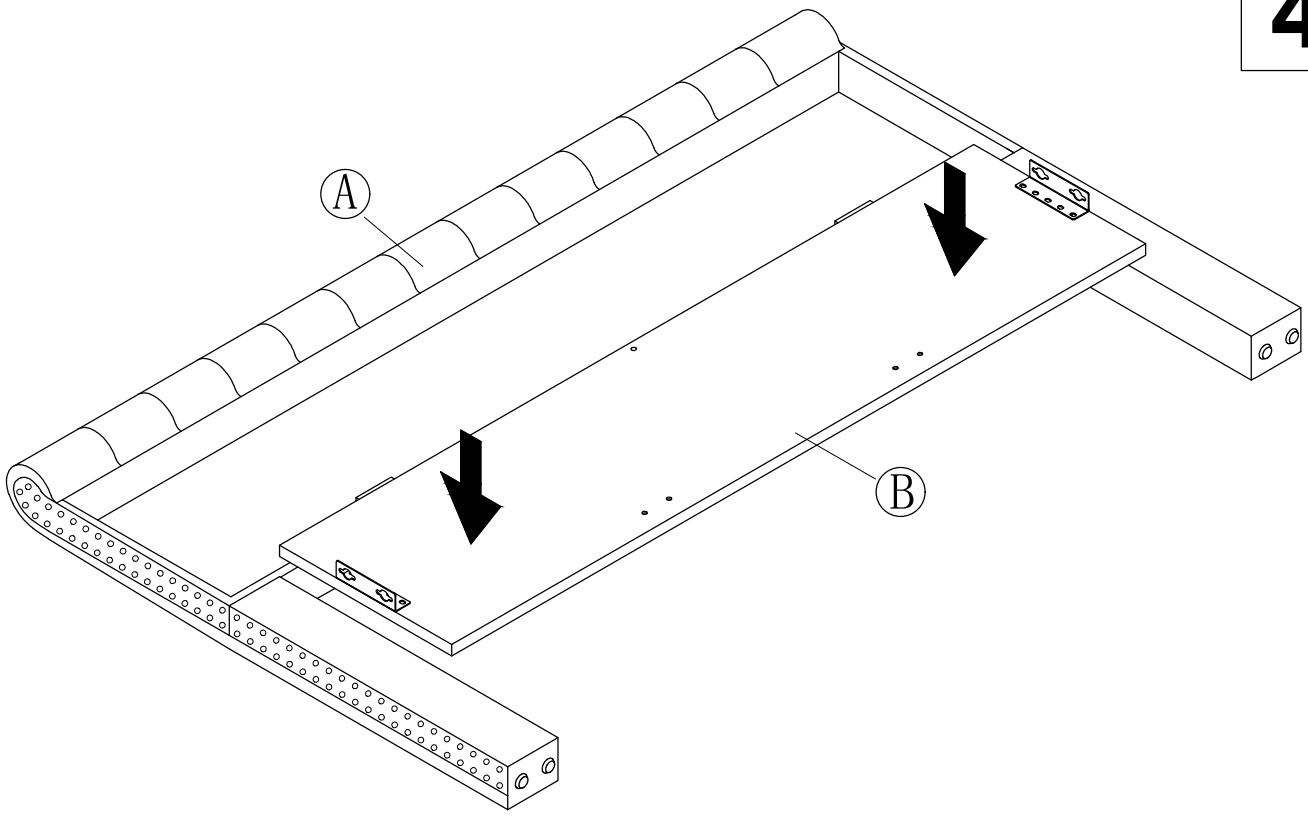4




5

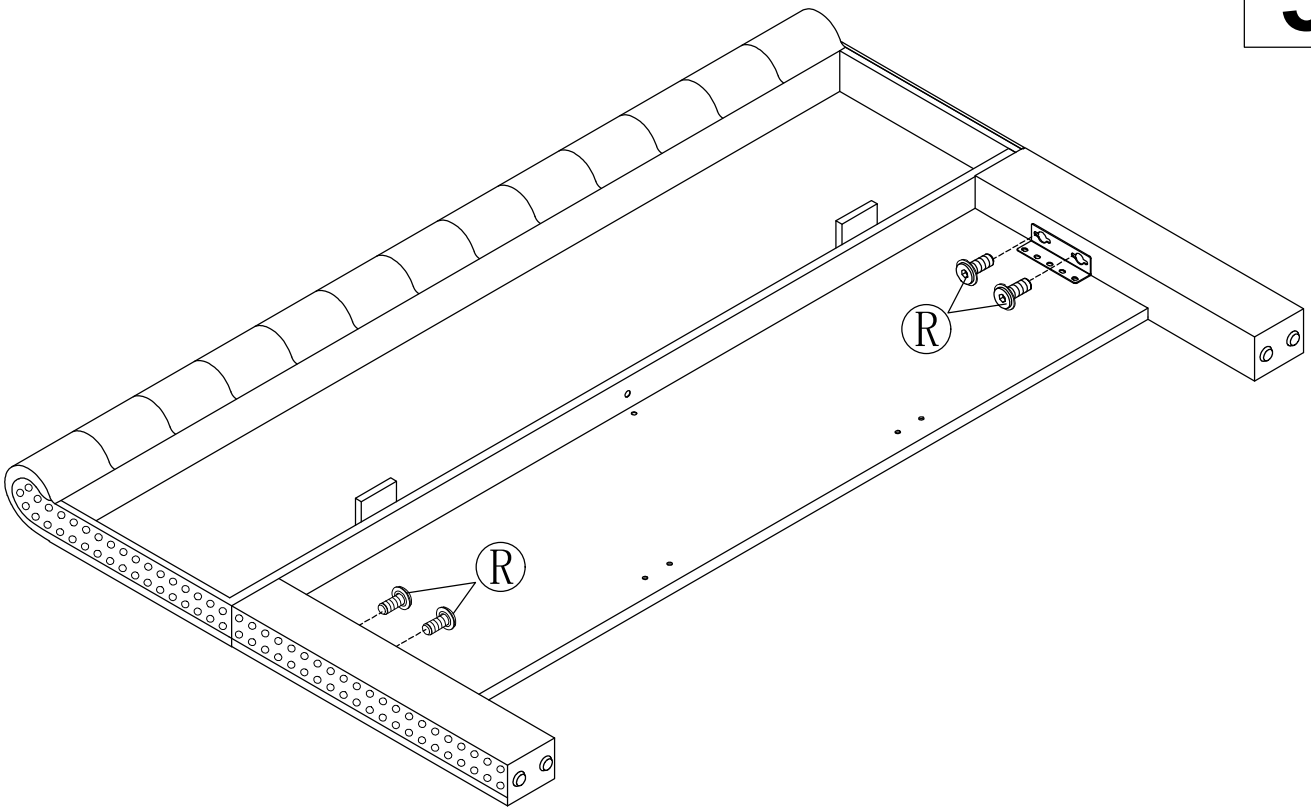

R		4PCS

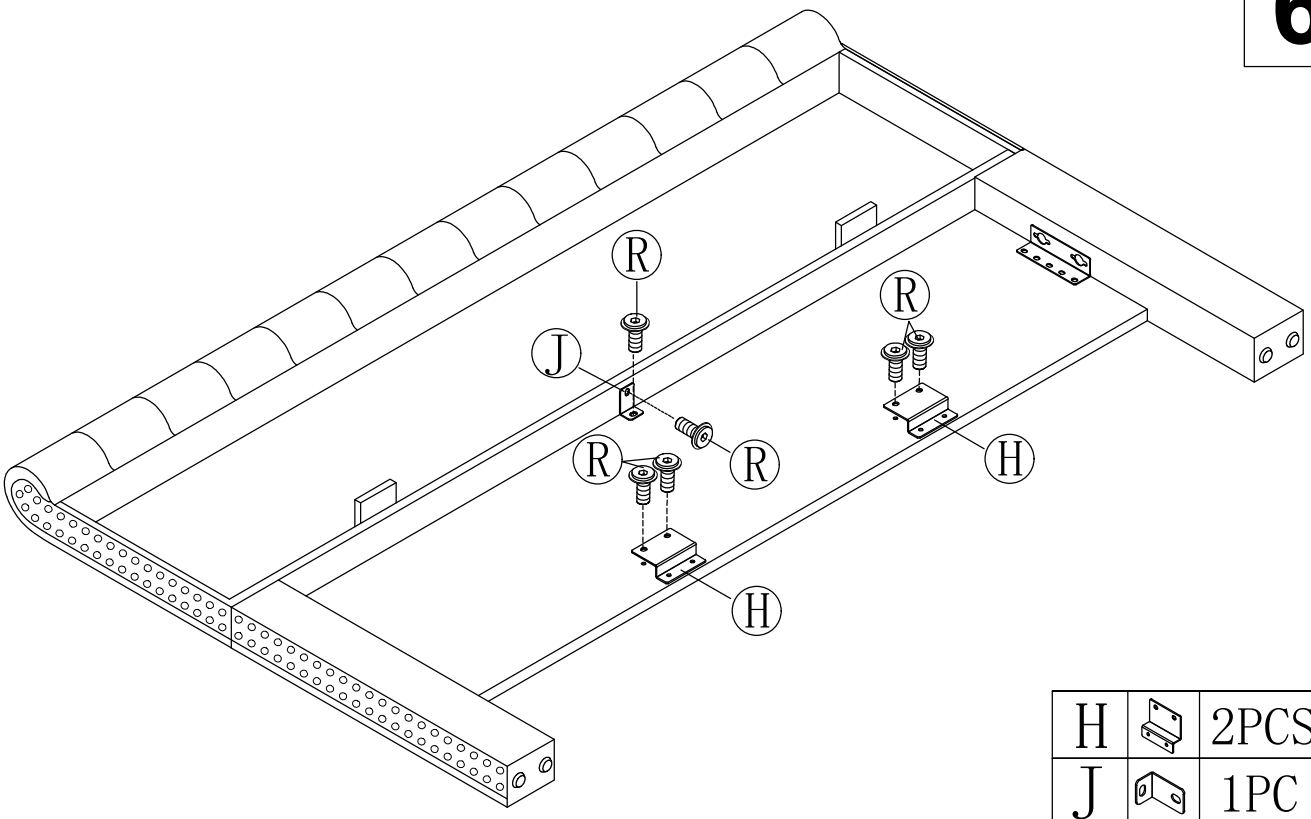
6



H		2PCS
J		1PC
R		6PCS


Flip over after tightening the screws

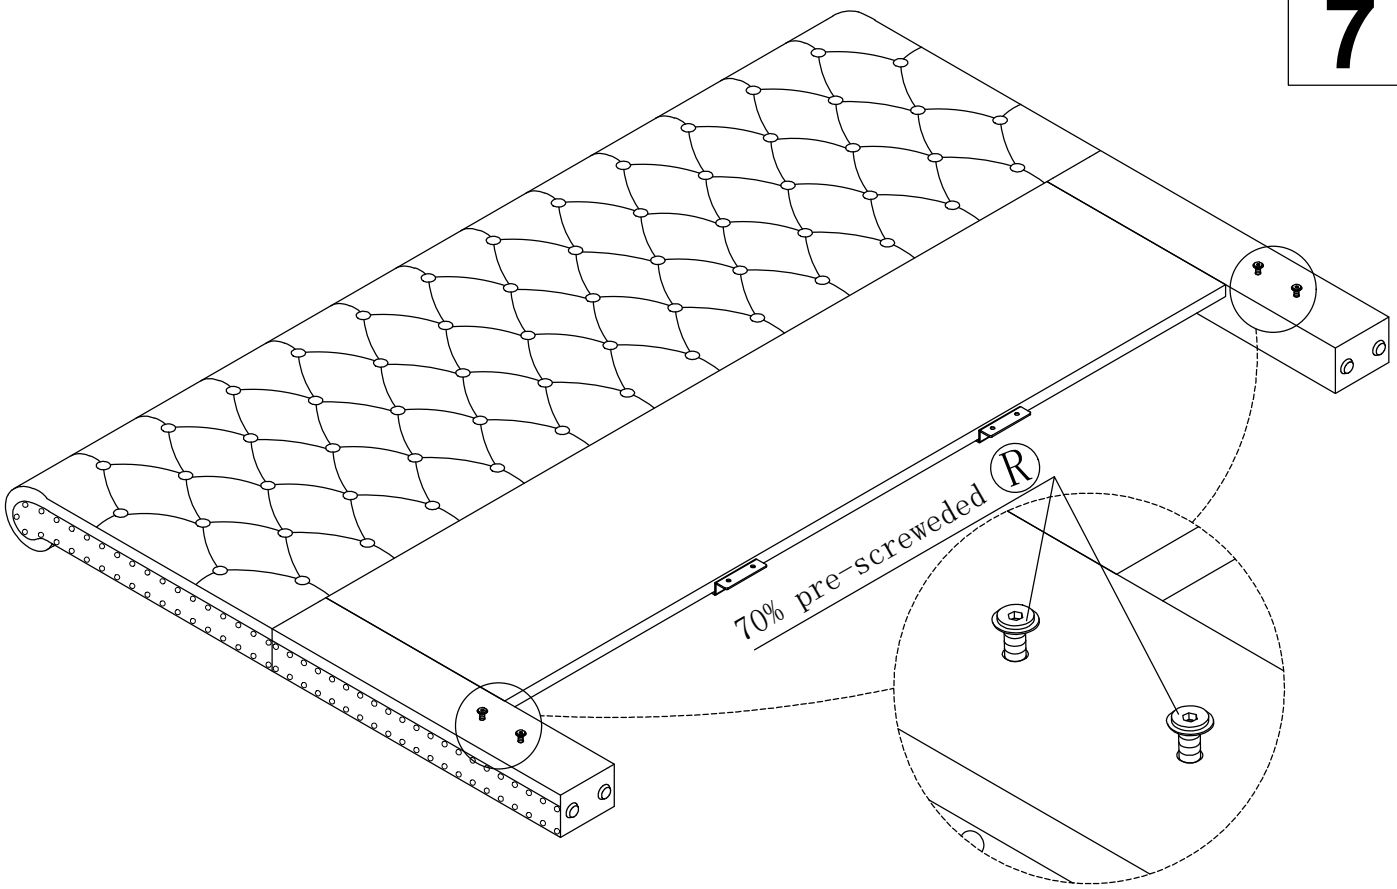7




R		4PCS

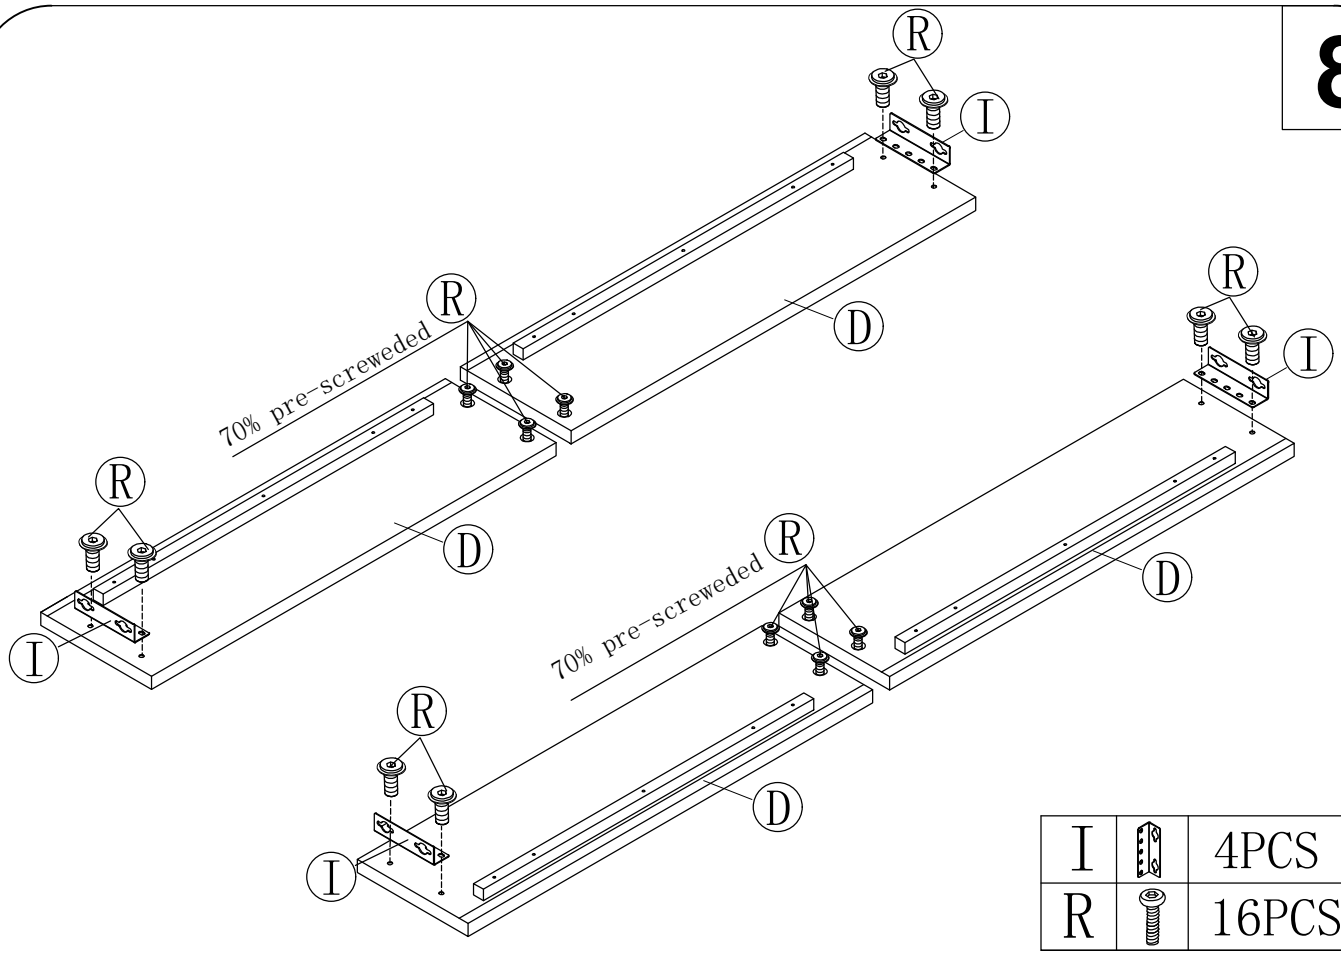8




I		4PCS
R		16PCS

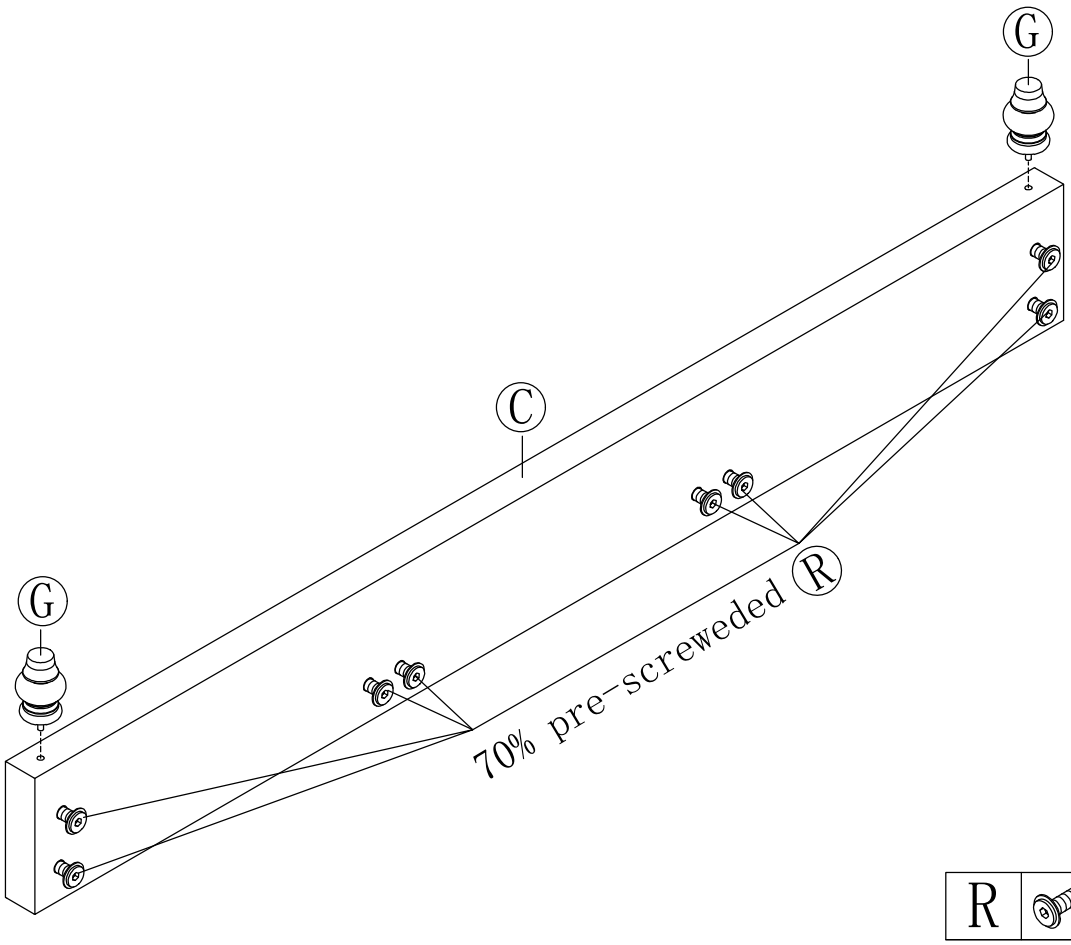9




R		8PCS

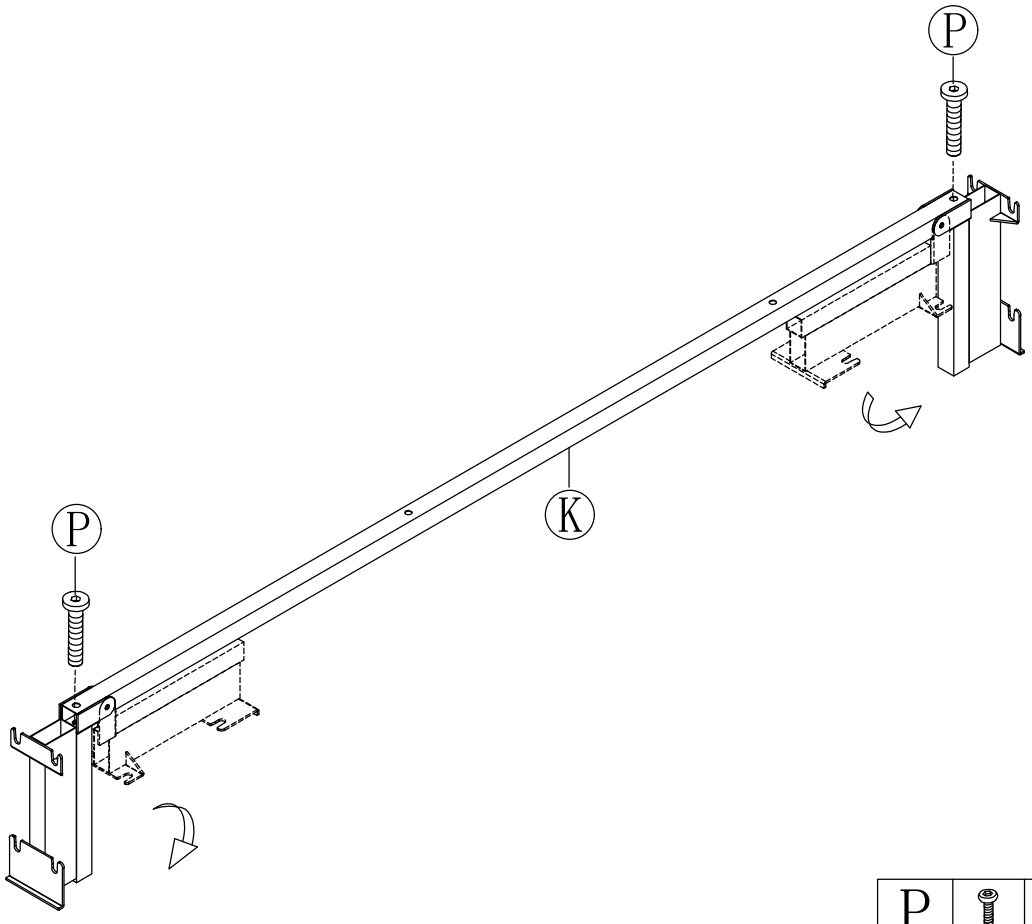10




P		2PCS

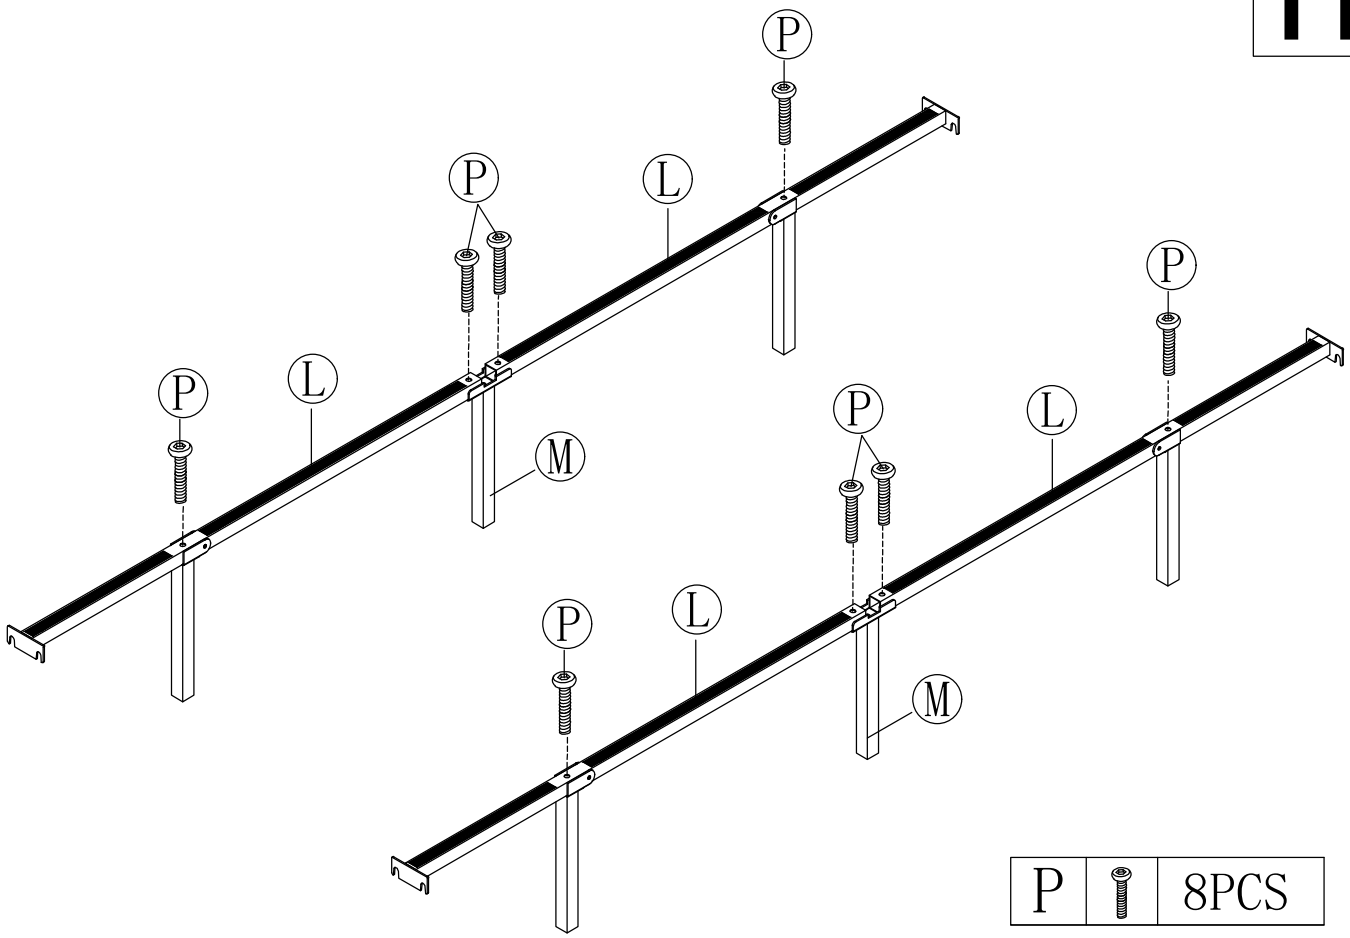11




P		8PCS

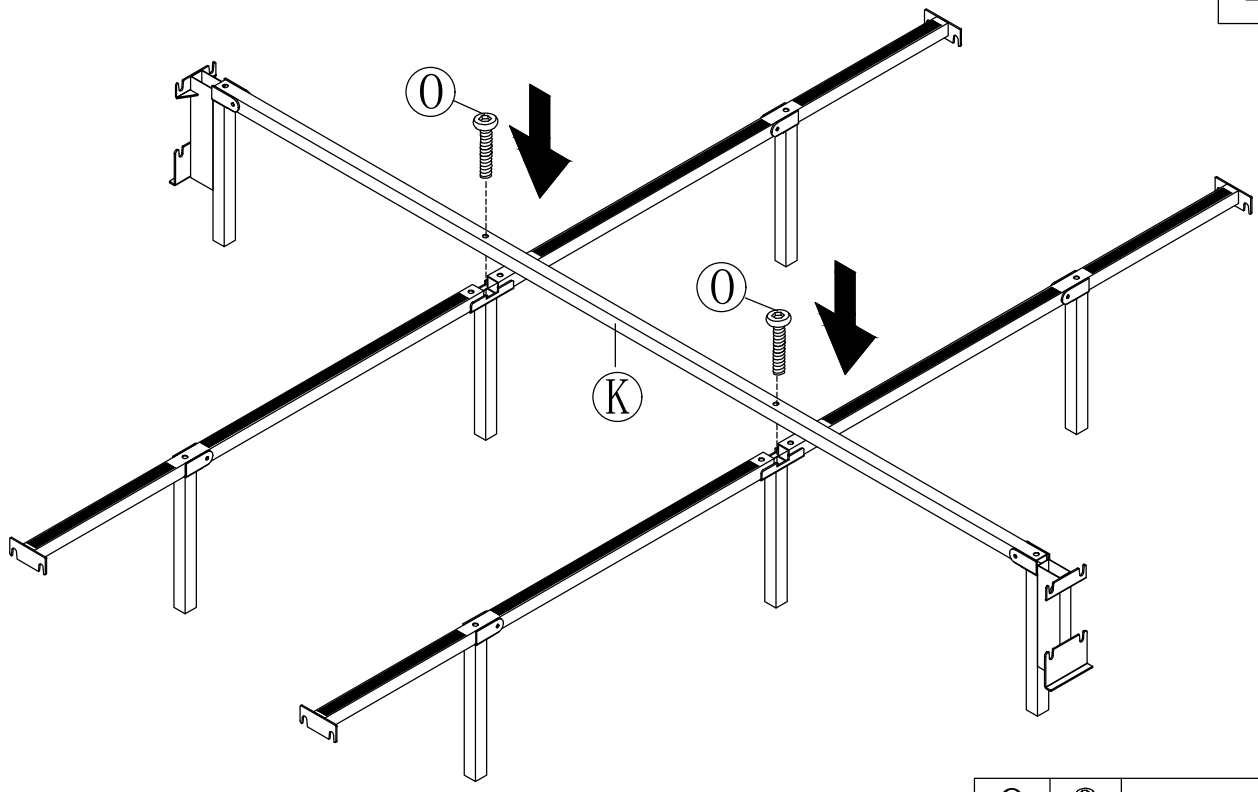12




O		2PCS

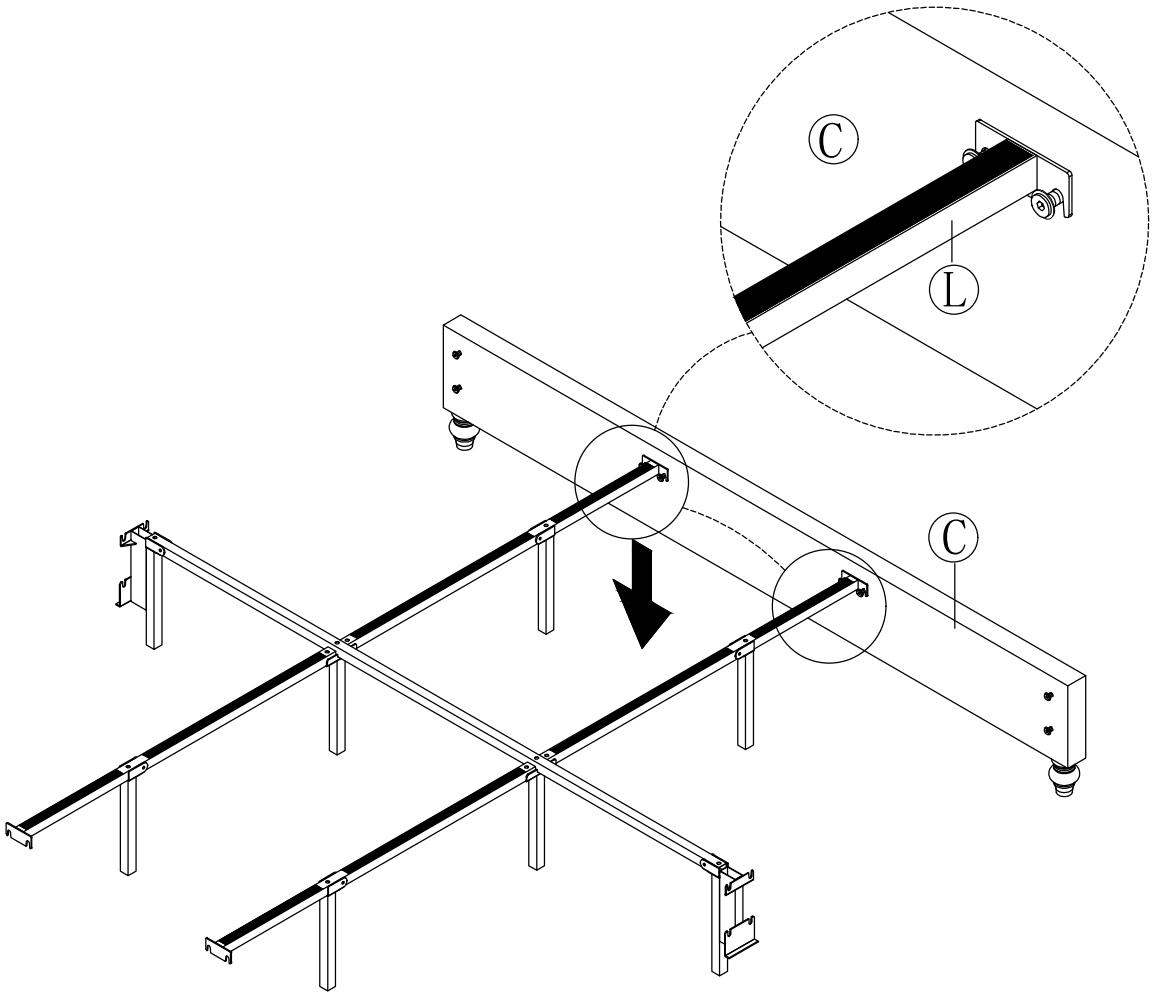
13



14

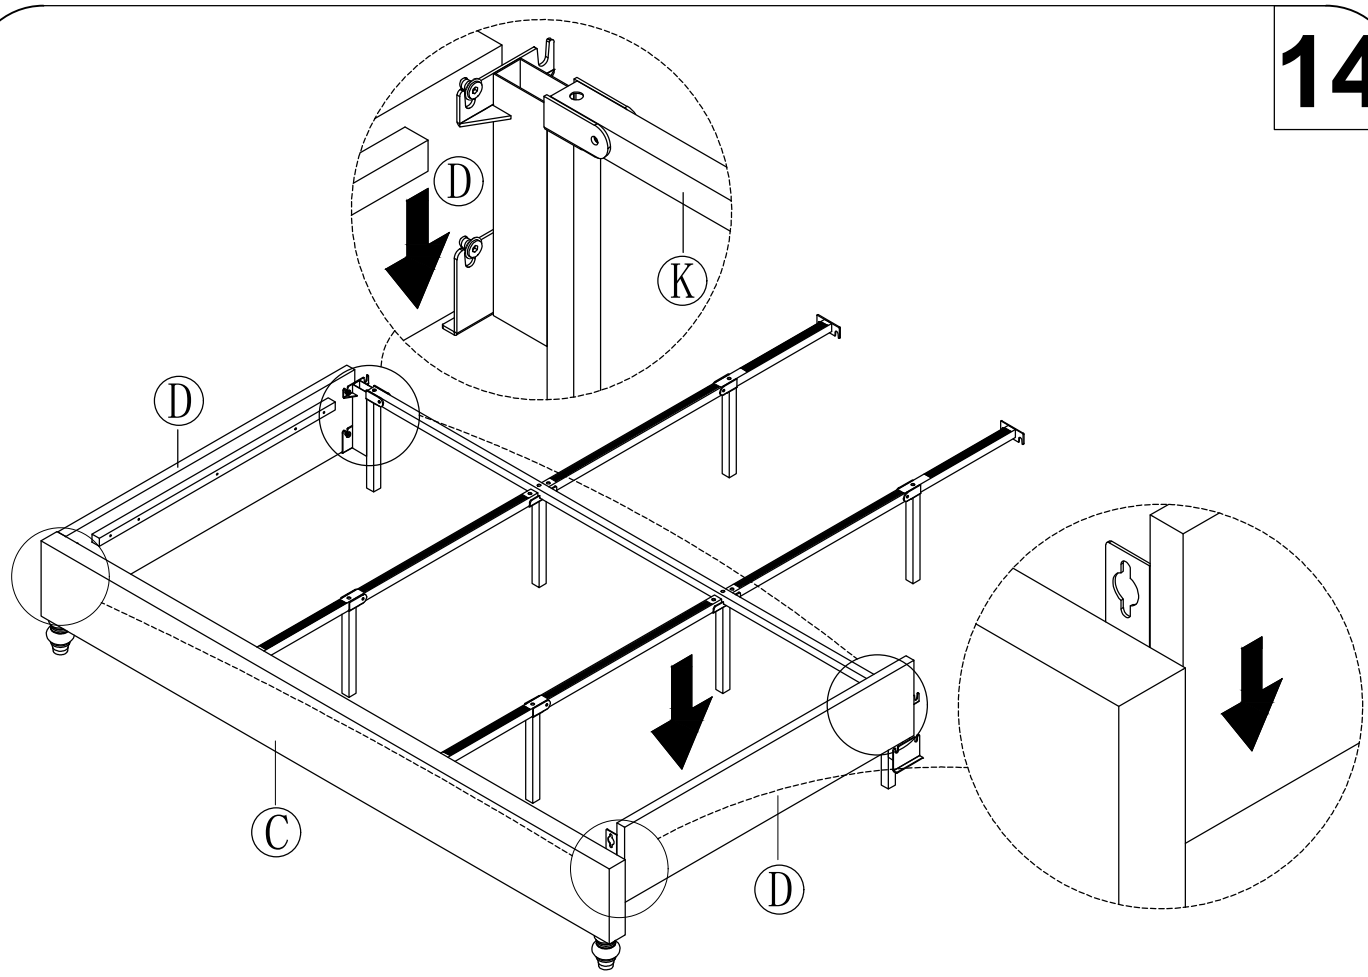


15

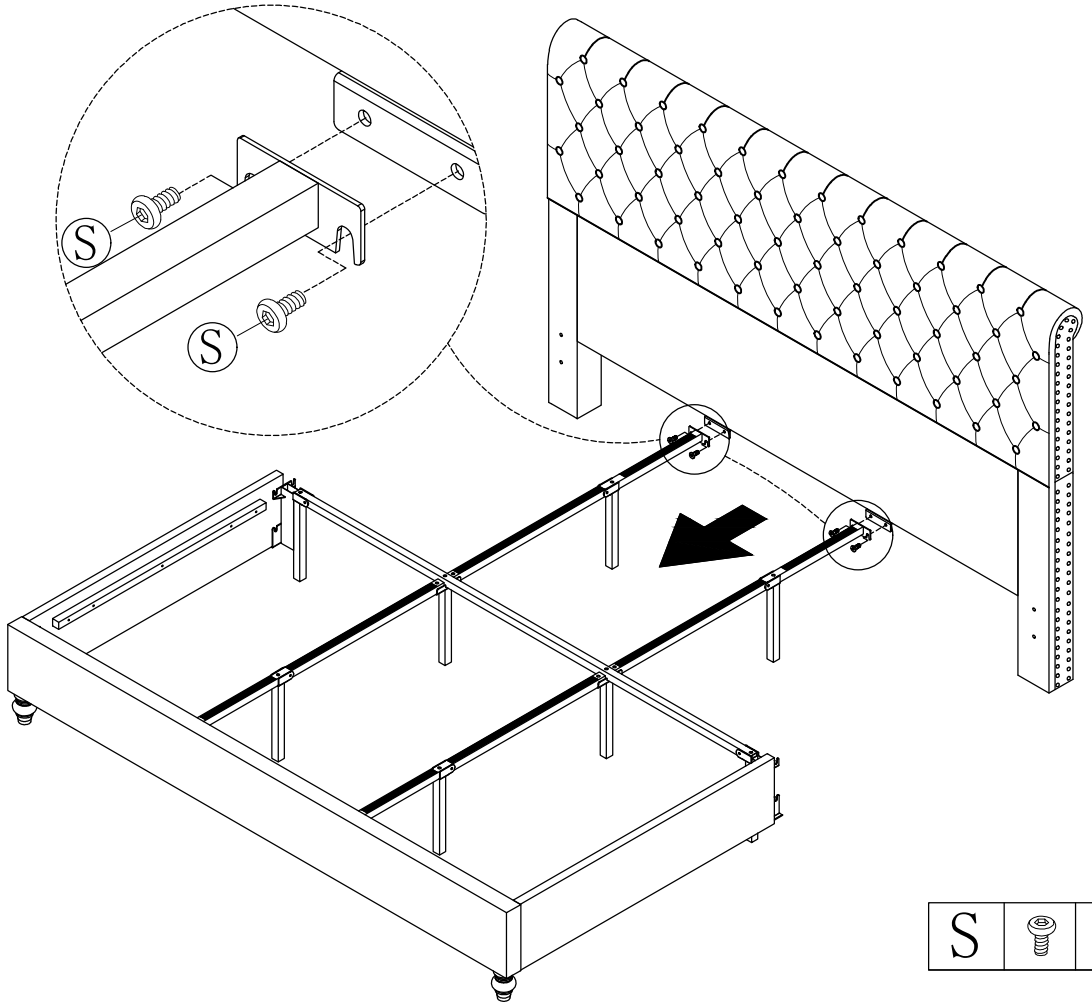


S		4PCS

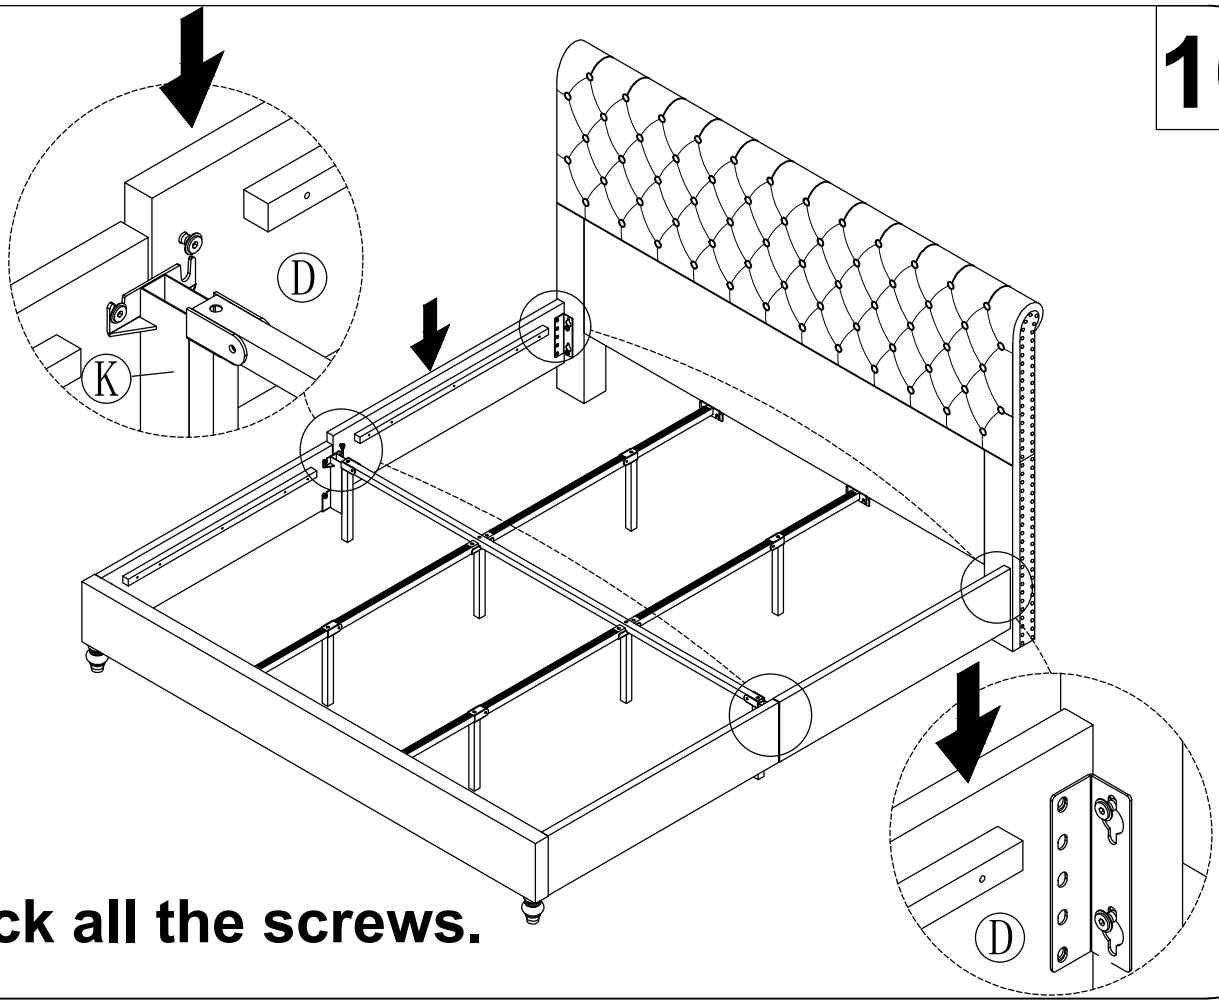16




Lock all the screws.

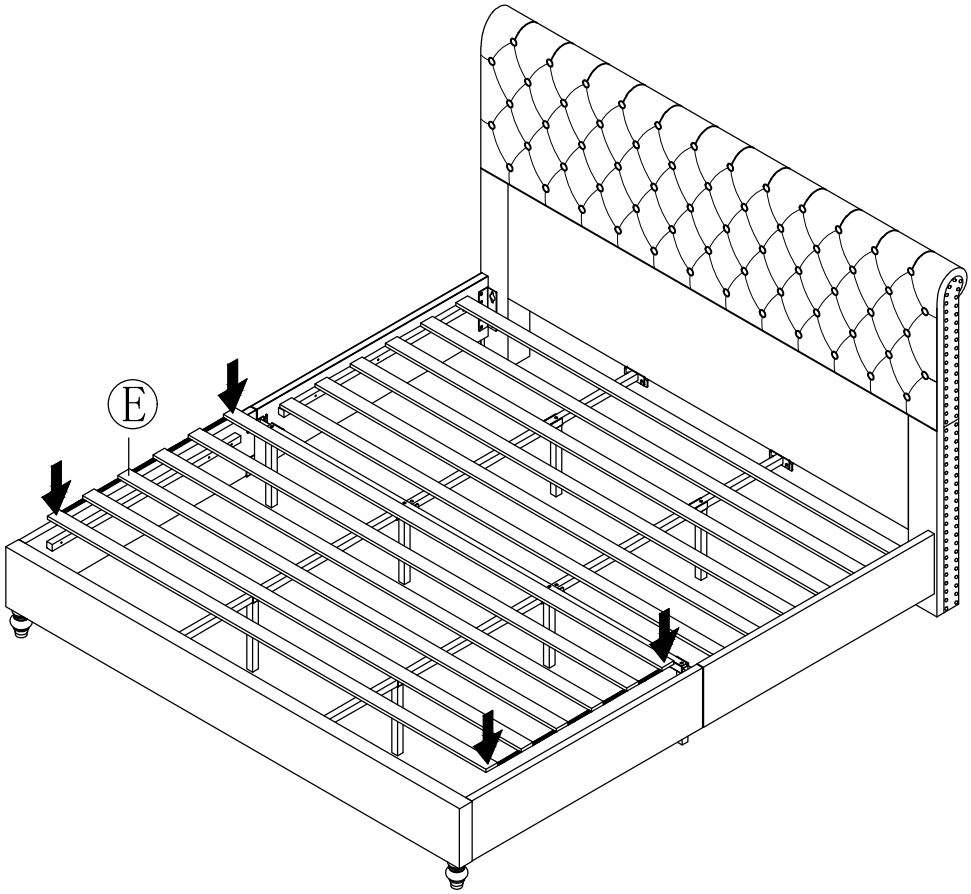17



18

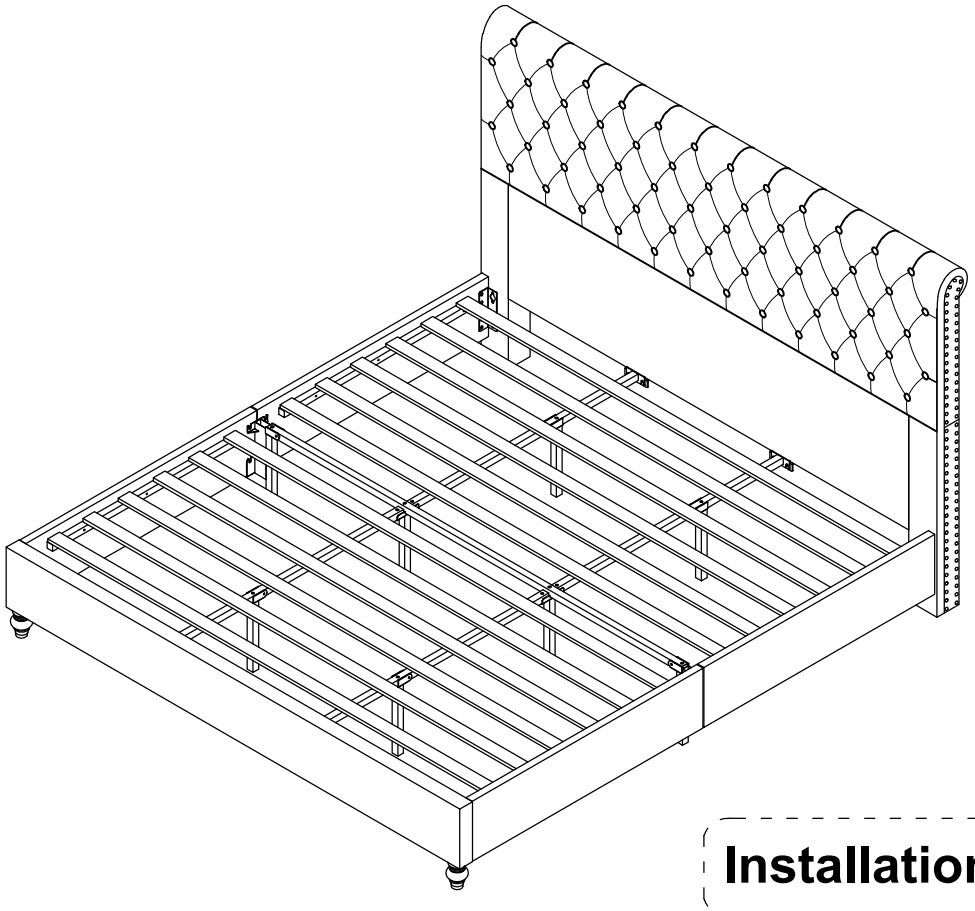

Installation Complete