


HW-AM557784


CUSTOMER MANUAL

-V0.2

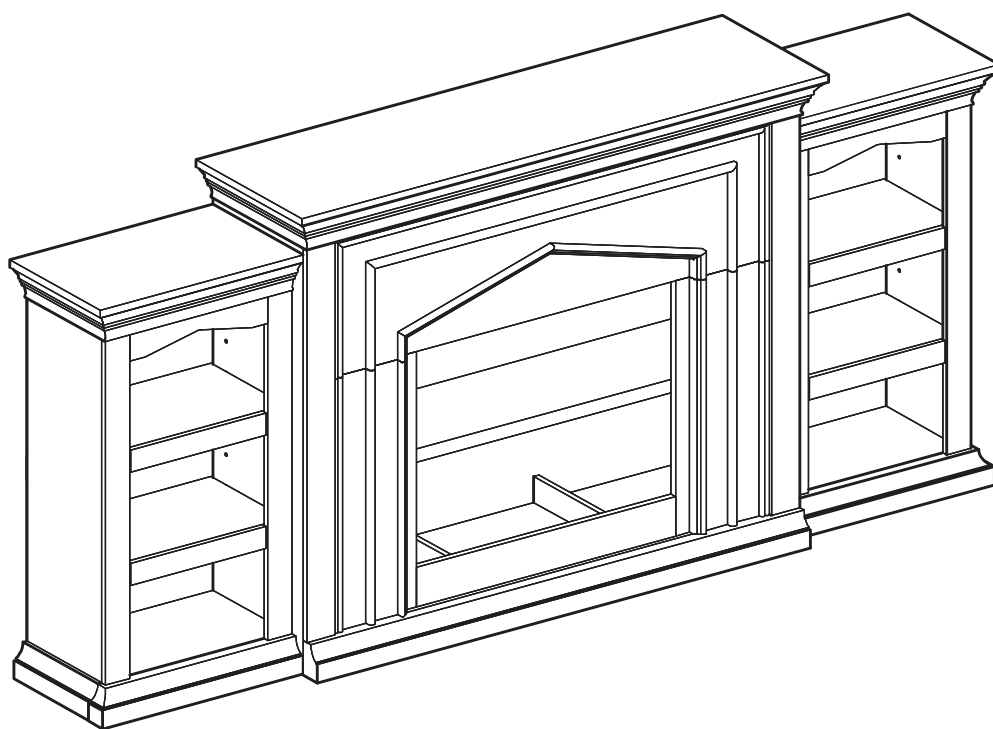


Contact us: Support@lghm.vip

ASSEMBLY STRUCTURE REFERENCE DIAGRAM

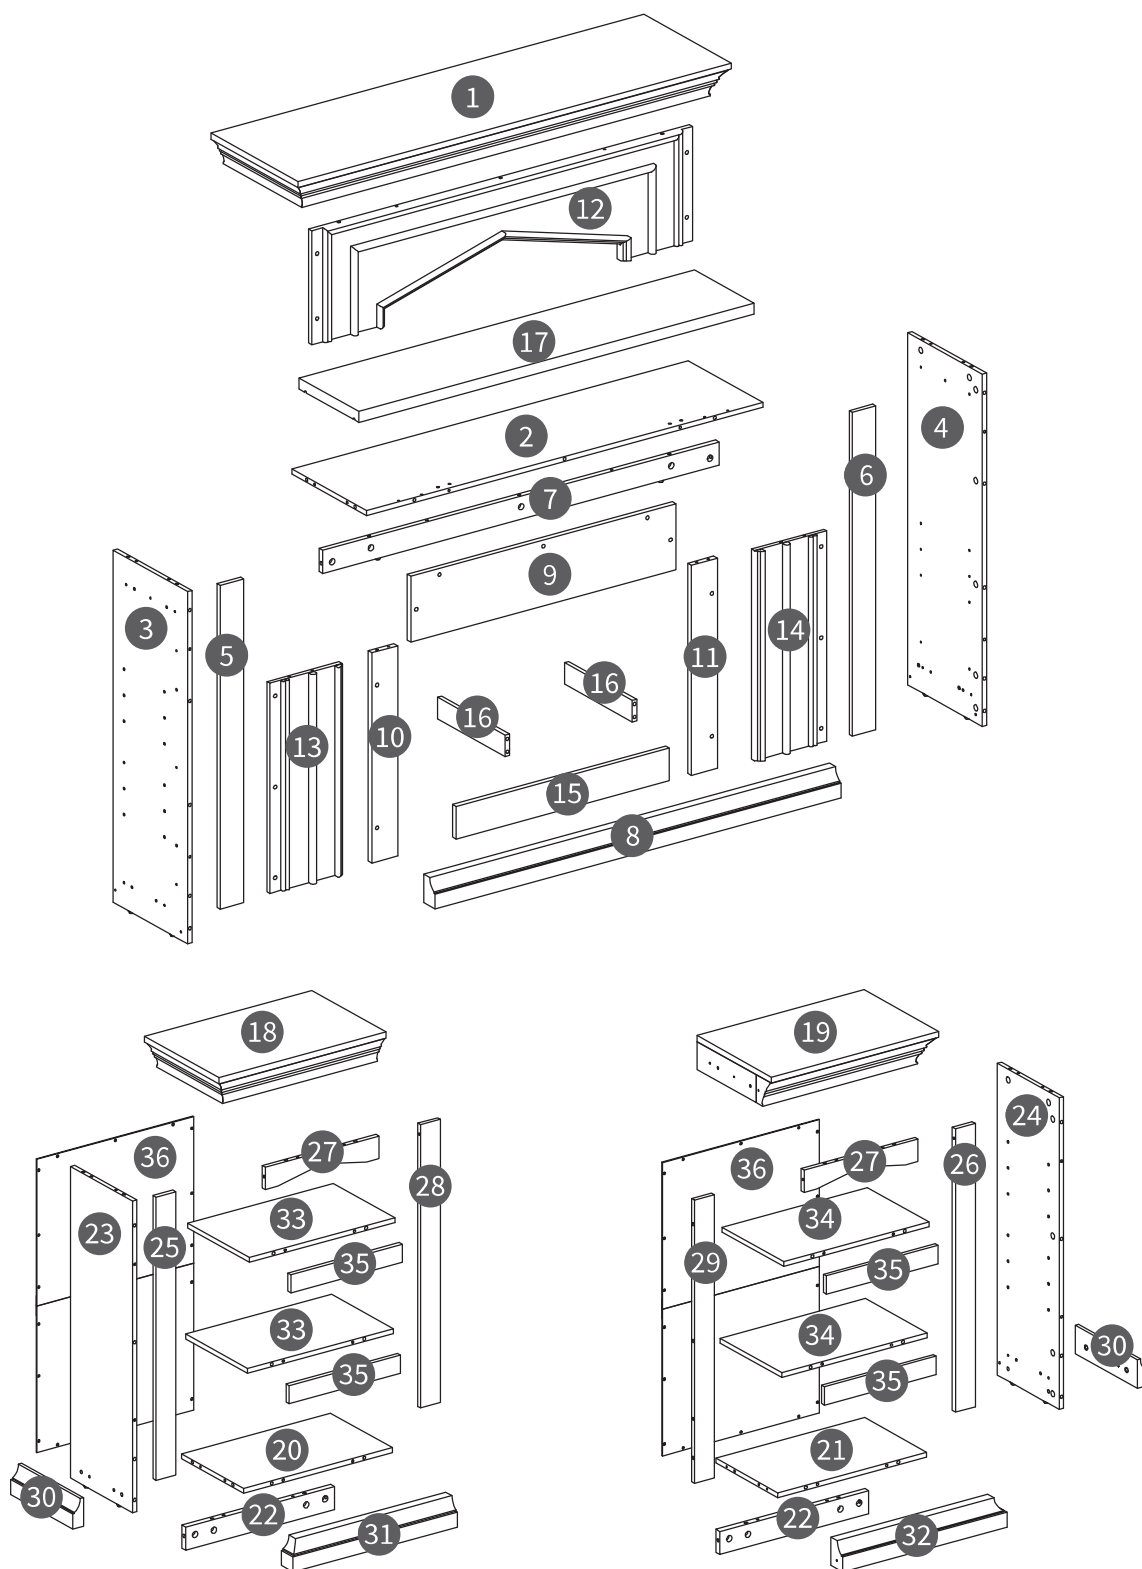

PARTS

A

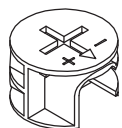

X 83+2

B



X 83+2

C



Ø6 x 30mm
X 82+2

D



Ø3 x 12 x 6mm
X 24+2

E




X 12

F




Ø3 x 14mm
X 36+2

G




X 12+1

H



M6 x 20mm
X 23+2

I



X 16+2

J




X 6

N



X 2

O



X 2

P



Ø4 x 35mm
X 2

Q




M4
X 1

R



M3
X 1

S




X 1


Now you are ready to assemble the electric fireplace mantel





It divided in to three parts in total:

1. Install the left part
2. Install the right part
3. Install the center part

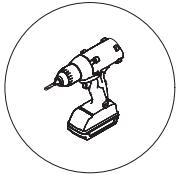


We recomend that you use a power tool
for ease of installation

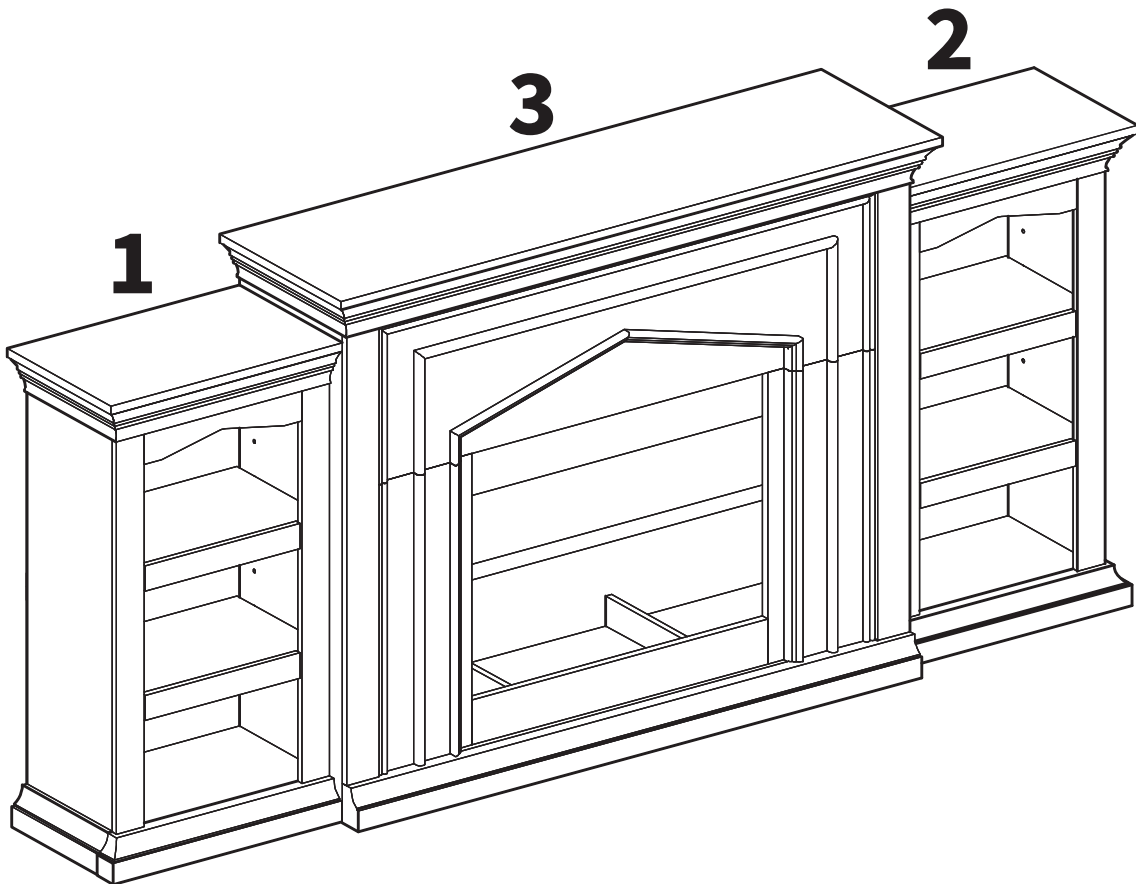

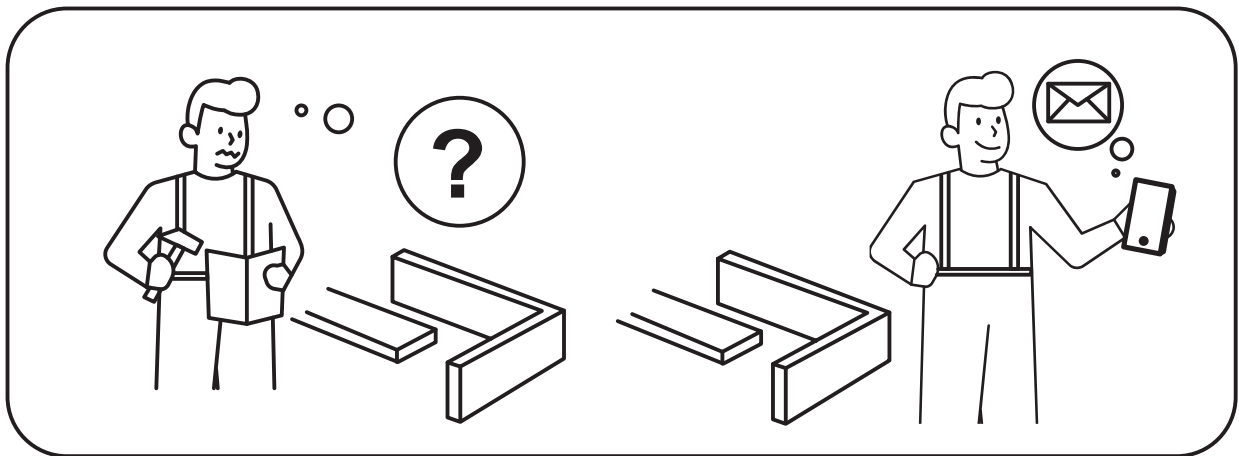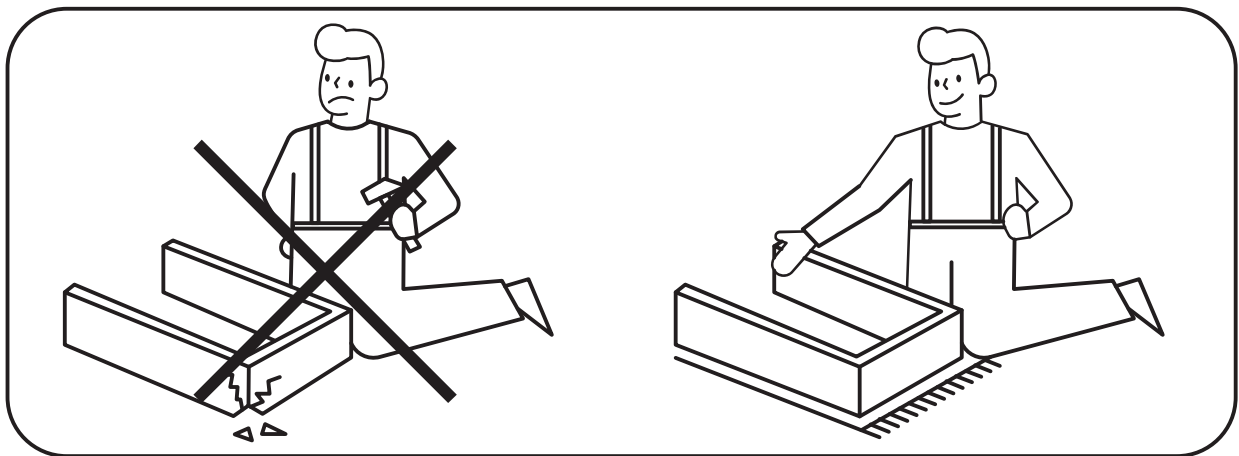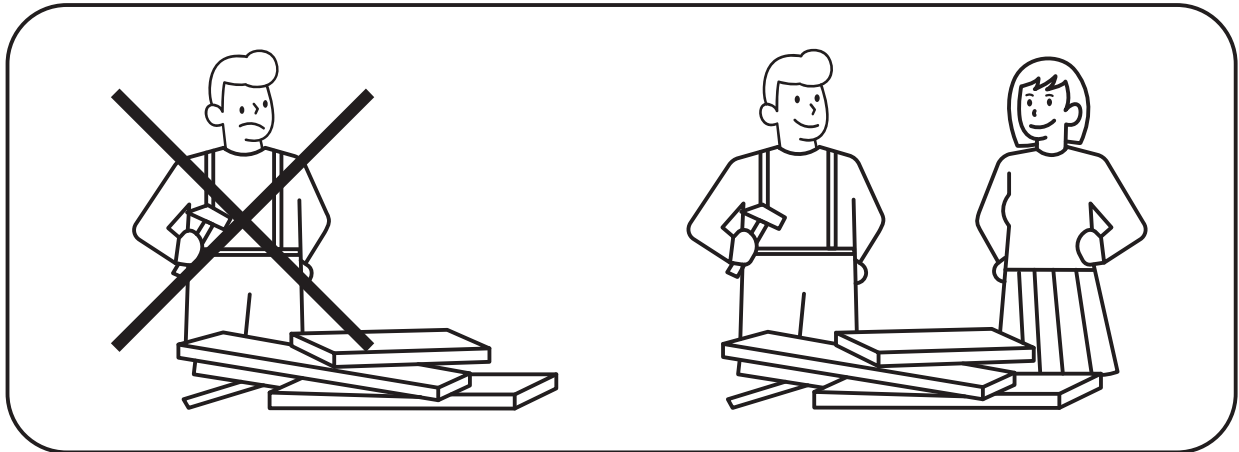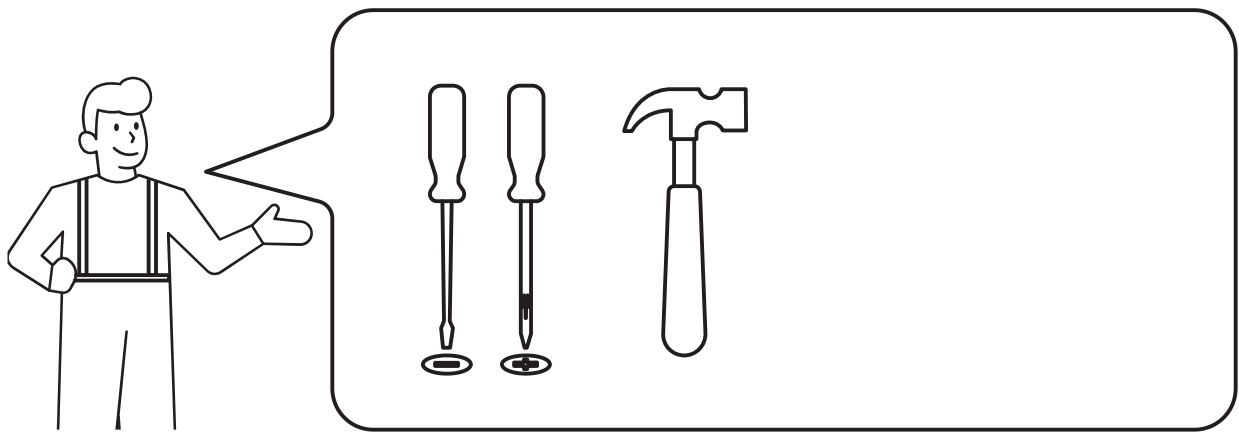


How to work the Knock Down (kd) assembly system

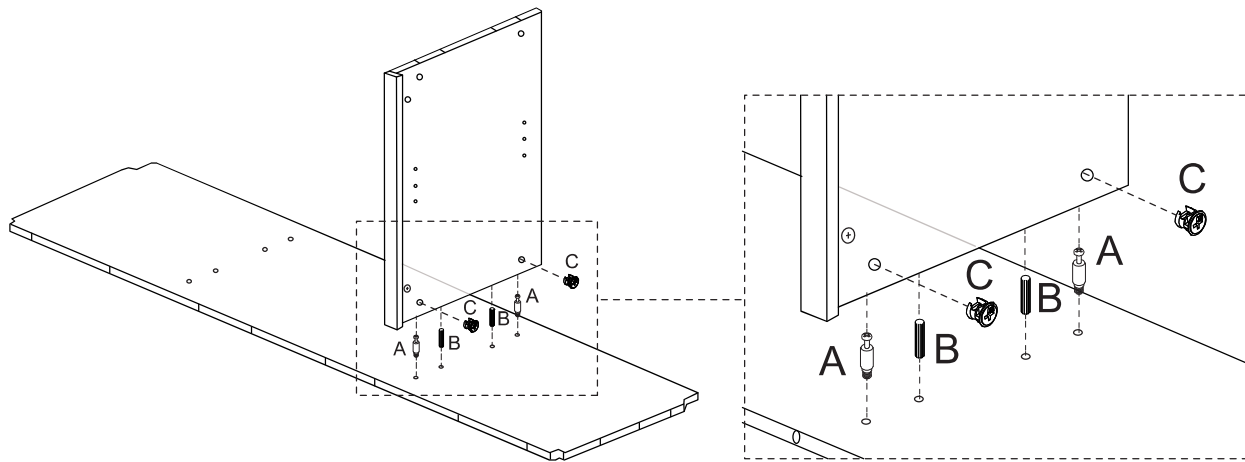


How to install Wood Dowel


Insert the wood dowel [B] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

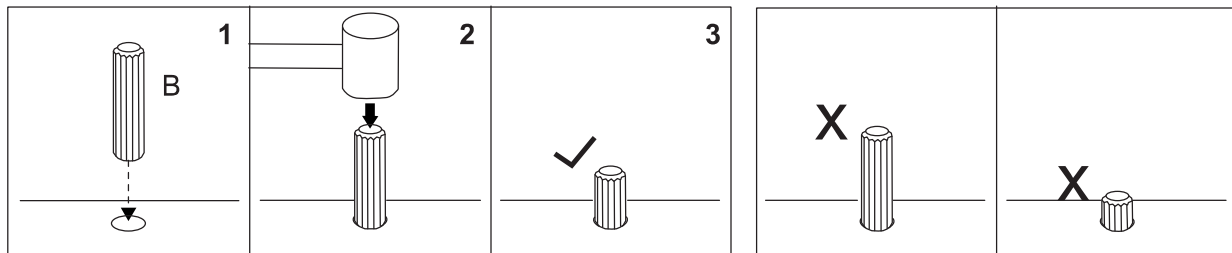

How to use the Cam Lock system


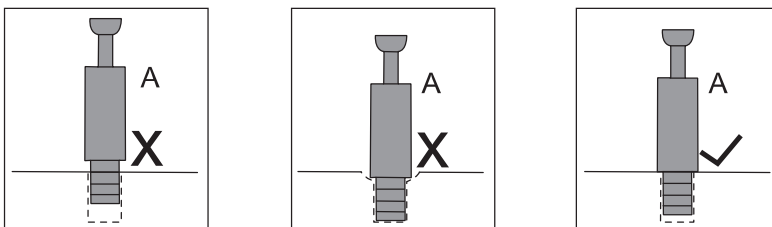


1. Screw the cam bolt [A] into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt [A] goes into the pre-drilled large hole on the end of panel for cam lock [C].
3. Insert the cam lock [C] into the pre-drilled large hole on the panel. **Make sure the cross slot of cam lock [C] faces out.**
4. Rotate the cam lock [C] **clockwise** with a self-supplied philips screwdriver to lock the cam bolt [A] in place.

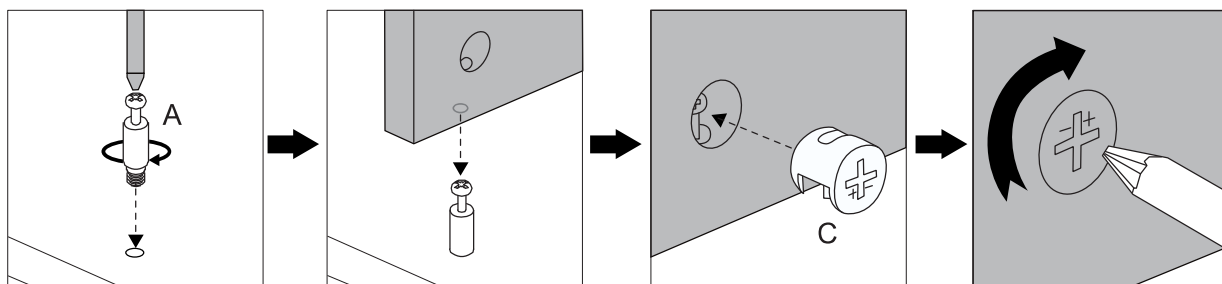






Step 1

Securing Cam Bolt (B) into Board (23&24&25&26).

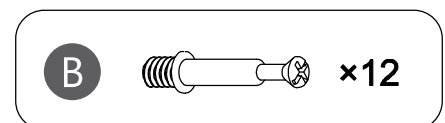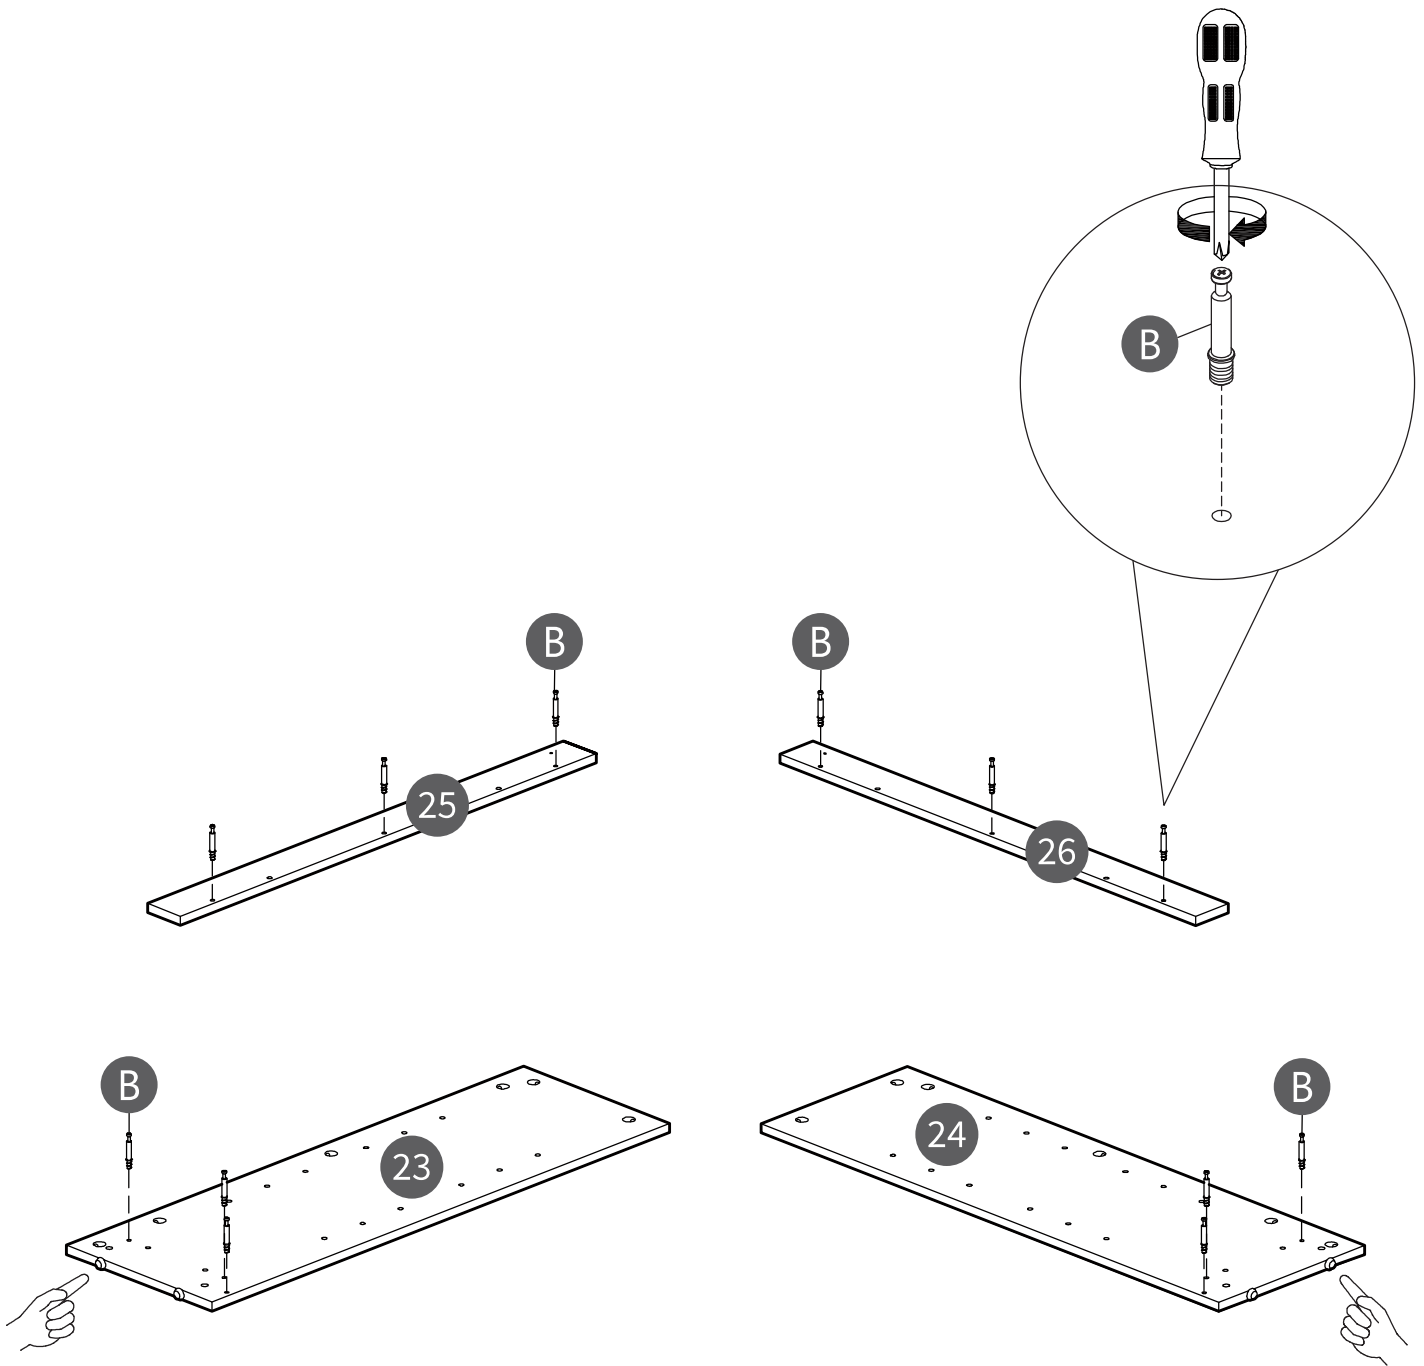



Step 2

Inserting Wooden Dowel (C) into Board (23&24), then attach Board (25&26) to Board (23&24). Using Cam Lock (A) secure Board (25&26) to Board (23&24).

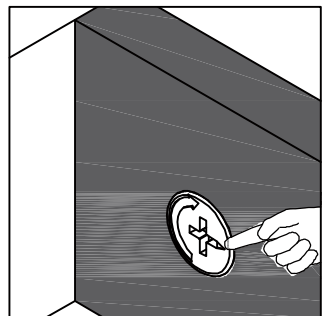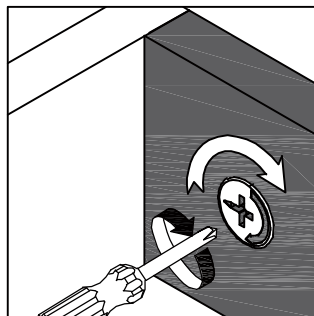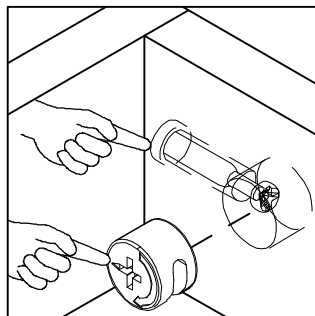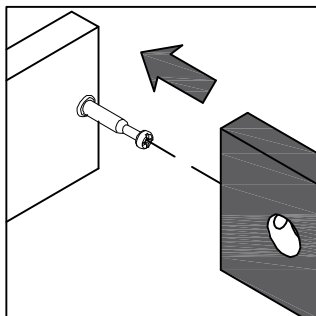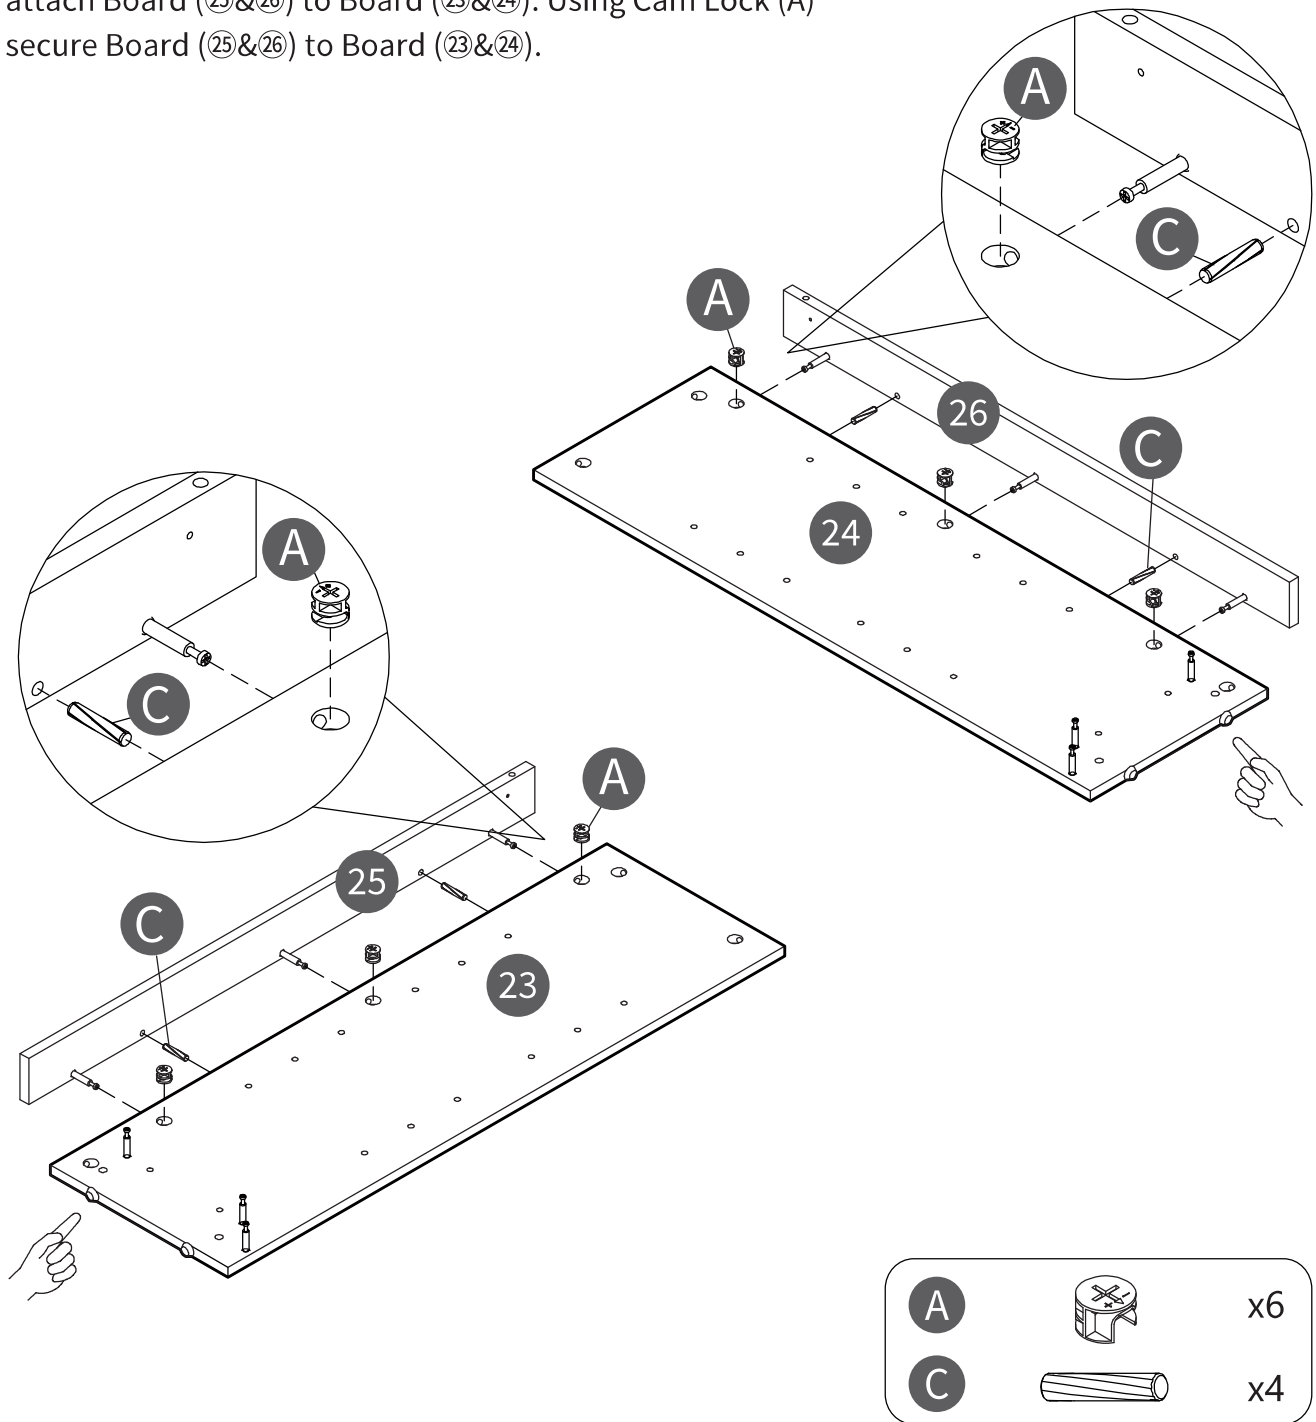


Step 3

Inserting Wooden Dowel (C) into Board (25&26), then attach Board (27) to Board (25&26).

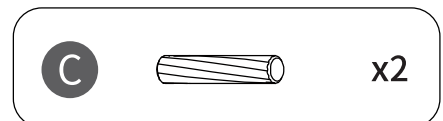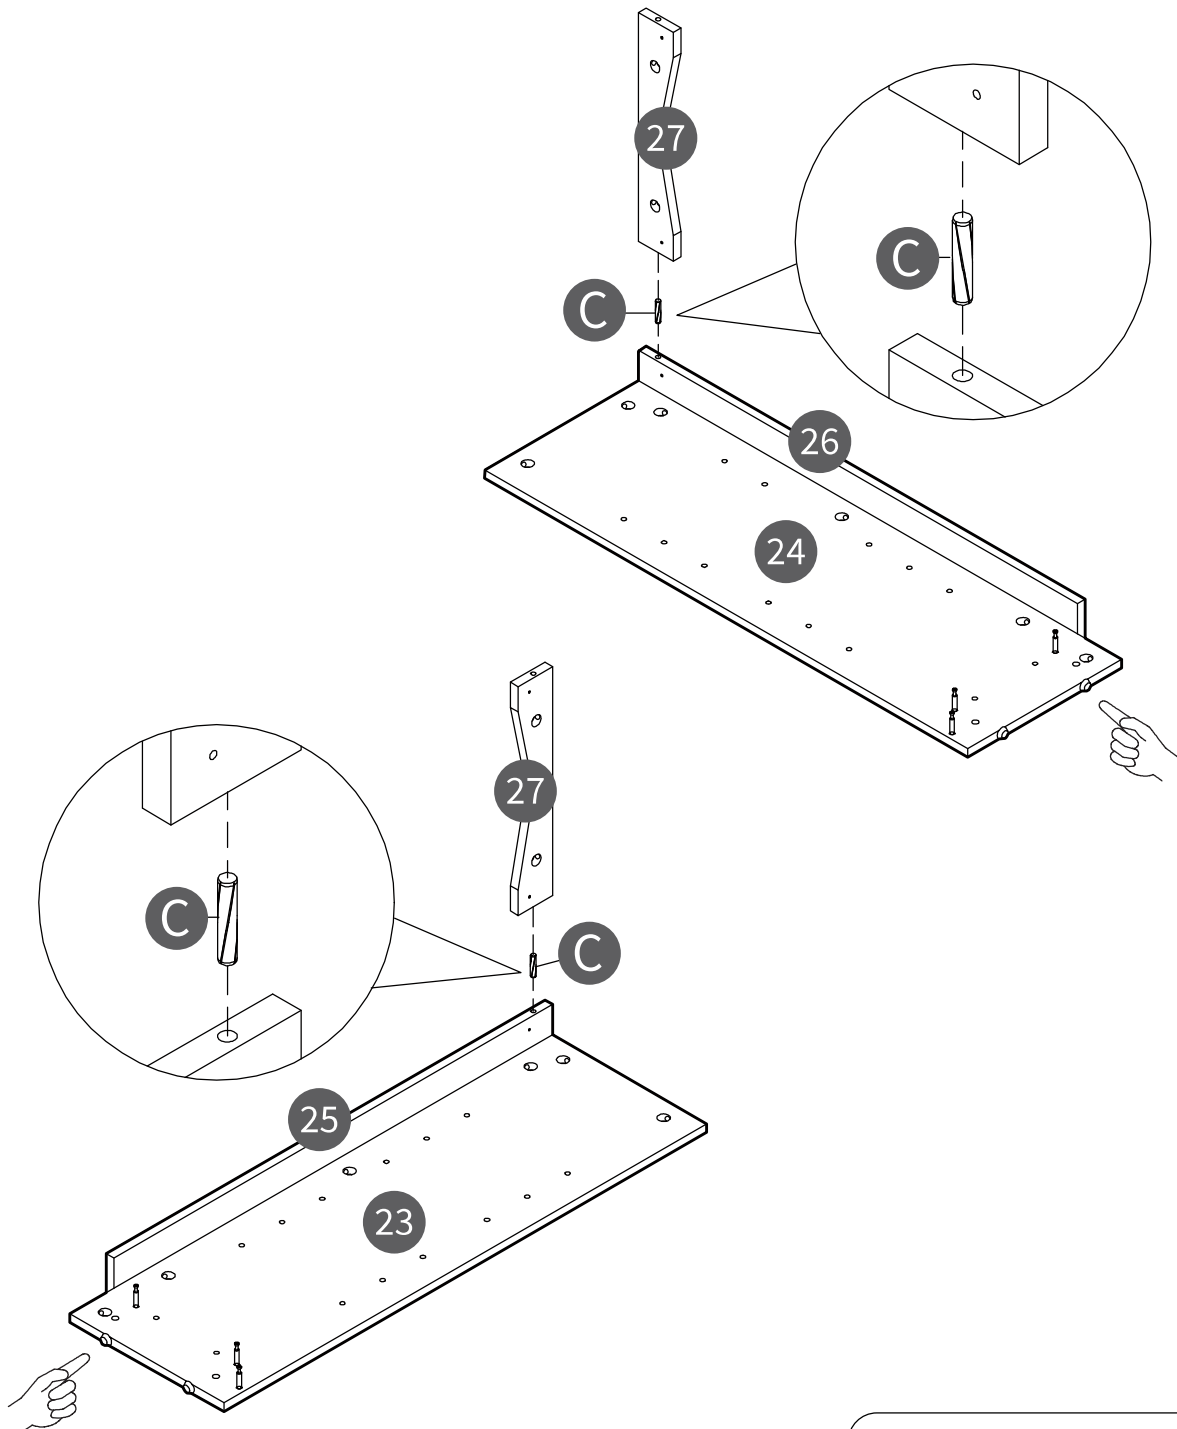



Step 4

Using Screws (D) secure Connector (E) to Board (25&27, 26&27).

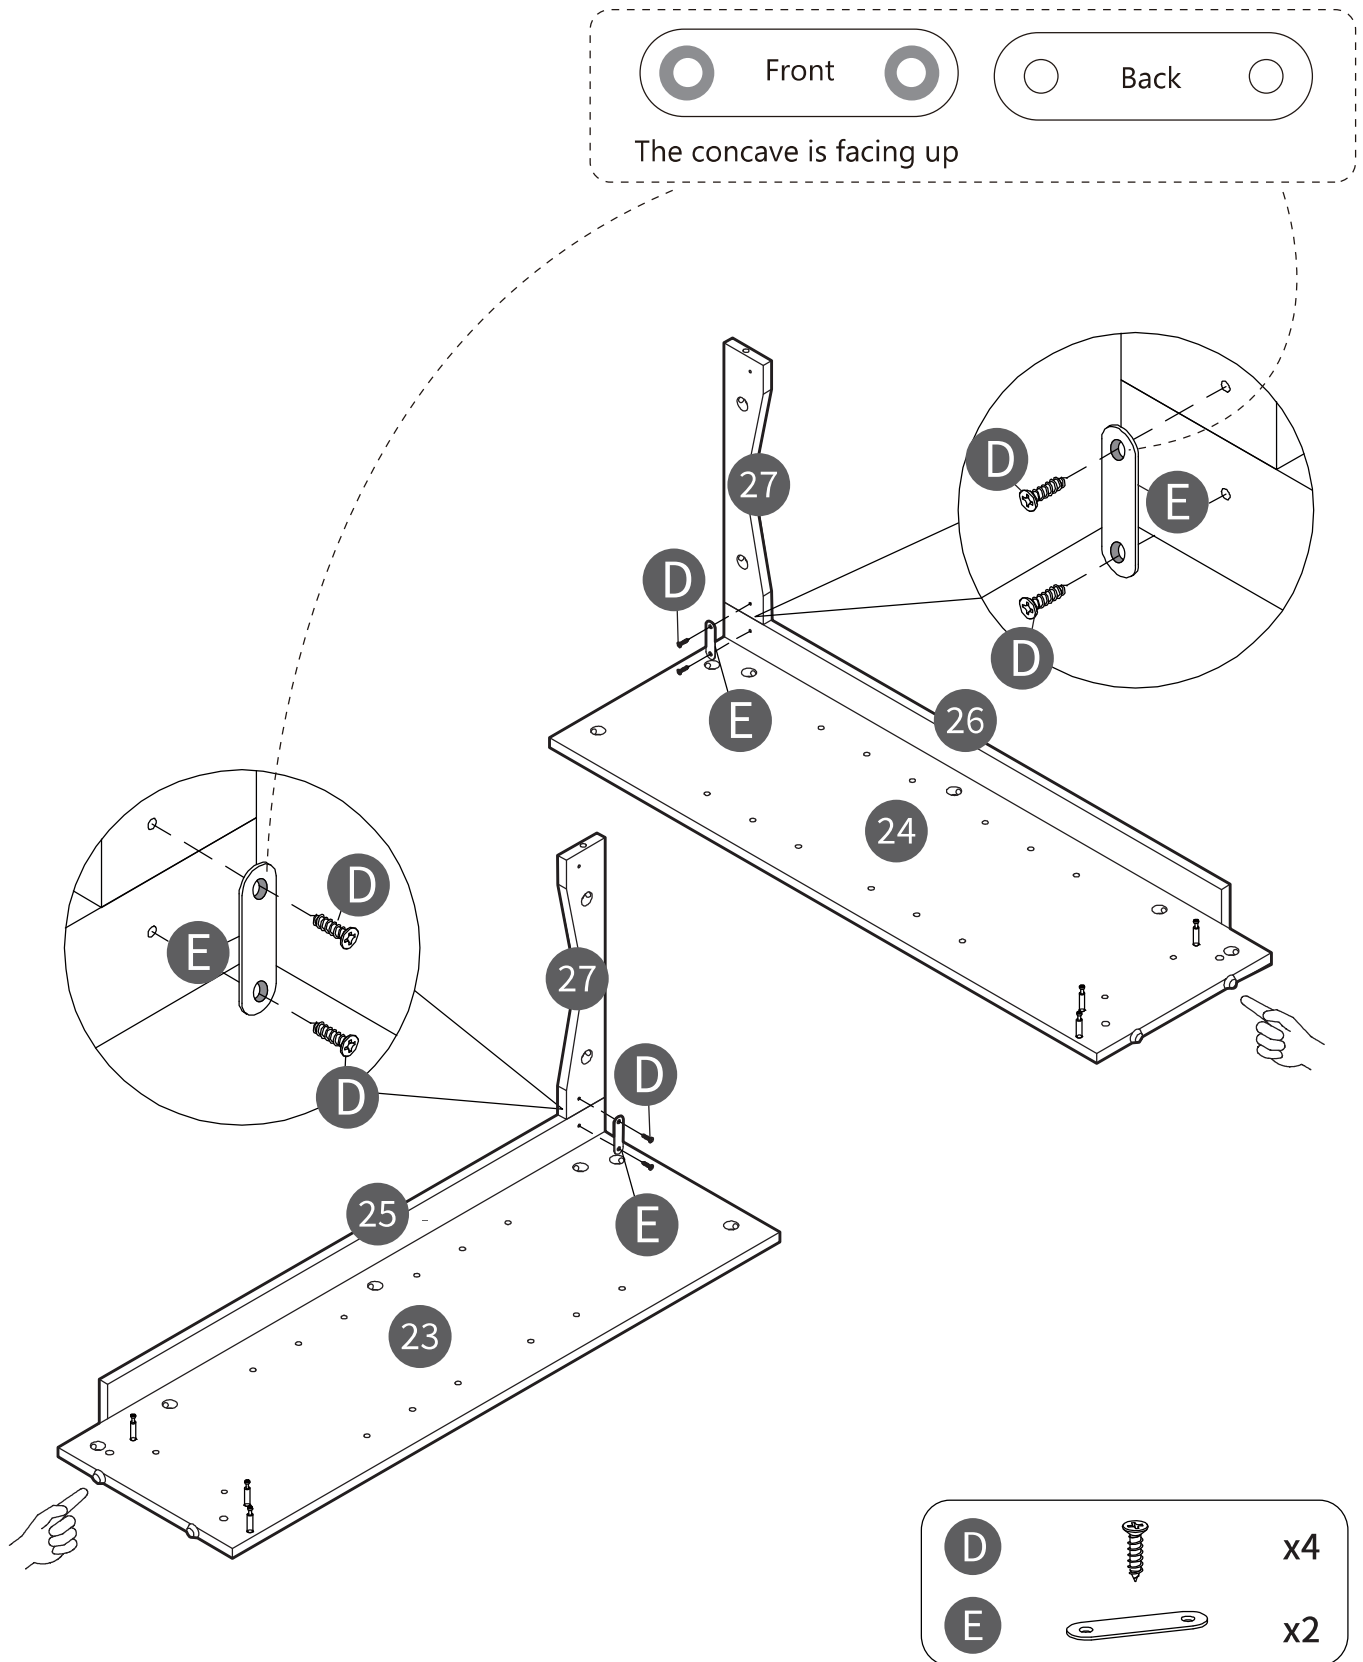




Step 5

Securing Cam Bolt (B) into Board (18&19).

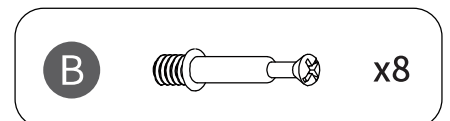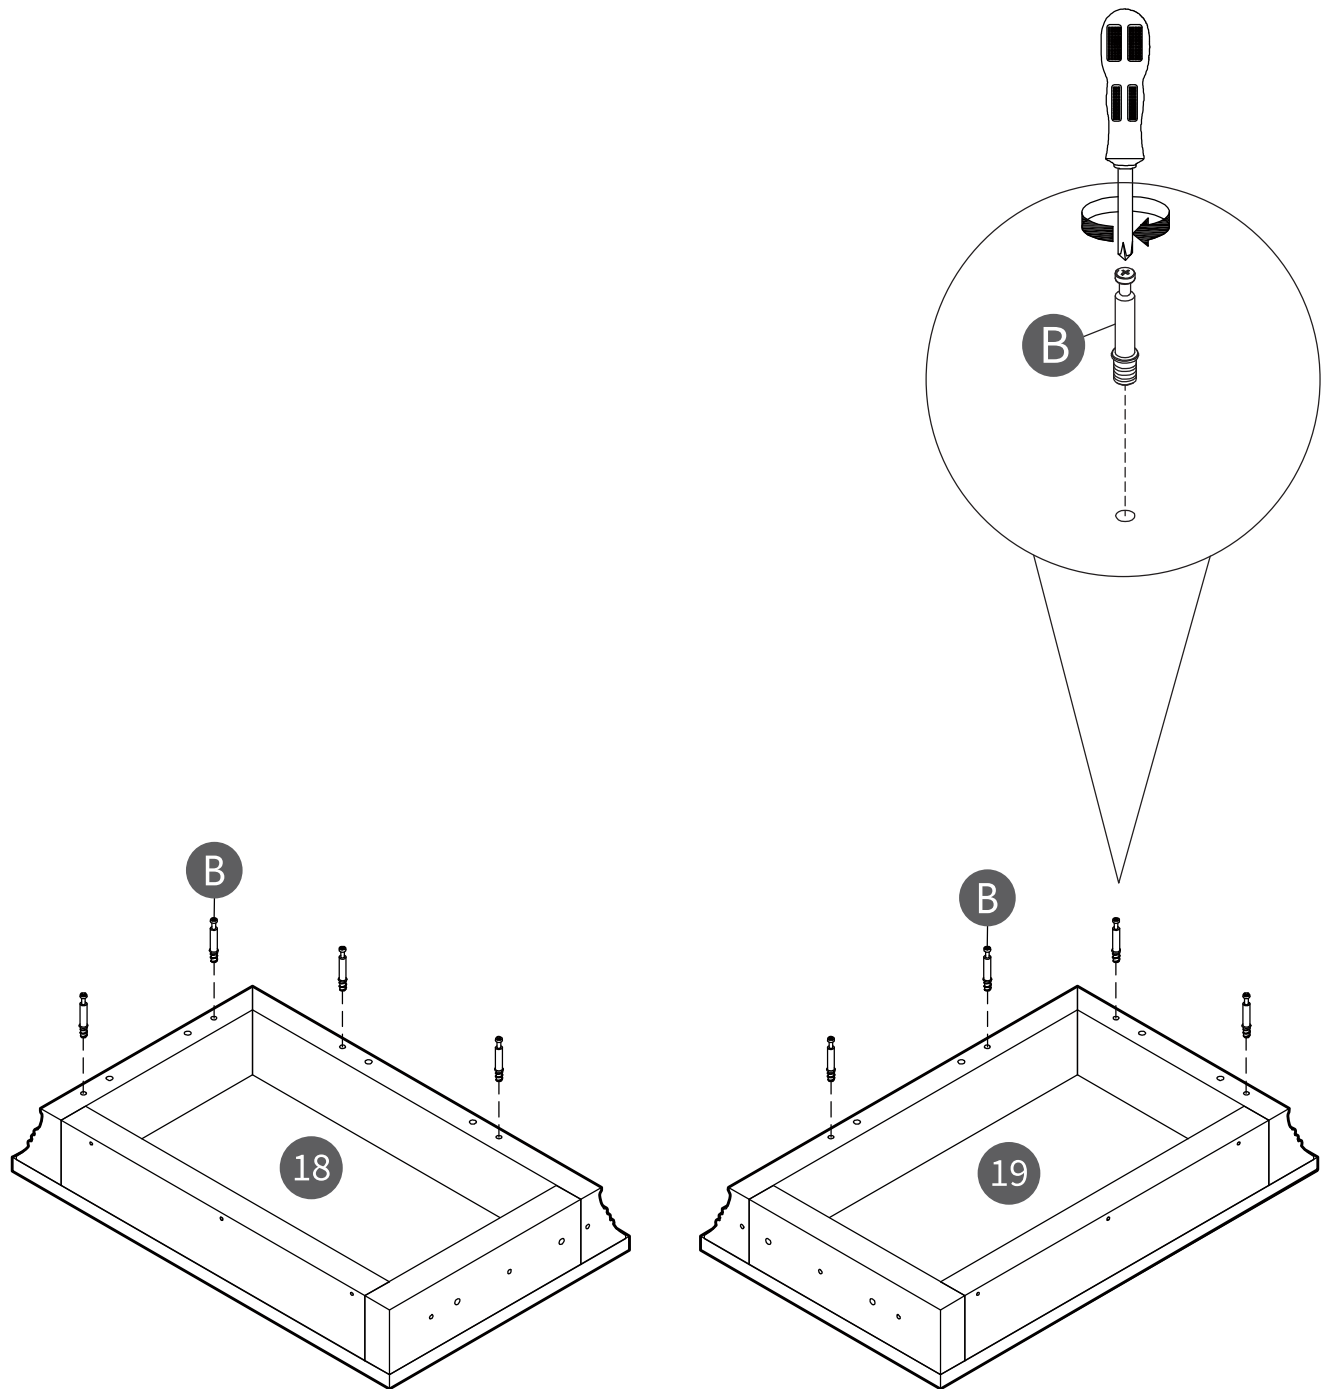


Step 6

Inserting Wooden Dowel (C) into Board (18), then attach Board (23&27) to Board (18). Using Cam Lock (A) secure Board (23&27) to Board (18).

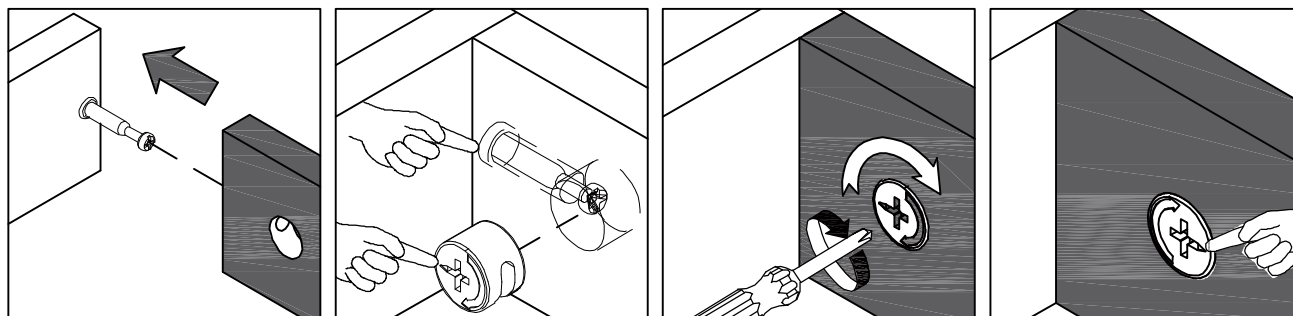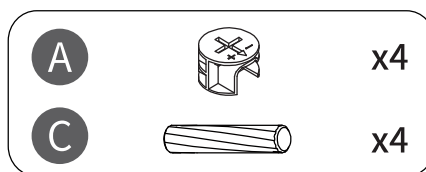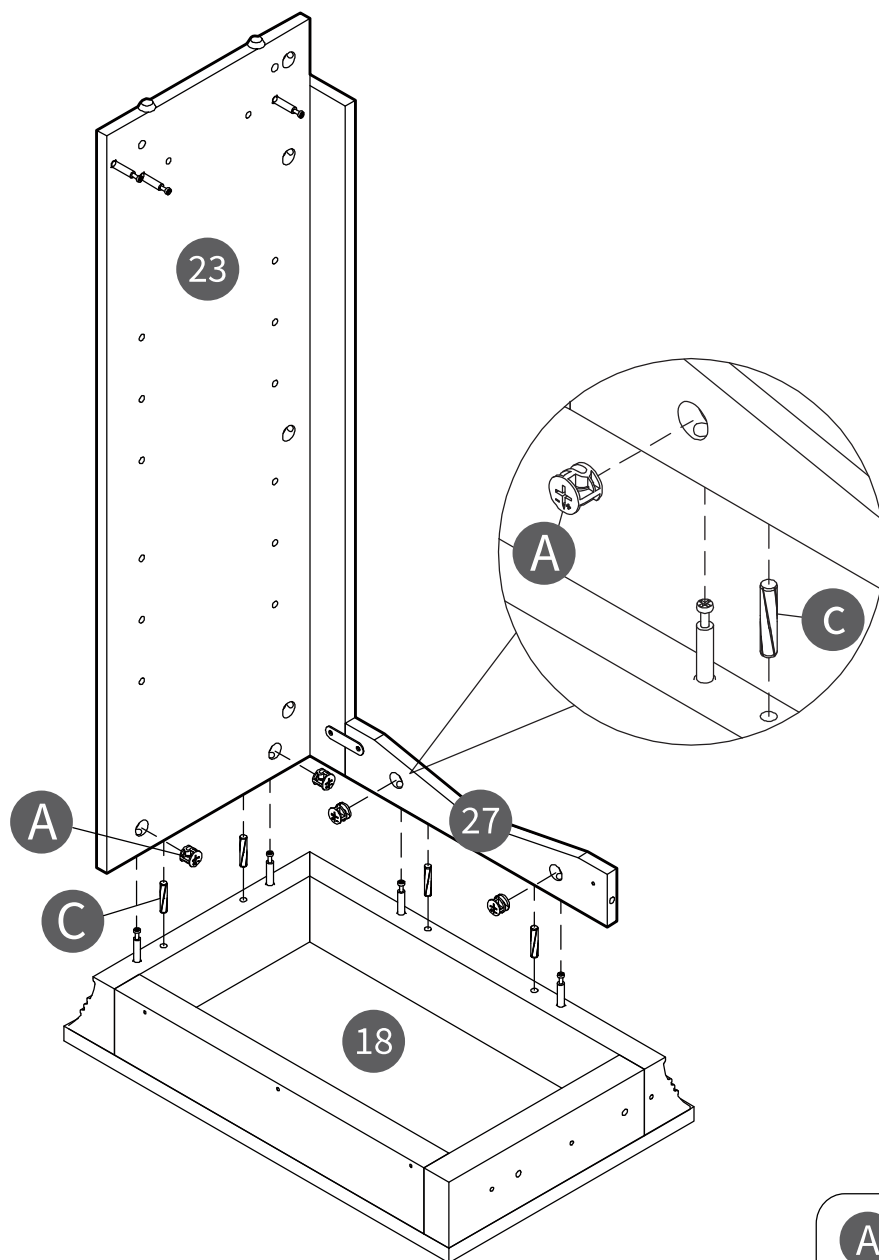




Step 7

Securing Cam Bolt (B) into Board (20).

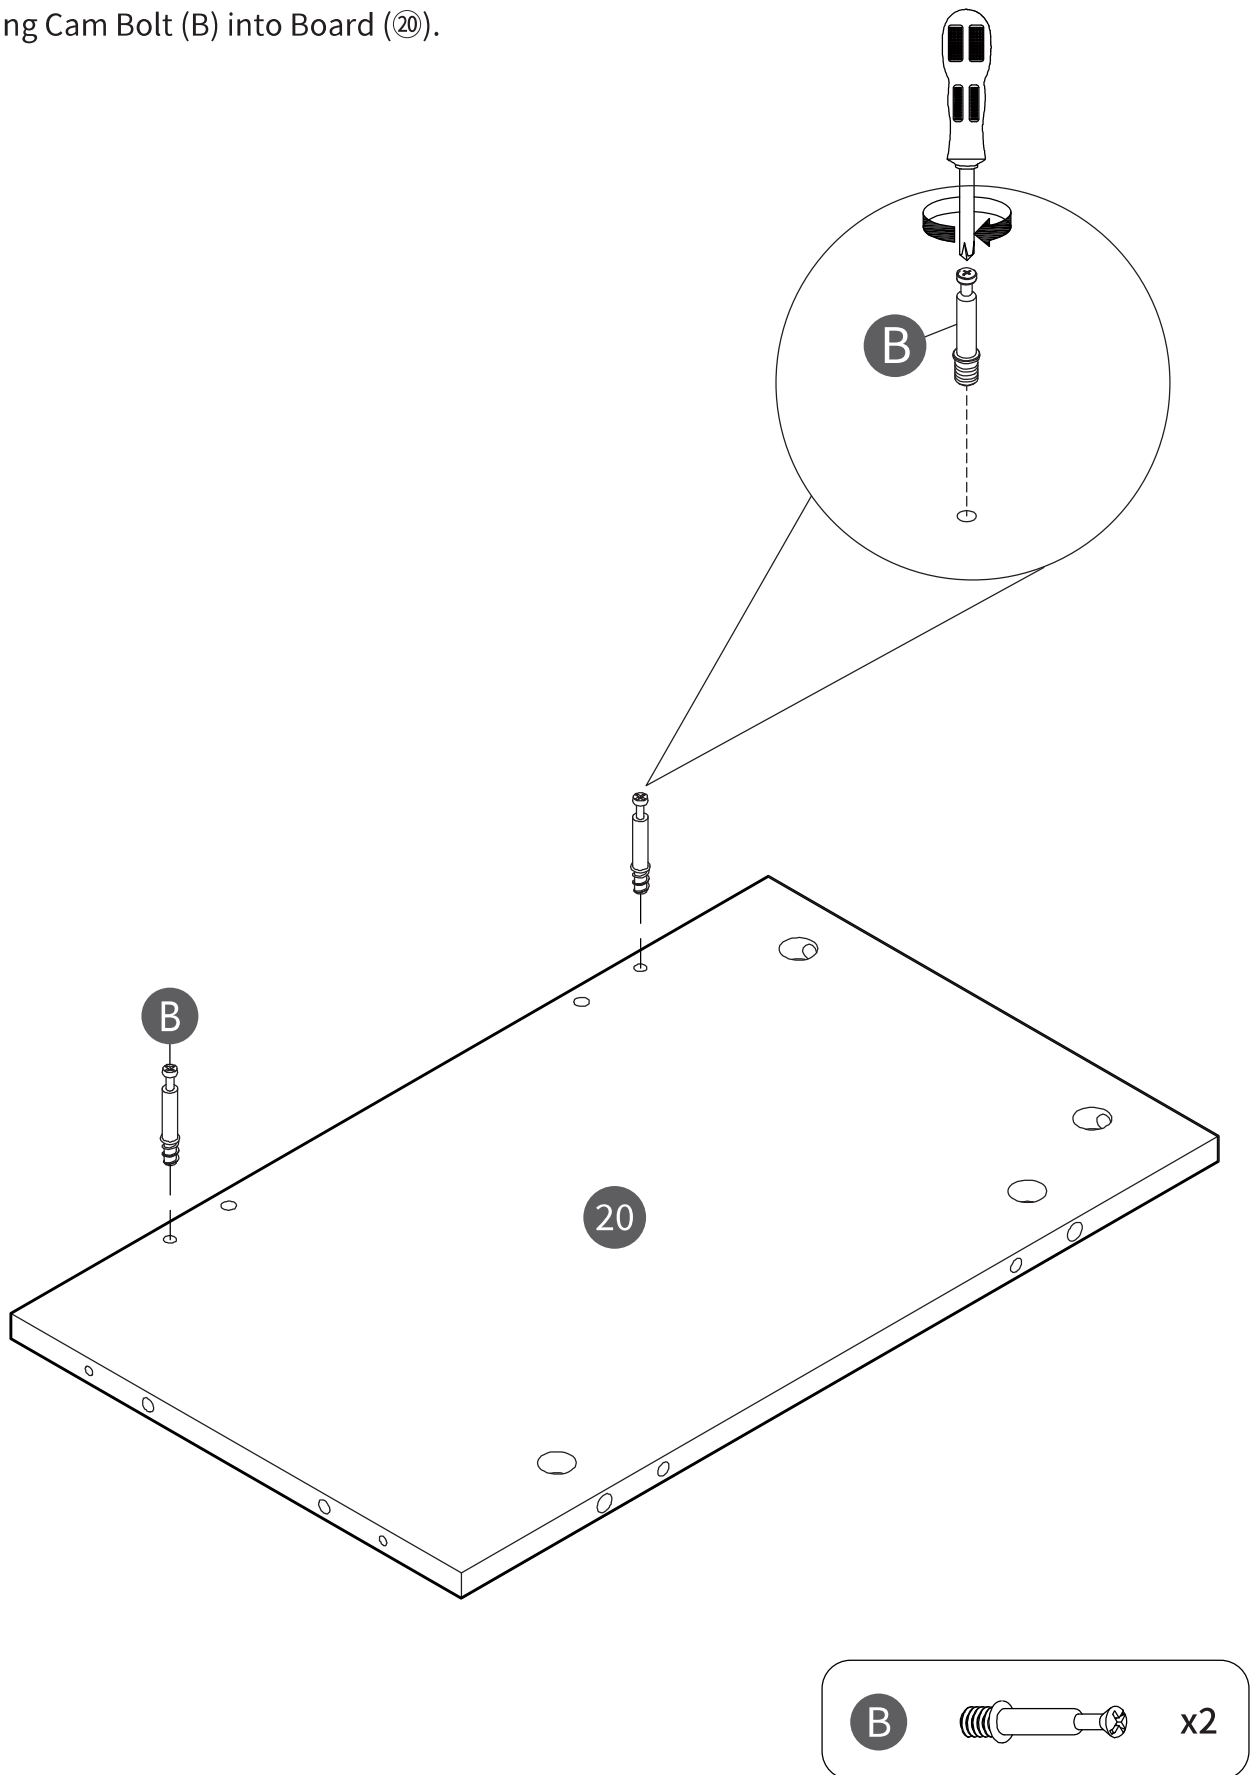



Step 8

Inserting Wooden Dowel (C) into Board (20), then attach Board (22) to Board (20). Using Cam Lock (A) secure Board (22) to Board (20).

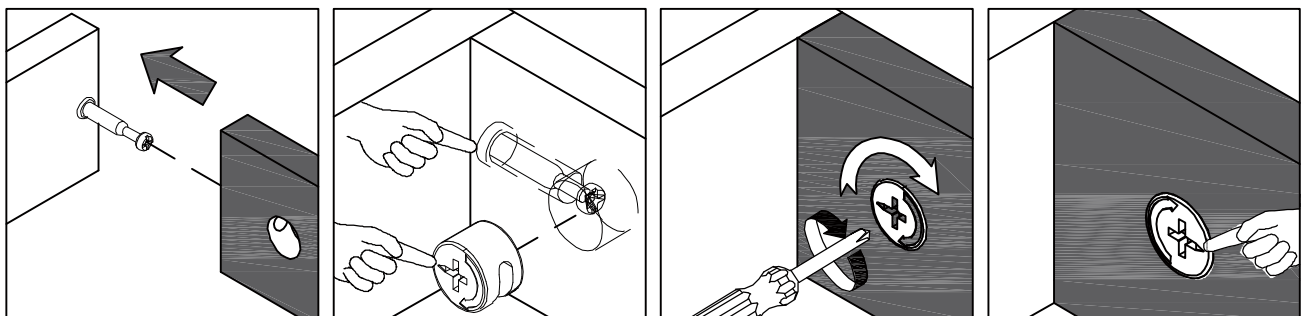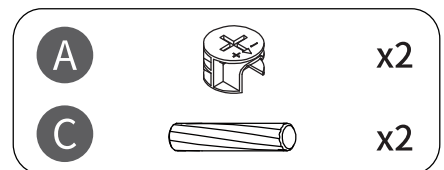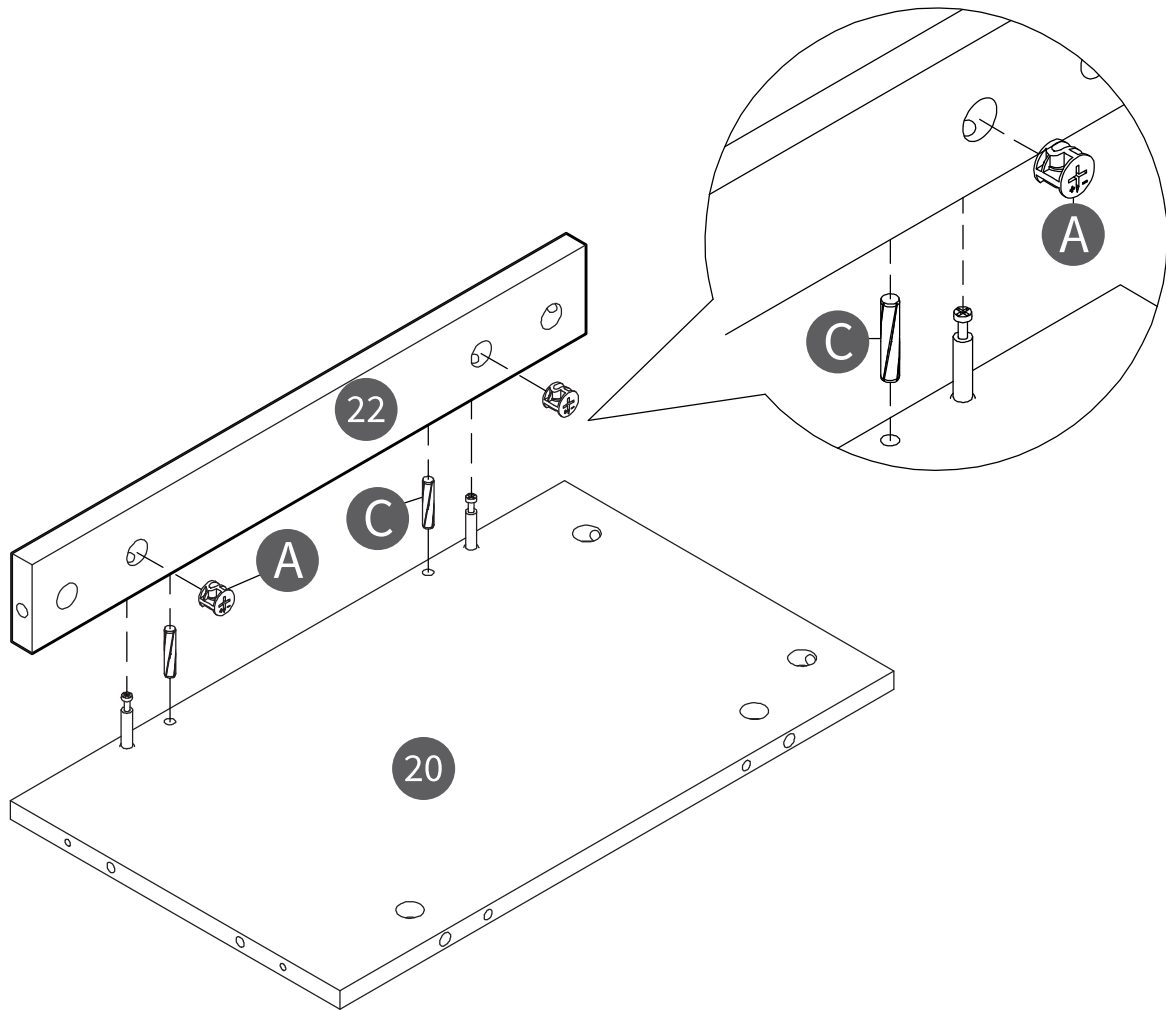




Step 9

Inserting Wooden Dowel (C) into Board (23), then attach Board (20&22) to Board (23). Using Cam Lock (A) secure Board (20&22) to Board (23).

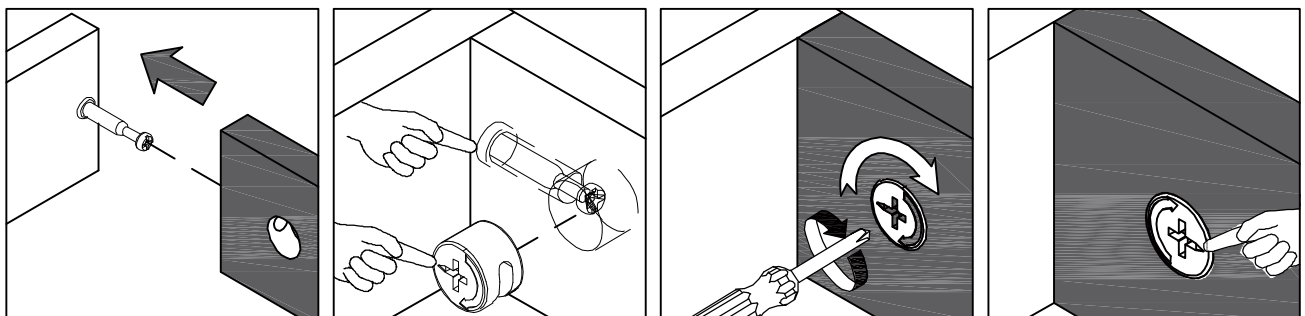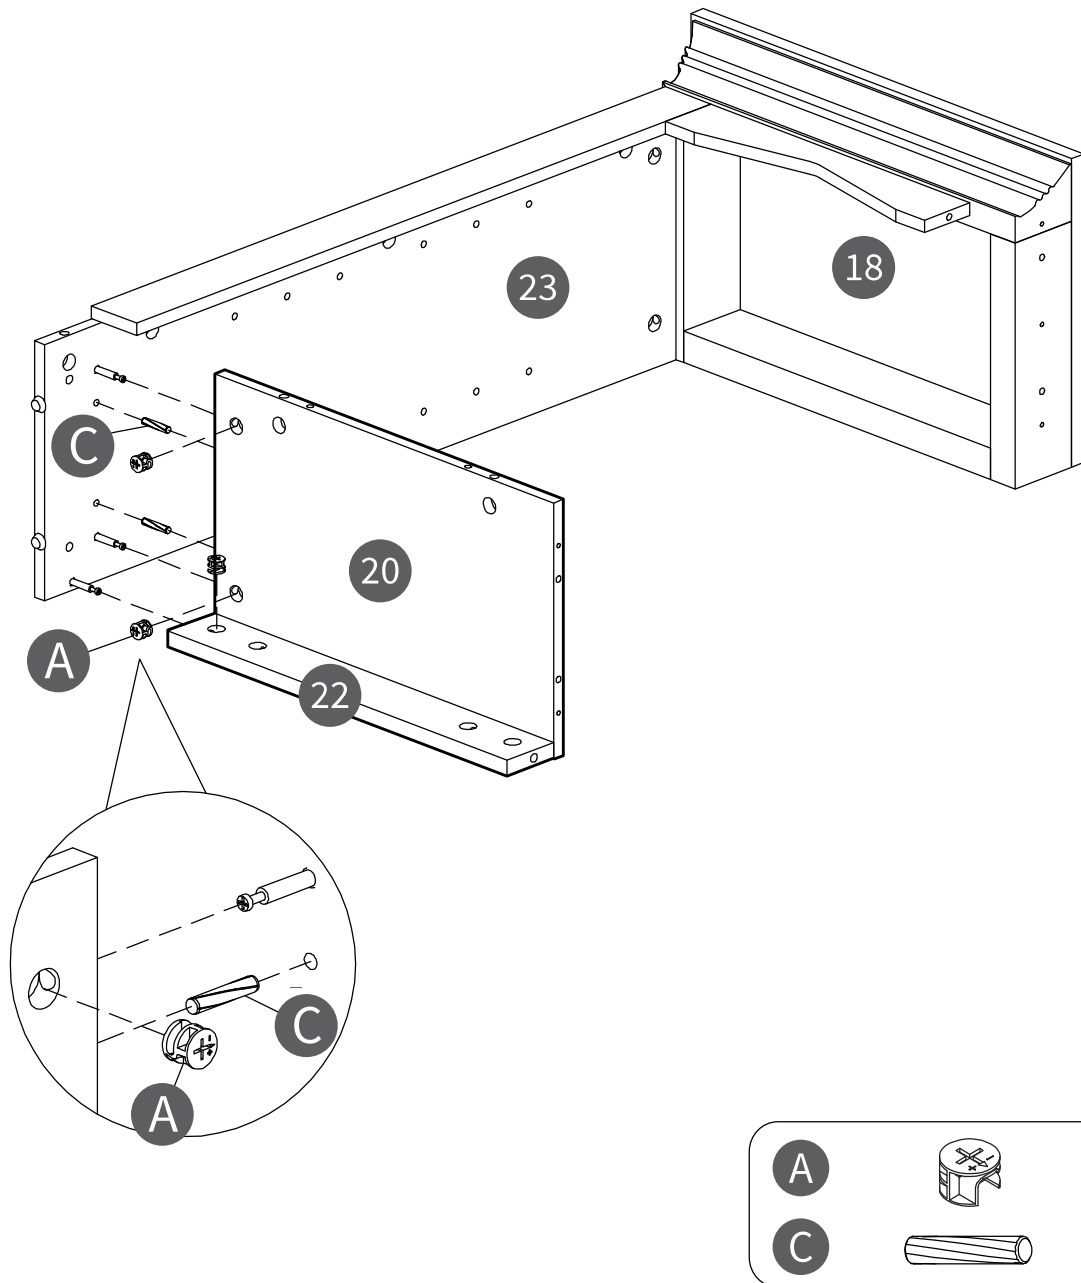



Step 10

Inserting Wooden Dowel (C) into Board (23), then attach Board (30) to Board (23). Using Screws (H) and a 7-Shaped Wrench (Q) secure Board (30) to Board (23).

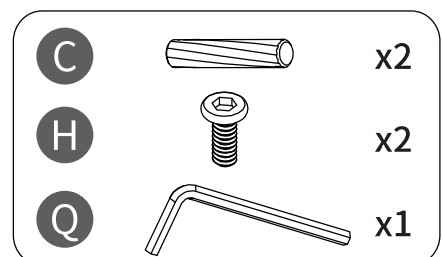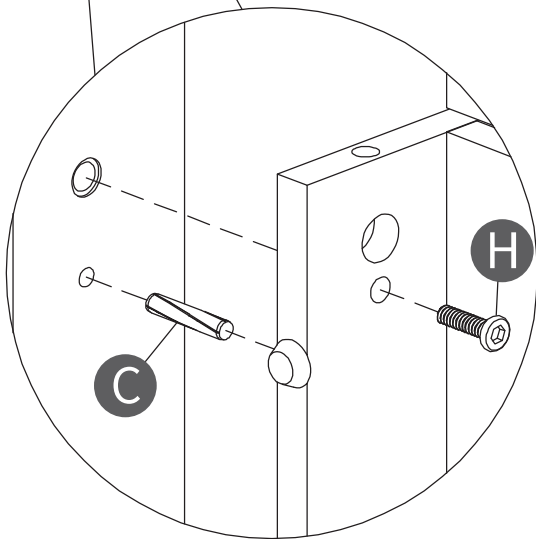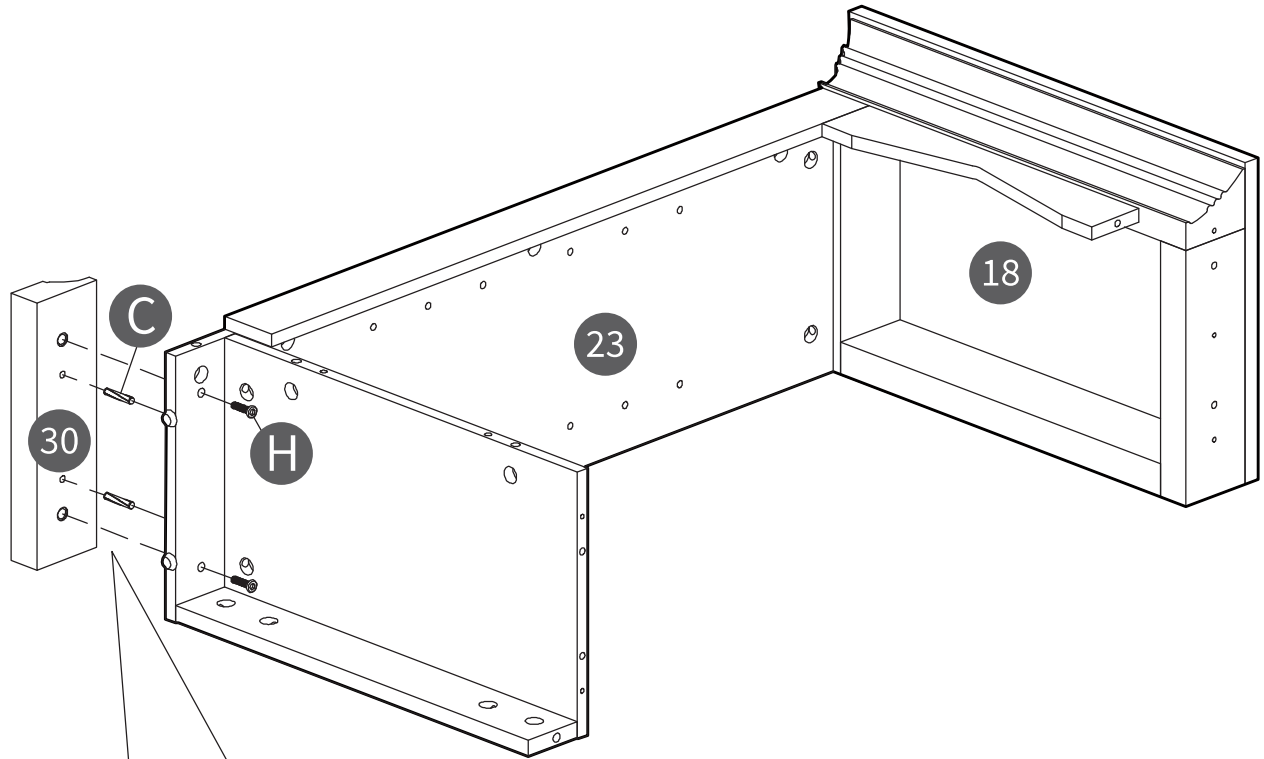




Step 11

Securing Cam Bolt (B) into Board (31).

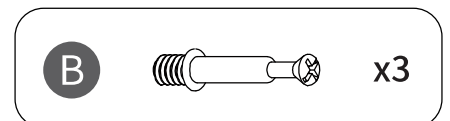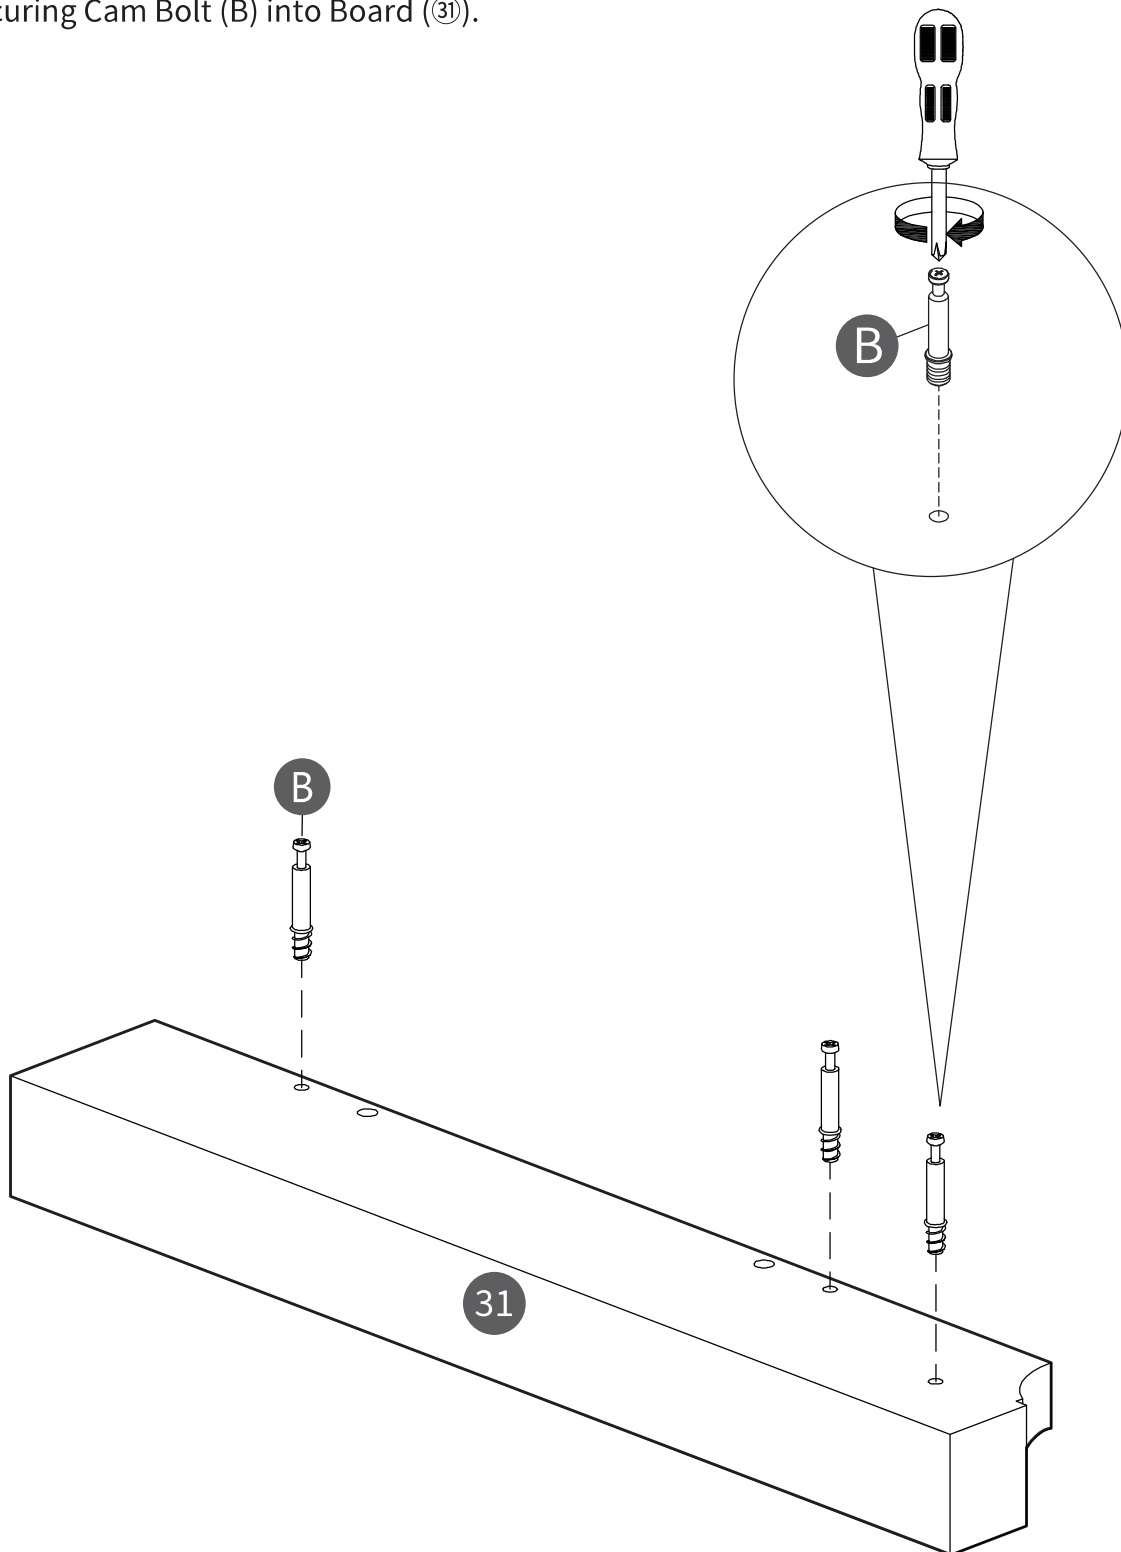



Step 12

Inserting Wooden Dowel (C) into Board (20), then attach Board (31) to Board (20&23). Using Cam Lock (A) secure Board (31) to Board (20&23).

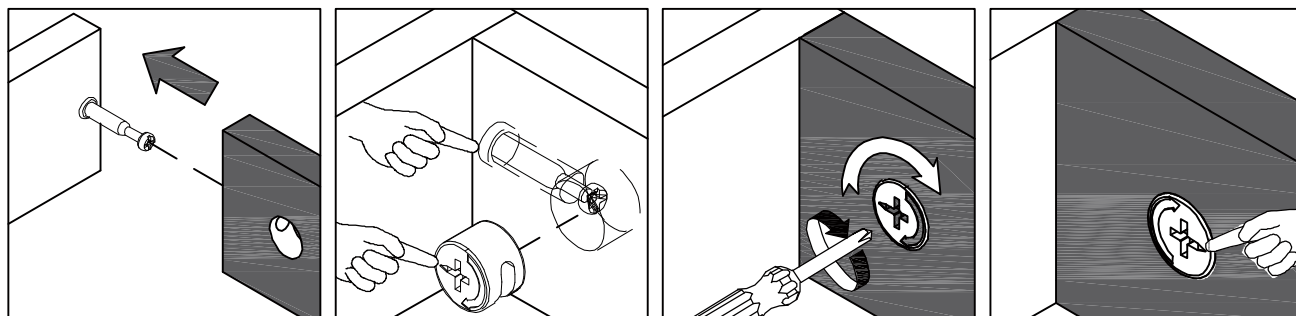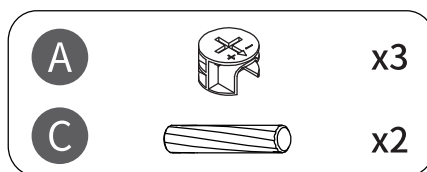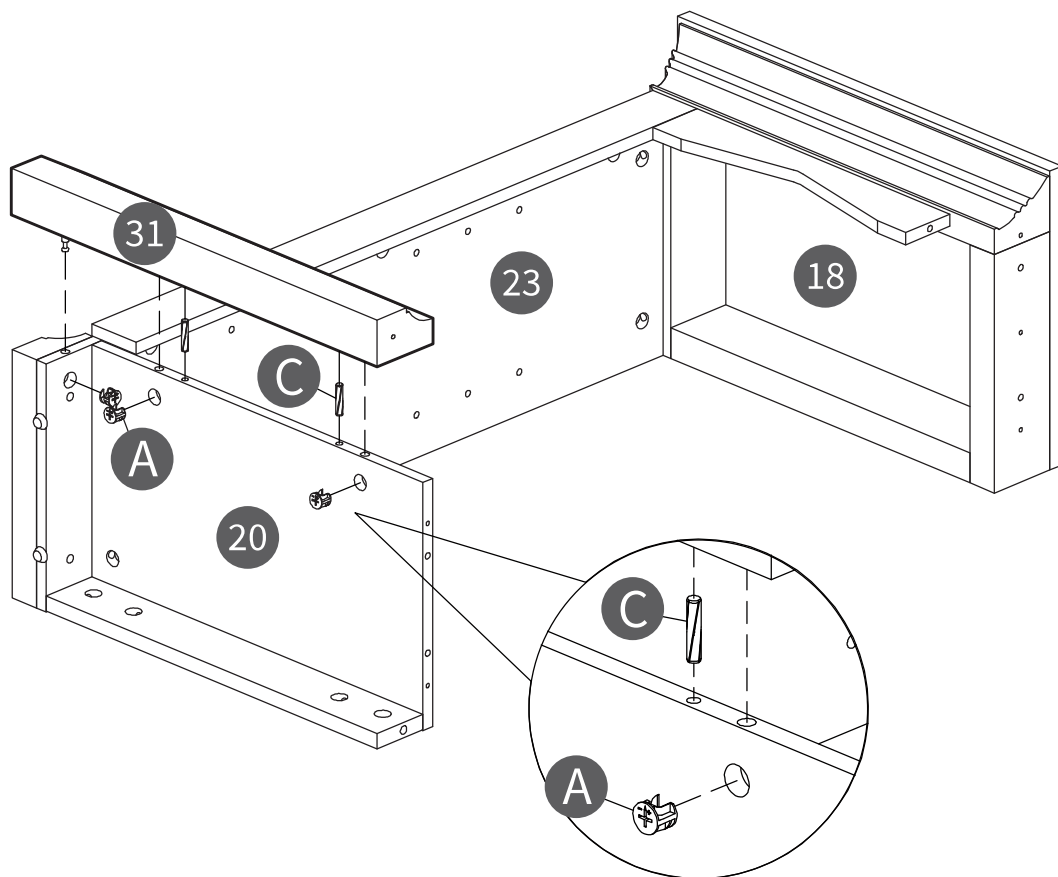




Step 13

Securing Cam Bolt (B) into Board (③). Then flip 180 degrees,
Securing Cam Bolt (B) into Board (③)

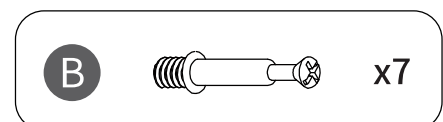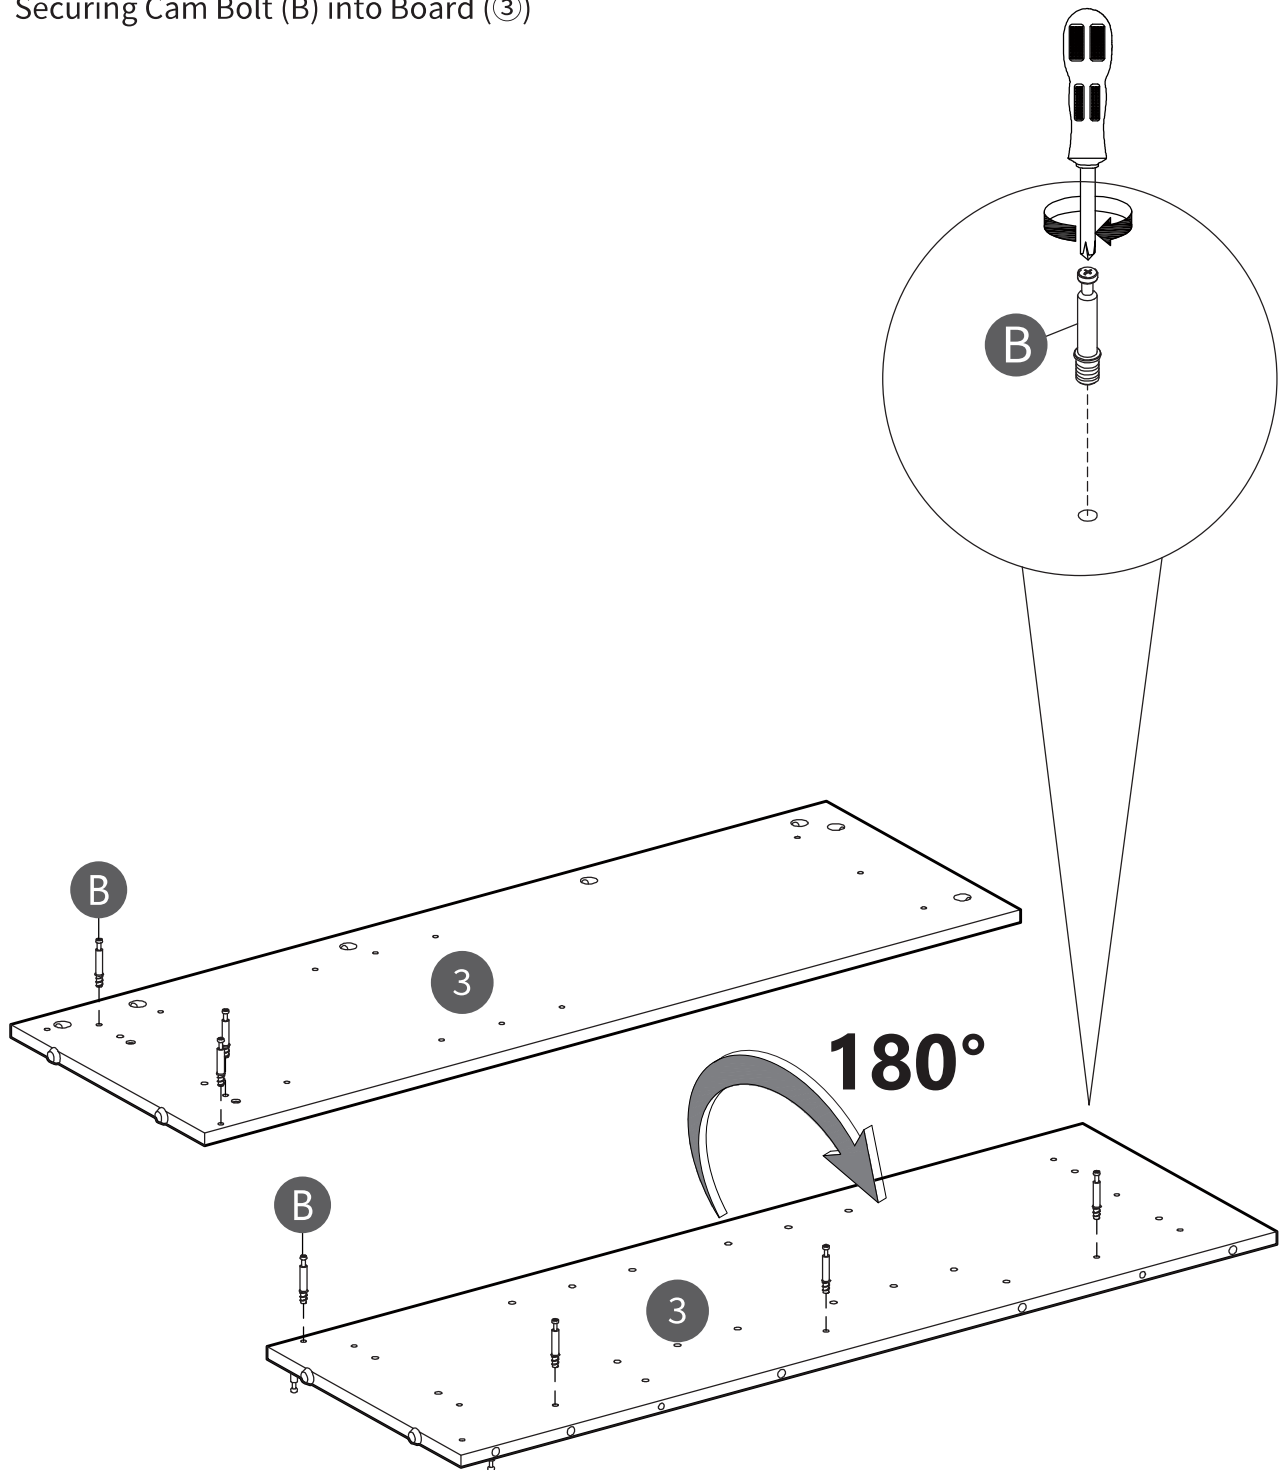



Step 14

Inserting Wooden Dowel (C) into Board (3), then attach Board (28) to Board (3).
Using Cam Lock (A) secure Board (28) to Board (3).

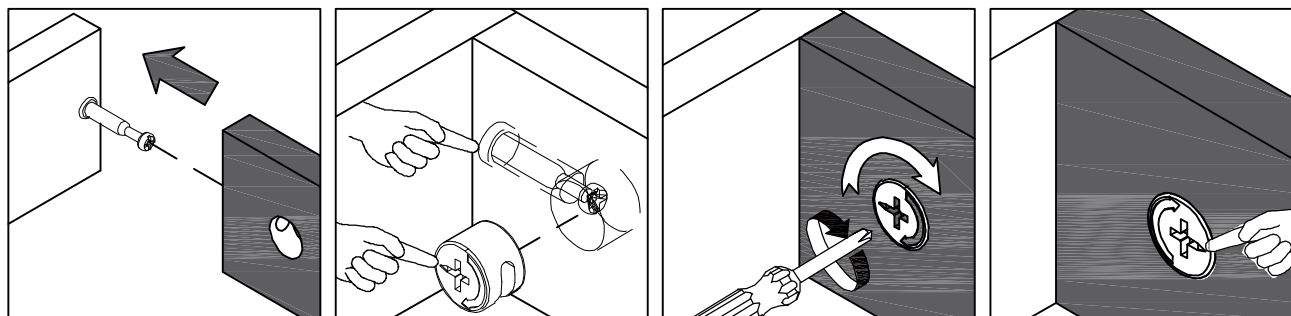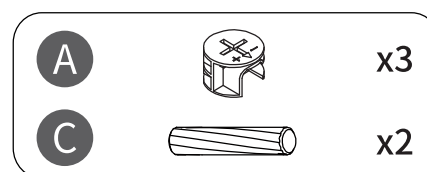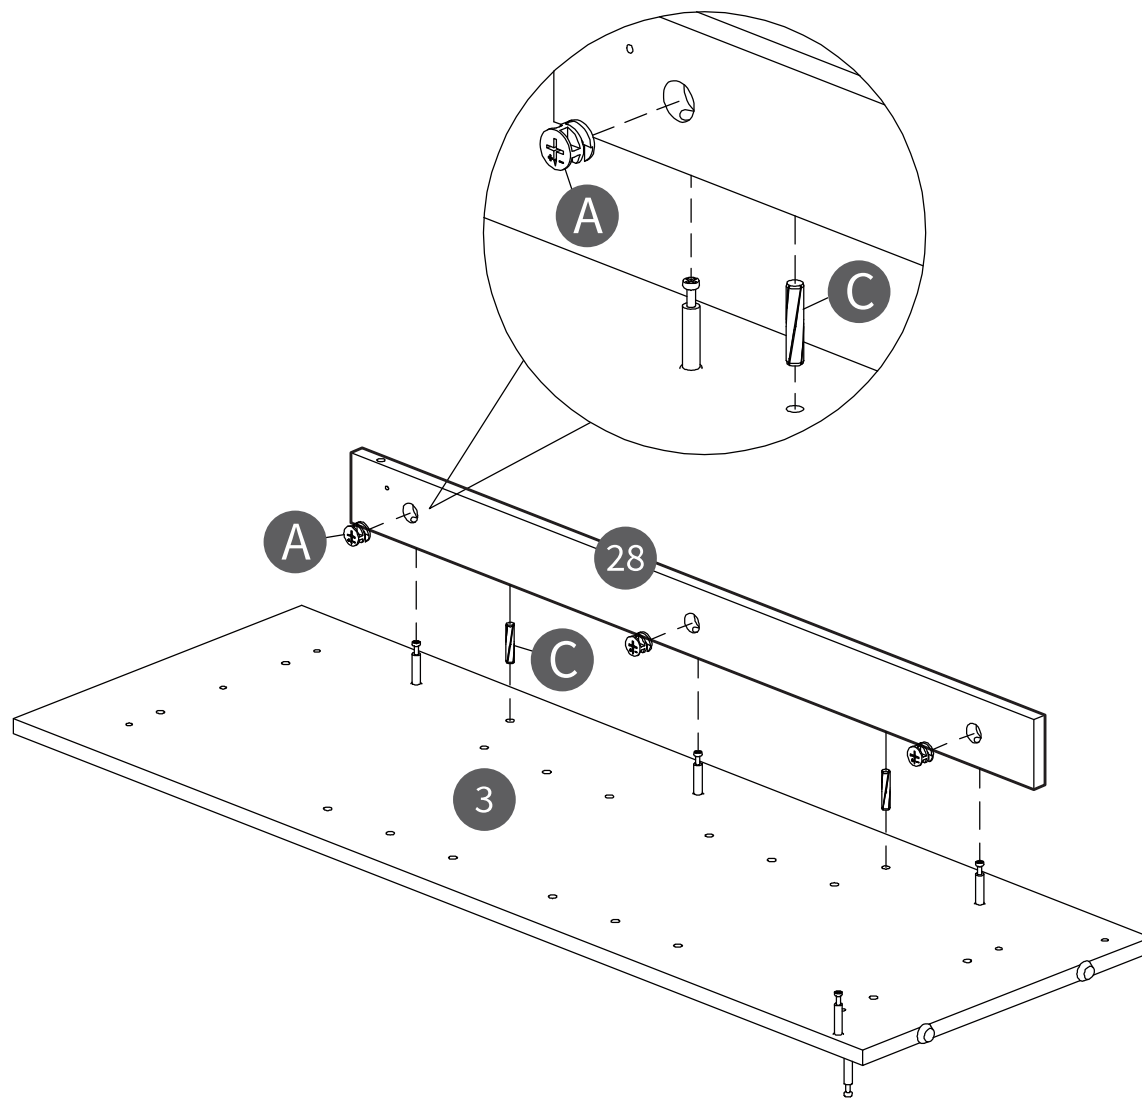




Step 15

Inserting Wooden Dowel (C) into Board (18&20&27), then attach Board (3) to Board (18&20&22&27&31). Using Cam Lock (A) secure Board (3) to Board (22). Using Screws (G) and a 7-Shaped Wrench (R) secure Board (3) to Board (18&20&31).

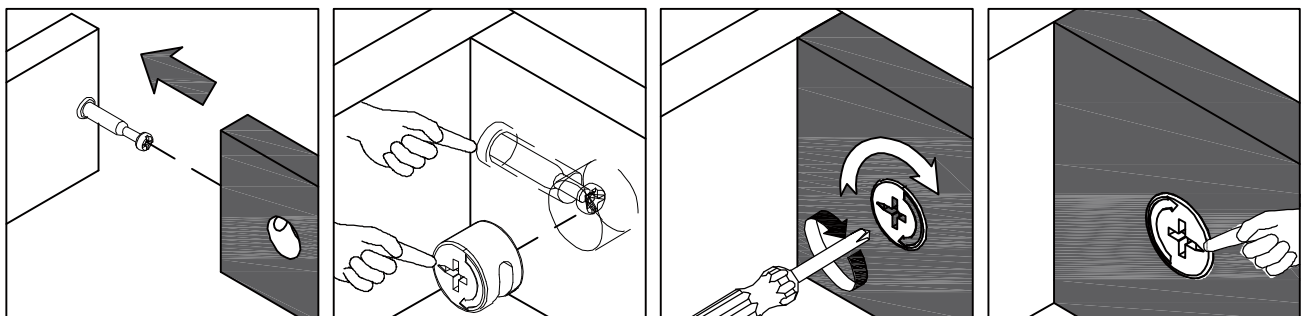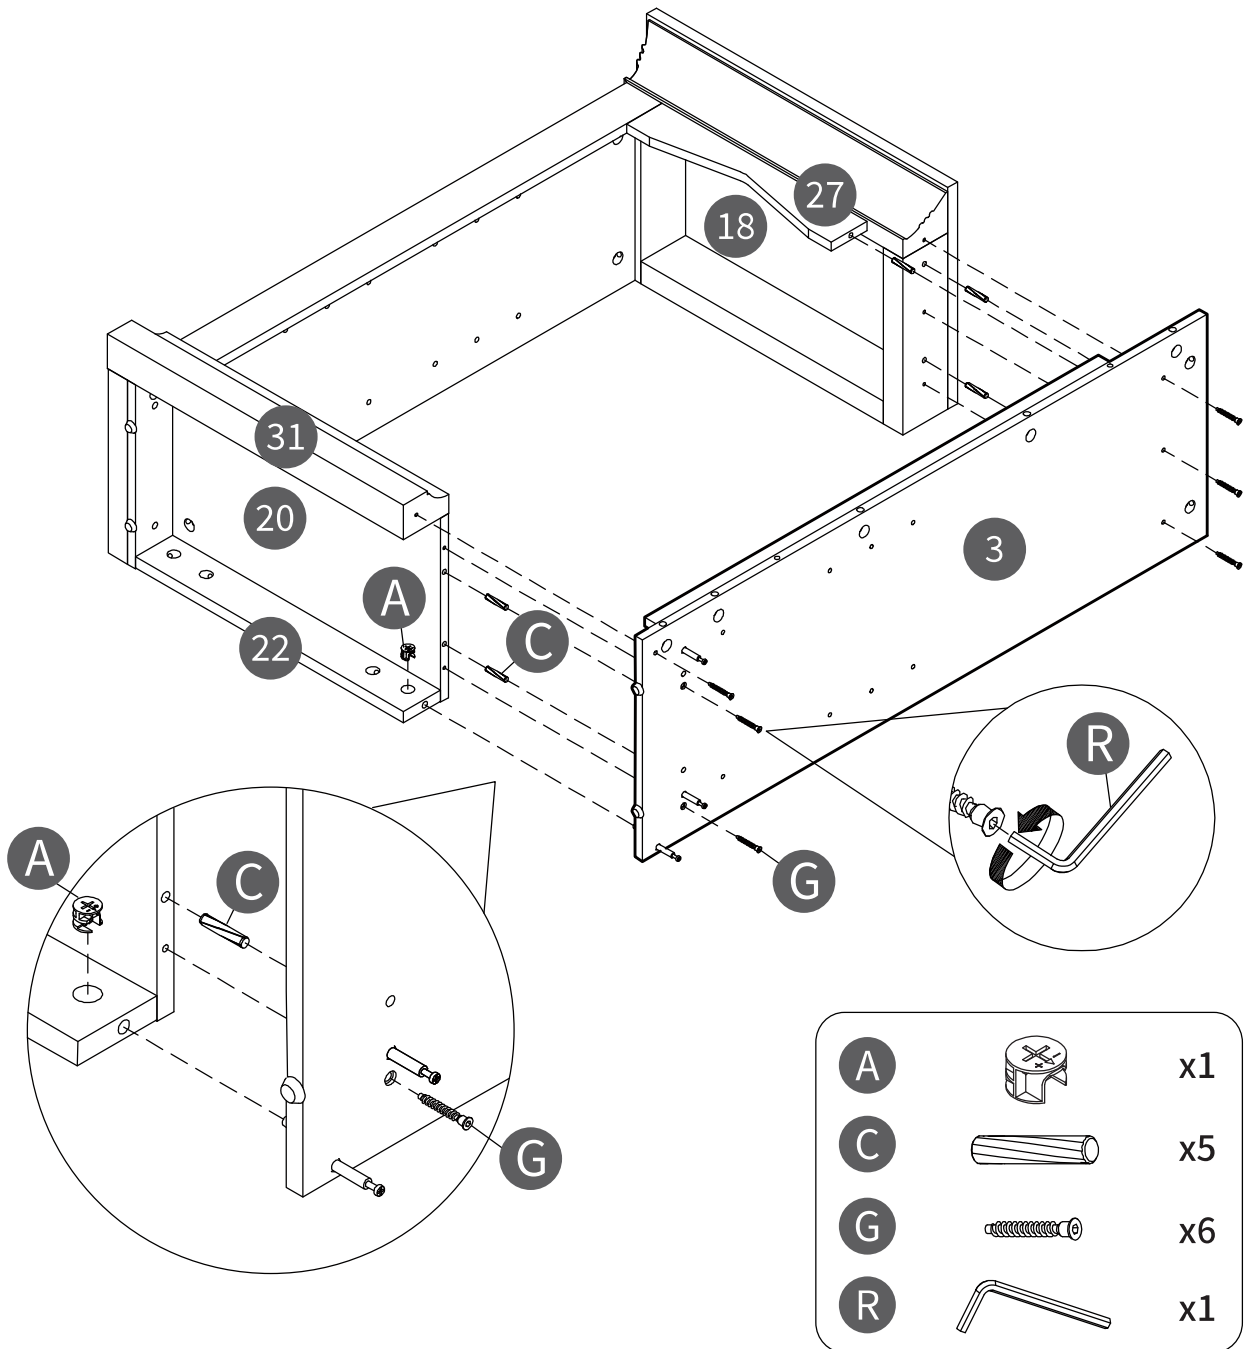



Step 16

Inserting Wooden Dowel (C) into Board (19), then attach Board (24&27) to Board (19). Using Cam Lock (A) secure Board (24&27) to Board (19).

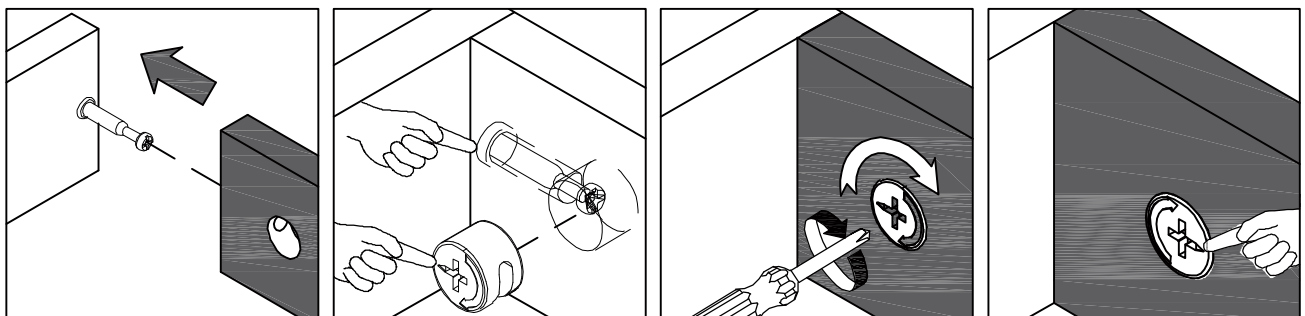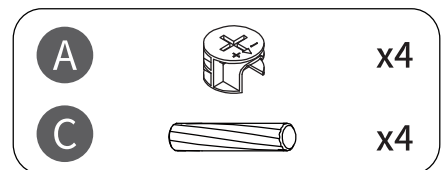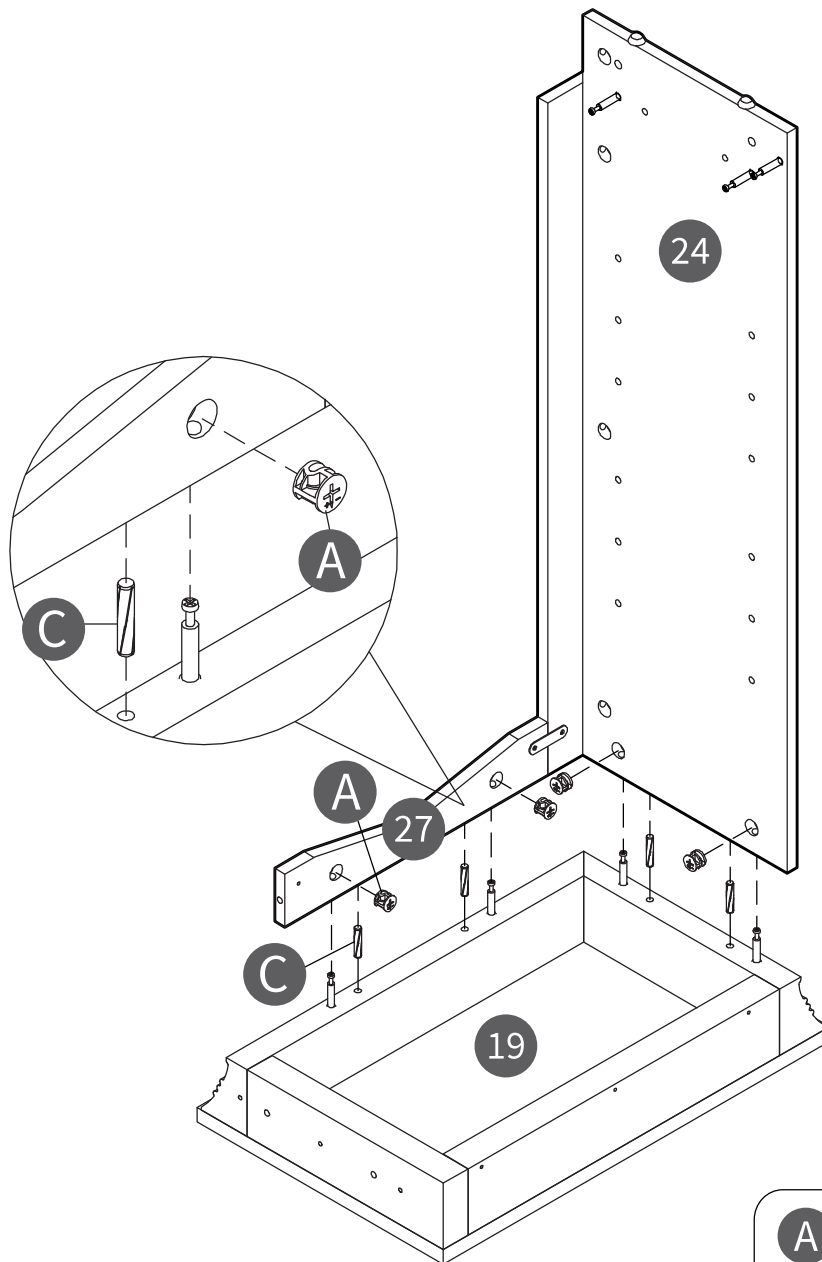




Step 17

Securing Cam Bolt (B) into Board (21).

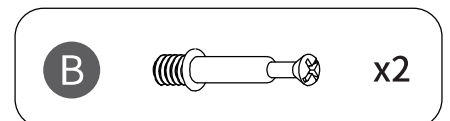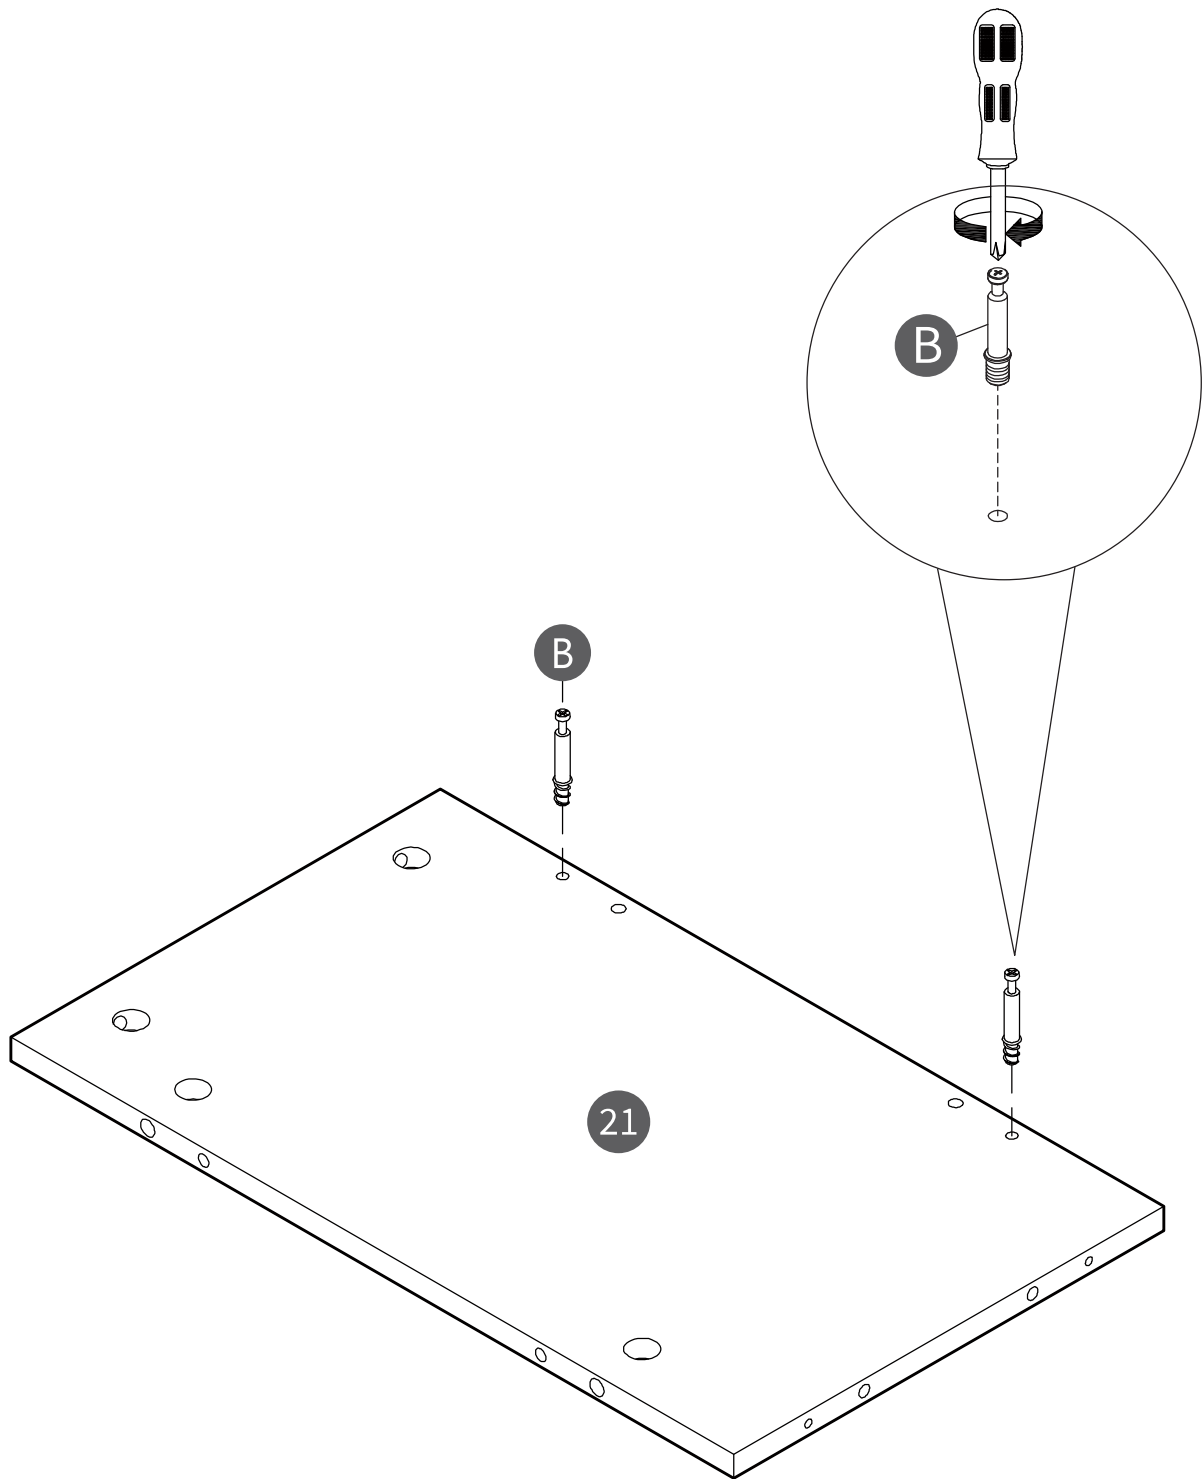




Step 18

Inserting Wooden Dowel (C) into Board (21), then attach Board (22) to Board (21). Using Cam Lock (A) secure Board (22) to Board (21).

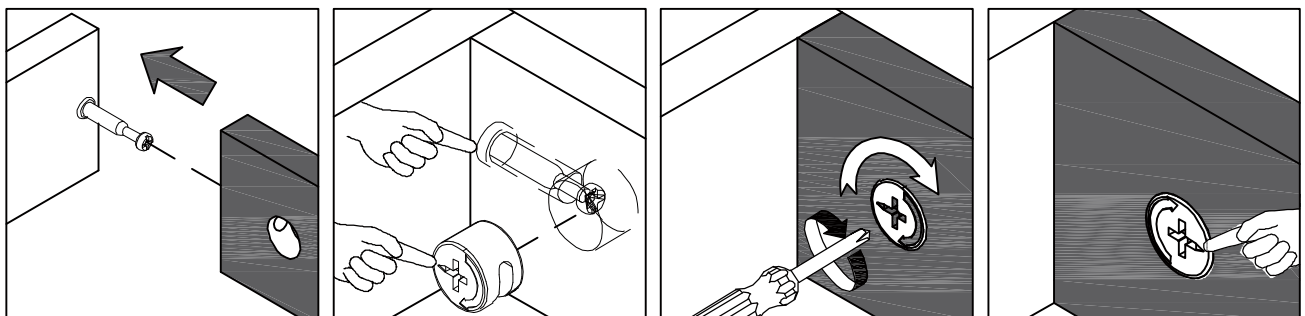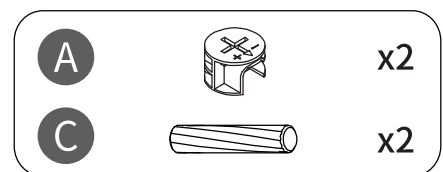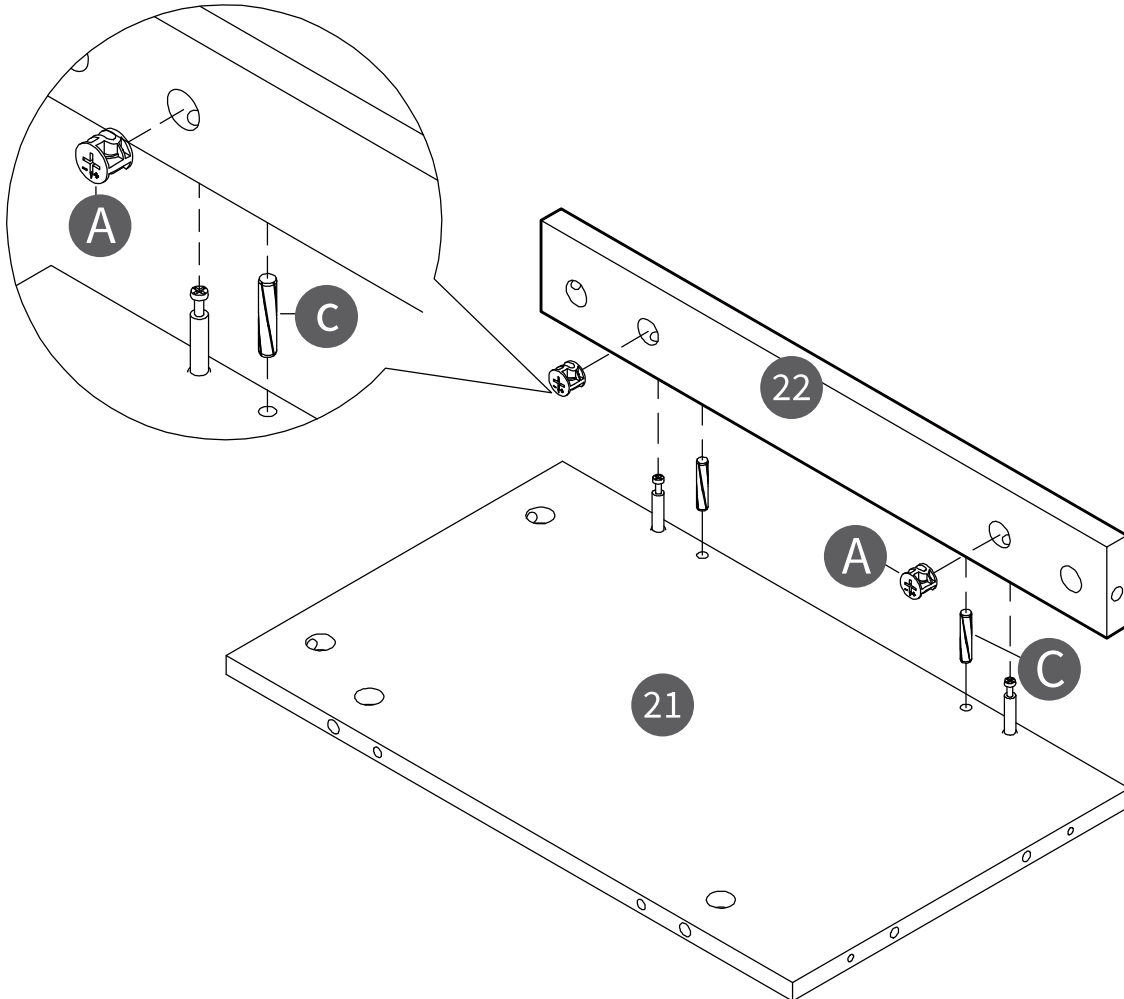



Step 19

Inserting Wooden Dowel (C) into Board (24), then attach Board (21&22) to Board (24). Using Cam Lock (A) secure Board (21&22) to Board (24).

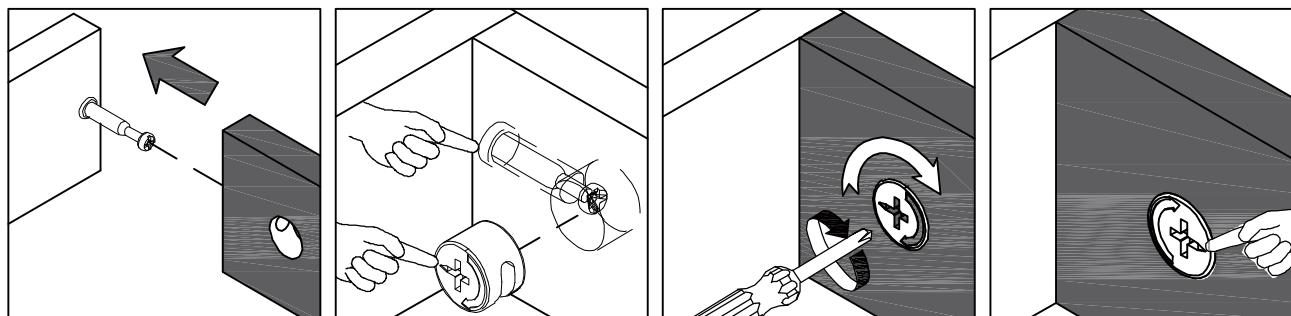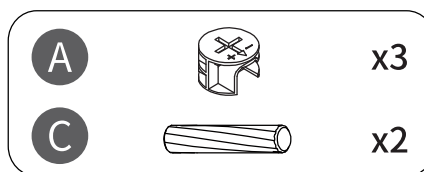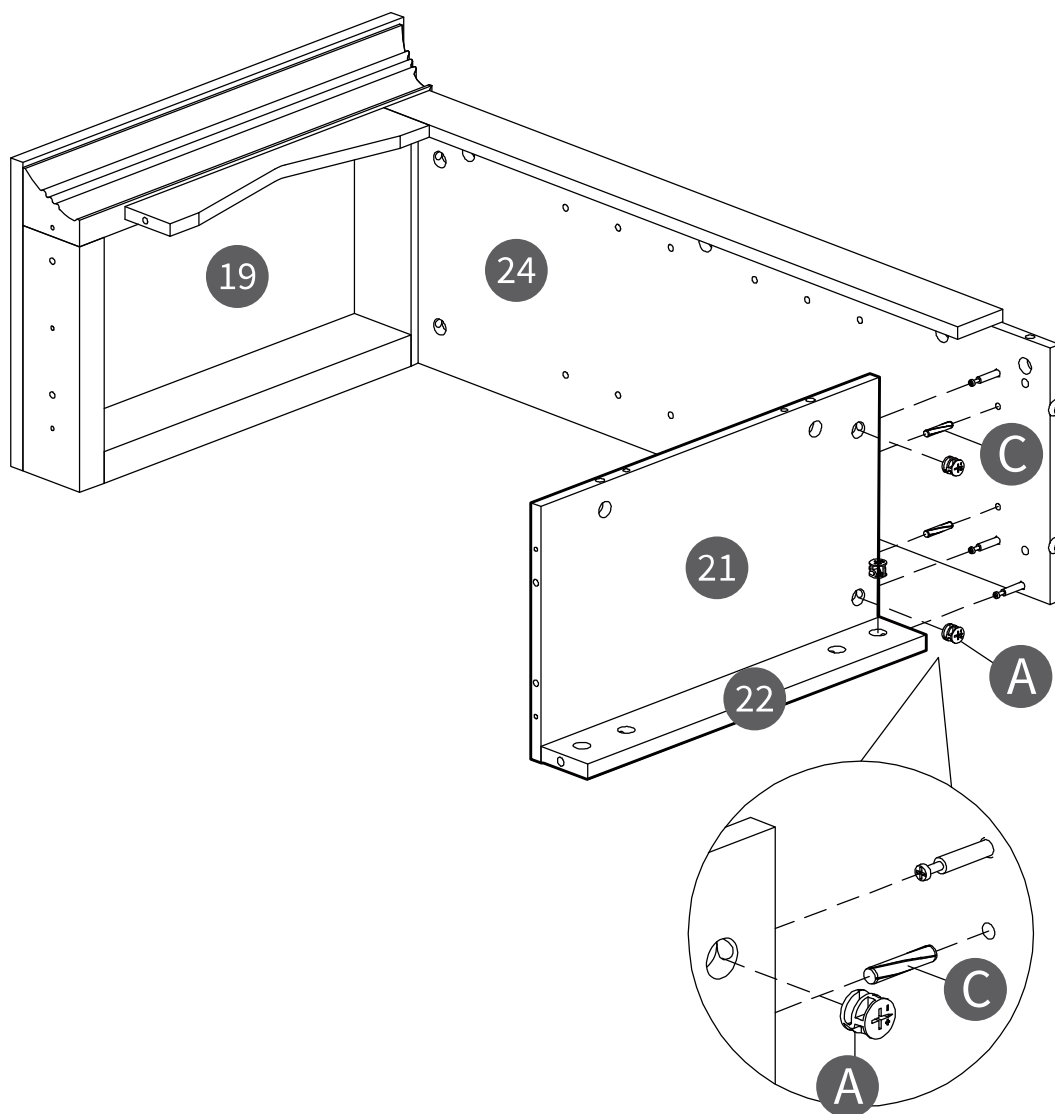



Step 20

Inserting Wooden Dowel (C) into Board (24), then attach Board (30) to Board (24). Using Screws (H) and a 7-Shaped Wrench (Q) secure Board (30) to Board (24).

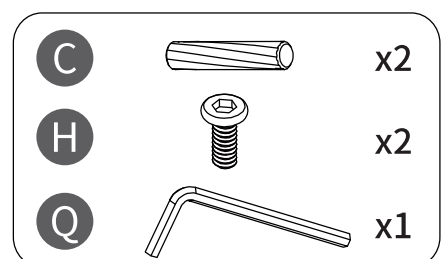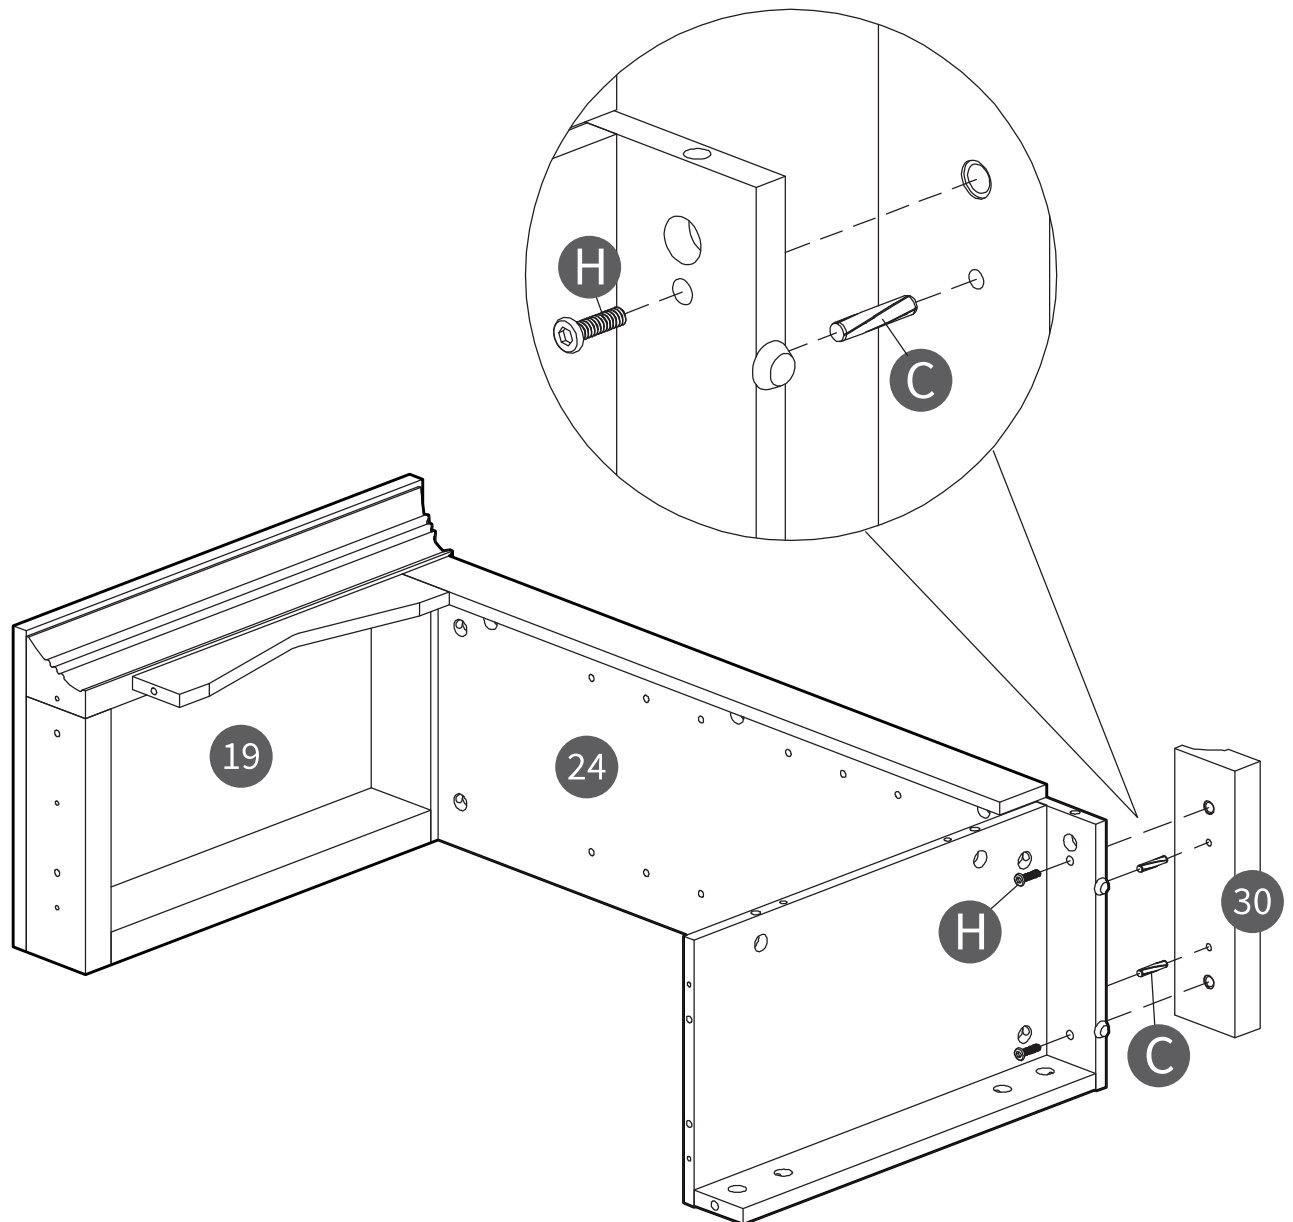




Step 21

Securing Cam Bolt (B) into Board (32).

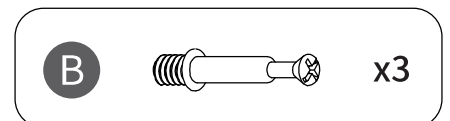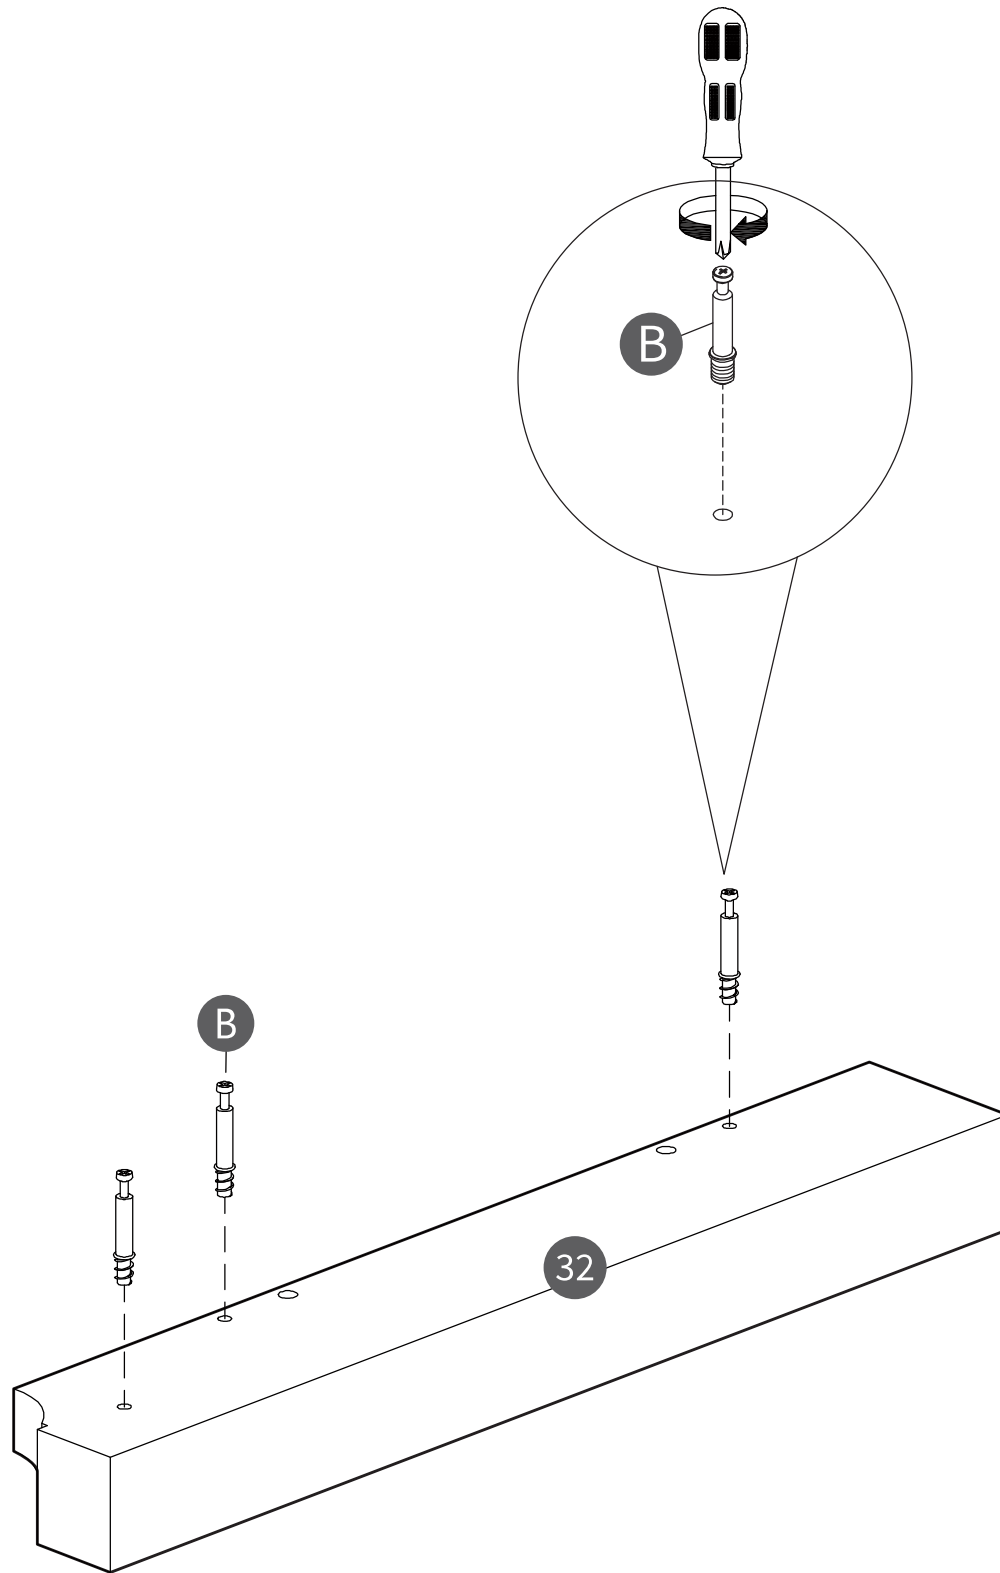



Step 22

Inserting Wooden Dowel (C) into Board (21), then attach Board (32) to Board (21&24). Using Cam Lock (A) secure Board (32) to Board (21&24).

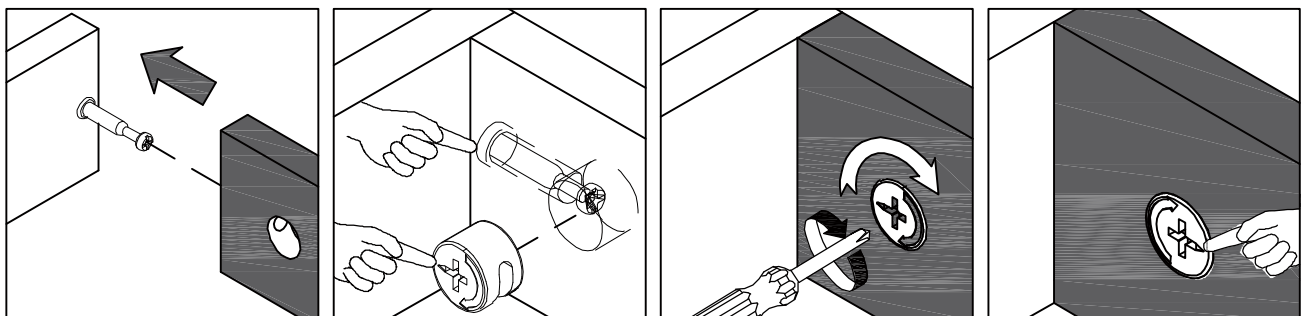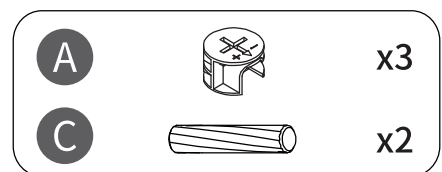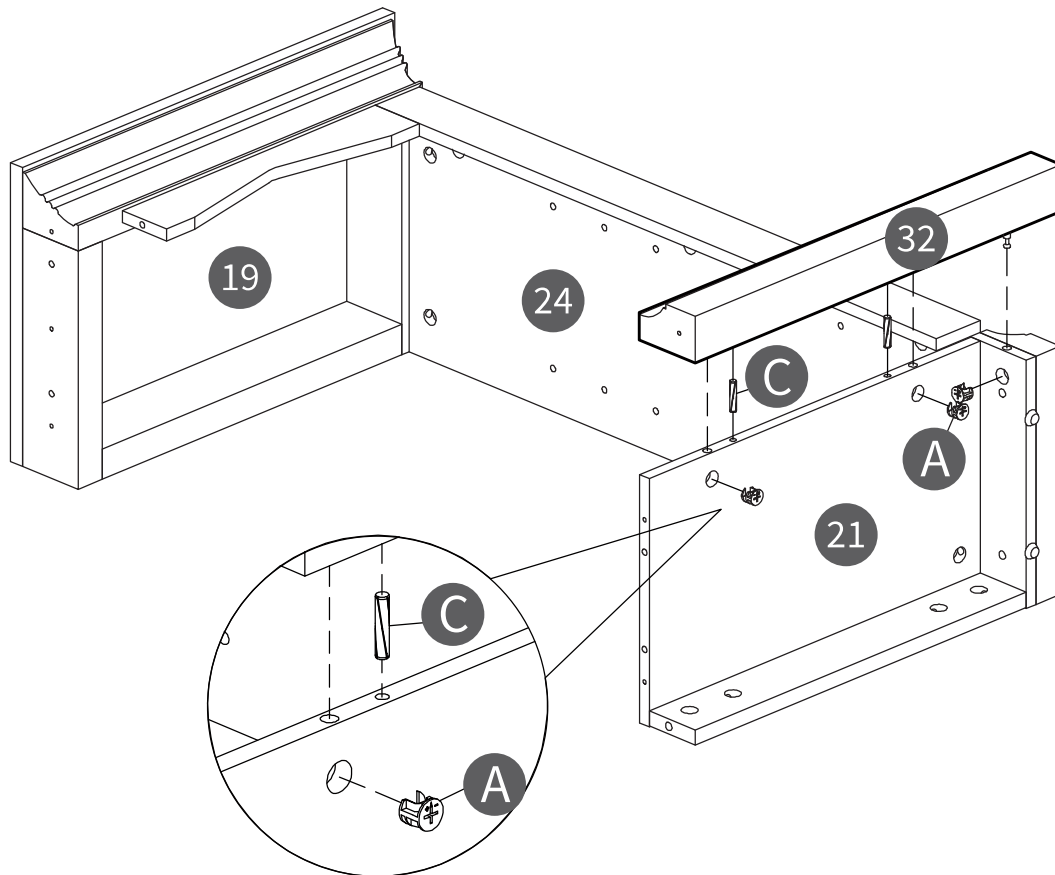




Step 23

Securing Cam Bolt (B) into Board (④). Then flip 180 degrees,
Securing Cam Bolt (B) into Board (④)

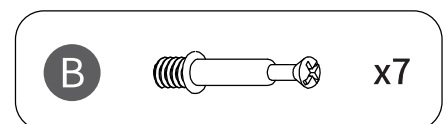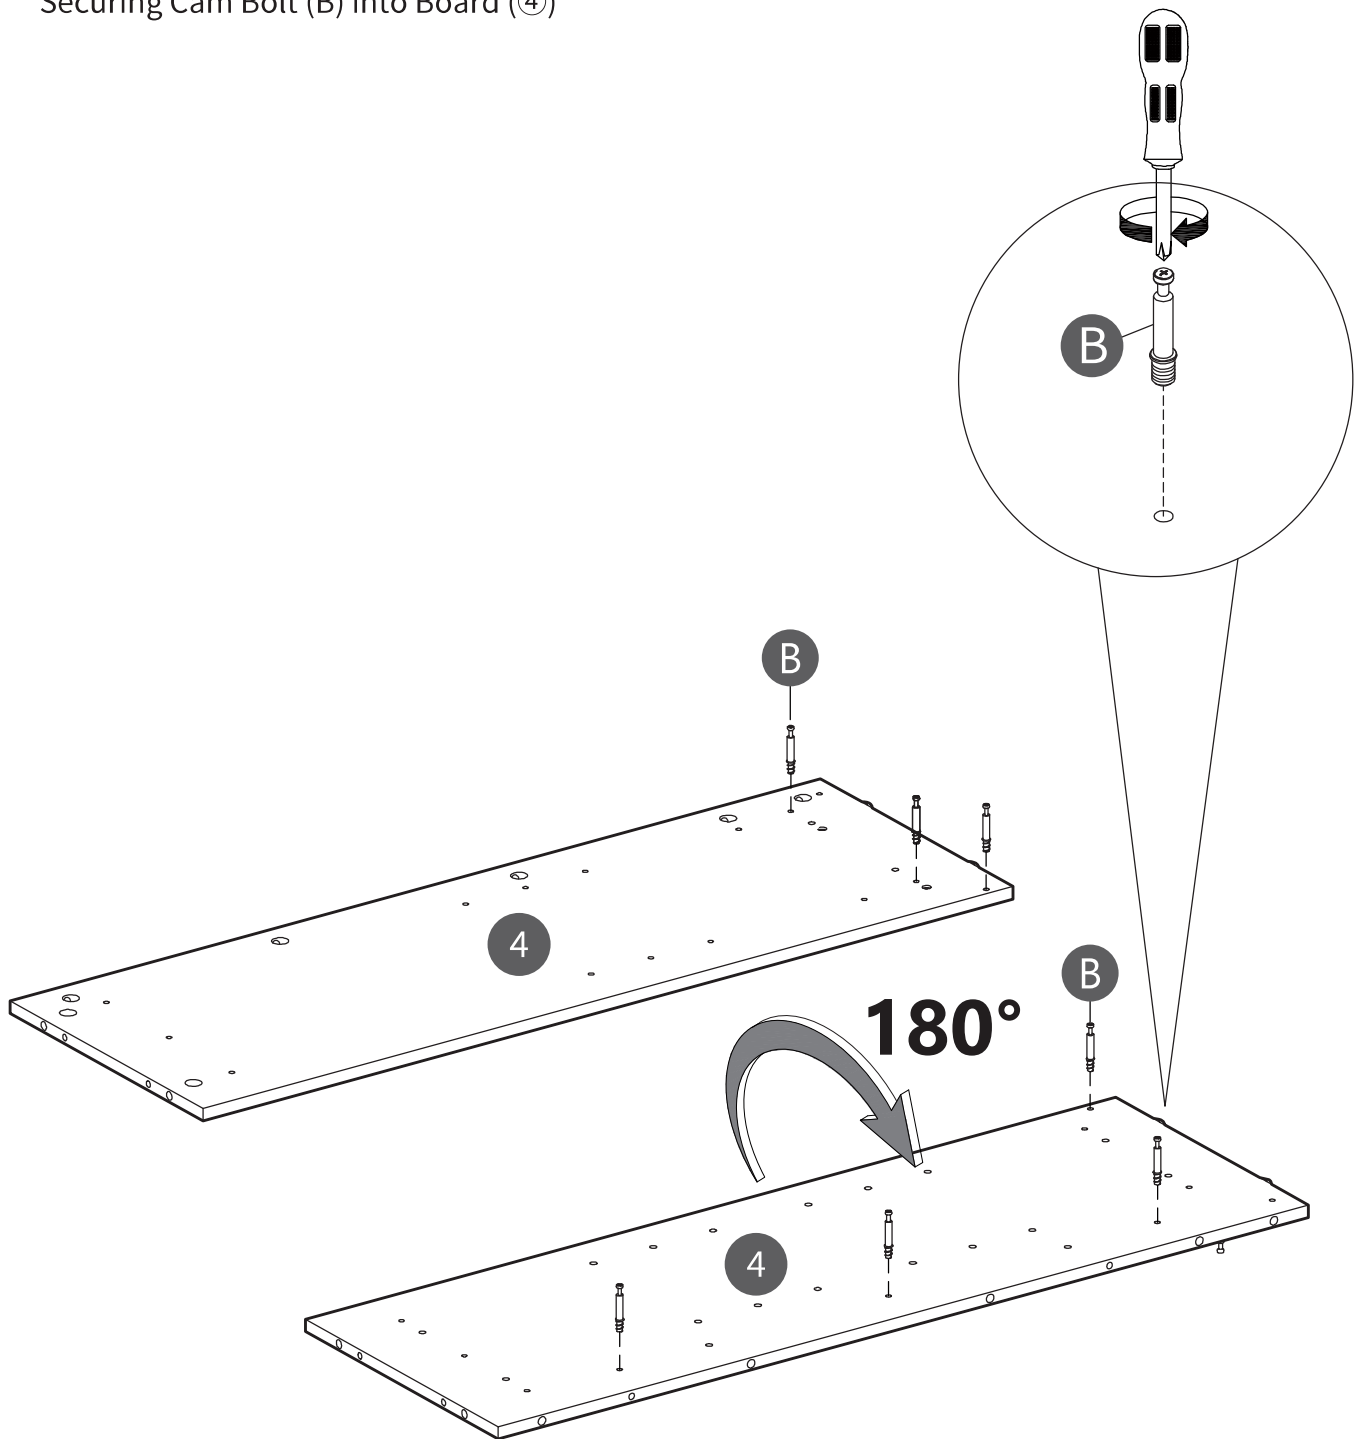


Step 24


Inserting Wooden Dowel (C) into Board (④), then attach Board (②⑨) to Board (④).
Using Cam Lock (A) secure Board (②⑨) to Board (④).

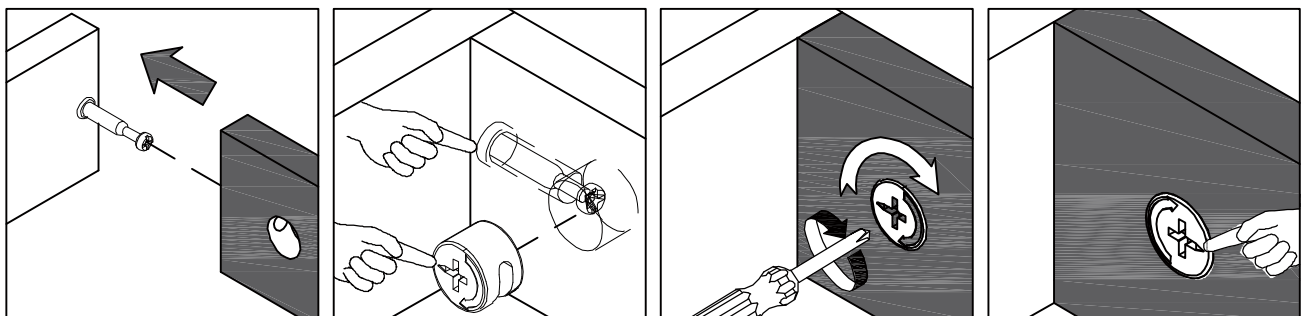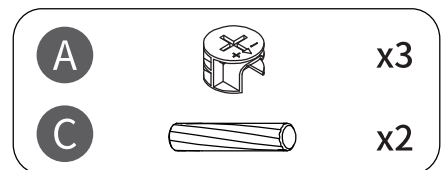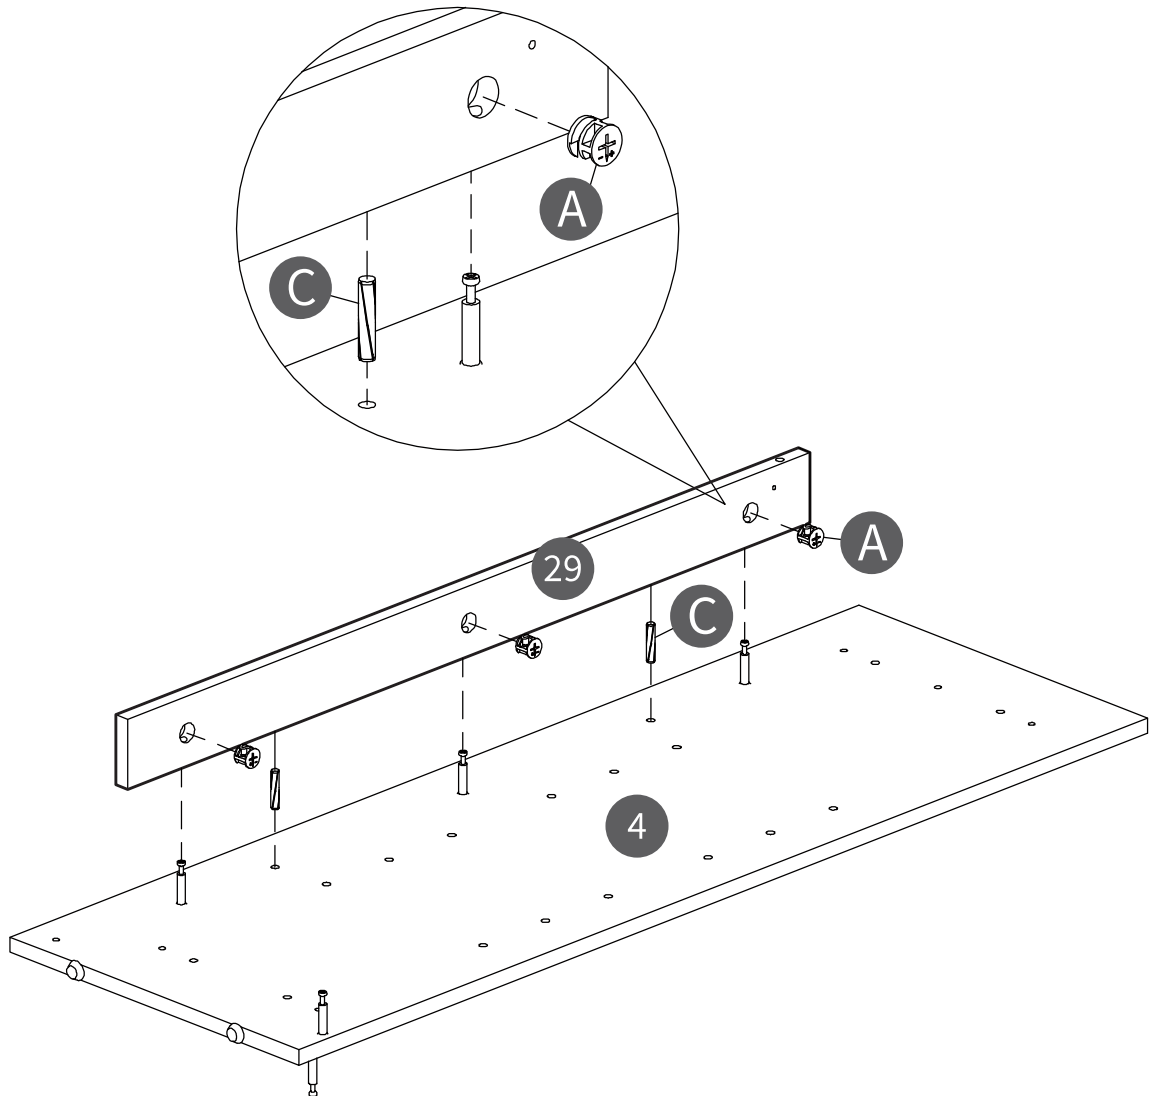

Step 25


Inserting Wooden Dowel (C) into Board (19&21&27), then attach Board (4) to Board (19&21&22&27&32). Using Cam Lock (A) secure Board (4) to Board (22). Using Screws (G) and a 7-Shaped Wrench (R) secure Board (4) to Board (19&21&32).

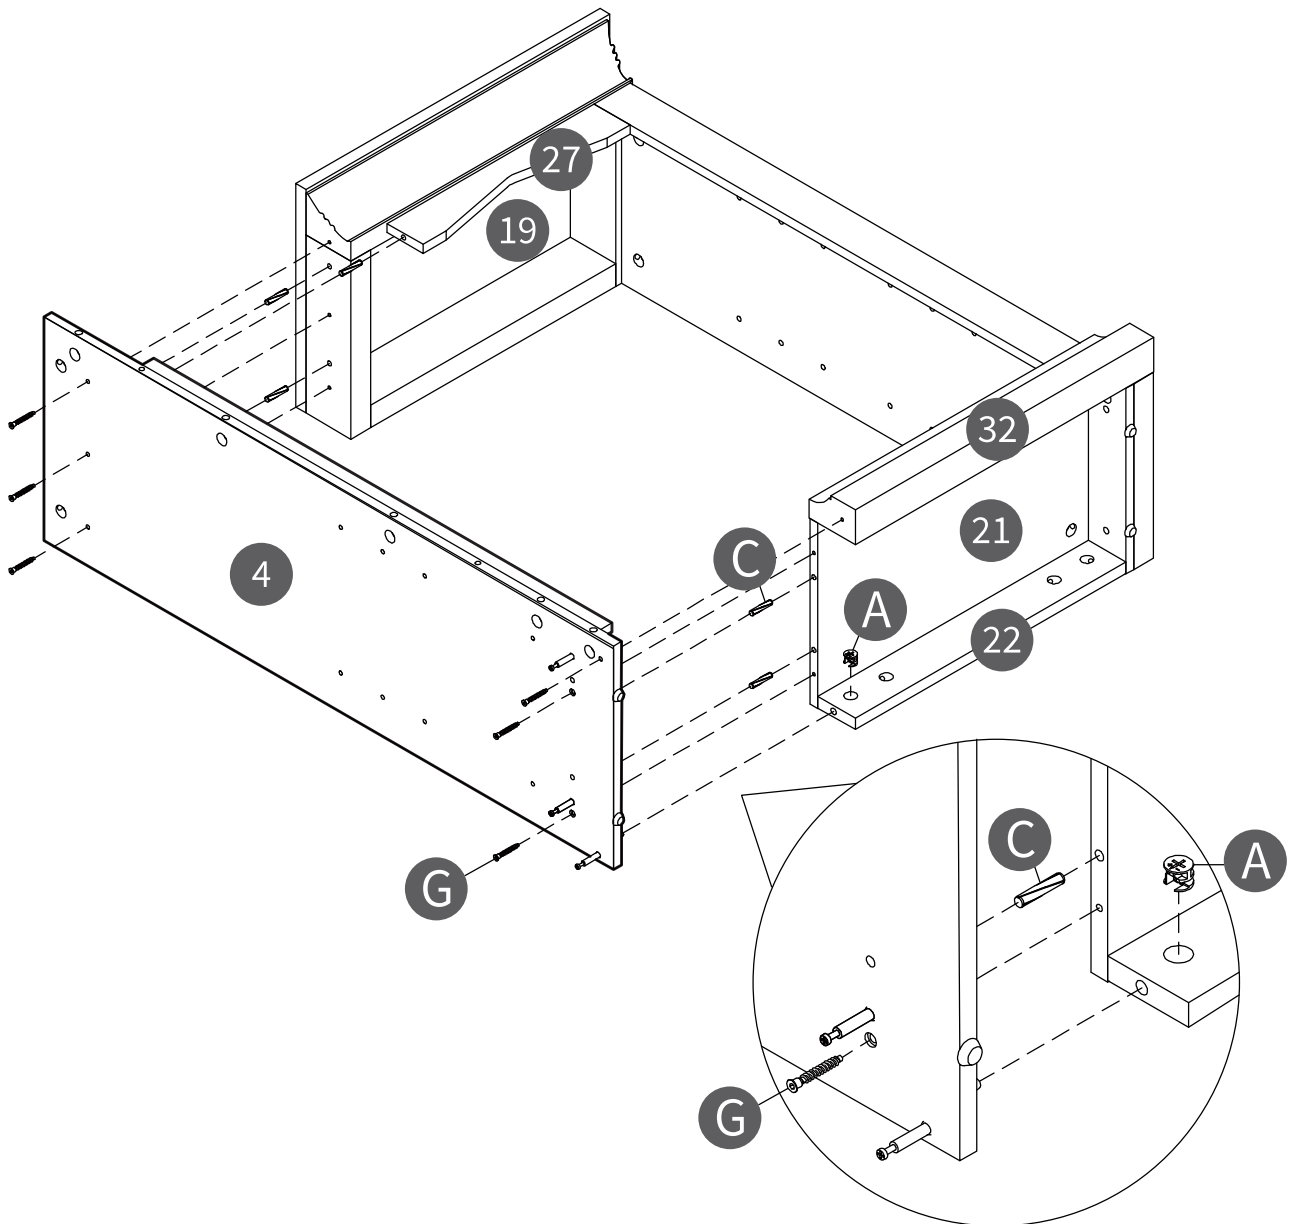

A		x1
C		x5
G		x6
R		x1



Step 26

Using Screws (D) secure Connector (E) to Board (②⑦&②⑧,②⑦&②⑨).

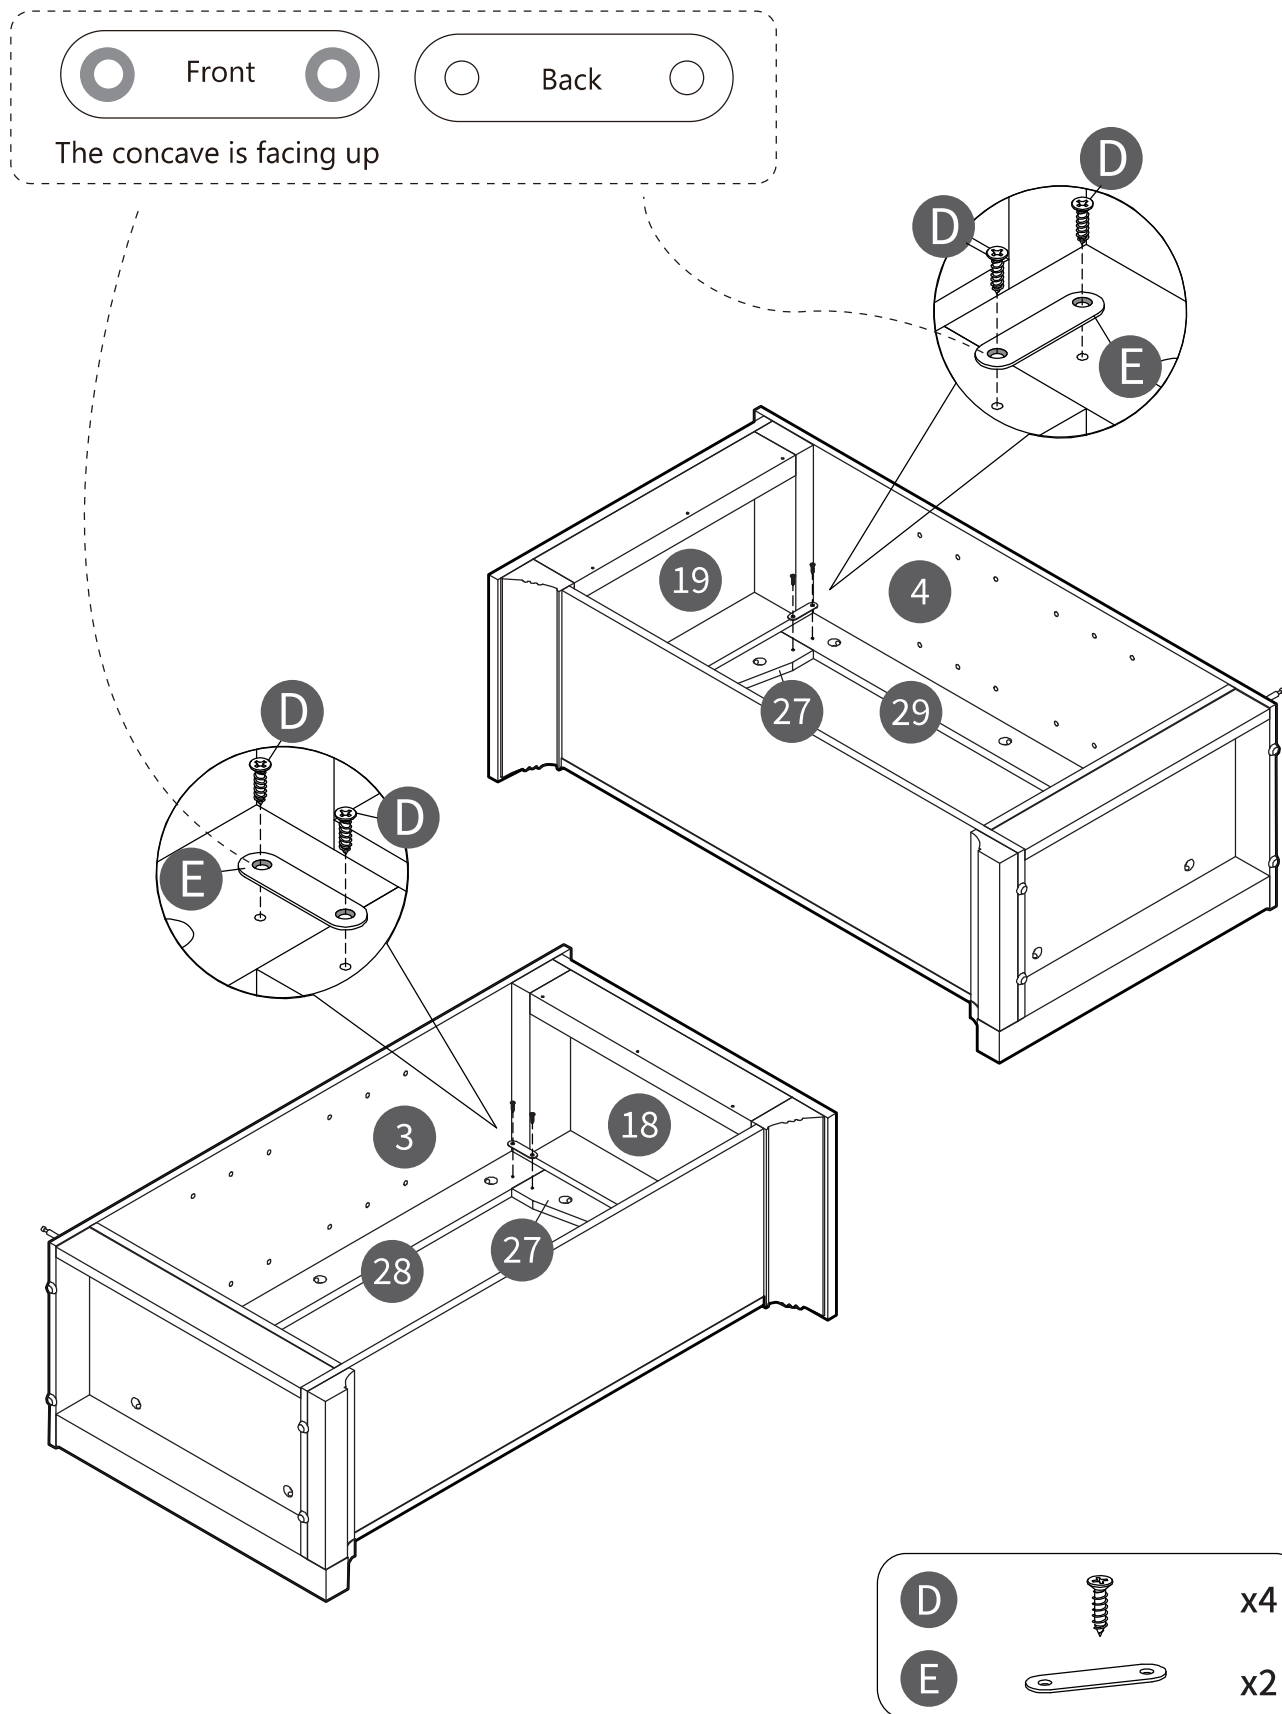


Step 27

Securing Cam Bolt (B) into Board (⑤&⑥).

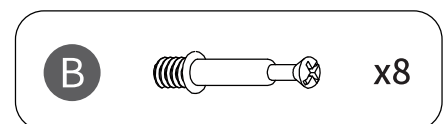
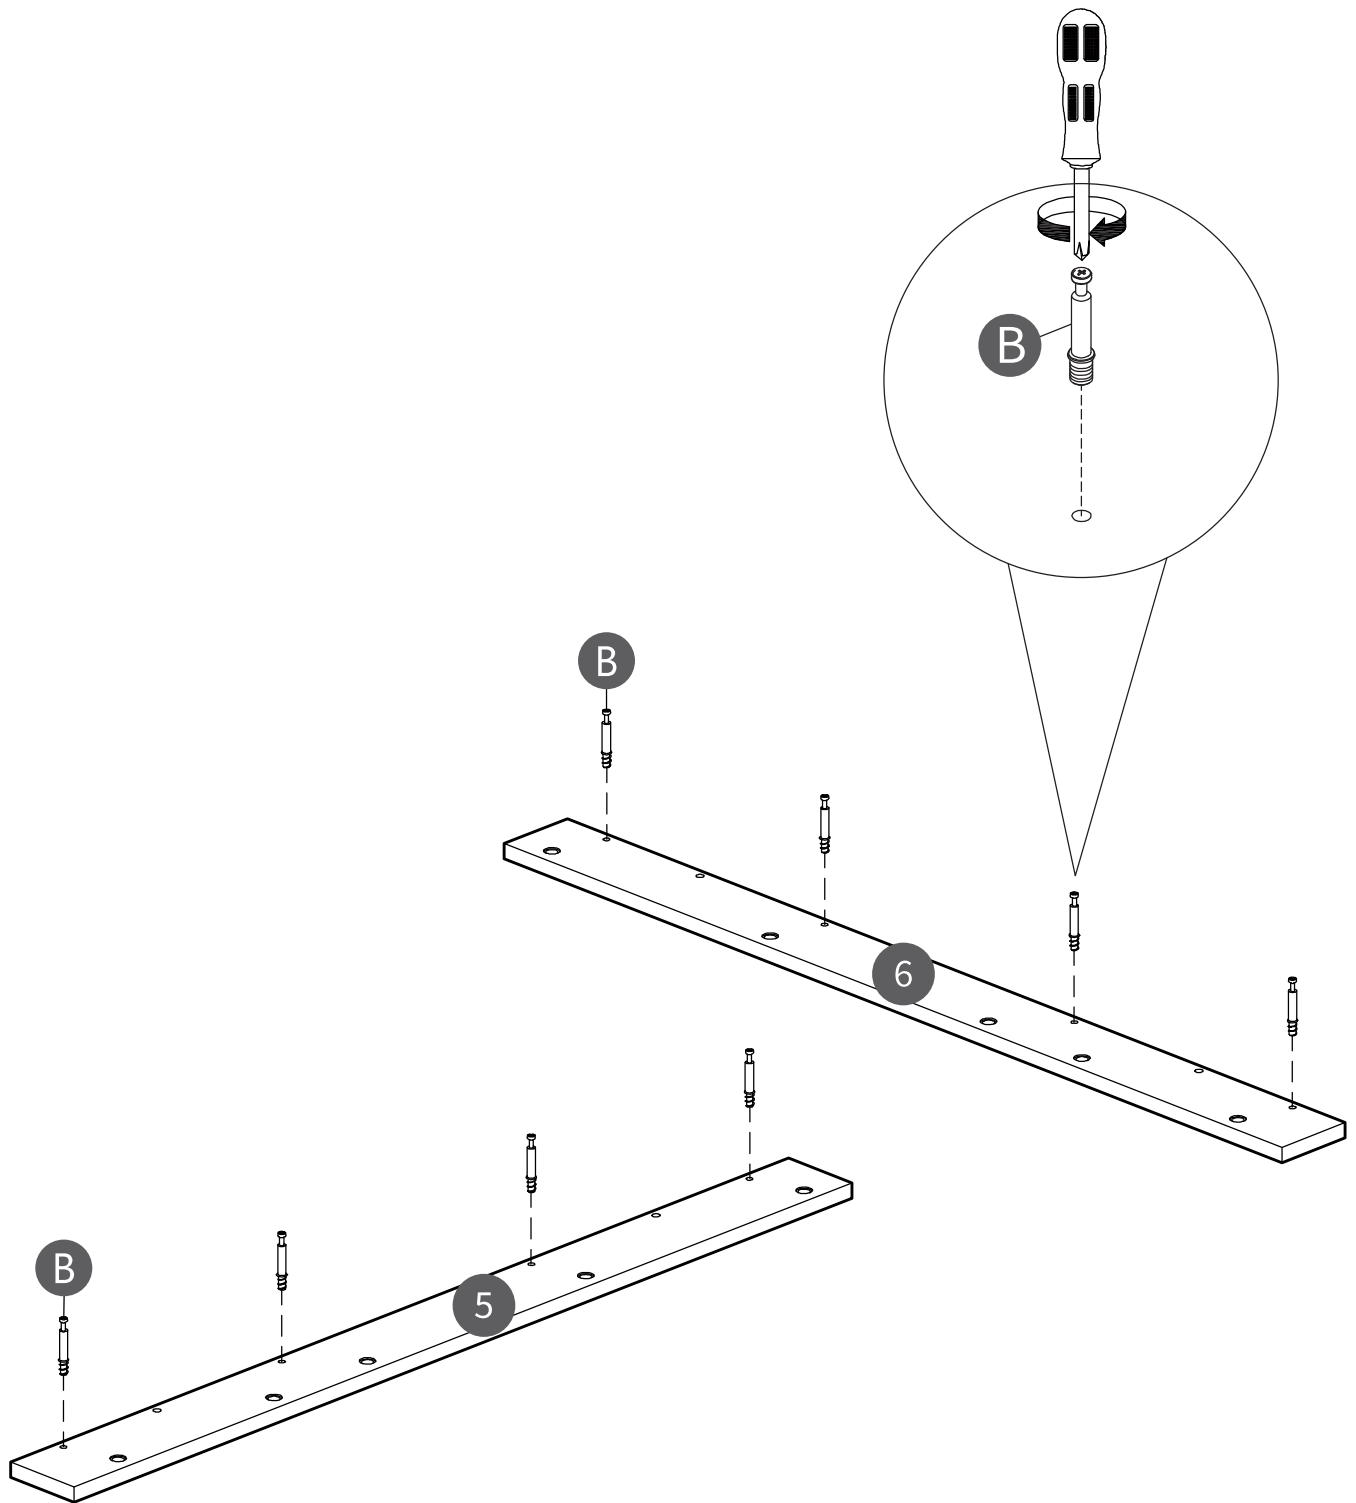


Step 28

Inserting Wooden Dowel (C) into Board (③), then attach Board (⑤) to Board (③). Using Cam Lock (A) secure Board (⑤) to Board (③).

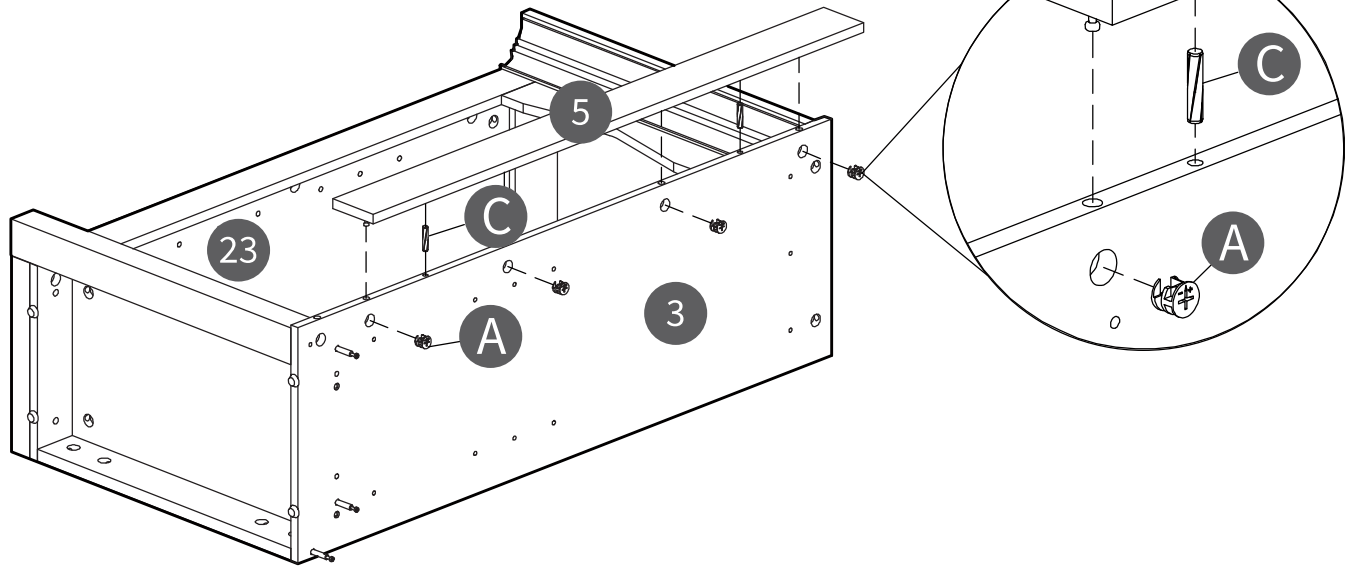


Inserting Wooden Dowel (C) into Board (④), then attach Board (⑥) to Board (④). Using Cam Lock (A) secure Board (⑥) to Board (④).

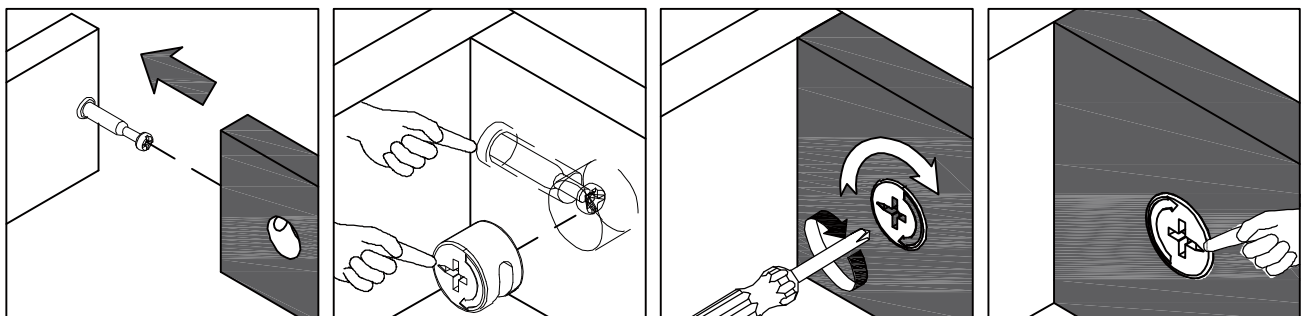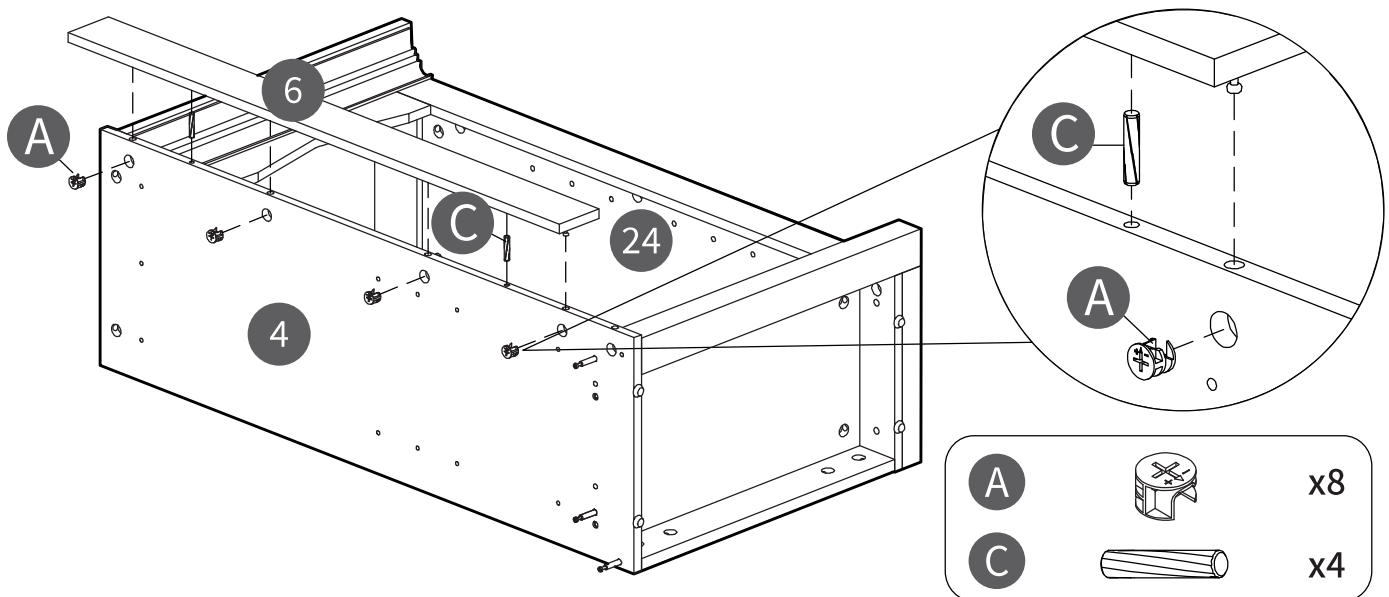



Step 29

Securing Cam Bolt (B) into Board (②).

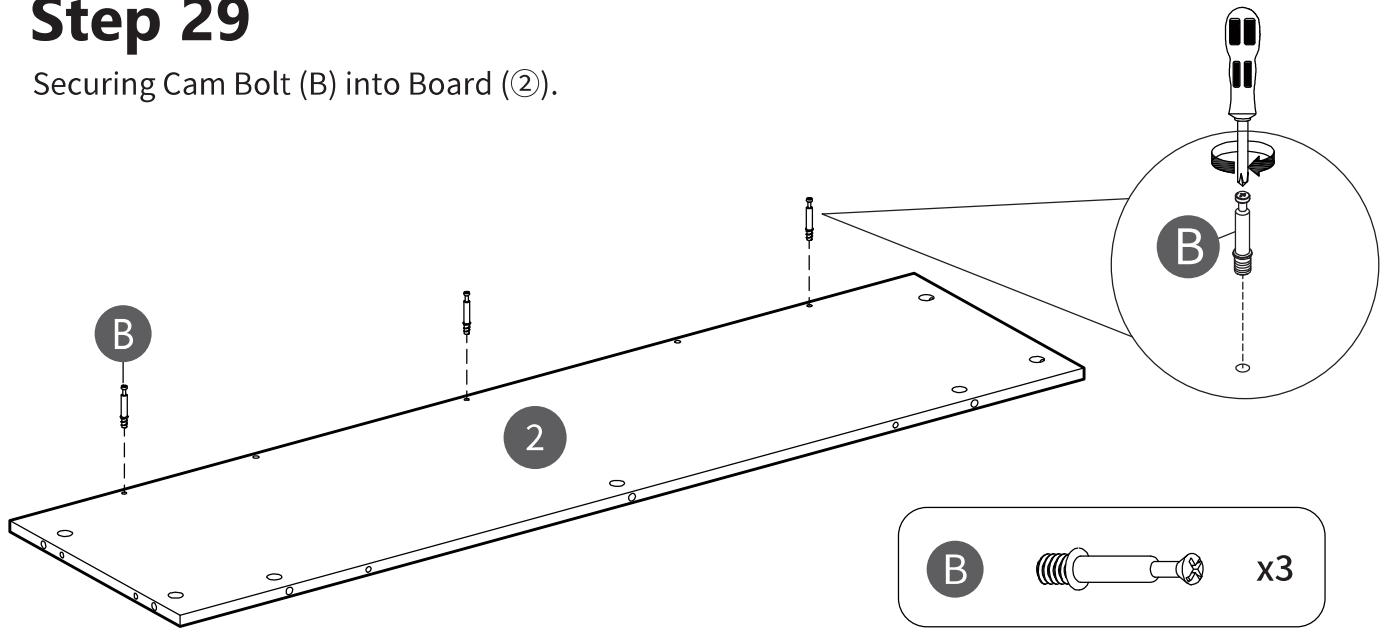


Step 30

Inserting Wooden Dowel (C) into Board (②), then attach Board (⑦) to Board (②). Using Cam Lock (A) secure Board (⑦) to Board (②).

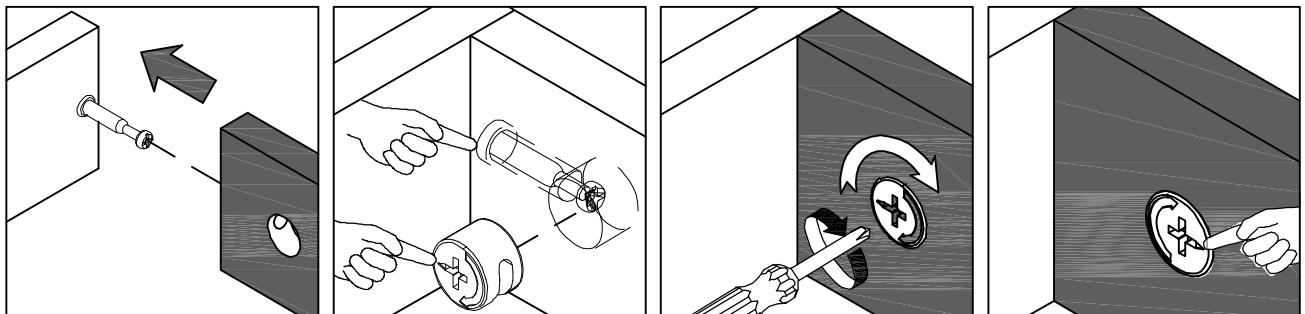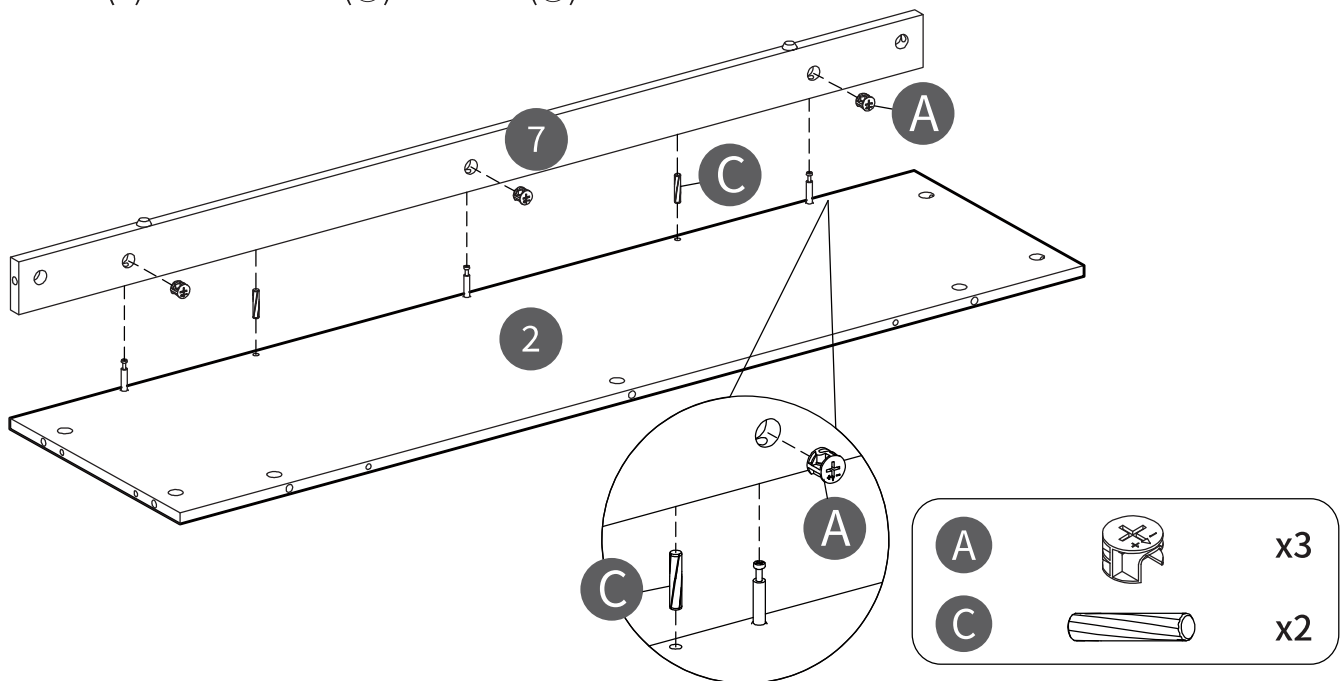



Step 31

Securing Cam Bolt (B) into Board (②).

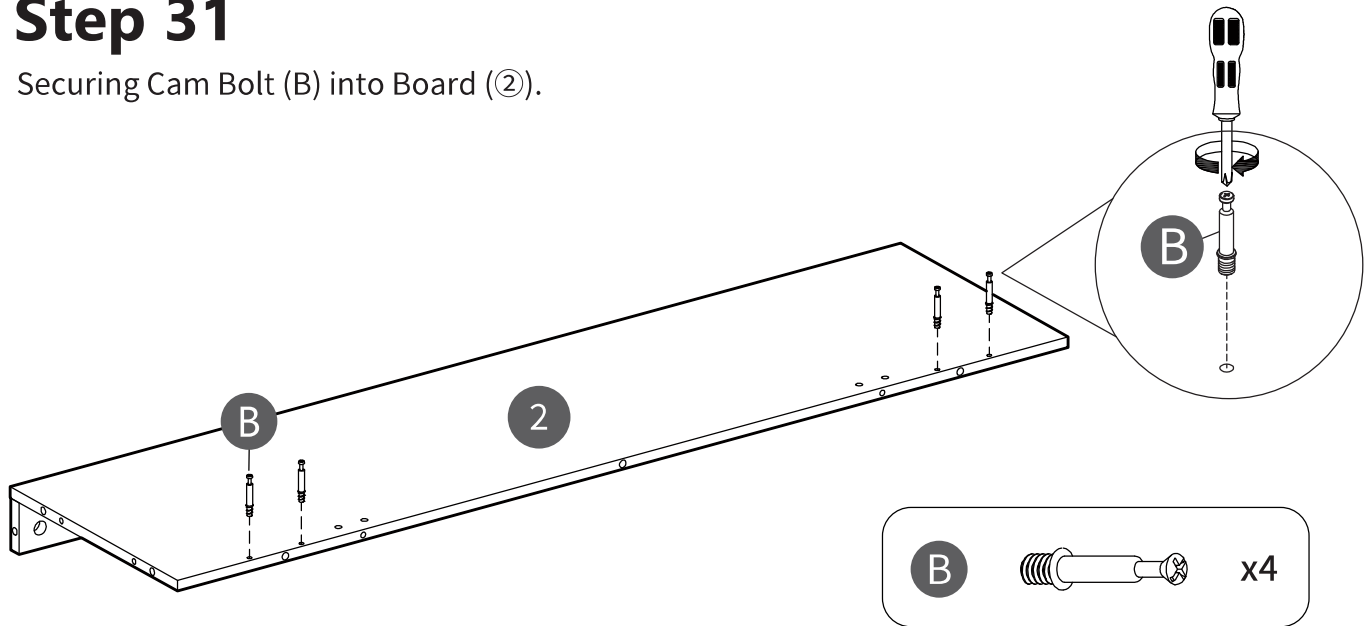


Step 32

Inserting Wooden Dowel (C) into Board (②), then attach Board (③&④) to Board (②&⑦). Using Cam Lock (A) secure Board (③&④) to Board (②&⑦).

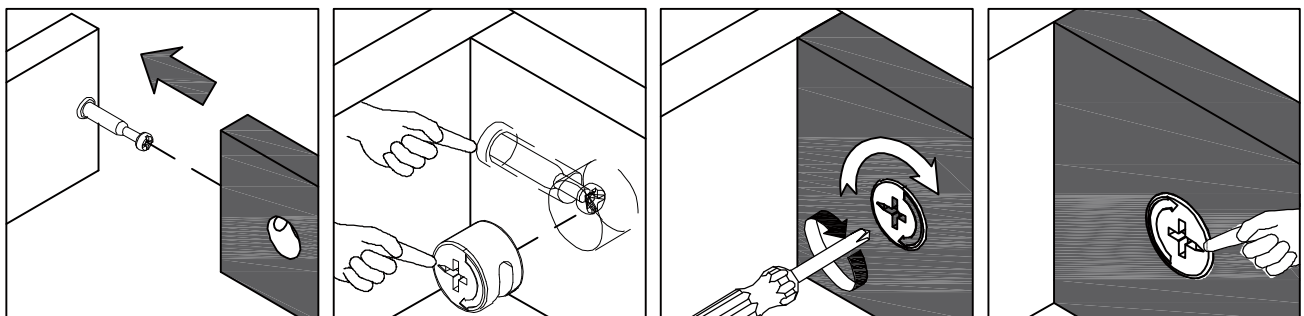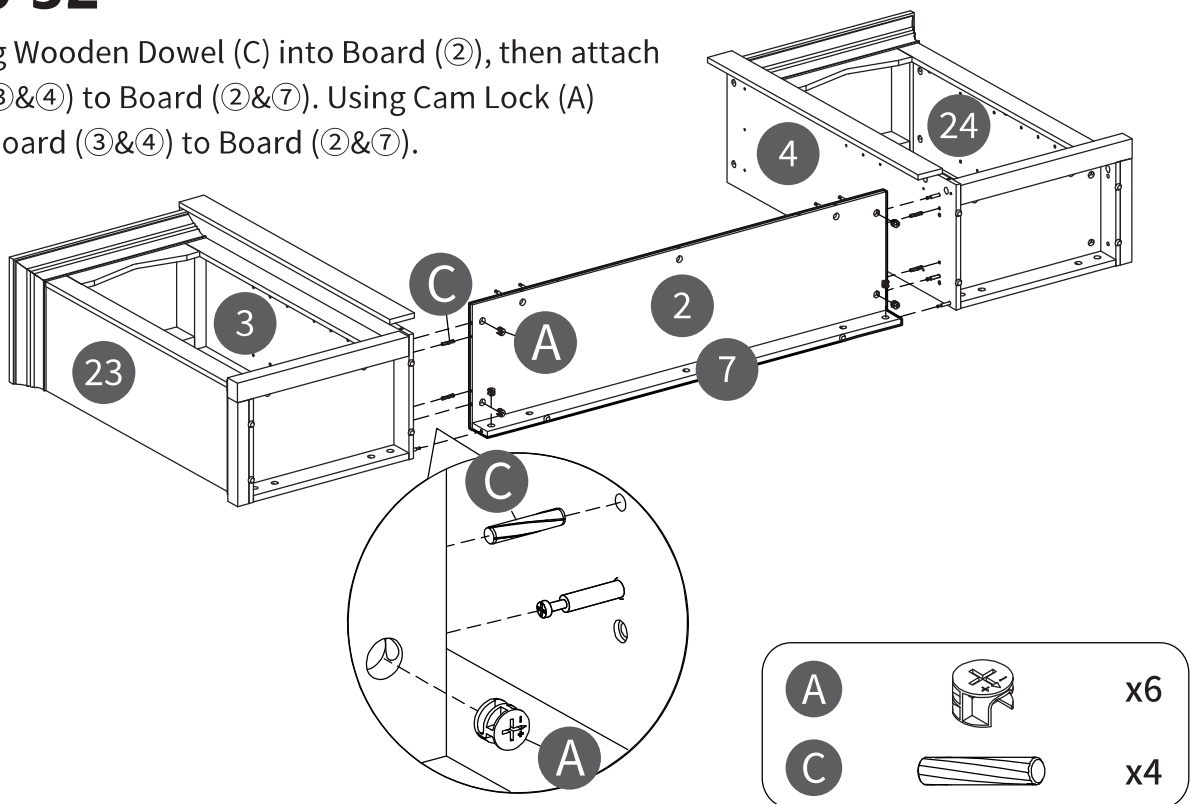



Step 33

Securing Cam Bolt (B) into Board (⑧).

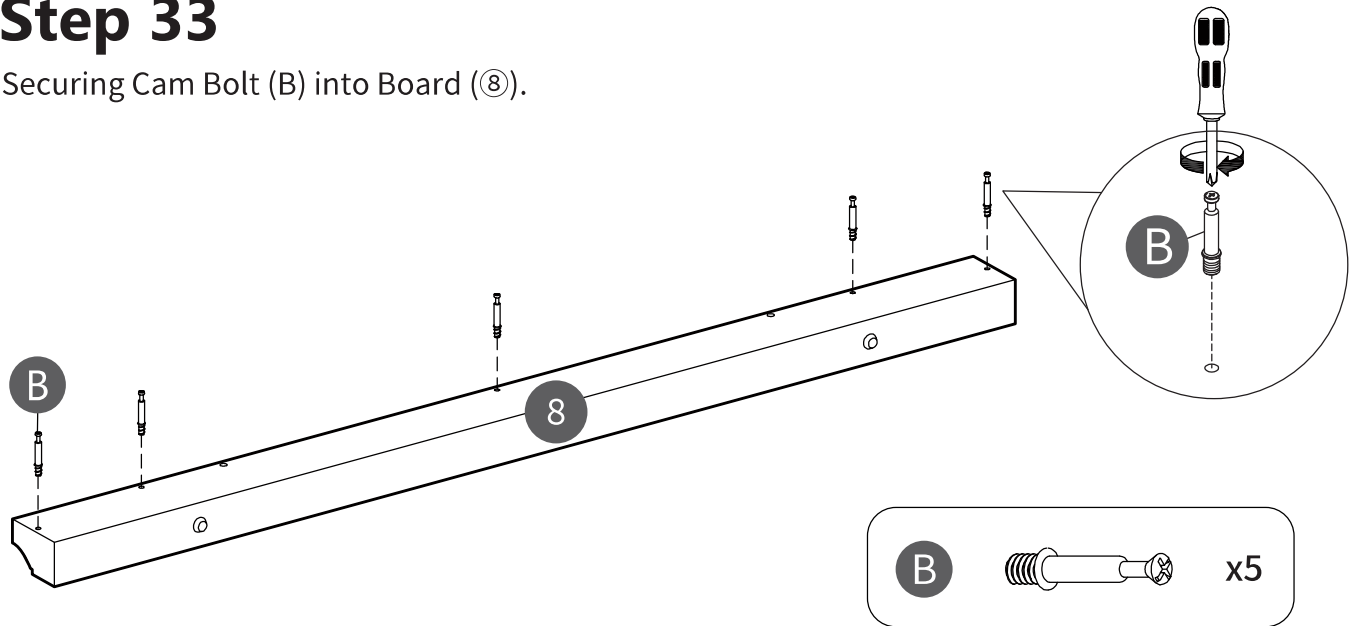


Step 34

Inserting Wooden Dowel (C) into Board (②), then attach Board (⑧) to Board (②&③&④).
Using Cam Lock (A) secure Board (⑧) to Board (②&③&④).

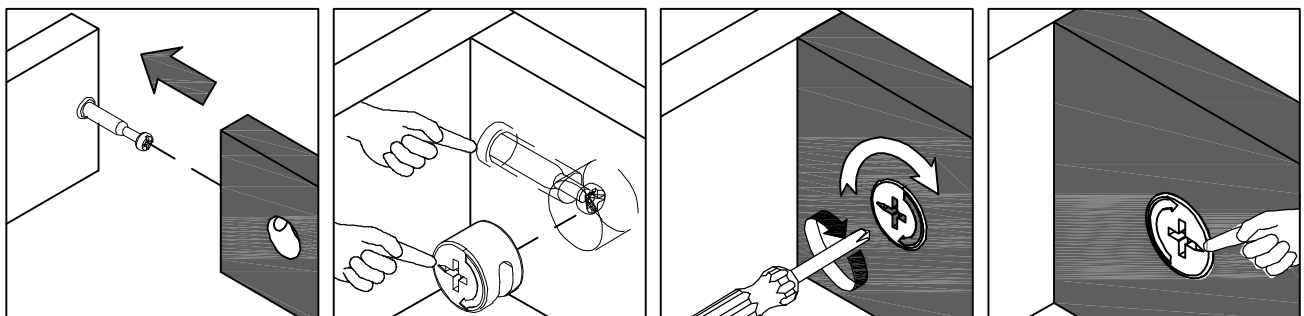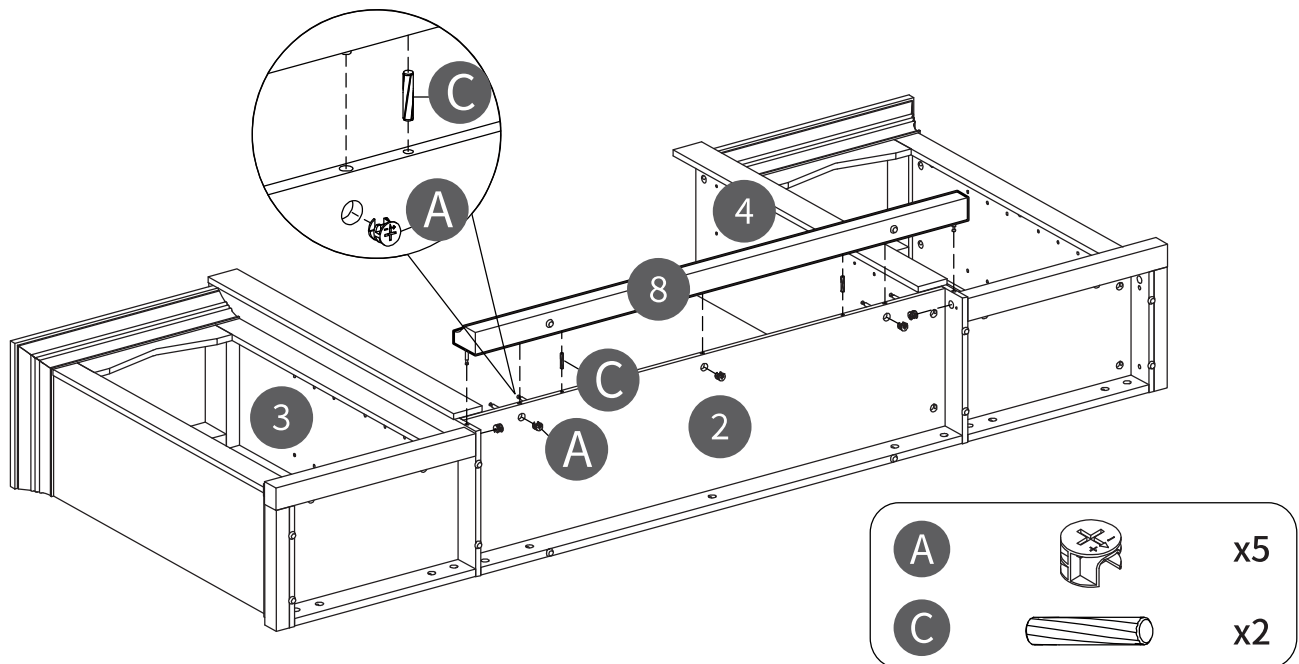


Step 35

Using Cam Lock (A) secure Board (13&14) to Board (2).

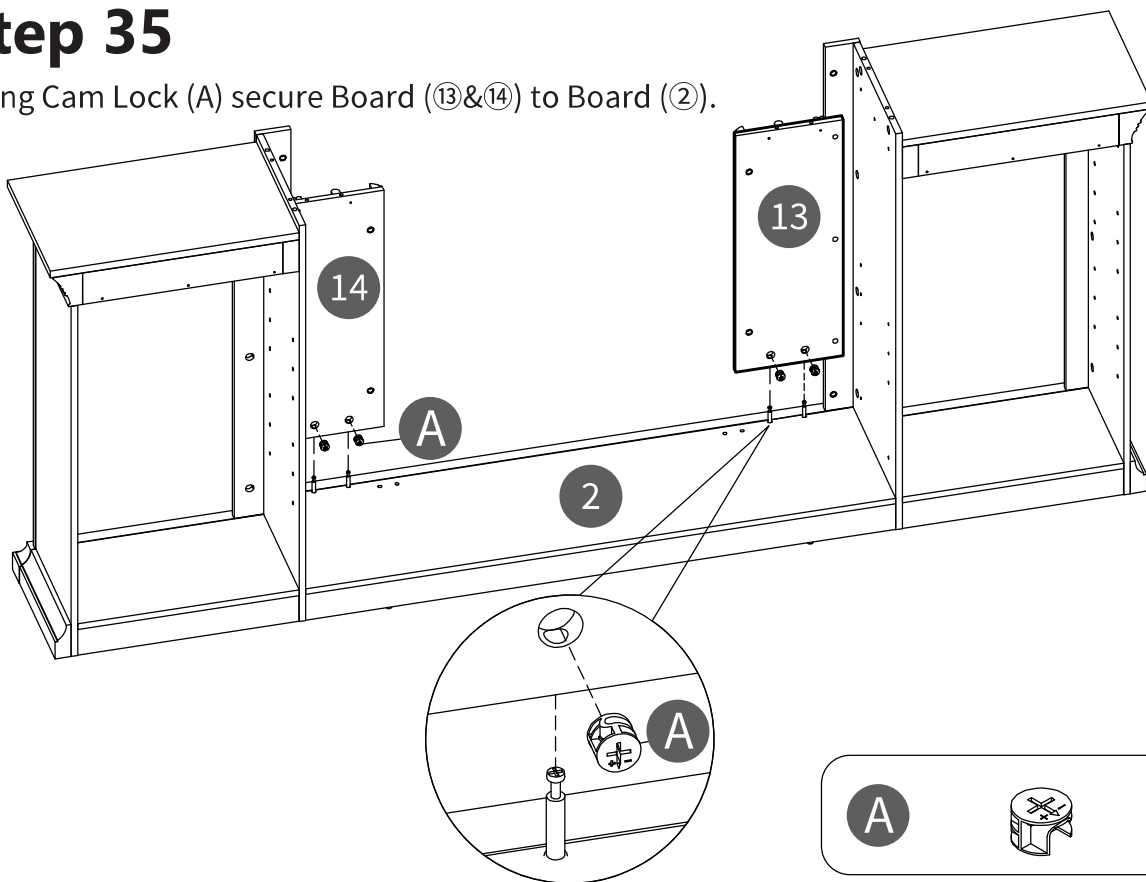



Step 36

Using Screws (H) and a 7-Shaped Wrench (Q) secure Board (13&14) to Board (5&6).

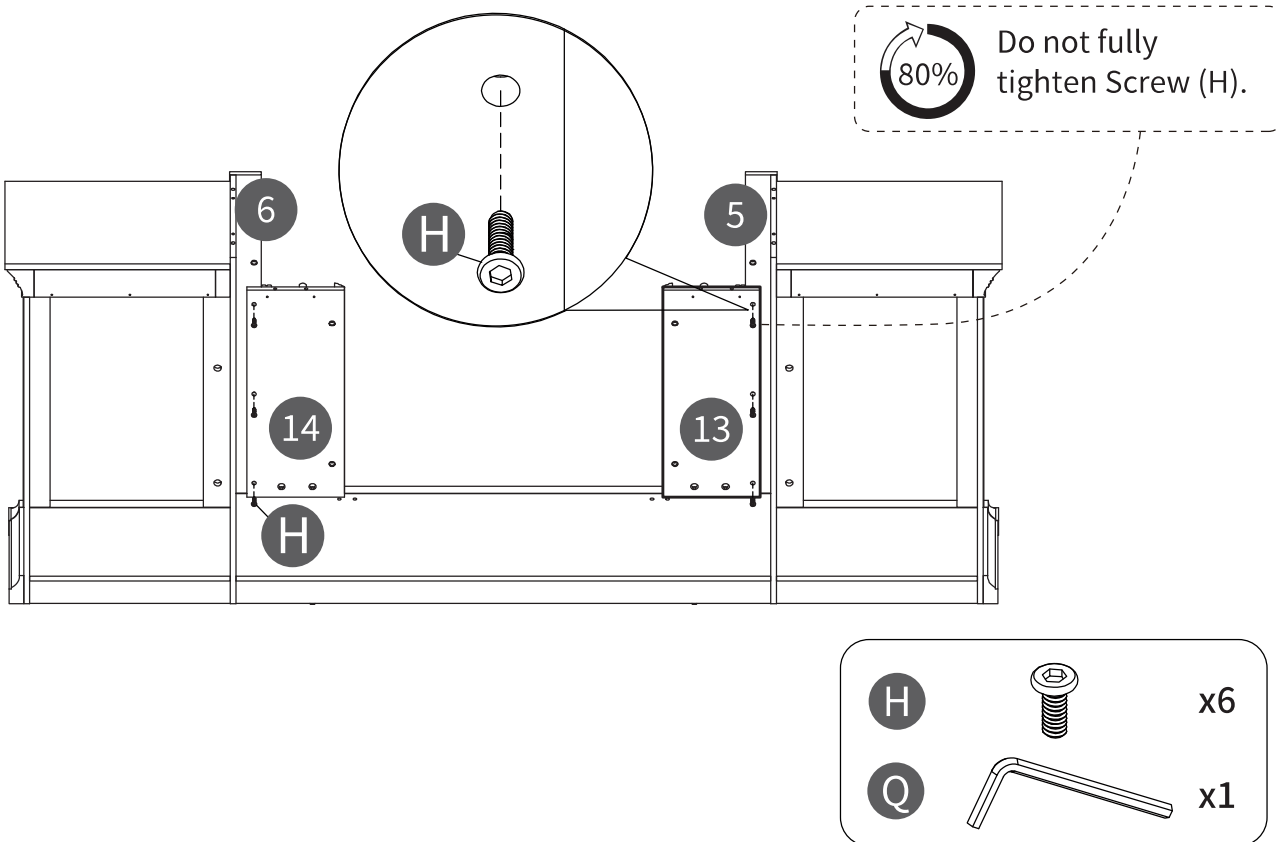



Step 37

Inserting Wooden Dowel (C) into Board (13&14), then attach Board (12) to Board (13&14).

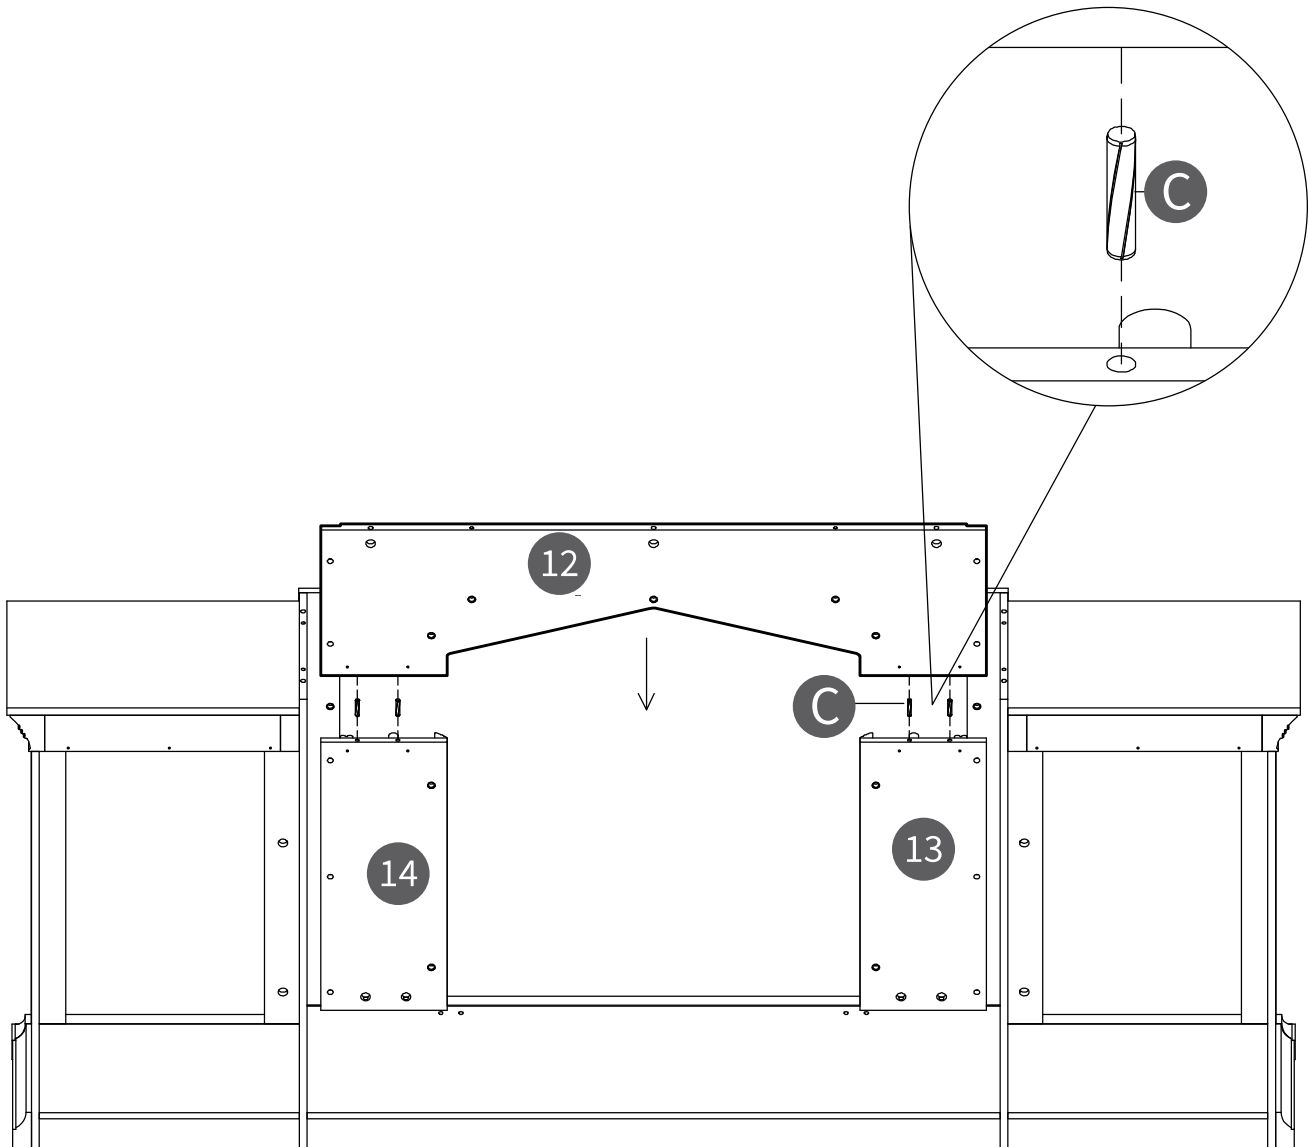




Step 38

Using a 7-Shaped Wrench (Q) secure Screws (H) to Board (12).

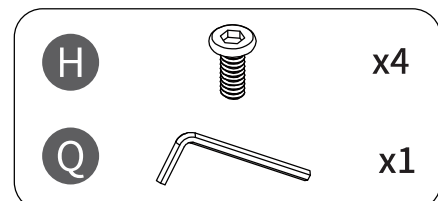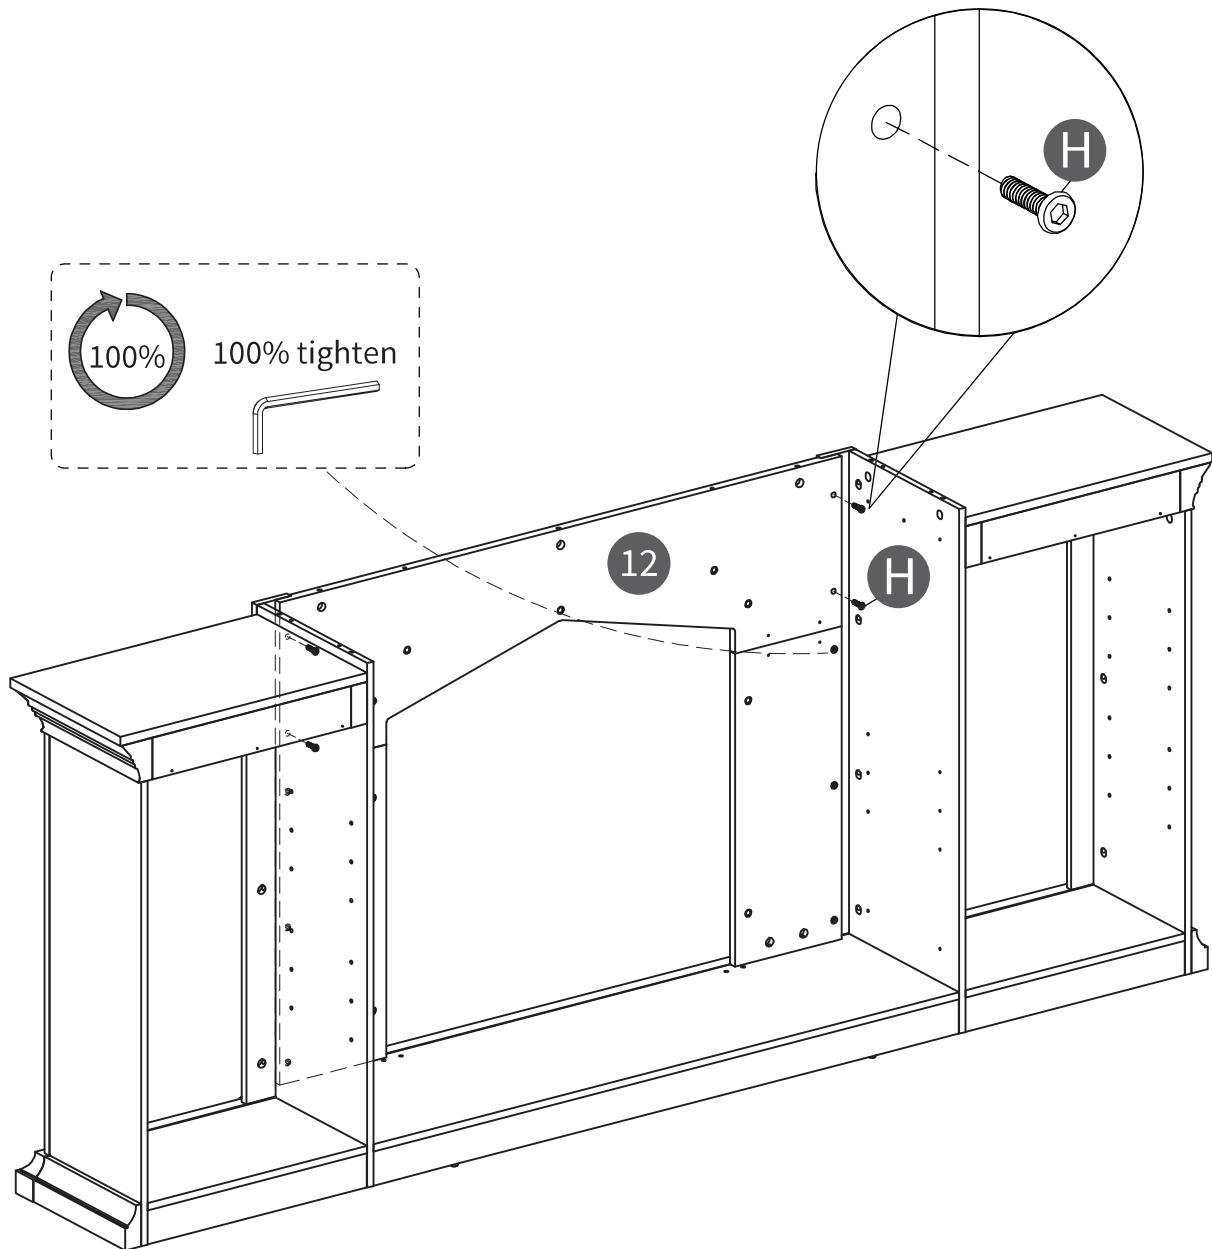



Step 39

Using Screws (D) secure Connector (E) to Board (12&13,12&14).

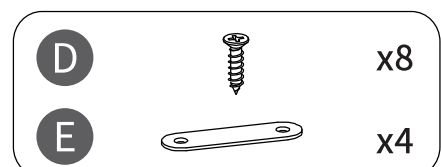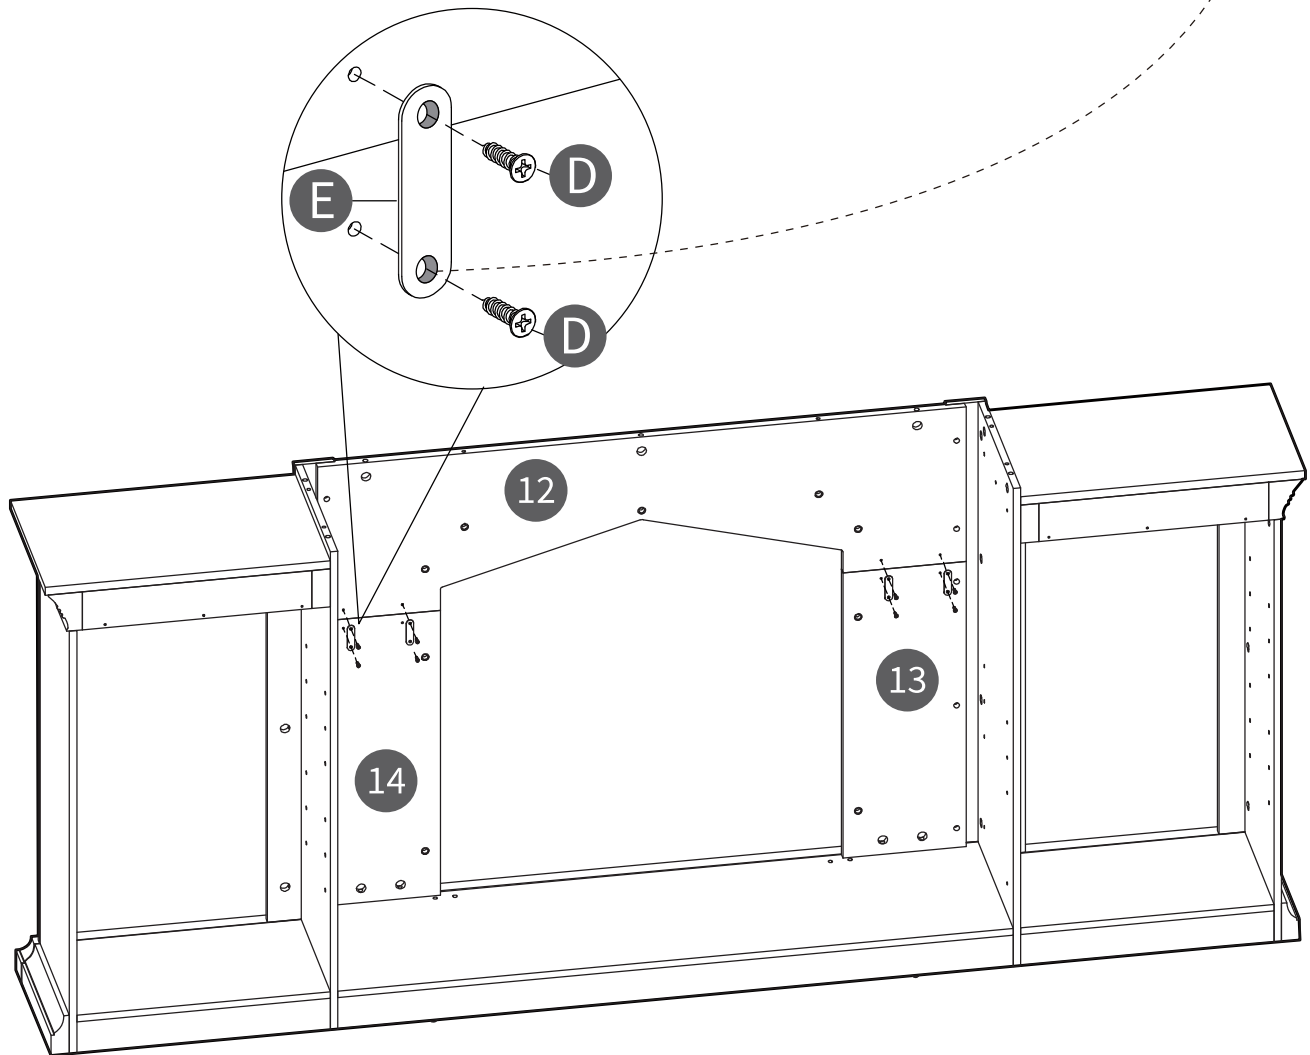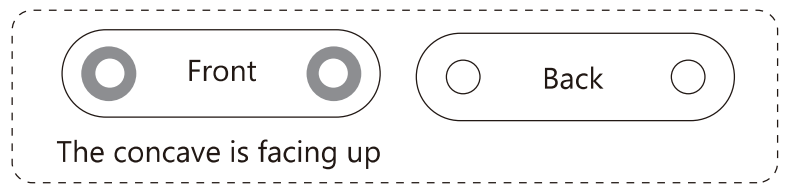


Step 40

Inserting Wooden Dowel (C) into Board (9),
then attach Board (10&11) to Board (9).

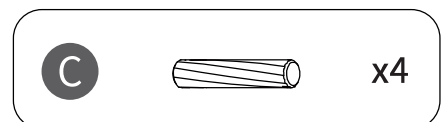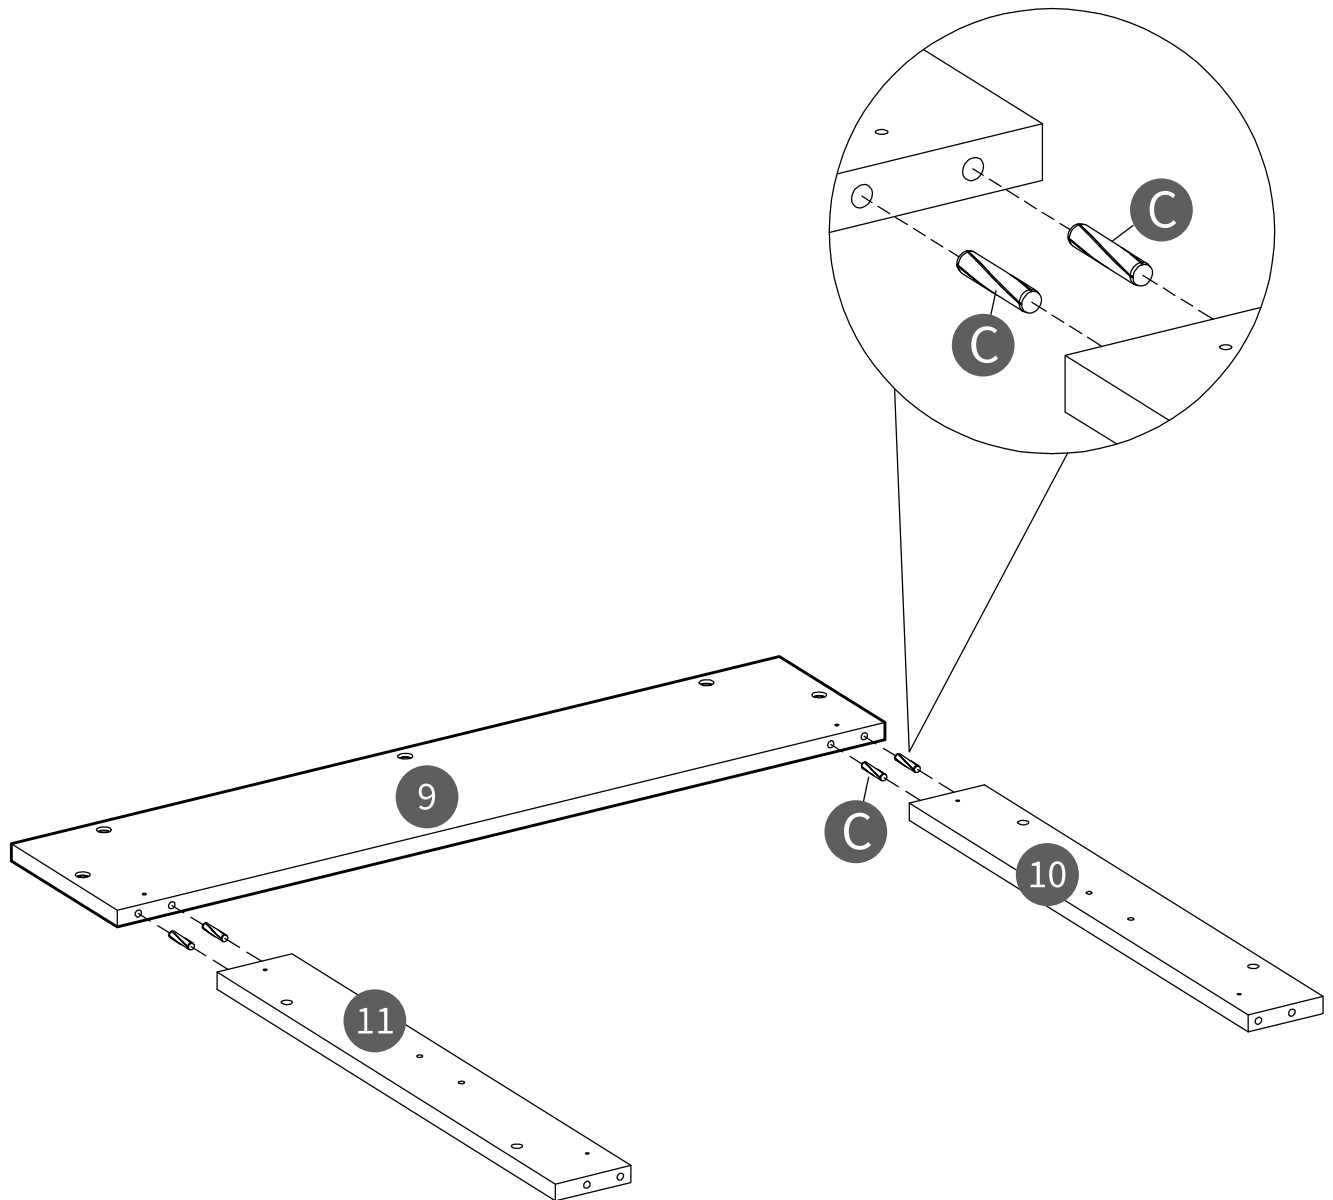


Step 41

Using Screws (D) secure Connector (E) to Board (⑨&⑩, ⑨&⑪).

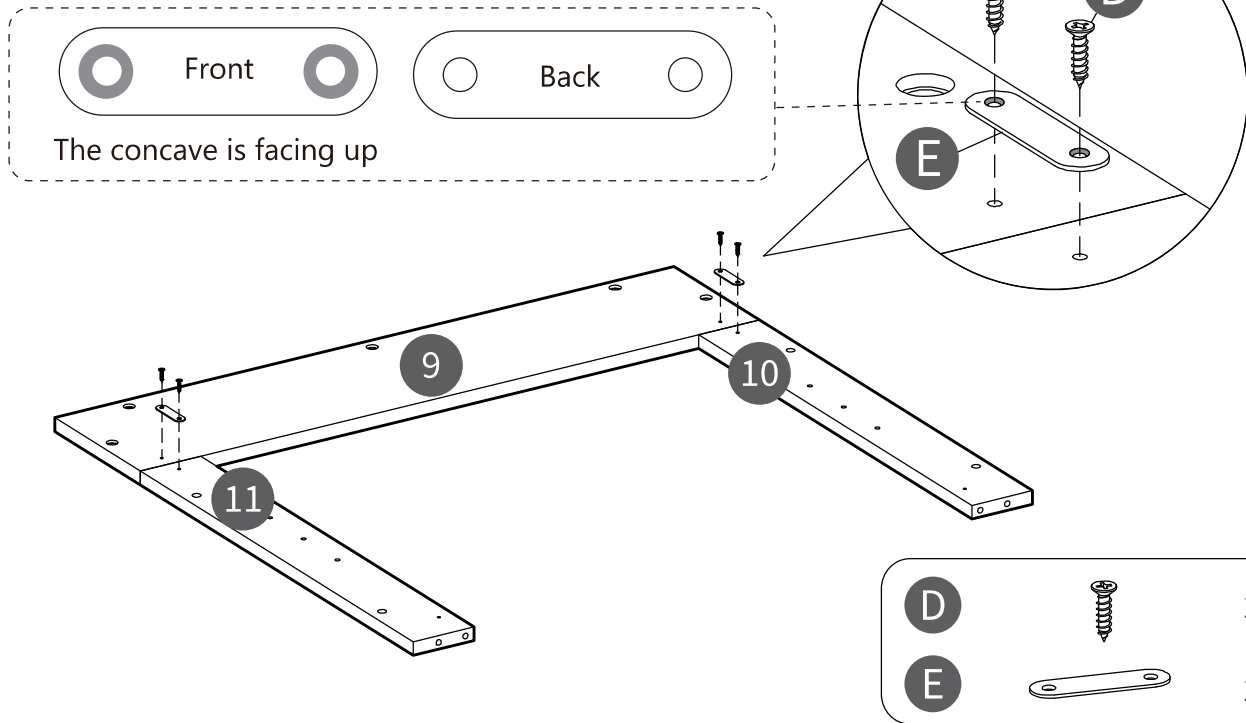



Step 42

Inserting Wooden Dowel (C) into Board (②), then attach Board (⑩&⑪) to Board (②).

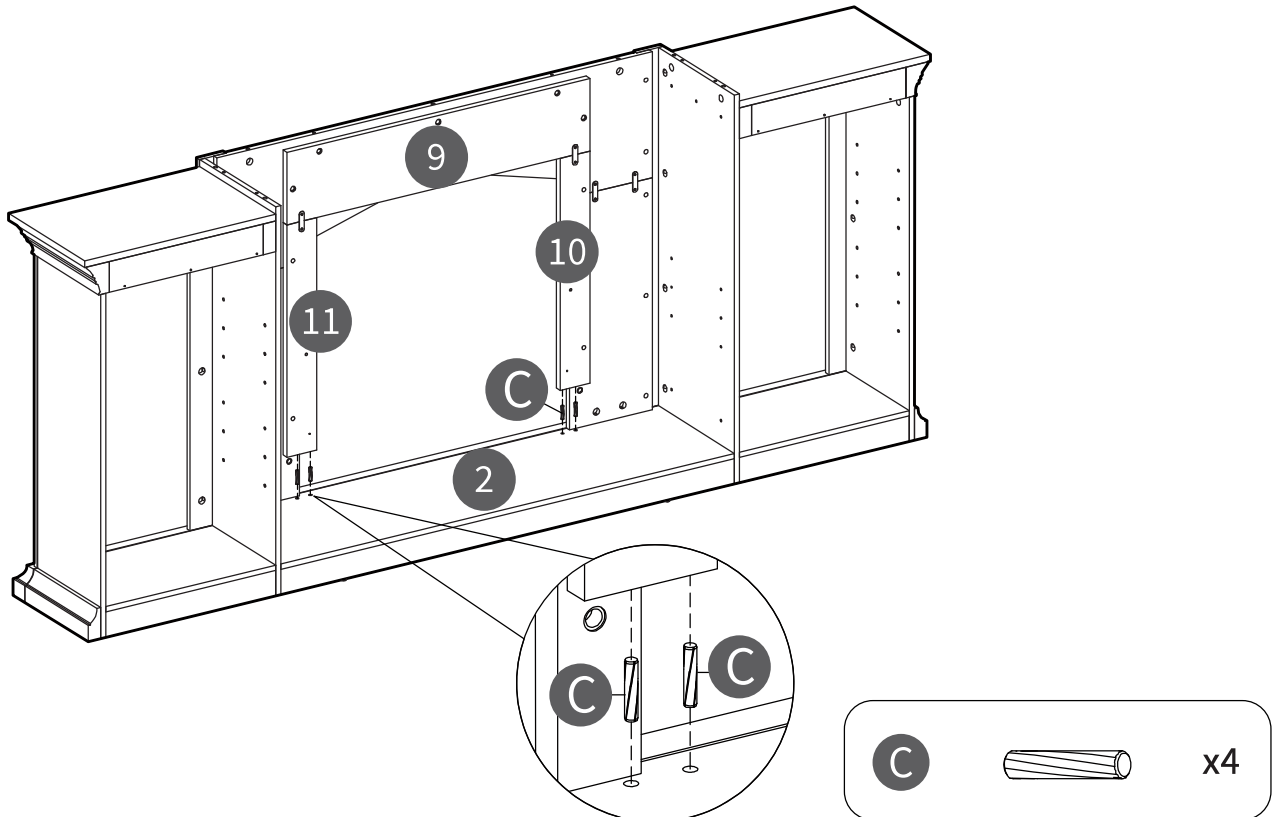


Step 43


Using Screws (H) and a 7-Shaped Wrench (Q) secure Board (9&10&11) to Board (12&13&14).

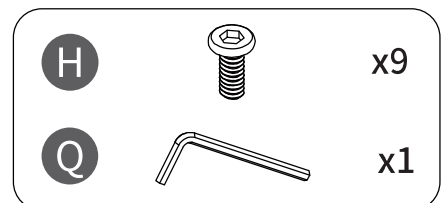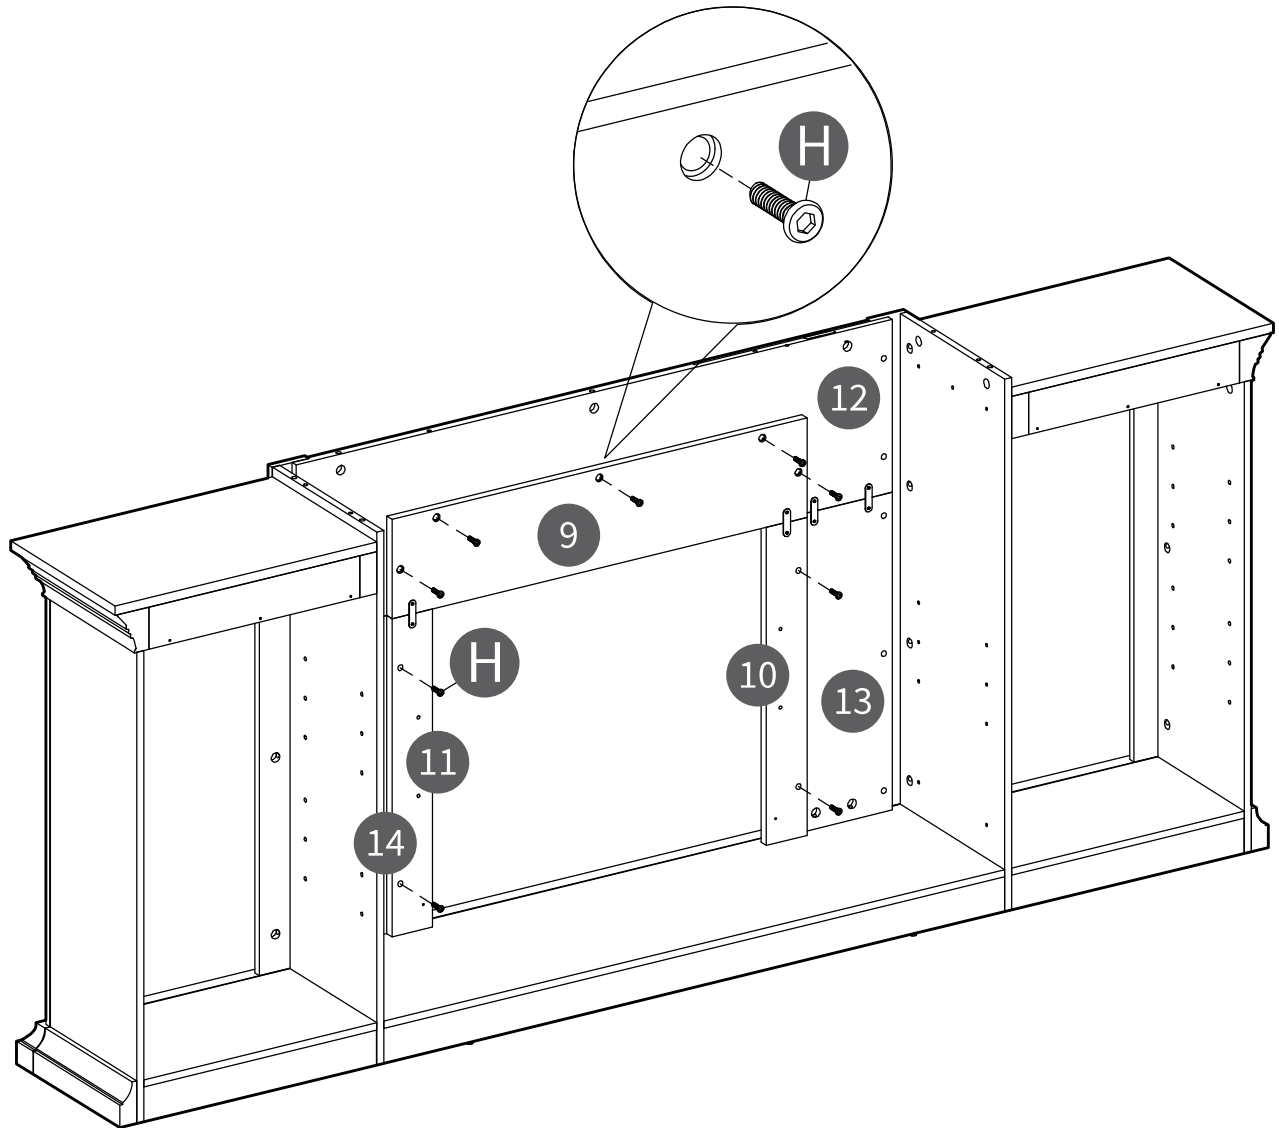

Step 44



Securing Cam Bolt (B) into Board (15). Using Screws (D) secure Connector (E) to Board (15).

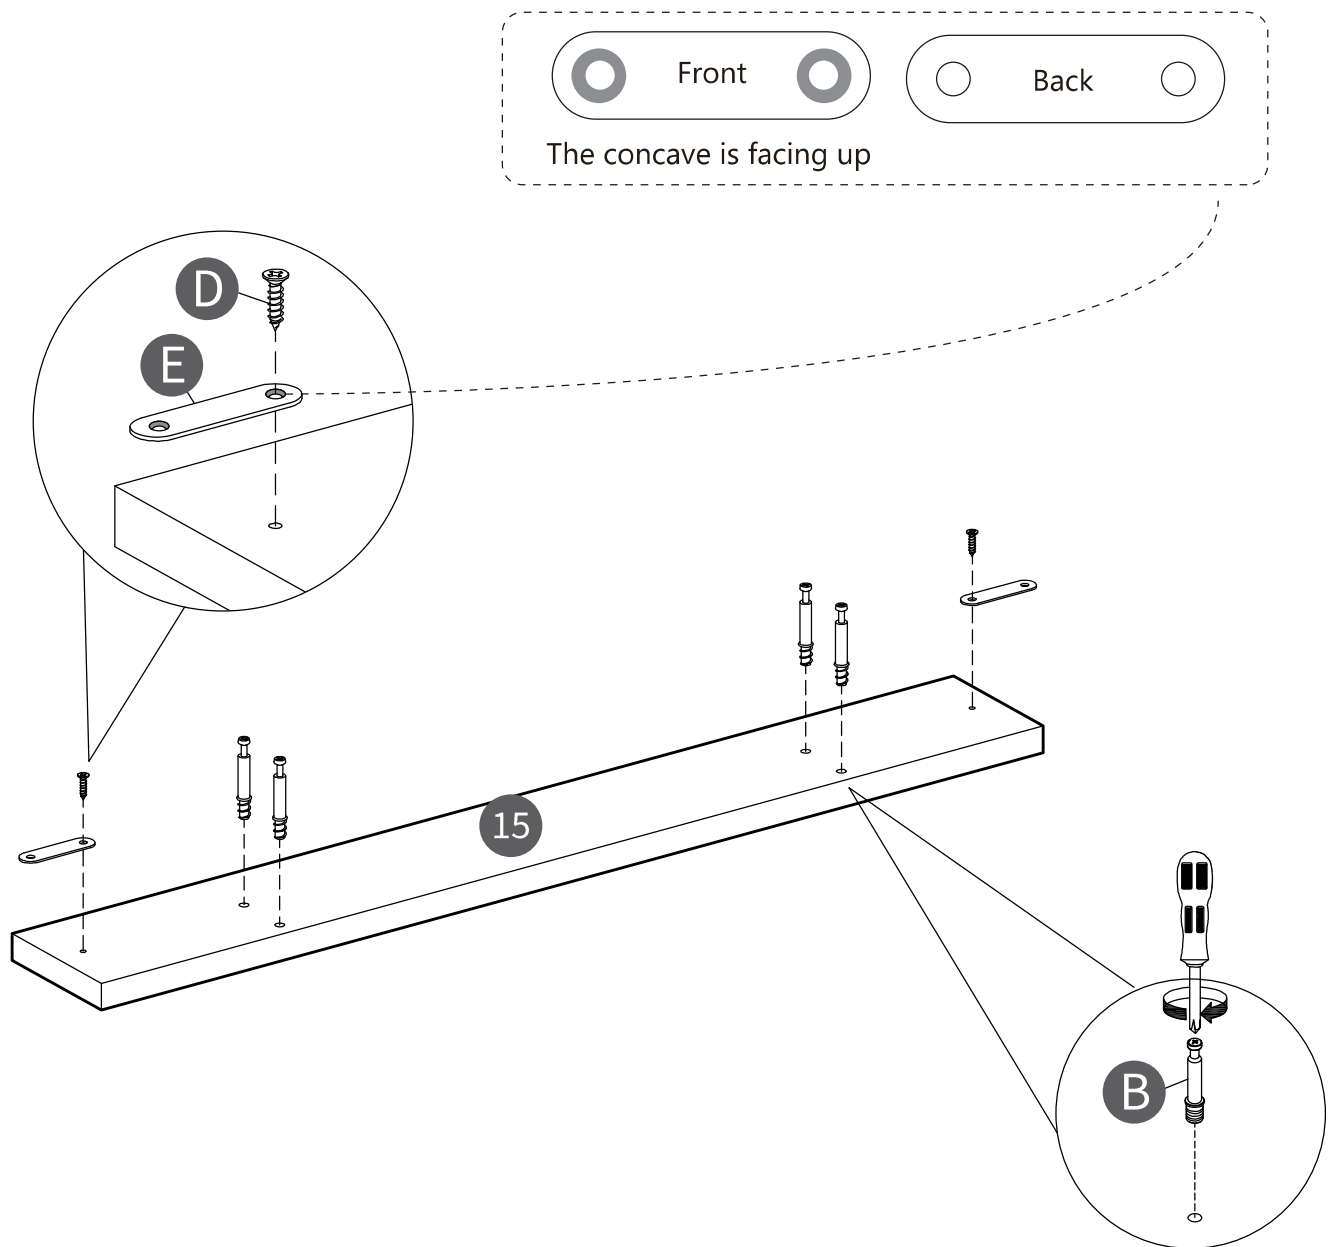

B		x4
D		x2
E		x2


Step 45

Using Cam Lock (A) secure Board (16) to Board (15).

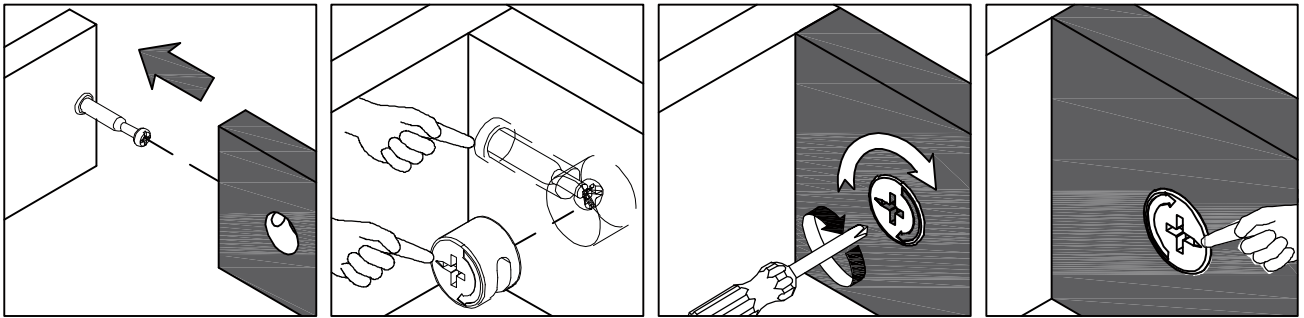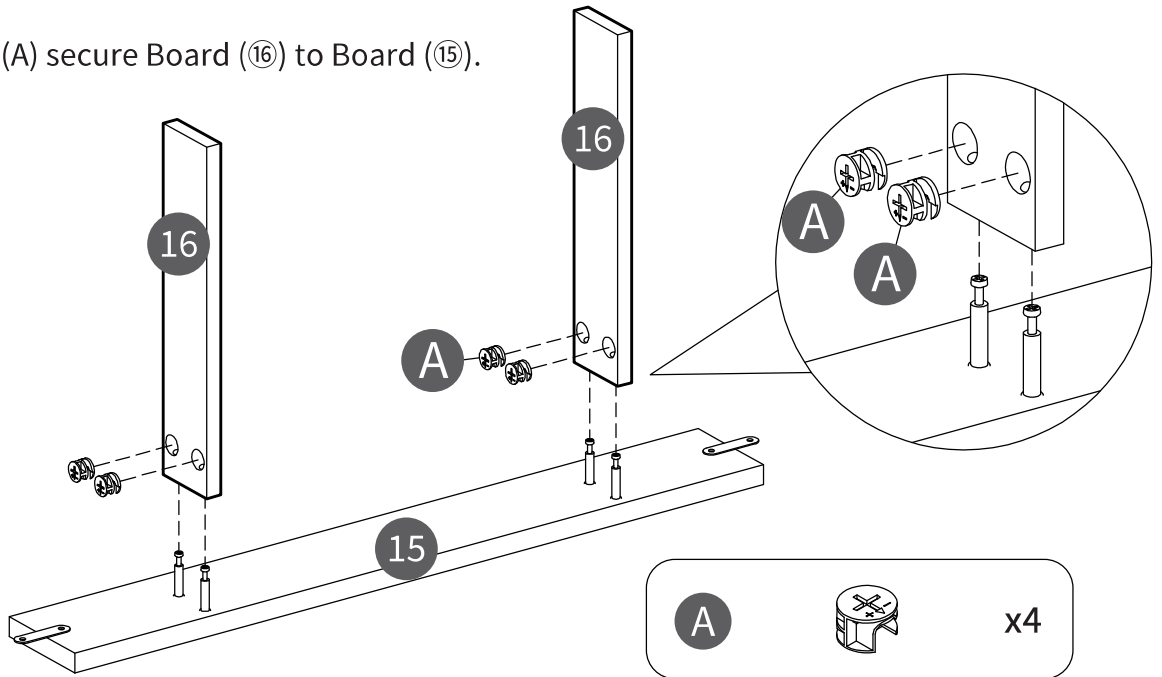


Step 46

Using Screws (D) secure Board (15) to Board (10&11).

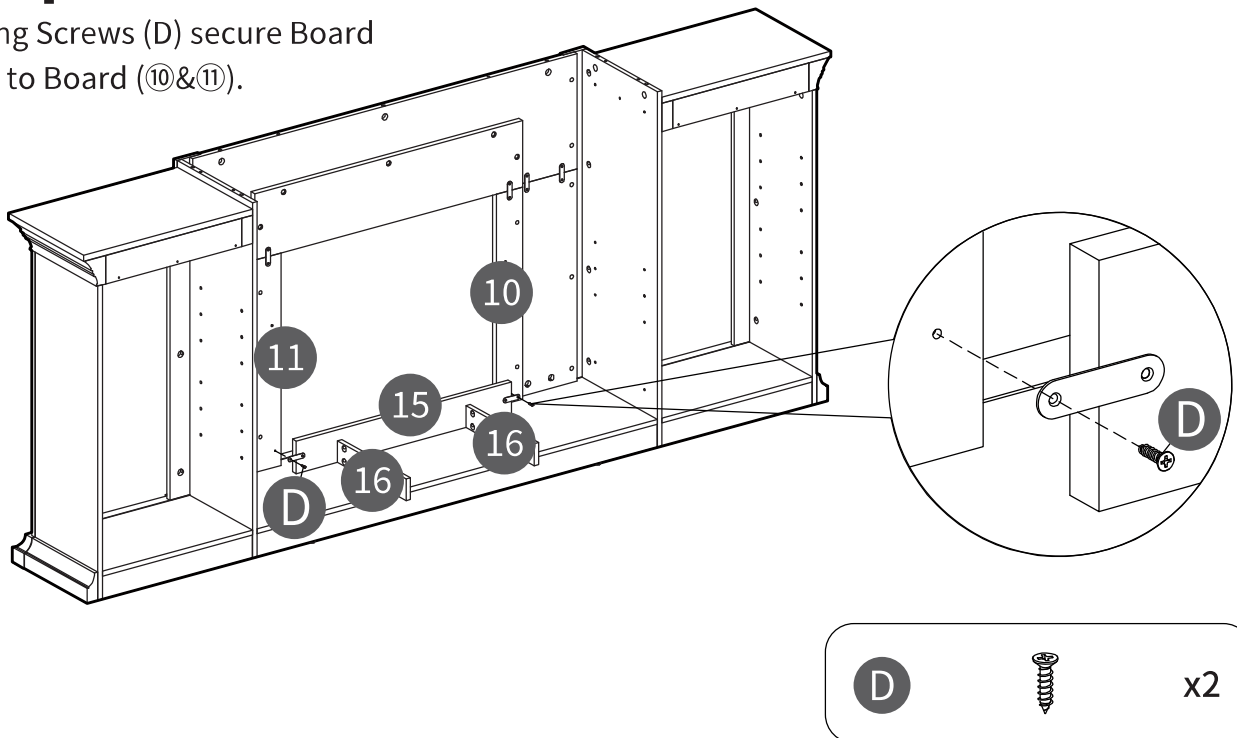



Step 47

Securing Cam Bolt (B) into Board (①).

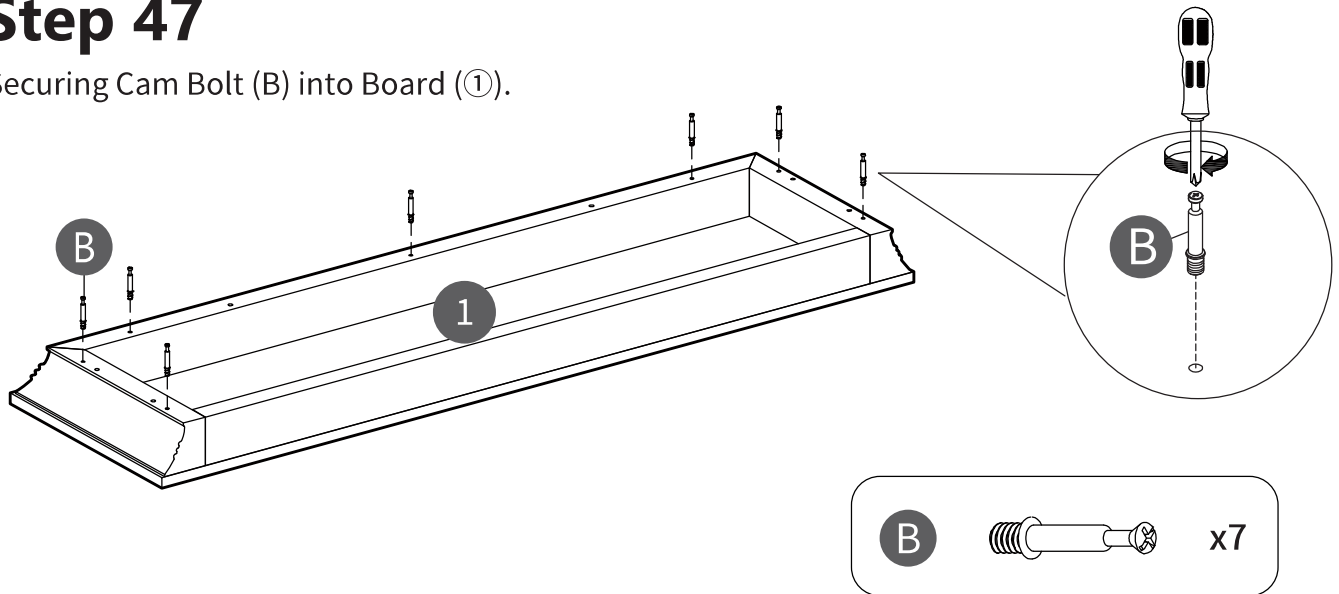



Step 48

Inserting Wooden Dowel (C) into Board (③&④&⑫), then attach Board (①) to Board (③&④&⑫). Using Cam Lock (A) secure Board (①) to Board (③&④&⑫).

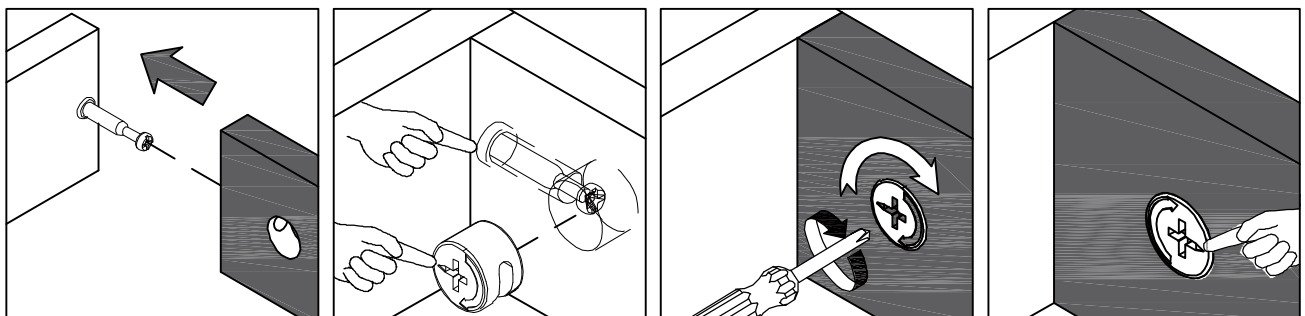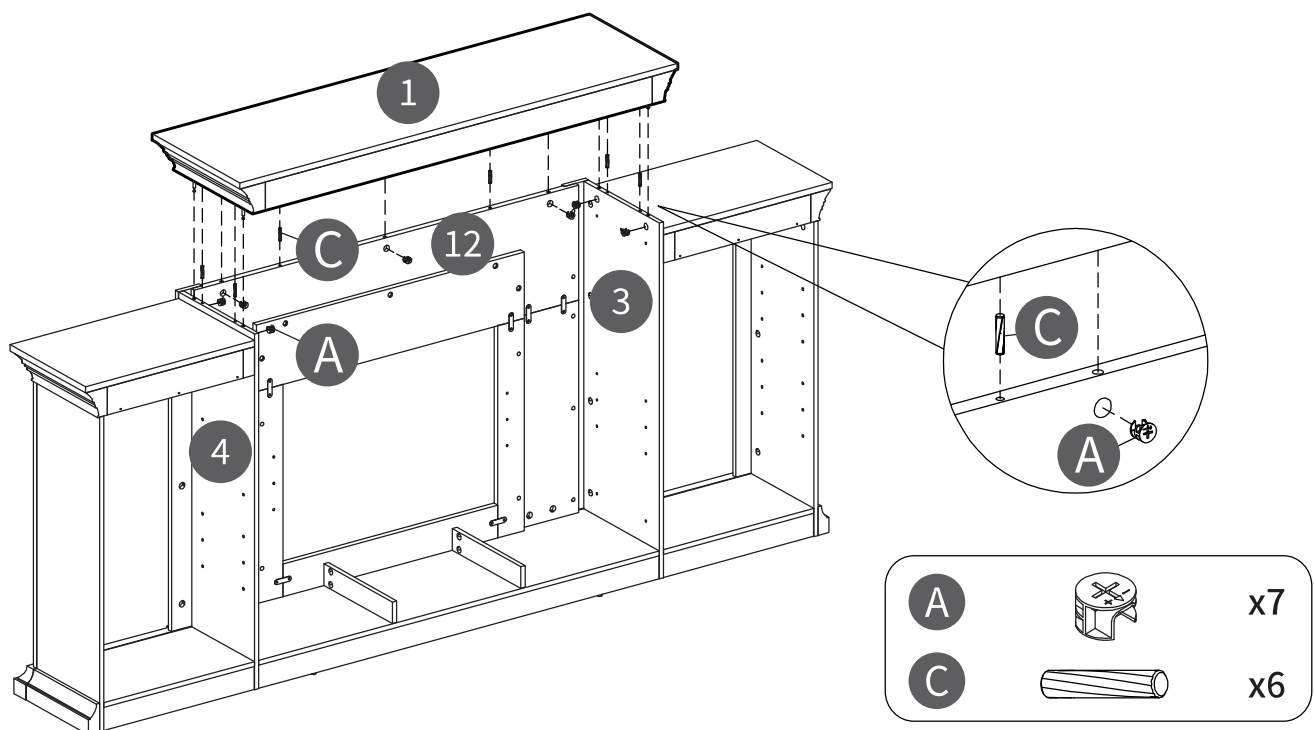



Step 49

Securing Screws (I) into Board
(③&④&②③&②④).

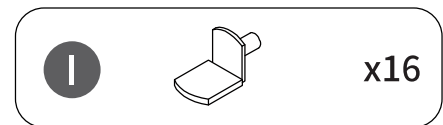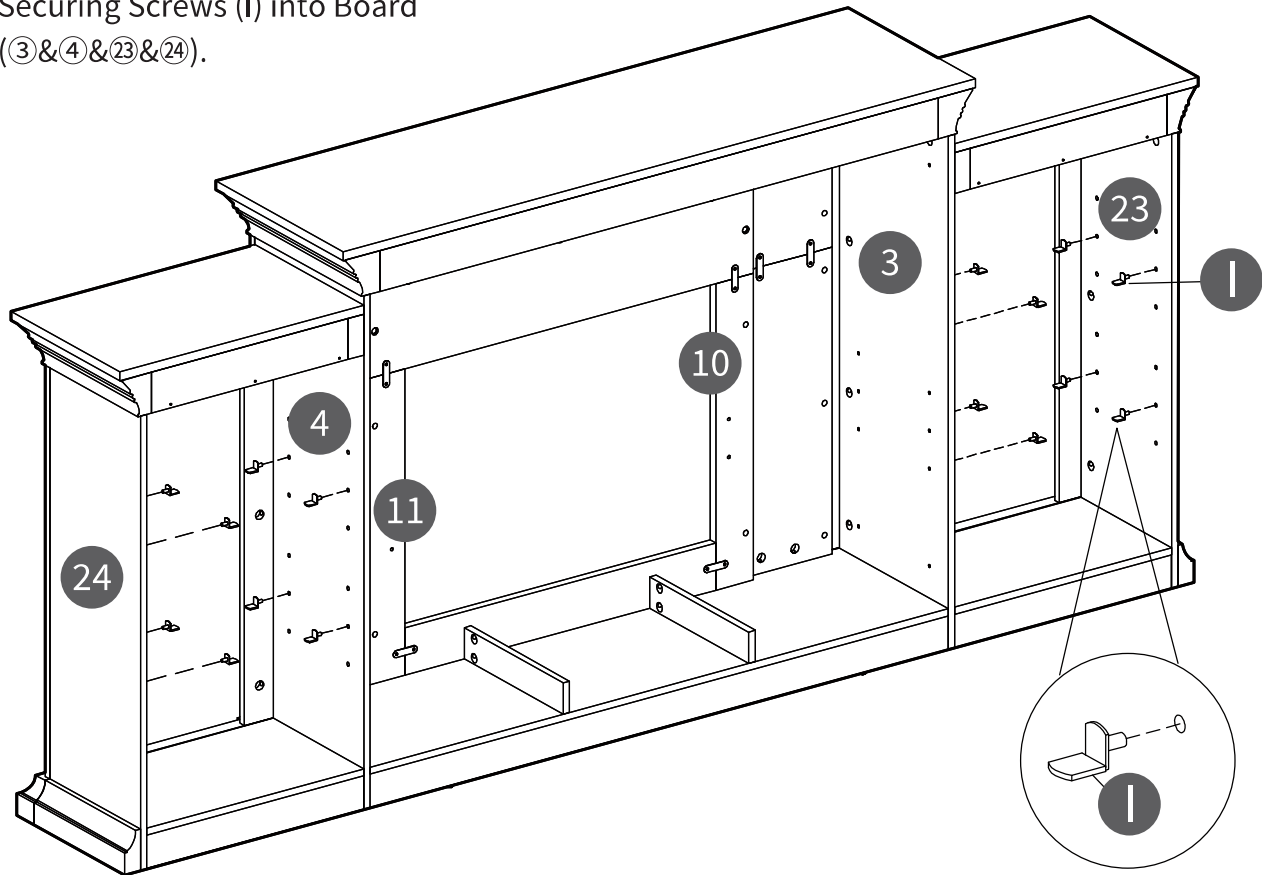



Step 50

Securing Cam Bolt (B) into Board (③⑤).

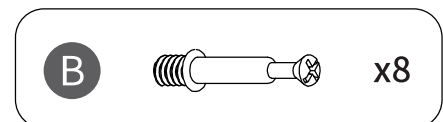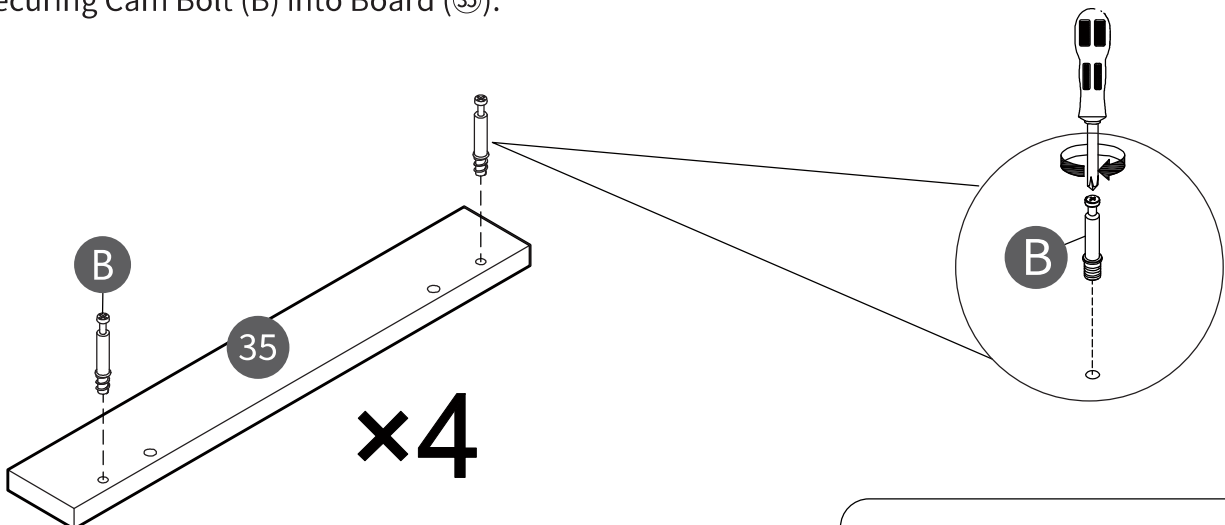


Step 51

Inserting Wooden Dowel (C) into Board (33&34), then attach Board (35) to Board (33&34). Using Cam Lock (A) secure Board (35) to Board (33&34).

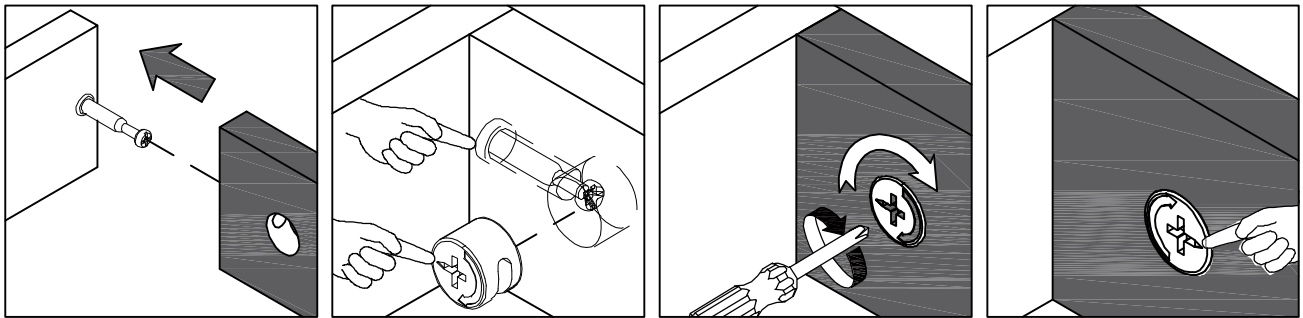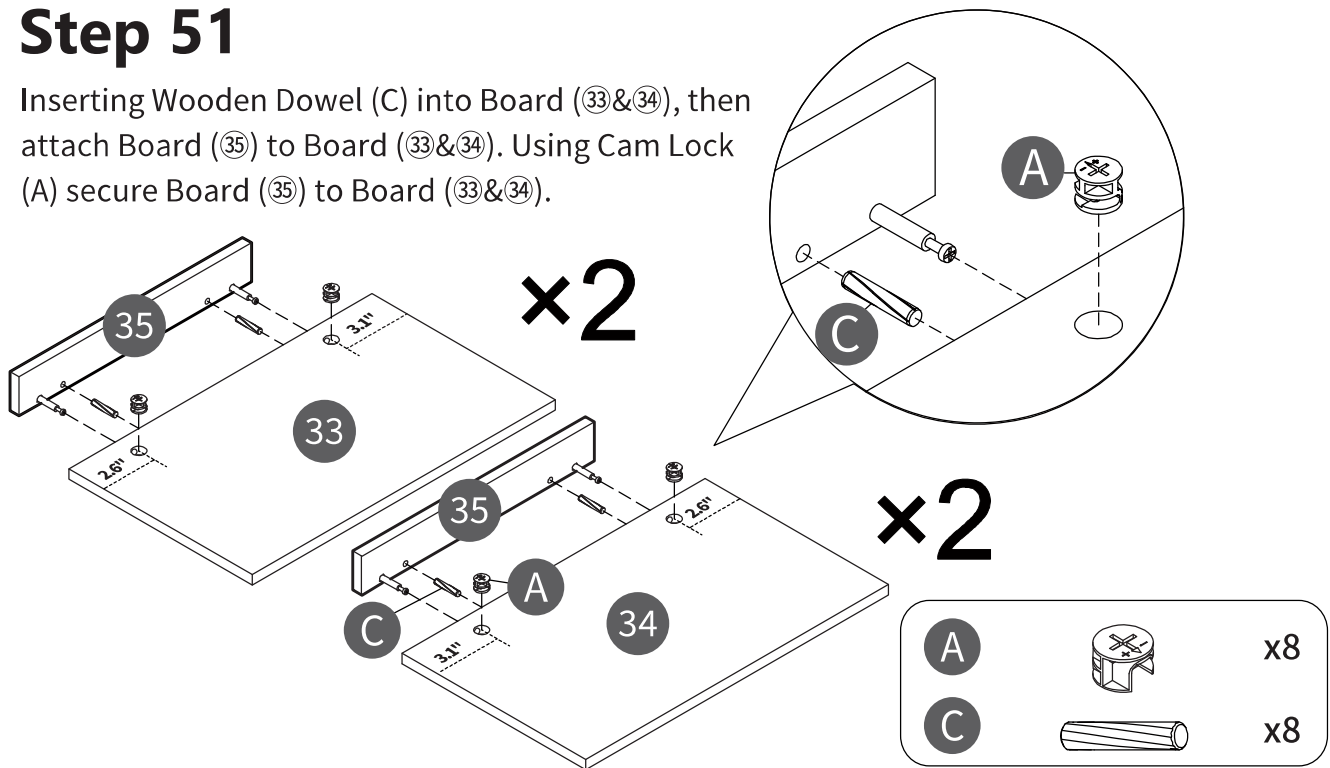


Step 52

Place the Board (33&34) into the Mantel.

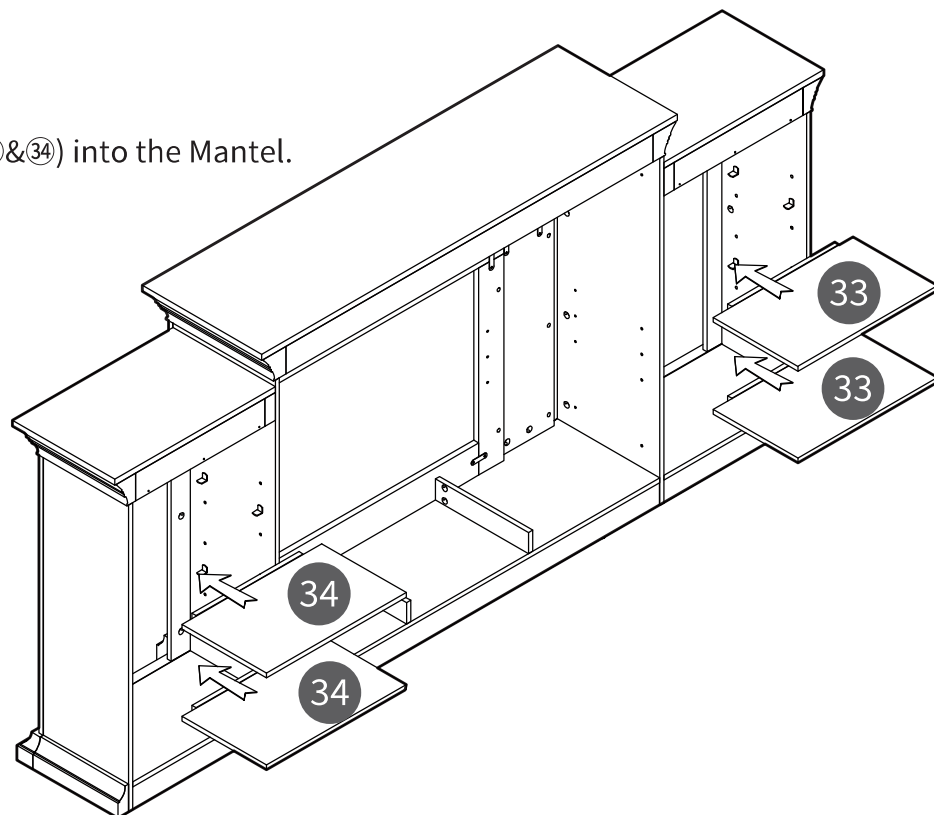


Step 53

Using Screws (F) through Anti-tipping Belt (N) to assemble Back Panels (36) to the main body.

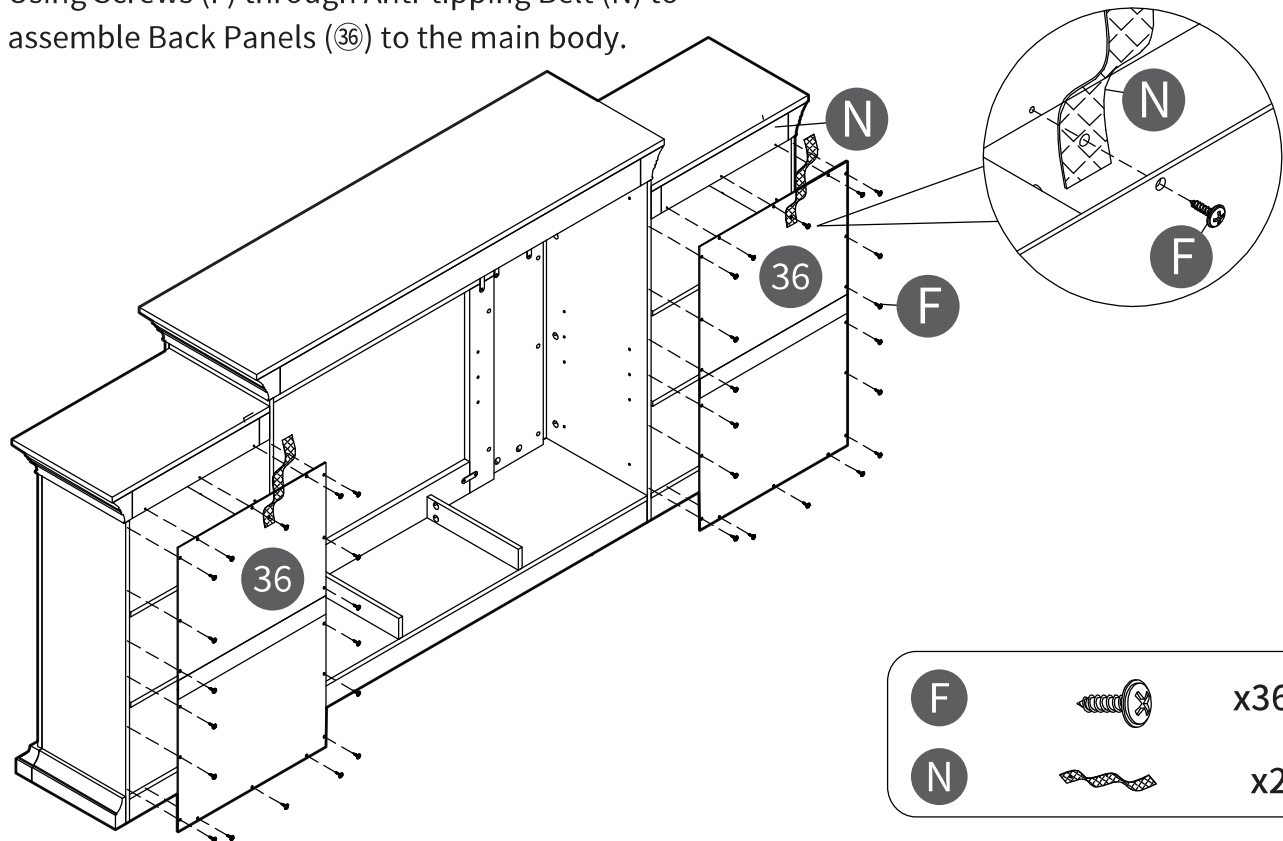


Step 54

Securing Screws (J) into Board (3&4&10&11).

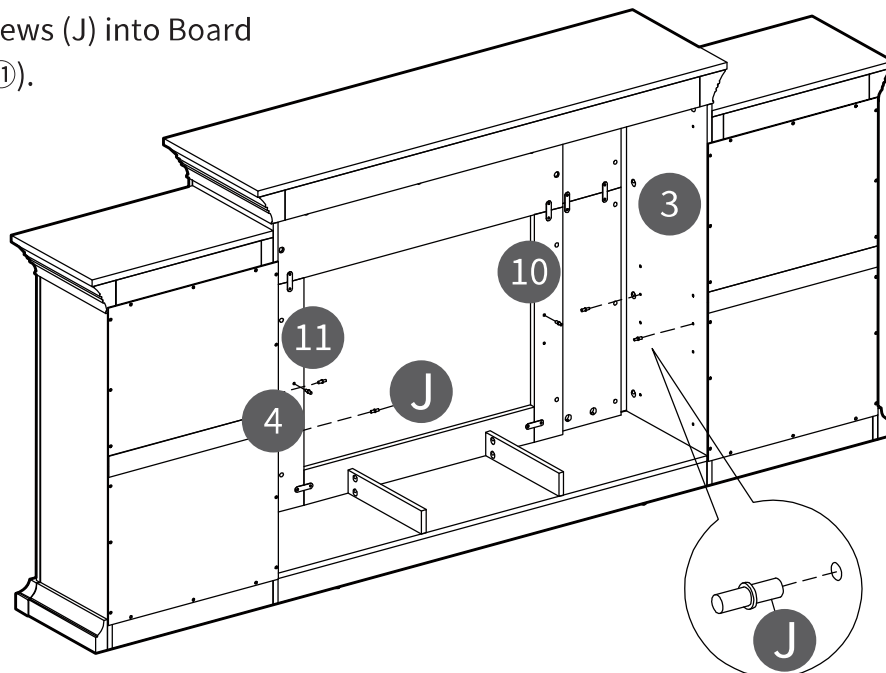

Step 55


Place the Board (17) into the Mantel.

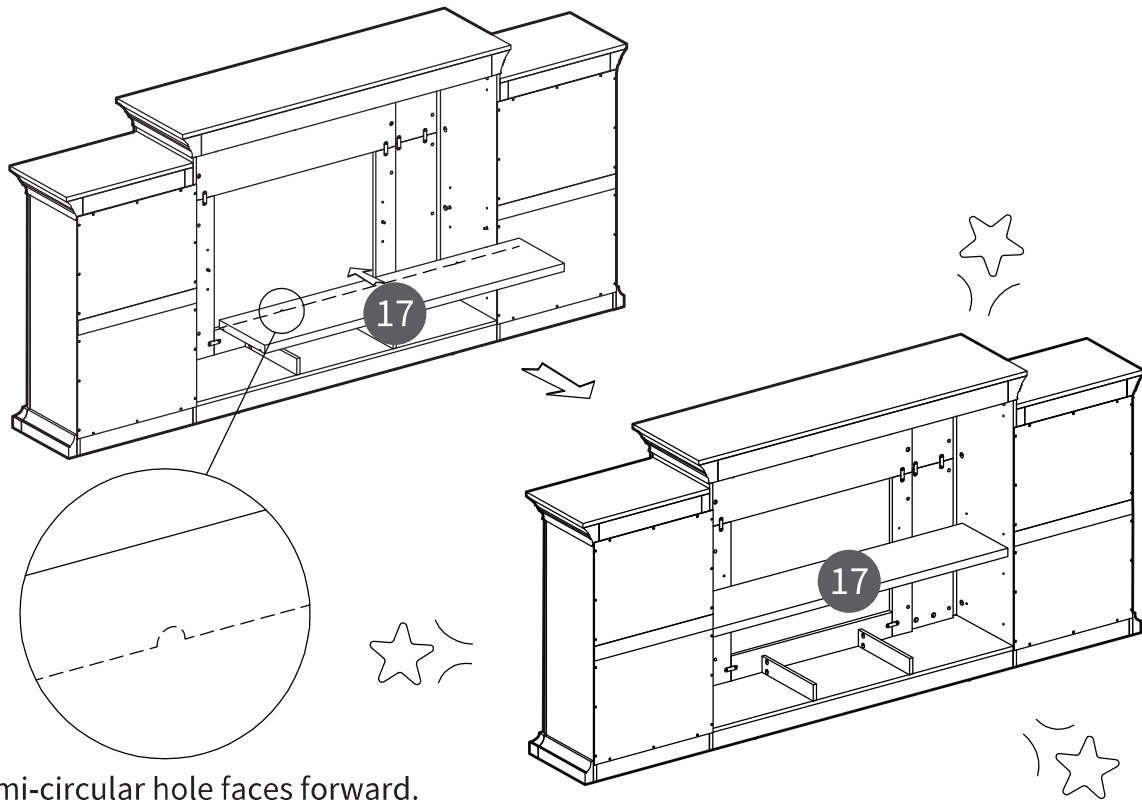

The semi-circular hole faces forward.


Step 56

OR Securing Screws (J) on the underside of Board (3&4).

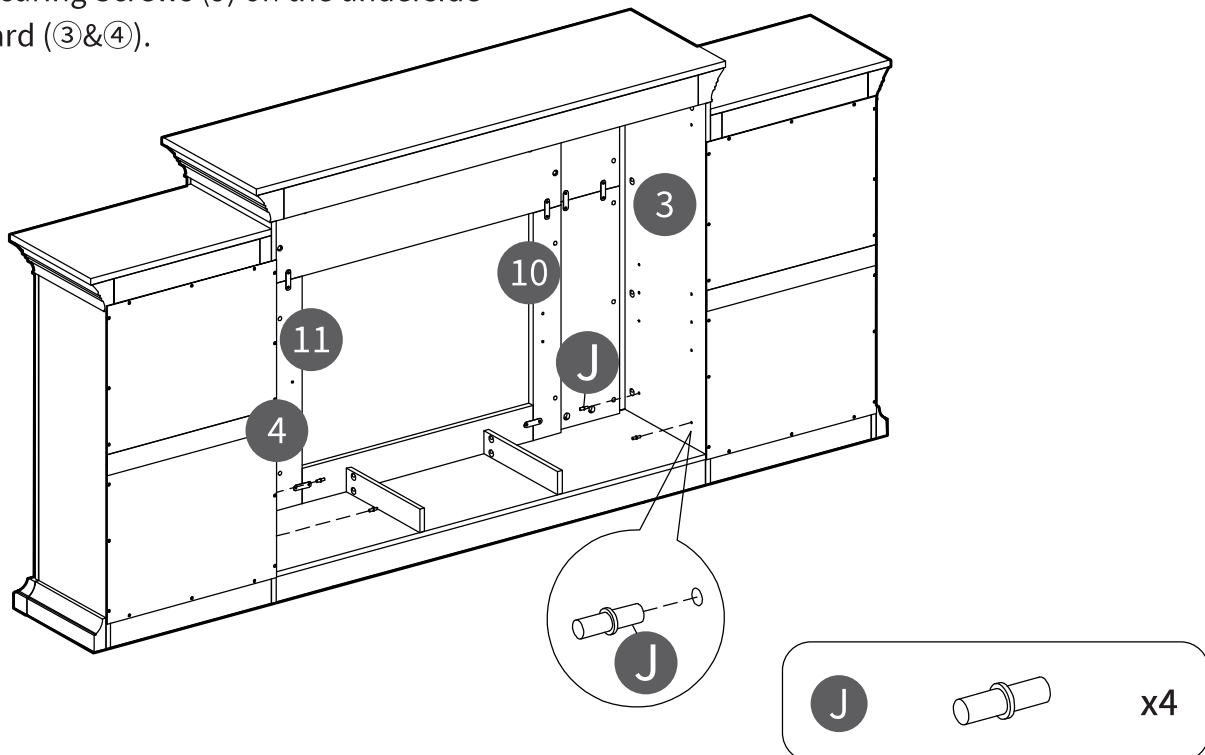

Step 57


Place the Board (17) into the underside of Mantel.

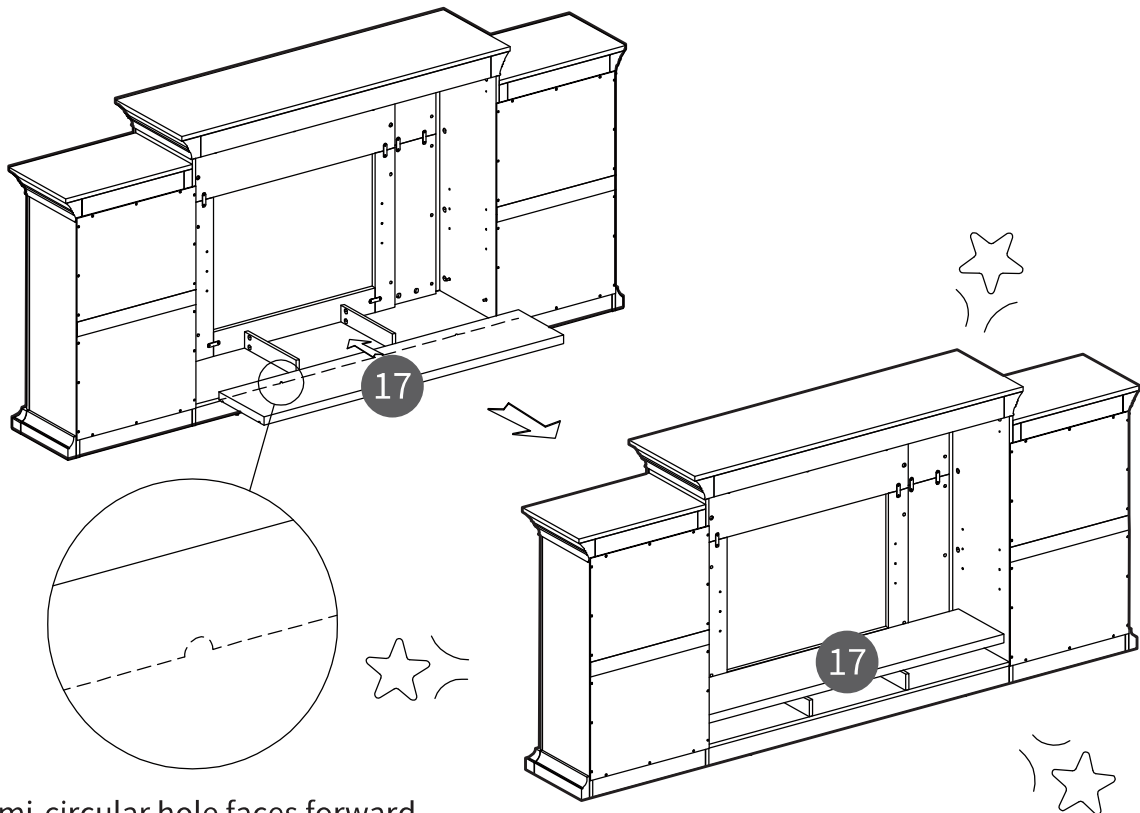

The semi-circular hole faces forward.

Step 58



If you purchased a fireplace mantel with a electric fireplace, you will need to install the electric fireplace.

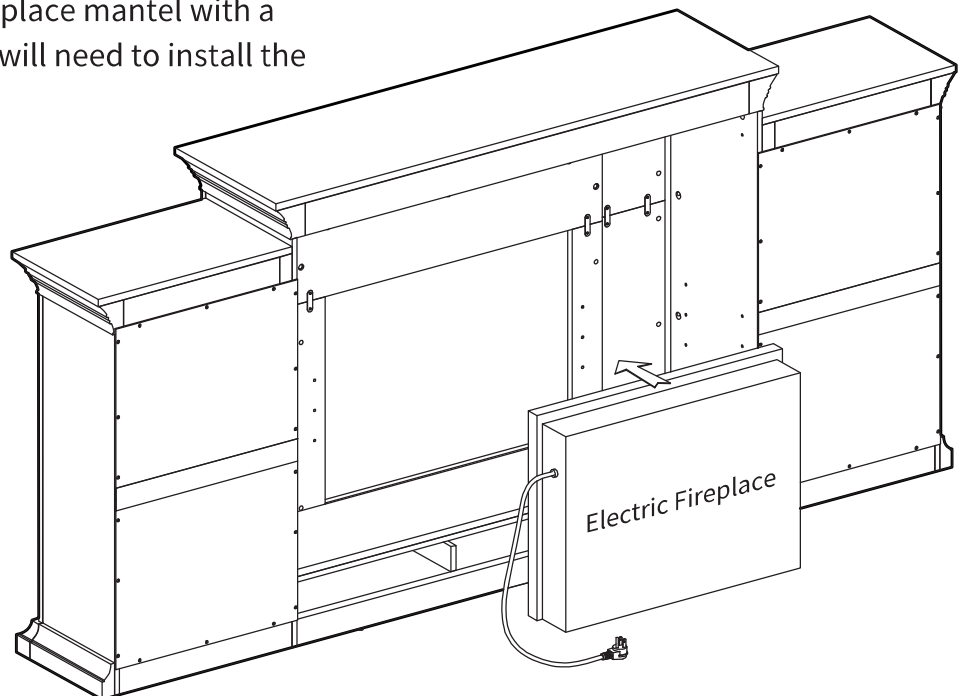

For mounting electric fireplace instructions, refer to the electric fireplace installation manual.


Step 59

Drill 2 holes in the wall and Hammer the (O) in.

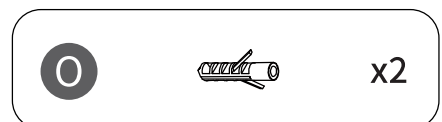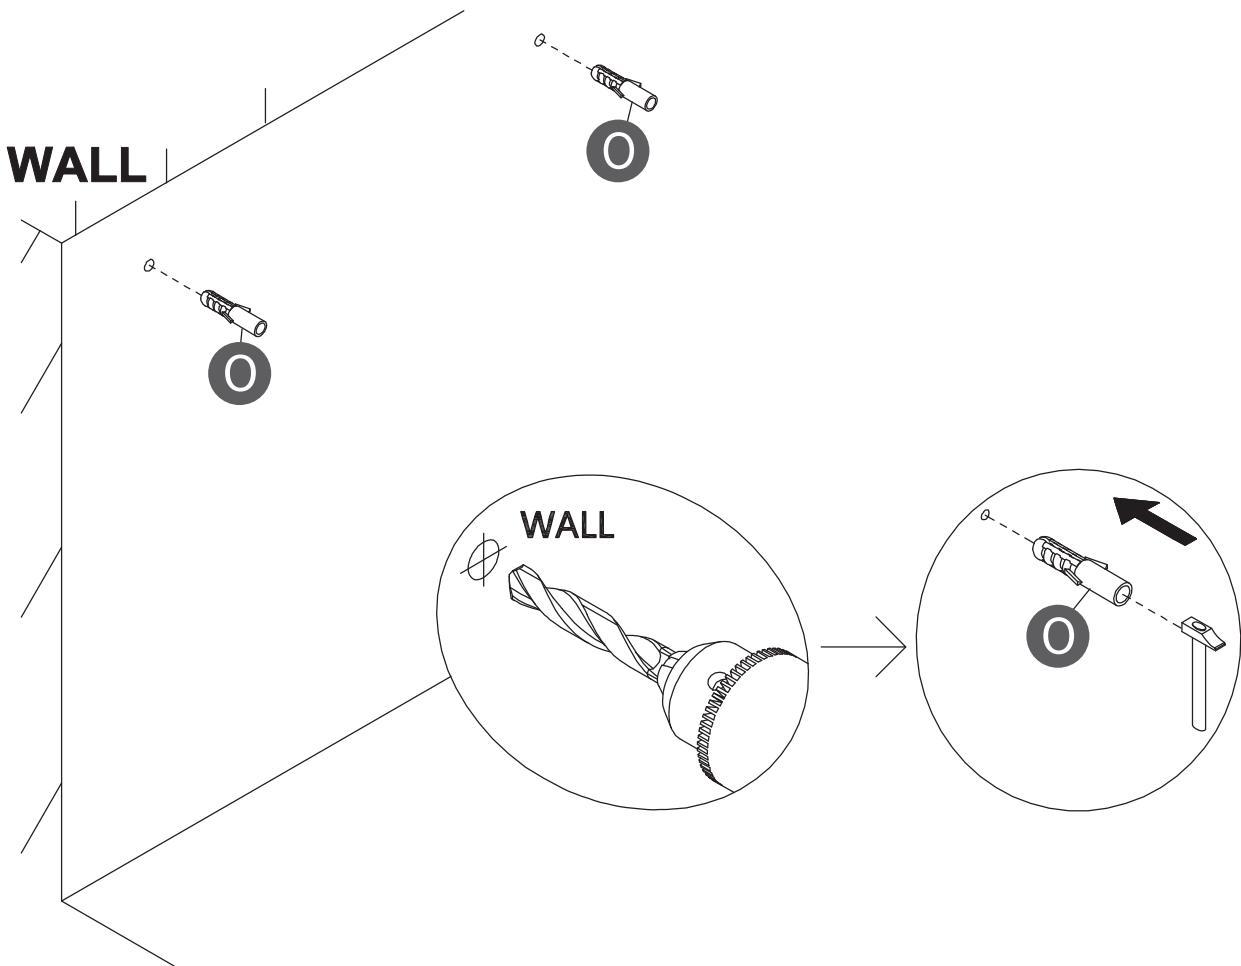

Step 60

Using Screw (P) attach Anti-tipping Belt (N) to wall.

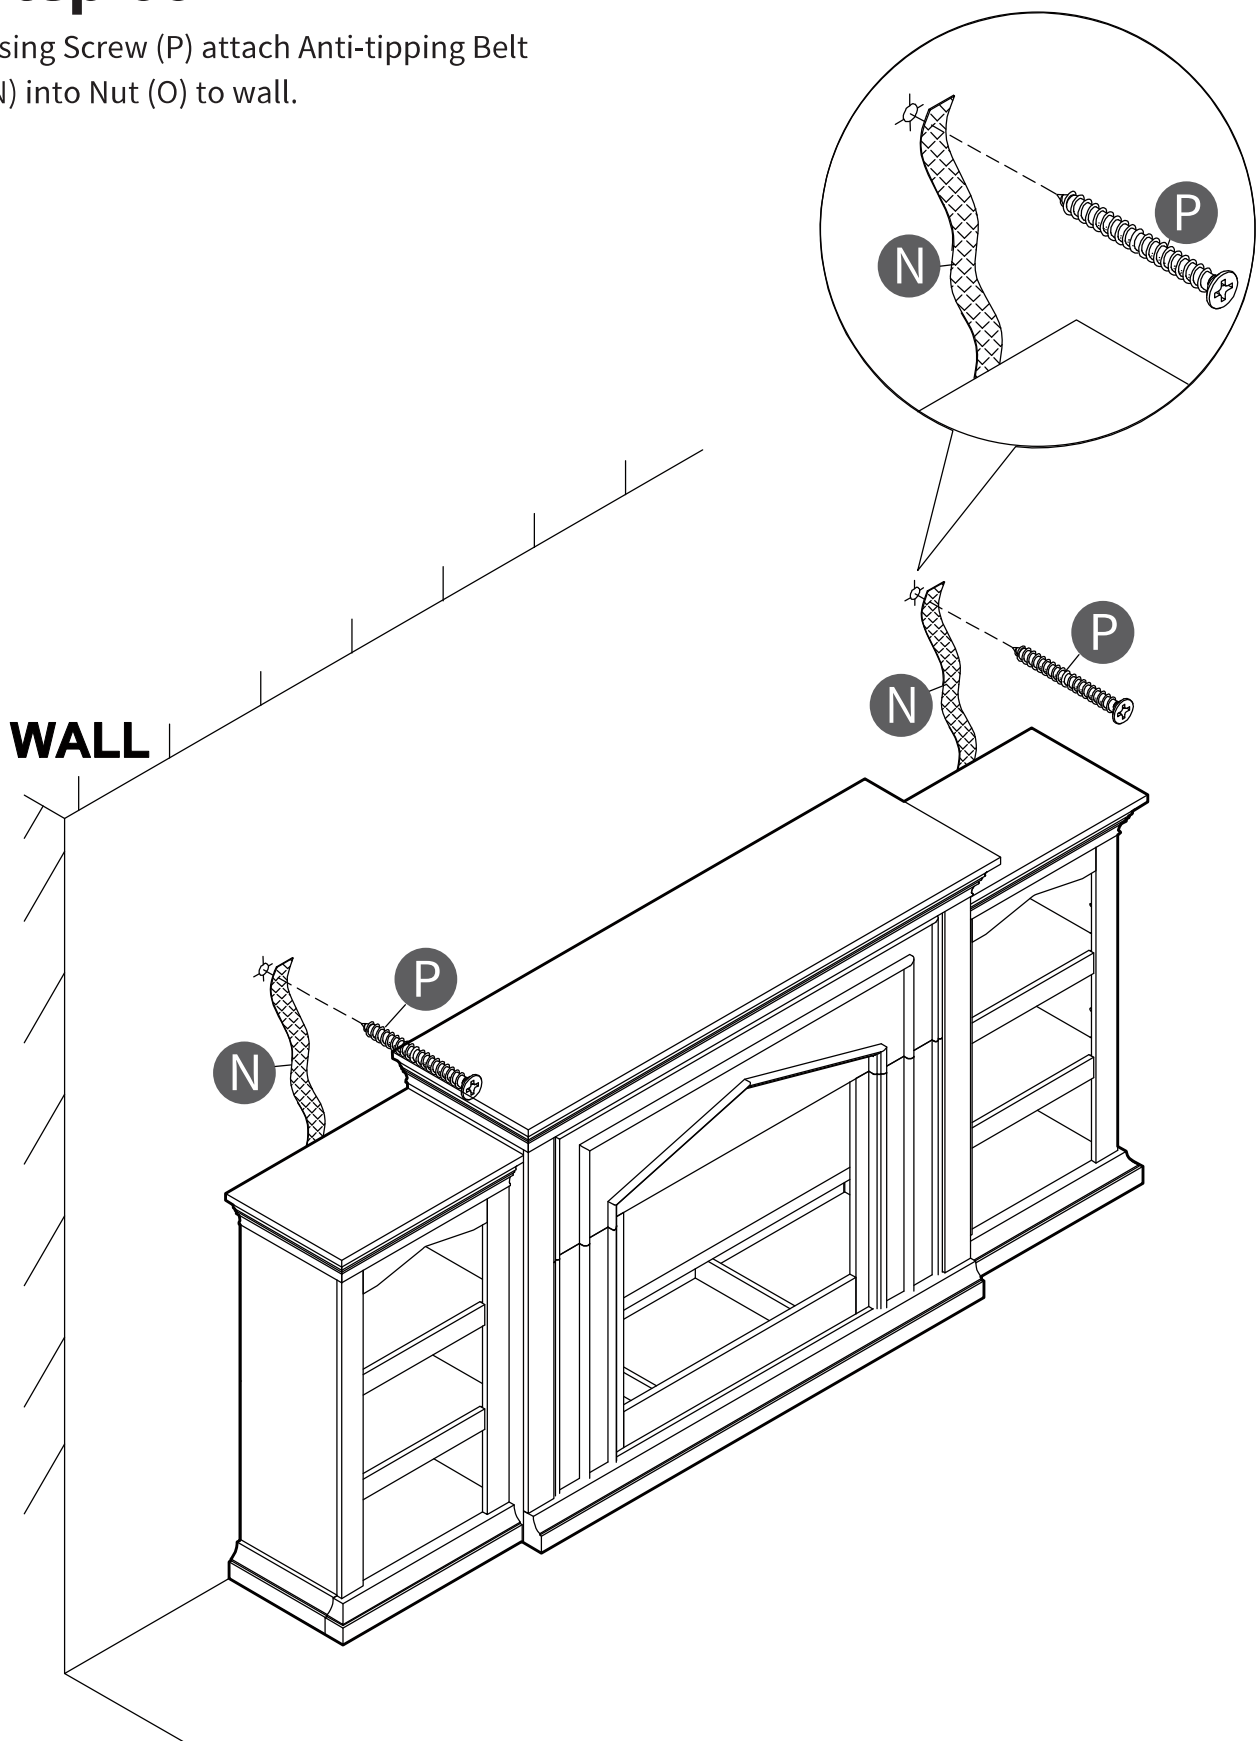

P



x2