




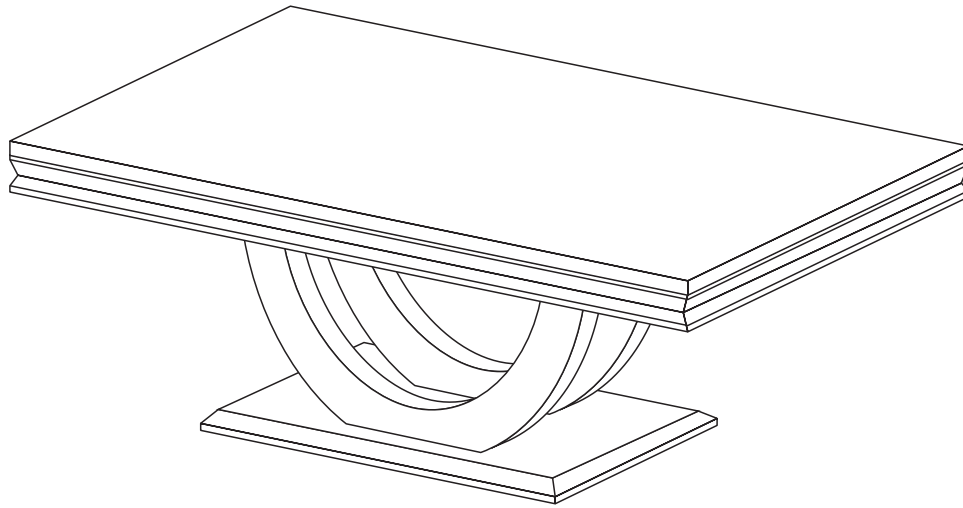




# Assembly Instructions




## PARTS LIST

NO.:	SKETCH	DESCRIPTION	Qty
<b>A</b>		<b>Top</b>	<b>1</b>
<b>B</b>		<b>Leg</b>	<b>2</b>
<b>C</b>		<b>Floor</b>	<b>1</b>
<b>D</b>	 <b>M8*18</b>	<b>Flat Washer</b>	<b>16</b>
<b>E</b>	 <b>M8*20</b>	<b>Bolts</b>	<b>16</b>
<b>F</b>	 <b>M8*22</b>	<b>Adjust The Feet</b>	<b>4</b>
<b>G</b>	 <b>M8*15.5</b>	<b>Allen Key</b>	<b>1</b>


### Step 1

**For The Both Side Legs, Use Allen Key Through The Hole To Lock The Screw.  
All Screws 50% Tighten, Hole Are Aligned,  
Screw 100% Tighten**

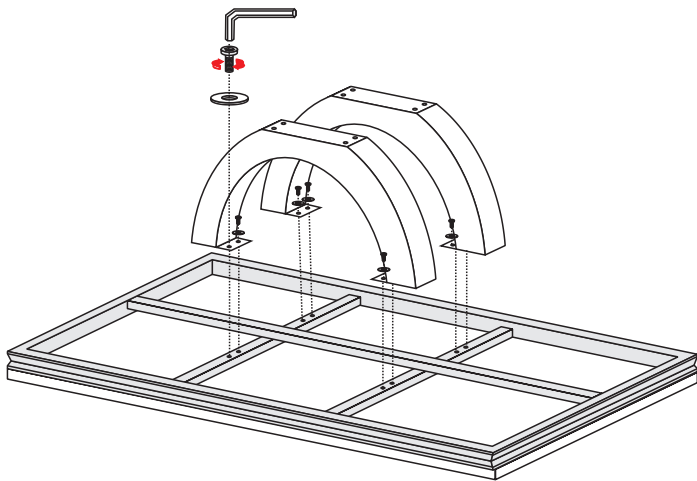


### Step2

**For The Both Side Legs, Use Allen Key Through The Hole To Lock The Screw.  
All Screws 50% Tighten, Hole Are Aligned,  
Screw 100% Tighten**

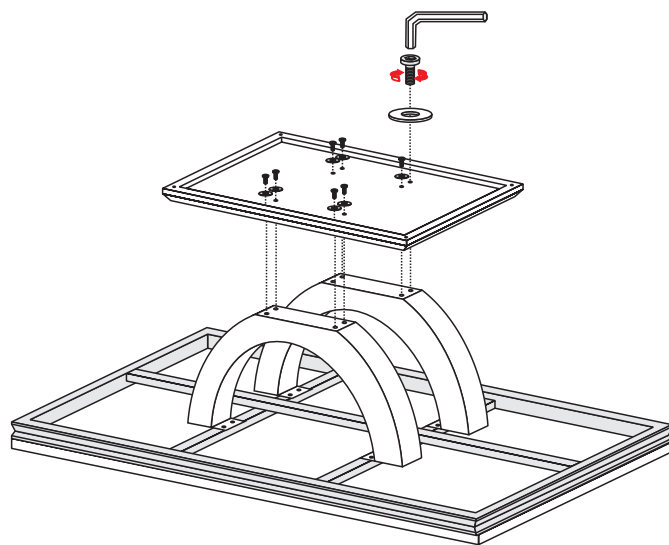

### Step 3

**100% tighen**

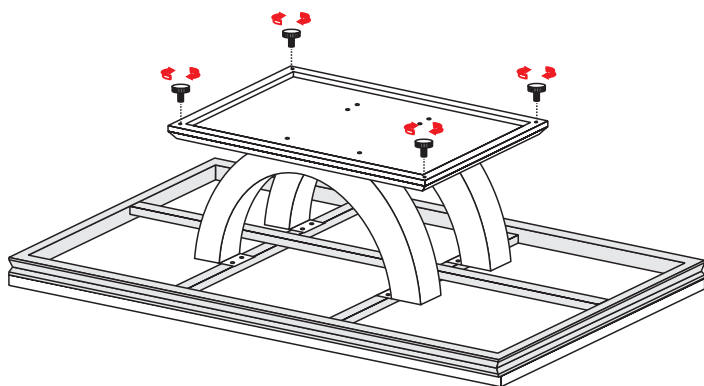

### Step4

