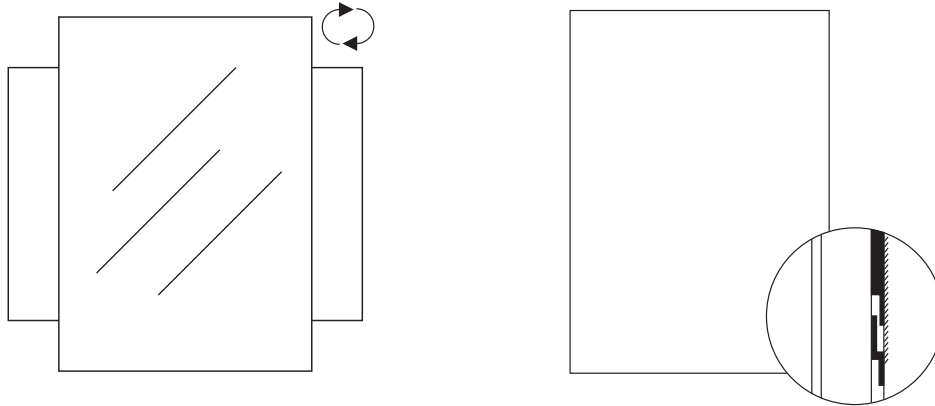


KOSMÓ


Rectangle Wall Mirror Installation Instruction


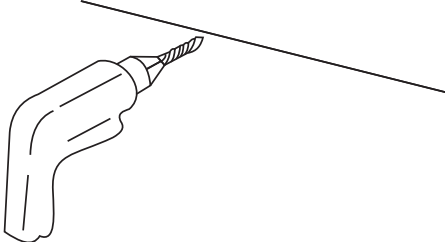
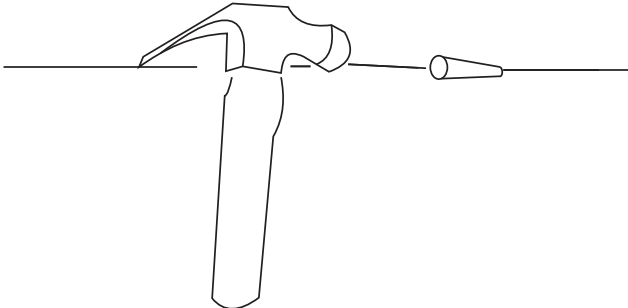
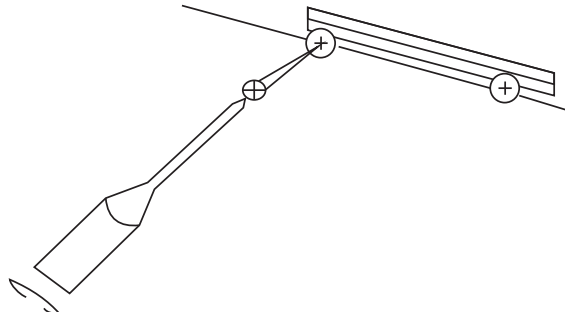


Hangs Horizontal or Vertical as You Desired.

(Tips: Due to the production process, the actual product size has a deviation of ± 1 inch from the marked size.)

Accessories



Step 1	Step 2
 <p data-bbox="148 1408 778 1437">Draw a straight line with a ruler to keep the mirror horizontal.</p>	 <p data-bbox="842 1408 1422 1437">Drill 2 holes or 4 holes according to screws you received.</p>
 <p data-bbox="379 1967 550 1996">Knock the nail in</p>	 <ol data-bbox="834 1880 1433 2015" style="list-style-type: none">1. Tighten the screw to ensure the wall bracket stay sturdy on the wall.2. Hang the mirror on the wall barcket.3. After installation, please remove the mirror surface dustproof film from the edge to use.

After-sale service: zhiymidg@163.com

(Any question regarding our item please feel free to contact us at this email above.)