


ASSEMBLY INSTRUCTIONS

ITEM # : 20JLVNVNT30BK-KD08
20JLVNVNT30BL-KD08
20JLVNVNT30GR-KD08
20JLVNVNT30WT-KD08

Thank you for purchasing this quality Product. Be sure to check all packing material carefully for small parts, which may have come loose inside carton during shipment. Identify and count all parts and compare with the parts list below.

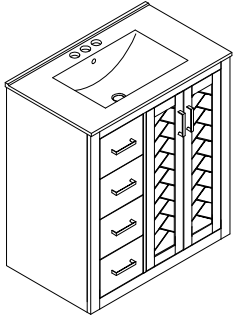


ASSEMBLY INSTRUCTION:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered assure fast and easy assembly.

WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time 1/2 hours.
5. Component parts and fittings contained in the box. Please sort out all parts before you begin to assemble the item. This is to make sure you always use the correct part.
6. It is **STRONGLY RECOMMENDED** that you **ANCHOR** this product. Tying furniture can cause serious injuries and death. To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wall or other solid surface, using the anchor straps provided appropriate fixings.

No.	Component	Q'ty	No.	Component	Q'ty
1		1	15		1
2		1	16		1
3		1	17		1
4		1	18		3
5		1	19		1
6		1	20		1
7		1	21		1
8		1	22		1
9		1	23		1
10		1	24		1
11		2	25		1
12		1	26		1
13		1			
14		1			

ASSEMBLY INSTRUCTIONS

ITEM # : 20JLVNVNT30BK-KD08
20JLVNVNT30BL-KD08
20JLVNVNT30GR-KD08
20JLVNVNT30WT-KD08

Thank you for purchasing this quality Product. Be sure to check all packing material carefully for small parts, which may have come loose inside carton during shipment. Identify and count all parts and compare with the parts list below.

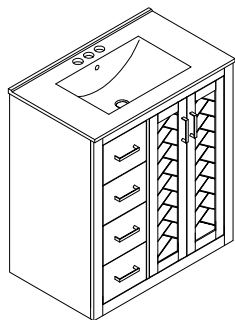



ASSEMBLY INSTRUCTION:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered assure fast and easy assembly.


WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time 1/2 hours.
5. Component parts and fittings contained in the box. Please sort out all parts before you begin to assemble the item. This is to make sure you always use the correct part.
6. It is **STRONGLY RECOMMENDED** that you **ANCHOR** this product. Tying furniture can cause serious injuries and death. To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wall or other solid surface, using the anchor straps provided appropriate fixings.

No.	Hardware	Q'ty
A	 Allen Bolts 1/4" x 28	4
B	 Flat Washers 1/4" x 16 x 1	4
C	 Cam Lock Screws	15
D	 Cam Lock	15
E	 Screws $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$	2
F	 Screws $\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$	24
G	 Handle	6
H	 Screws $\varnothing 5/32" \times 20 \text{mm}$	4
I	 Screws $\varnothing 5/32" \times 25 \text{mm}$	8
J	 Hinges	4


No.	Hardware	Q'ty
K	 Screws $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$	24
L	 L-Bracket	1
M	 Screws $\varnothing 7 \times \varnothing 3.5 \times 12 \text{mm}$	6
N	 Wooden $\varnothing 8 \times 30 \text{mm}$	17
O	 Allen key	1
P	 Anti fall hardware (sets)	1
Q	 Wooden $\varnothing 6 \times 30 \text{mm}$	16
R	 Shelf Support	4
 Not Included		

Step 1

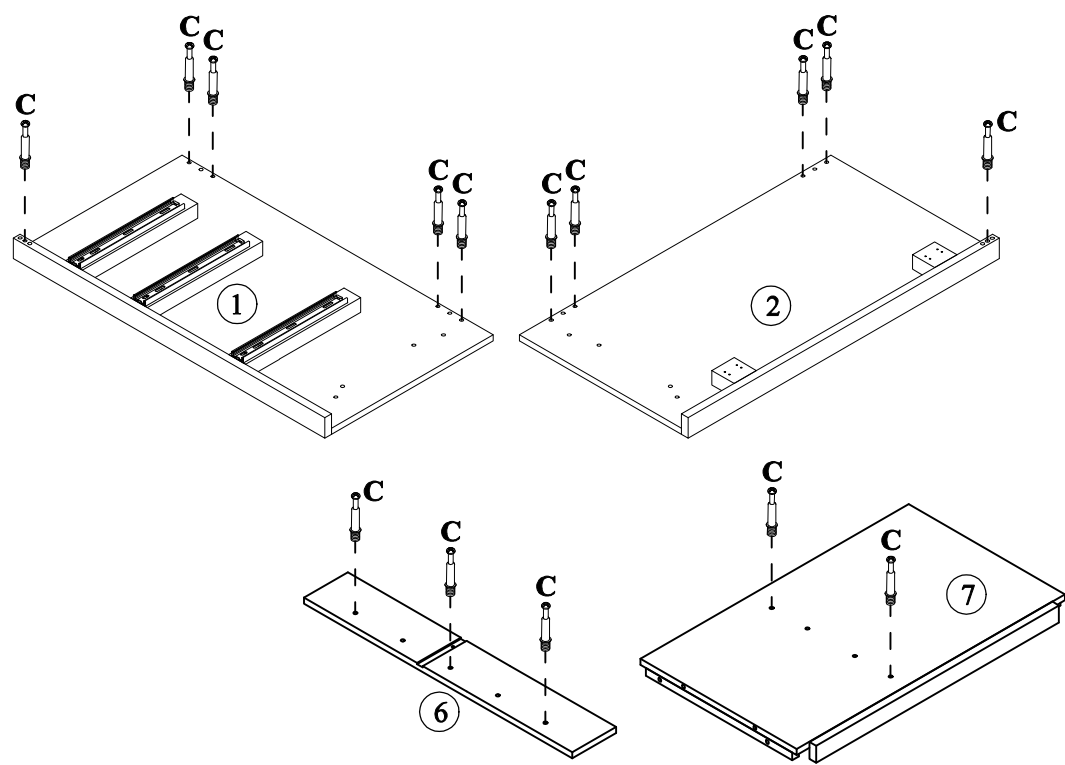


No	Hardware	Q'ty
C	Cam Lock Screws	15

Step 2

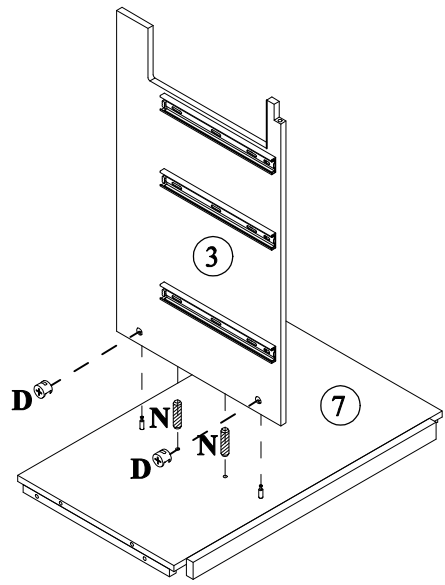


No	Hardware	Q'ty
D	Cam Lock	2
N	Wooden ø8x30mm	2

Step 3

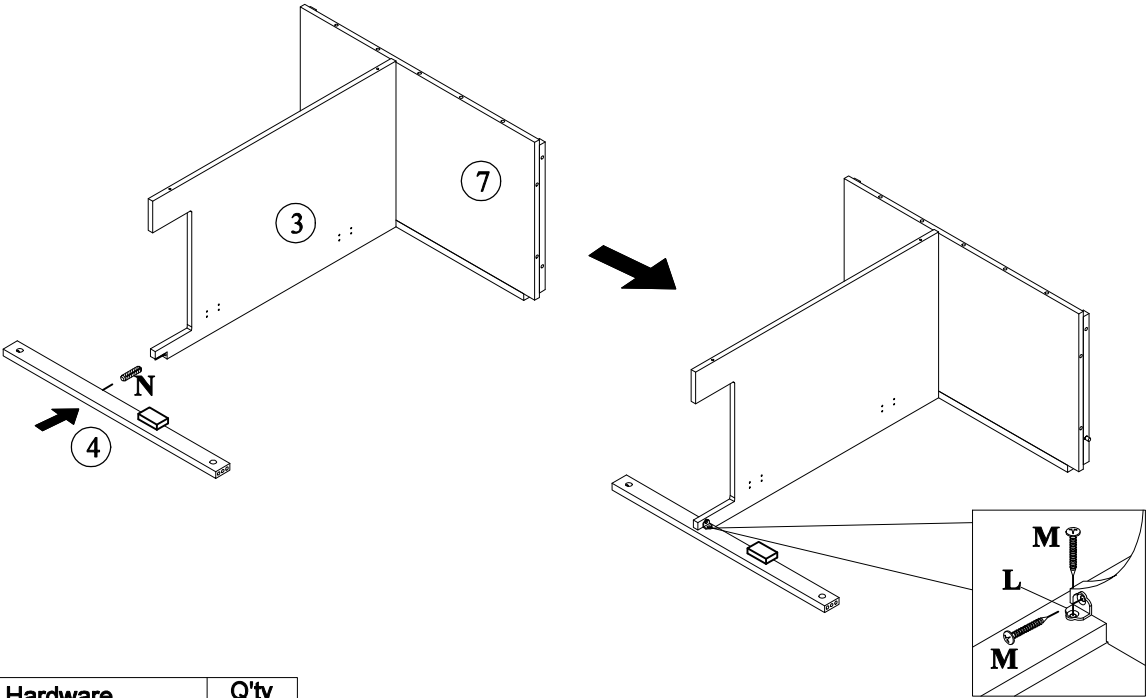




No	Hardware	Q'ty
L	L-Bracket	1
M	Screws $\varnothing 7 \times \varnothing 3.5 \times 12 \text{mm}$	2
N	Wooden $\varnothing 8 \times 30 \text{mm}$	1

Step 4

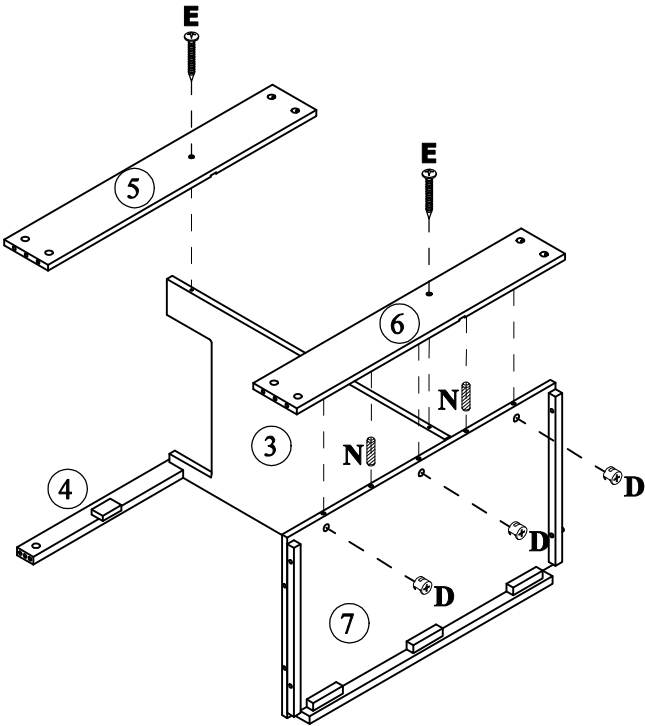


No	Hardware	Q'ty
D	Cam Lock	3
E	Screws $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$	2
N	Wooden $\varnothing 8 \times 30 \text{mm}$	2

Step 5

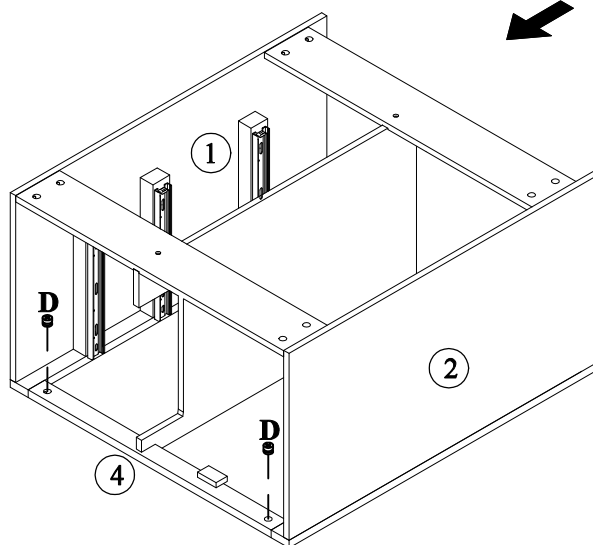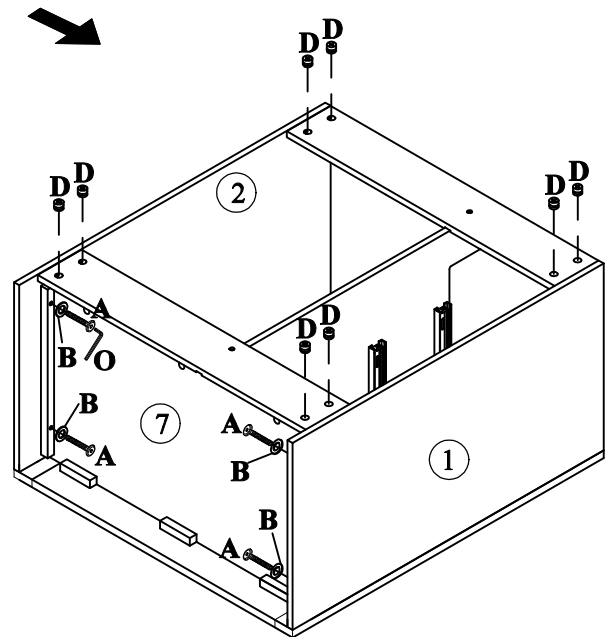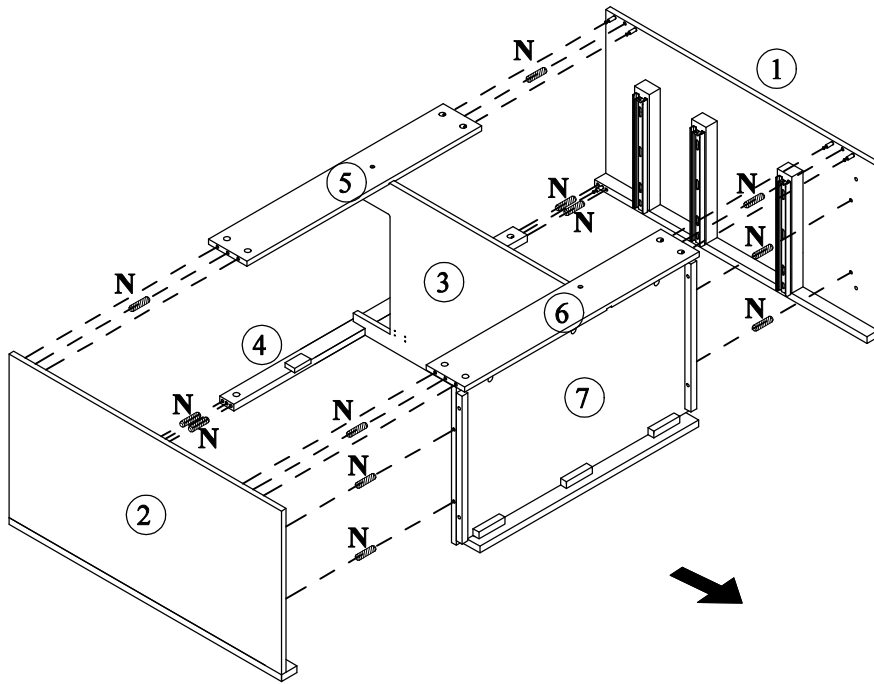


No	Hardware	Q'ty
D	Cam Lock	10
A	Allen Bolts 1/4" x 28	4
B	Flat Washers 1/4"x16x1	4
O	Allen key	1
N	Wooden ø8x30mm	12

Step 6

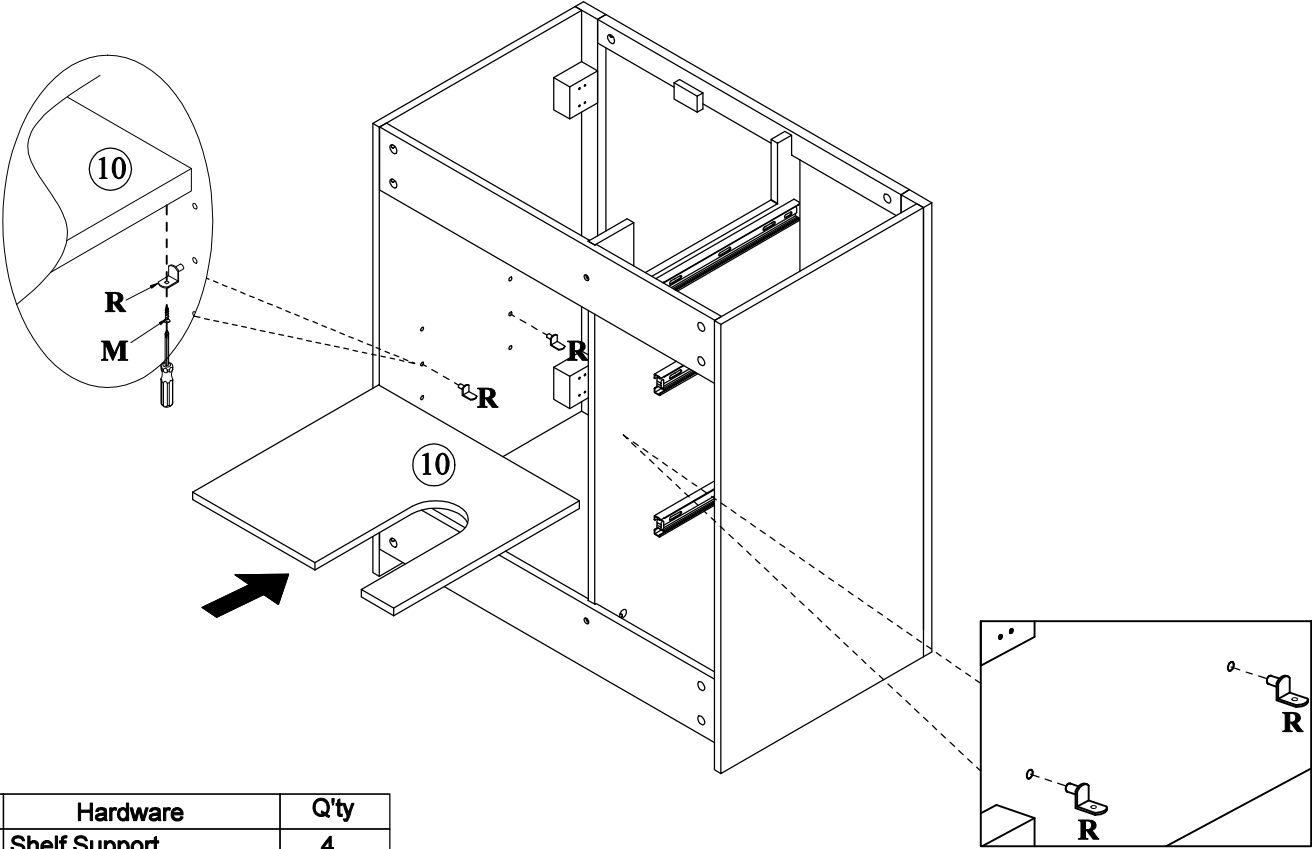









No	Hardware	Q'ty
R	Shelf Support	4
M	Screws $\varnothing 7 \times \varnothing 3.5 \times 12 \text{mm}$	4

Step 7

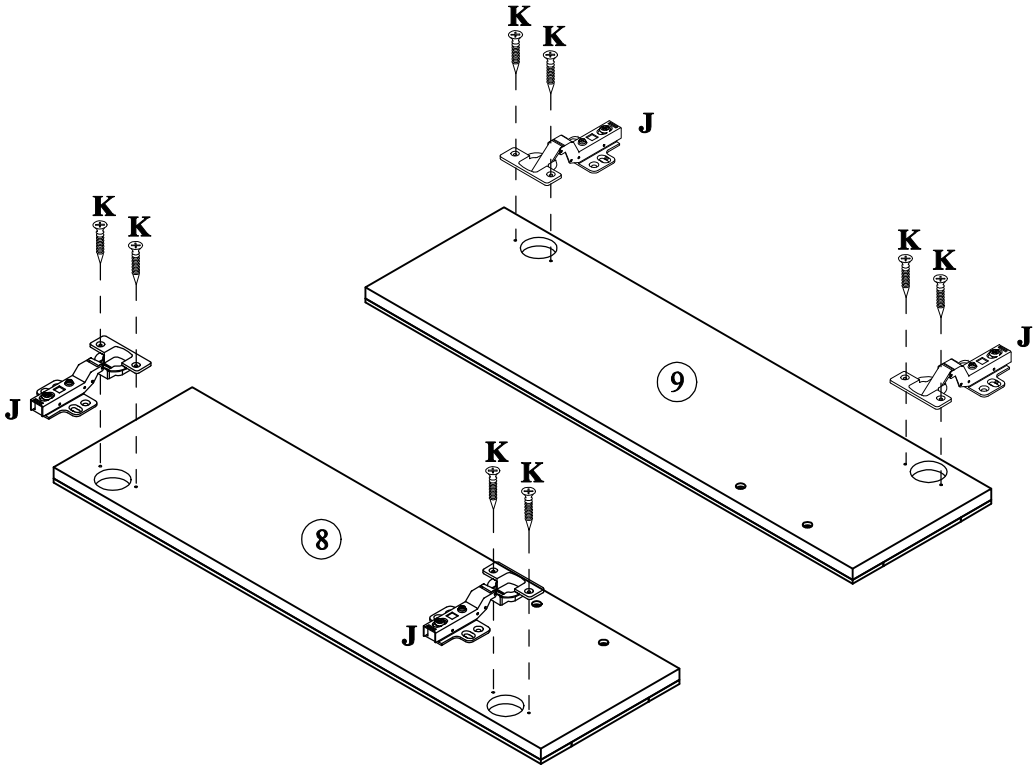




No	Hardware	Q'ty
J	Hinges	4
K	Screws $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$	8

Step 8

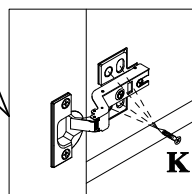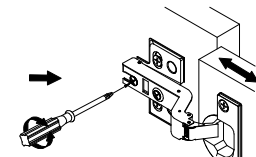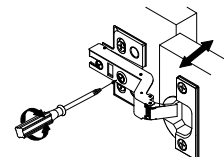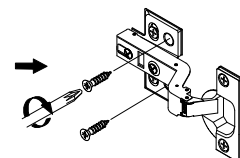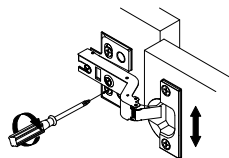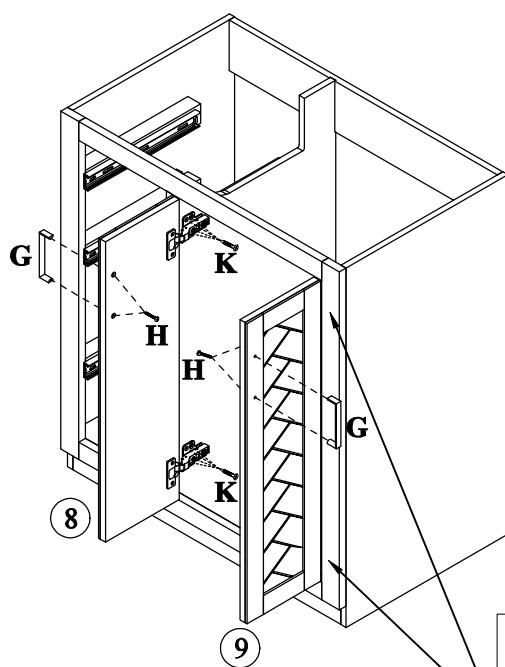





No	Hardware	Q'ty
H	Screws $\varnothing 5/32"$ x25mm	2
G	Handle	4
K	Screws $\varnothing 7$ x $\varnothing 3.5$ x15mm	16

Step 9

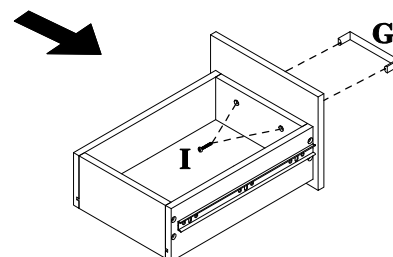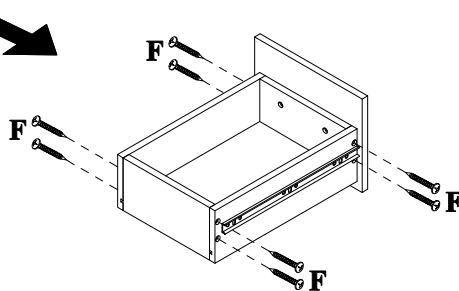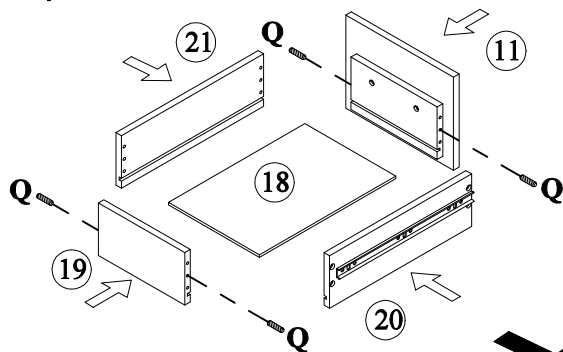




No	Hardware	Q'ty
G	Handle	1
I	Screws ø5/32"x25mm	2
Q	Wooden ø6x30mm	4
F	Screws ø8xø4x32mm	8

Step 10

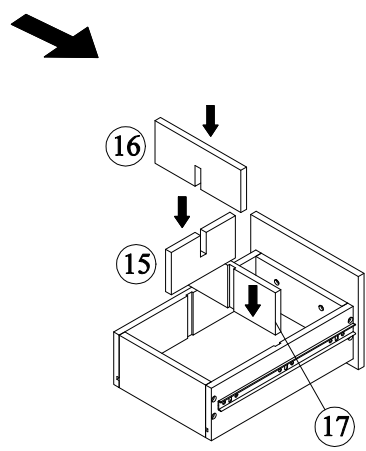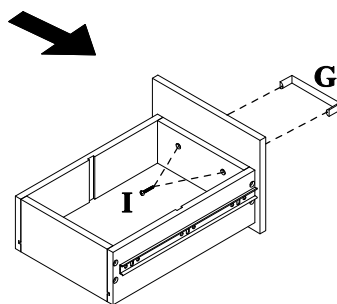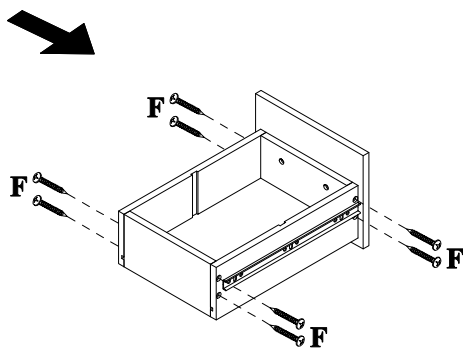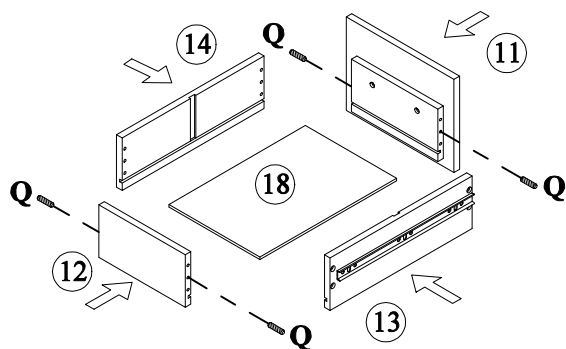


No	Hardware	Q'ty
G	Handle	1
I	Screws $\varnothing 5/32"$ x25mm	2
Q	Wooden $\varnothing 6$ x30mm	4
F	Screws $\varnothing 8$ x $\varnothing 4$ x32mm	8

Step 11

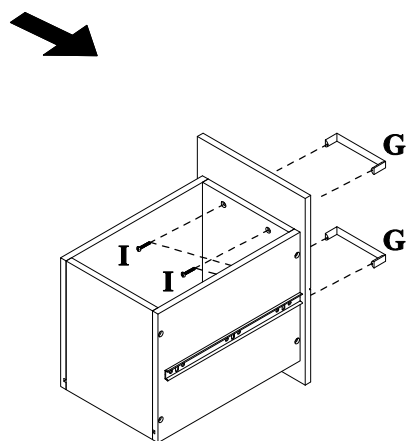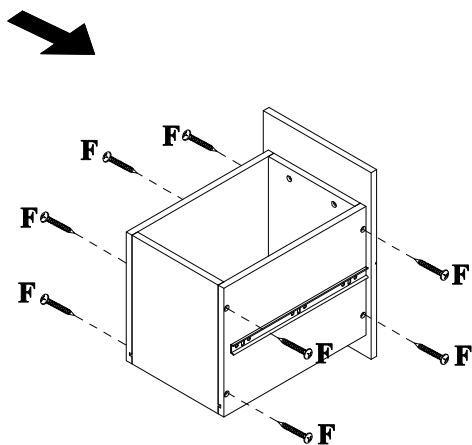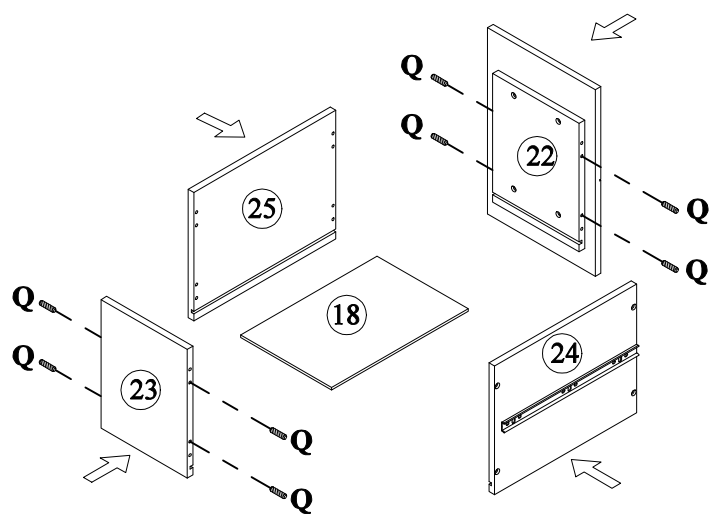


No	Hardware	Q'ty
G	Handle	2
I	Screws $\emptyset 5/32"$ x25mm	4
Q	Wooden $\emptyset 6$ x30mm	8
F	Screws $\emptyset 8$ x $\emptyset 4$ x32mm	8

Step 12

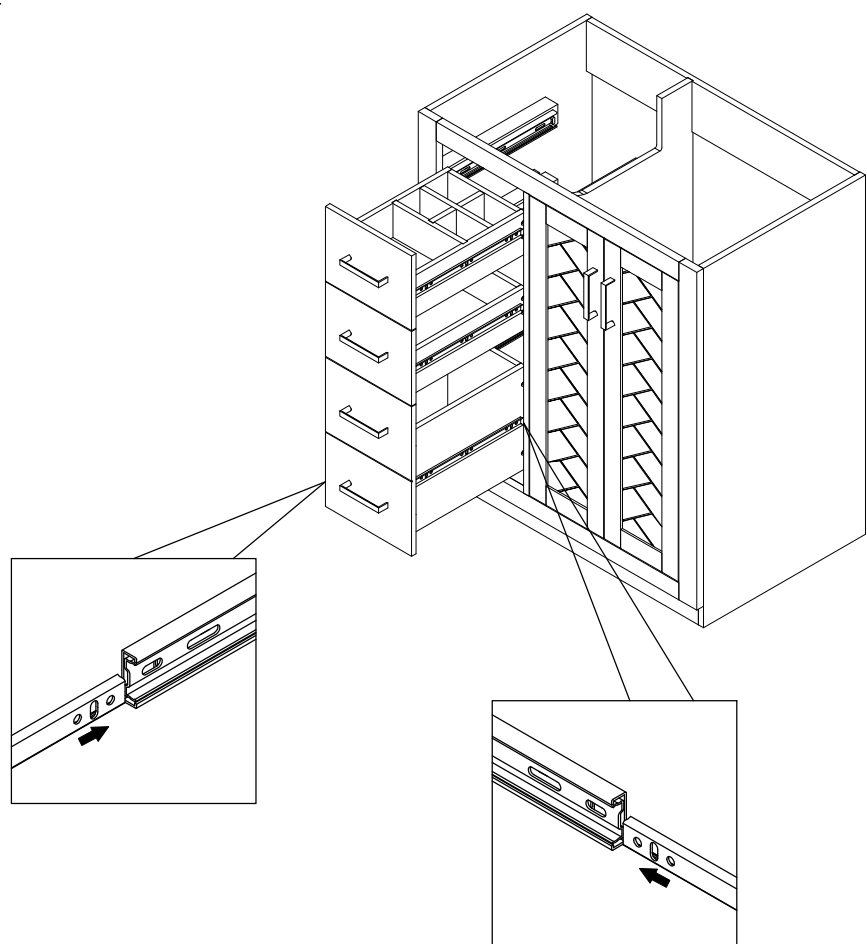


Step 13

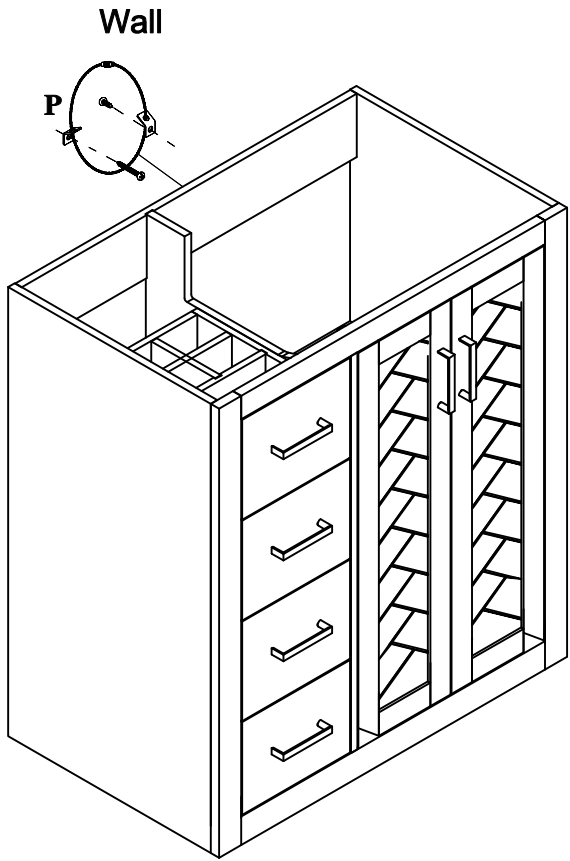

No	Hardware	Q'ty
P	Anti fall hardware	1

Step 14

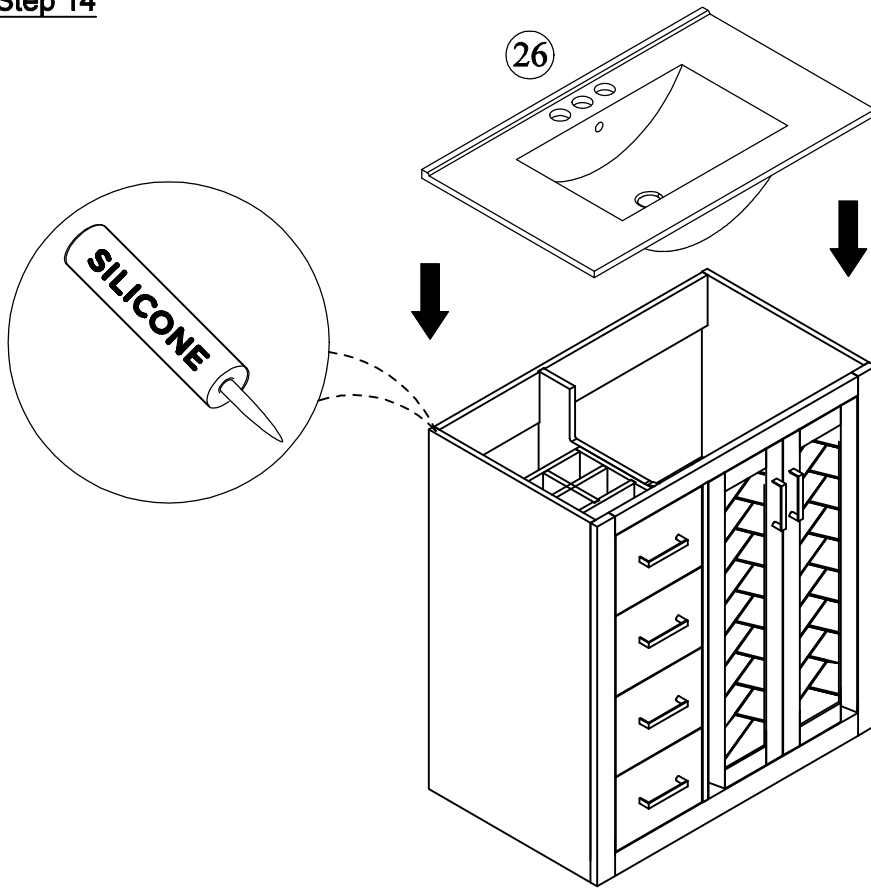

Step 15

