
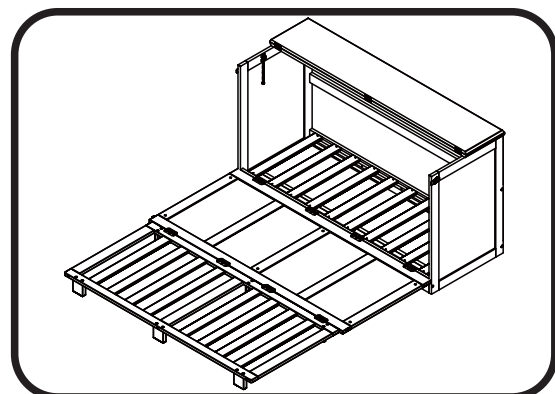


FULL > QUEEN

ASSEMBLY INSTRUCTIONS

Before assembling your Murphy bed, please read through these instructions carefully and familiarize yourself with the different parts.

ATTENTION! If you receive a damaged or defective item, please contact afifurnishings at customerservice@afifurnishings.com or 1-800-955-3726

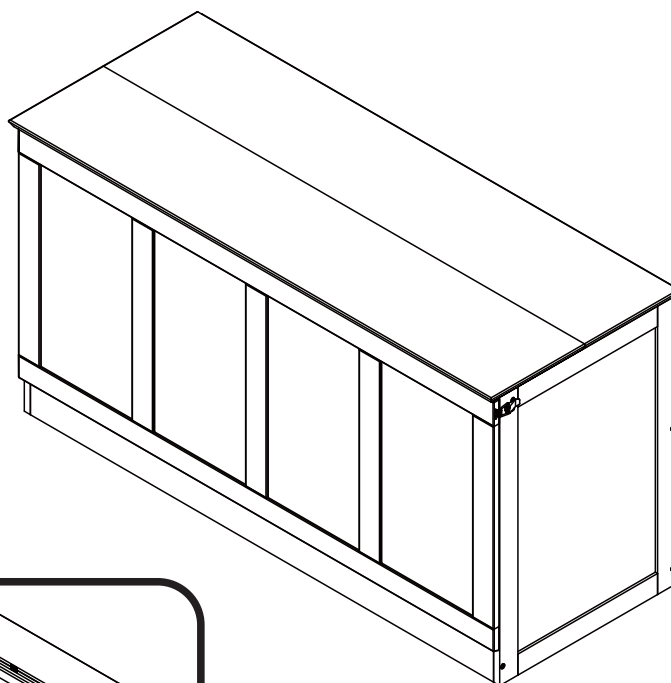

CODE	ITEM
MB-TP-WFD	C-7233X C-7243X
MB-SP-WFD	C-7234X C-7244X

PO :

HARDWARE


NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

- A** Wood dowel - 14 pcs
Spare - 2 pcs
- B** JCB M6 X 25mm - 4 pcs
Spare - 1 pc
- C** JCB M6 X 30mm - 12 pcs
Spare - 1 pc
- D** Wood screw 5/8" - 24 pcs
Spare - 2 pcs
- E** Wood screw 1" - 20 pcs
Spare - 2 pcs
- F** Barrel nut M6 X 14mm - 18 pcs
- G** Wood screw 1/2" - 24 pcs
Spare - 2 pcs
- H** JCB M6 X 65mm - 6 pcs
Spare - 1 pc
- I** JCB M6 X 100mm - 12 pcs
Spare - 1 pc
- J** Spring Clip - 2 Set
with screws
- K** Allen wrench - 1 pc
Spare - 1 pc

FULL > QUEEN PARTS LIST



- 01 HARDWARE — **C-7233X** **C-7243X**
- 02 TOP PANEL 1PC
- 03 BACK PANEL 2 PCS
- 04 MIDDLE BACK RAIL 1PC
- 05 FRONT RAIL 1PC
- 06 BACK RAIL 1PC
- 07 TOP DOOR RAIL 1PC
- 08 BOTTOM DOOR RAIL 1PC
- 09 TOP FOOTBOARD RAIL 1PC
- 10 BOTTOM FOOTBOARD RAIL 1PC
- 11 SIDE FOOTBOARD CONNECT RAILS 3PCS
- 12 BOTTOM LEG 3PCS
- 13 DOOR END RAILS 2PCS
- 14 MIDDLE DOOR RAILS 2PCS
- 15 MIDDLE DOOR RAIL WITH HOLE 1PC
- 16 FOOTBOARD SLATS 8PCS
- 17 TOP LEG 3PCS
- 18 DOOR PANEL 4PCS
- 19 LEFT SIDE PANEL 1PC
- 20 RIGHT SIDE PANEL 1PC
- 21 SLAT KIT 2PCS

22 FOLDING MATTRESS
SOLD SEPARATELY

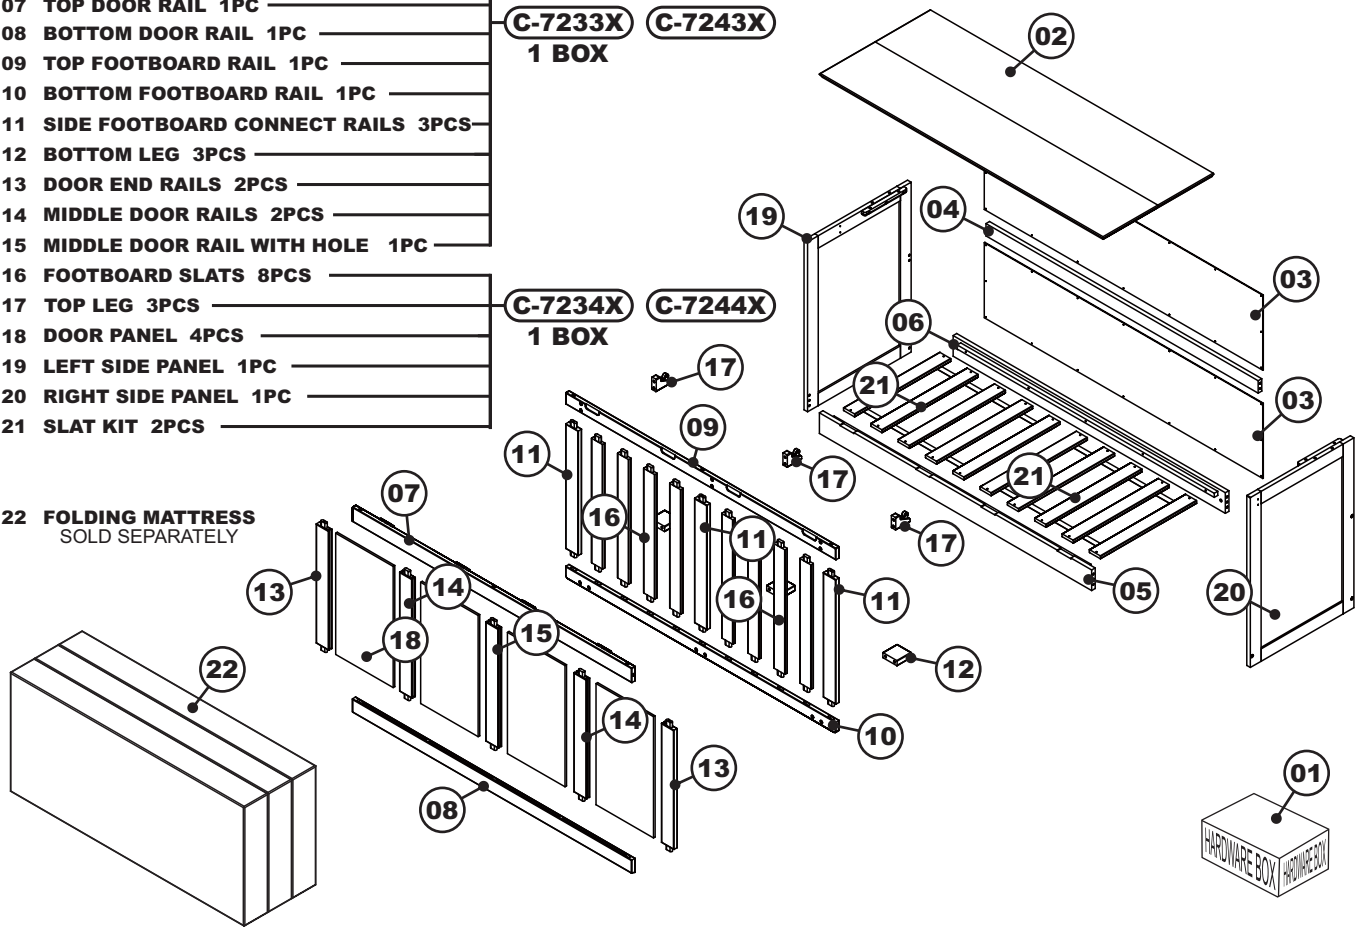

STEP 1


Insert wooden dowels (A) into holes as shown below.

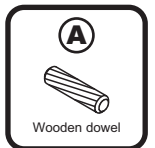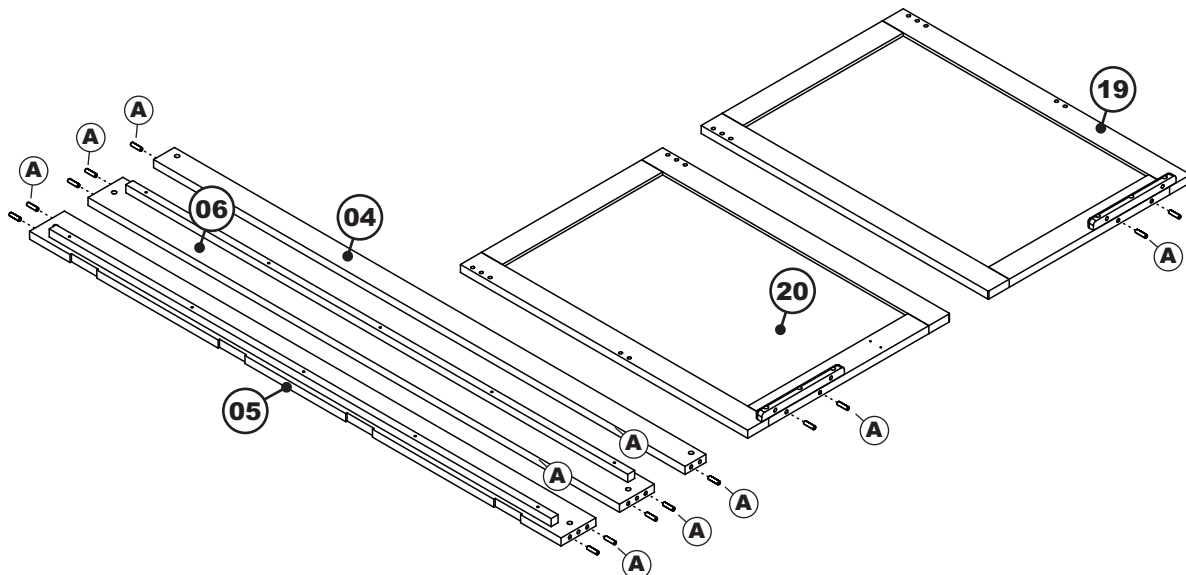

FULL > QUEEN


STEP 2

Attach front rail, back rail, and middle back rail (05)(06)(04) to the left & right side panel (19) (20) as shown below using JCB (H) and barrel nut (F). Tighten with allen wrench (K).

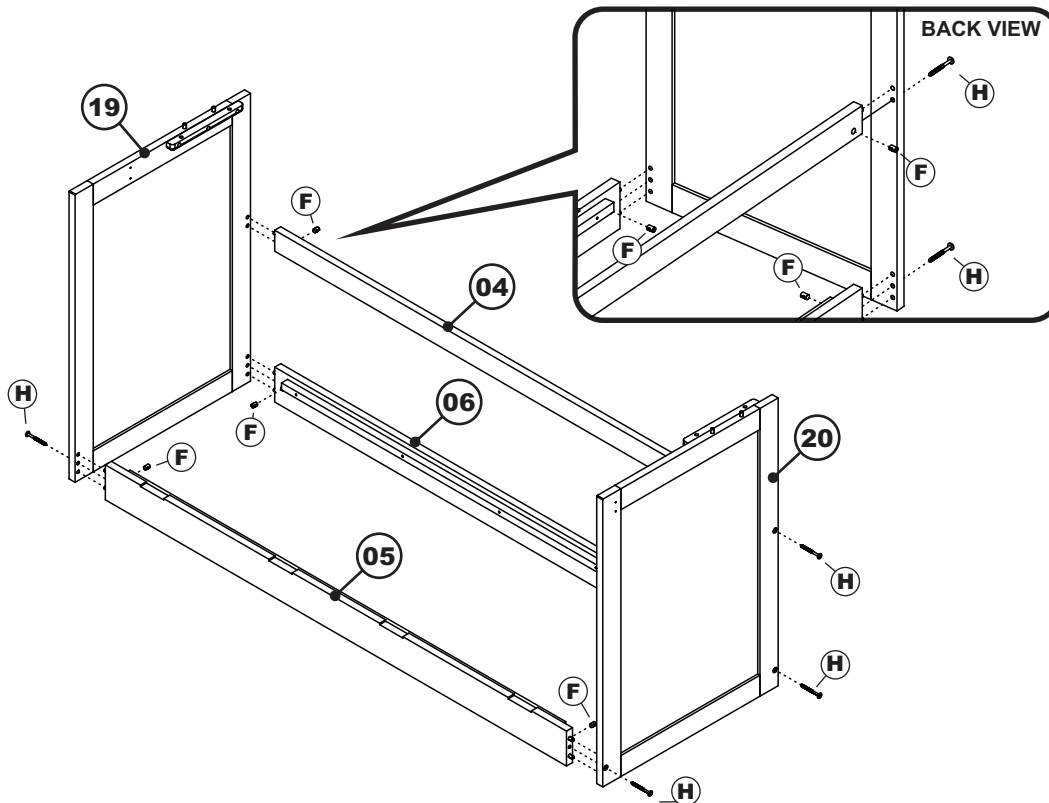

STEP 3



Evenly space 2 pcs slat kit (21). Attach slat kit (21) to the front (05) and back (06) rail assemblies as shown below using wood screw (E). Tighten with phillips head screwdriver (customer supplied).

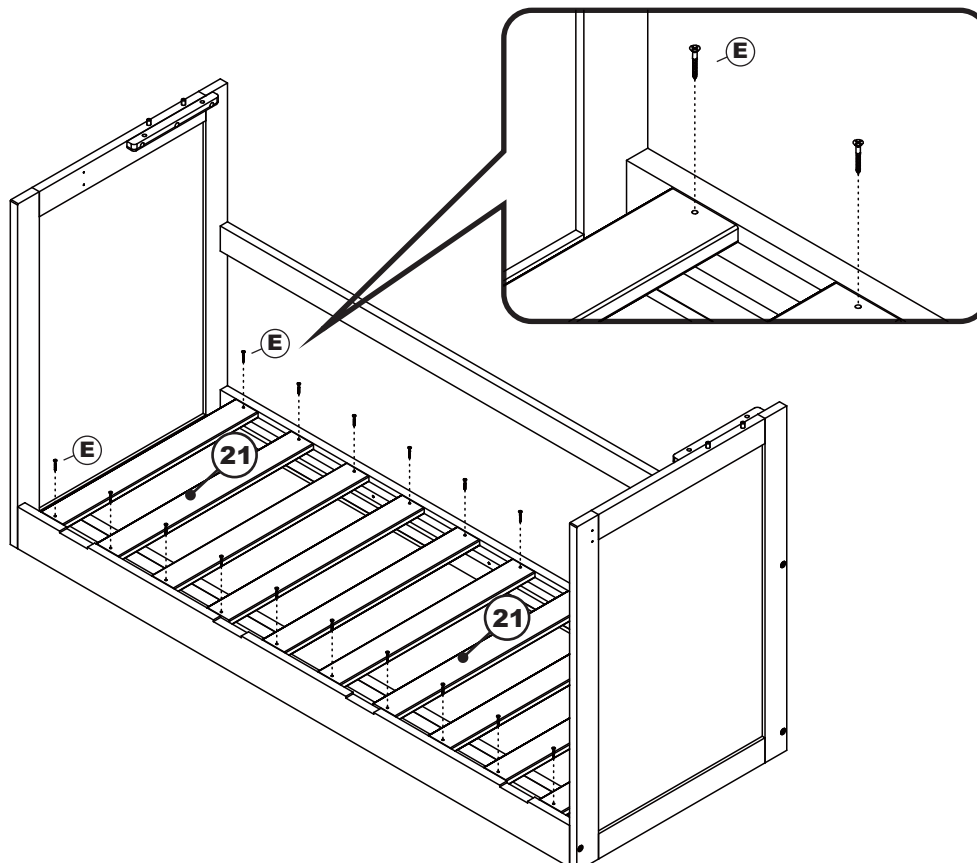

FULL > QUEEN


STEP 4

Attach top panel (02) to left (19) and right (20) side panel assemblies as shown below using JCB (B). Tighten with allen wrench (K).

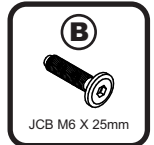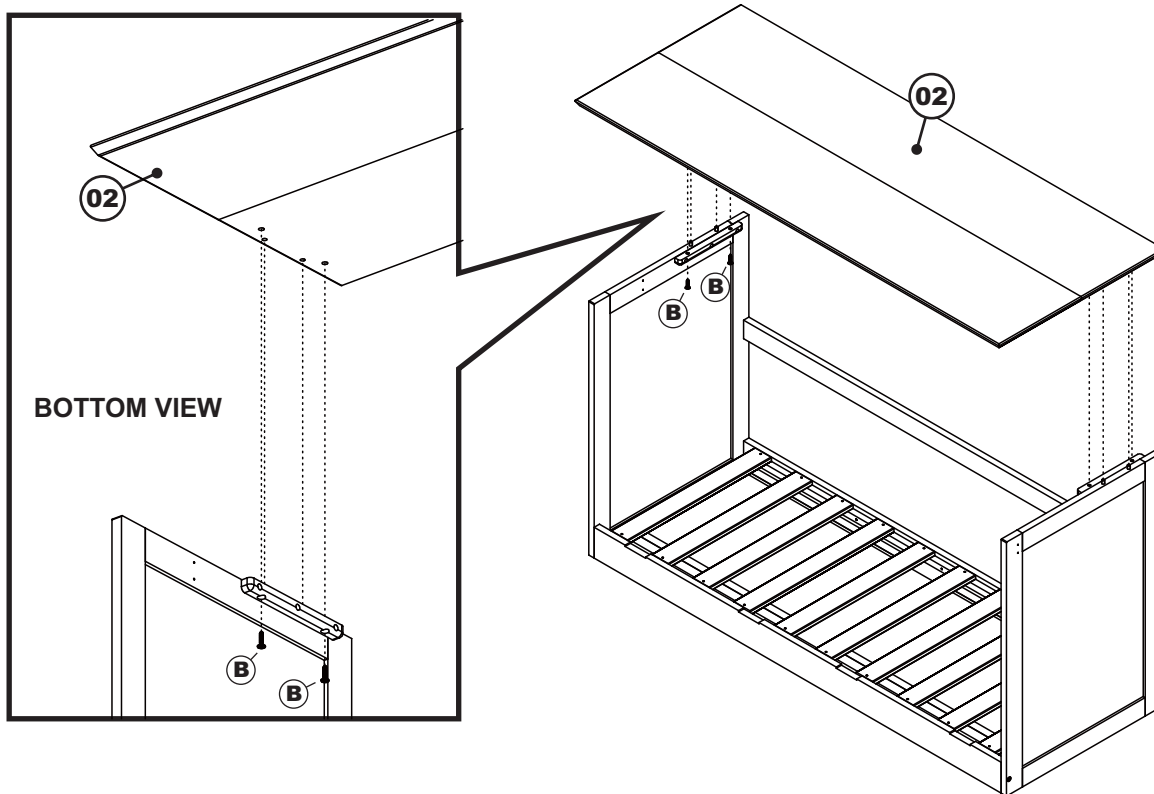

STEP 5



Attach door end rails (13), middle door rail (14), and middle door rail with hole (15) to the bottom door rail (08) as shown below using JCB (I) and barrel nut (F). Tighten with allen wrench (K).

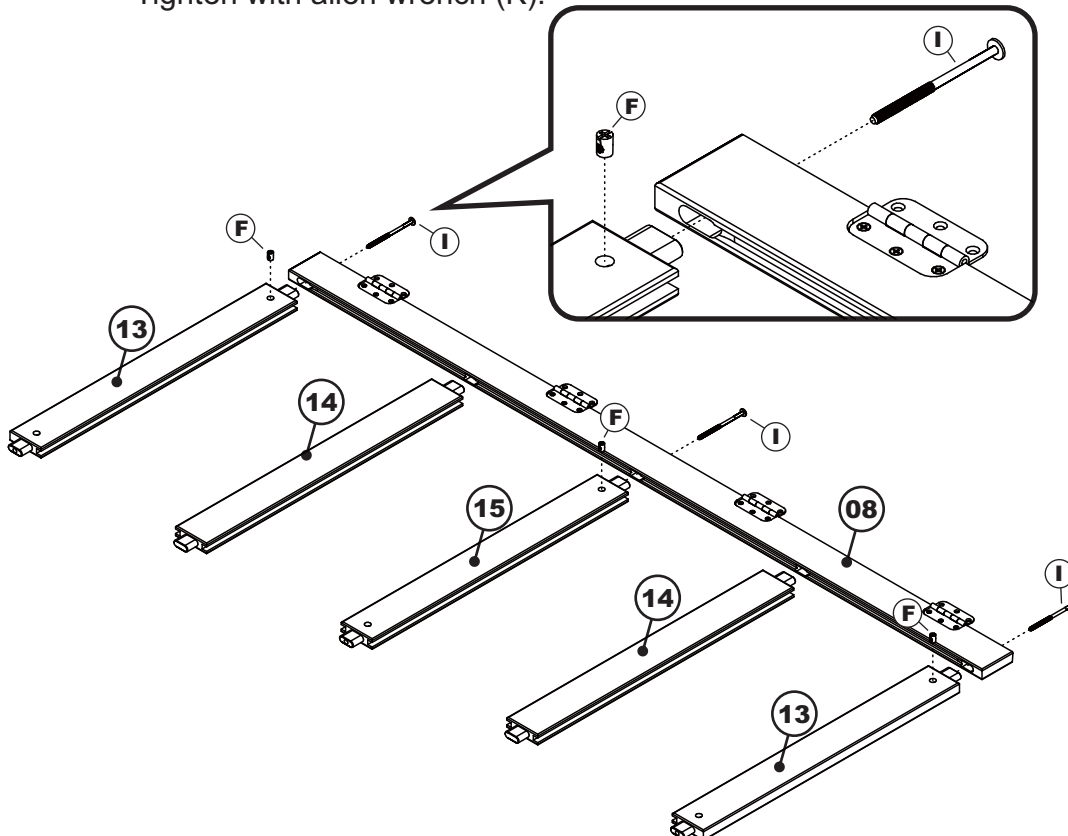

FULL > QUEEN

STEP 6



Insert door panels (18) into grooves of middle door rails (14) and (15). Attach top door rail (07) to the door assemblies as shown below using JCB (I) and barrel nut (F). Tighten with allen wrench (K).

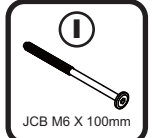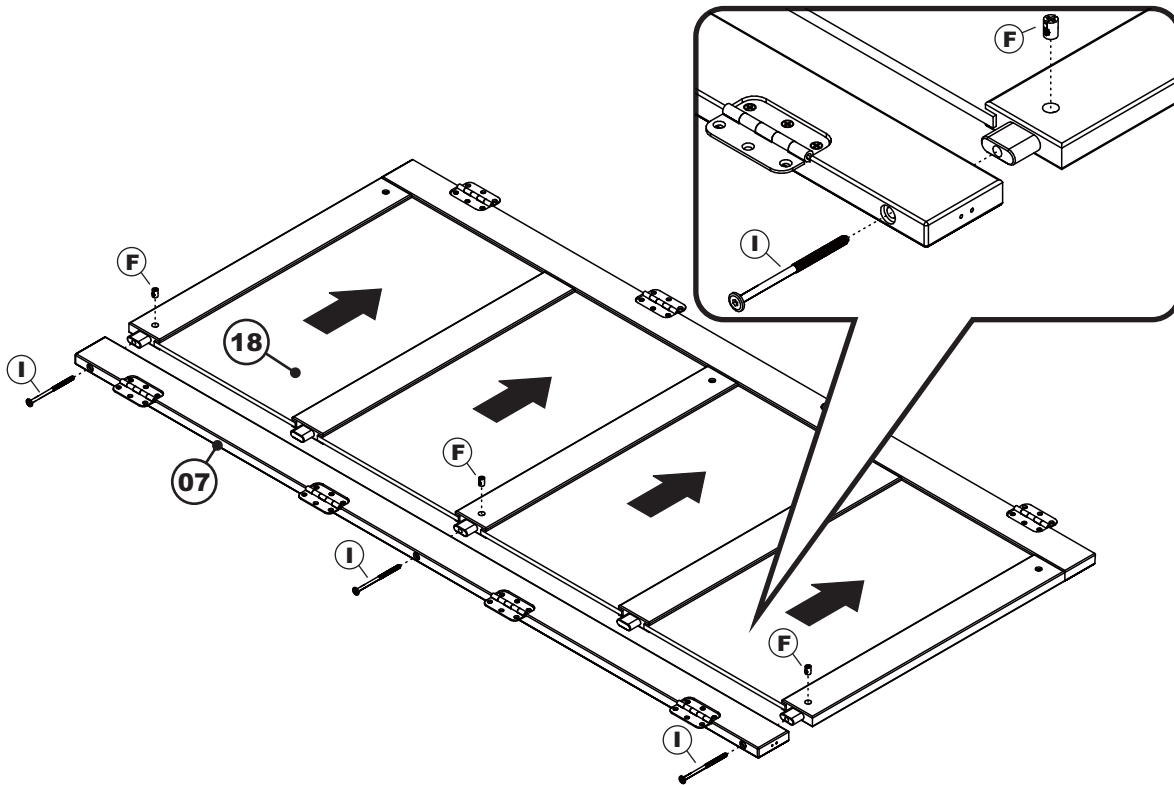

STEP 7

Attach side footboard connect rail (10) and footboard slats (16) to the bottom footboard rail (11) as shown below using JCB (I) and barrel nut (F). Tighten with allen wrench (K).


Be sure the pilot holes for safety chain face up.

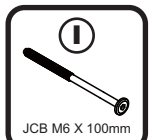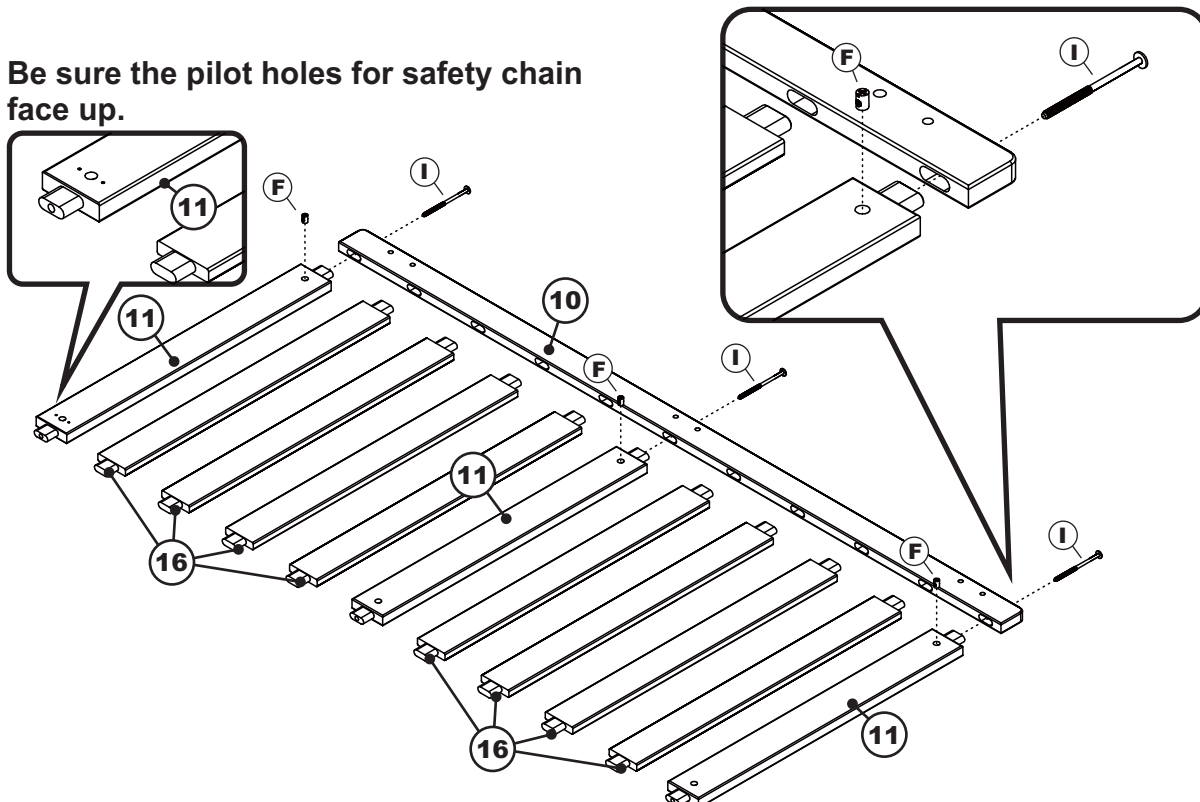

FULL > QUEEN


STEP 8

Attach top footboard rail (09) to the bottom footboard rail assemblies as shown below using JCB (I) and barrel nut (F). Tighten with allen wrench (K).

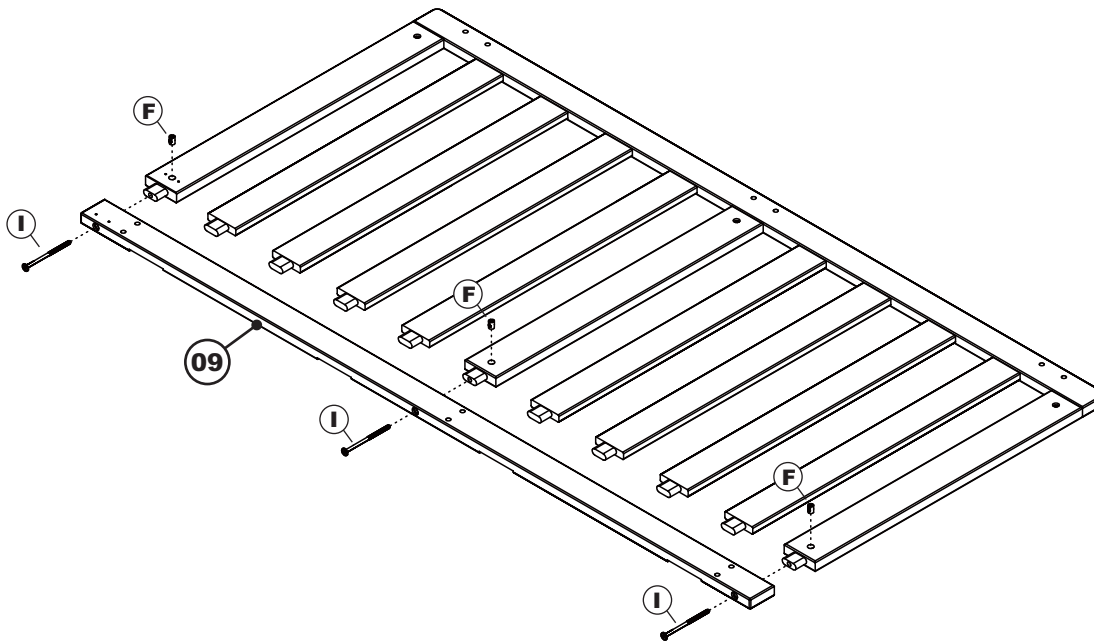

STEP 9




Attach top legs (17) and bottom legs (12) to the footboard rail assemblies as shown below using JCB (C). Tighten with allen wrench (K).

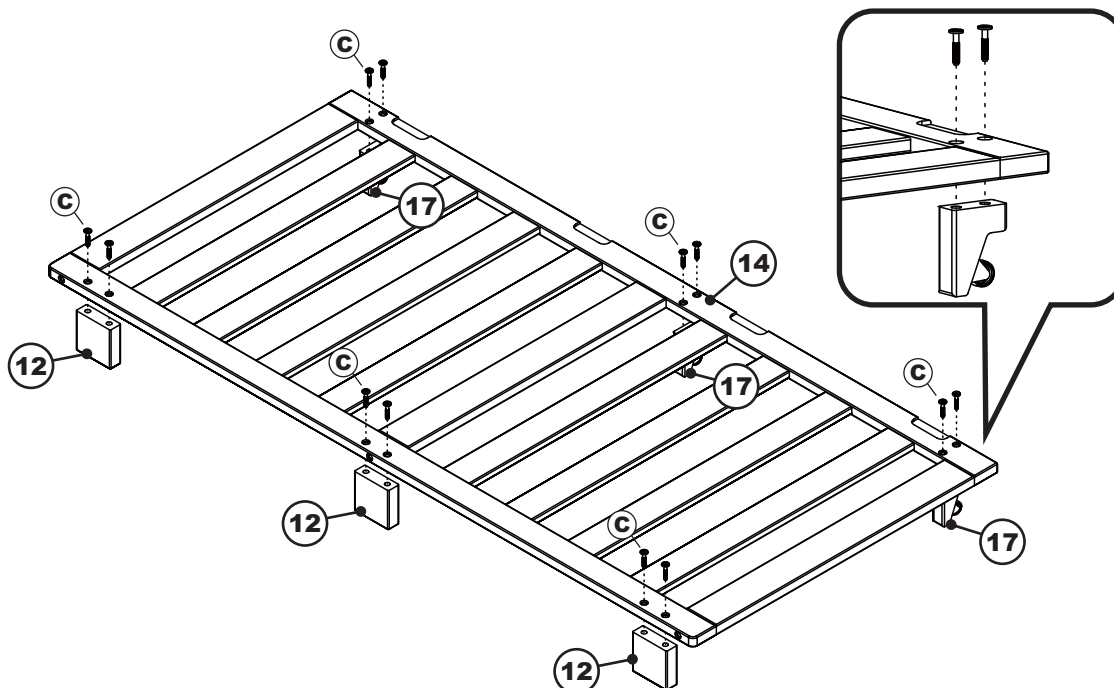


FULL > QUEEN

STEP 10

Attach Footboard rail assemblies to door assemblies as shown below using wood screw (D). Tighten with phillips head screwdriver (customer supplied).
Install spring clip (J) part (a) to the pilot holes on both sides of door panel assembly. Tighten with phillips head screwdriver.

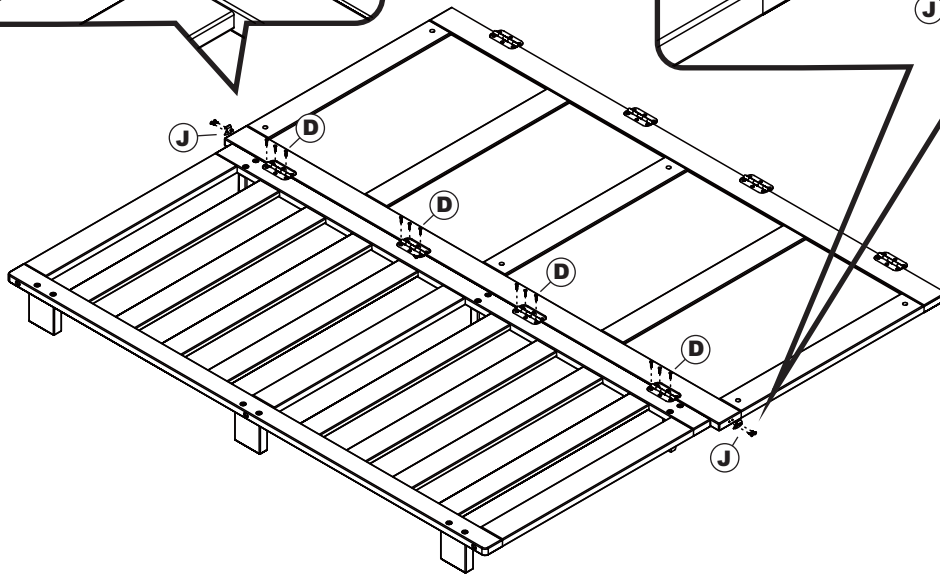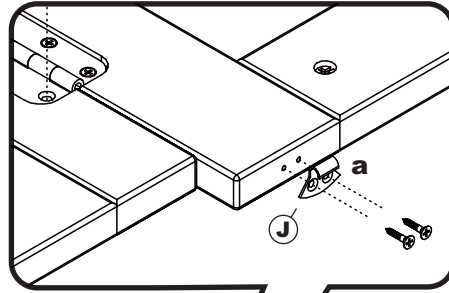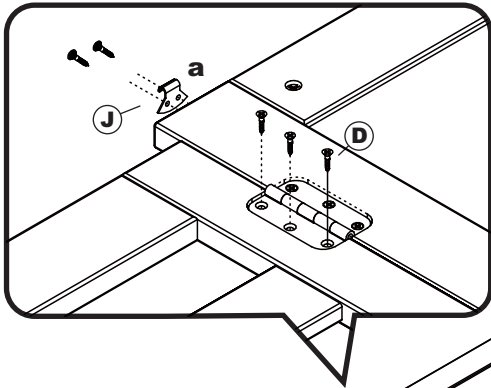

*Feet towards ground

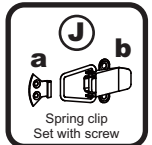





STEP 11

Lay the door down flat as shown below. Attach door hinges to the front rail using wood screw (D). Tighten with phillips head screwdriver (customer supplied).

Note: Be sure to align door with side panels in this step.


Install spring clip (J) part (b) to side panels as shown below.

Tighten with phillips head screwdriver.

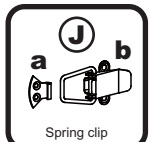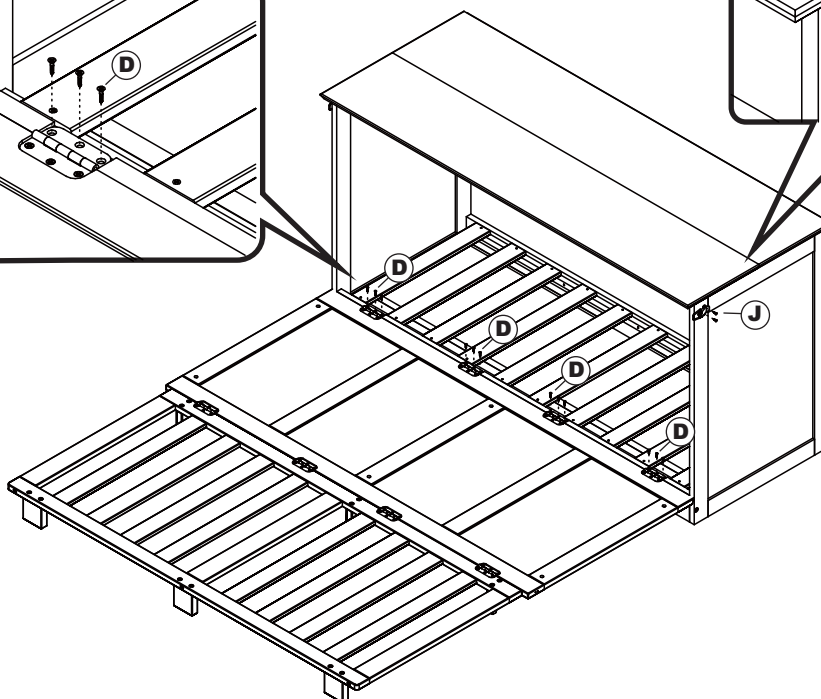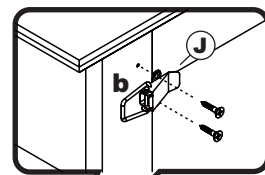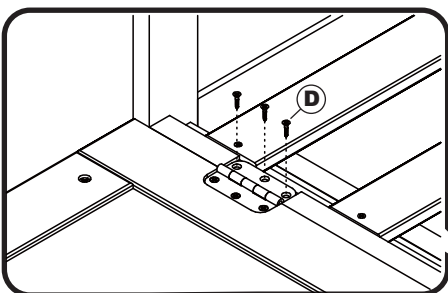


FULL > QUEEN

STEP 12 Lift the door and fold as shown below.

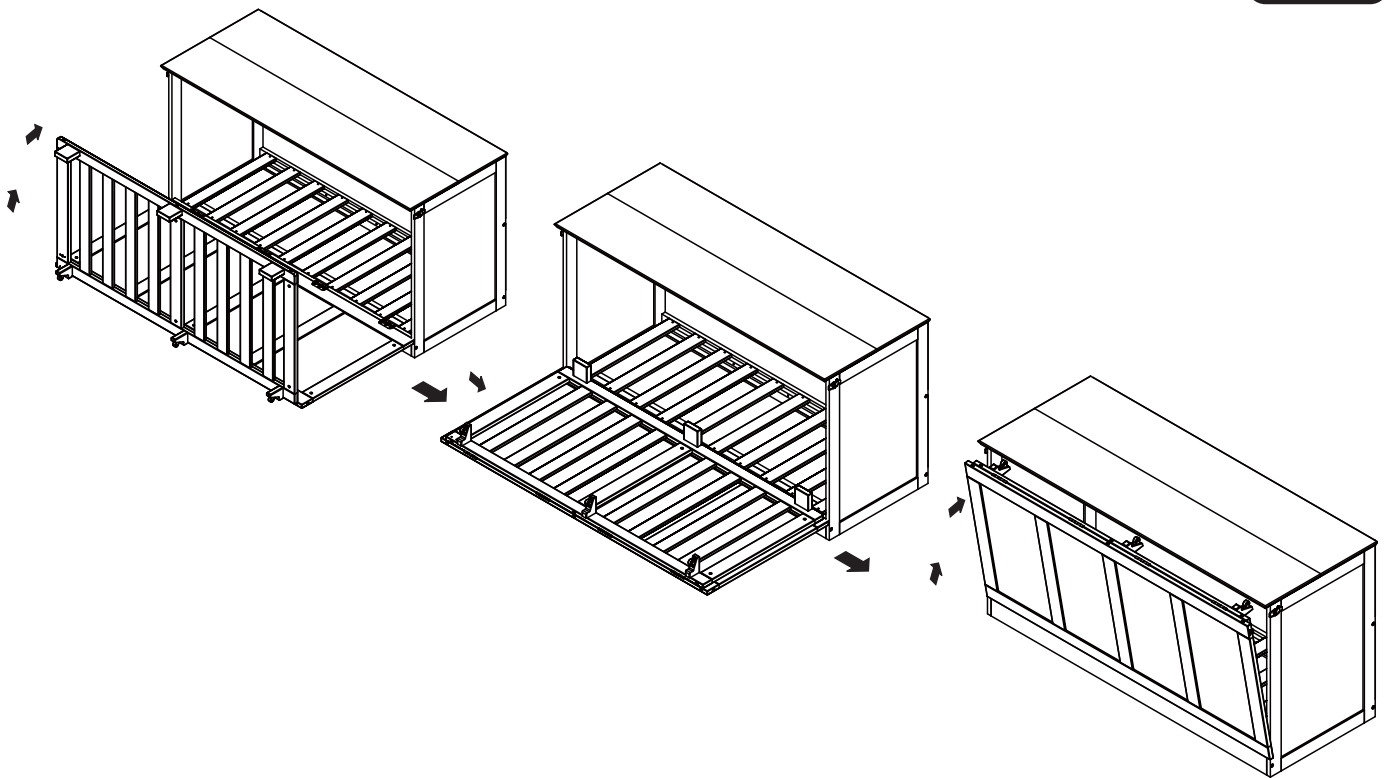


STEP 13 Hold the door closed and latch both sides as shown below using spring clip set (J).

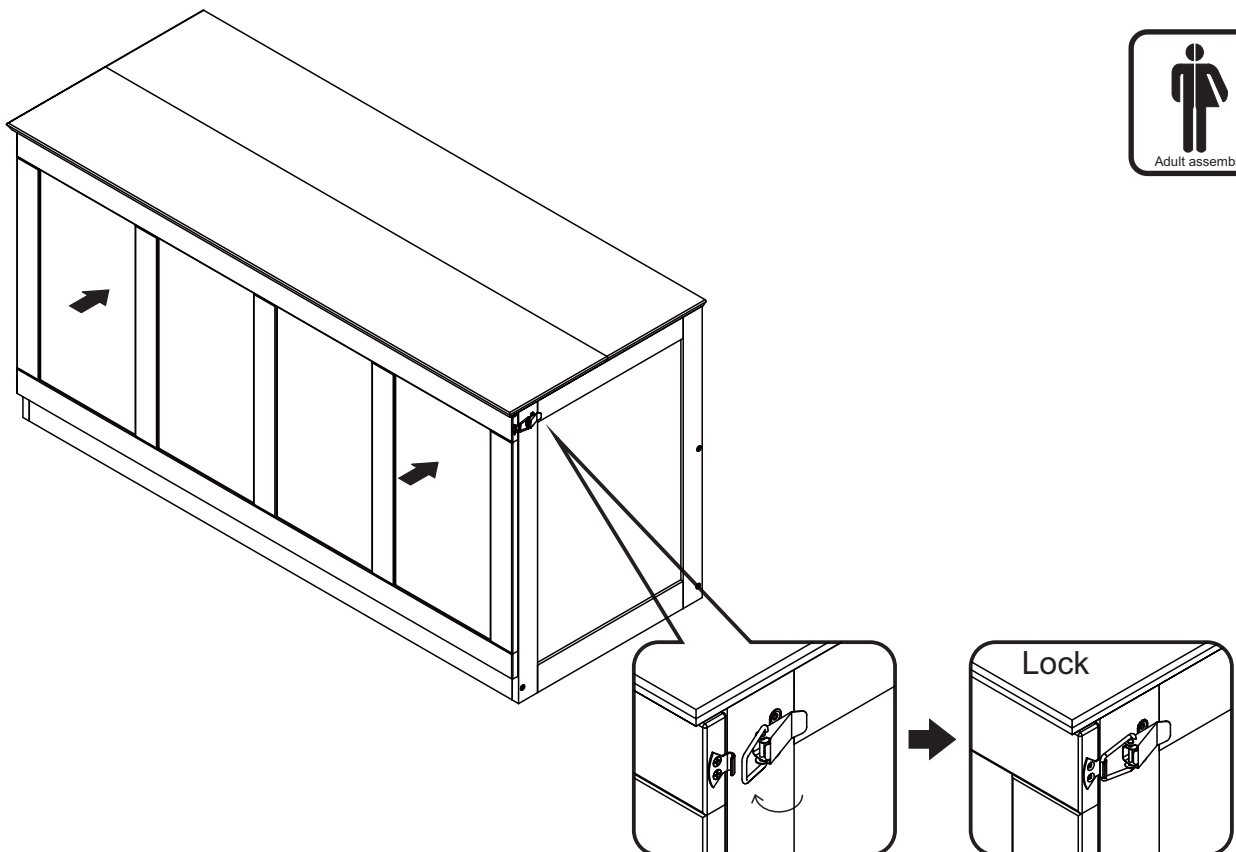


FULL > QUEEN

STEP 14 Attach back panels (03) to the back of cabinet as shown below using wood screw (G). Tighten with phillips head screwdriver (customer supplied).


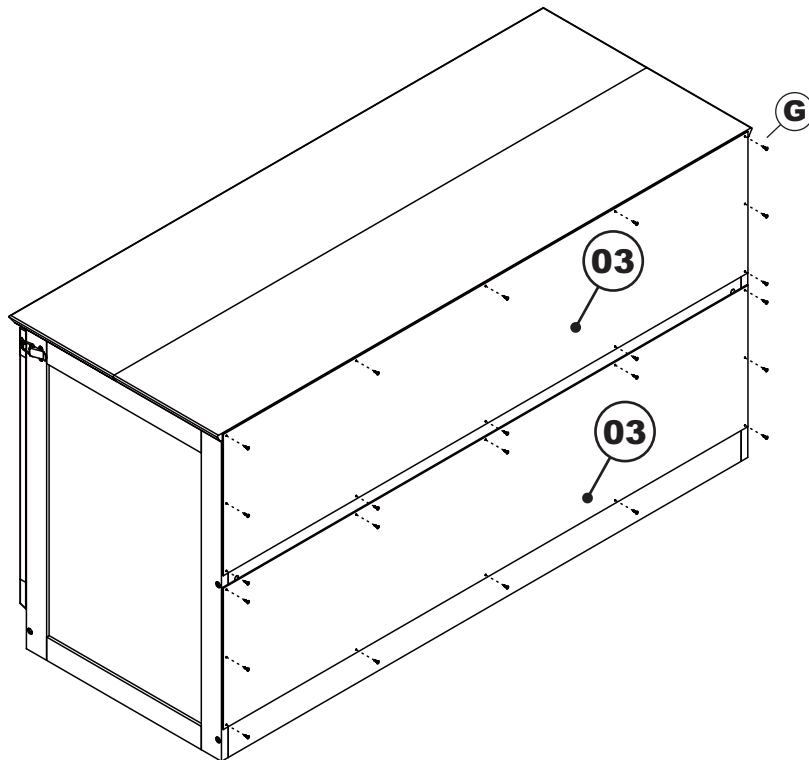


STEP 15 Unlatch the door and lower carefully, folding down as shown.

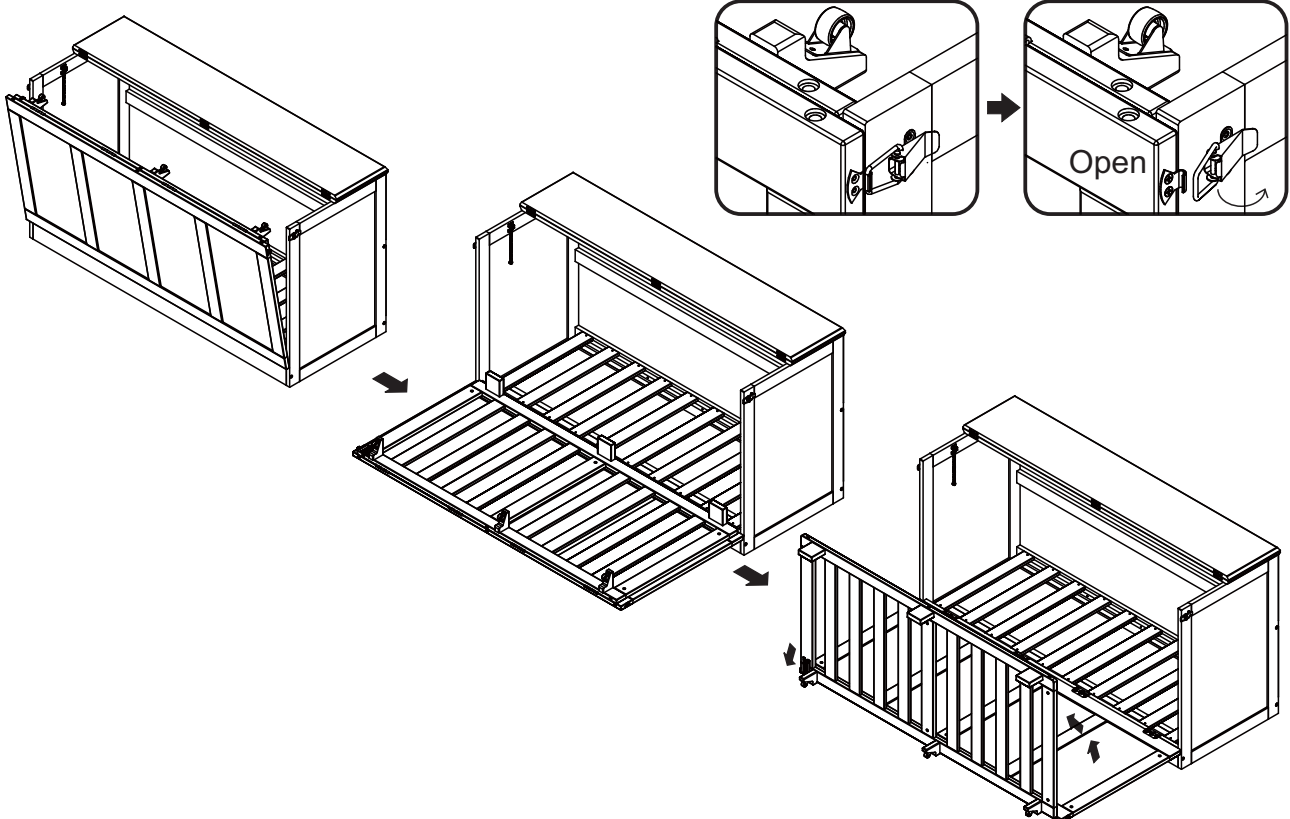

FULL > QUEEN

STEP 16 Install folding mattress (22) [sold separately] to the bed.

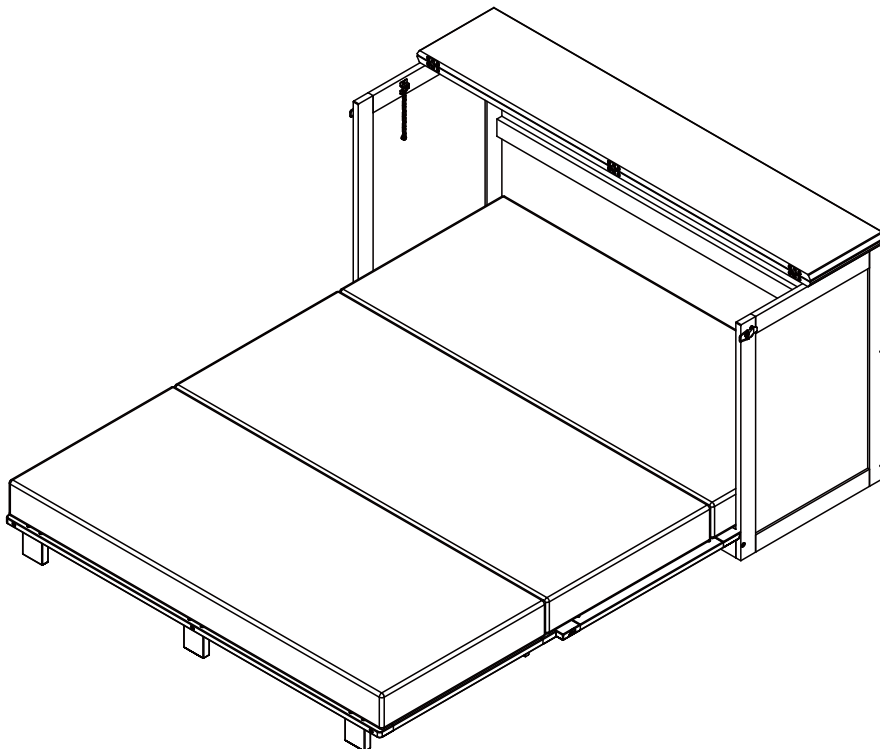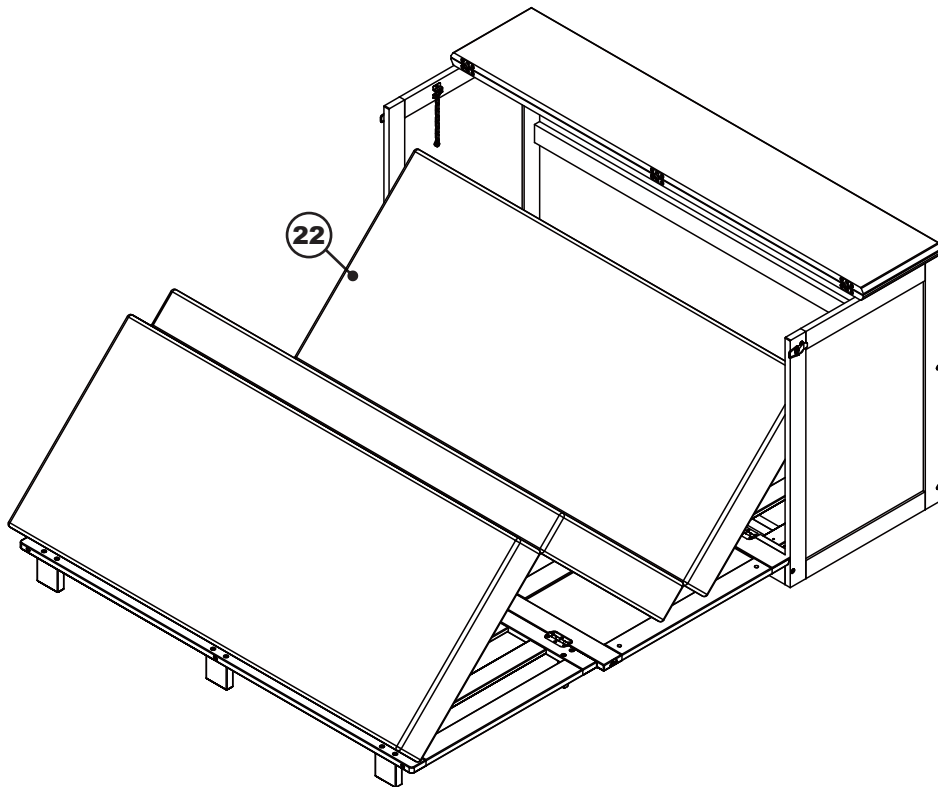

Congratulations!

Your murphy bed is now ready for use.

We recommend that you recheck that all screws are tight, and that all parts are secure before use to ensure lasting safety.