
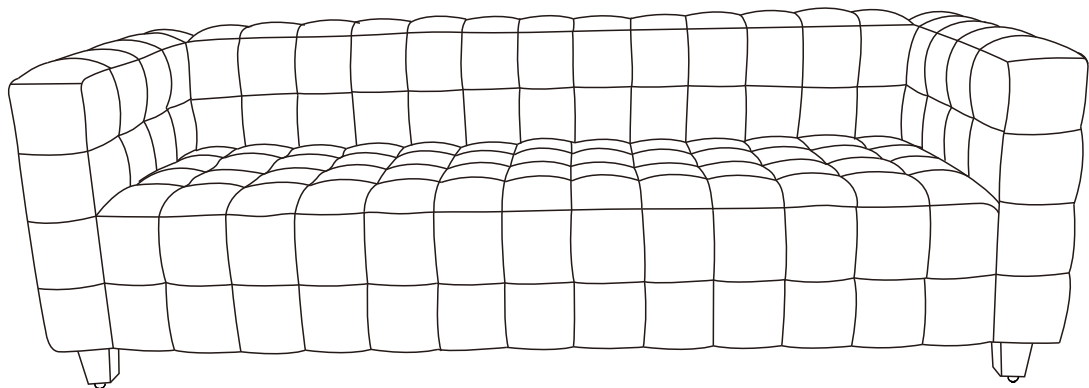
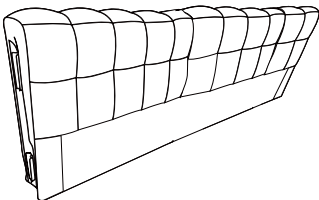

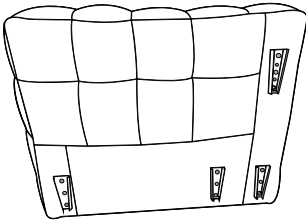
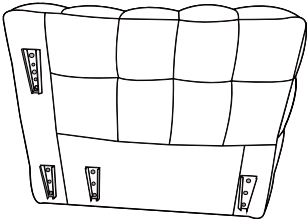


ASSEMBLY INSTRUCTIONS



4726-S-DKOG/BLK/BRN/WH

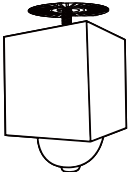



spare parts 1

A	 BACK x1	D	 SEAT x1
B	 L-ARMS x1	E	 R-ARMS x1
C	 WOOD LEG x4	F	 x1

BOX-1


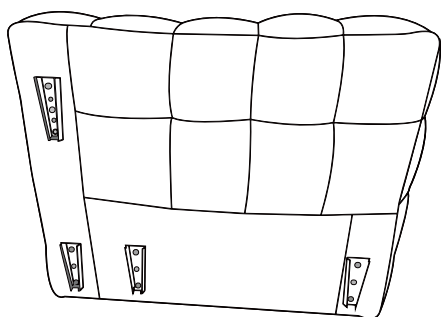
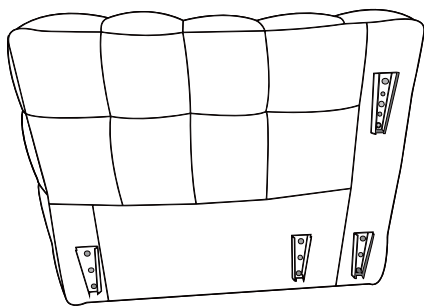


BOX-2

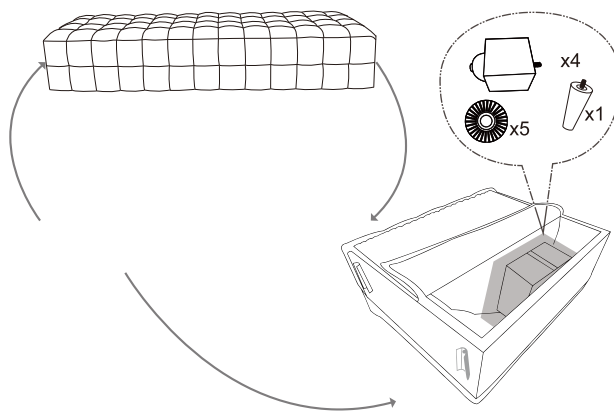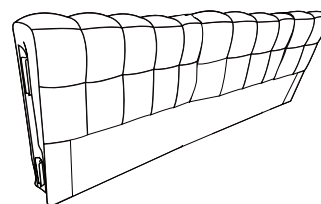


open the box at the bottom of the legs


step 1:

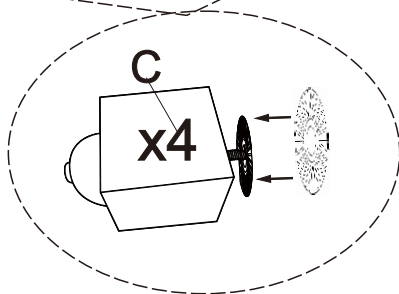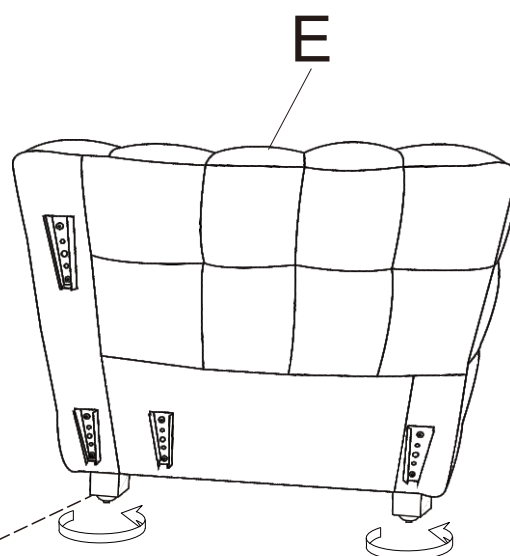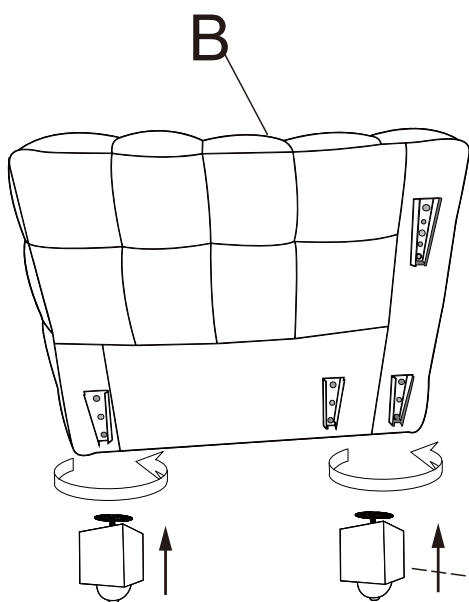

step 2:

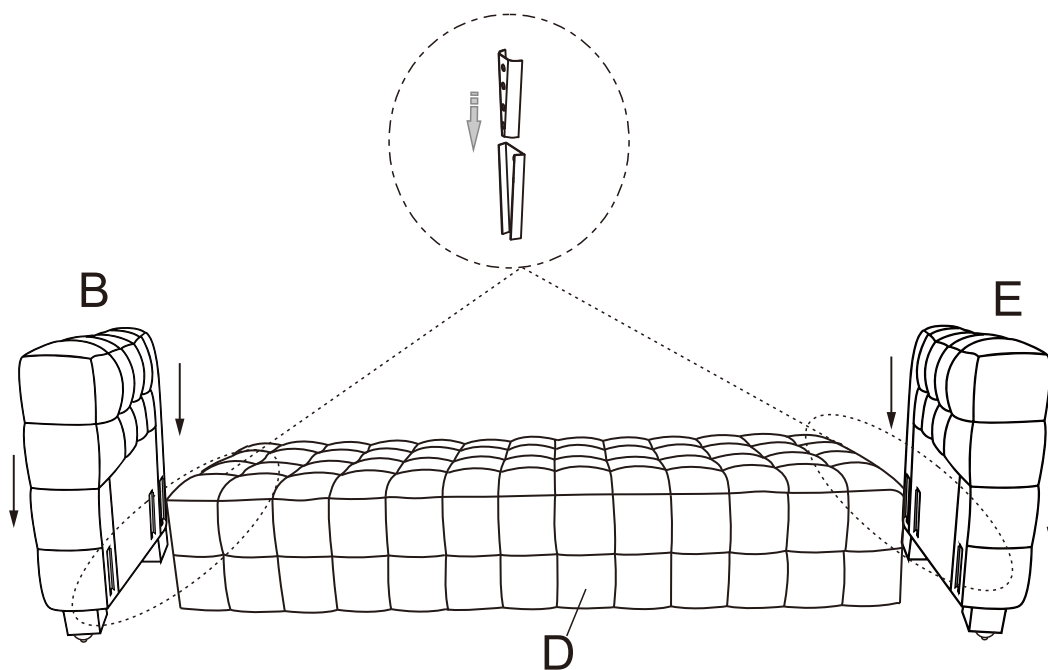

step 3:

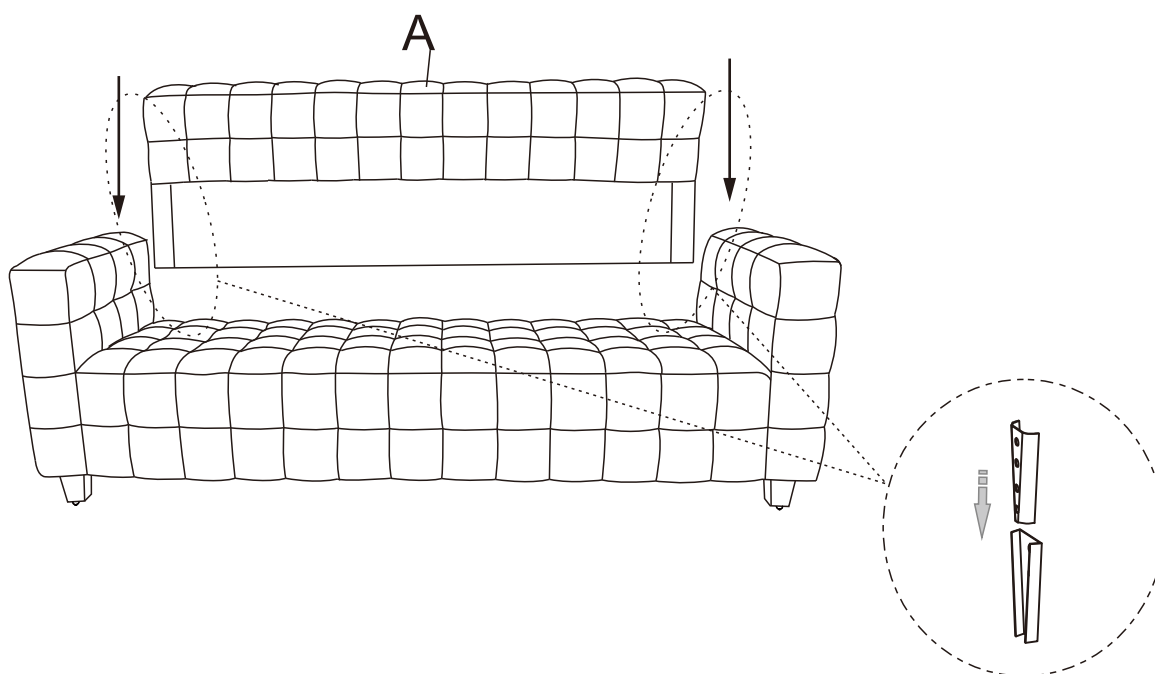

step 4:

