

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THOROUGHLY PRIOR TO ASSEMBLY

THIS FIXTURE SHOULD TAKE APPROXIMATELY 15 MINUTES TO ASSEMBLY

MAKE SURE ALL PARTS ARE FIRMLY TIGHTEND

TOOLS: YOU WILL NEED THE FOILLLOWING TOOLS OR EQUIPMENT: LADDER, SCREWDRIVER, ADJUSTRABLE WRENCH, WIRE CUTTERS.


UNPACK THE FIXTURE

TO PROTECT THE FINISH, PLACE ALL THE PARTS ON A SOFT SURFACE.

YOU SOULD HAVE THE FOLLOWING:

MOUNTING HARDWARE PACKAGE:

SOME SCREWS IN A PLASTIC BAG, WIRE CONNECTORS, THREADED NIPPLED, HEX NUTS.

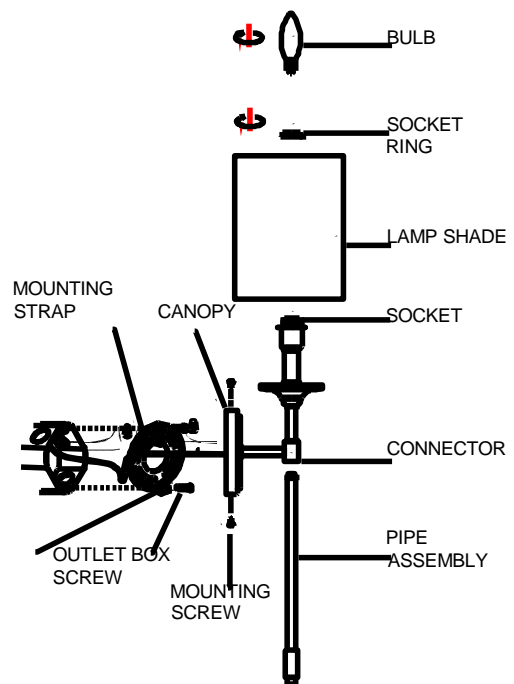

CAUTION

TO AVOID POSSIBLE ELECTRICAL SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN FUSE PANEL, IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRSTLY, TURN THE FIXTURE OFF, NEXT TURN THE WALL SWITCH OFF, FINALLY GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIOANL AND LOCAL ELECTRIC CODES.

** IF YOU ARE NOT FAMILIAR WITH WIRING, YOU SHOULD CONSULT A QUALIFIED ELECTRICIAN.

*** THIS FIXTURE IS INTENDED TO BE MOUNTED TO A UL LISTED OUTLET BOX CAPABLE OF SUPPORTING THE FIXTURE.

1. ATTACH MOUNTING STRAP TO OUTLET BOX WITH TWO OUTLET BOX SCREWS THROUGH SLOT HOLES AT EACH END OF MOUNTING STRAP. (**NOTE:** THE TWO RIBS SHOULD BE IN VERTICAL POSITION AFTER INSTALLING).
2. THREAD PIPE ASSEMBLY TO CONNECTOR
3. CONNECT THE WHITE OR WHITE FIXTURE WIRE TO THE WHITE SUPPLY WIRE IN THE OUTLET BOX USING THE TWIST-ON WIRE CONNECTORS PROVIDED, CONNECT THE BLACK FIXTURE WIRE TO THE BLACK SUPPLY WIRE IN THE SAME MANNER. INSTALL THE FIXTURE GROUND WIRE UNDER THE GREEN GROUND SCREW ON THE MOUNTING PLATE THEN CONNECT THE FIXTURE GROUND WIRE TO THE SUPPLY GROUND WIRE IN THE OUTLET BOX USING THE TWIS-ON WIRE CONNECTOR PROVIDED.
4. TUCK THE WIRES CAREFULLY INSIDE THE OUTLET BOX. SPREADTHE ELECTRICAL SPLICES SO THAT THE BLACK WIRES ON ONE SIDE OF THE OUTLET BOX AND THE WHITE WIRES ARE ON THE OTHER SIDE.
5. RAISE CANOPY AGAINST WALL AND USE MOUNTING SCREWS TO SECURE CANOPY TO THE RIBS ON MOUNTING STRAP.
6. PLACE LAMP SHADE THROUGH SOCKET AND SECURE THE LAMP SHADE TO SOCKET WITH SOCKET RING. INSTALL BULB TO SOCKET.
7. RESTORE POWER, YOUR NEW FIXTURE IS NOW READY FOR USE.