

ASSEMBLY INSTRUCTIONS

UNPACK ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP PER THE SKETCH BELOW.

** THESE INSTRUCTIONS ARE PROVIDED FOR YOUR SAFETY PURPOSE. VERY IMPORTANT THAT THEY ARE READ COMPLETELY BEFORE BEGINNING THE INSTALLATION.*


** DIRECT WIRE FIXTURES:STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.*

SHUT OFF THE MAIN ELECTRICAL SUPPLY AT FUSE BOX/CIRCUIT BREAKER.

1. AFFIX MOUNTING STRIP (A) TO JUNCTION BOX WITH MOUNTING SCREW (B).
2. PUT THE WIRES THROUGH THE CANOPY (D)AND MOUNTING STRIP (A) AND MAKE WIRE CONNECTIONS:
CONNECT THE GREEN GROUND WIRE "G" TO THE SUPPLY WIRE, CATHODE WIRE "N" IN WHITE TO THE SUPPLY WIRE, ANODE WIRE "L" IN BLACK TO THE SUPPLY WIRE IN THE JUNCTION BOX AS ILLUSTRATED WITH WIRE NUTS.
3. ADJUST THE LENGTH OF THE STEEL ROPE (F) BY PUSHING ON THE KNOB (D) TO GET DESIRED LIGHTING HEIGHT.
4. ATTACH CANOPY (D) TO THE MOUNRING STRIP (A) AND TIGHTEN WITH SIDE SCREWS (C).
5. SCREW POLE (F) TO METAL DECO BALL (G).
6. SCREW THE SOCKET (H) TO META DECO BALL (G).
7. INSTALL RECOMMENDED LIGHT BULB (NOT INCLUDED IN THIS PACKAGE).

**Use Max60W Type A bulb
(bulbs not included)**

TURN OF POWER AND ENJOY!

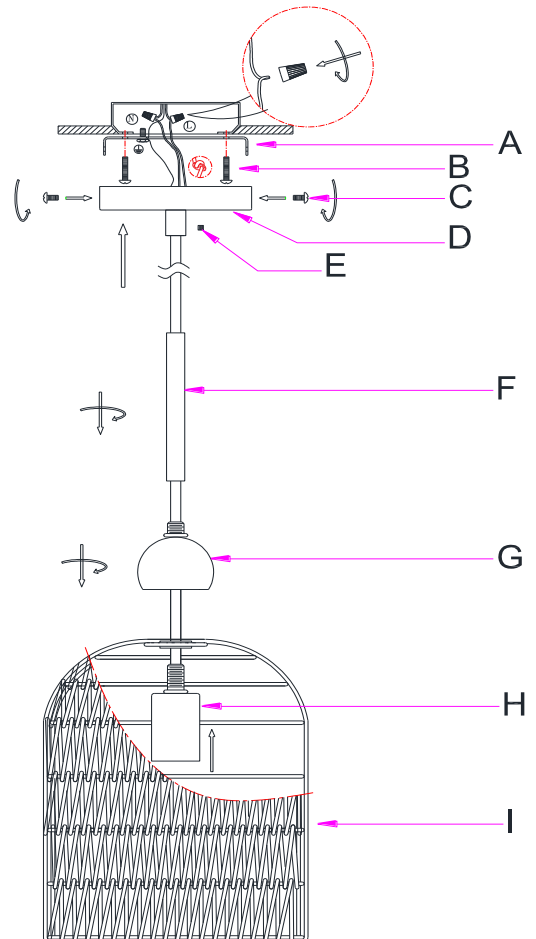

TO REPLACE THE BULB:

TURN OFF POWER (UNPLUG FROM THE WALL OUTLET) BEFORE REPLACING THE BULB(S), MAKING SURE THE BULB(S) HAVE SUFFICIENT TIME TO COOL DOWN.

DO NOT SUBJECT THIS FIXTURE TO ANY SHOCK WHILE LIT AS SHATTERING OF BULBS MAY RESULT .

CARE INSTRUCTIONS:

TO CLEAN, USE A SOFT CLOTH ONLY. DO NOT USE ANY CHEMICAL OR ABRASIVE CLEANERS.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.