



ASSEMBLY INSTRUCTION

WF300330

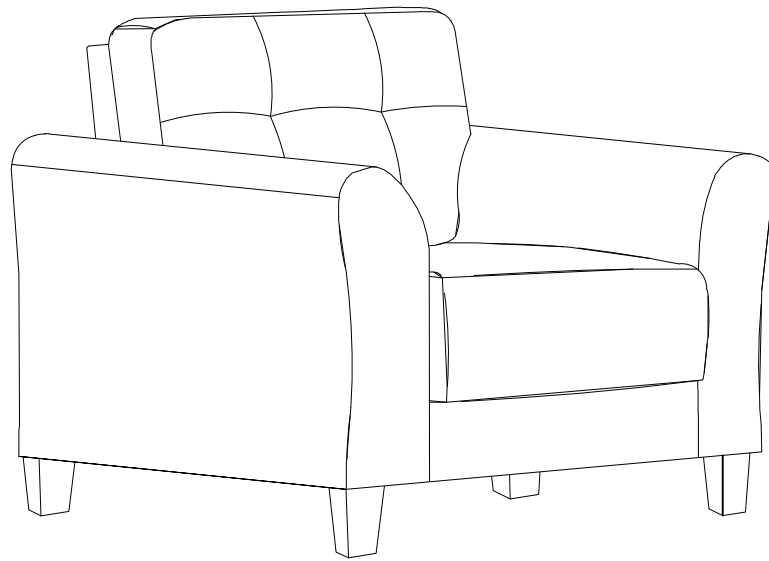


PARTS

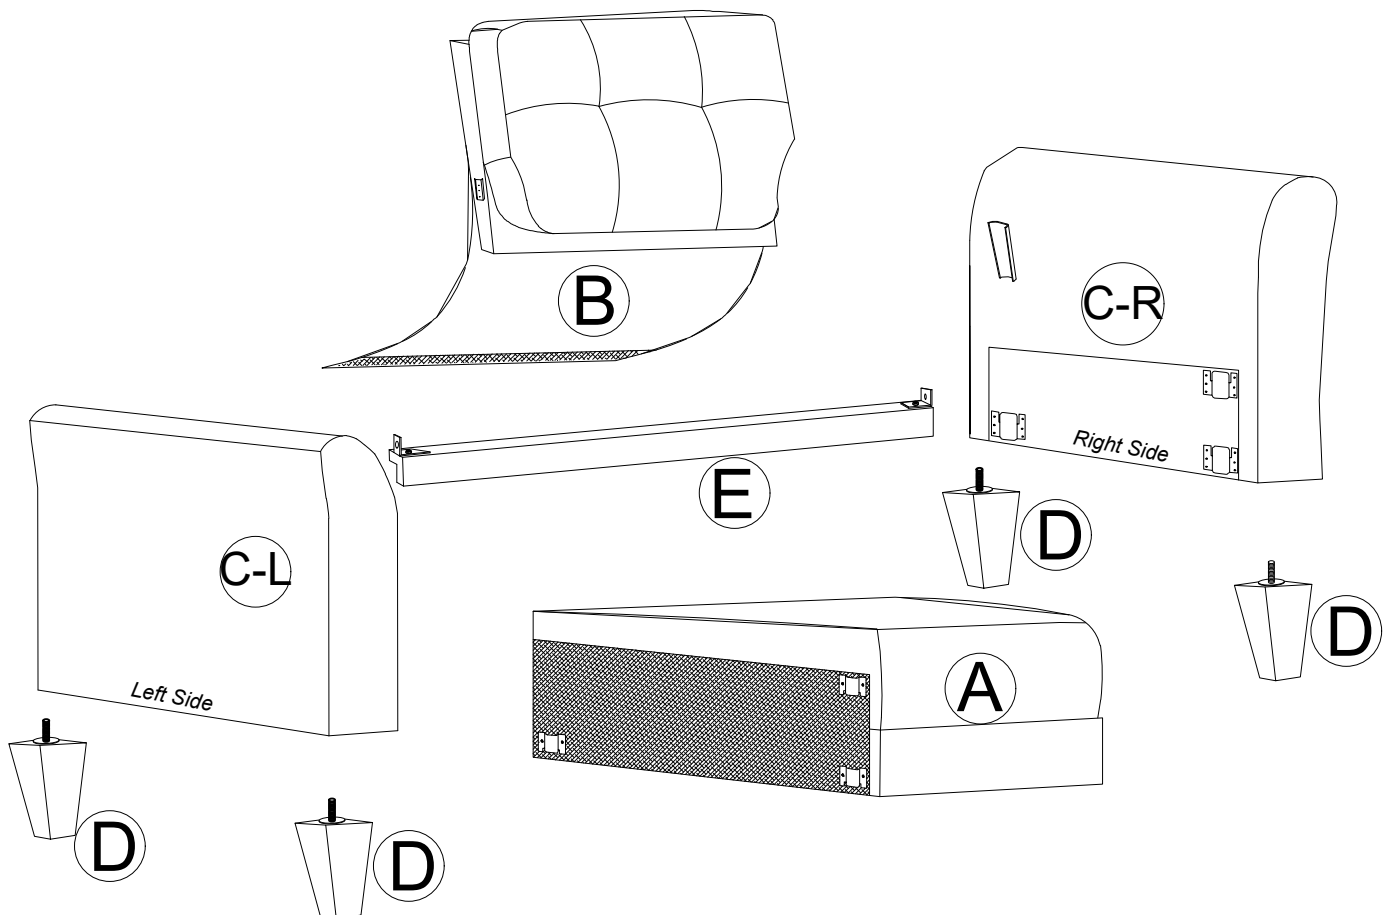


WF300330 - COMPONENT LIST

A

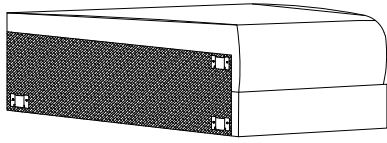

SEAT BODY
QTY: 1PC


B

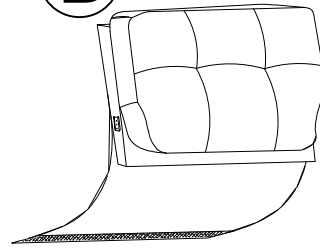

BACK REST
QTY: 1PC


(In the storage underneath of seat body)

C-L

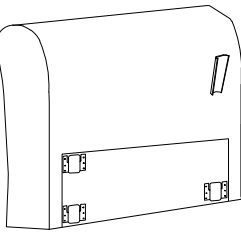


LEFT ARM
QTY: 1PC

C-R

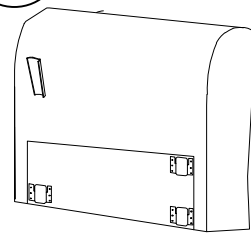


RIGHT ARM
QTY: 1PC

D

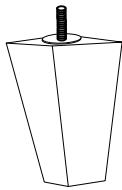

PLASTIC LEGS
QTY: 4PCS


E



METAL SUPPORT
QTY: 1PC


HARDWARE (in box WF300330)

F



ALLEN KEY
QTY: 1PC

G

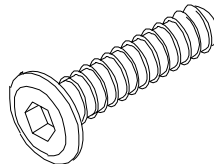

BOLT Ø1/4"x20MM
QTY: 2PCS


H



FLAT WASHER
QTY: 2PCS


Step 1:

Remove the hardware and the leg box from packet.
Place all parts on a clean, smooth surface.

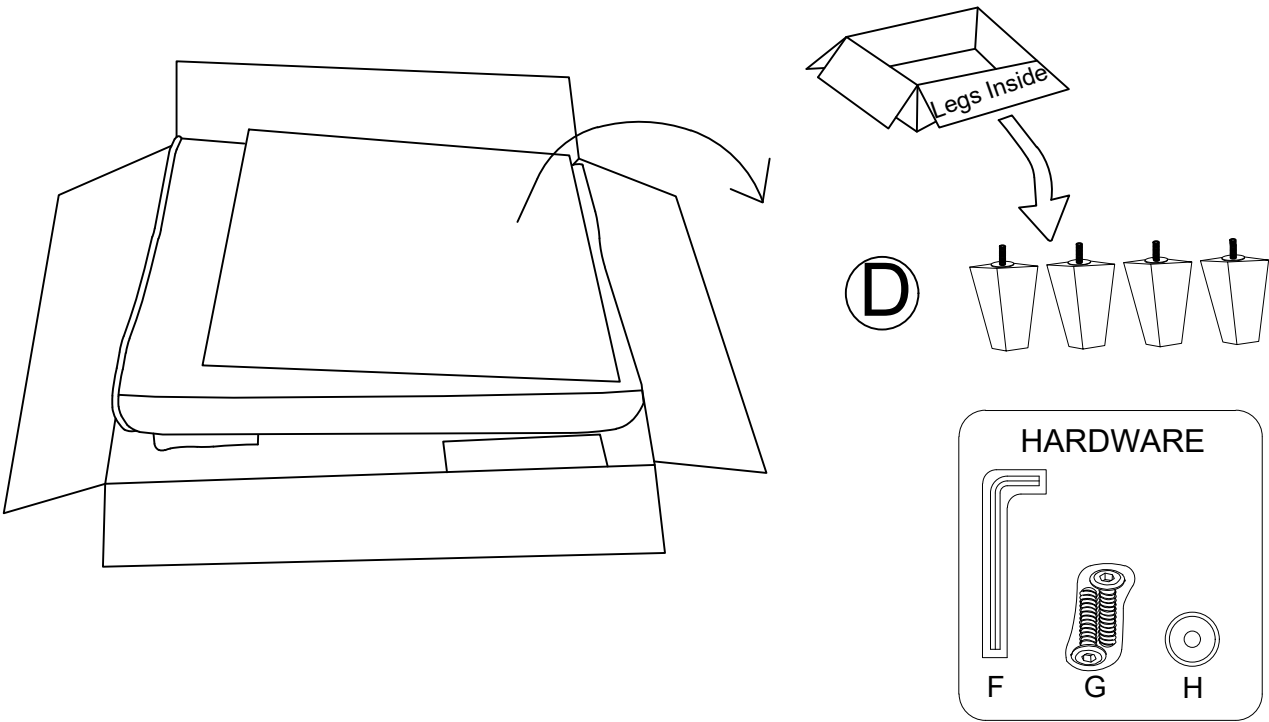


Step 2:

Manually Fit legs D x 2 to C-R/C-L , as shown.

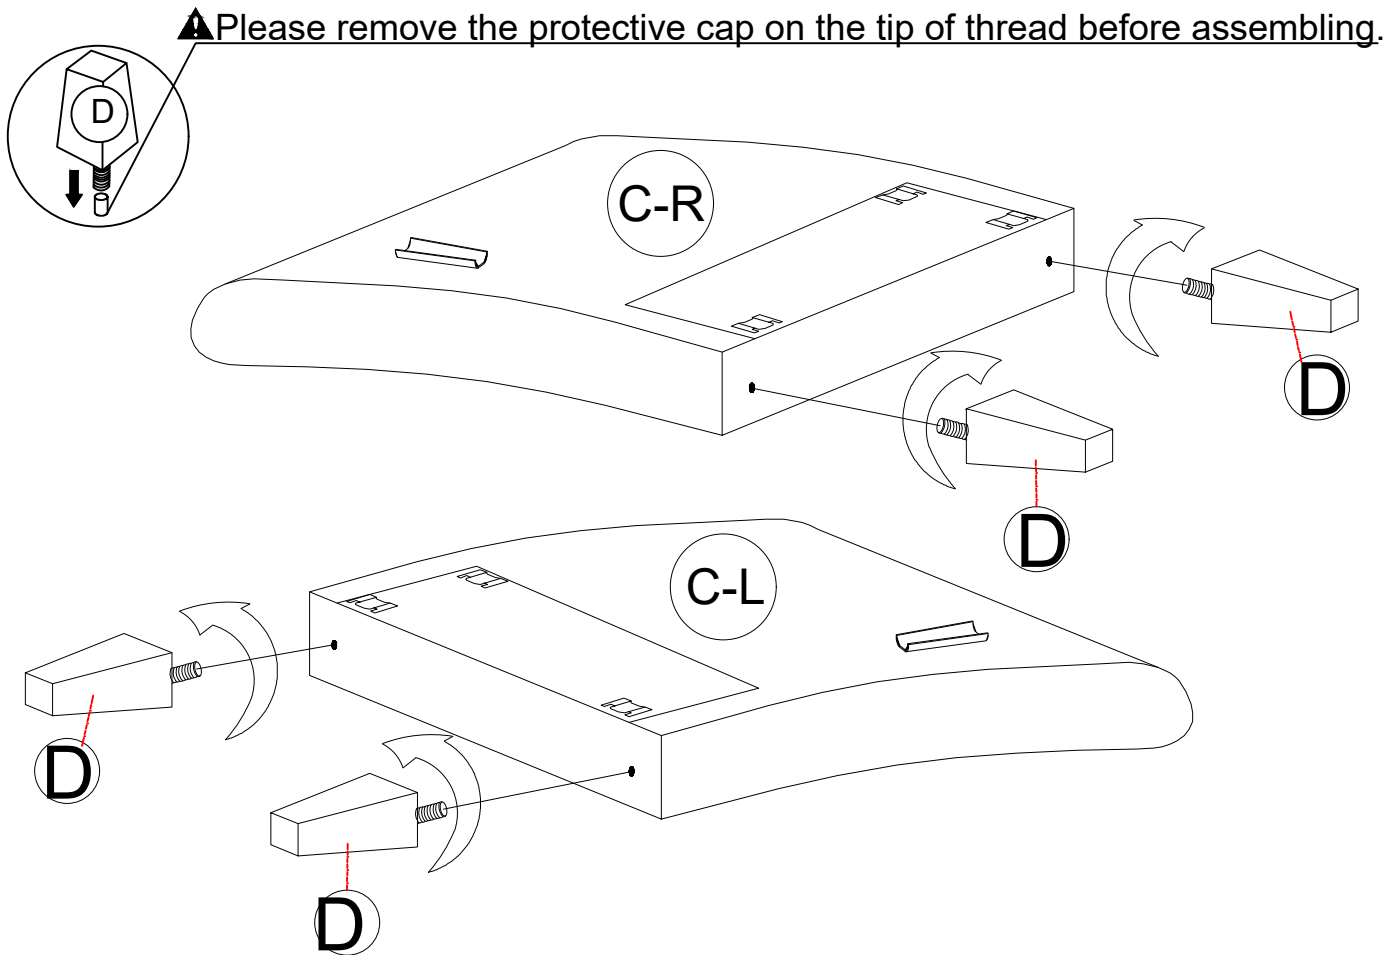


Step 3:

Attach C-R/C-L to A by inserting C-R/C-L into the metal glides on A. Push C-R/C-L with A downward force to secure it into place.

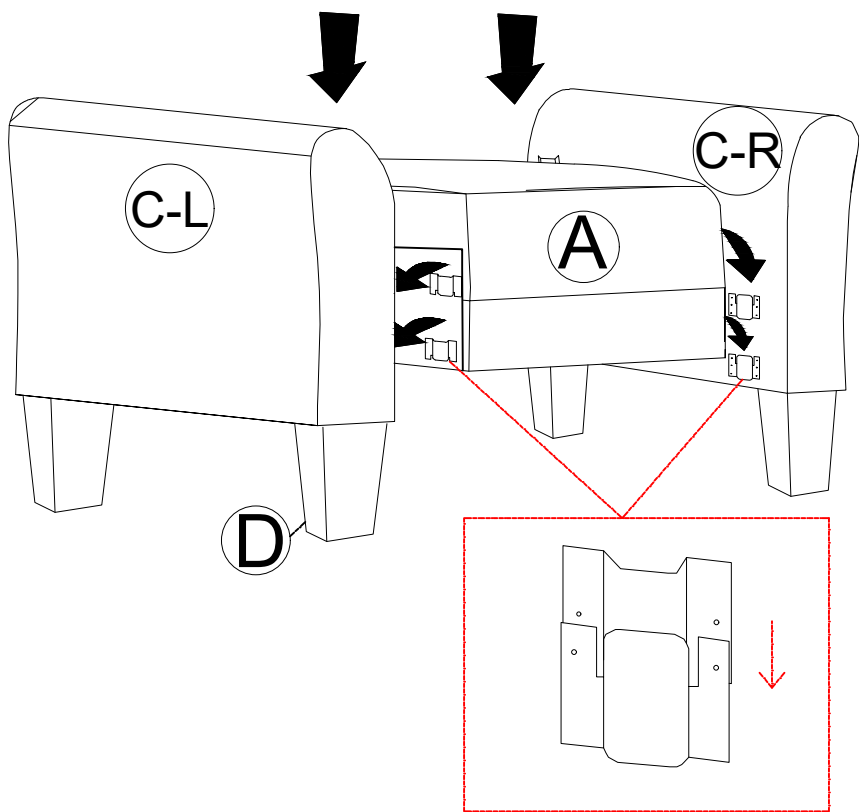


Step 4:

Attach B to C-R/C-L by inserting B into the metal glides on C-R/C-L. Push B with C-R/C-L downward force to secure it into place.

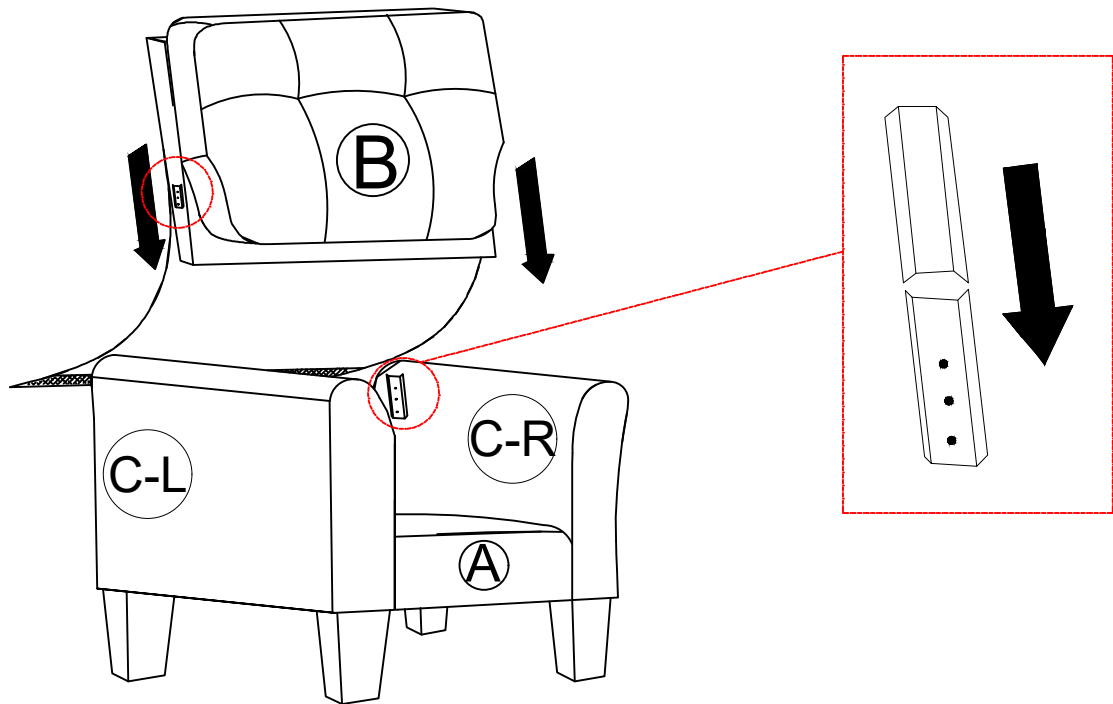


Step 5:

Turn to the back, fix E to the back rest by using F, G and H.

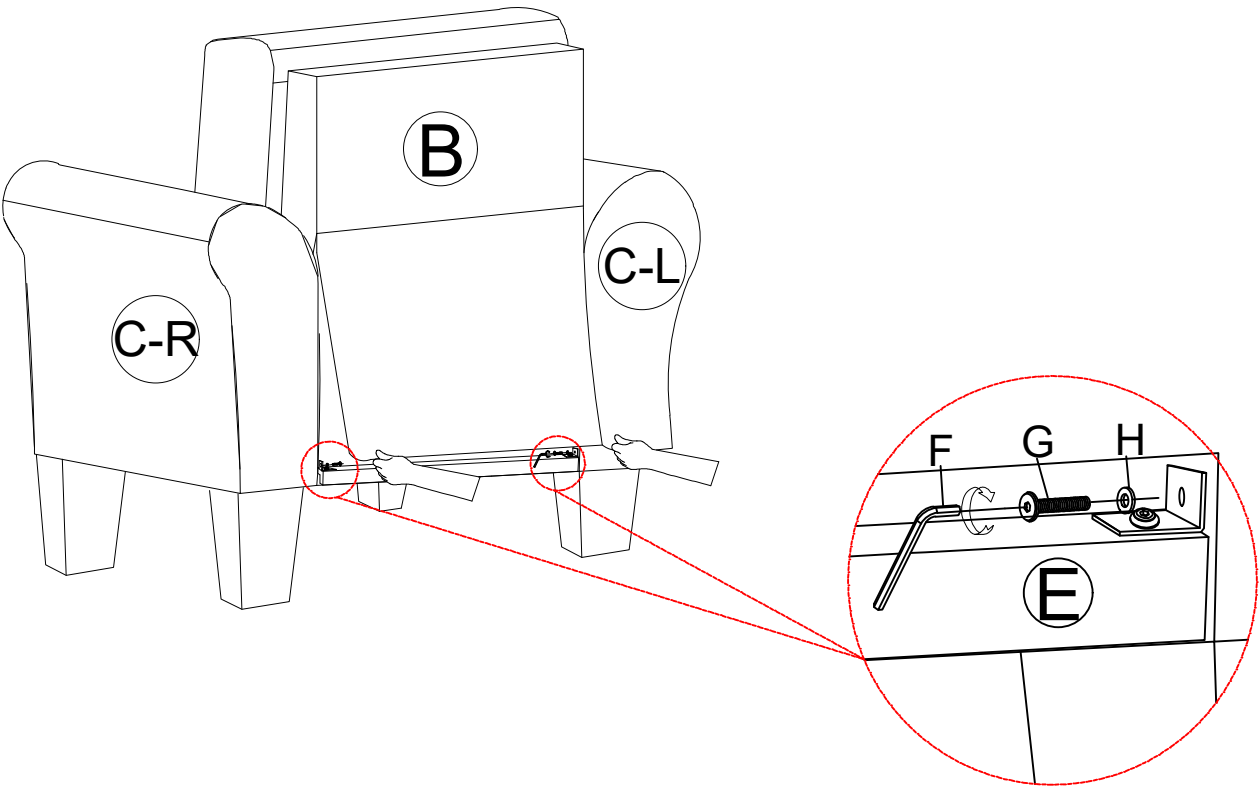


Step 6:

Stretch and pull down rear cover evenly before securing velcro strip to seat base.

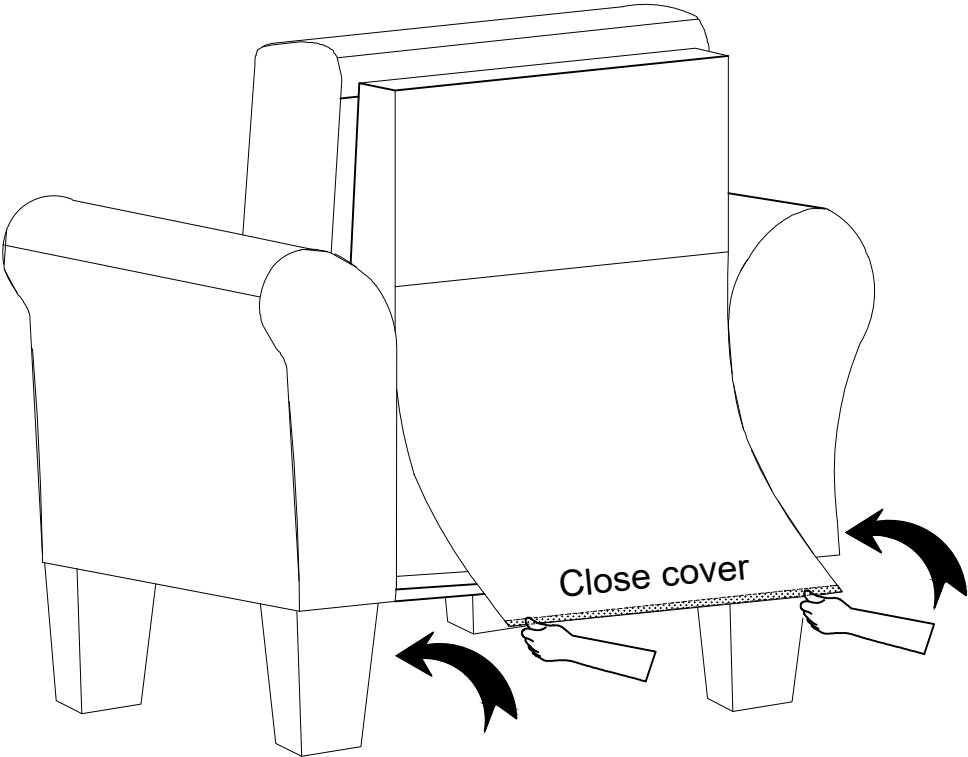

BACK VIEW

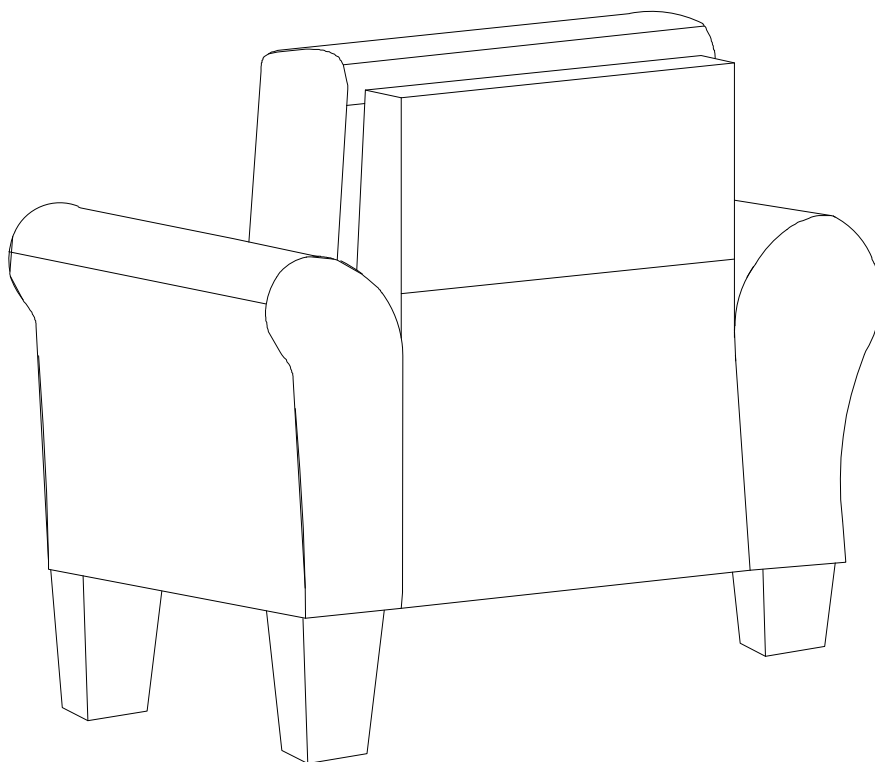

FRONT VIEW

