
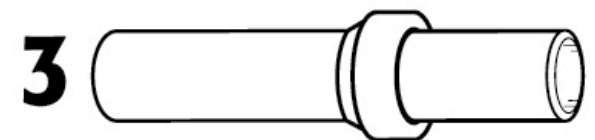


INSTA-PLUMB™

BY KEENEY

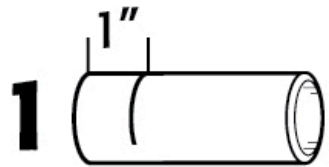

-
1. Mark a line 1" from end of tube
 2. Firmly push tubes together until mark is reached