

## CARE AND MAINTENANCE

---

Wipe clean with a soft cloth dampened in water and a mild soapy solution. Wipe dry with a clean and dry cloth.

If there are any questions relating to defects, missing parts, assembly issues or replacements, please send a detailed email to [hello@happimess.com](mailto:hello@happimess.com)

## NOTICE

---

\* Please make sure that you have all parts indicated before you begin assembly of this item.

\* This item should be assembled on a soft surface to prevent scratching the finish during assembly.

\* This item may require periodic tightening.

---

Item # : MSH1002

Product Dimensions : W23.6" x D13.8" x H72"

---

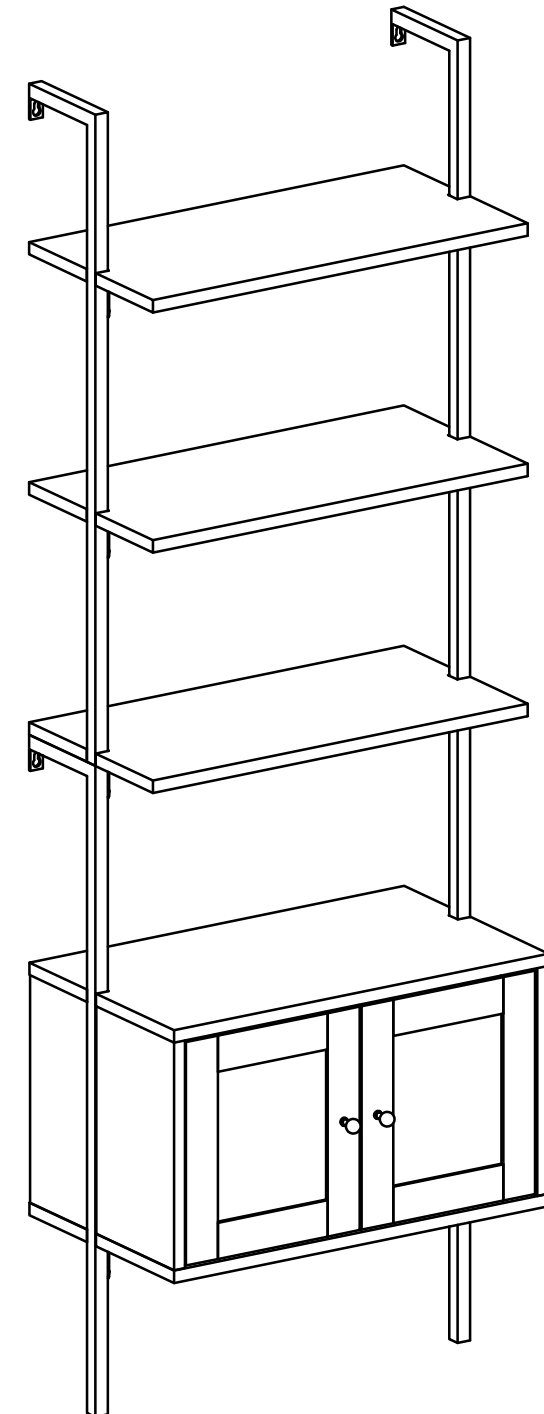
Weight Capacity : 60 Lbs

Warning : Do not stand on Shelf









Warning : Do not sit on Shelf




# happimess



## Part List and Hardware List

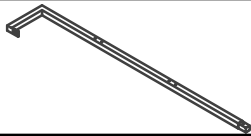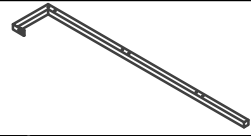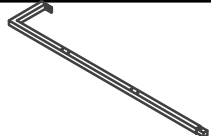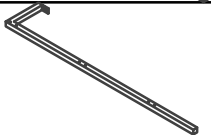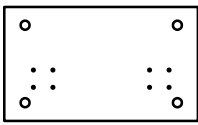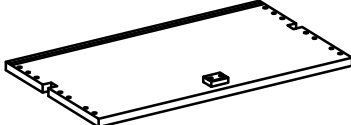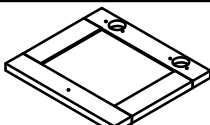
| PIECE | DESCRIPTION            | PICTURE                                                                              | QUANTITY |
|-------|------------------------|--------------------------------------------------------------------------------------|----------|
| A     | Upper Right Leg        |    | 1x       |
| B     | Lower Right Leg        |    | 1x       |
| C     | Upper Left Leg         |    | 1x       |
| D     | Lower Left Leg         |    | 1x       |
| E     | Shelf                  |   | 3x       |
| F     | Small Side (Cabinet)   |  | 2x       |
| G     | Big side (Cabinet)     |  | 2x       |
| H     | Top Panel (Cabinet)    |  | 1x       |
| I     | Bottom panel (Cabinet) |  | 1x       |
| K     | Back panel (Cabinet)   |  | 1x       |
| L     | Door (Cabinet)         |  | 2x       |
| M     | Metal Bracket          |  | 8x       |
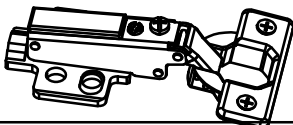
| PIECE | DESCRIPTION       | PICTURE                                                                               | QUANTITY |
|-------|-------------------|---------------------------------------------------------------------------------------|----------|
| N     | Bolt M6x15mm      |    | 32x      |
| O     | Dowel             |    | 12x      |
| P     | Cam Lock Bolt     |    | 16x      |
| Q     | Cam Lock Nut      |    | 16x      |
| R     | Hinge             |    | 4x       |
| S     | Screws M4x15mm    |  | 24x      |
| T     | Handle            |  | 2x       |
| U     | Screws for handle |  | 2x       |
| V     | Bumpers           |  | 2x       |
| W     | Screw M6x60mm     |  | 4x       |
| X     | Anchor            |  | 4x       |
| Y     | Allen Key         |  | 1x       |


# CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS




Cam Lock Bolt




Cam Lock Nut

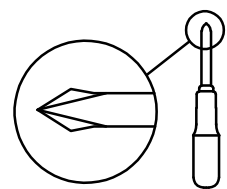


Screwdriver

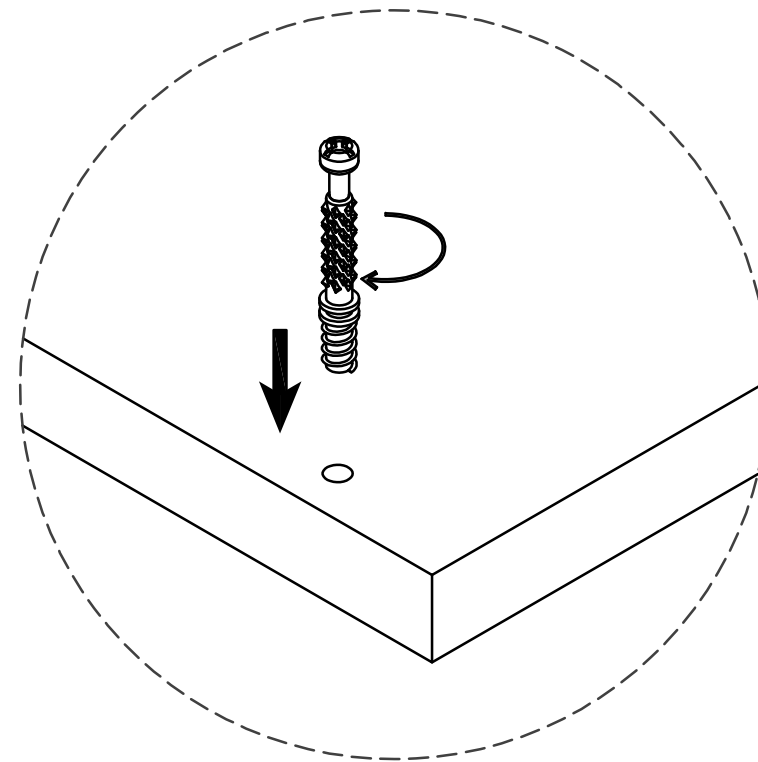


**STEP 1 : SCREW THE CAM LOCK BOLT INTO PANEL**

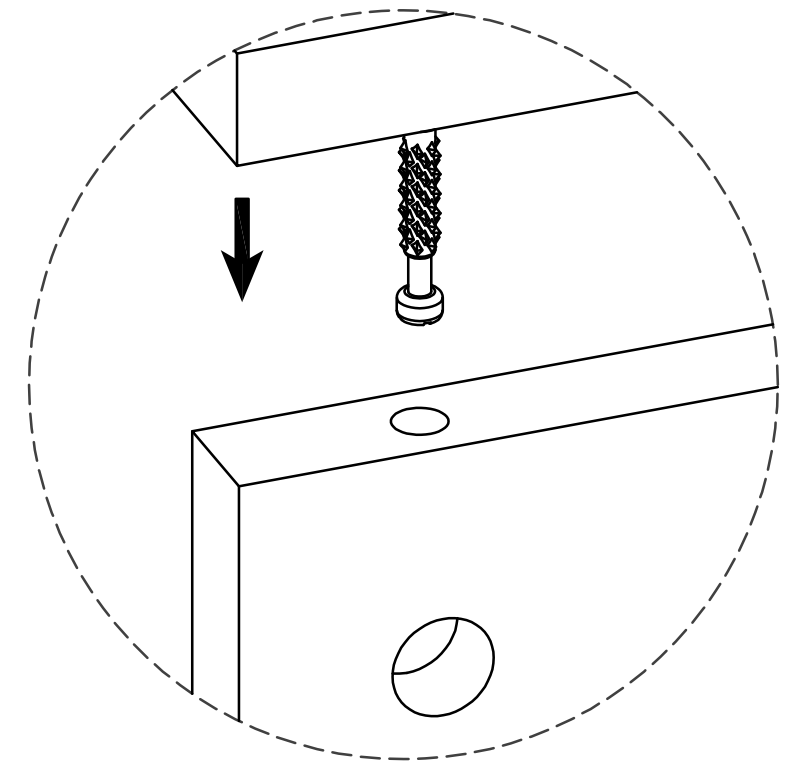

**STEP 2 : INSERT THE CAM LOCK BOLT INTO THE BOLT HOLE OF JOIN PANEL**

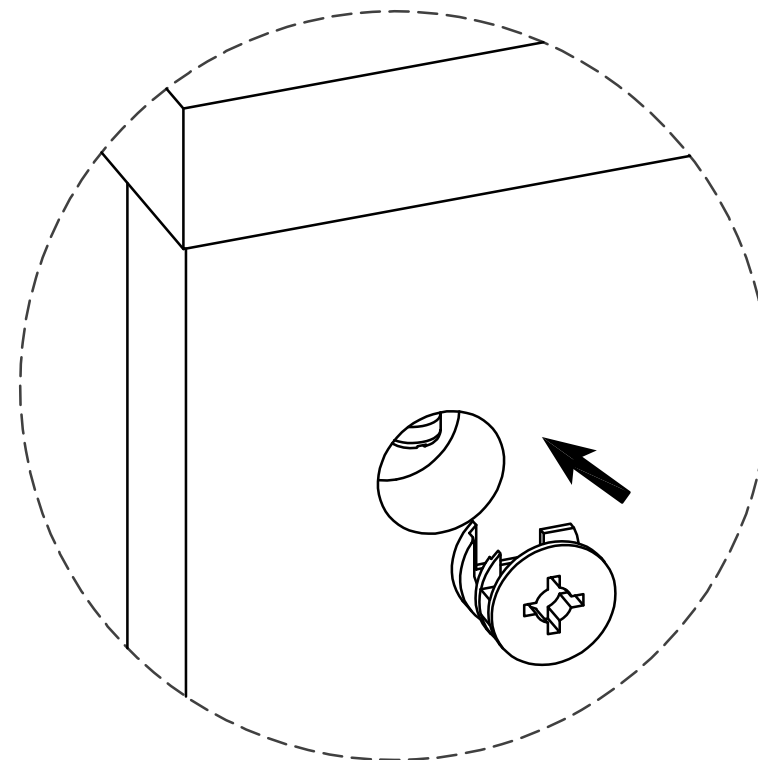









**STEP 3 : ALIGN THE CAM LOCK NUT WITH ITS SIDE OPENING (OR ARROW) POINTING TO CAM LOCK BOLT**

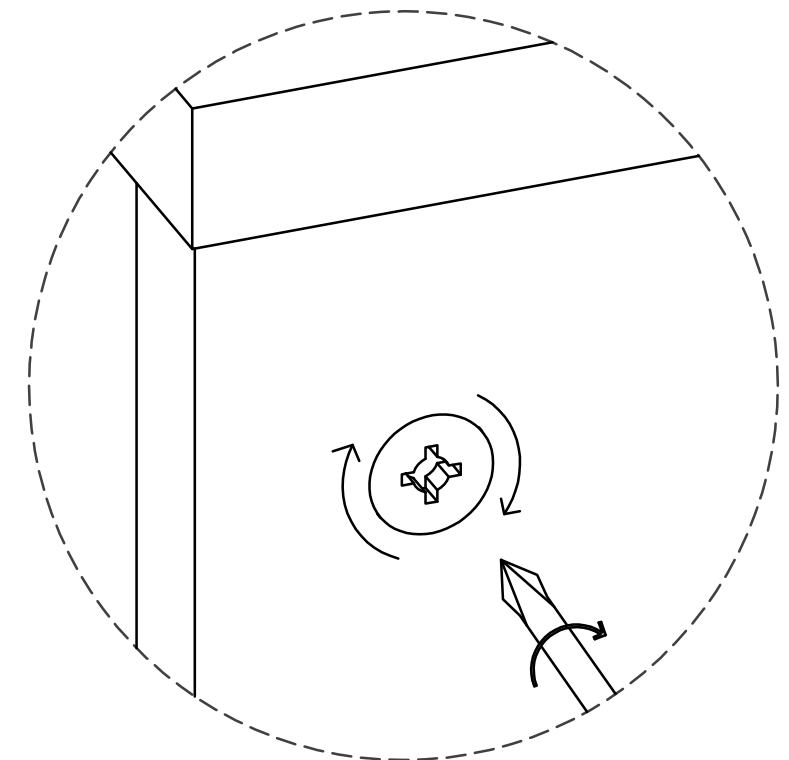


**STEP 4 : TURN THE CAM LOCK NUT CLOCKWISE GENTLY UNTIL IT WILL NOT TURN ANY MORE**

# PREPARATION

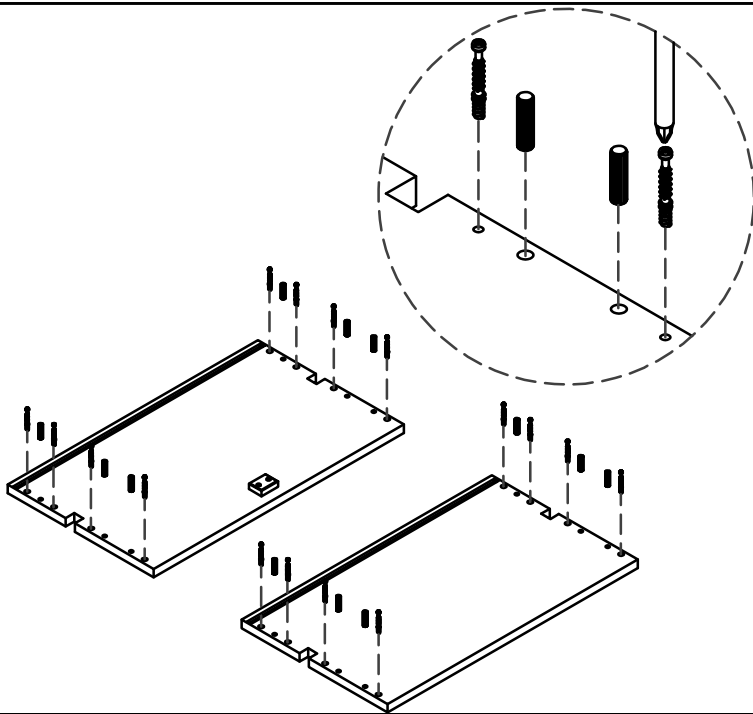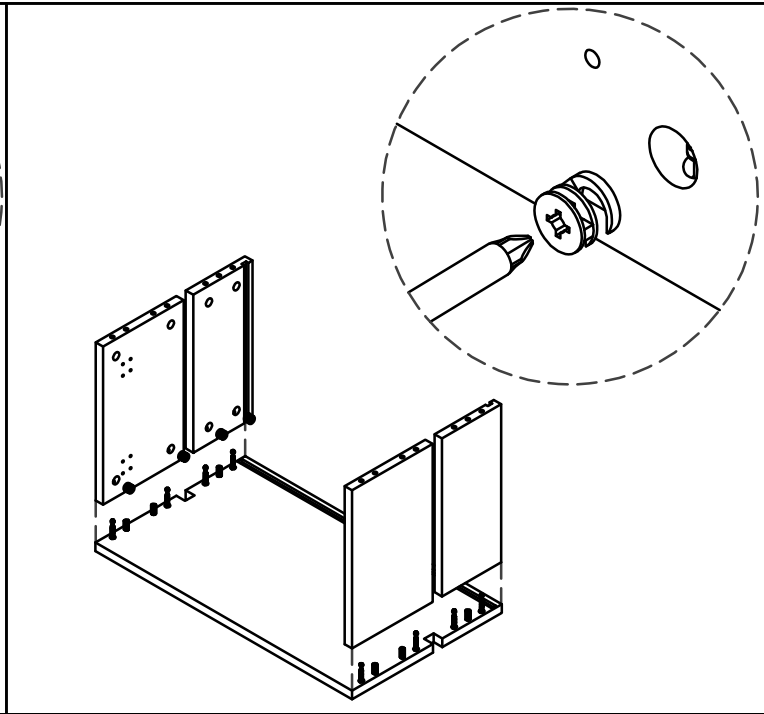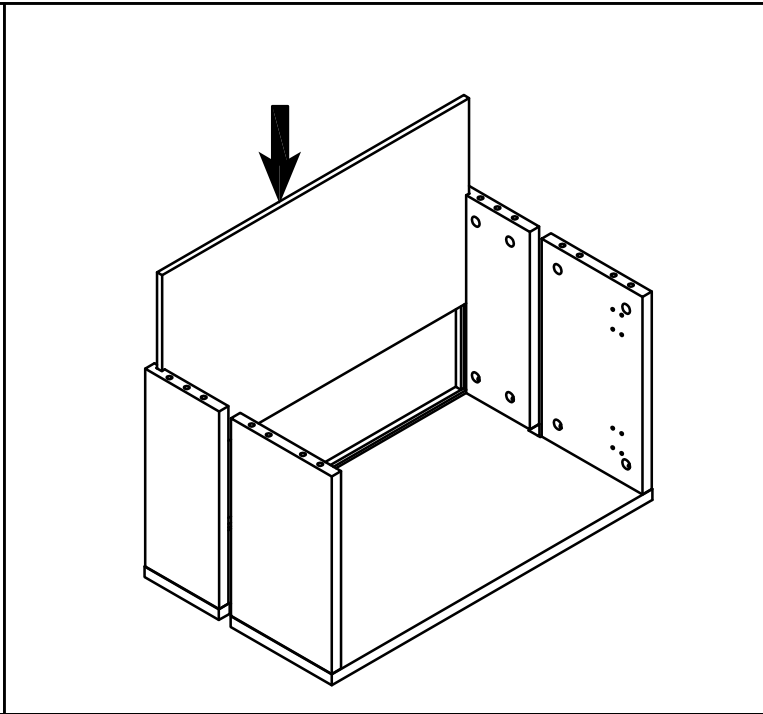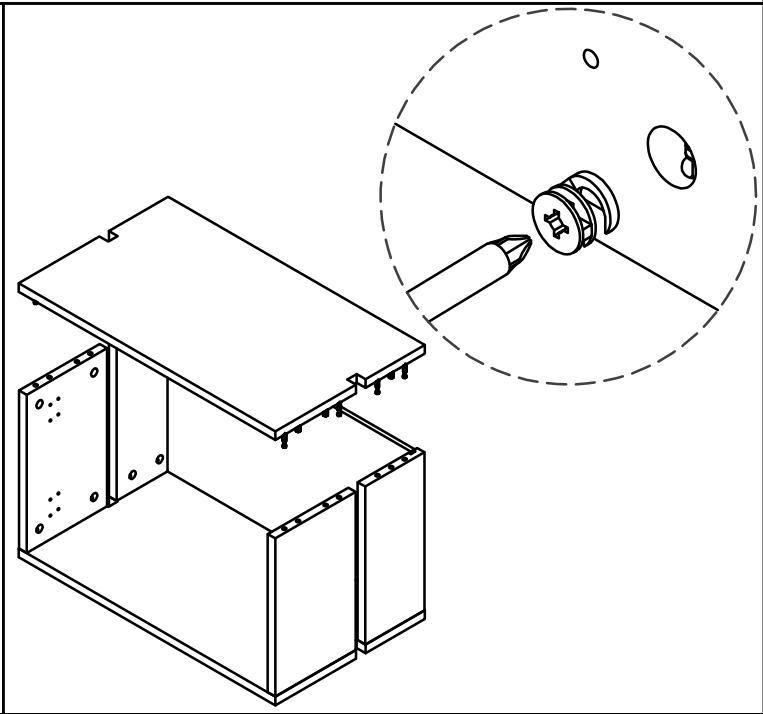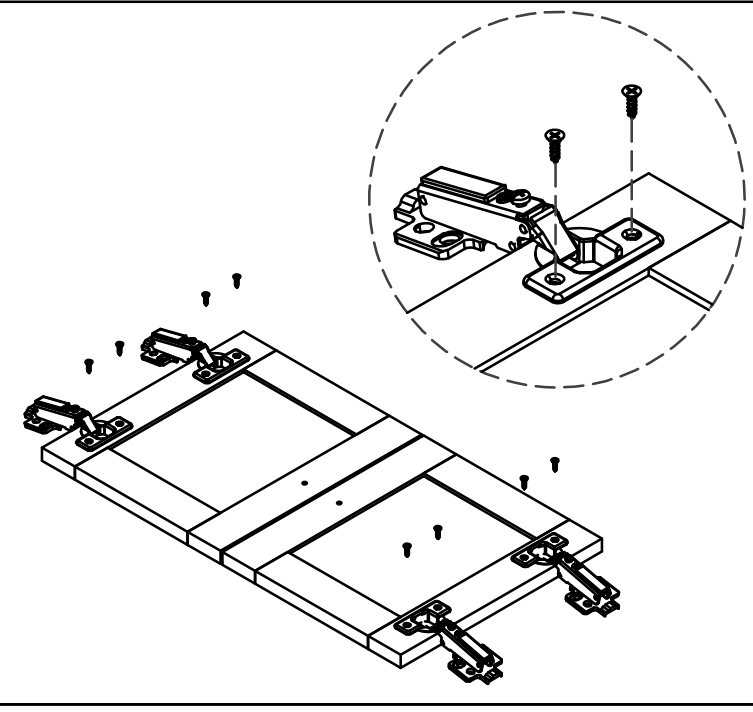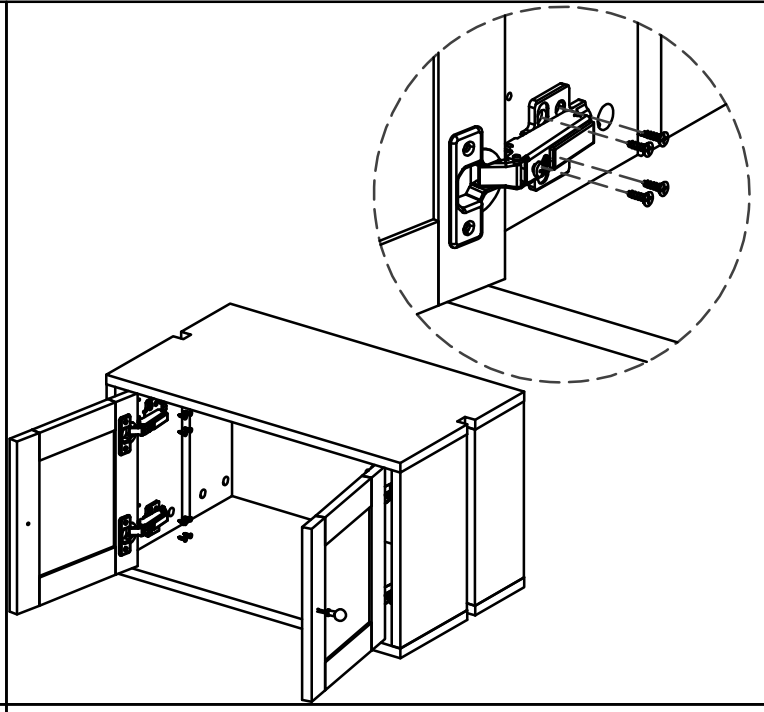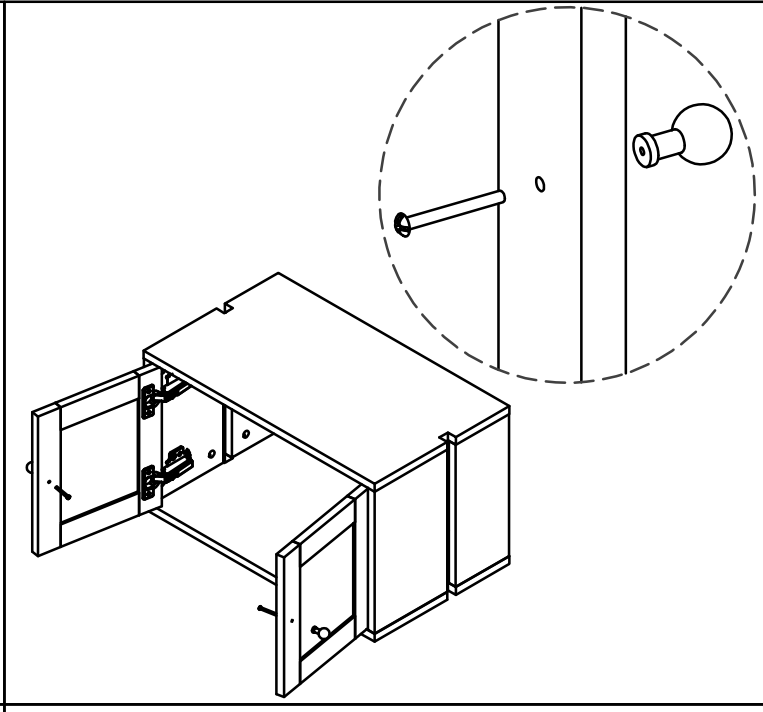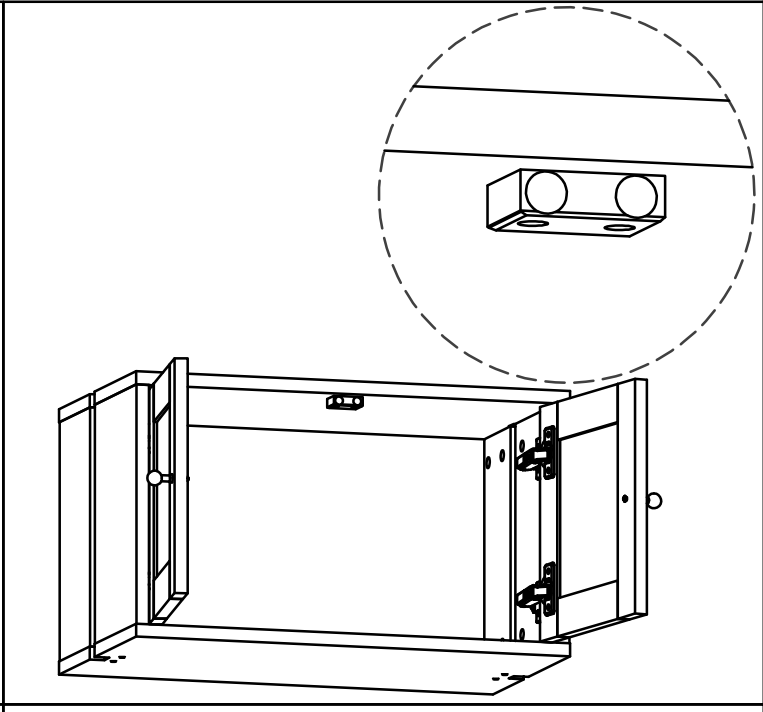
Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware content list.  
If any parts is missing or damaged, do not attempt to assemble the product  
Estimated Assembly Time is 20 Minutes.

| ASSEMBLY INSTRUCTIONS FOR CABINET                                                                                                  |                                                                                                                               |                                                                                       |                                                                                                   |
|------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
|                                                   |                                            |   |               |
| <b>STEP 1 :</b> INSERT THE CAM LOCK BOLTS (P) AND DOWELS (O) TO THE TOP PANEL (H) AND BOTTOM PANEL (I), THEN TIGHTEN THE BOLTS (P) | <b>STEP 2 :</b> INSERT THE SMALL SIDE (F) AND BIG SIDE (G) INTO THE BOTTOM PANEL (I), THEN TIGHTEN WITH THE CAM LOCK NUTS (Q) | <b>STEP 3 :</b> INSERT THE BACK PANEL (K) INTO THE CABINET                            | <b>STEP 4 :</b> INSERT THE TOP PANEL (H) INTO THE CABINET THEN TIGHTEN WITH THE CAM LOCK NUTS (Q) |
|                                                  |                                           |  |              |
| <b>STEP 5 :</b> INSERT THE HINGE (R) INTO THE DOOR (L), THEN TIGHTEN WITH SCREW M4x15mm (S)                                        | <b>STEP 6 :</b> ATTACH THE HINGE (R) ON THE SIDE AND TIGHTEN WITH SCREW M4x15mm (S)                                           | <b>STEP 7 :</b> INSTALL HANDLE (T) INTO THE DOOR (L) WITH SCREW FOR HANDLE (U)        | <b>STEP 8 :</b> REMOVE BUMPER (V) FROM BLISTER AND STICK IT ON THE DOOR STOPPER                   |

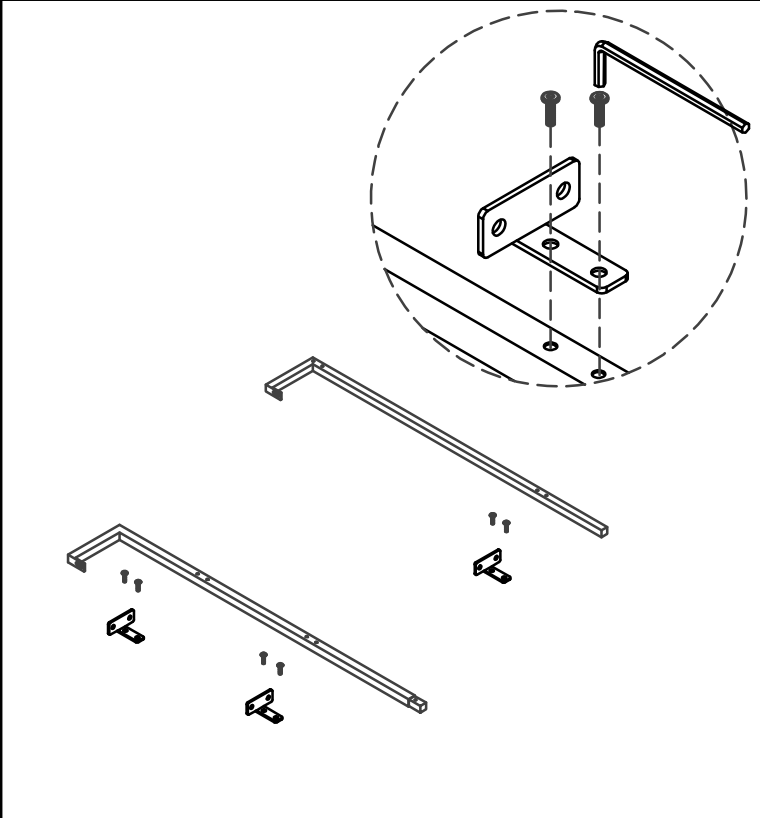
ASSEMBLY INSTRUCTIONS FOR SHELF



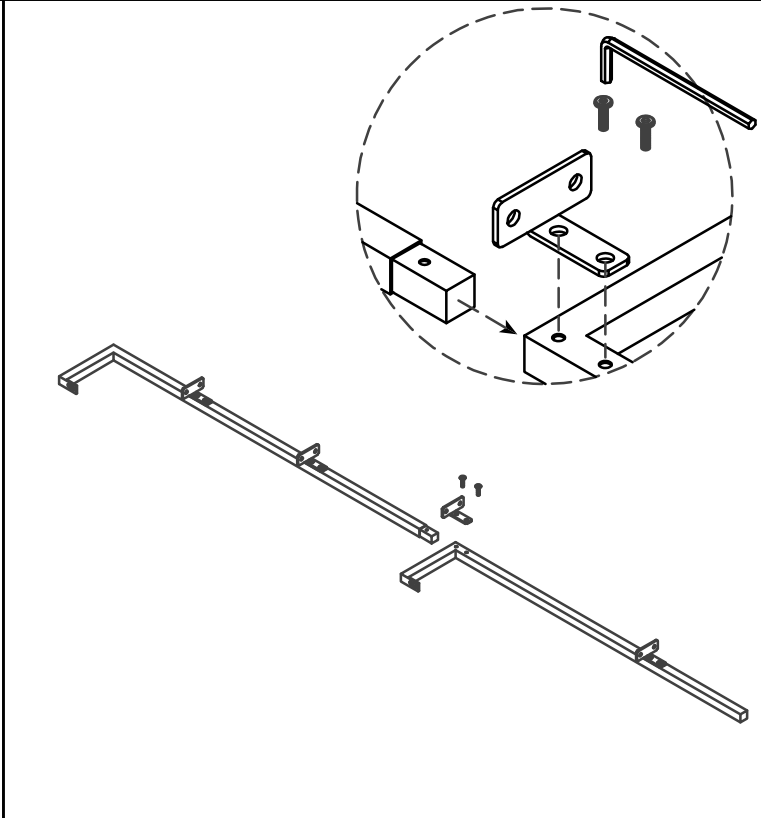
**STEP 9 :** ATTACH THE METAL BRACKETS (M) TO THE UPPER RIGHT LEG (A) AND LOWER RIGHT LEG (B) WITH BOLTS (N), TIGHTEN WITH AN ALLEN KEY (Y).



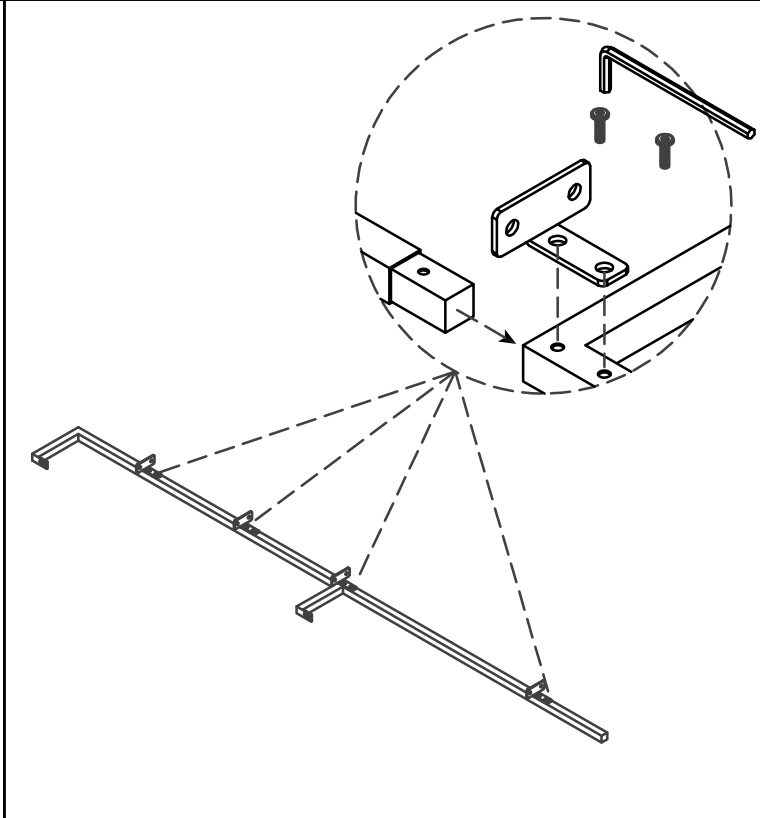
**STEP 10 :** ATTACH THE UPPER RIGHT LEG (A) TO THE LOWER RIGHT LEG (B) AT JOIN POSITION, THEN ATTACH THE METAL BRACKET (M) TO THE LEG WITH BOLTS (N), TIGHTEN WITH ALLEN KEY (Y).



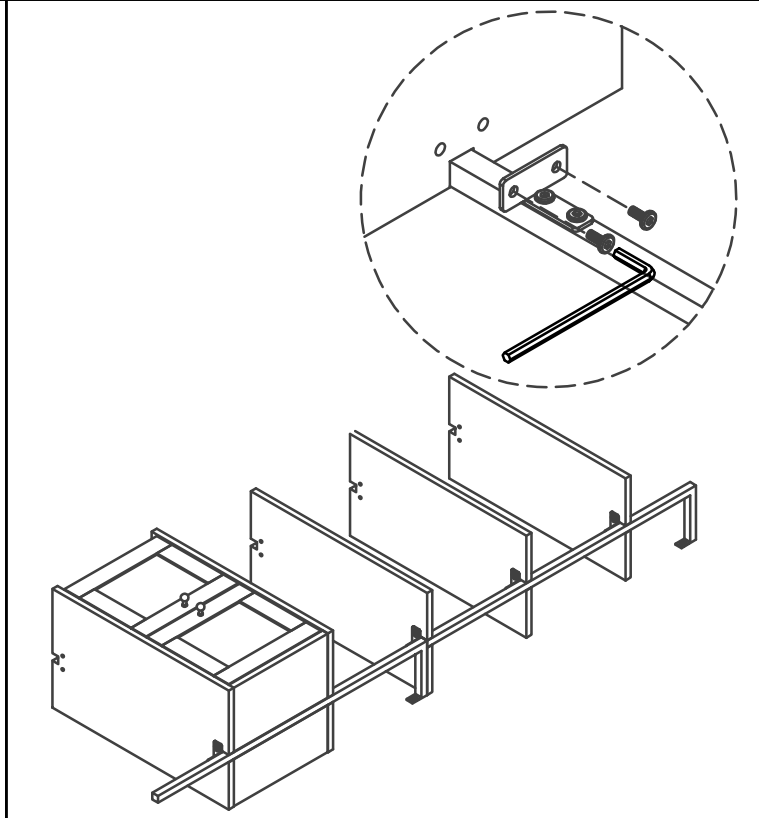
**STEP 11 :** REPEAT AS IN STEP 9 AND 10 WITH THE UPPER LEFT LEG (C) AND LOWER LEFT LEG (D).



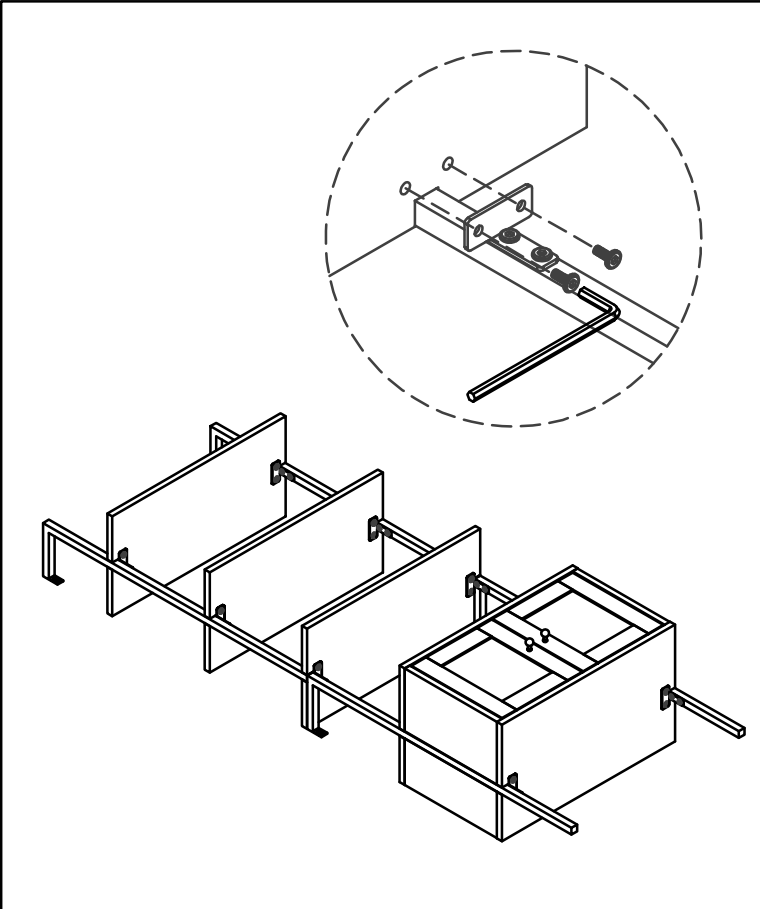
**STEP 12 :** ATTACH THE SHELVES AND CABINET TO THE METAL BRACKETS (M) AND RIGHT LEG (A+B) WITH BOLTS (N), TIGHTEN WITH AN ALLEN KEY (Y).



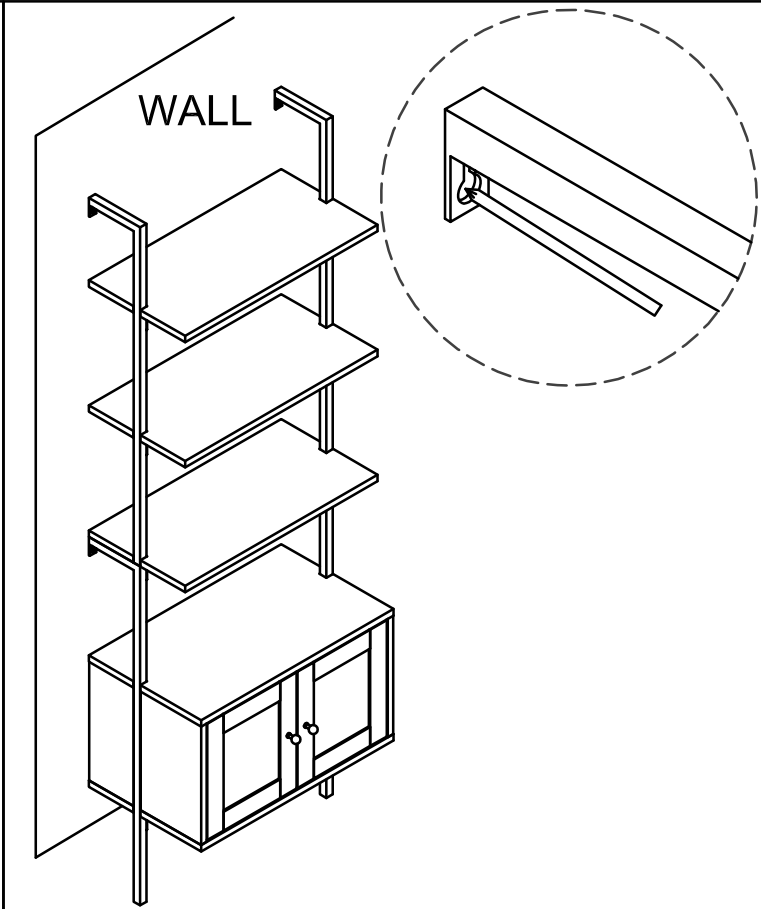
**STEP 13 :** REPEAT AS IN STEP 12 WITH THE LEFT LEG (C+D).



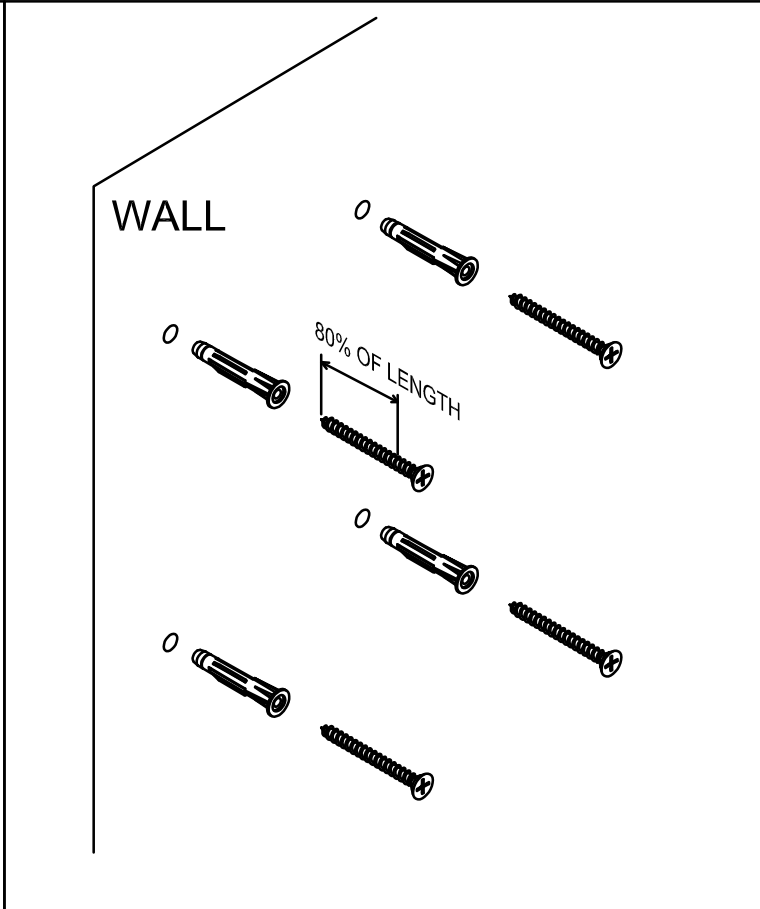**STEP 14 :** MARK WHERE HOLES NEED TO BE DRILLED.



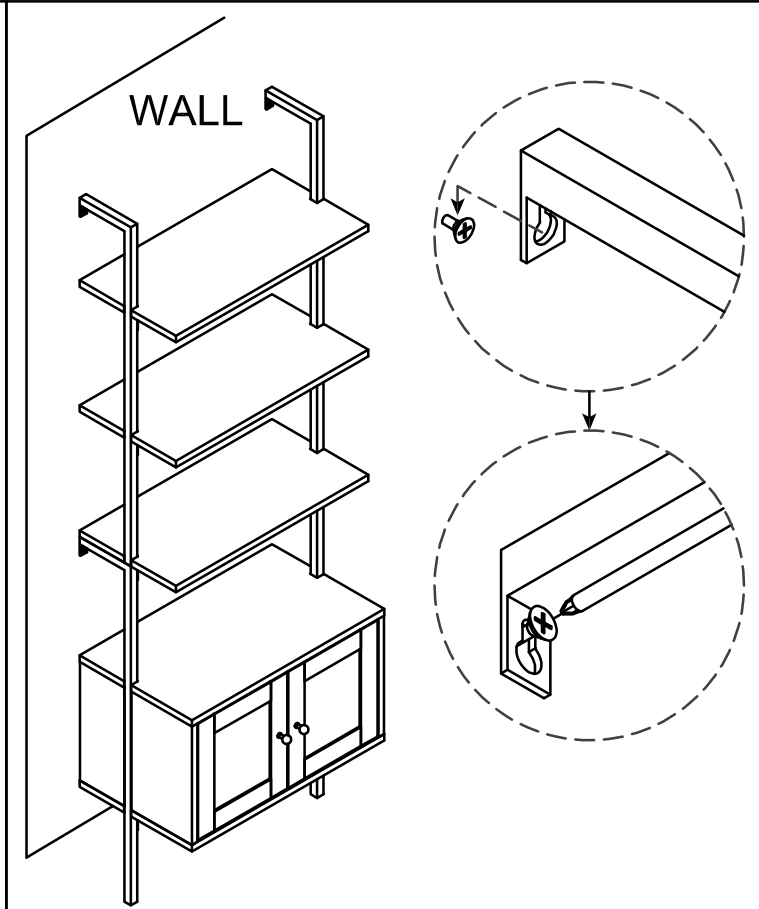**STEP 15 :** TAP THE WALL ANCHORS (X) INTO PLACE IN THE NEW HOLES THAT YOU JUST DRILLED. THEN INSERT 80% OF THE LENGTH OF THE SCREWS (W) INTO THE ANCHORS (X).



**STEP 16 :** HANG THE SHELF ON THE POSITION OF THE SCREW (W), THEN TIGHTEN THE SCREWS (W) TO FIX THE SHELF.