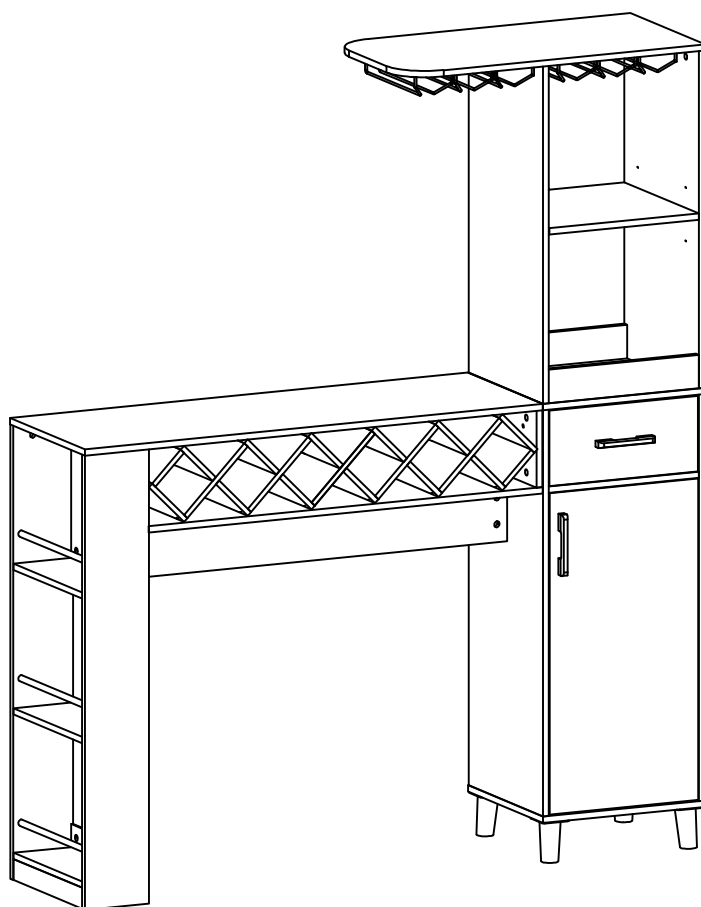


WINE CABINET

Assembly Instructions-Please keep for future reference

SKU:N728P511476
N728P511477



Important -Please read these instructions fully before starting assembly

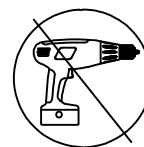


Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- . Check you have all the components and tools listed on the following pages.
- . Remove all fittings from the plastic bags and separate them into their groups.
- . Keep children and animals away from the work area, small parts could choke if swallowed.
- . Make sure you have enough space to layout the parts before starting.

- . During assembly do not stand or put weight on the product, this could cause damage.
- . Assemble the item as close to its final position (in the same room) as possible.
- . Assemble on a soft level surface to avoid damaging the unit or your floor.
- . Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- . To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- . Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- . From time to time check that there are no loose screws on this unit.

- . This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- . Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

- . Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning - please follow these instructions

To help prevent product toppling over please follow the below steps:-

If anti-tip hardware accessories are supplied, fasten the unit to the wall.
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose












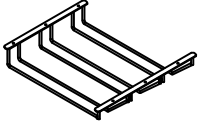

This product is supplied with anti-tip hardware; please install it.

Components - Fittings

N728P511477

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A	x73	B	x73	C	x18	D	x2	E	x1
									
M6X33mm		ø12X10mm		ø6X20mm		ø35		250mm	
F	x32	G	x4	H	x10	I	x68	J	x12
									
M3.5*35mm		M4*30mm		M3.5*12mm		M3.5*14mm		M3*25mm	
K	x4	L	x2	M	x8	N	x4	O	x4
									
M4*18mm		128mm		ø14mm		ø25mm			
P	x16	Q	x4	R	4	S	x8	T	x 88
									
		M7*27mm		16mm				ø20mm	
U	x2	V	x2	W	x2	X	x2	Y	x4
									
M6*12mm		M6*25mm							
Z	x4	AA	x4	AB	x1	AC	x6		
									
ø20mm		70x70x2mm				M5*40mm			

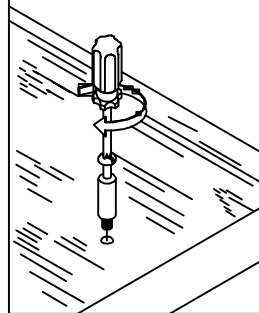
Using Camlocks

Step 1

Connect the camlock as directed in the assembly Instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.



Step 2

Push the male camlock into the entry hole.

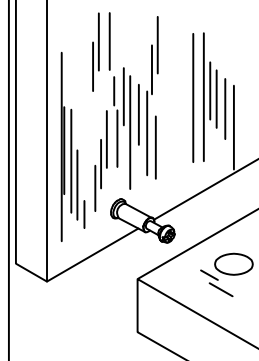2




Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

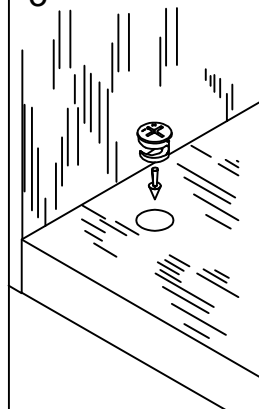3




Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.














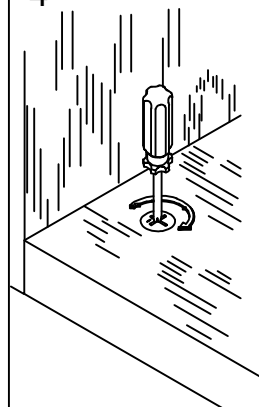
4













Parts list

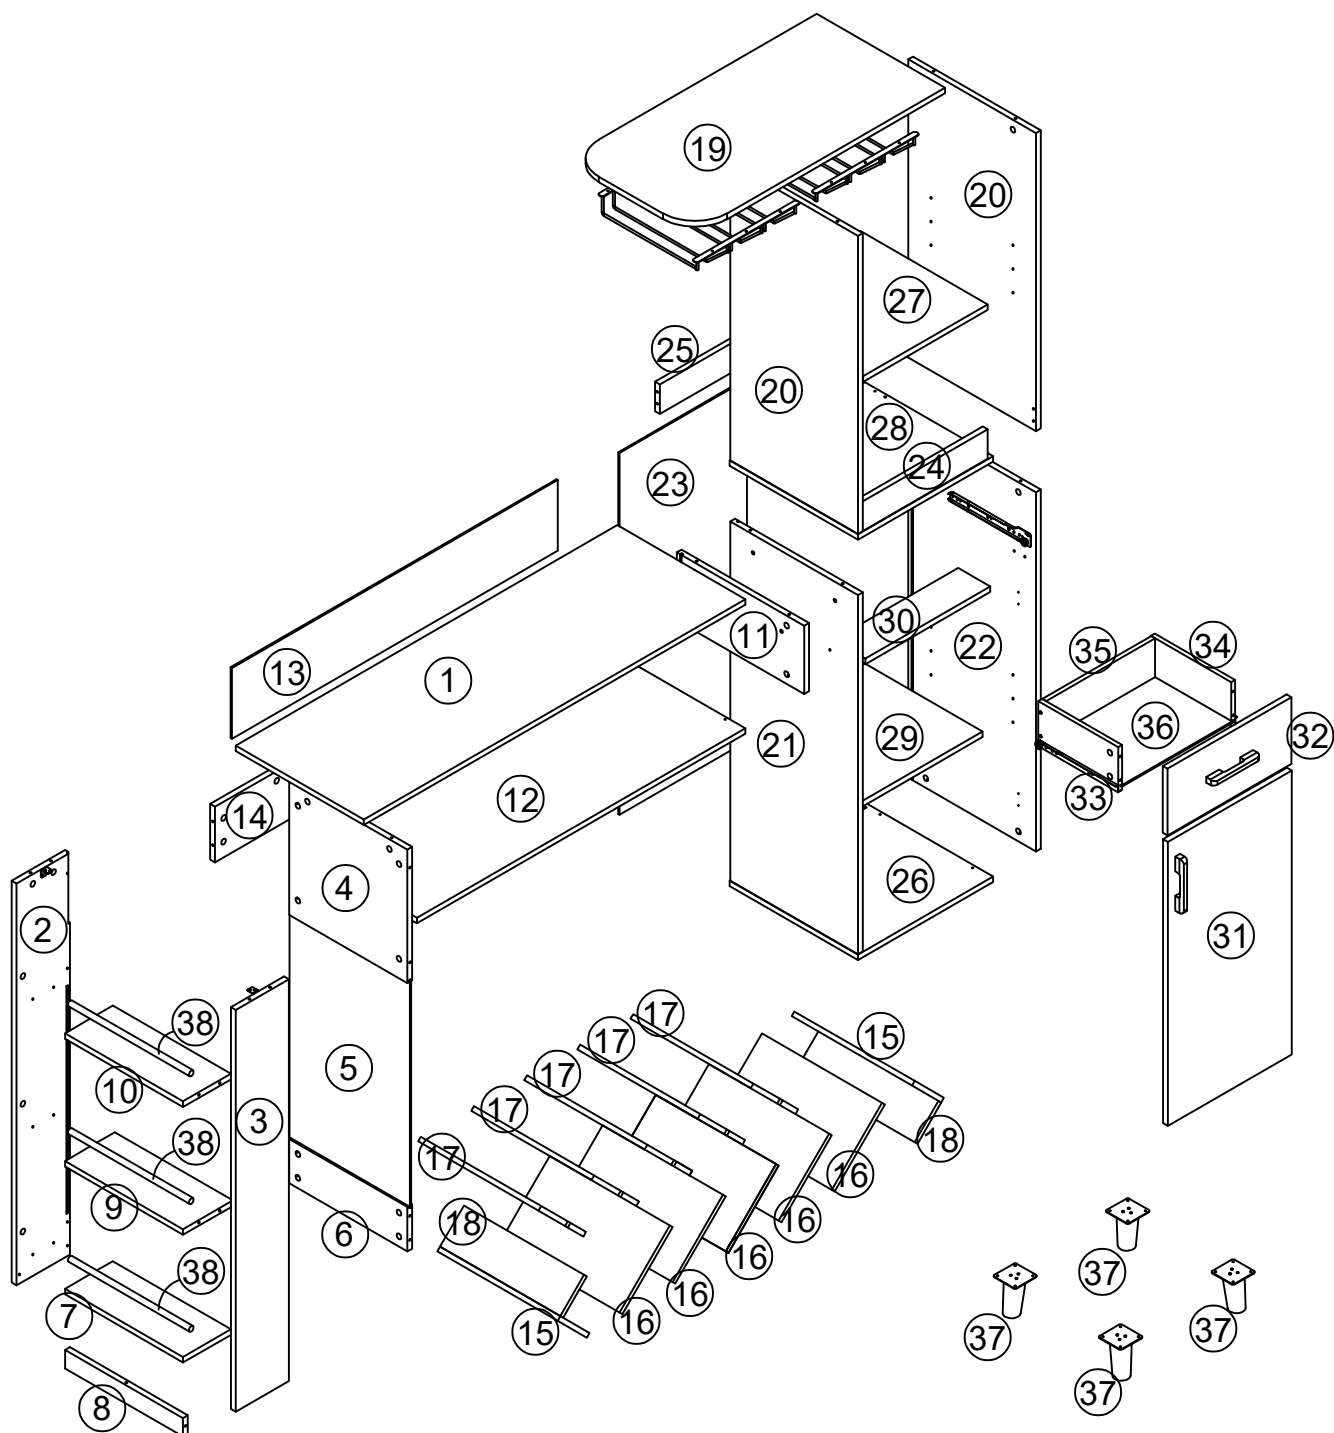














N728P511476

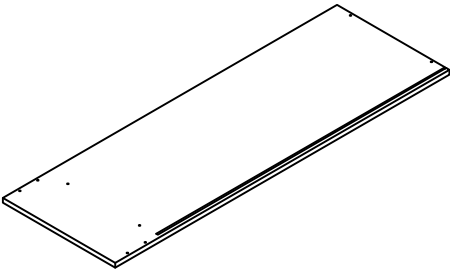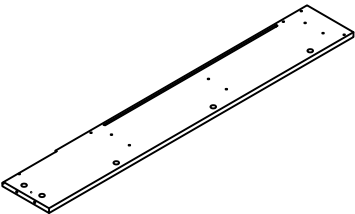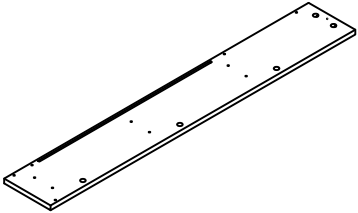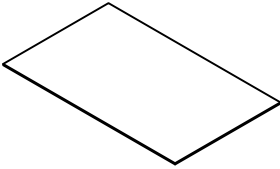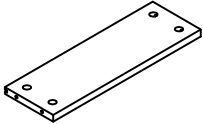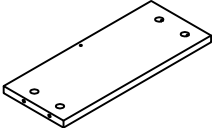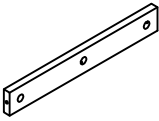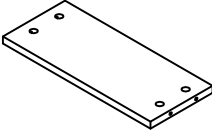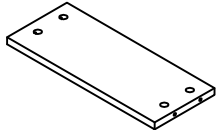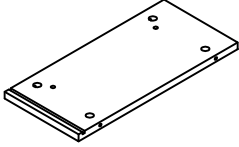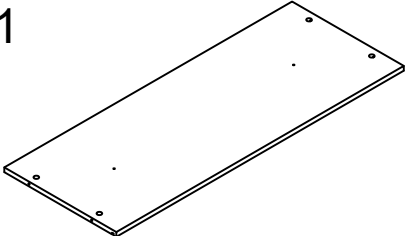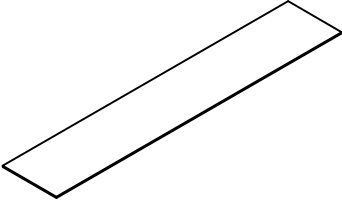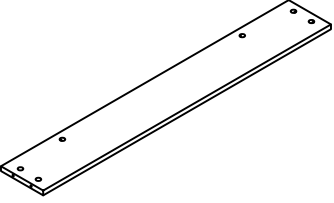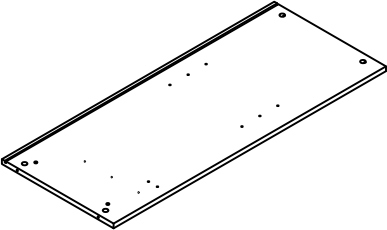①x1 	②x1 
③x1 	⑤x1 
⑥x1 	⑦x1 
⑧x1 	⑨x1 
⑩x1 	⑪x1 
⑫x1 	⑬x1 
⑭x1 	⑳x1 

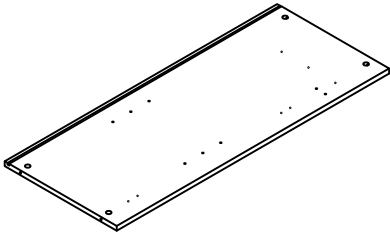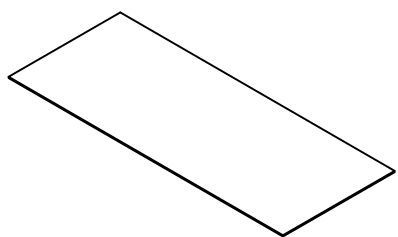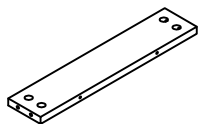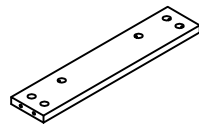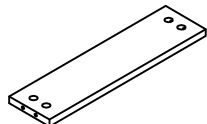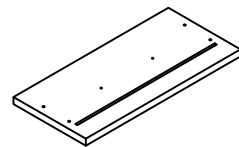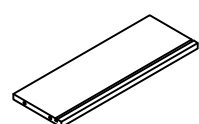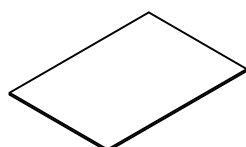
N728P511476

②②x1 	②③x1 
②④x1 	②⑤x1 
③①x1 	③②x1 
③③x1 	③④x1 
③⑤x1 	③⑥x1 

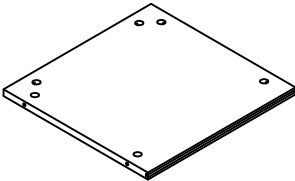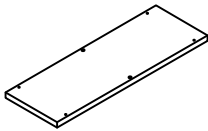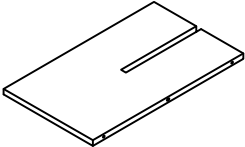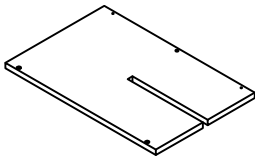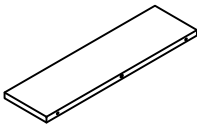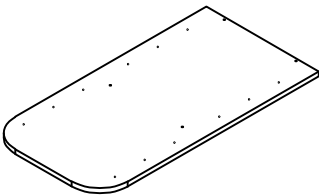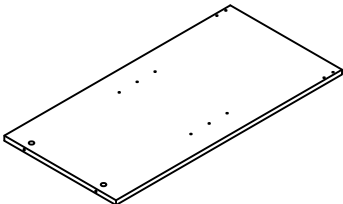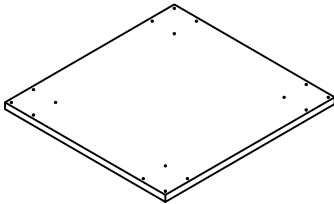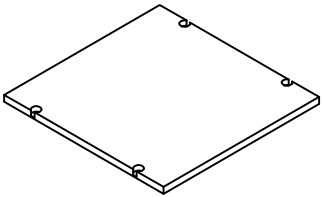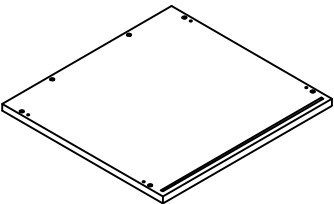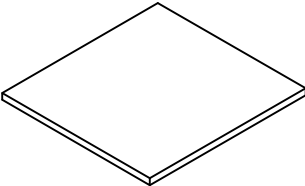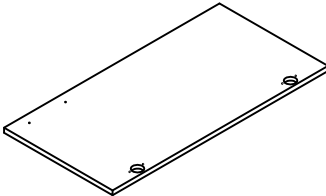N728P511477


④x1 	⑮x2 
⑯x5 	⑰x5 
⑱x2 	⑲x1 
⑳x2 	㉔x1 
㉗x1 	㉘x1 
㉙x1 	㉛x1 
㉟x4 	㉜x3 

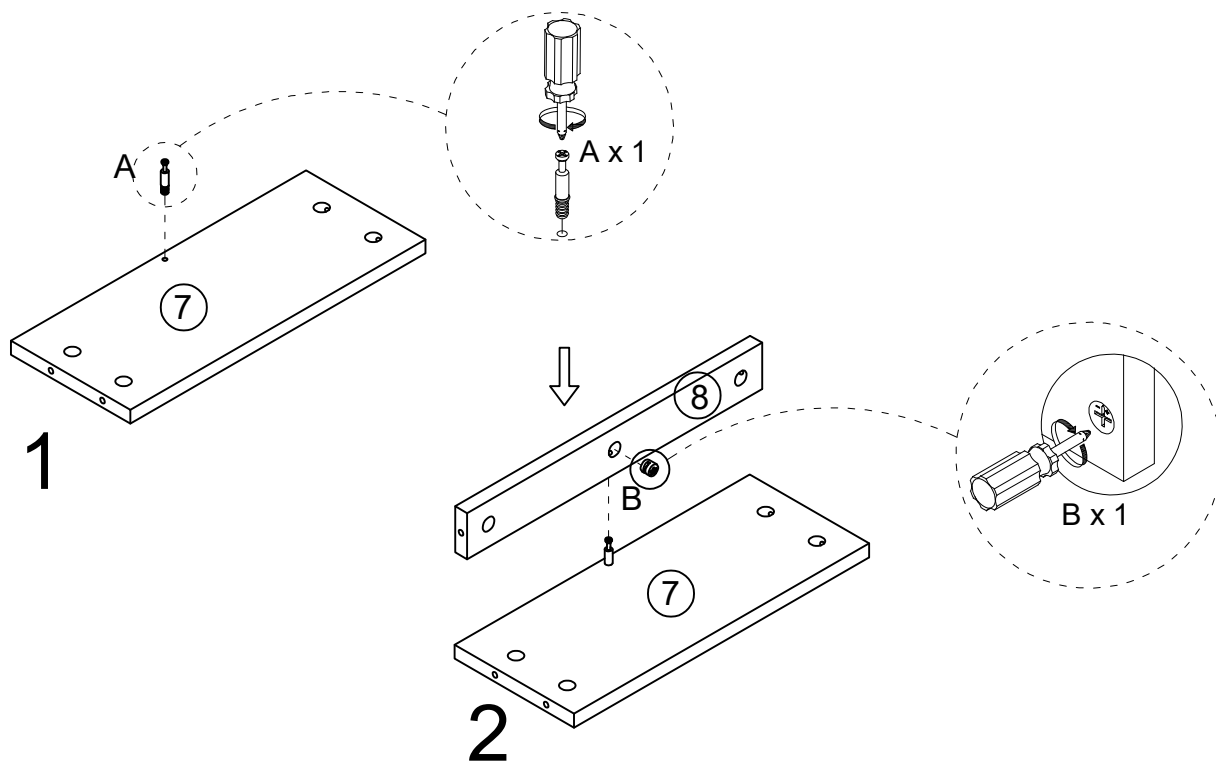
1




A	x1	B	x1
			
M6X33mm		Ø12X10mm	

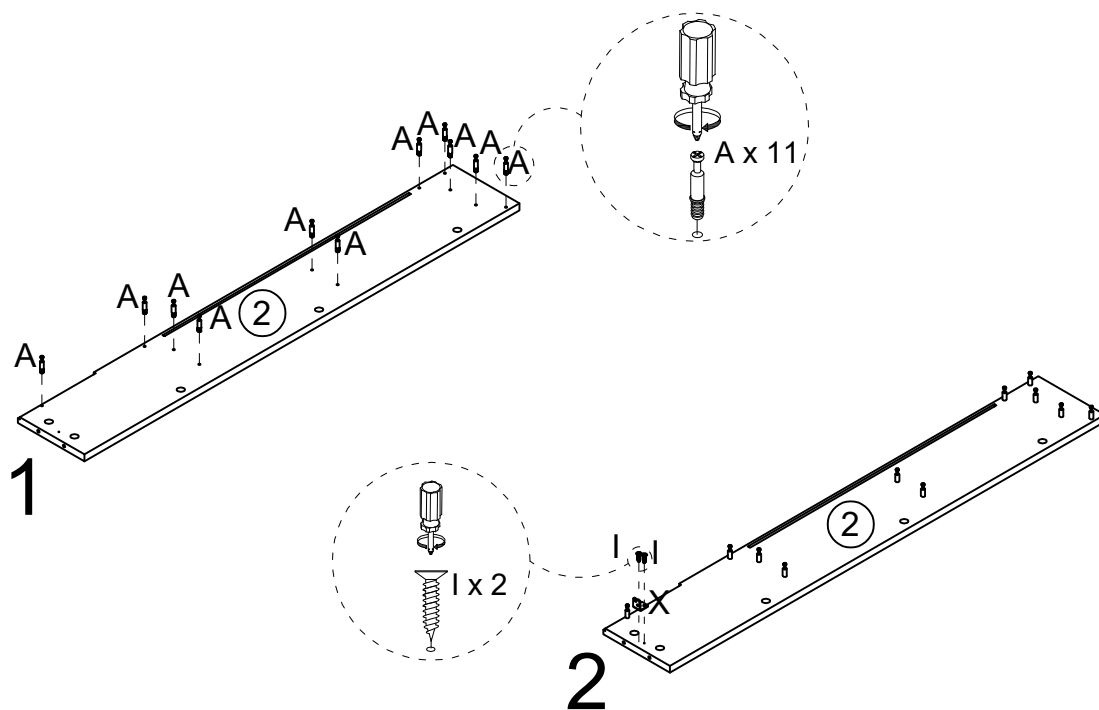
2




A	x11	I	x2	X	x1
					
M6X33mm		M3.5*14mm			

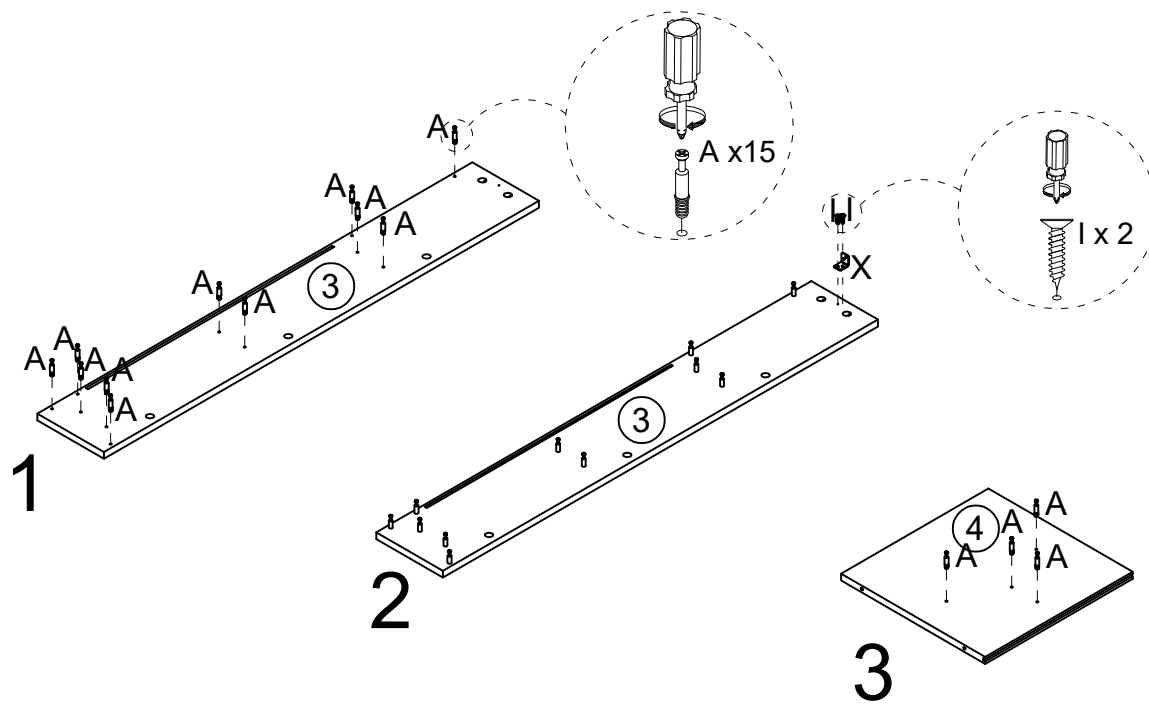3





A	x15	I	x2	X	x1
					
M6X33mm		M3.5*14mm			

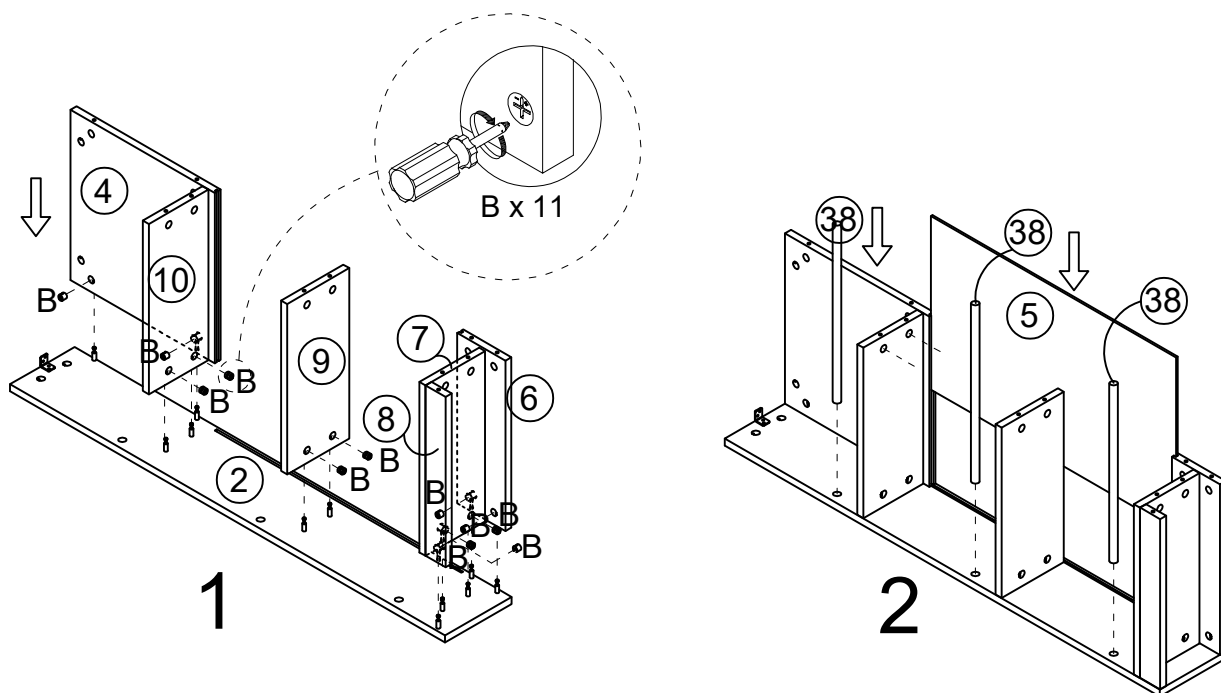4






B	x11
	
Ø12X10mm	

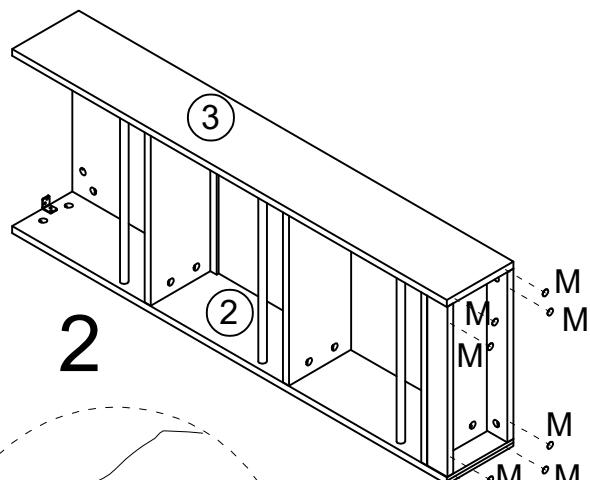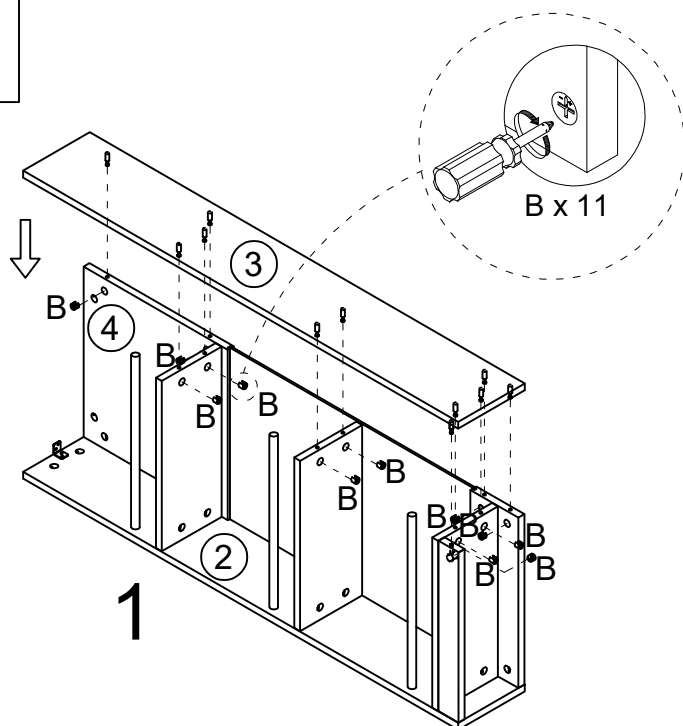
5




B	x11	M	x8
			
Ø12X10mm		Ø14mm	

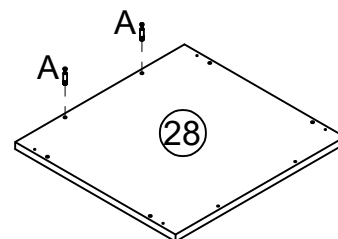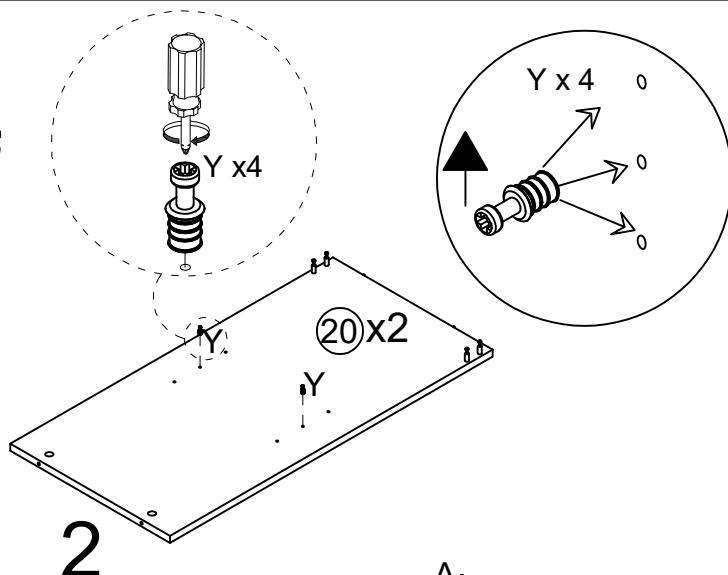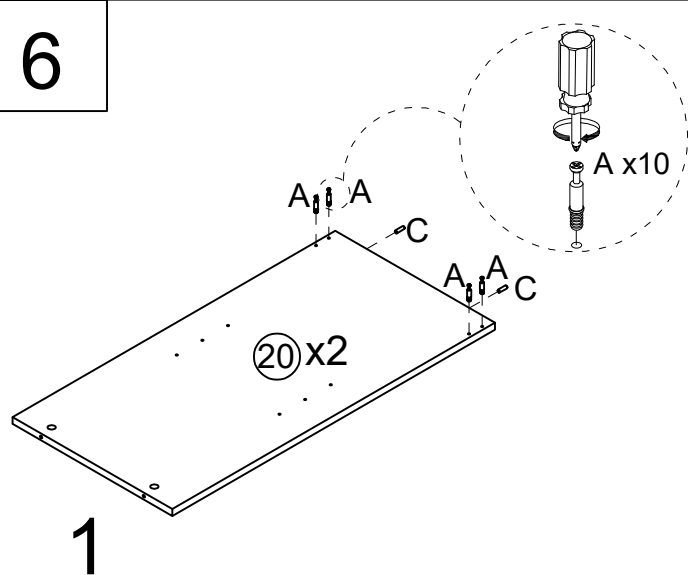6




A	x10	Y	x4	C	x4
					
M6X33mm				Ø6X20mm	

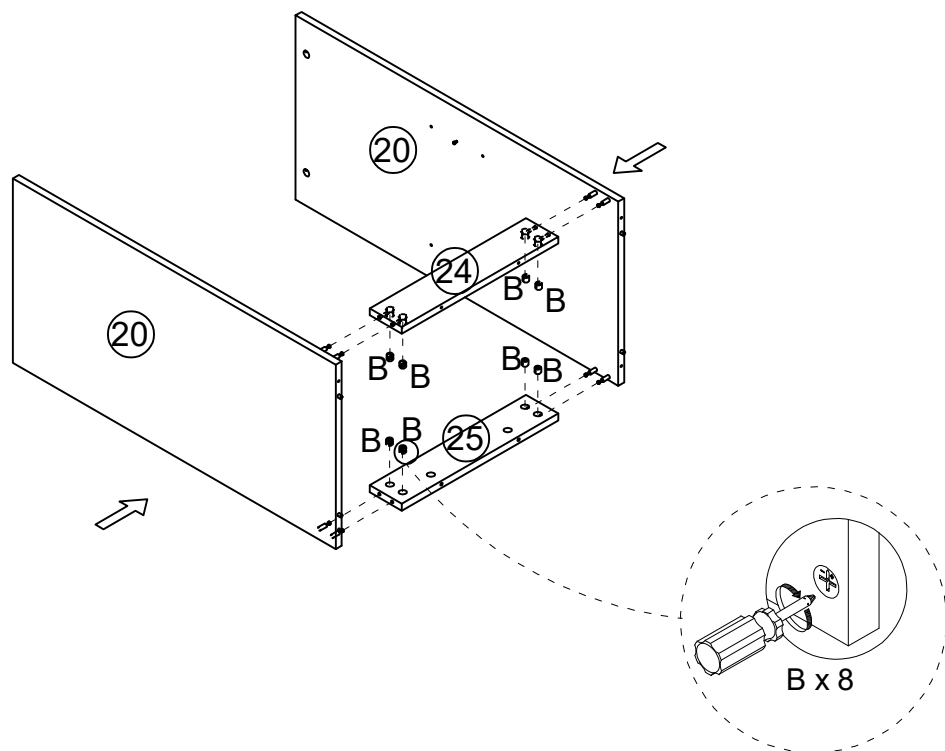
7




B	x8
	
ø12X10mm	

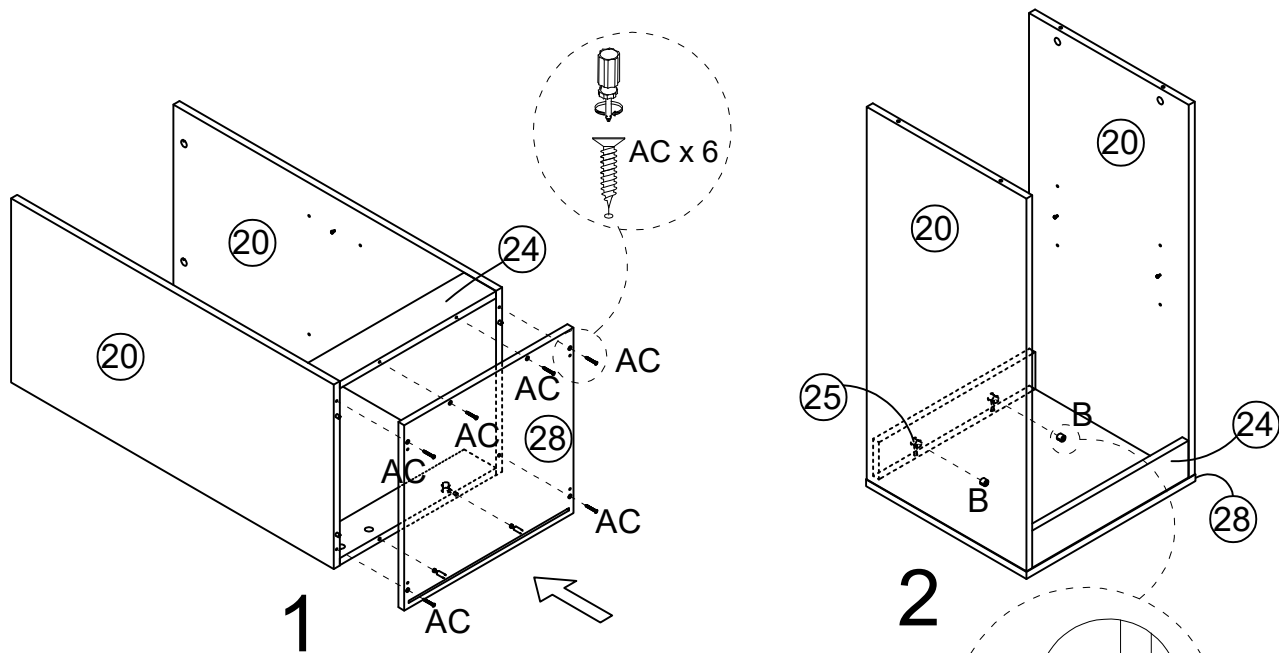8




B	x2	AC	x6
			
ø12X10mm		M5*40mm	


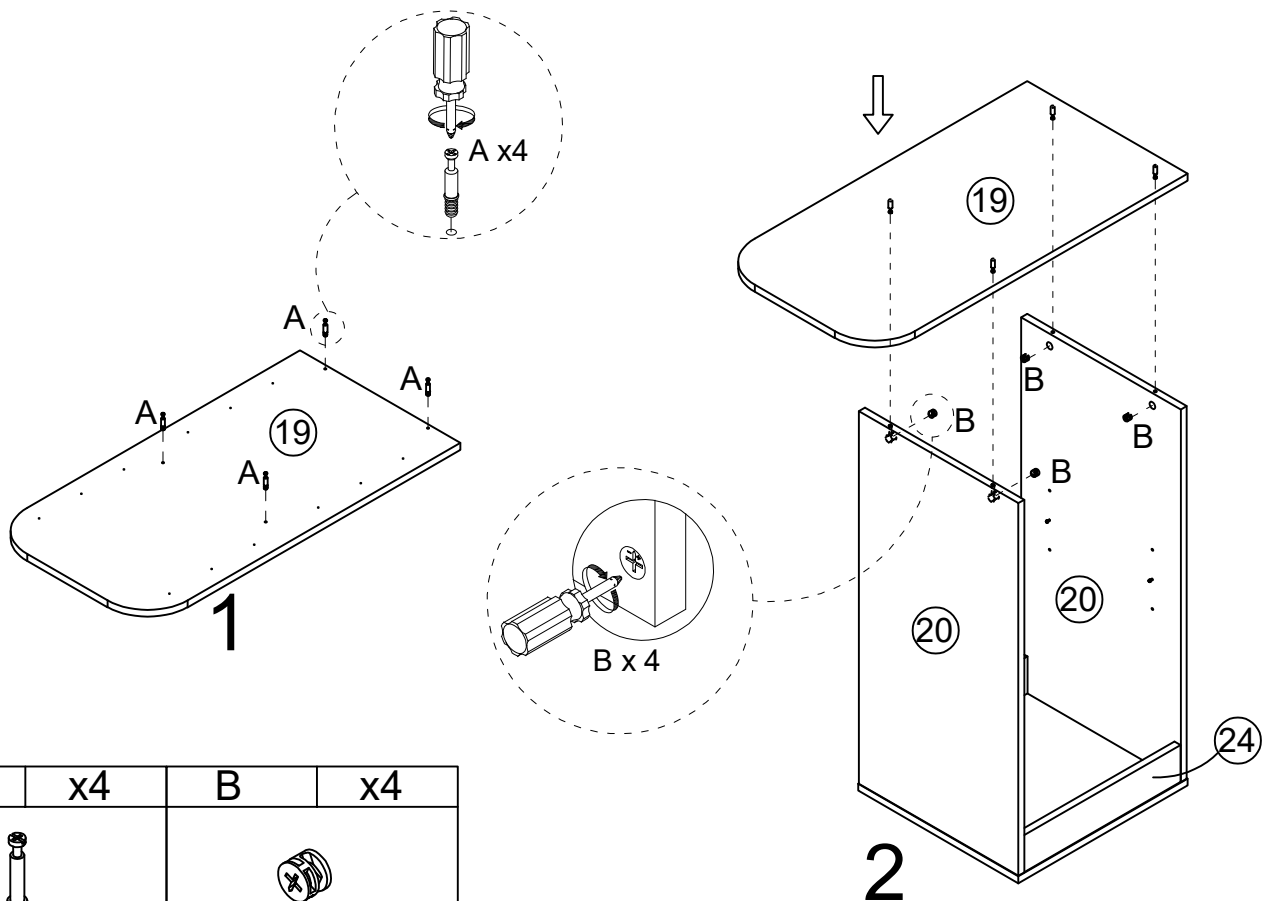
9




A	x4	B	x4
			
M6X33mm		Ø12X10mm	

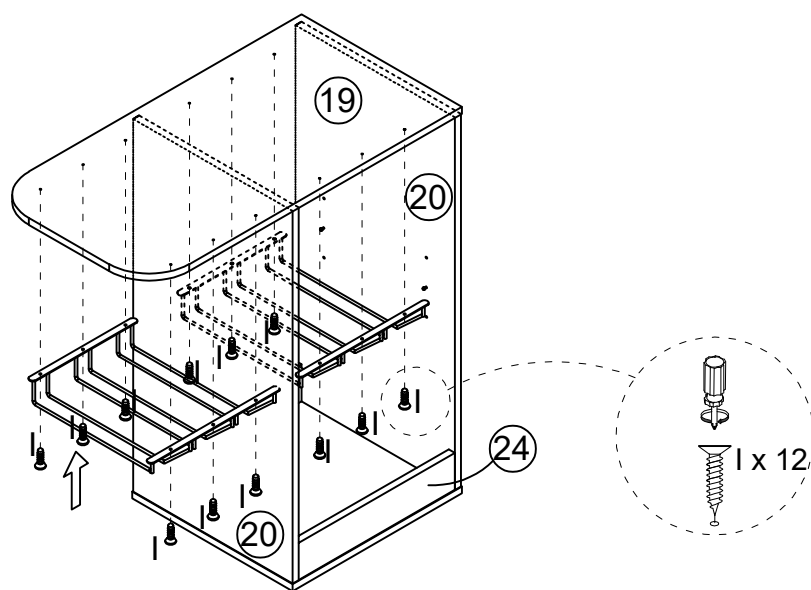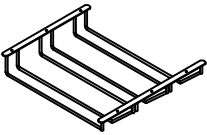10




W	x2	I	x12
			
325*340*55mm		M3.5*14mm	

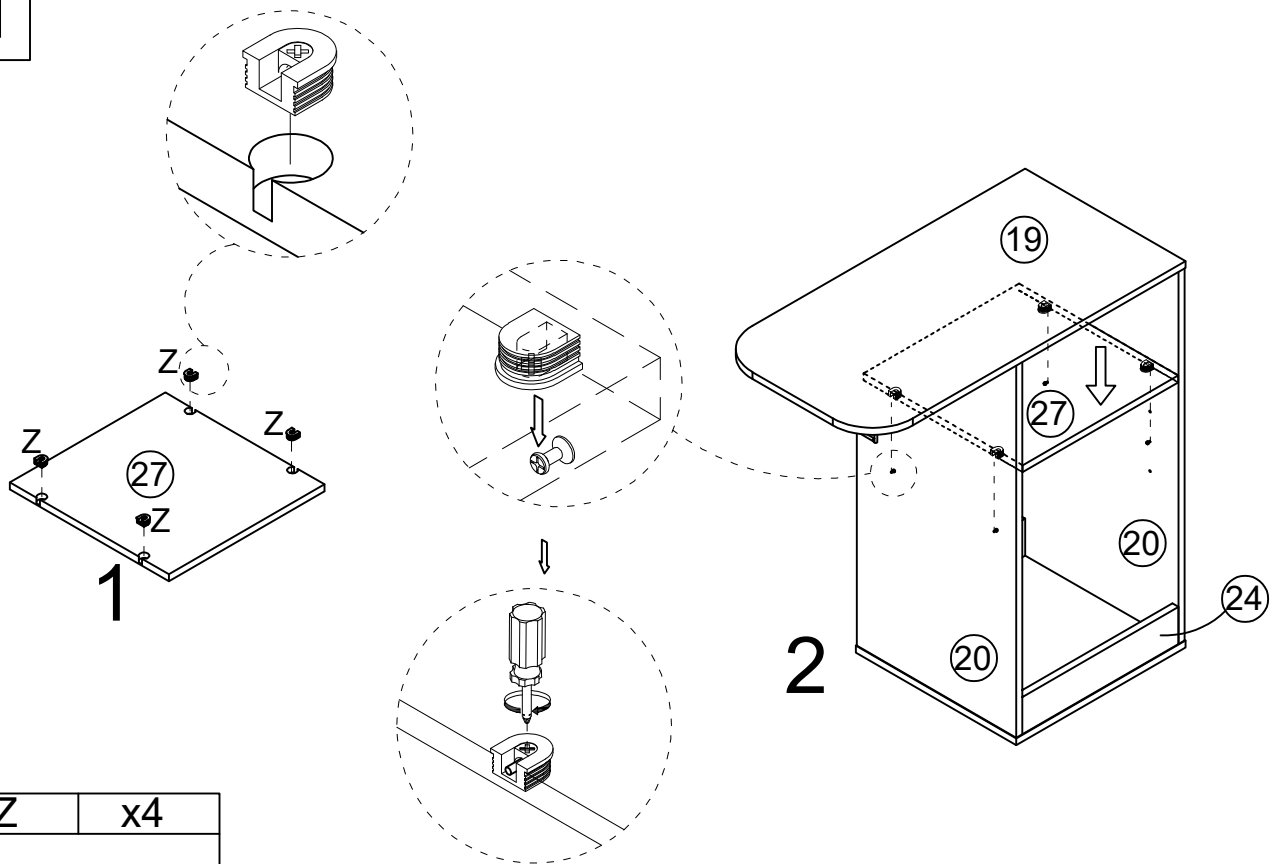
11



Z	x4
	
Ø20mm	

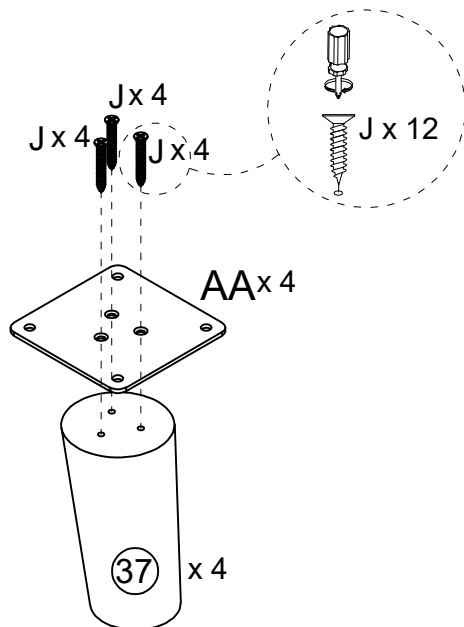12






AA	x4	J	x12
			
70x70x2mm		M3*25mm	

AA



Plan View: AA Hardware and Panel No.37

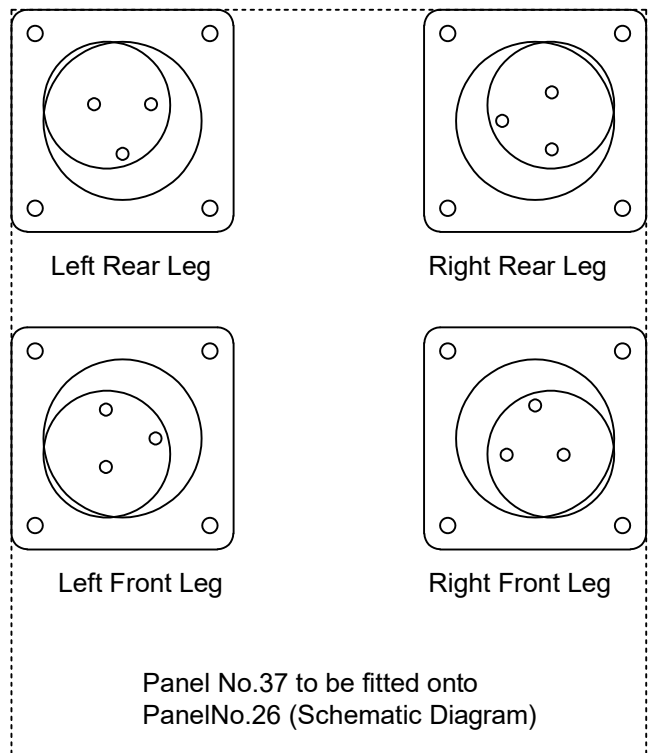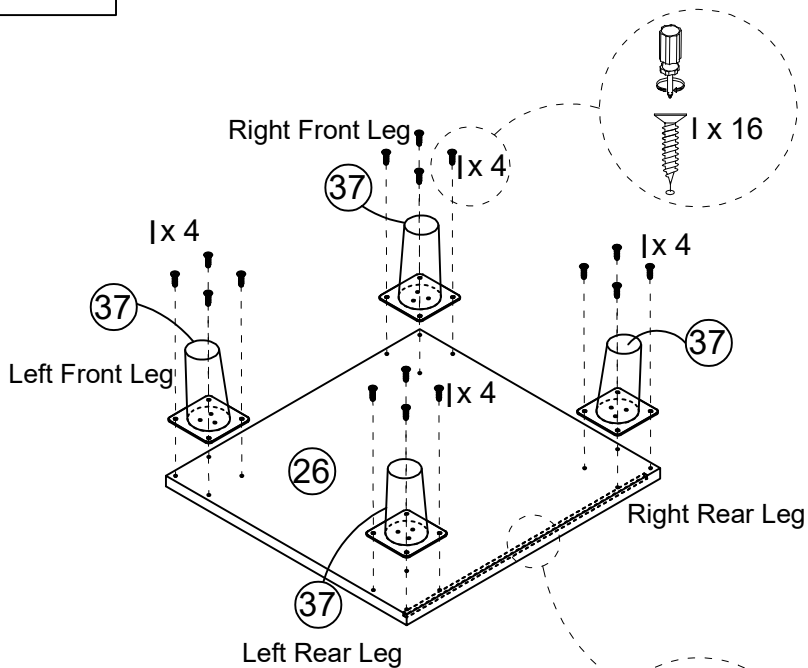
13




I	x16
	
M3.5*14mm	

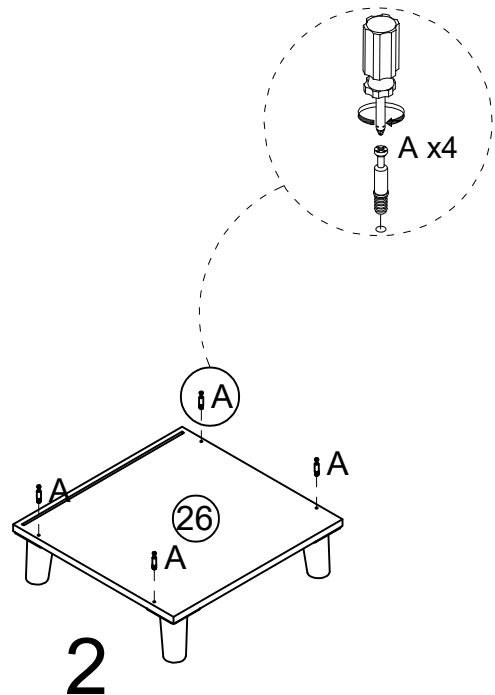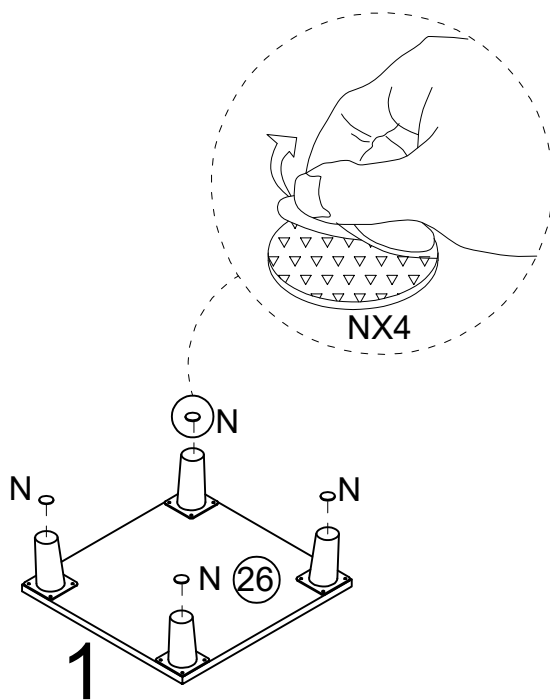
14




N	x4	A	x4
			
ø25mm		M6X33mm	

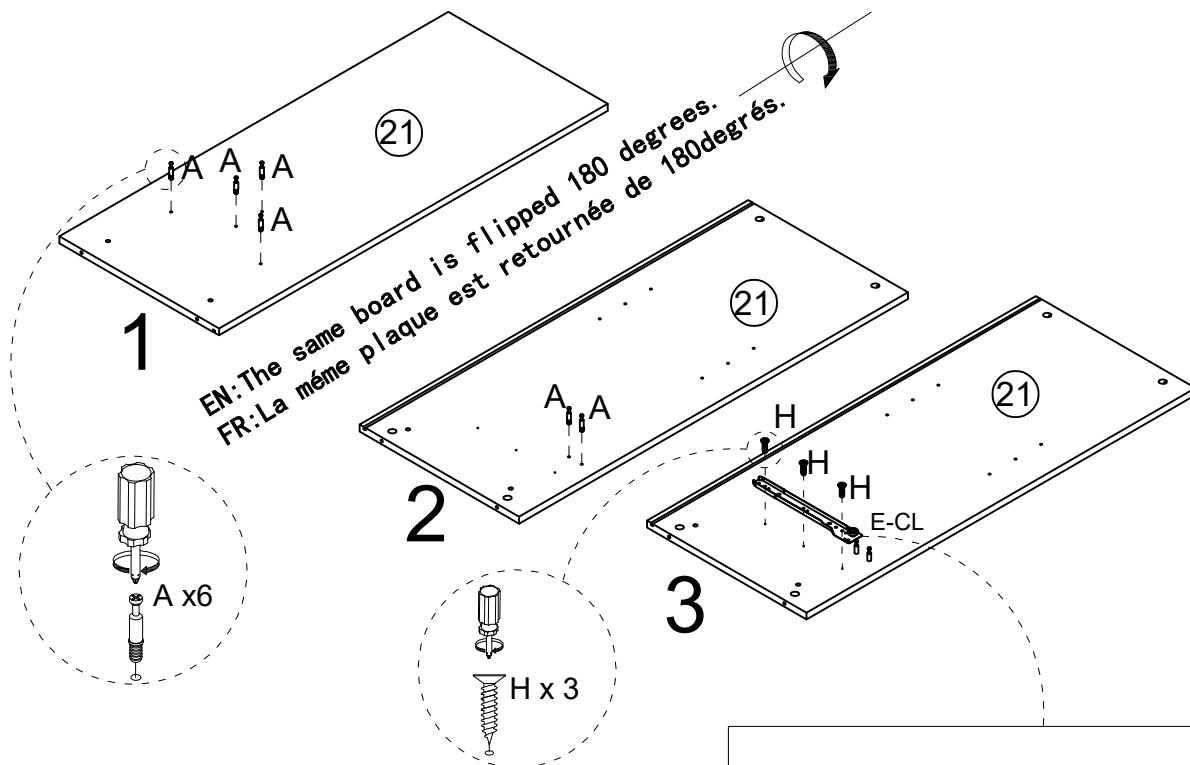
15




A	x6	H	x3	E	x1
					
M6X33mm		M3.5*12mm		250mm	

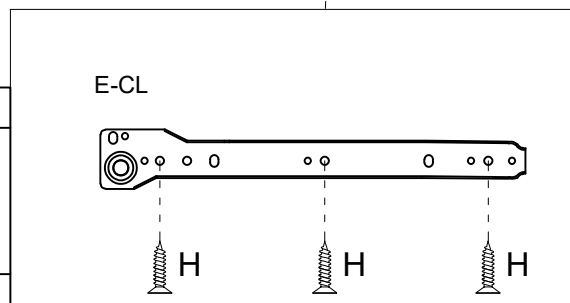


16

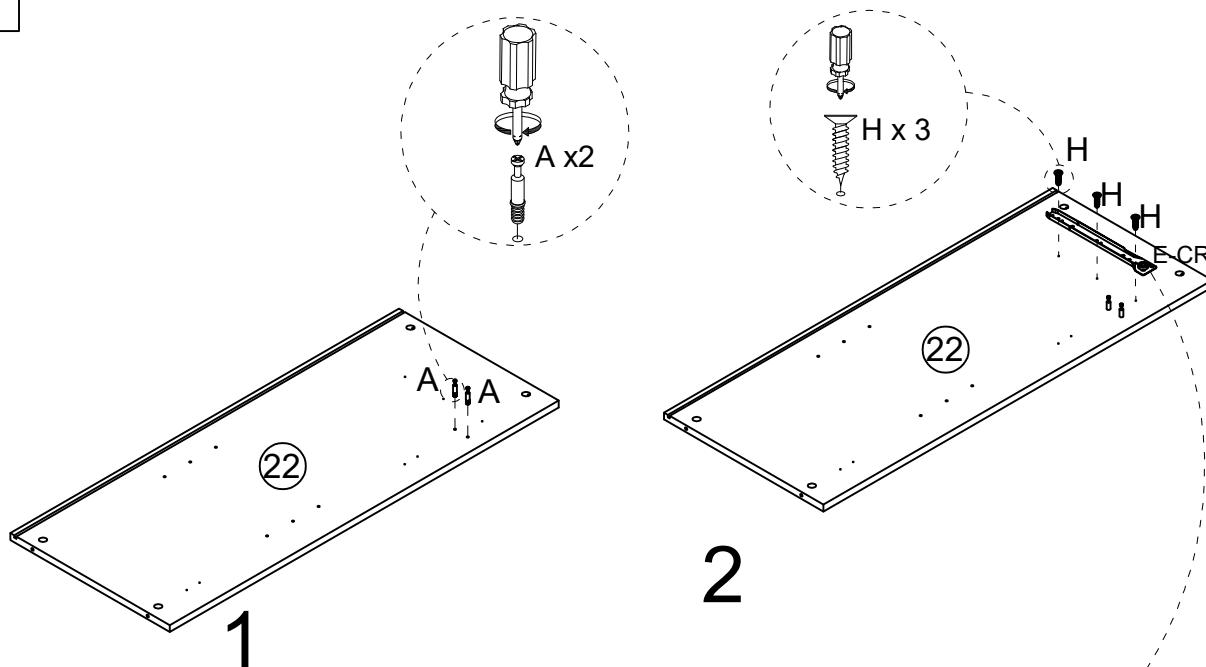

A	x2	H	x3	E	x1
					
M6X33mm		M3.5*12mm		250mm	

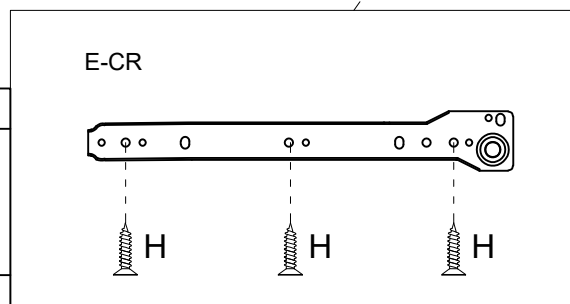


17

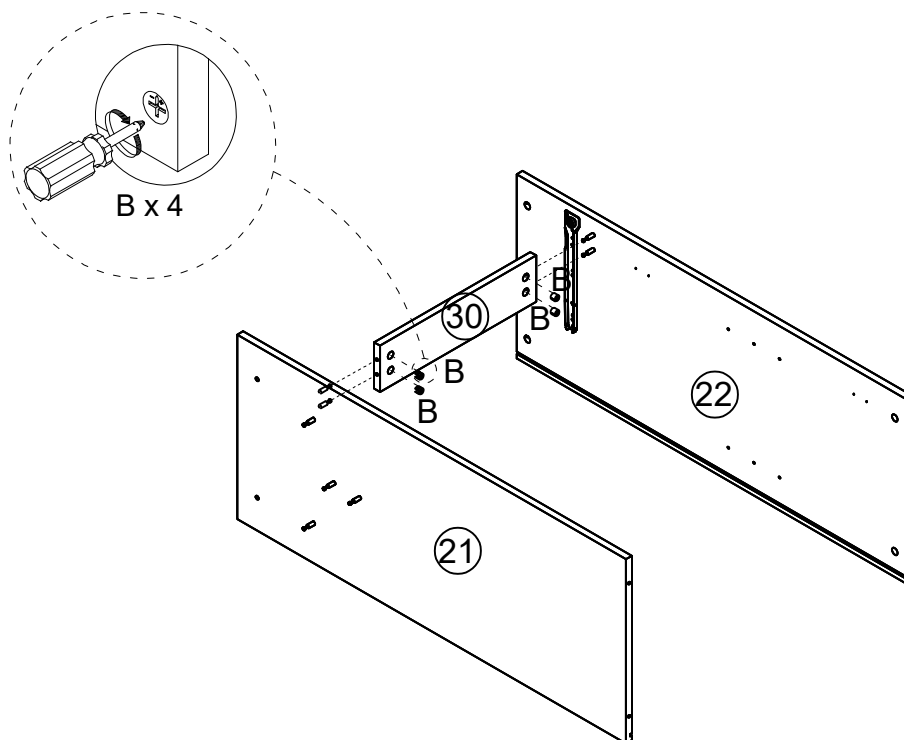


B	x4
	
ø12X10mm	

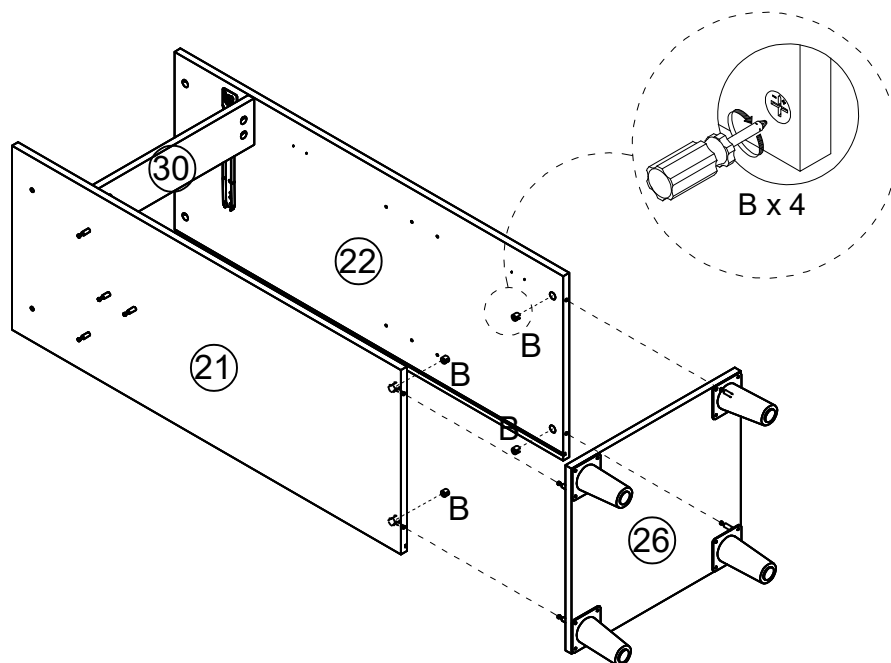18




B	x4
	
ø12X10mm	

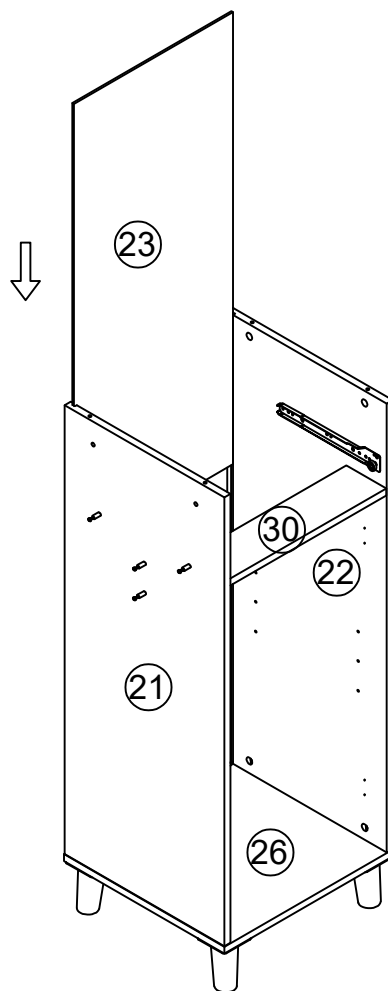
19



20

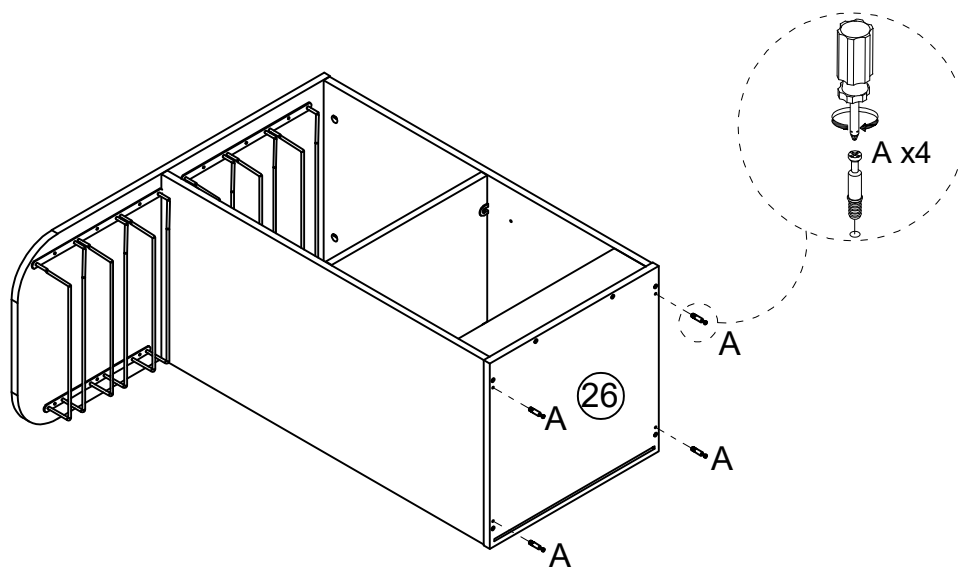


A	x4
	
M6X33mm	

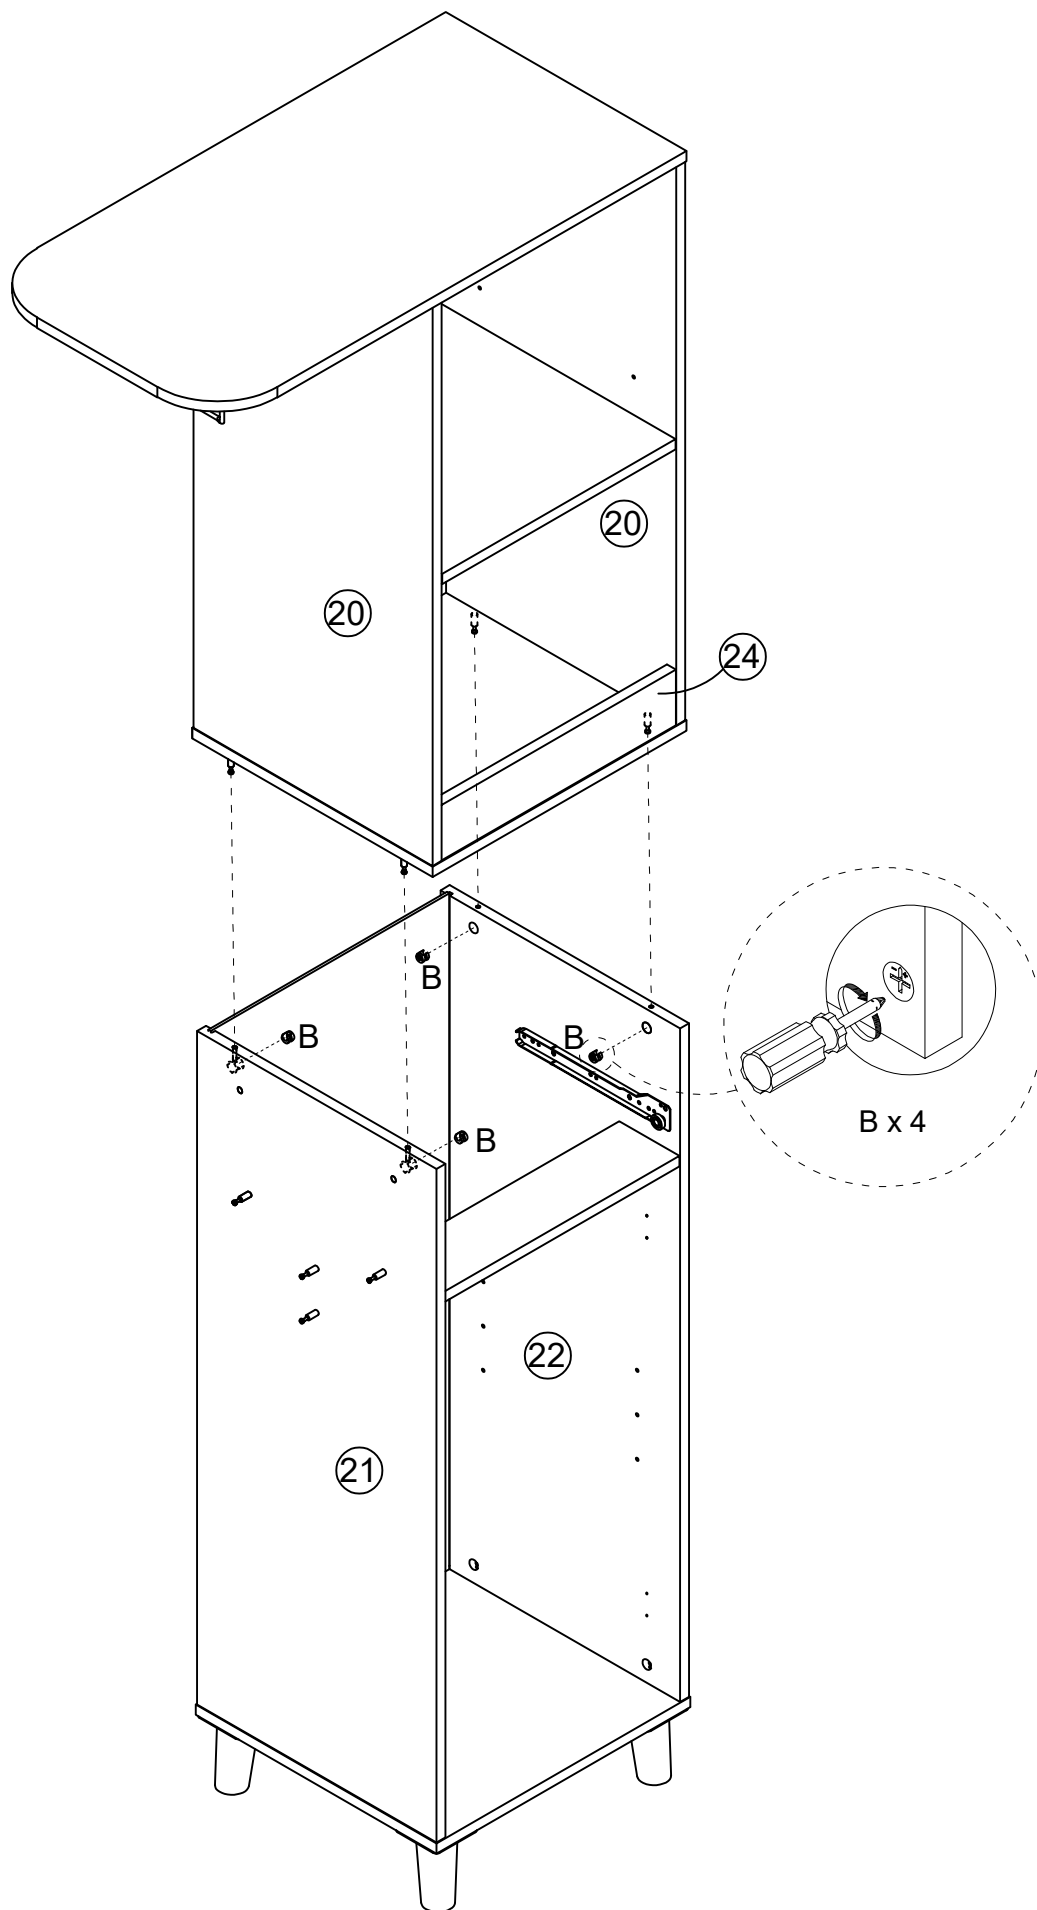


B	x4
$\varnothing 12 \times 10 \text{ mm}$	

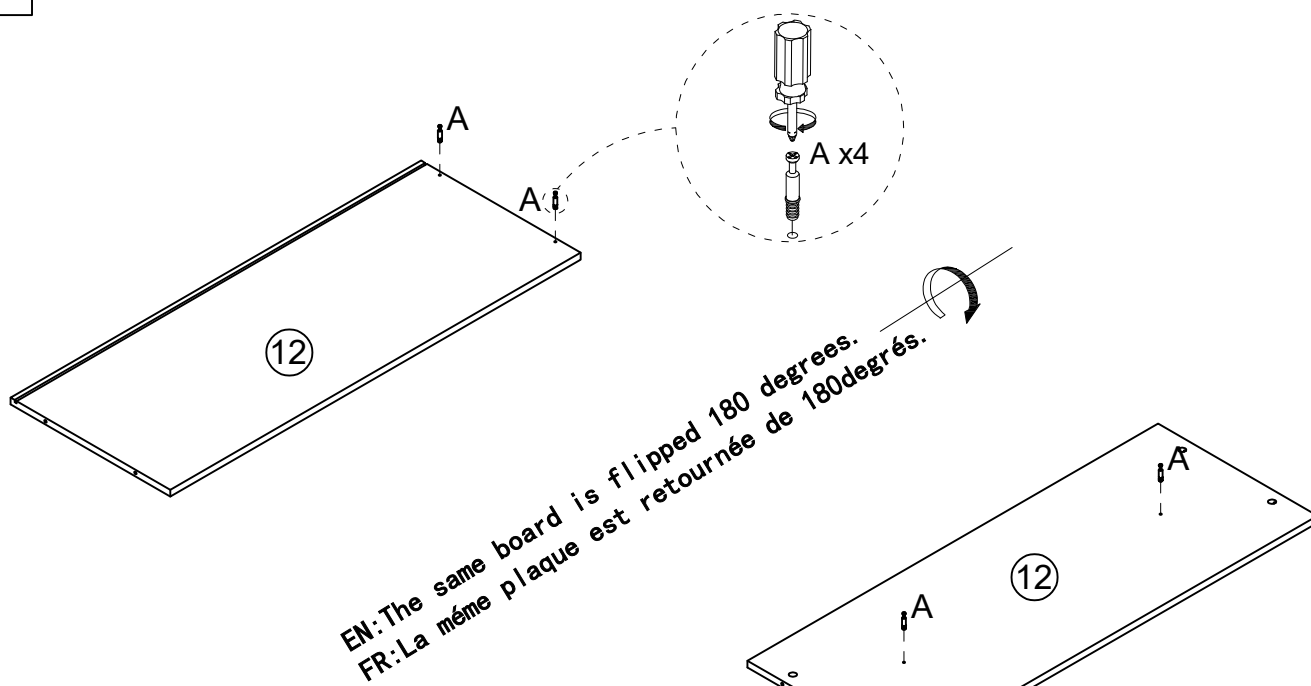22




A	x4
	
M6X33mm	

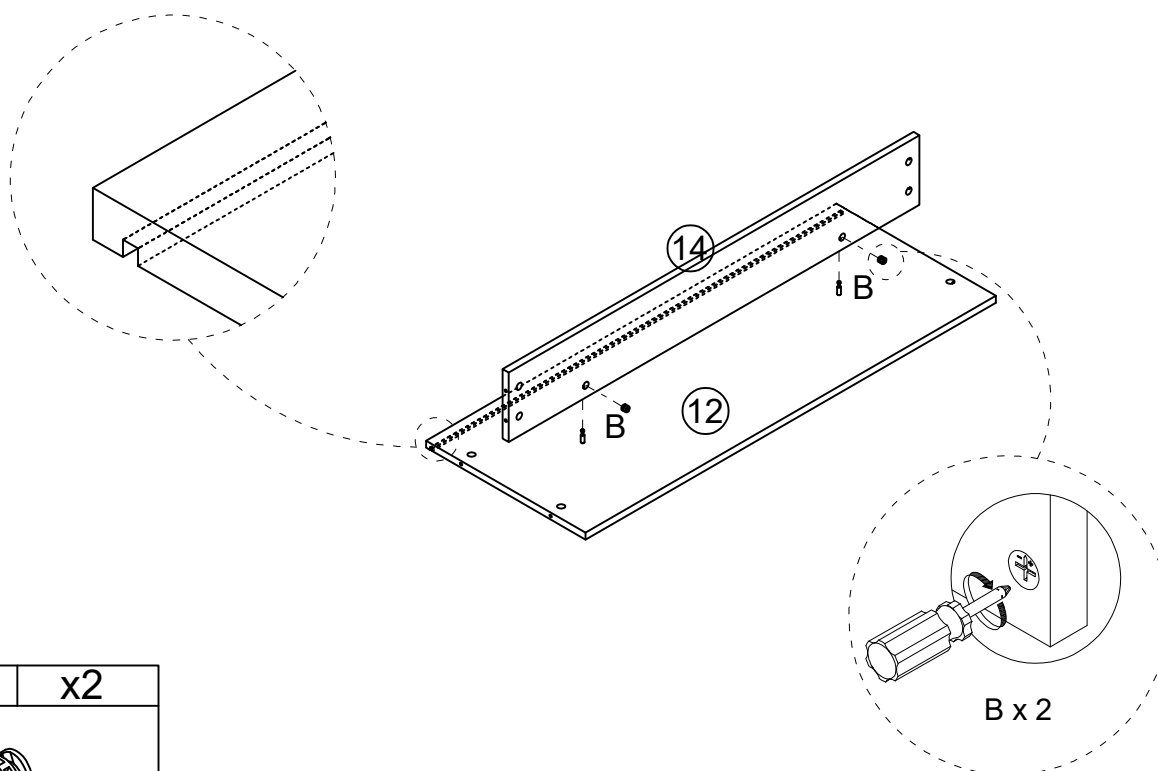23




B	x2
	
Ø12X10mm	

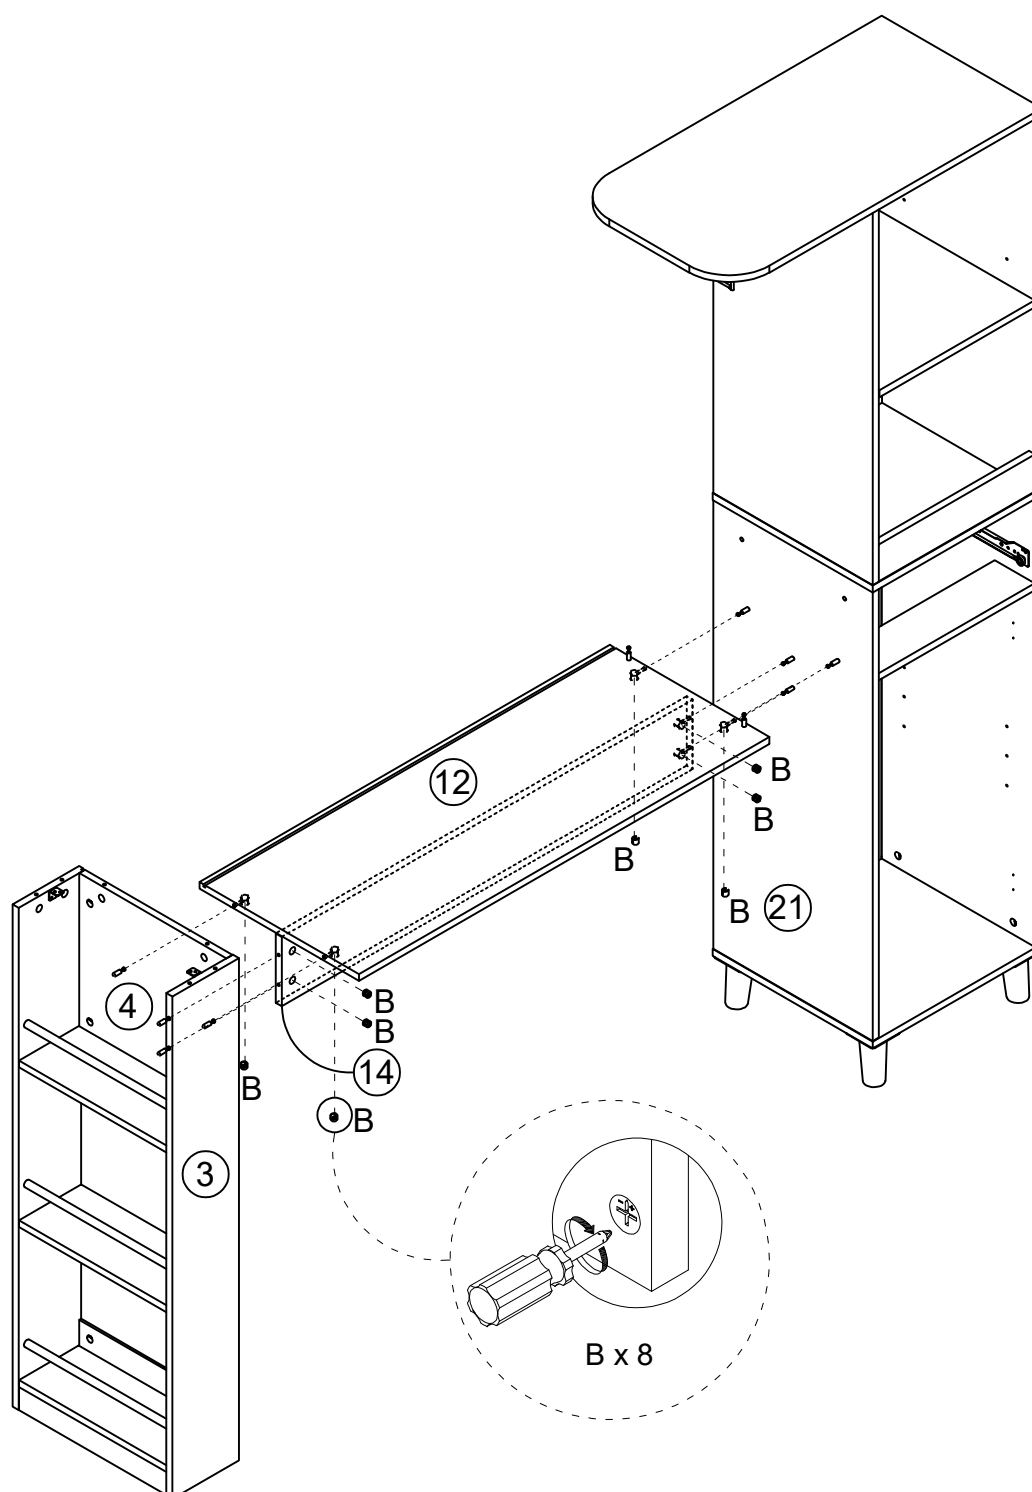


B	x8
	
Ø12X10mm	

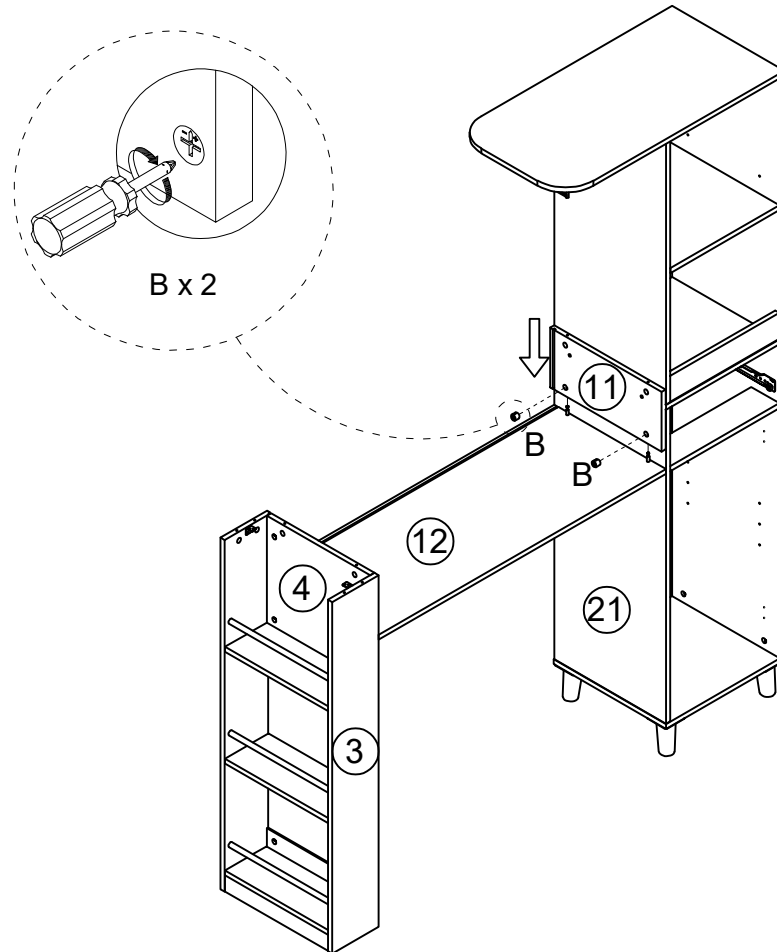
25



B	x2
	
Ø12X10mm	

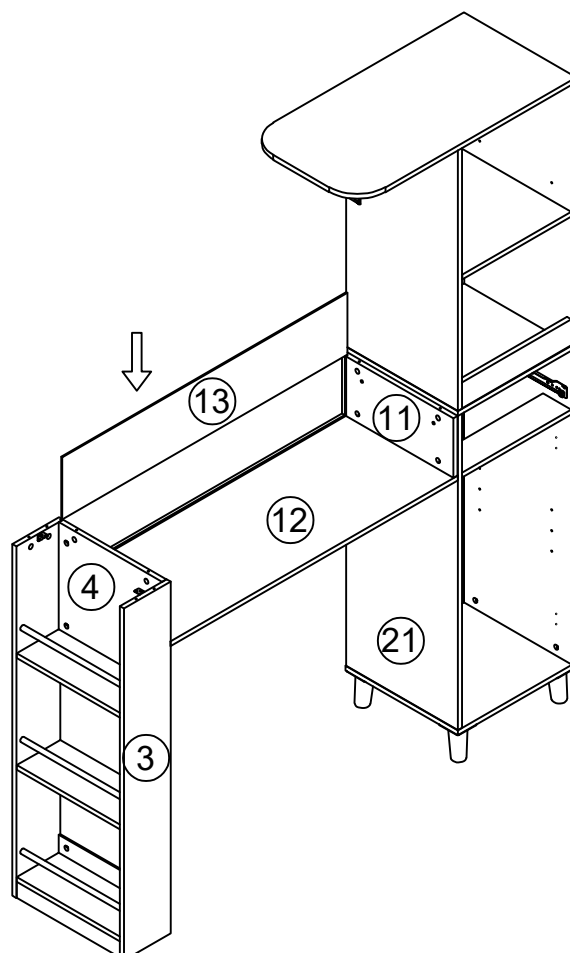
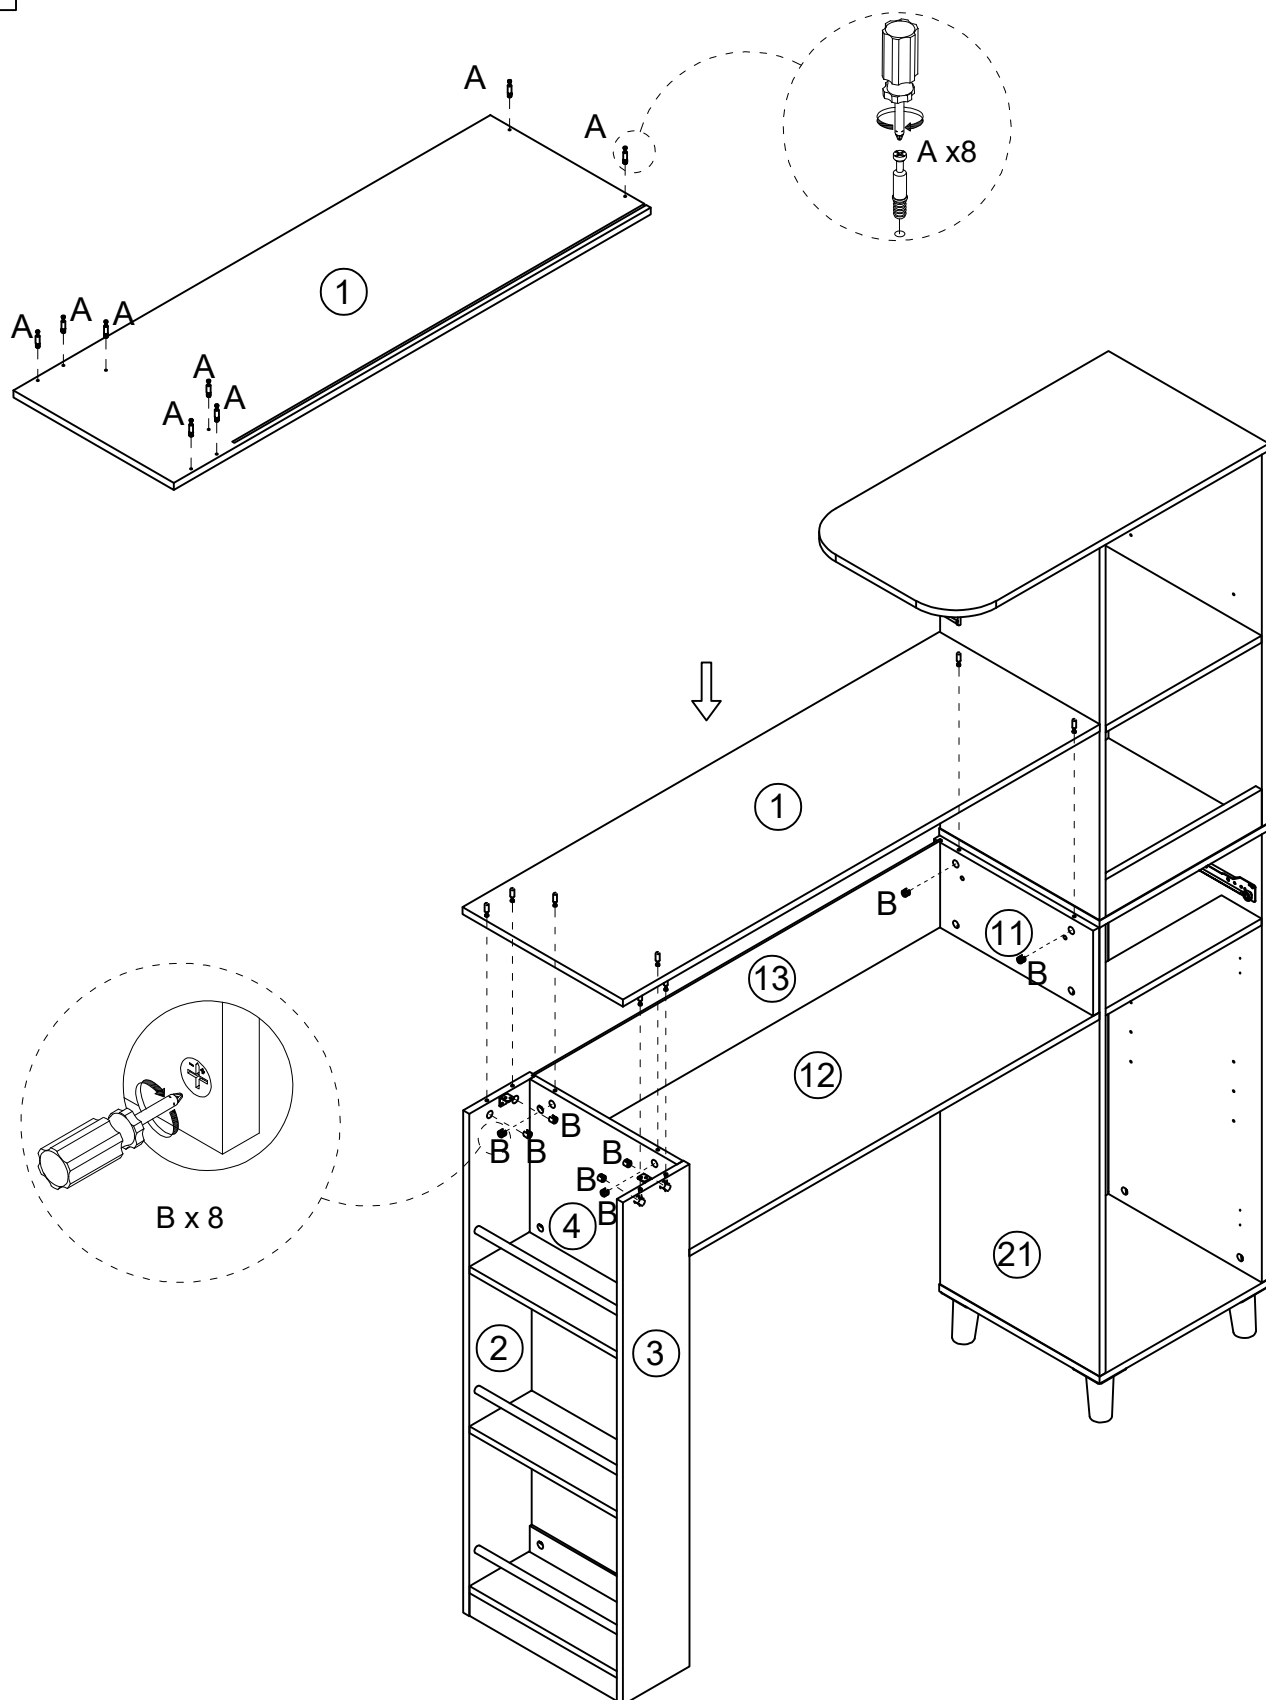
26







A	x8	B	x8
			
M6X33mm		Ø12X10mm	

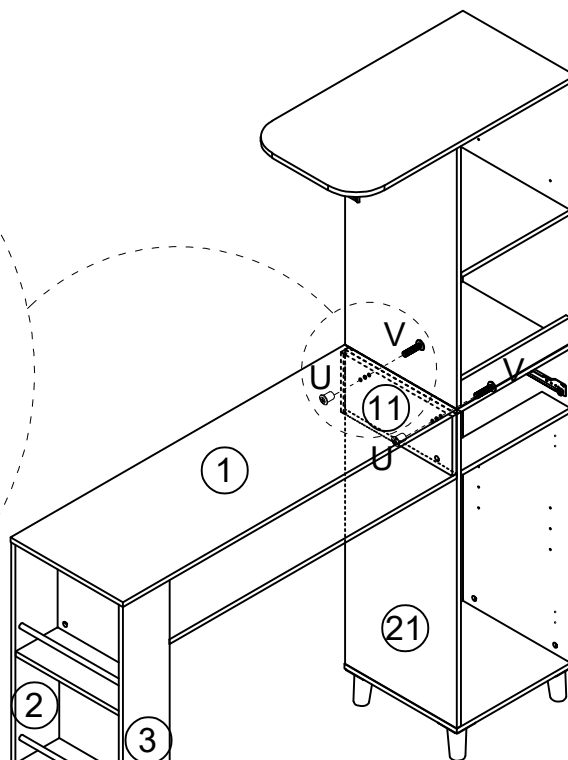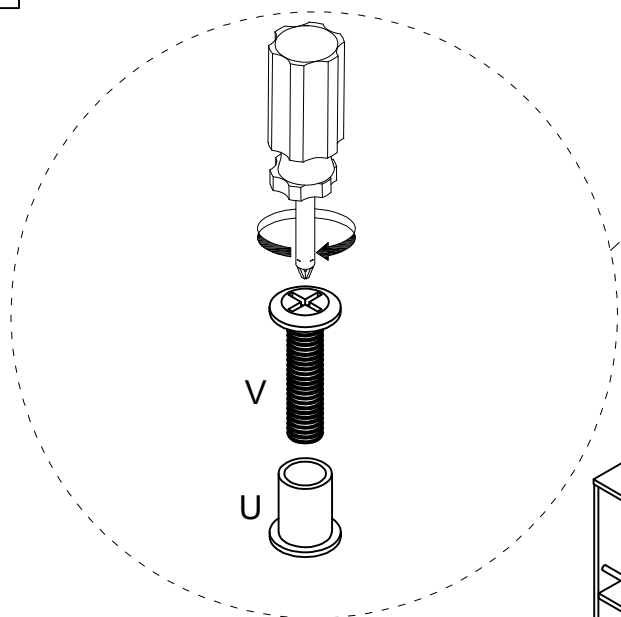28







U	x2	V	x2
M6*12mm		M6*25mm	




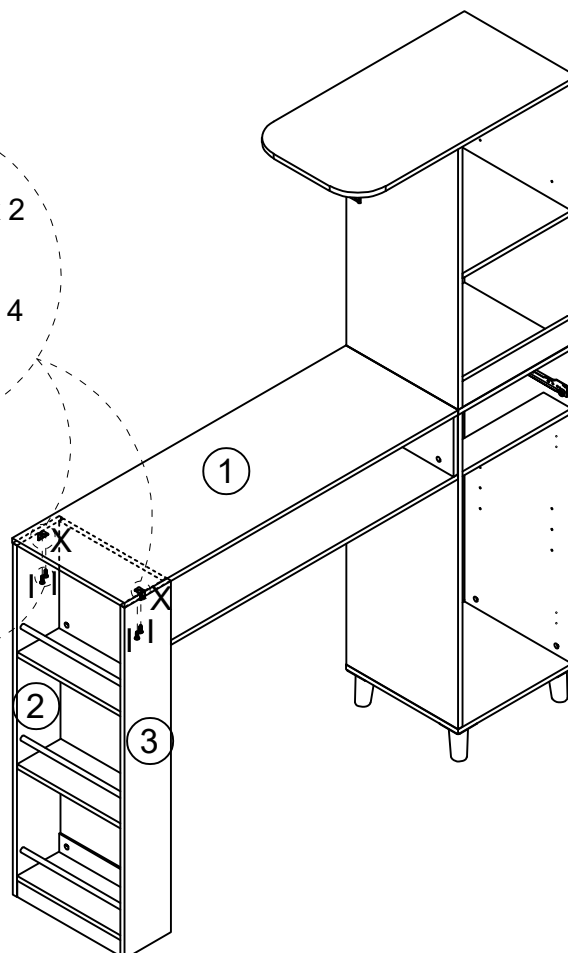
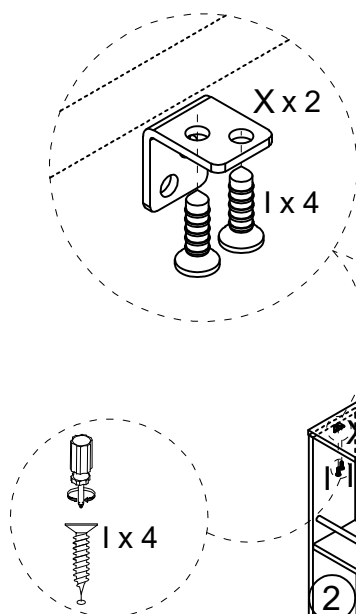
29









I	x4
M3.5*14mm	

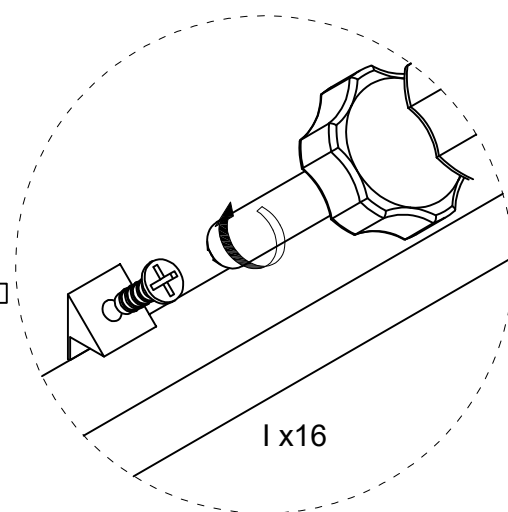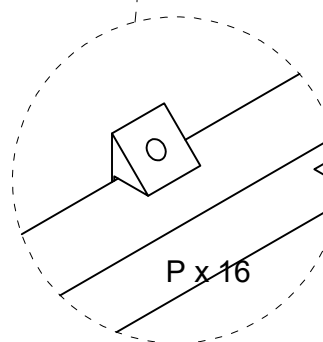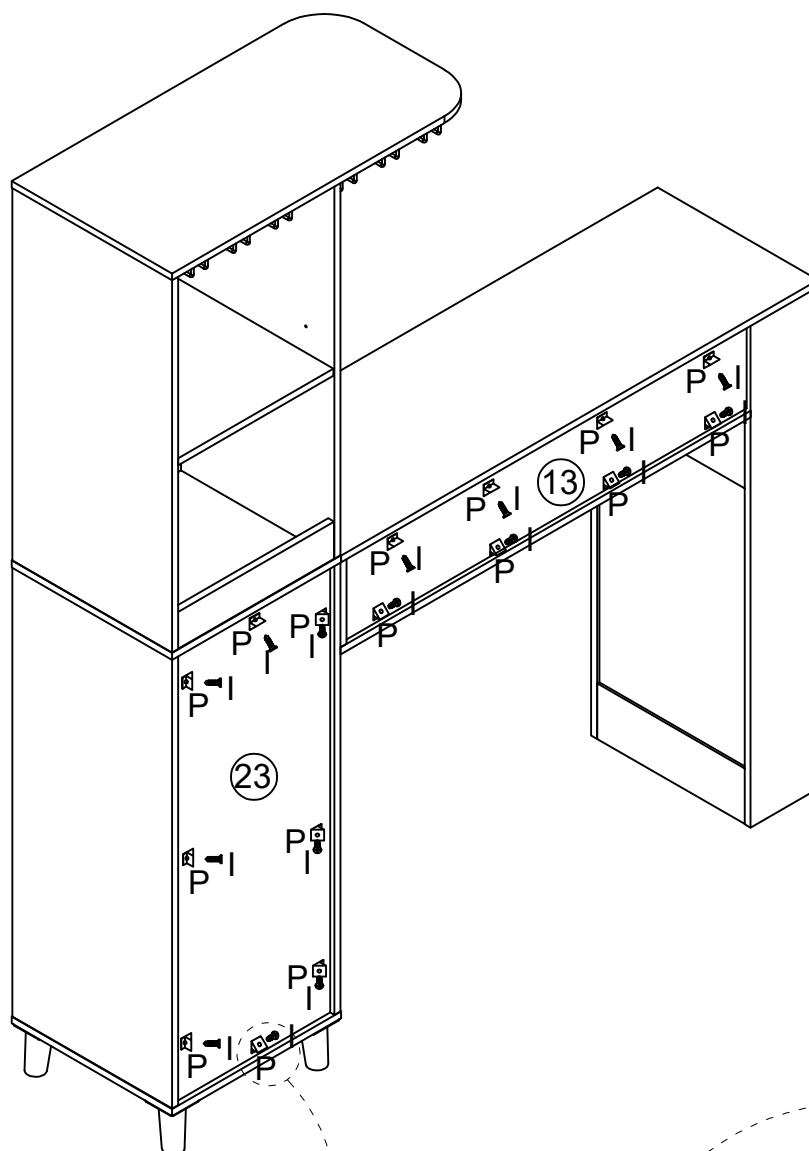


P	x16	I	x16
			
		M3.5*14mm	

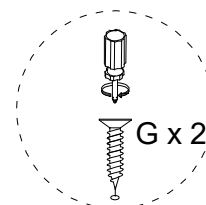
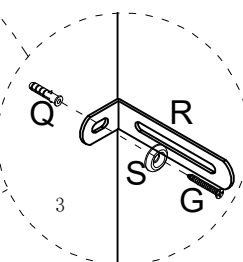
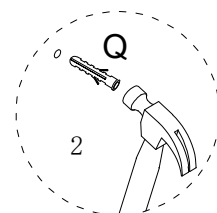
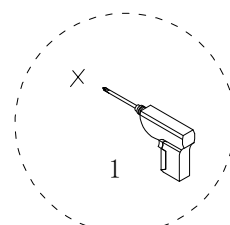
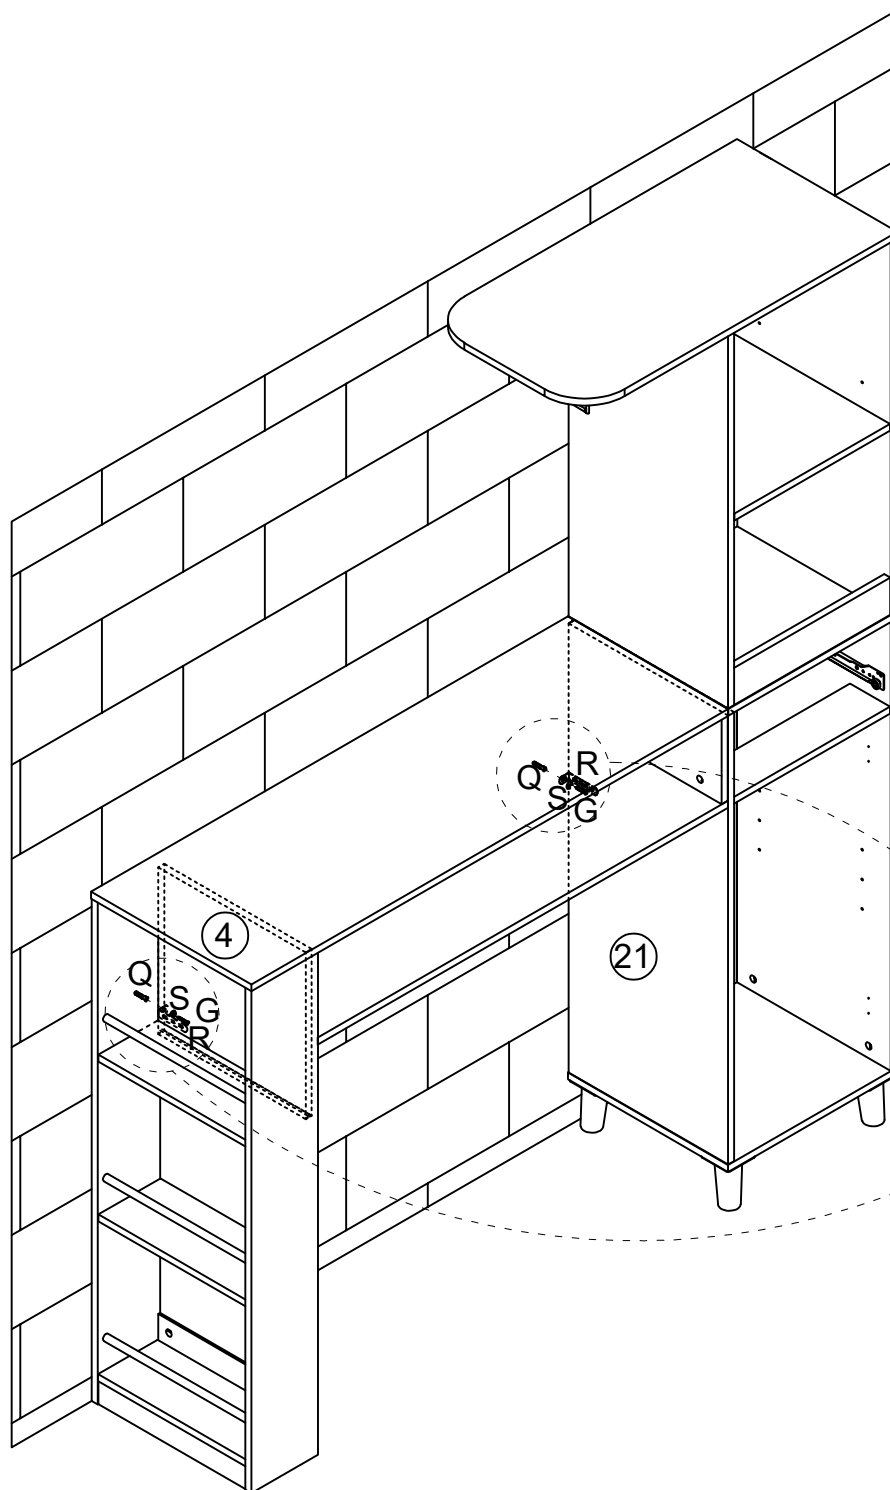





R	2	Q	x2	S	x2	G	x2
							
16mm		M7*27mm				M4*30mm	

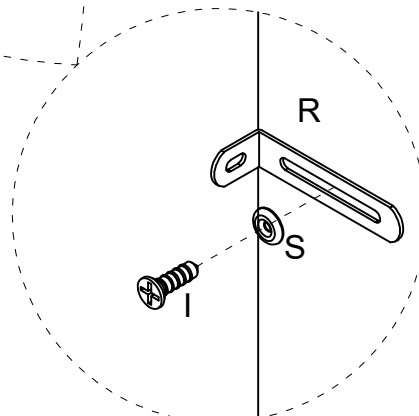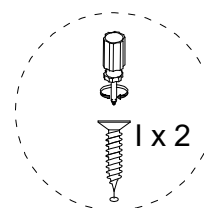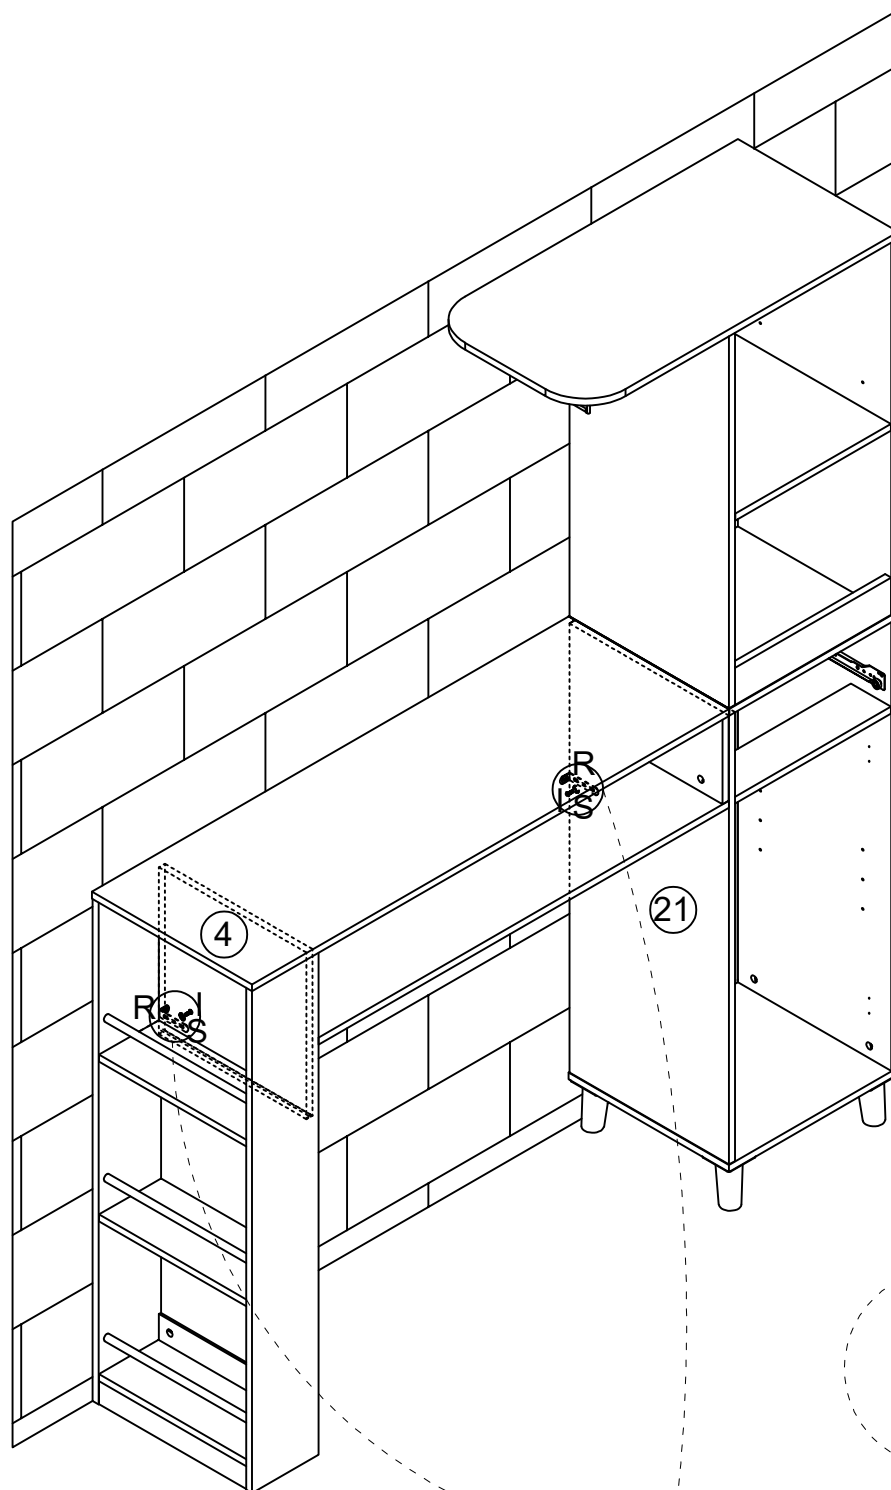




S	x2	I	x2
			
		M3.5*14mm	

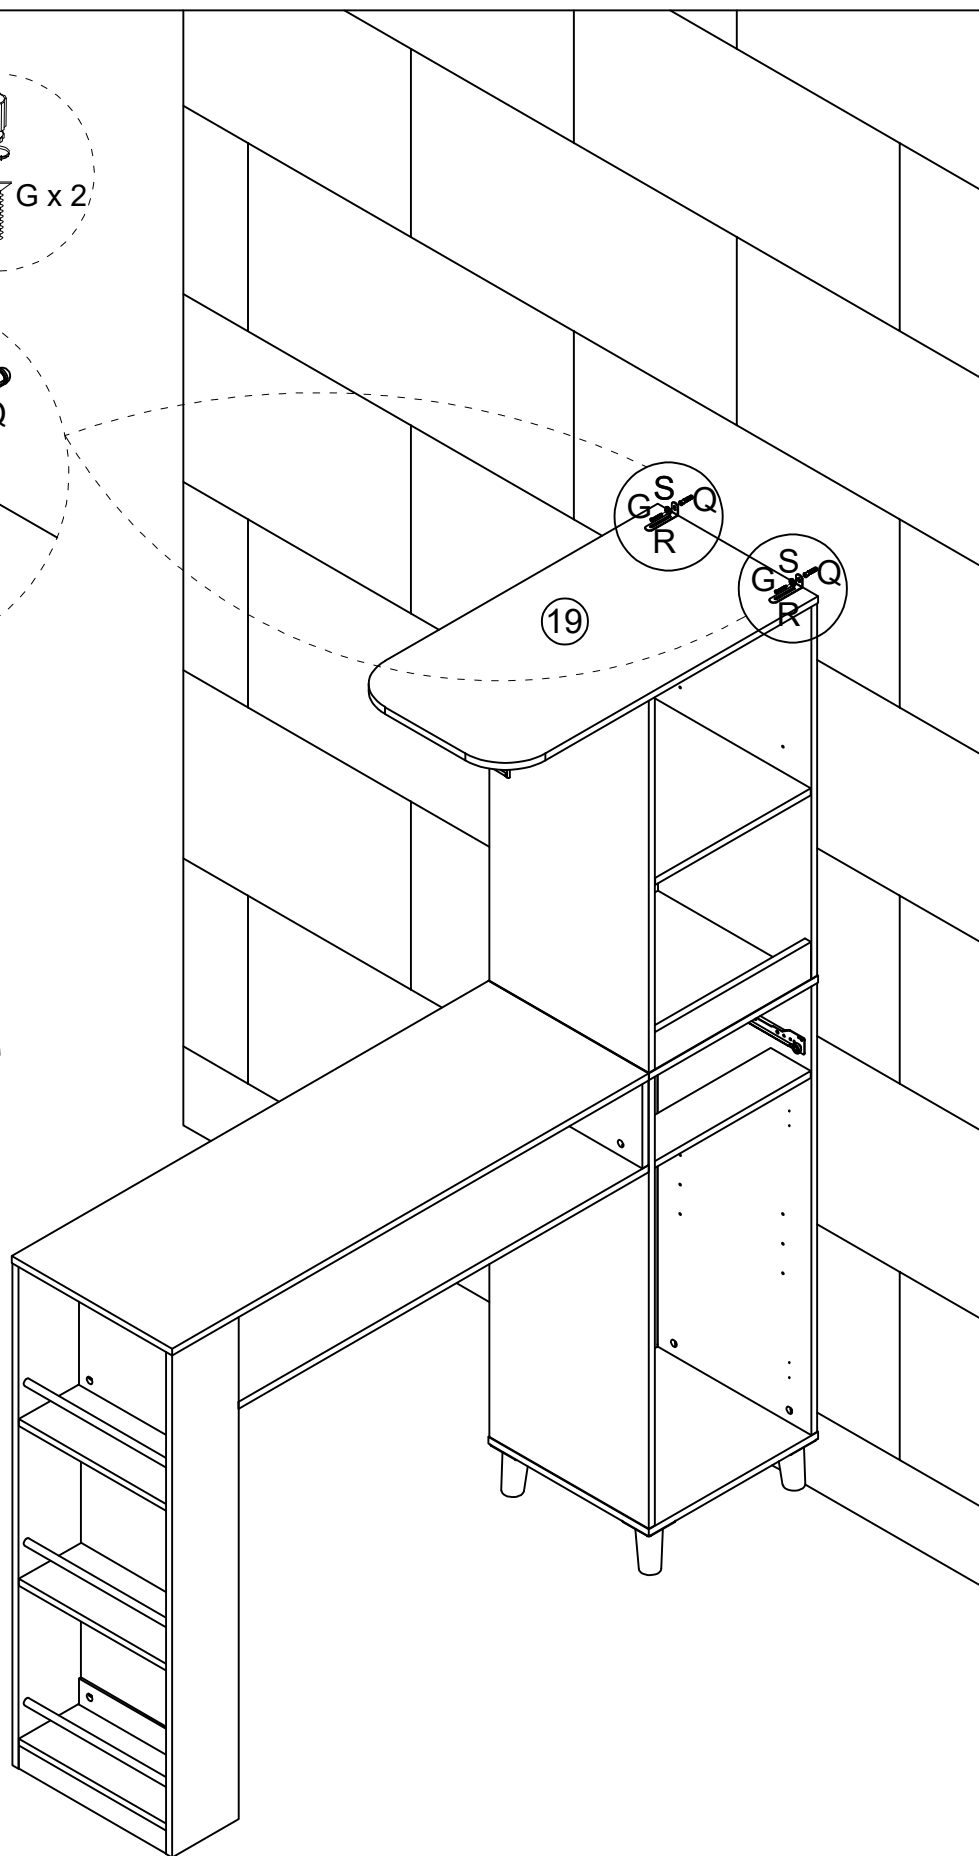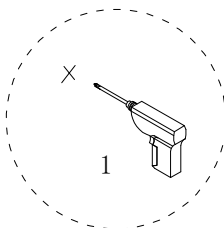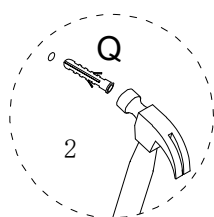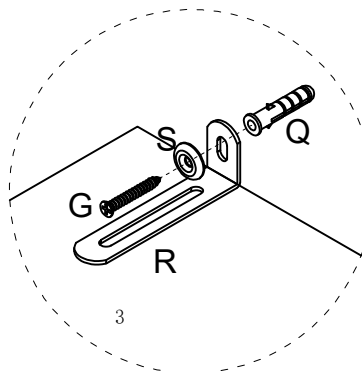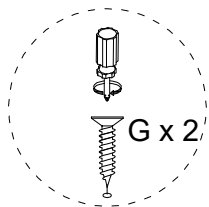33





R	2	Q	x2	S	x2	G	x2
							
16mm		M7*27mm				M4*30mm	

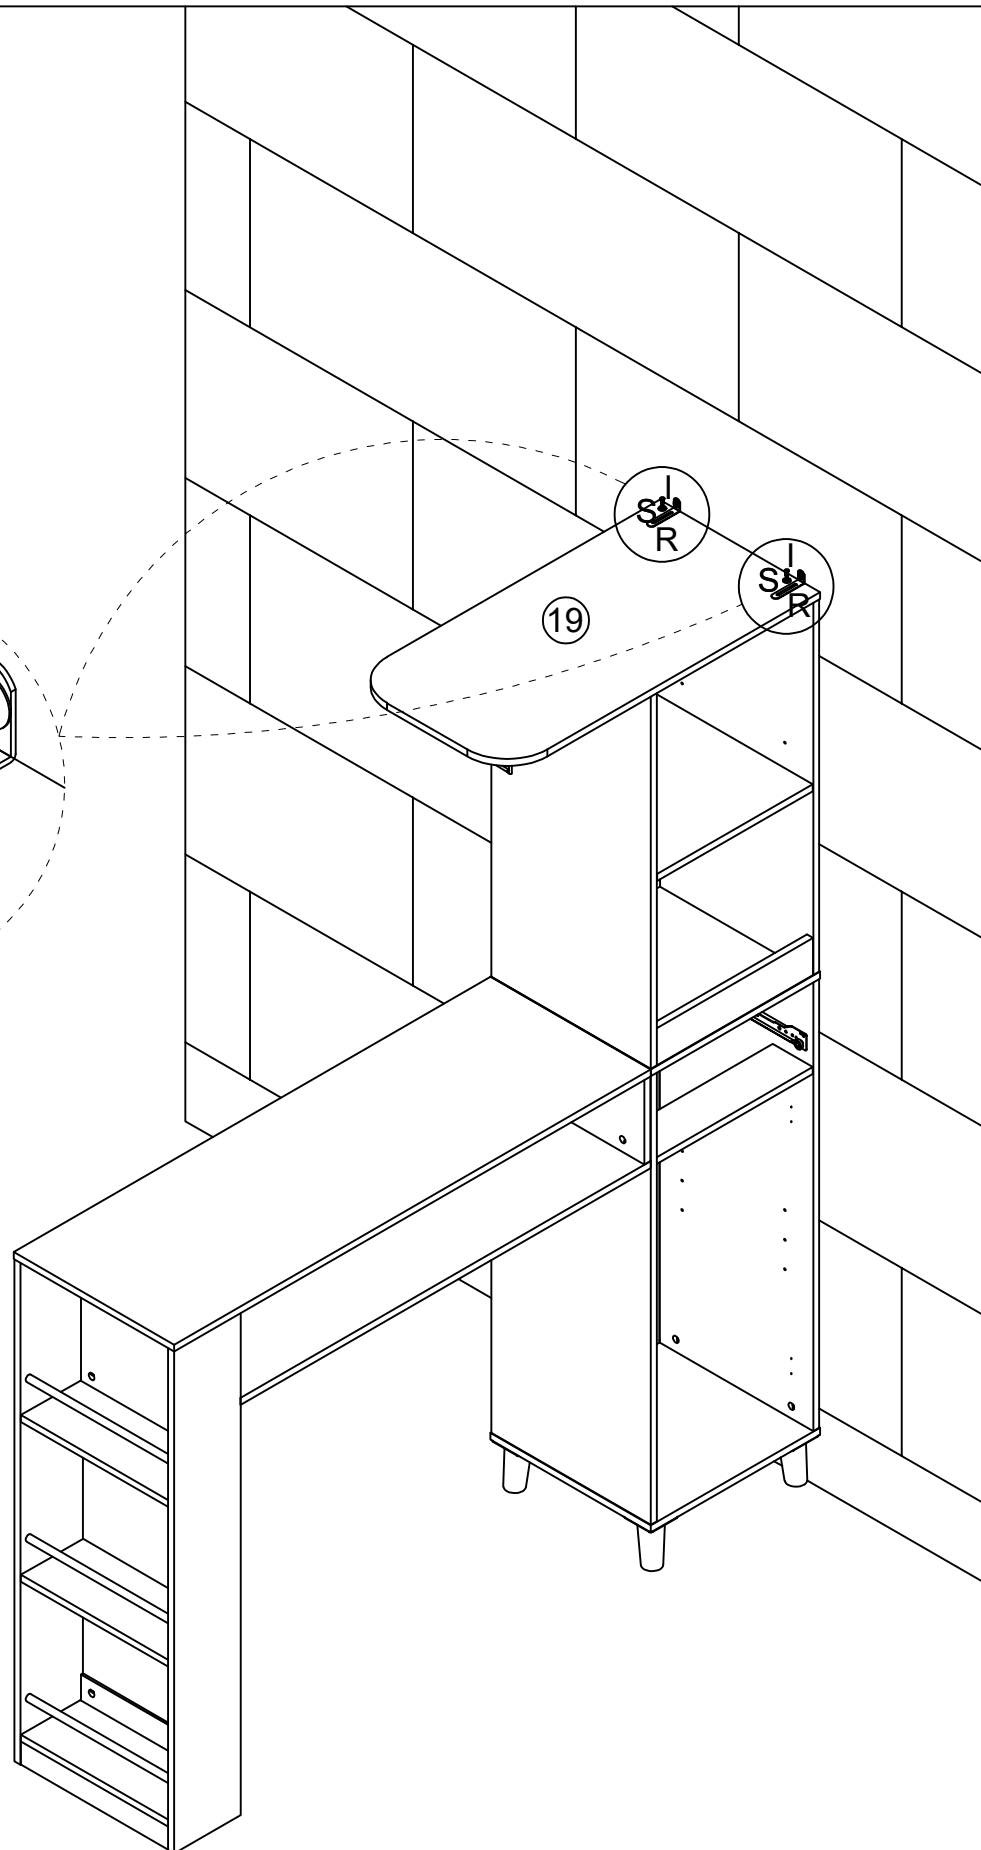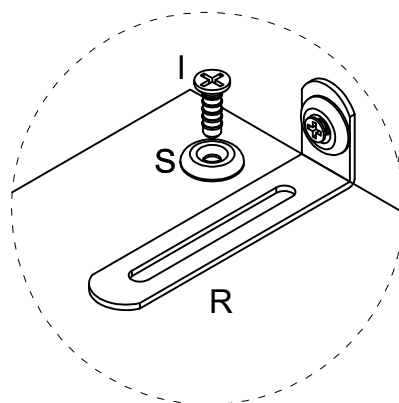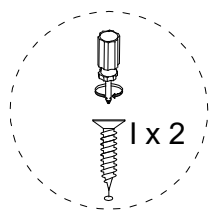34





S	x2	I	x2
		M3.5*14mm	

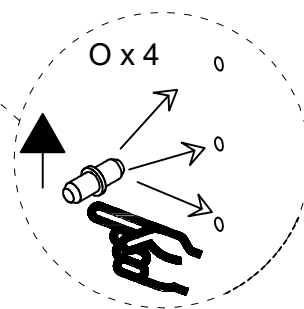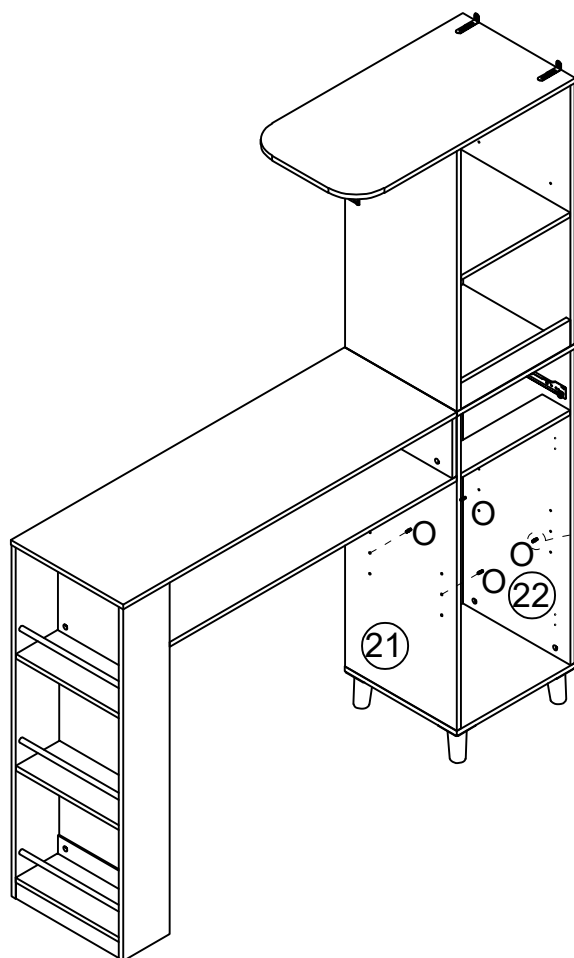
1






2

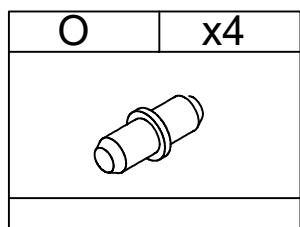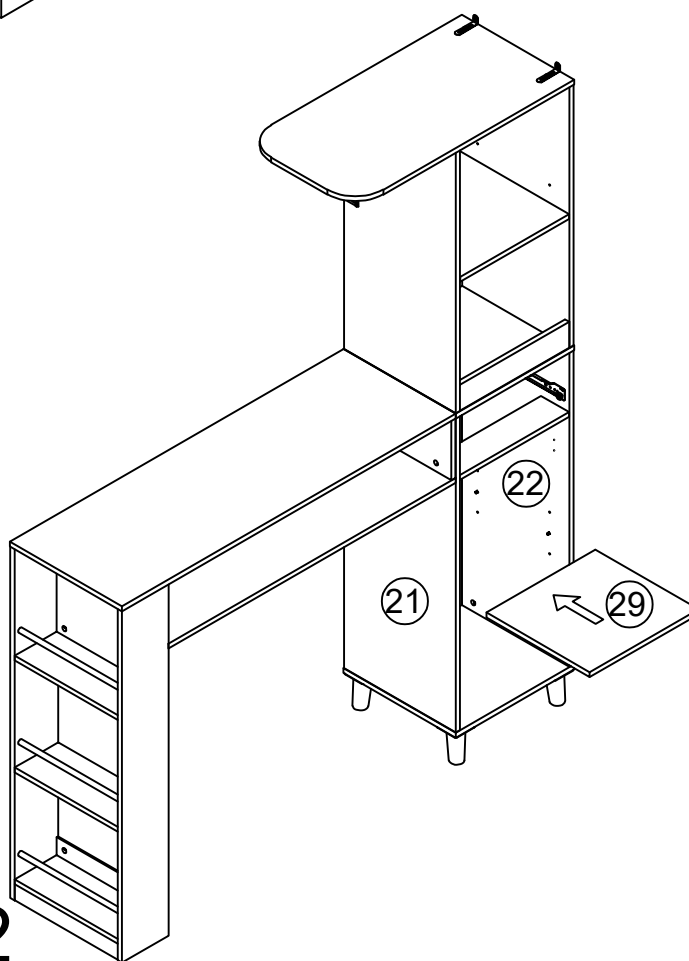




36

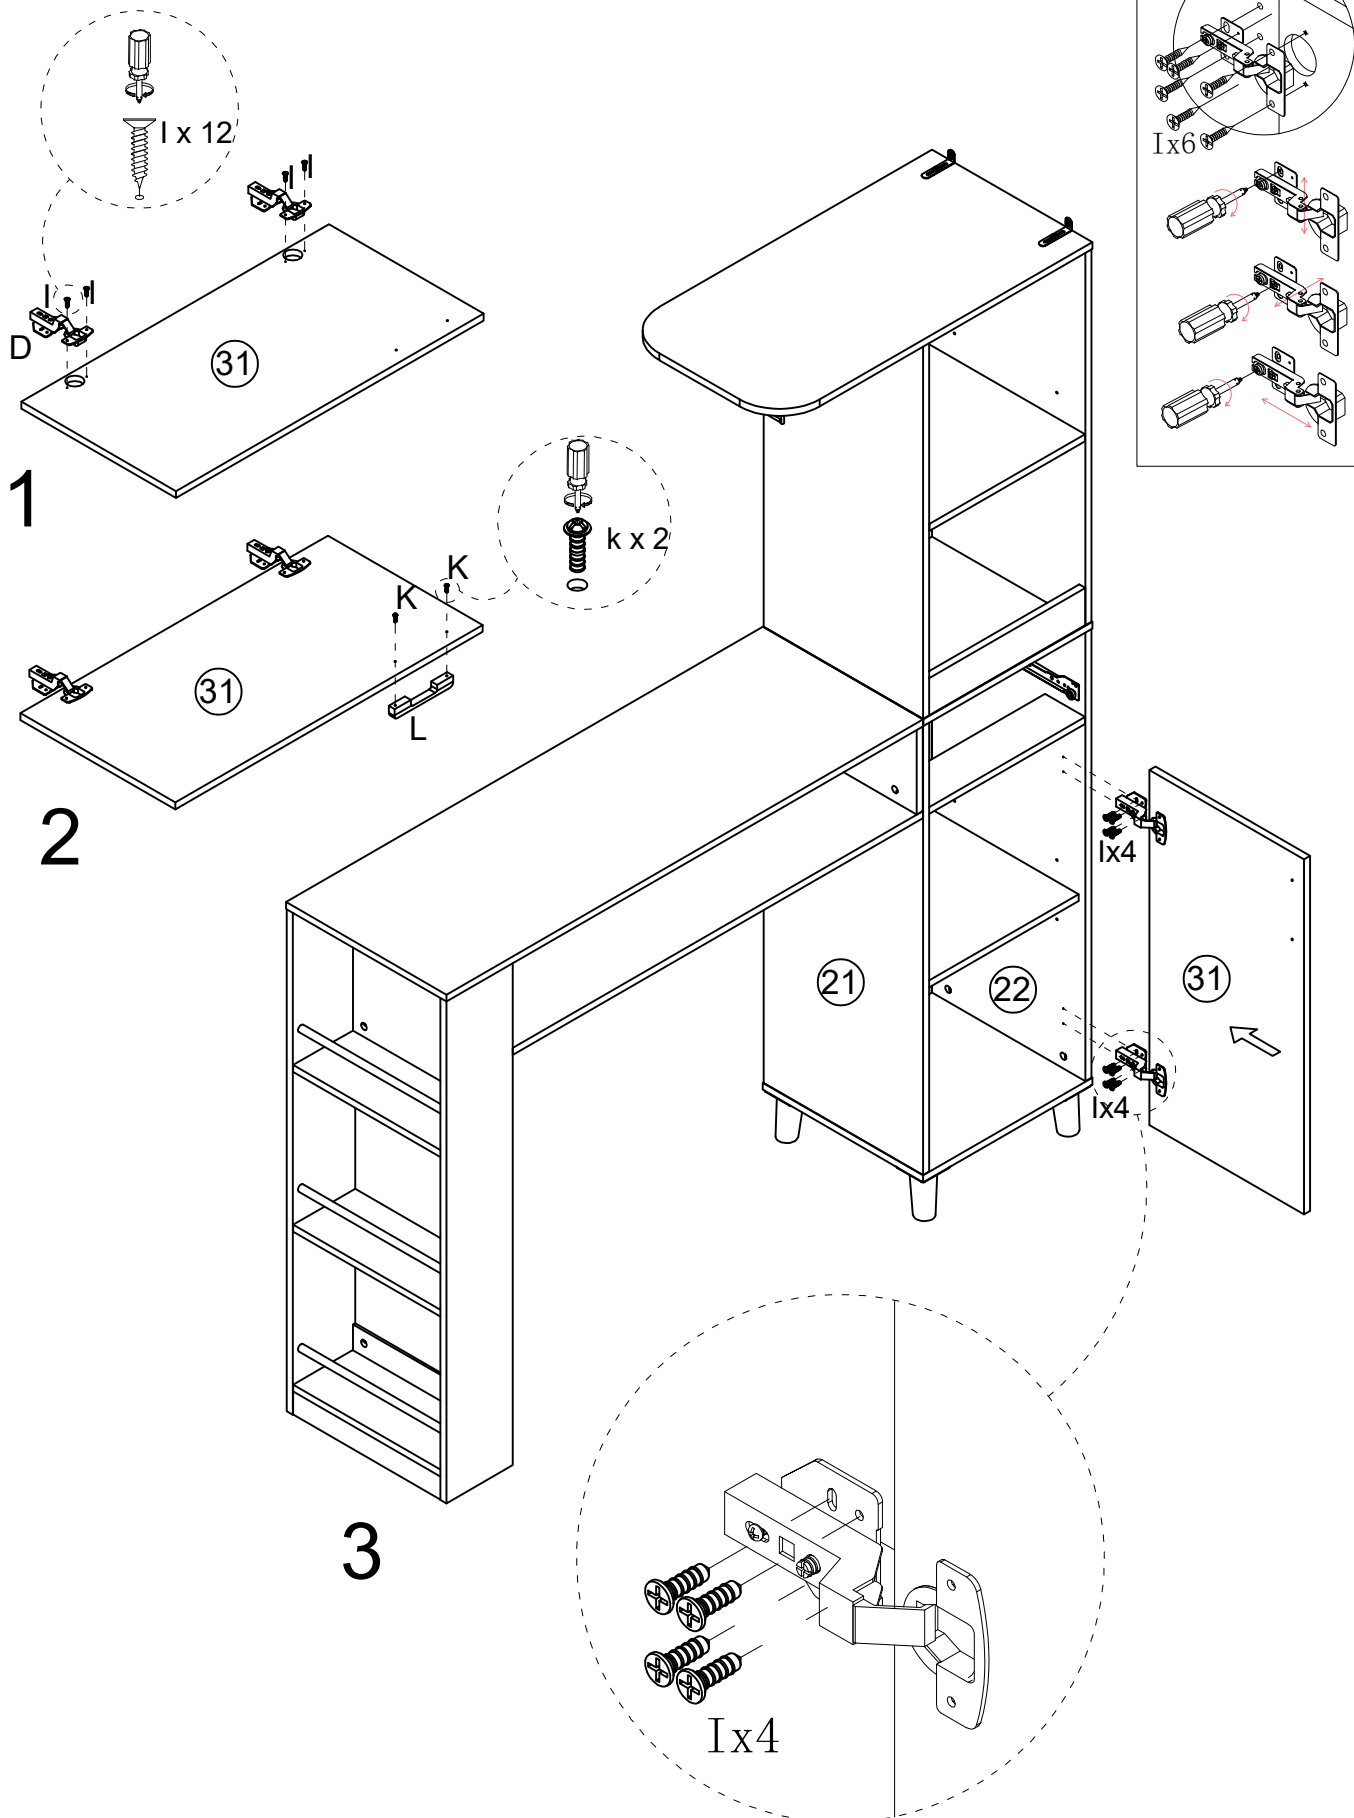


D	x2	I	x12	K	x2	L	x1
							
ø35		M3.5*14mm		M4*18mm		128mm	

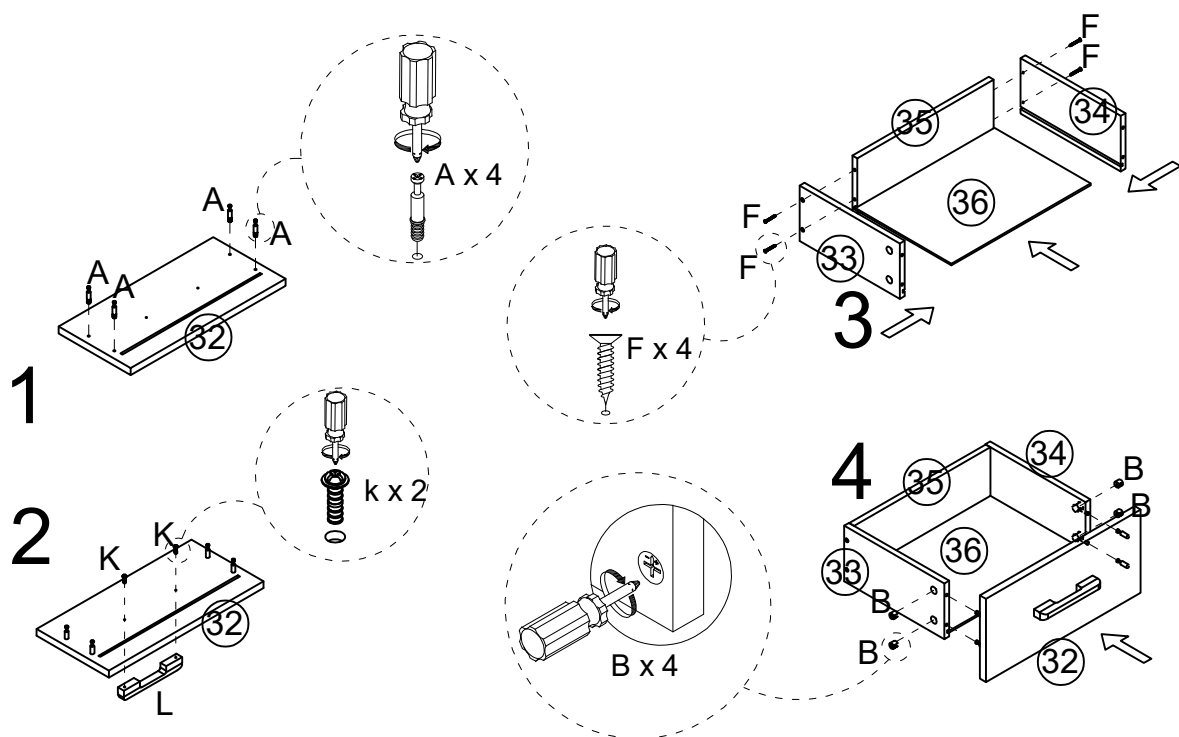

37





A	x4	B	x4	K	x2	L	x1	F	x4
									
M6X33mm		Ø12X10mm		M4*18mm		128mm		M3.5*35mm	

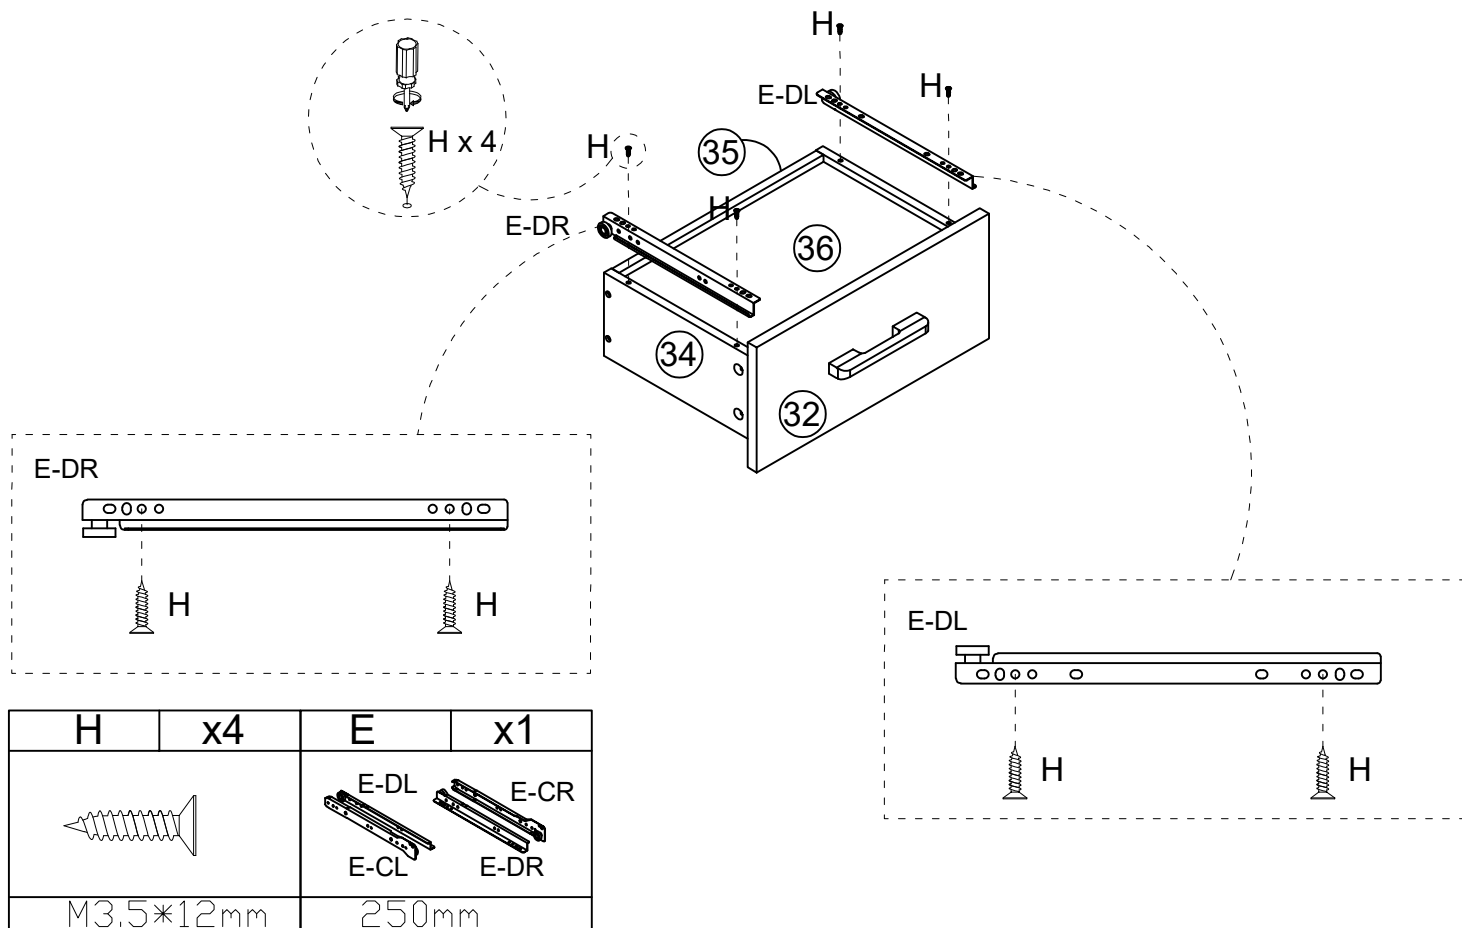

38





H	x4	E	x1
			
M3.5*12mm		250mm	

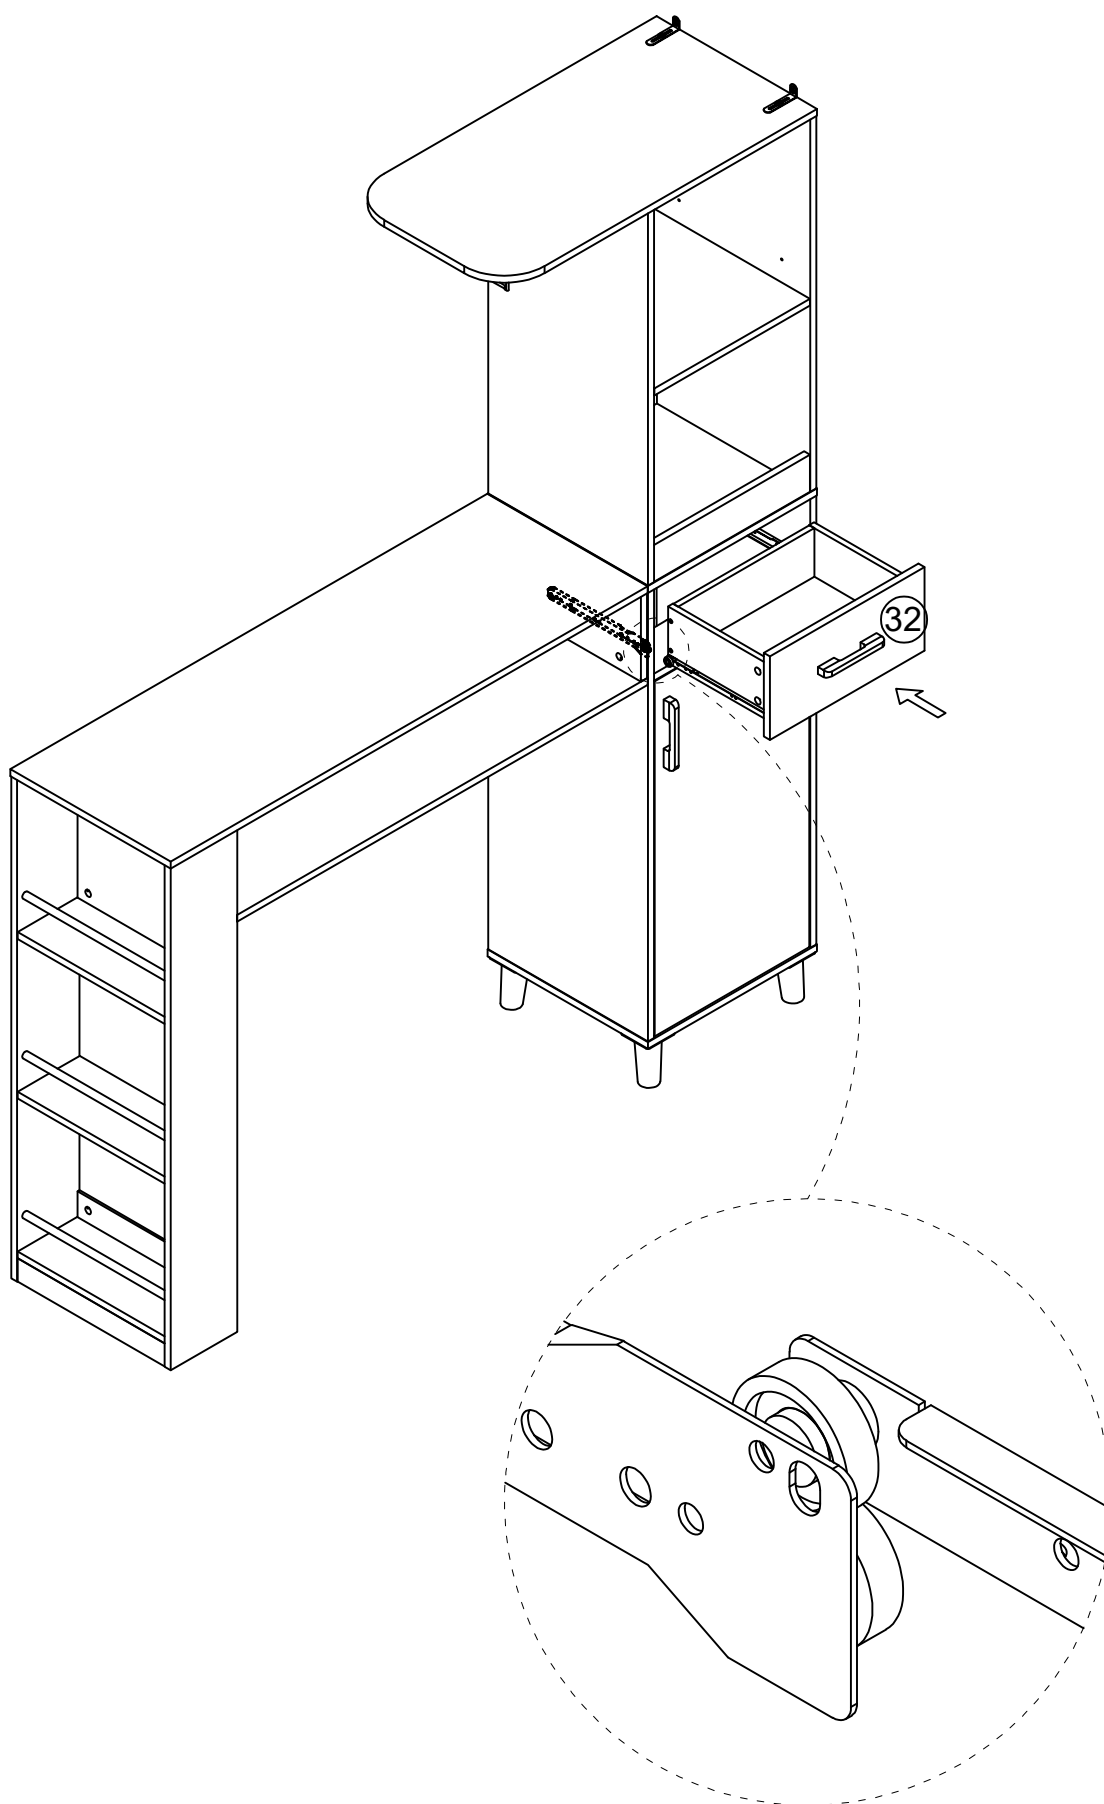


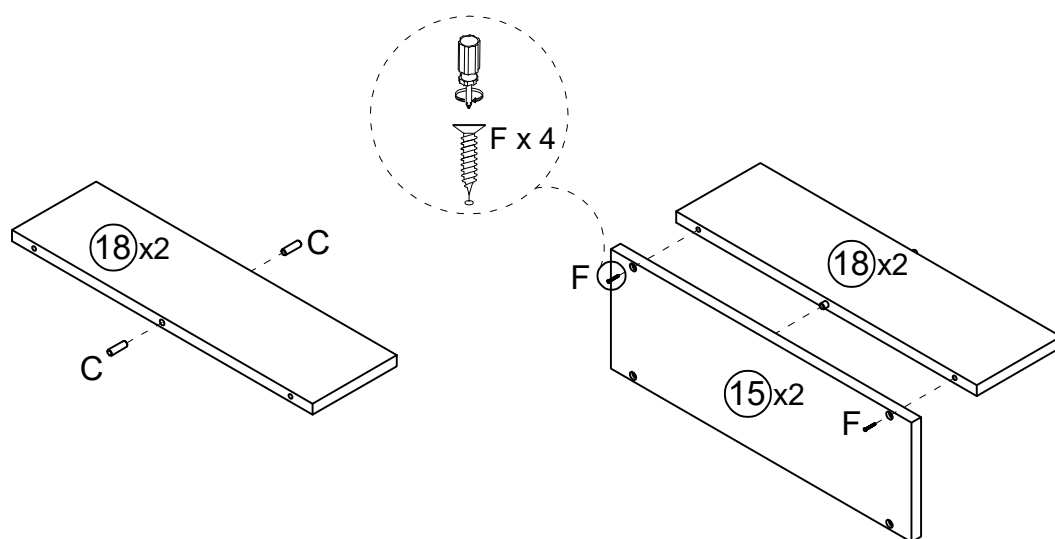



C	x4	F	x4
			
Ø6X20mm		M3.5*35mm	

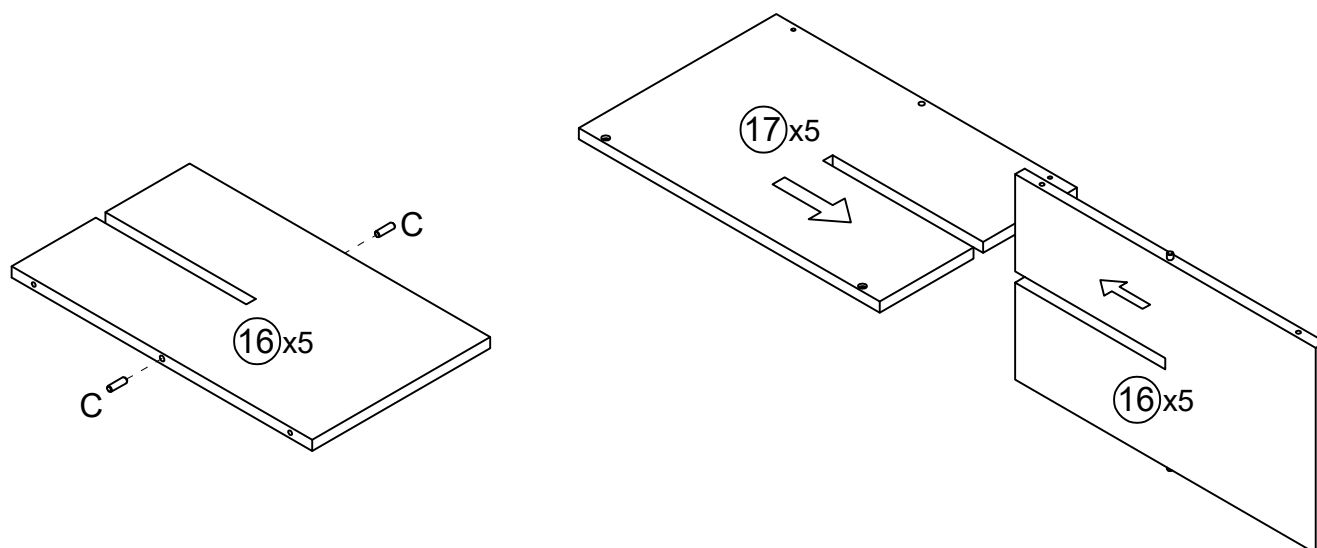


C	x10
	
Ø6X20mm	

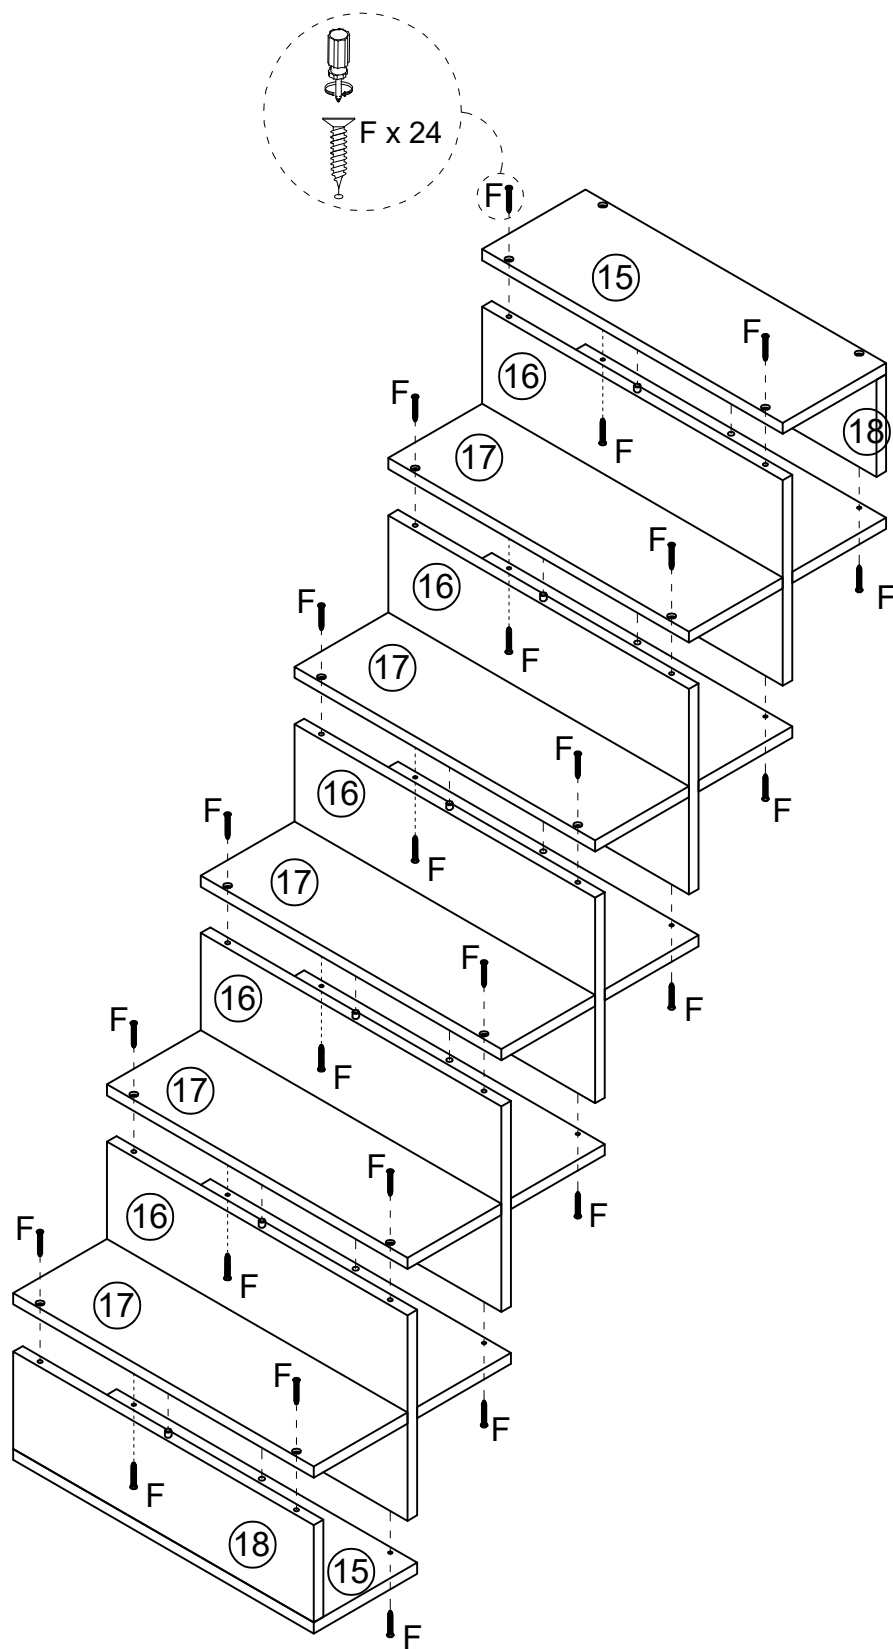


F	x24
	
M3.5*35mm	

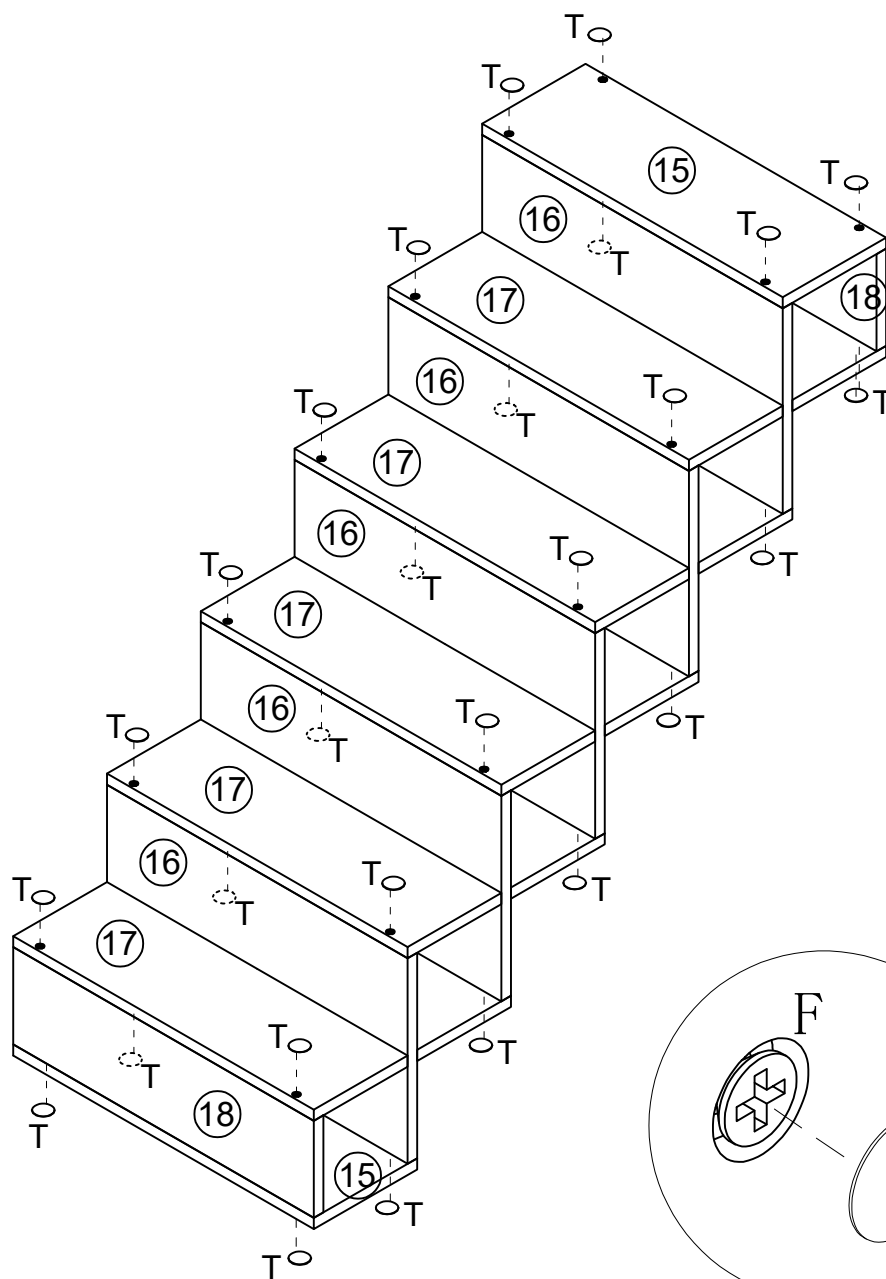

T	x28
	
Ø20mm	

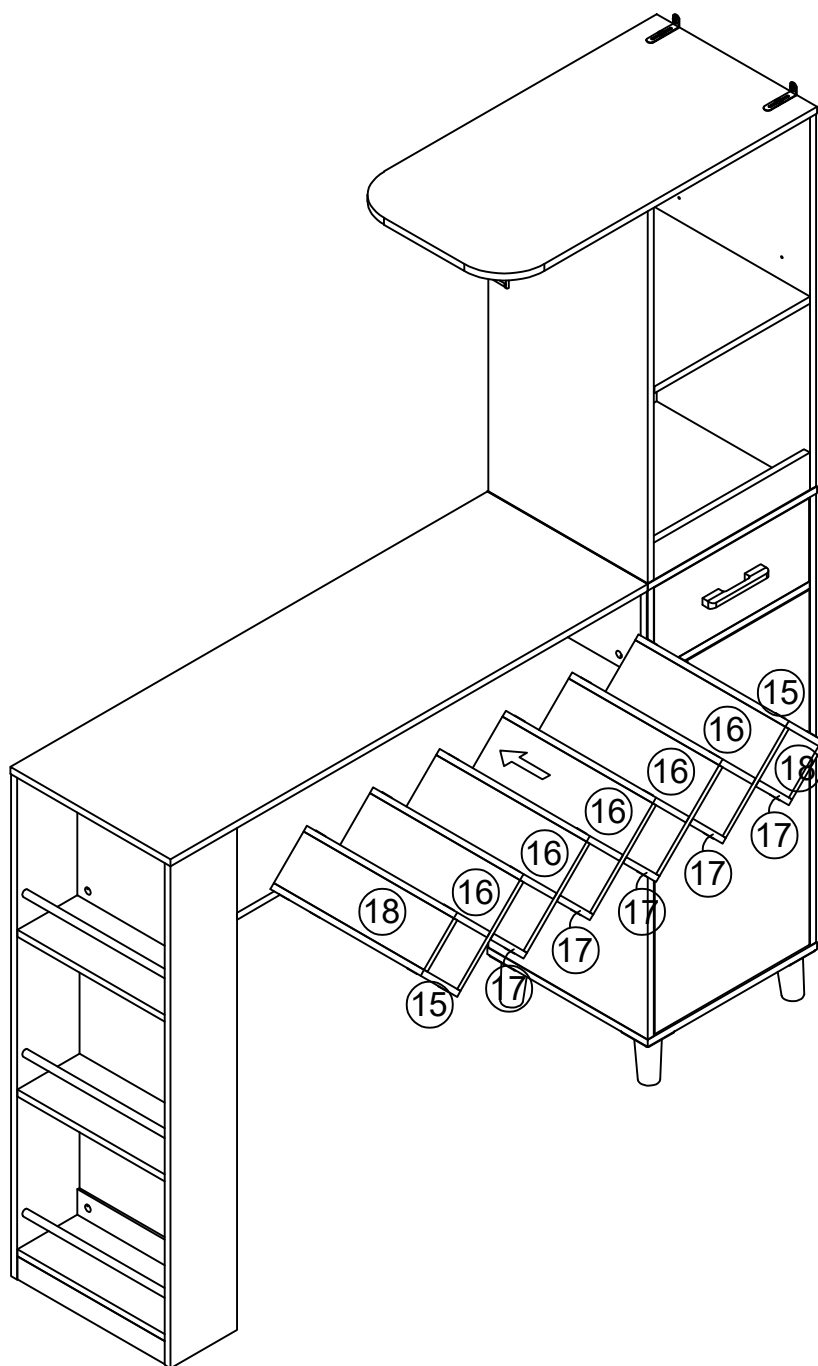

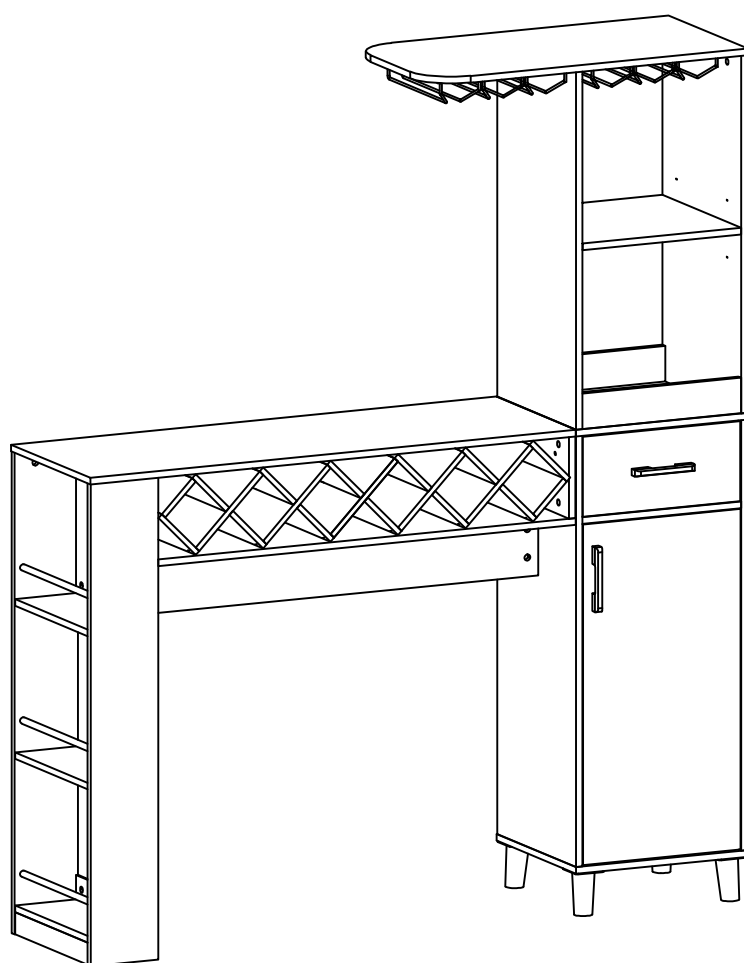

EN: In order to make the product more beautiful, please paste hardware T on the exposed holes.

FR: Afin de rendre le produit plus beau, s'il vous plaît coller le matériel T sur les trous exposés.

T	x60
	
Ø20mm	