

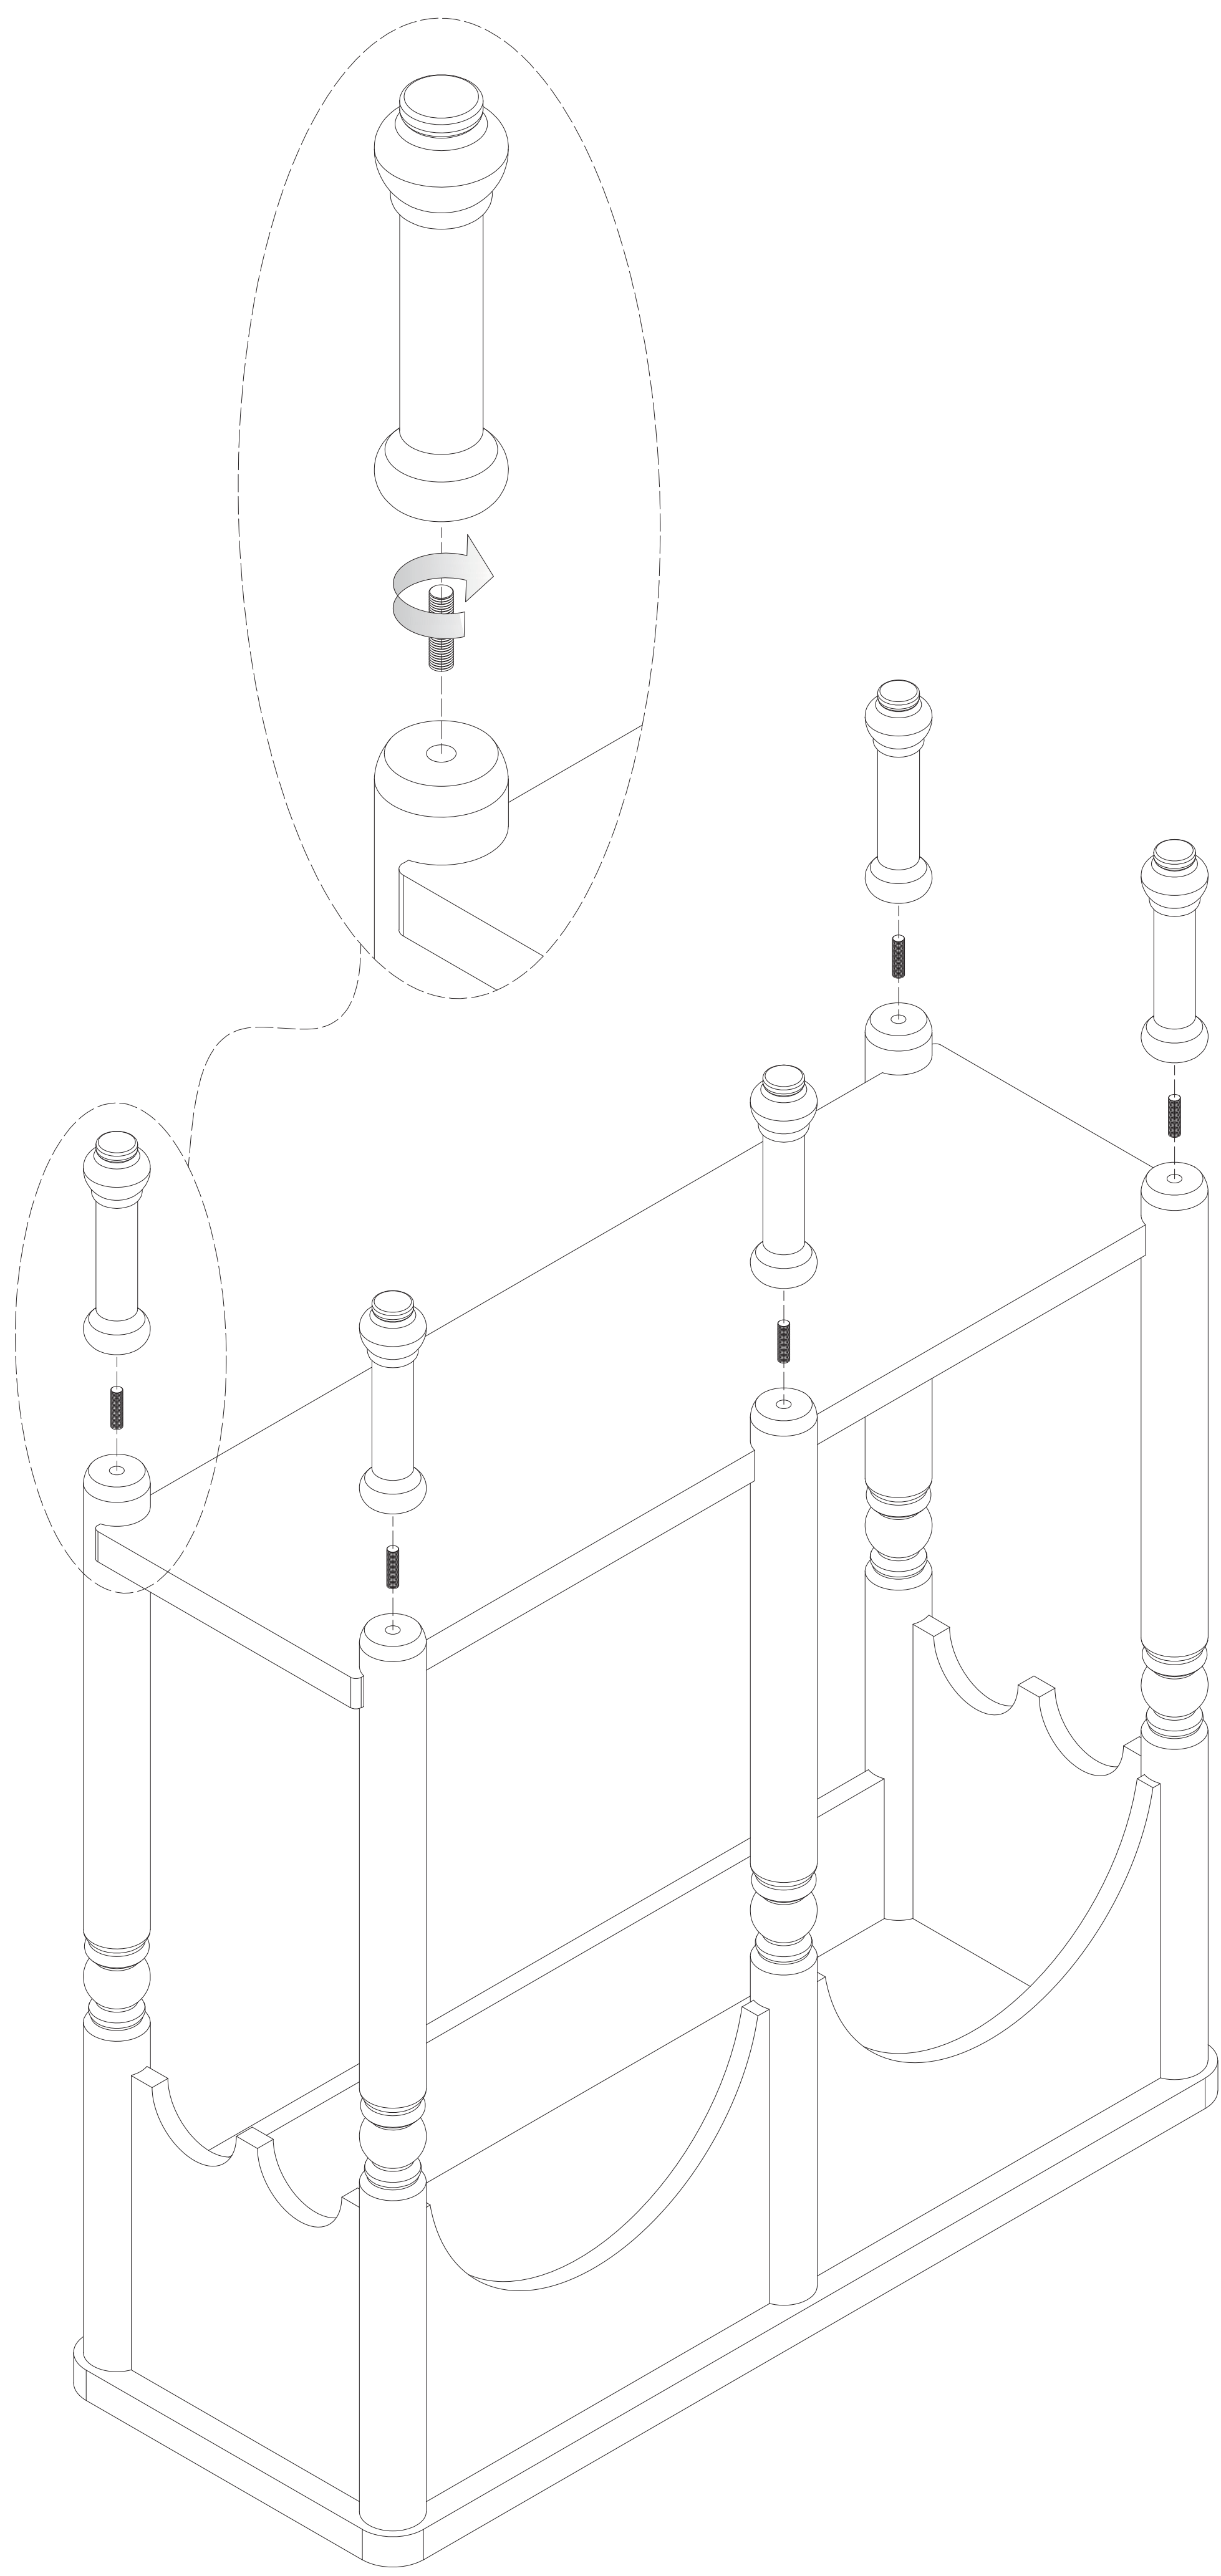


# 1GW190101XL09 Installation Instructions


Step 1.  
Screw the all thread rods into the base support (fully inserted).

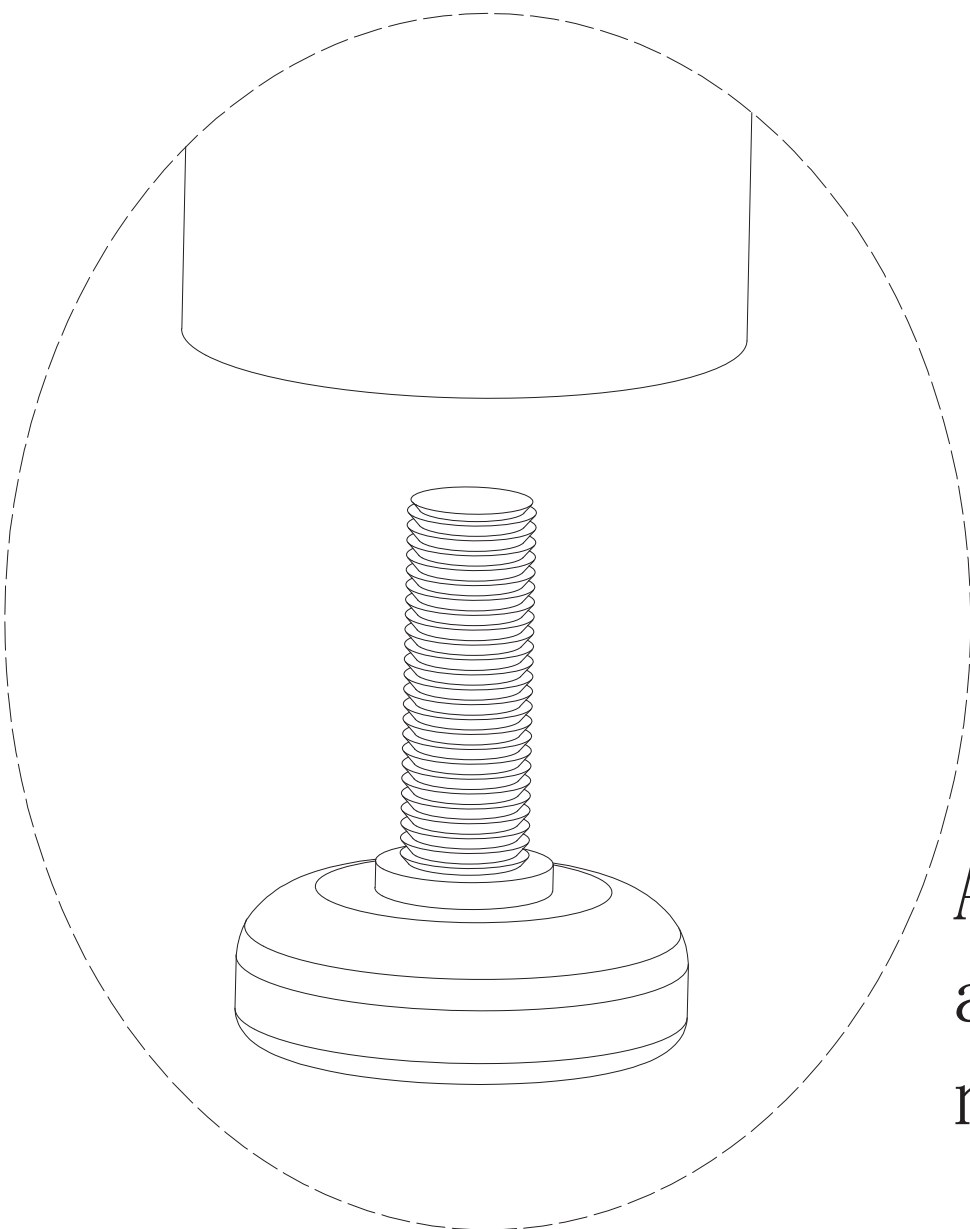

Step 2.  
Assembly is complete and installation of anti-tip hardware is recommended.

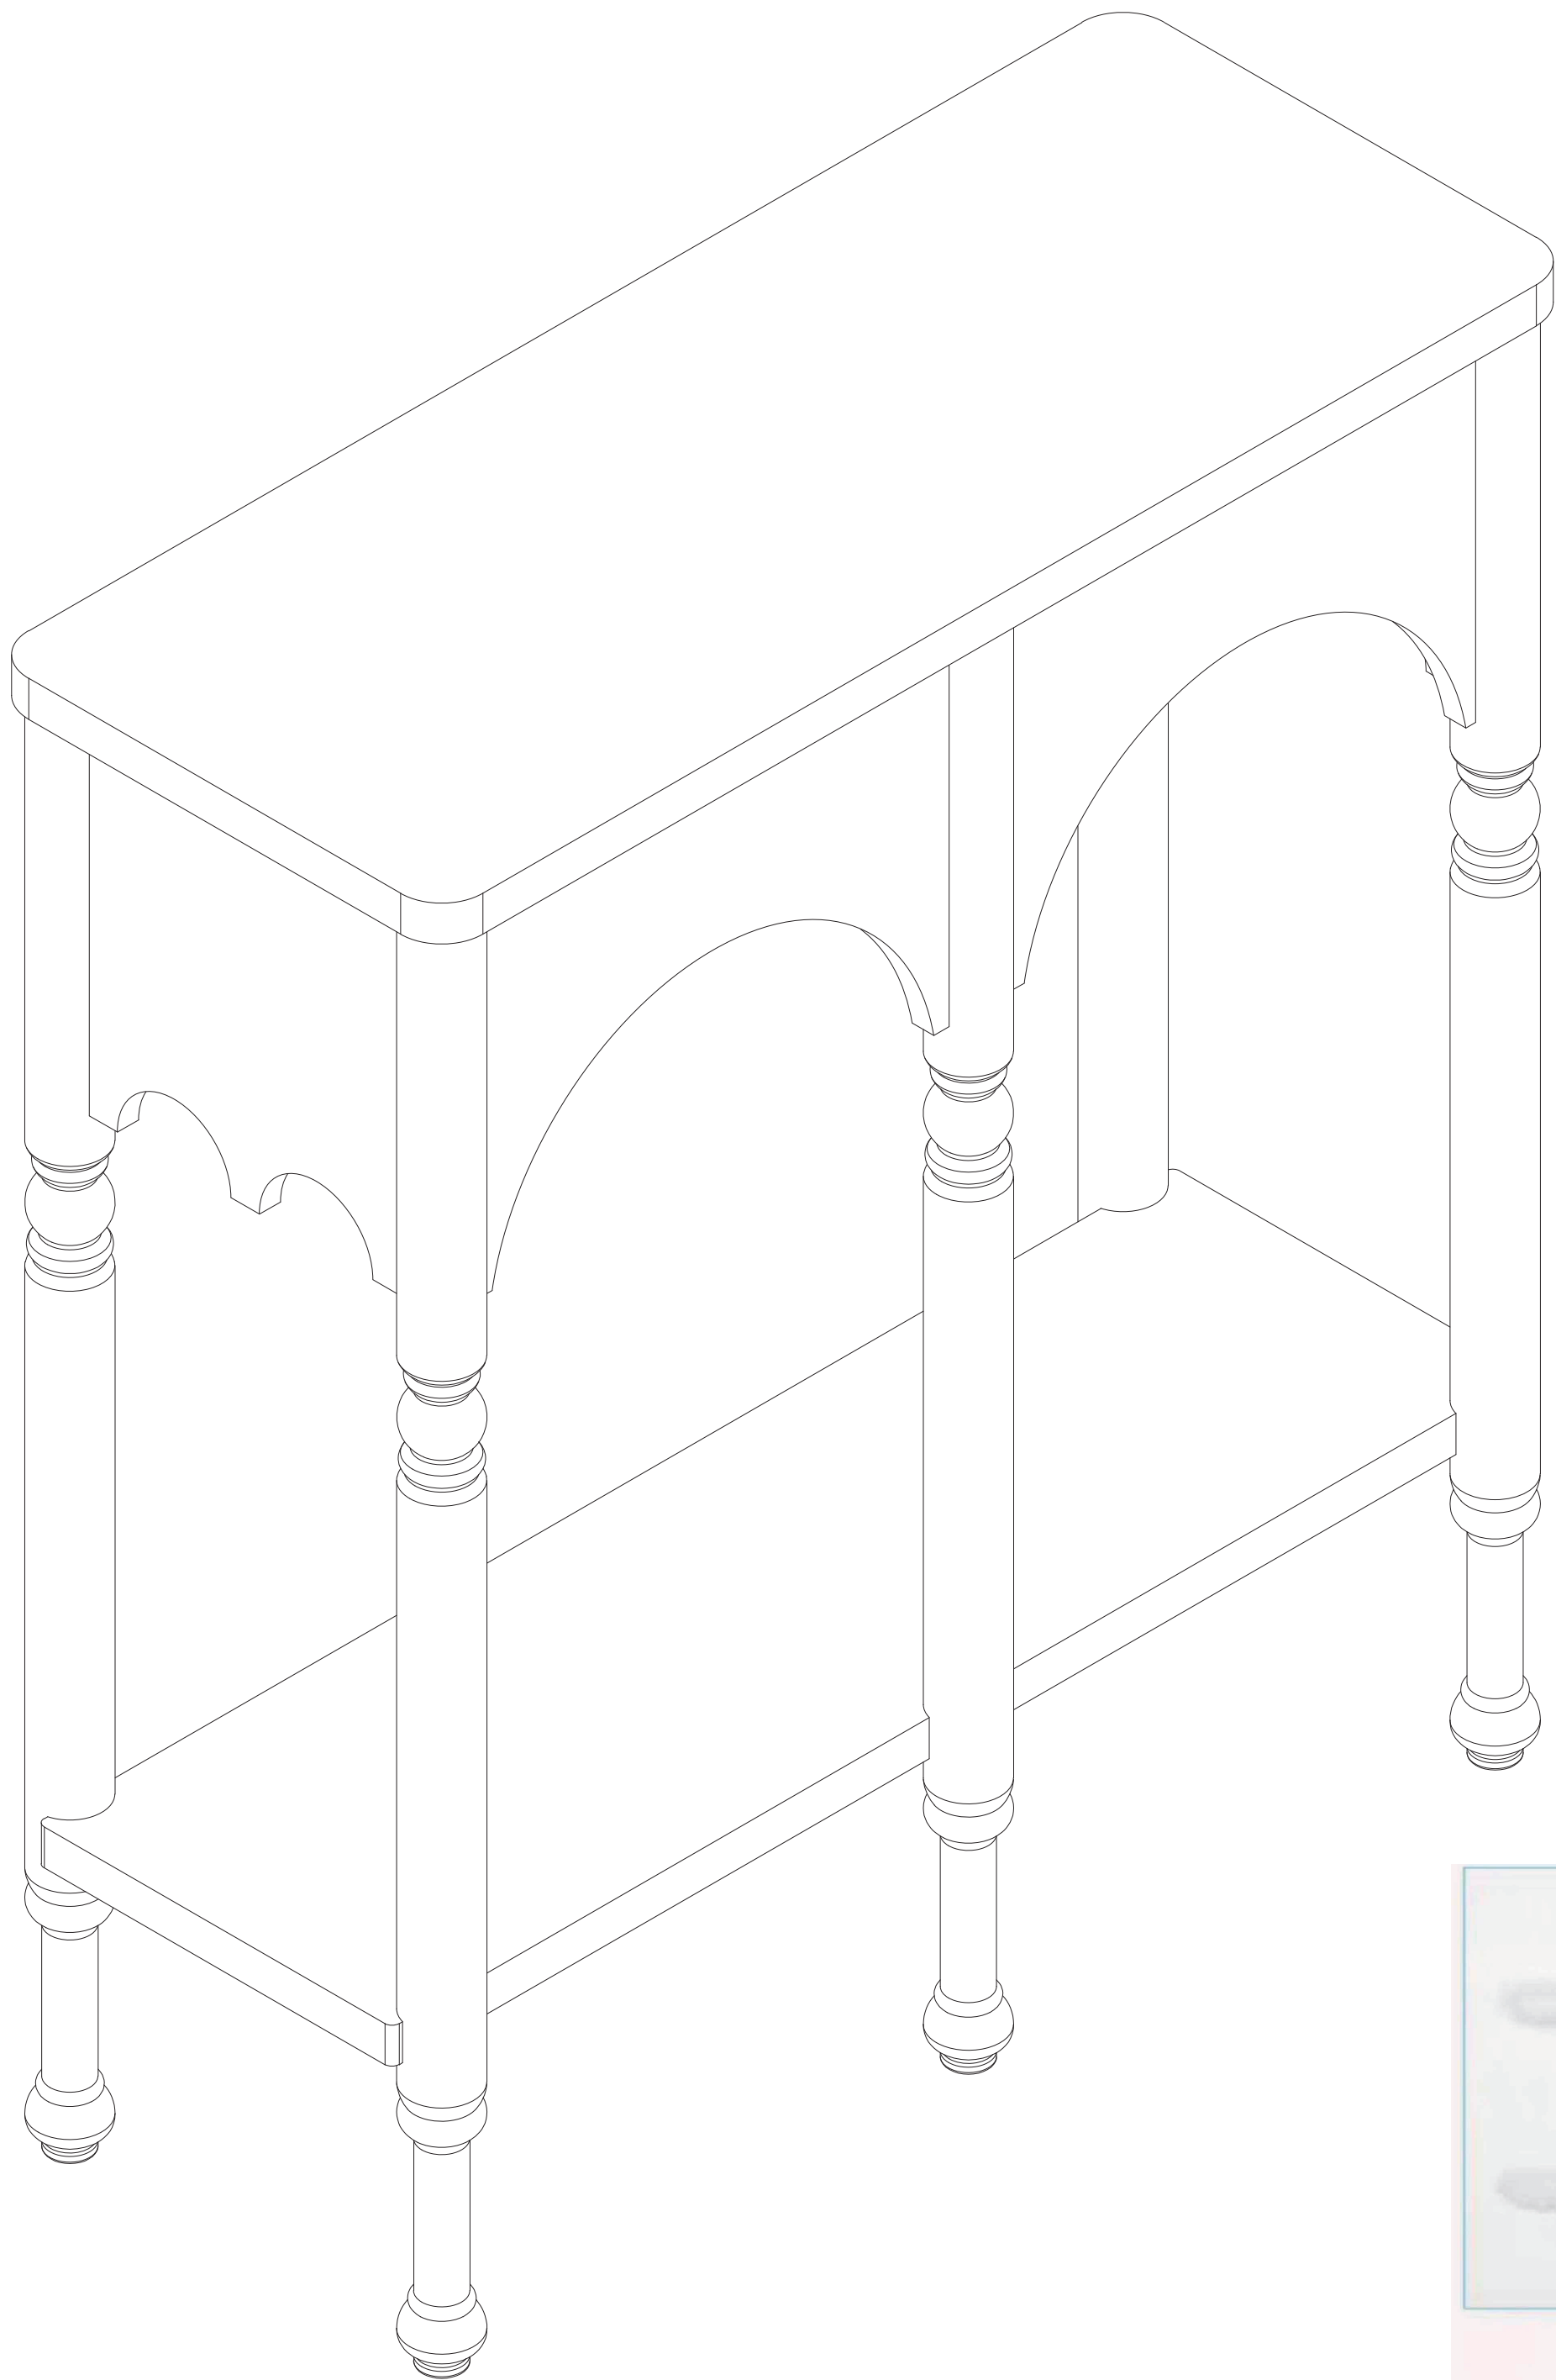

After the foot pads are assembled, adjustments will need to be made to level the table.

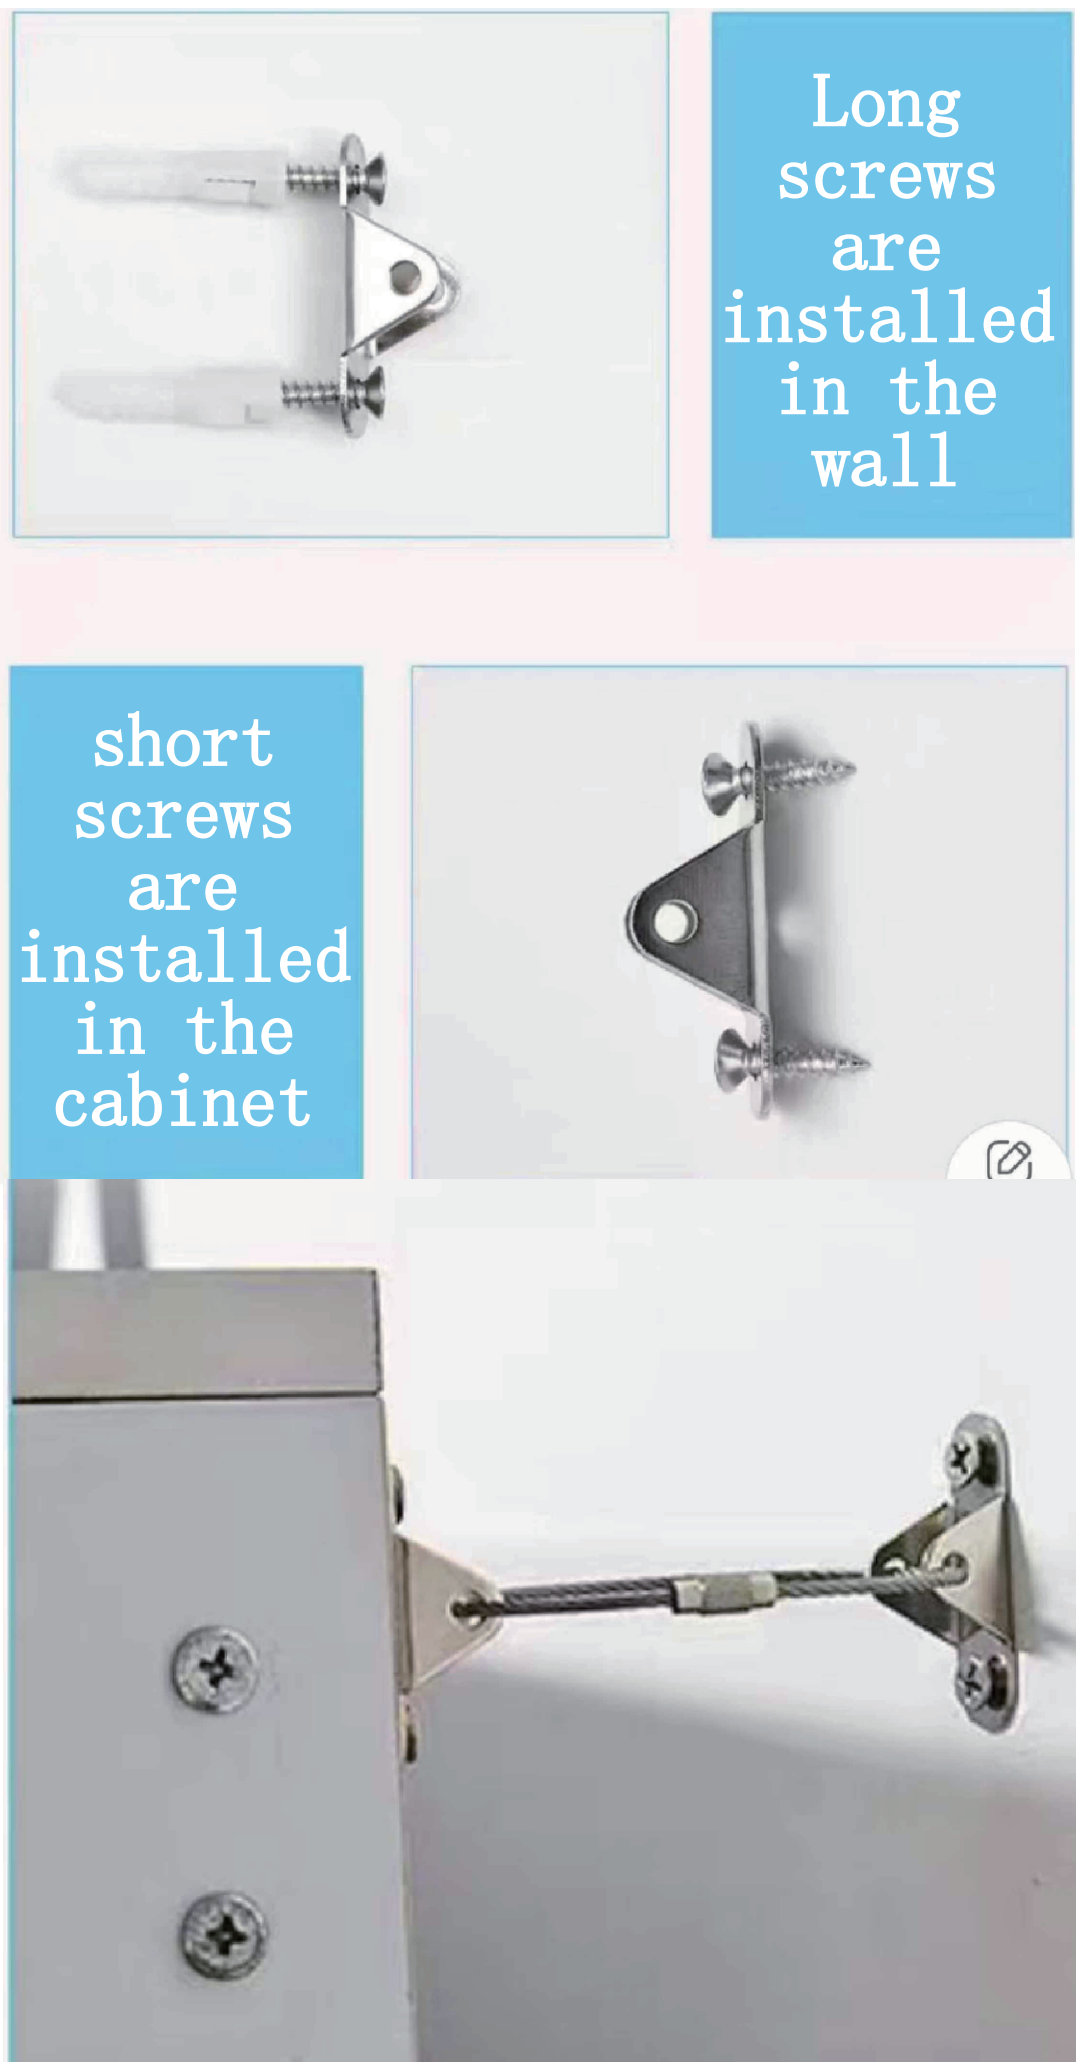

## Installation Hardware List

SN	Name	Diagram	Spec	Qty
1	ATR		M8*50	5
2	Wall Mounting Hardware			2
3				
4				
5				
6				
7				
8				
9				