
TV CABINET

User Manual

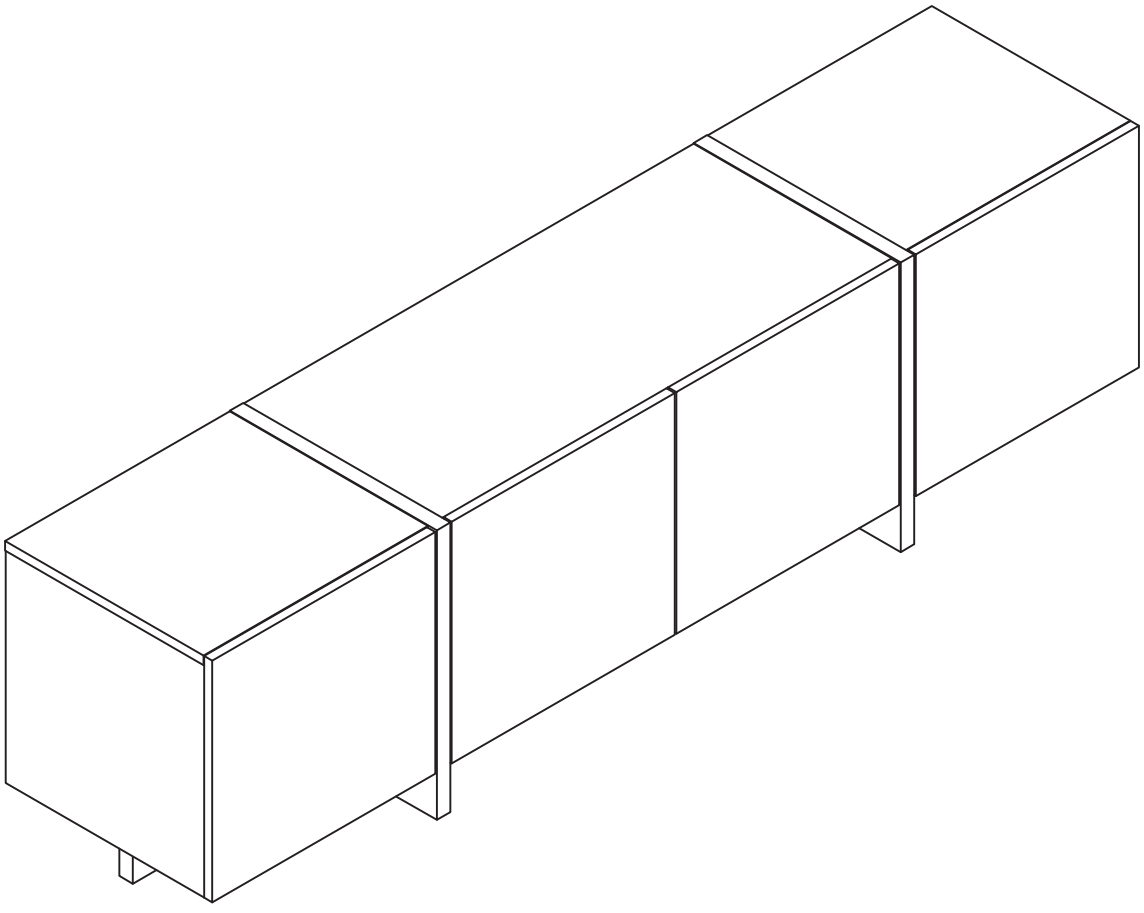

Made in China

For a Hassle-Free installation

1. Ensure you have received all cartons and familiarize yourself with the workload. Make sure there are enough helping hands to assist you, and that you have allocated the time required to assemble your new product.

2. Make sure you have cleared enough space in your home for the assembly. We recommend protecting your floor with a mat or cardboard to avoid scratches during the assembly process.

3. Read instructions carefully and check no parts are missing.

4. Lay out all hardware on a soft surface so you can easily identify them.

5. Carefully identify all components according to the labeled alphabet to ensure that the parts are in the correct place.

6. Install your new product carefully following the instructions. Don't skip ahead!

* If any parts are missing or damaged, we will gladly ship you replacement parts free of charge. Please contact us order ID and the Store Name of your purchase, we'realways here to help :)

WARNING

Serious or fatal injury may occur from unexpected assembly or use.

1.During the assembly process, keep all parts away from babies or children.

2.Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.


3.Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.

4.Unless specially designed to accommodate, do not set heavy objects on top of this product.













5.Place the heaviest items on the lowest shelf.

6.Never allow children to climb or bang on drawers, doors or shelves.







PANEL LAYOUT

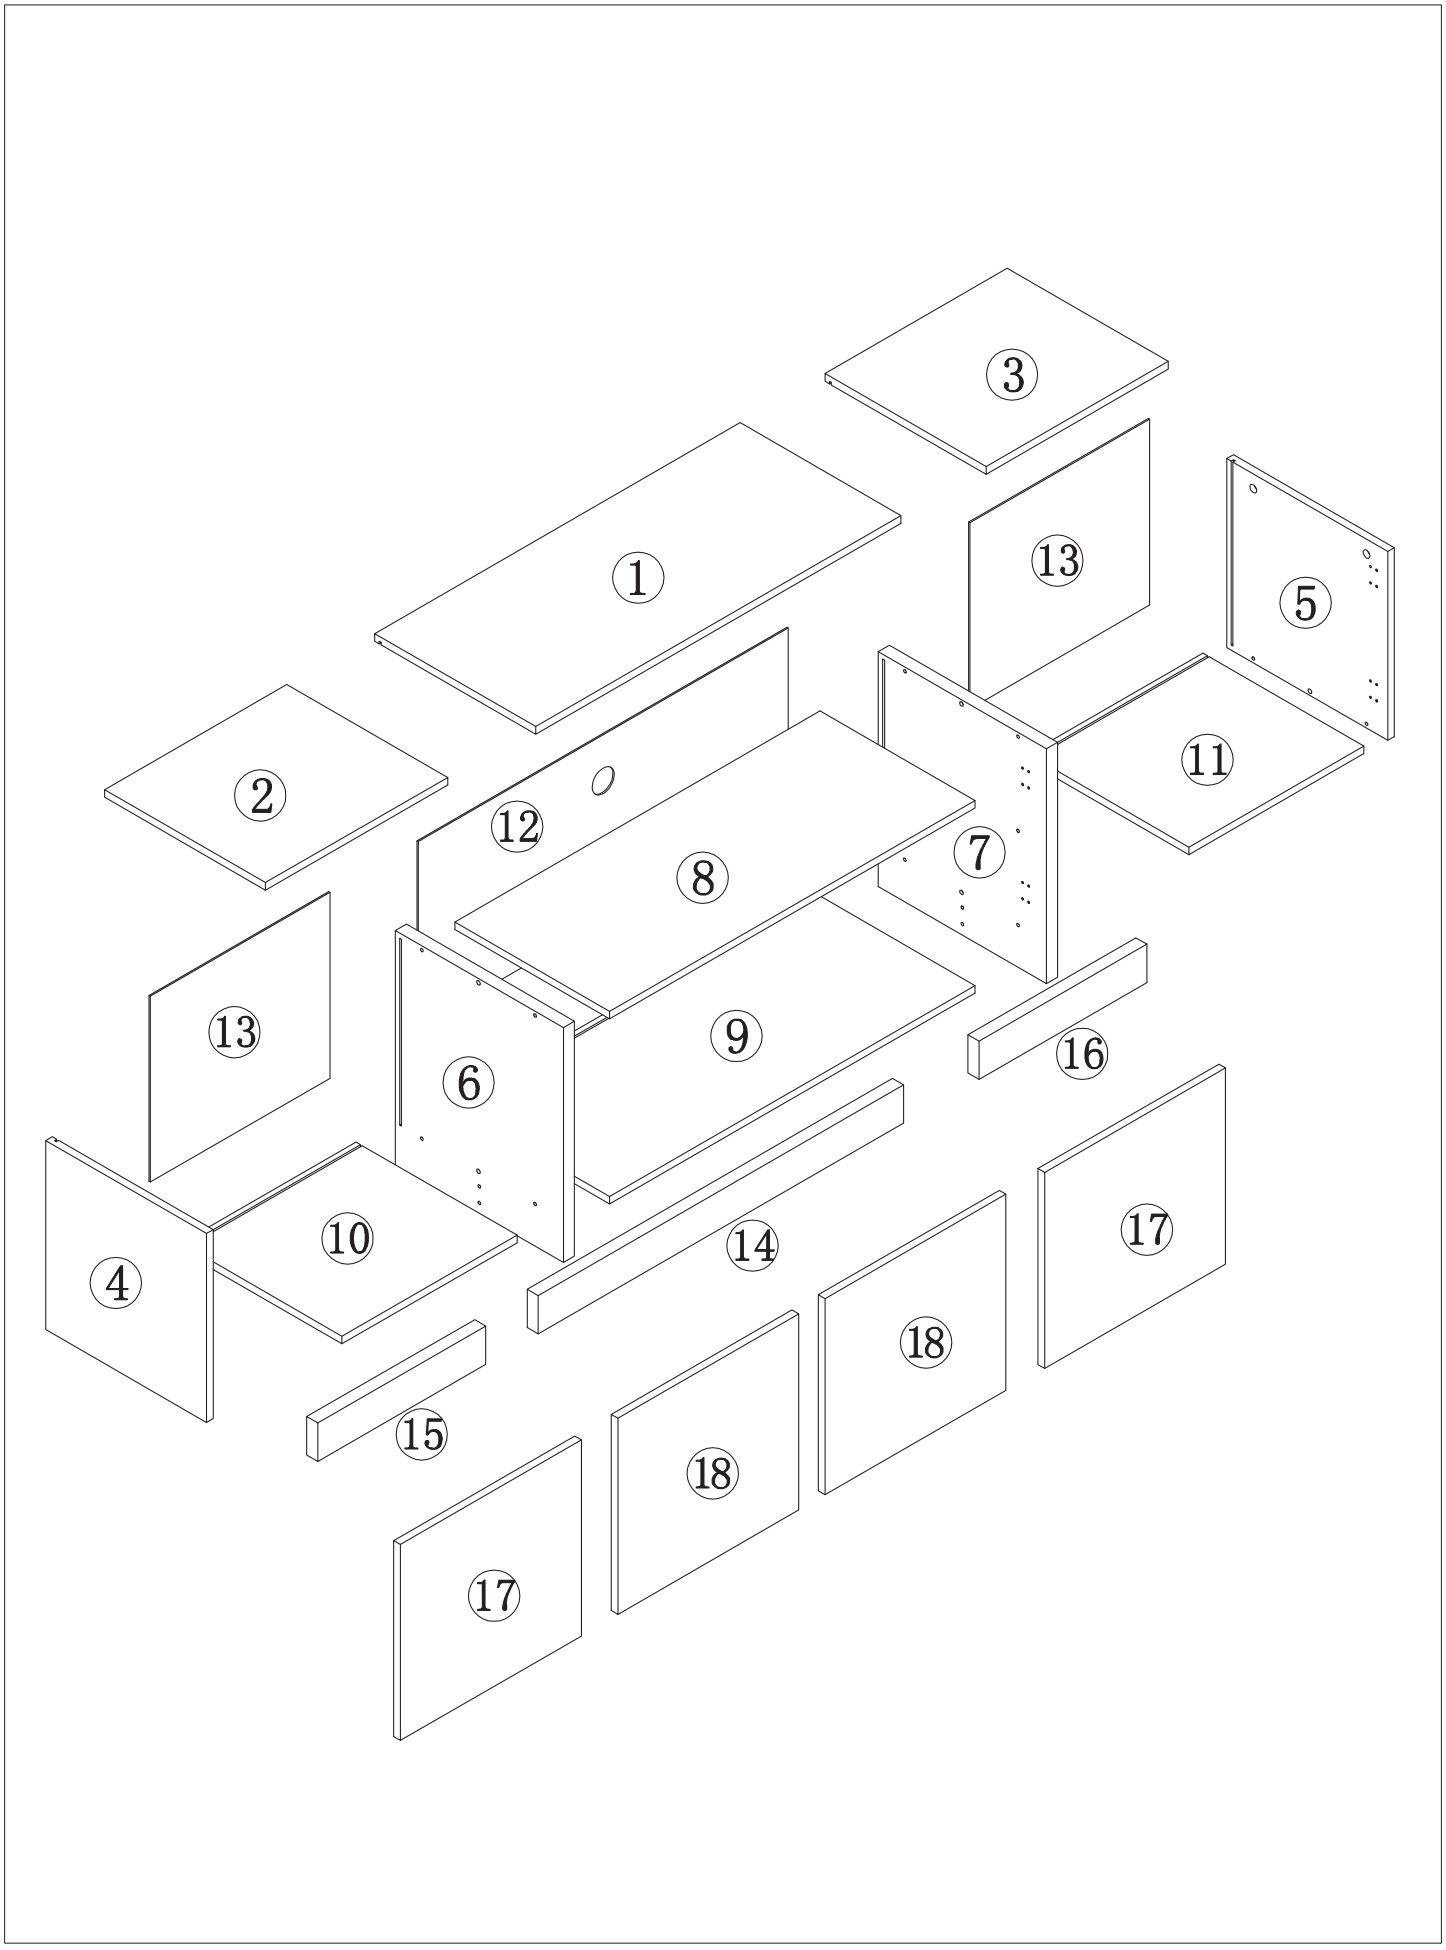





PARTS LIST

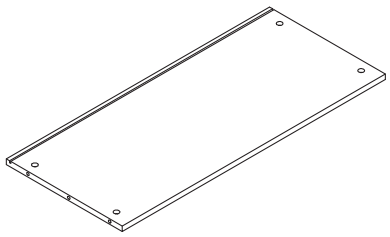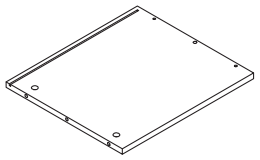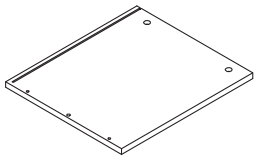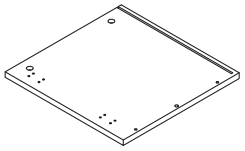
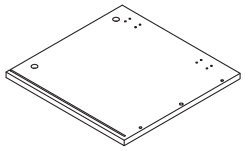
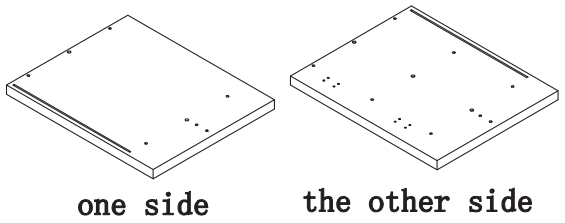
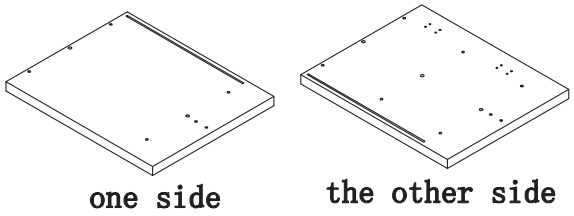
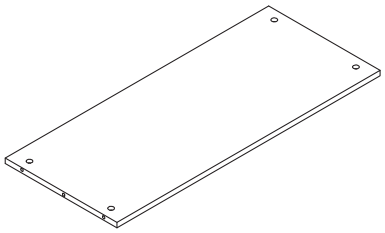
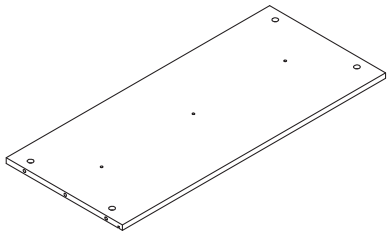
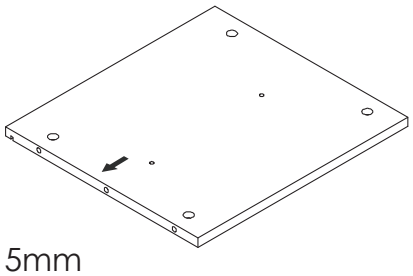
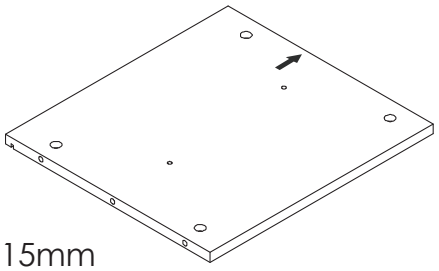
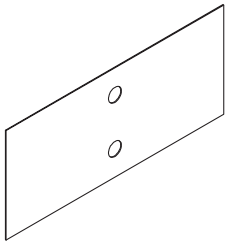
1  826*364*15mm 1 pc	**2**  412*364*15mm 1 pc
3  412*364*15mm 1 pc	**4**  370*364*15mm 1 pc
5  370*364*15mm 1 pc	**6**  one side the other side 460*380*25mm 1 pc
7  one side the other side 460*380*25mm 1 pc	**8**  826*346*15mm 1 pc
9  826*346*15mm 1 pc	**10**  396*364*15mm 1 pc
11  396*364*15mm 1 pc	**12**  836*364*3mm 1 pc

PARTS LIST

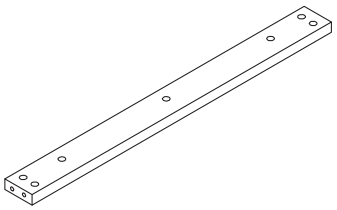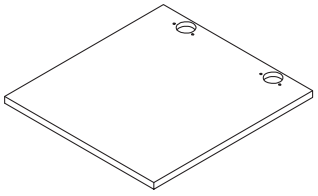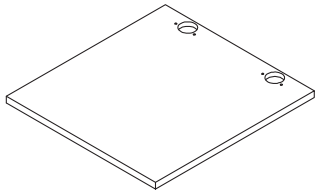13  406*364*3mm 2 pcS	**14**  826*75*25mm 1 pc
15  380*75*25mm 1 pc	**16**  380*75*25mm 1 pc
17  409*384*15mm 2 pcs	**18**  409*384*15mm 2 pcs


HARDWARE LIST

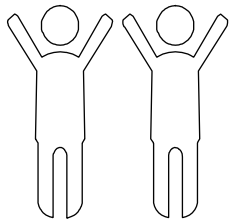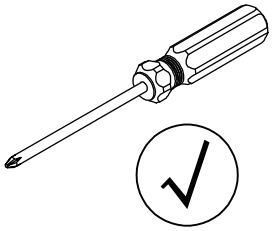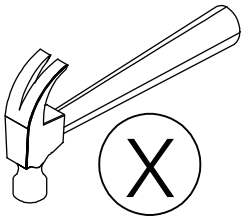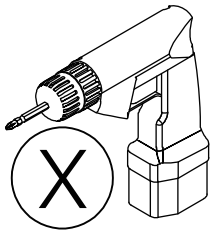
A  Ø6*35mm 43 pcs	**B**  Ø15*9.5mm 43 pcs	**C**  Ø6*30mm 14 pcs	**D**  Ø20mm 16 pcs
E  Ø3.5*14mm 48 pcs	**F** Full overlay  Ø35mm 4 pcs	**G** Insert  Ø35mm 4 pcs	**H**  Ø3*16mm 16 pcs
I  M4 1 pc	**J**  (BLACK) Ø20mm 8 pcs		

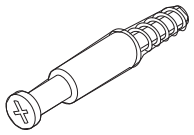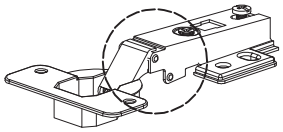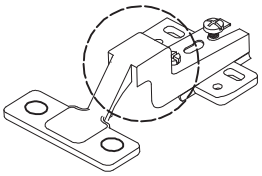ASSEMBLY STEPS


CAM BOLT INSTALLATION AS BELOW:





Cam bolt




Connecting piece

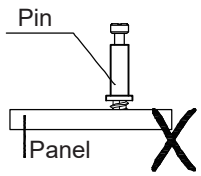

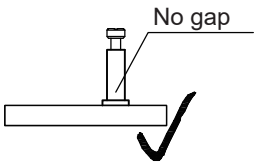


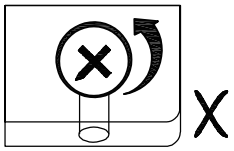



Rotate connecting piece if found in the position illustrated above.

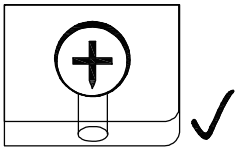


Correct orientation to receive bolts.

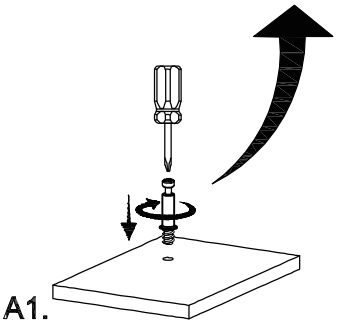

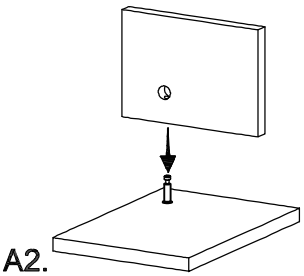


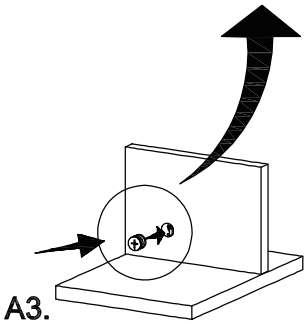


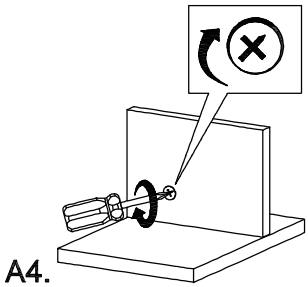

1


YOU WILL NEED
A x14

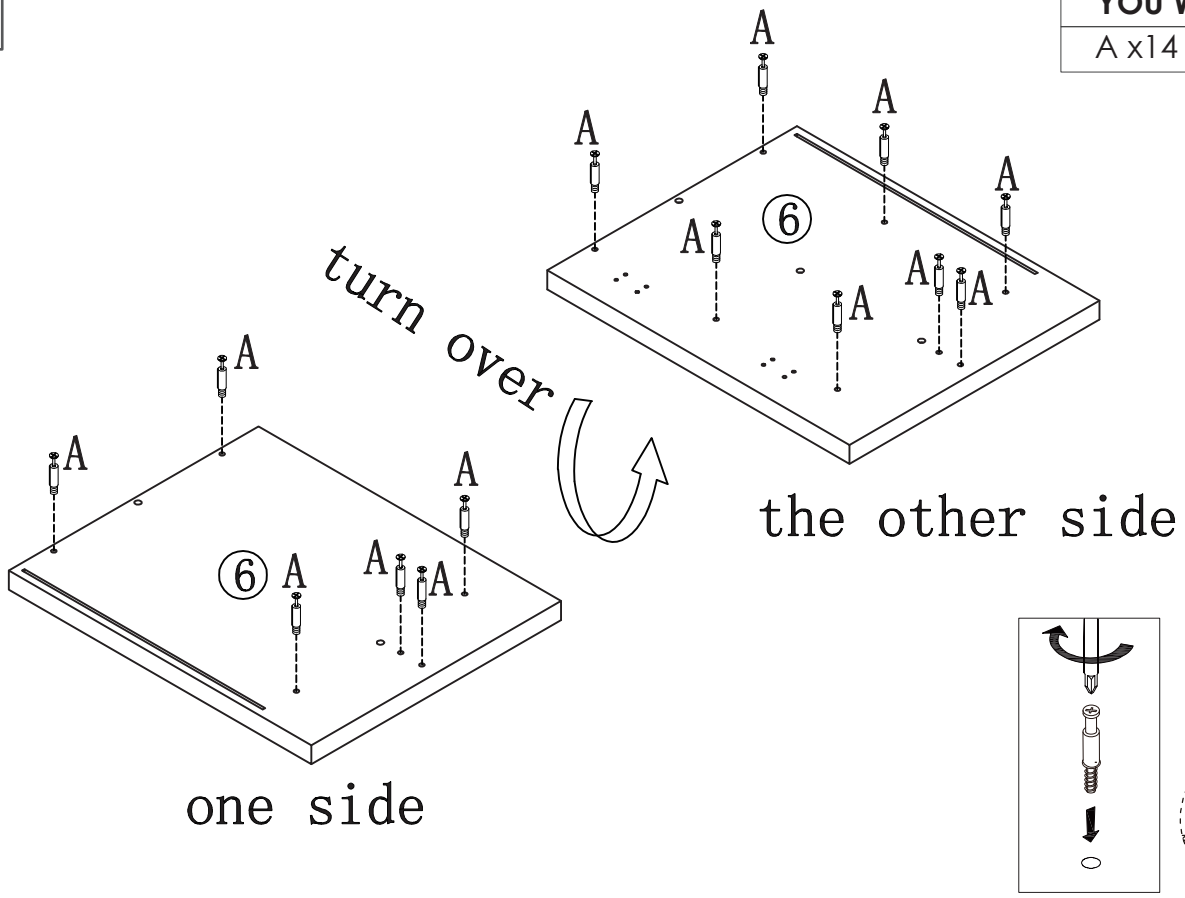


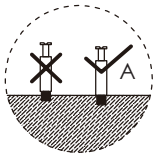

2


YOU WILL NEED
A x14

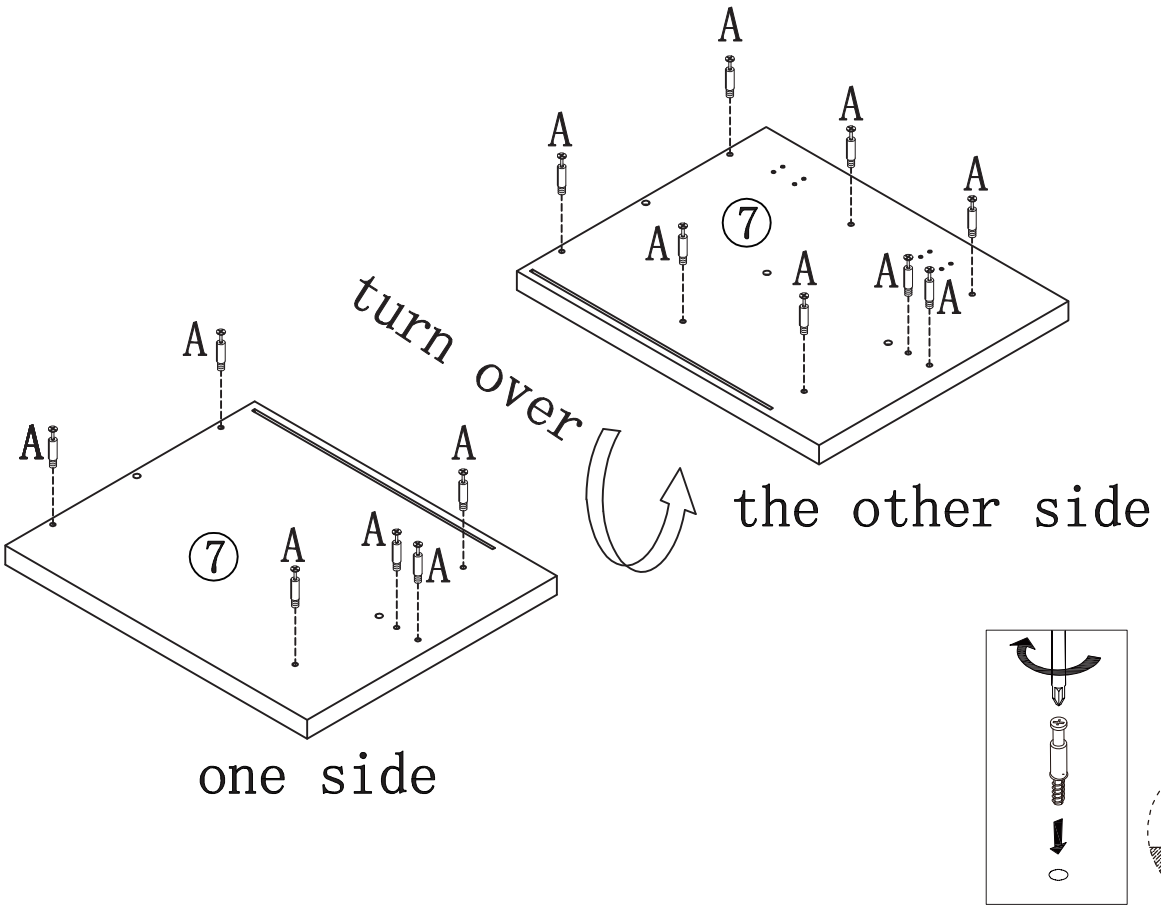

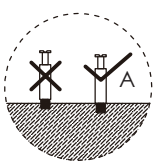


3


YOU WILL NEED	
C x4	

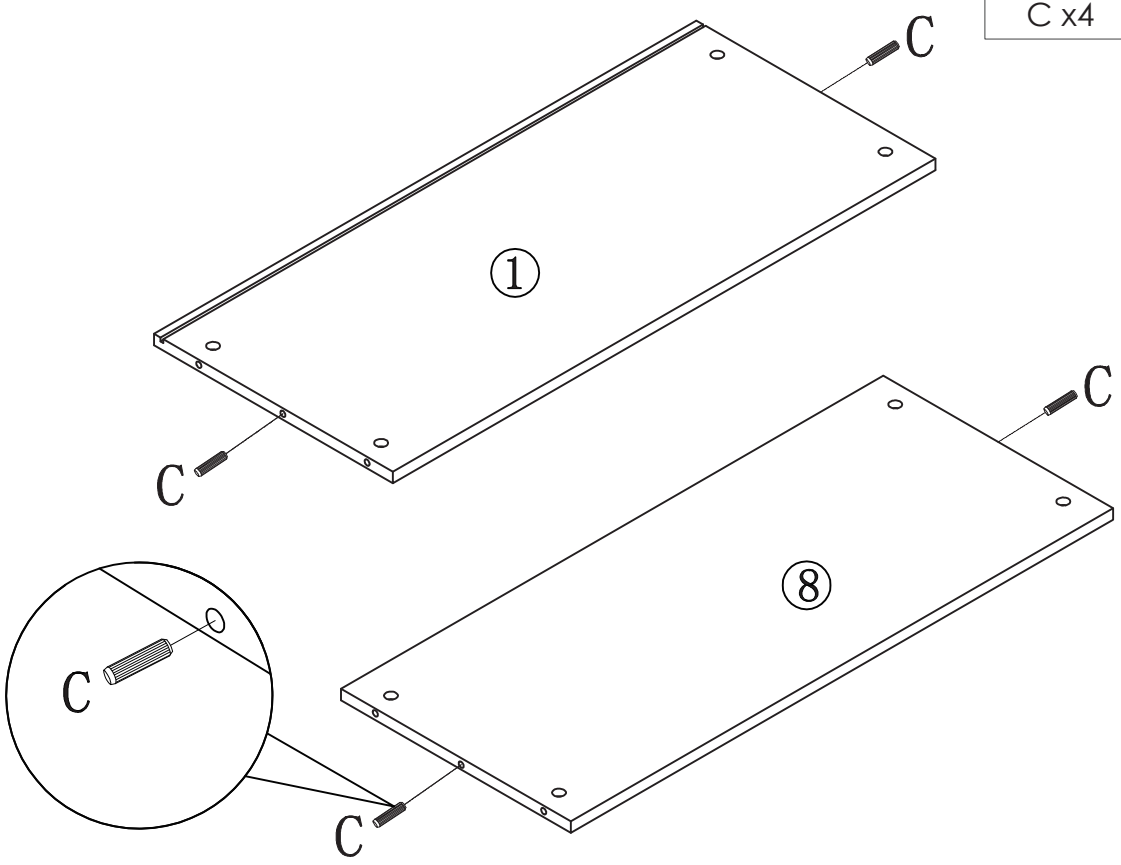


4

YOU WILL NEED	
A x3	C x2

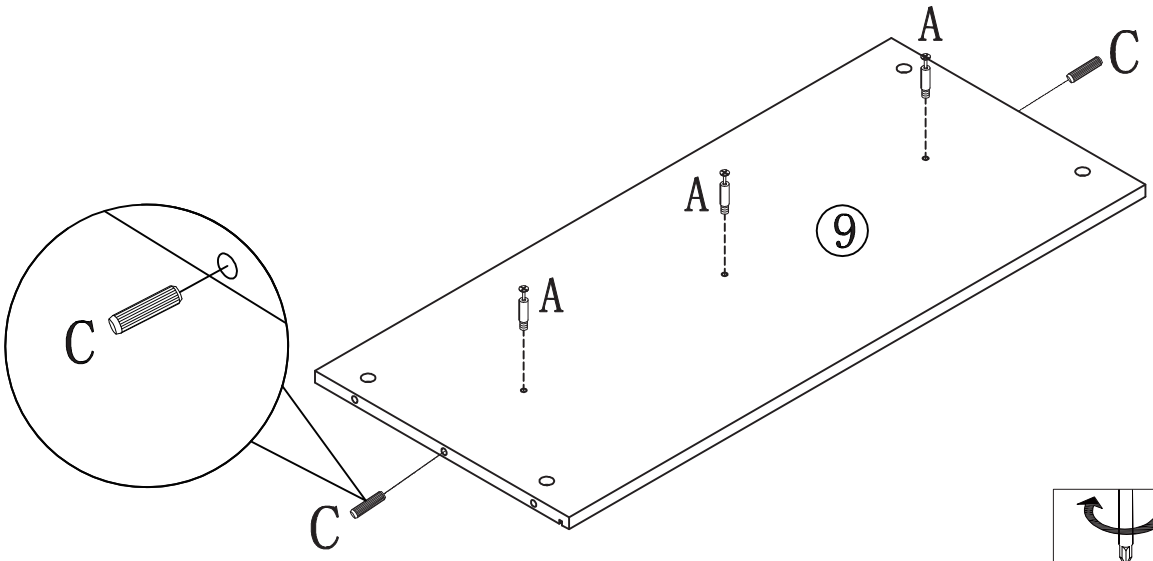


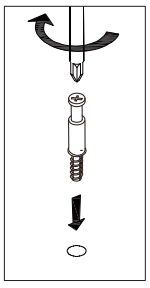


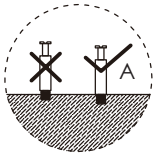

5


YOU WILL NEED	
B x3	

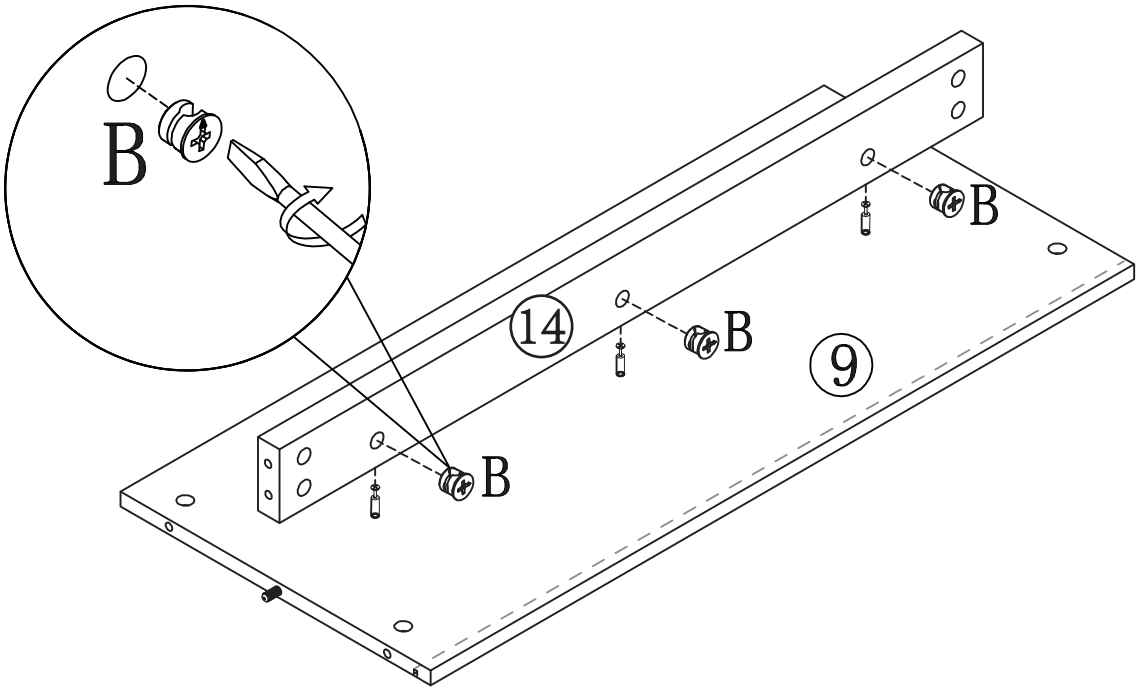


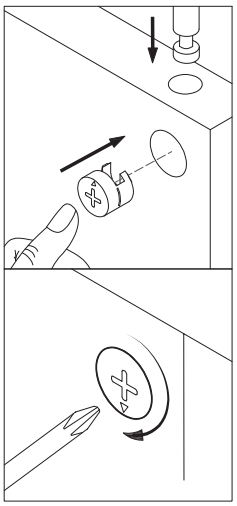

6


YOU WILL NEED	
B x8	

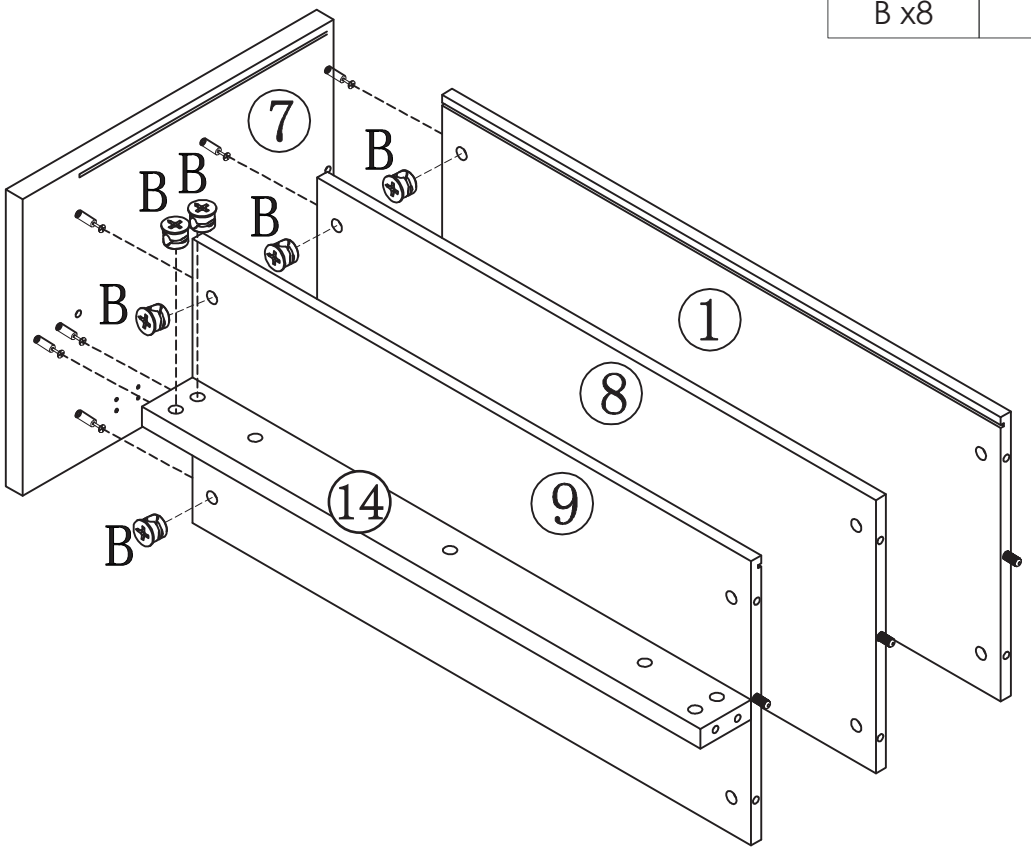

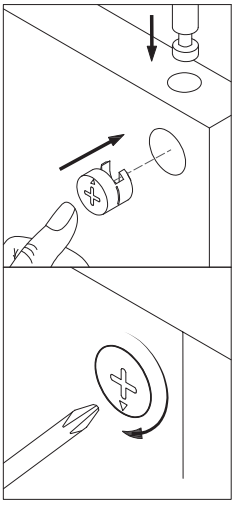


7

The thin backplate must be fully installed intothe slot or it will prevent proper installation.

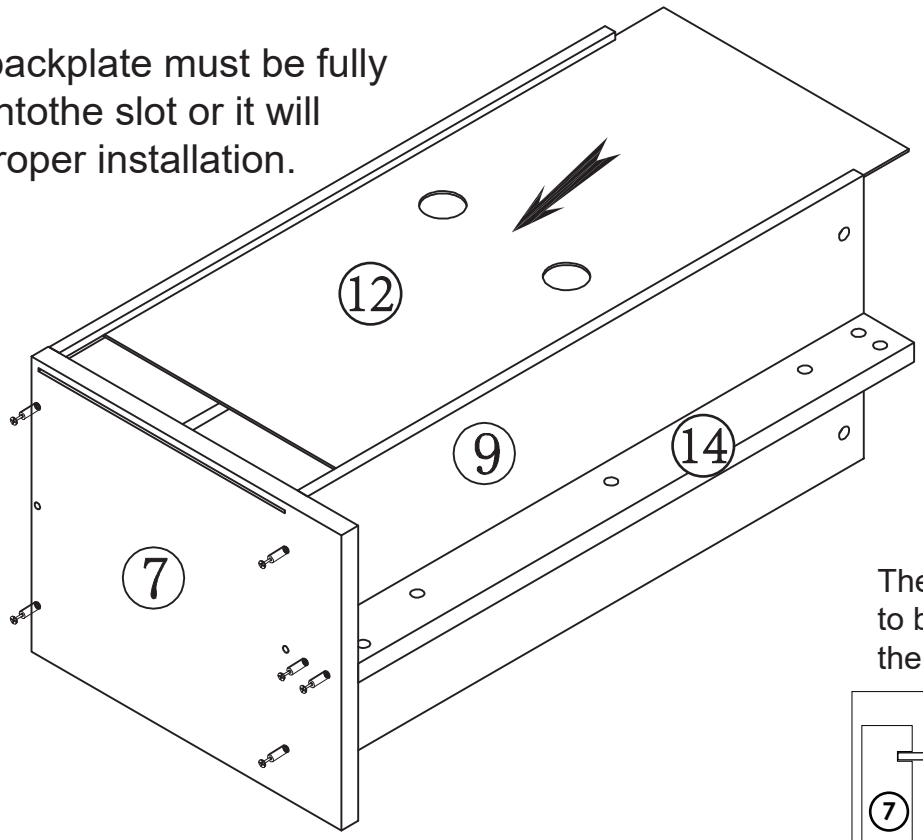


The 12th board needs to be fully inserted into the 7th board

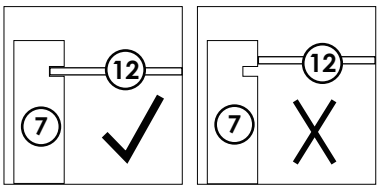


8


YOU WILL NEED	
B x8	

The thin backplate must be fully installed intothe slot or it will prevent proper installation.

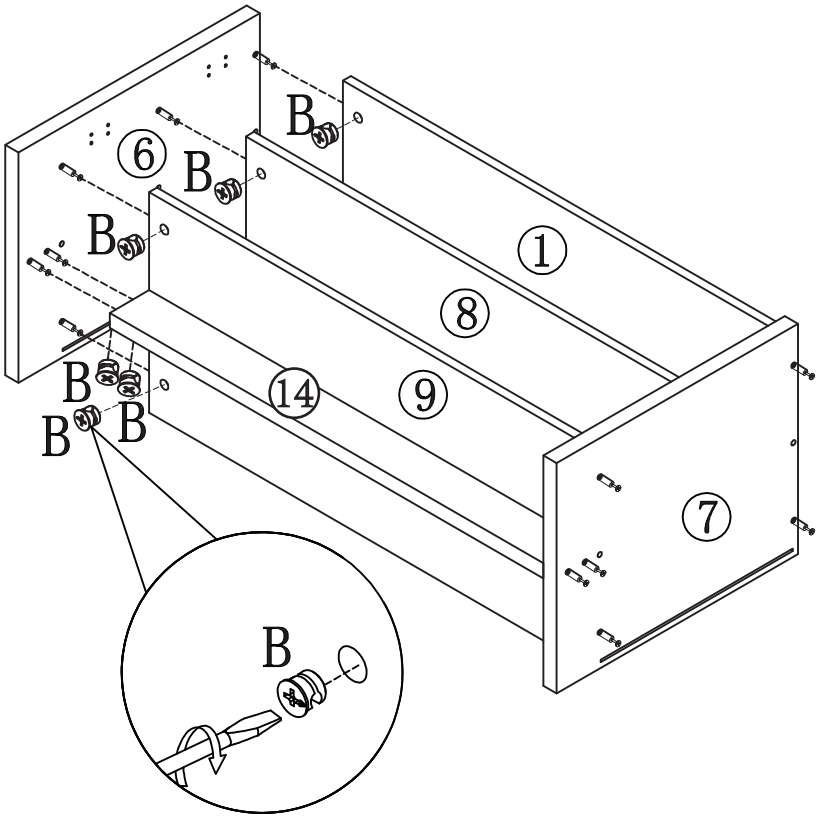

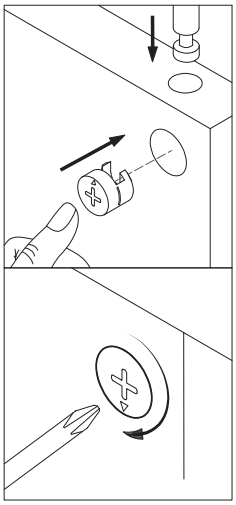


The 12th board needs to be fully inserted into the 6th board

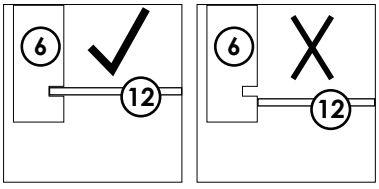


9

YOU WILL NEED	
A x8	C x6

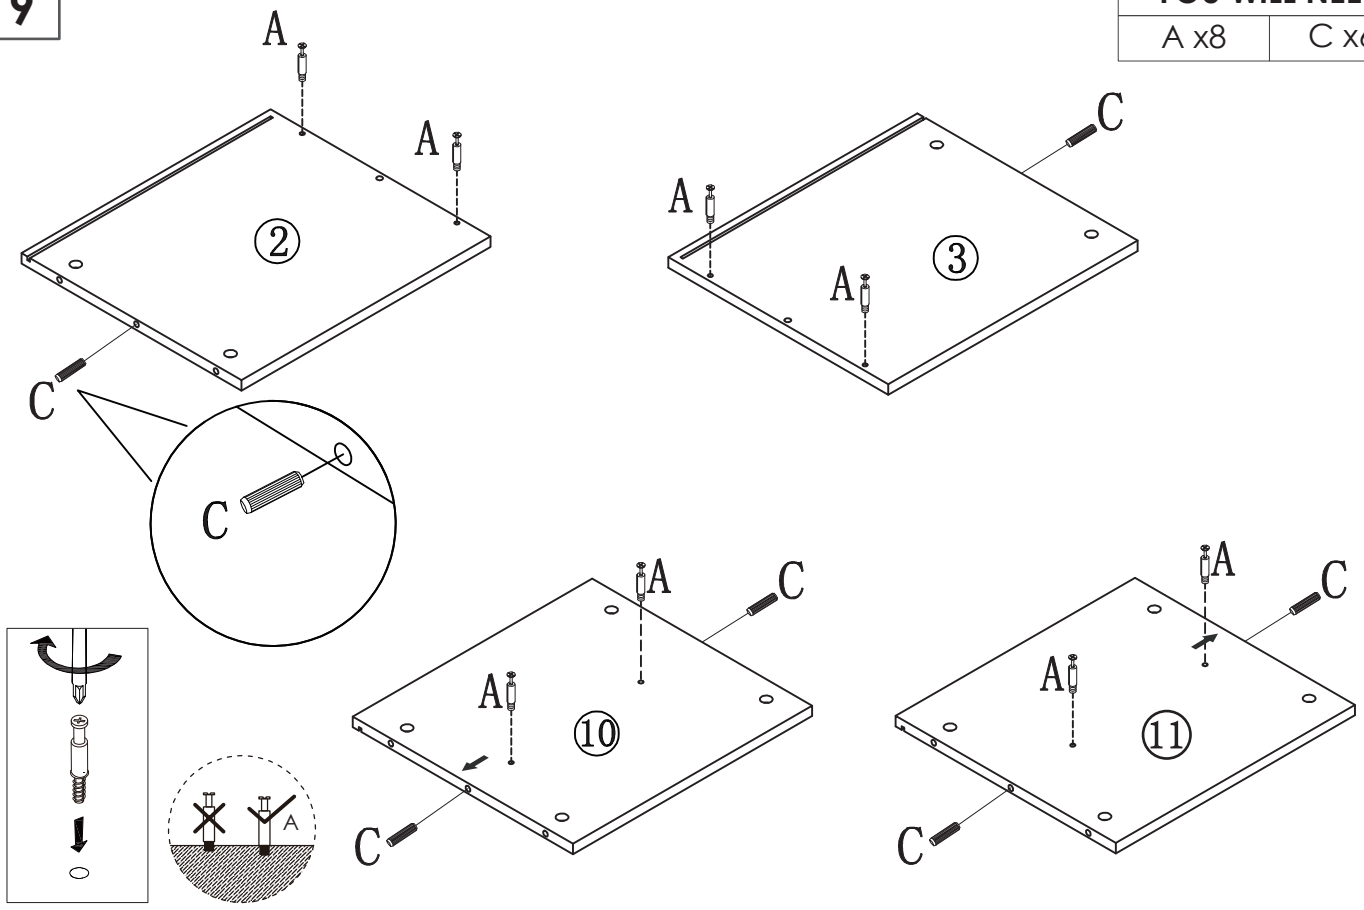


10

YOU WILL NEED	
A x4	C x2

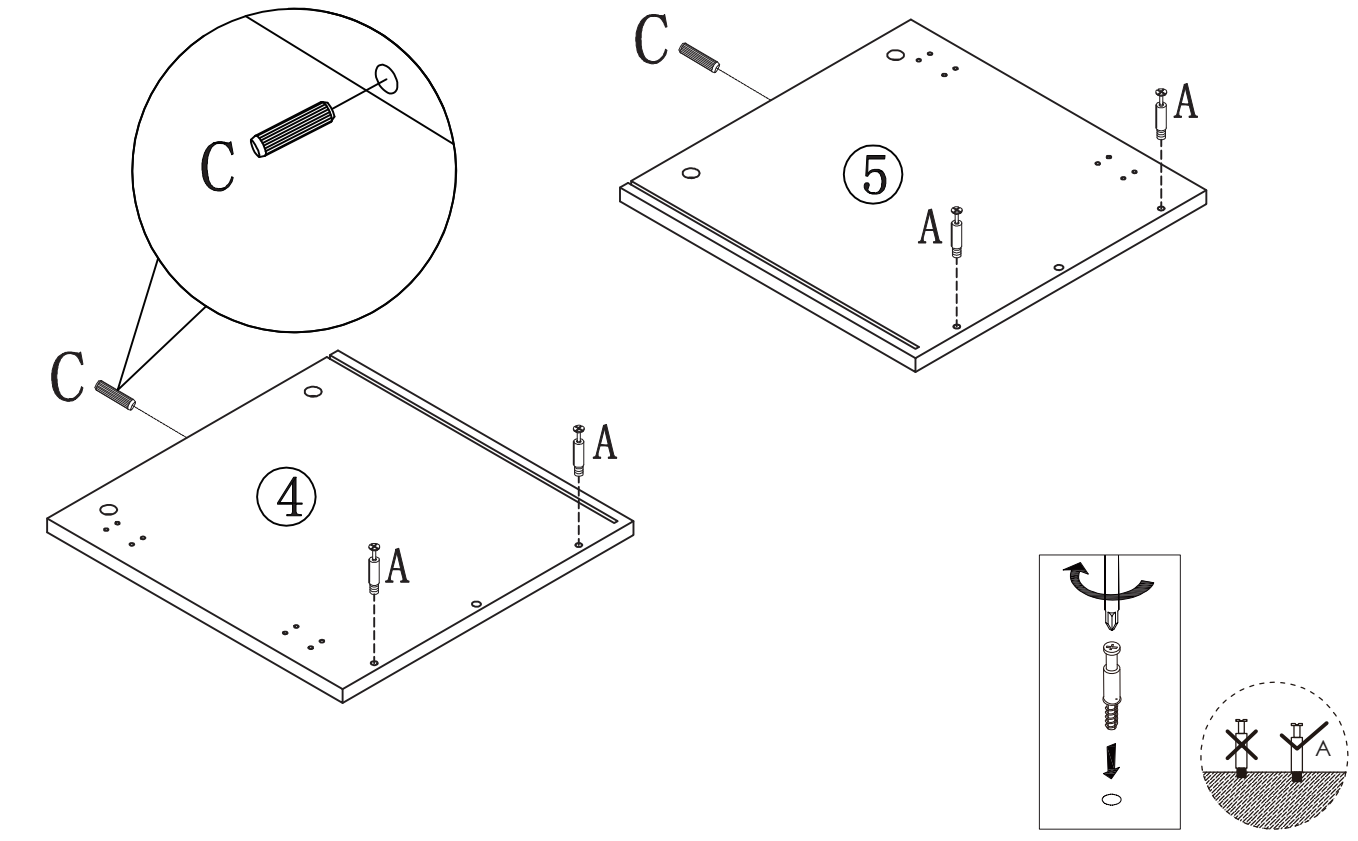


11

YOU WILL NEED	
B x4	

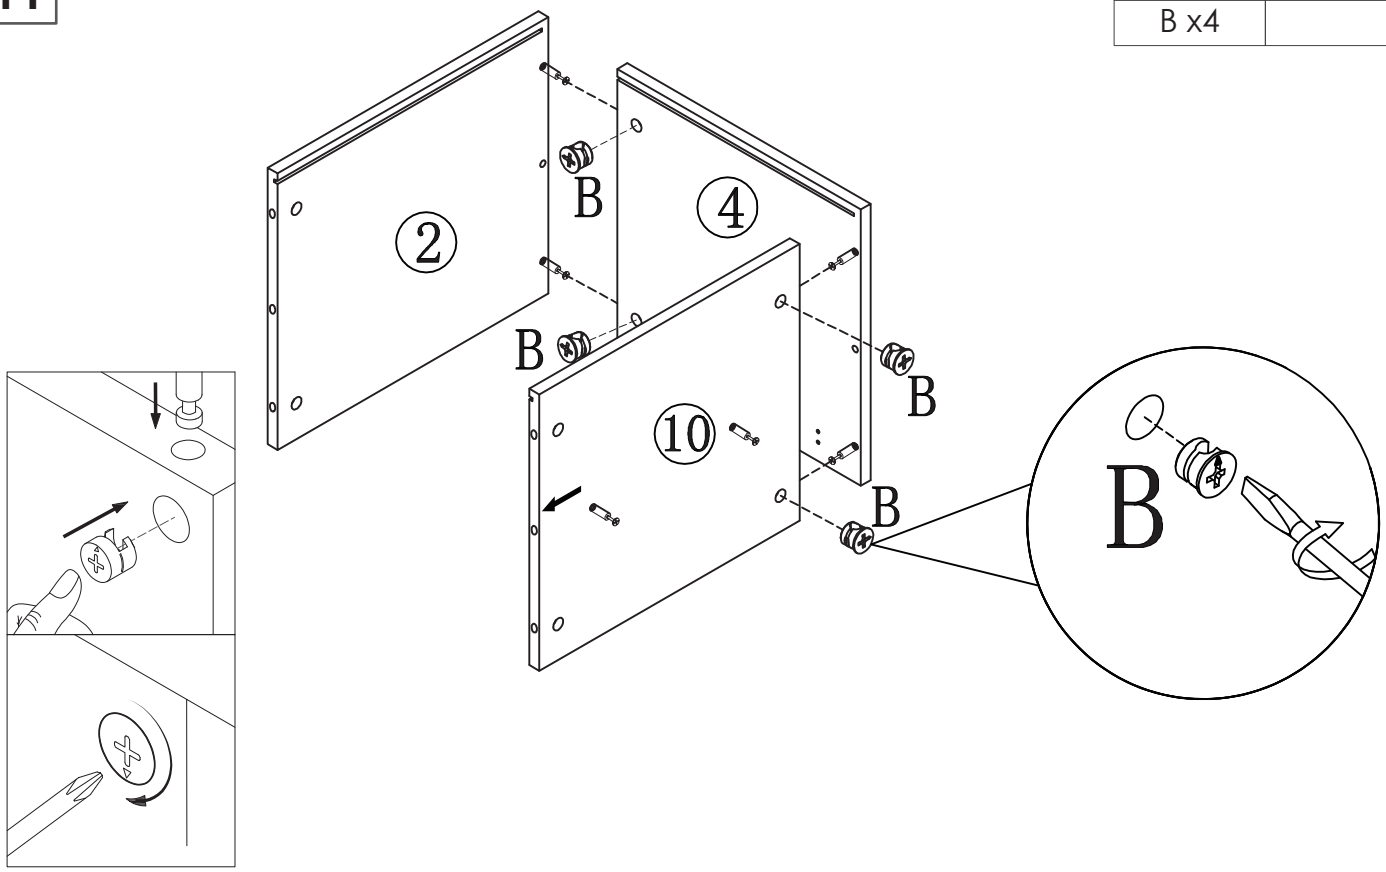


12


YOU WILL NEED	
B x2	

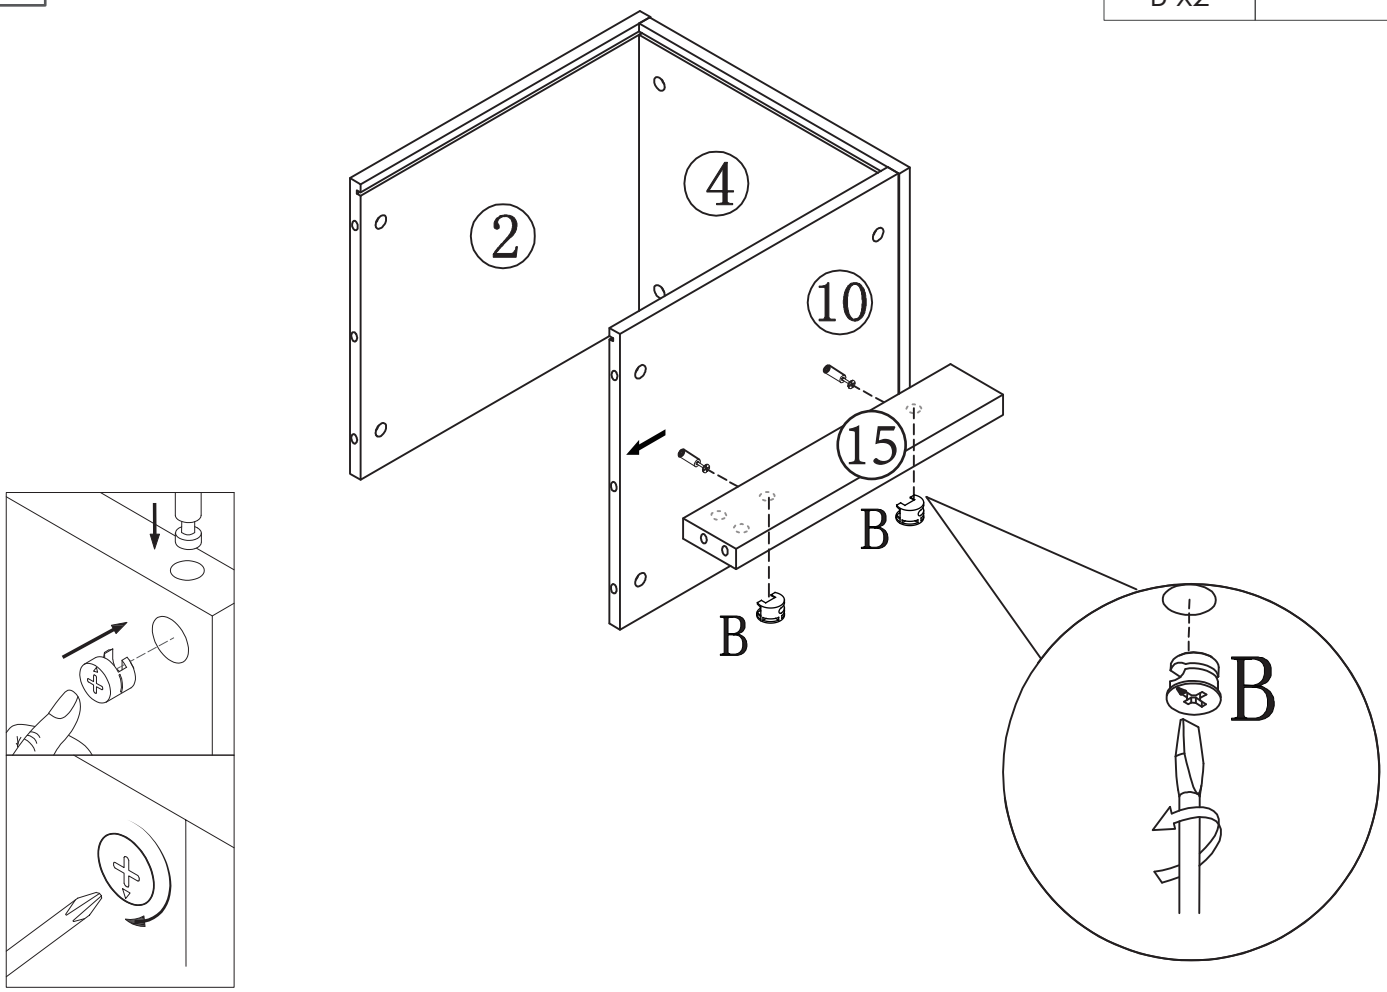

13


YOU WILL NEED	
B x4	

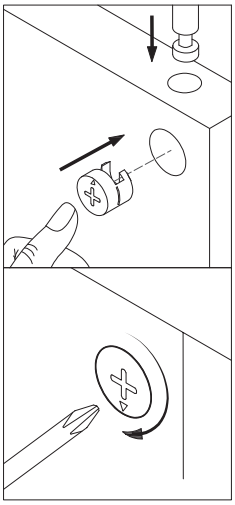


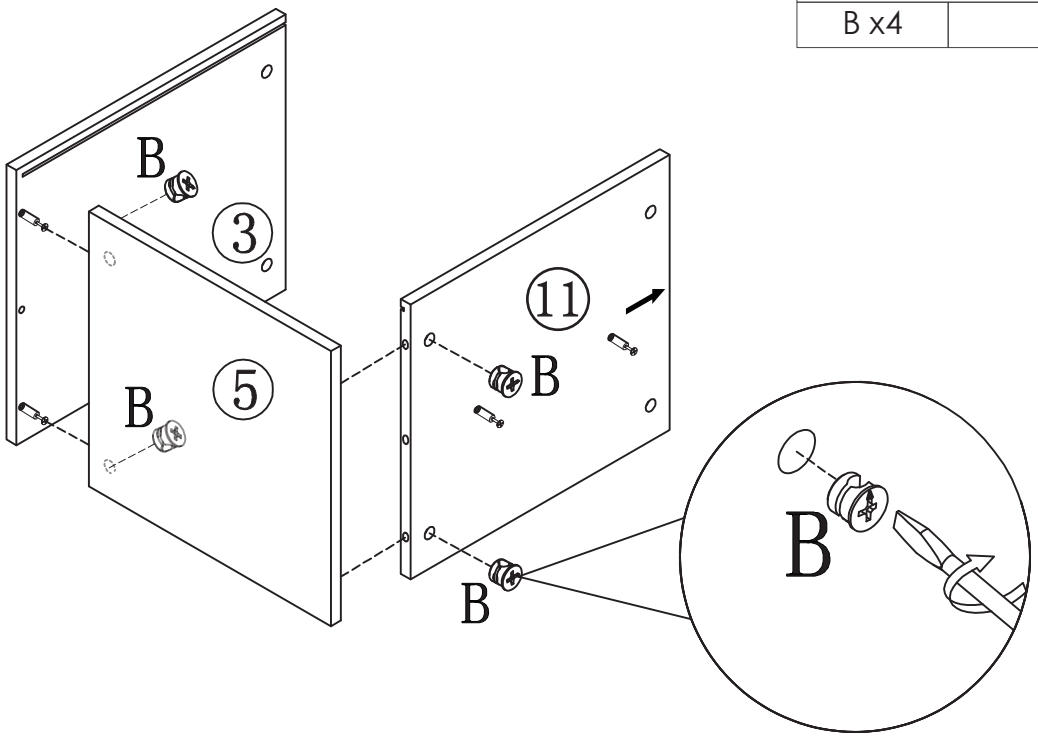

14


YOU WILL NEED	
B x2	

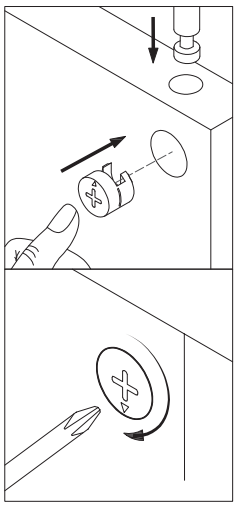

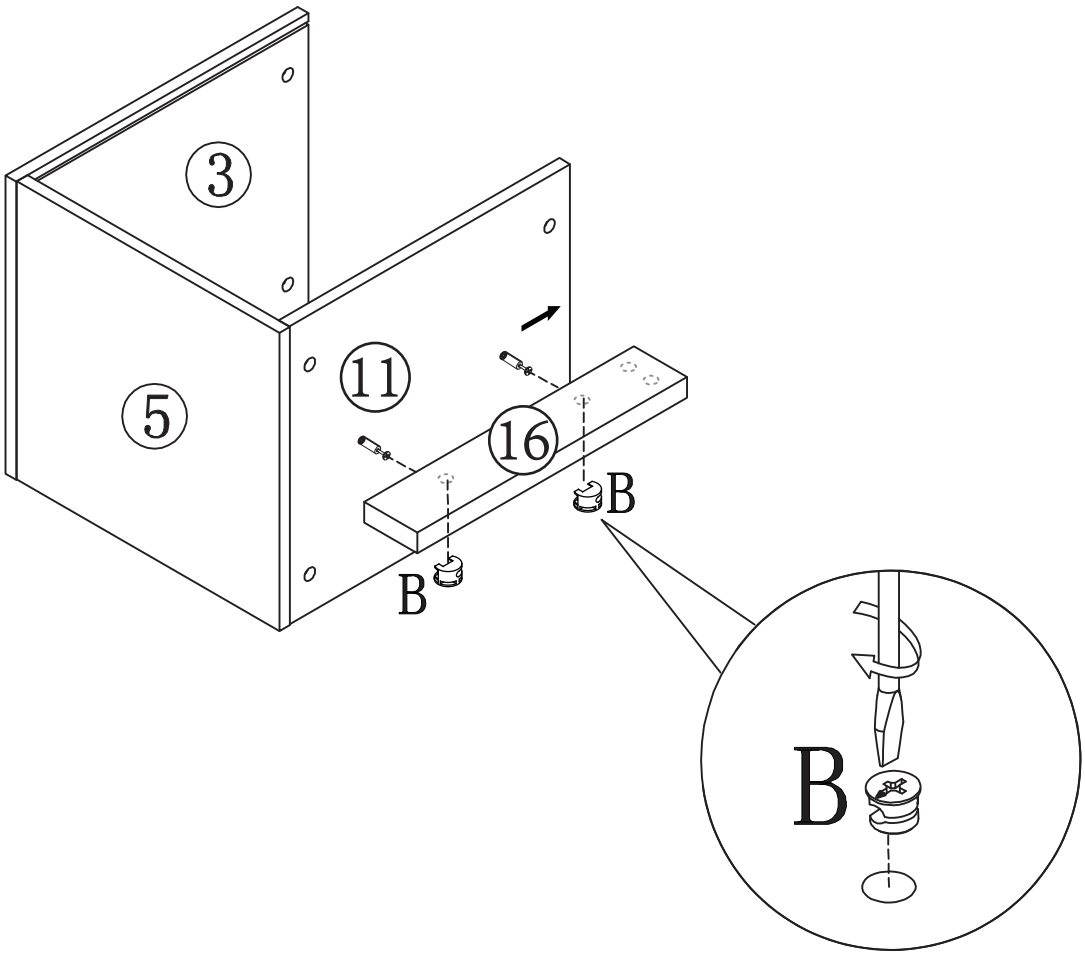


15

The thin backplate must be fully installed intothe slot or it will prevent proper installation.

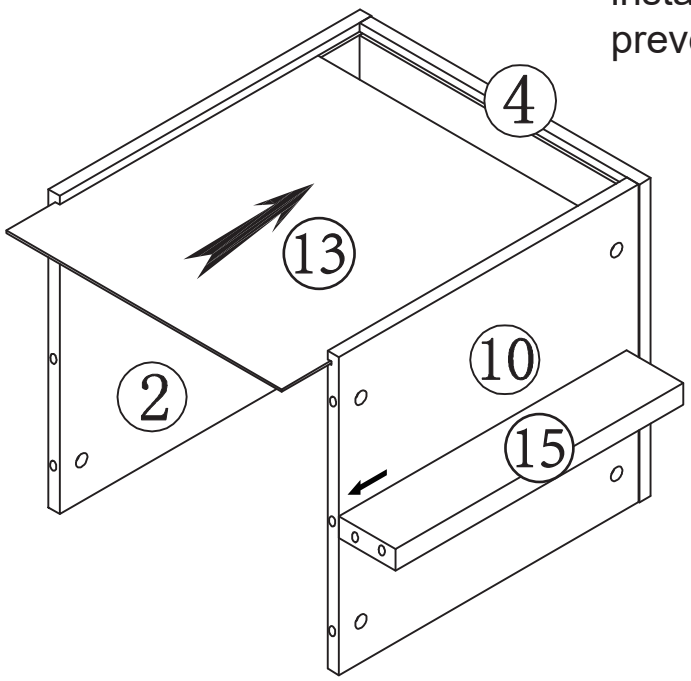


The 13th board needs to be fully inserted into the 4th board

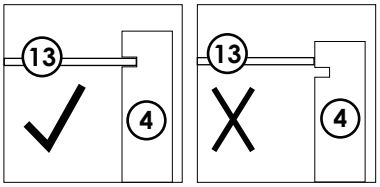


16

The thin backplate must be fully installed intothe slot or it will prevent proper installation.

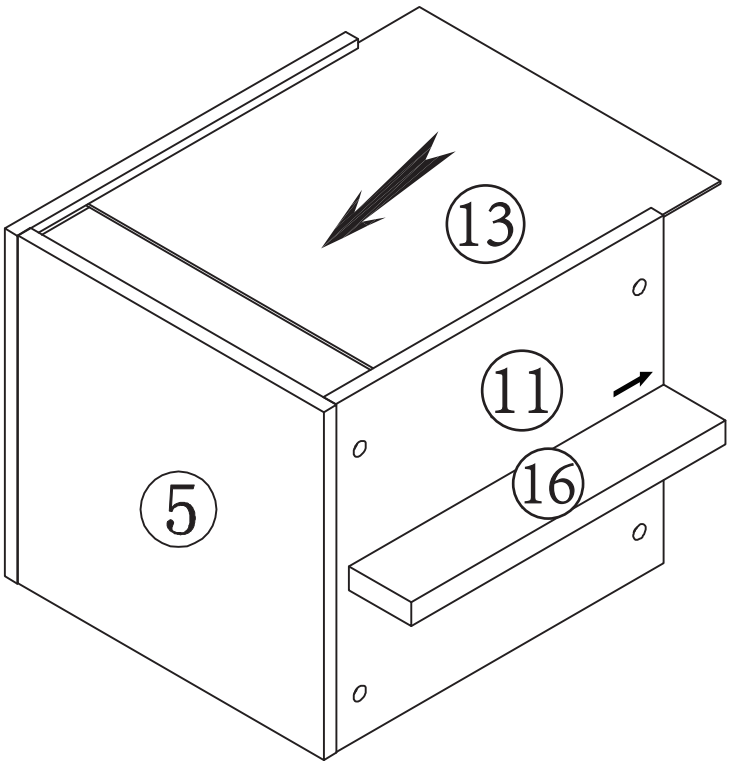


The 13th board needs to be fully inserted into the 4th board

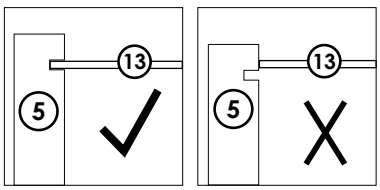


17

The thin backplate must be fully installed intothe slot or it will prevent proper installation.

YOU WILL NEED	
B x6	

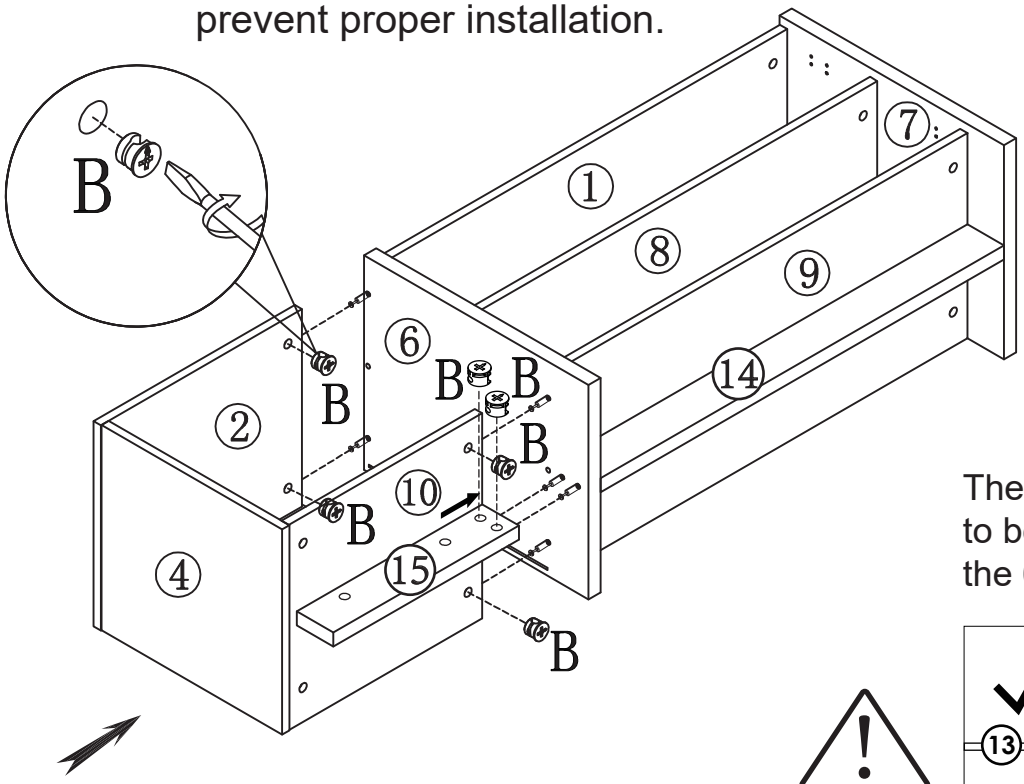


The 13th board needs to be fully inserted into the 6th board

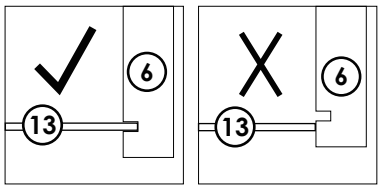


18

YOU WILL NEED	
B x6	

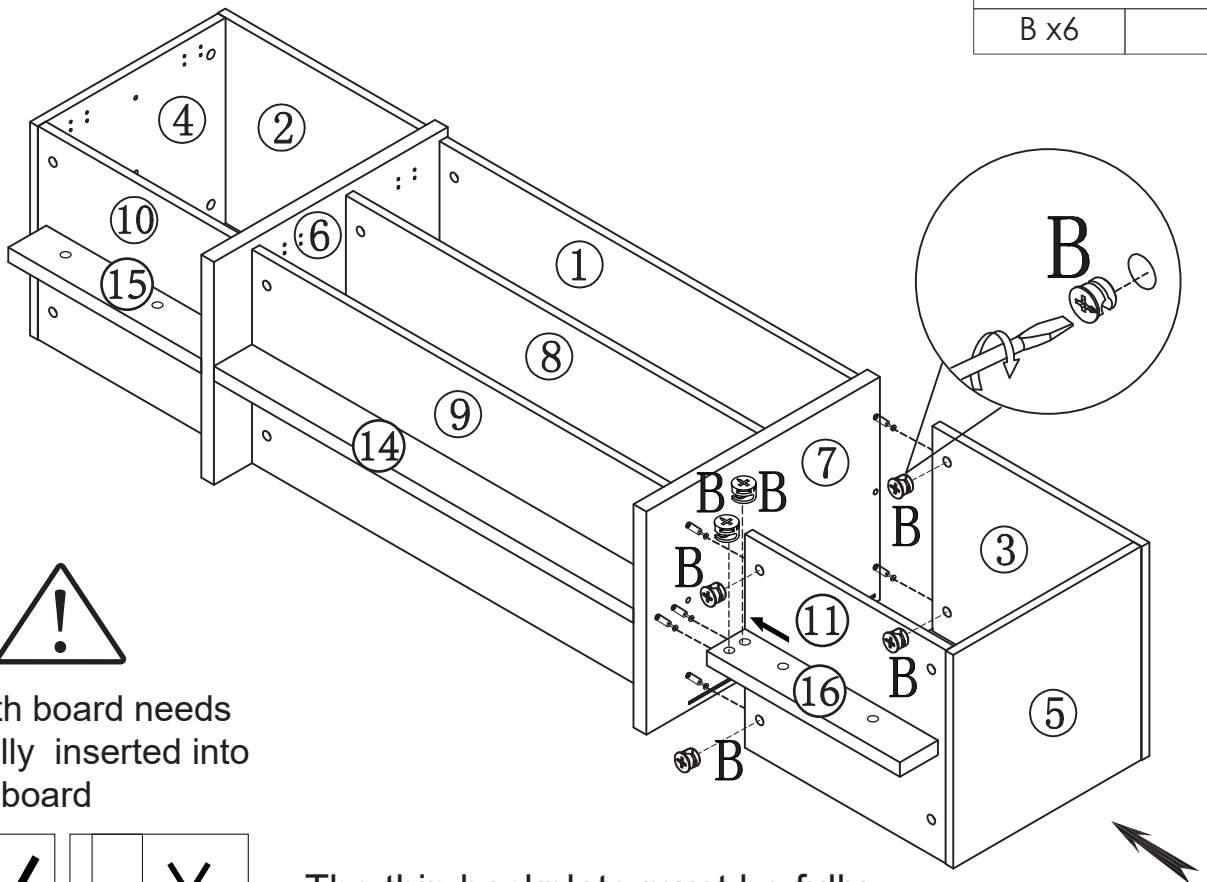

The 13th board needs to be fully inserted into the 7th board

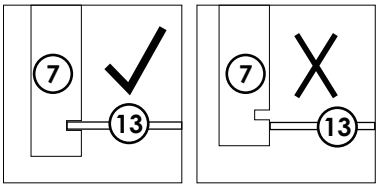


The thin backplate must be fully installed intothe slot or it will prevent proper installation.


19

YOU WILL NEED	
D x16	J x8


Please put on the D sticker
In the holes on plates 1 #,
2 #, 3 #, 4 #, 5 # and 8 #.

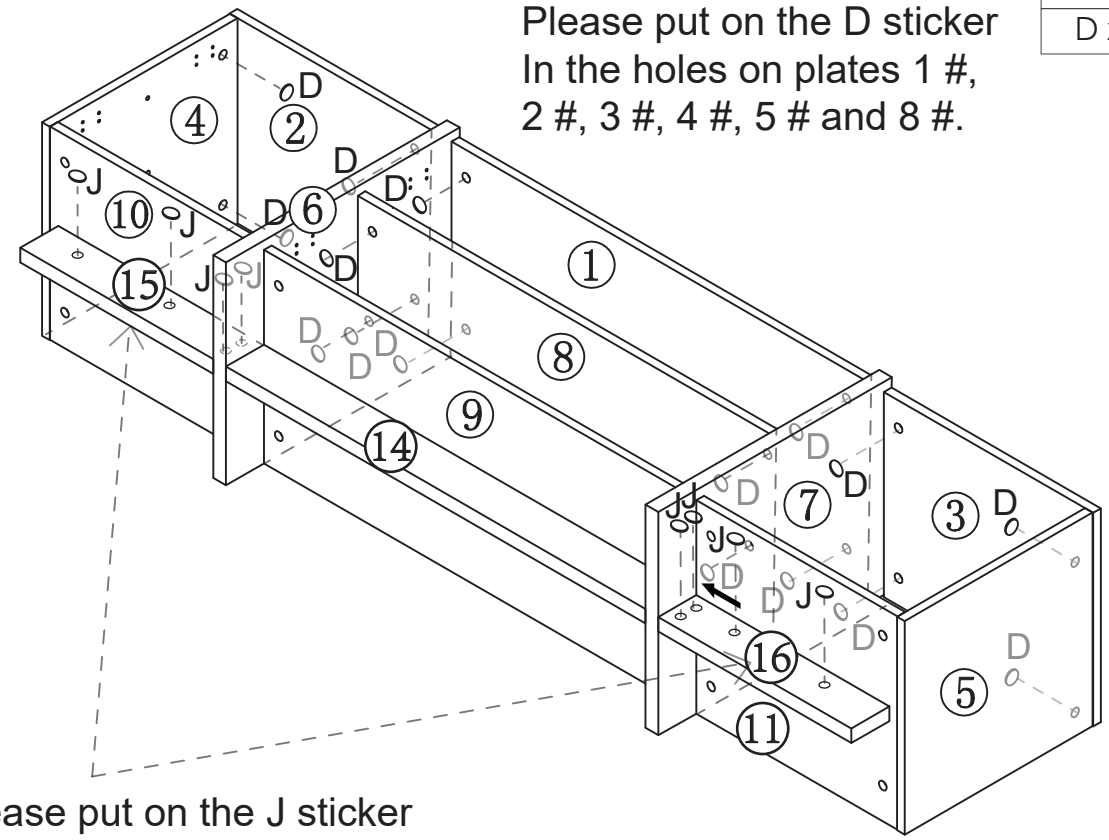



Please put on the J sticker
In the holes on plates 15 #,
and 16 #.

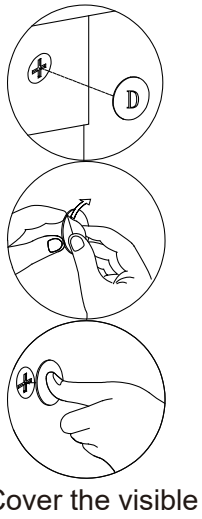

Cover the visible

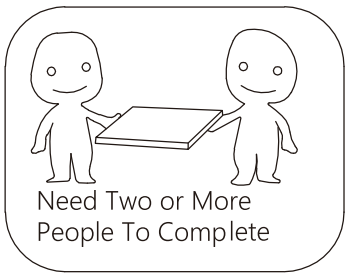


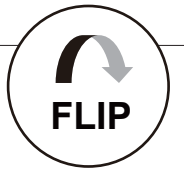


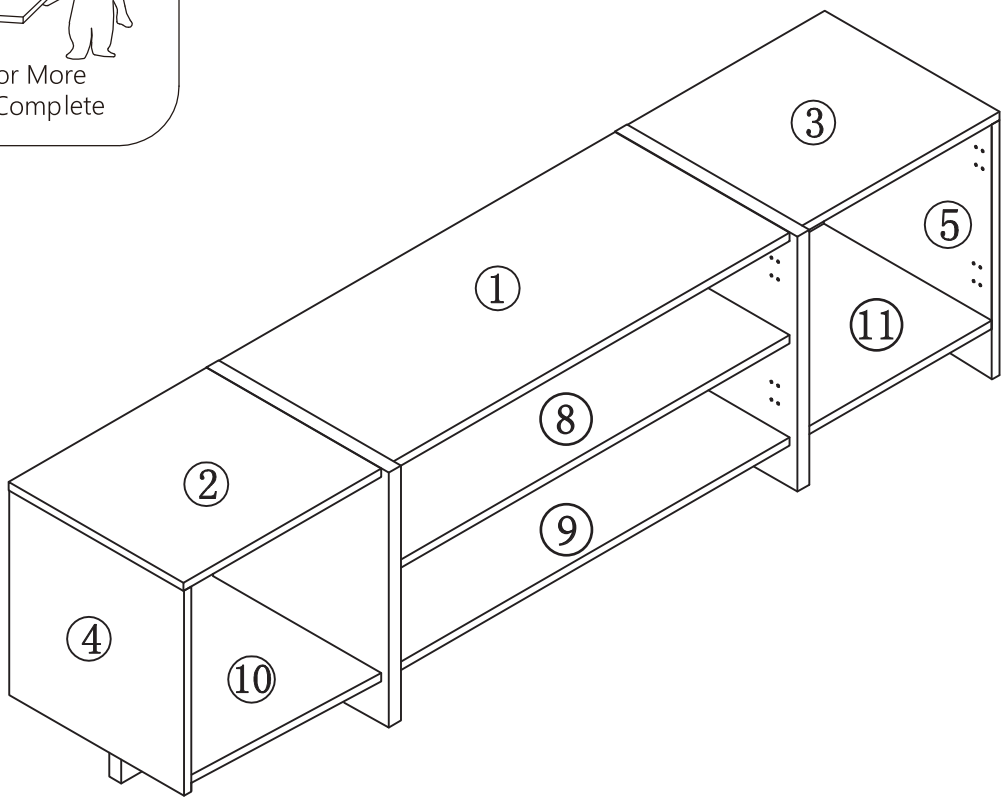

20


Full overlay

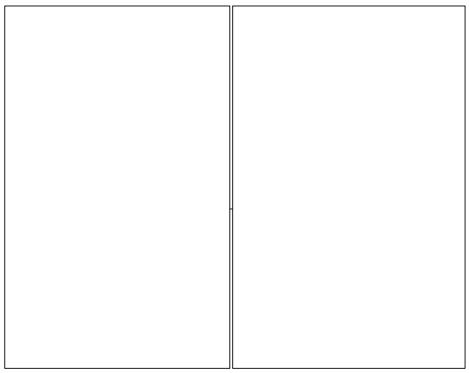


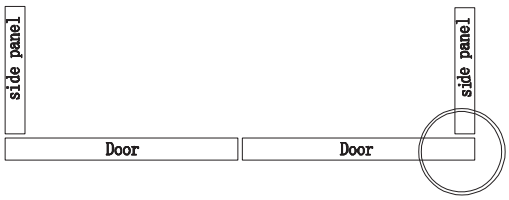

Door fully covers the panel


Insert

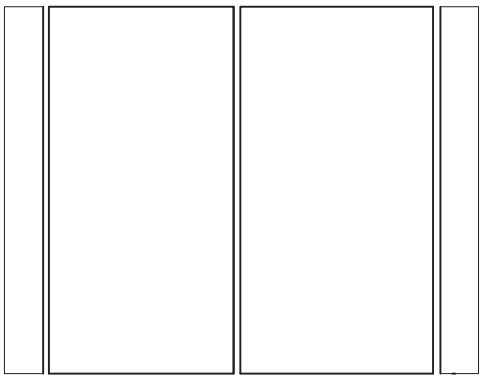

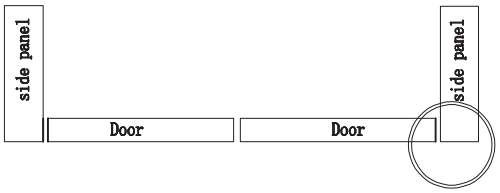


Doors was into the panel

F

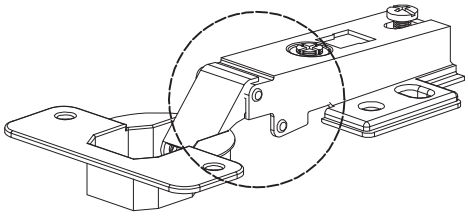

Full overlay
(For L/R Door #17)

G

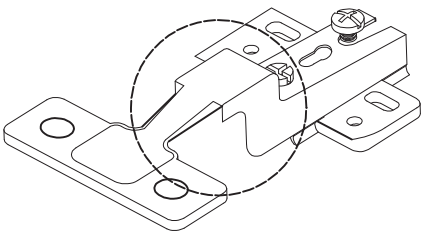


Insert
(For Middle Door #18)

21

YOU WILL NEED	
F x4	E x8


F hinge ONLY for
L/R Door #17.

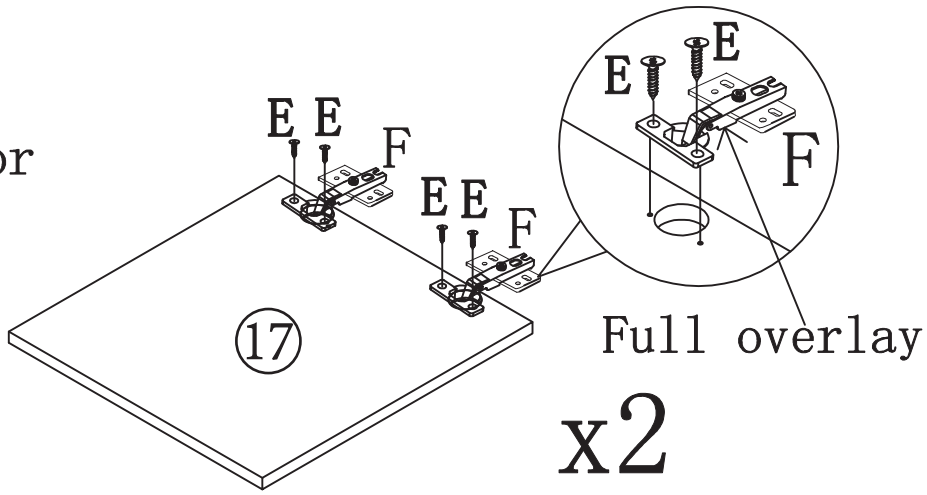

22

YOU WILL NEED	
E x16	


F hinge ONLY for
L/R Door #17.

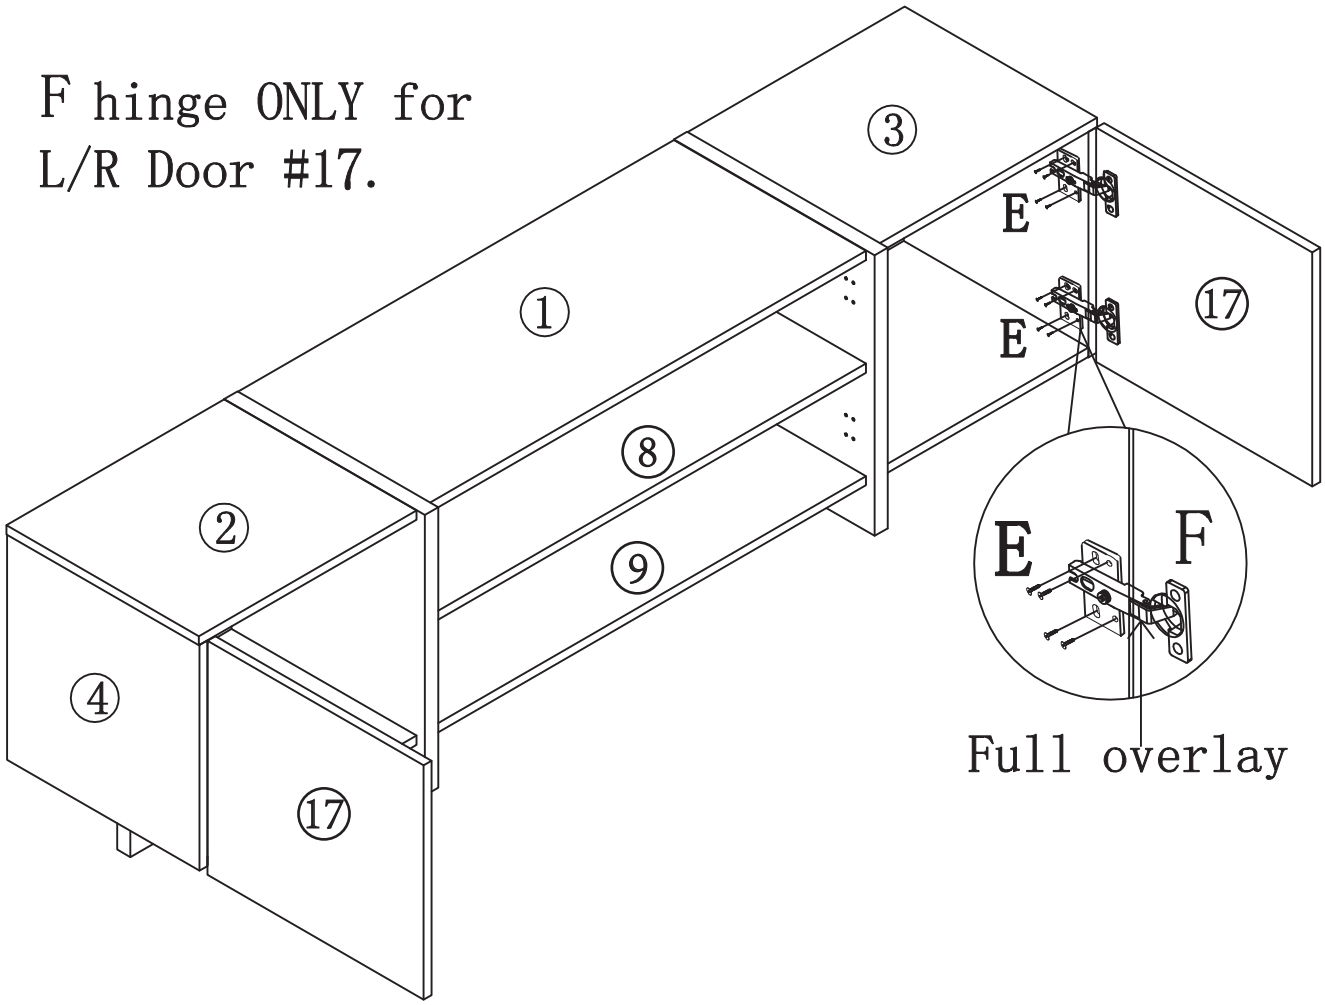

23

YOU WILL NEED	
G x4	E x8

G hinge ONLY for Middle Door #18.

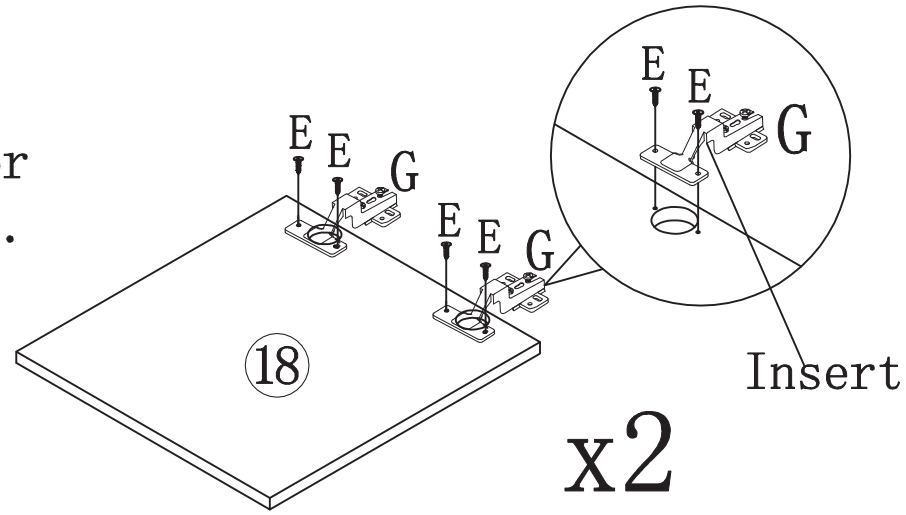


x2


24


YOU WILL NEED	
E x16	

G hinge ONLY for Middle Door #18.

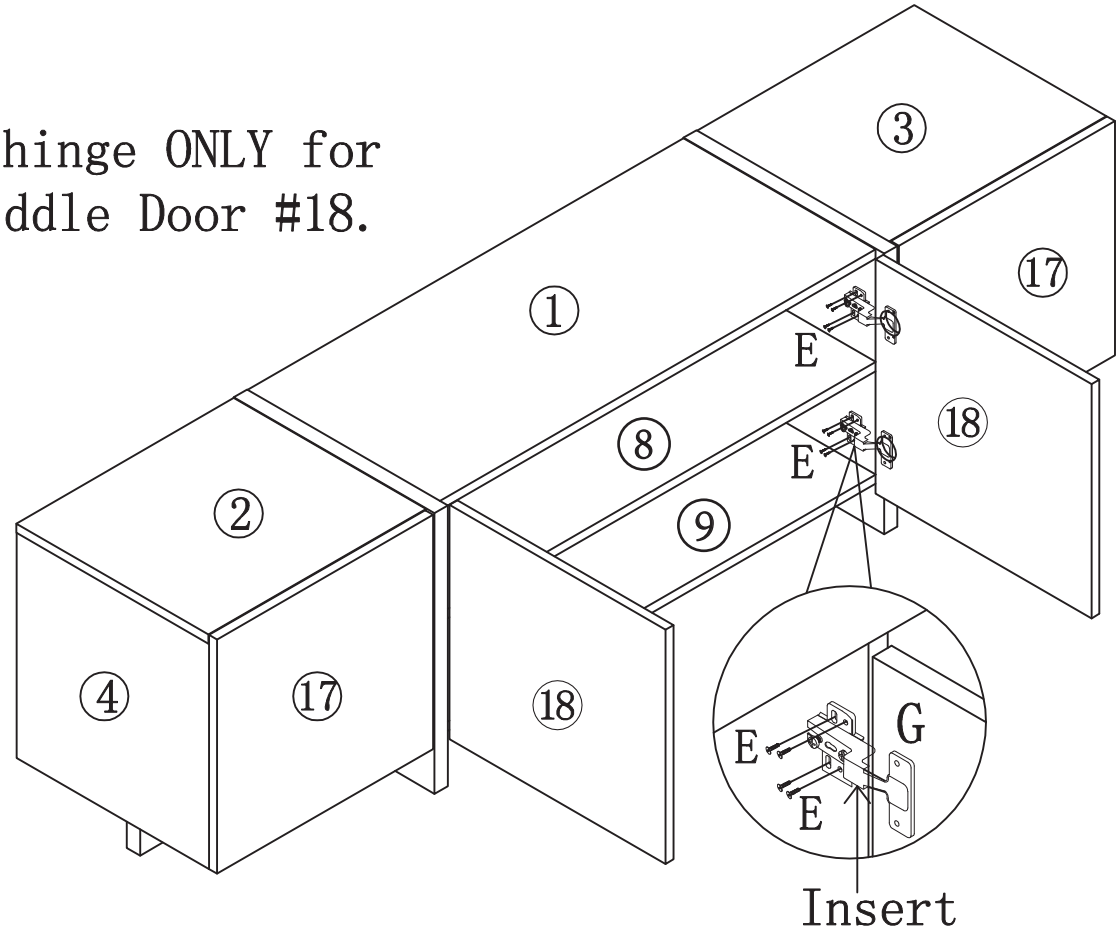



NOTE :If you notice that the cabinet doors are not properly aligned, such as significant gaps or vertical or horizontal misalignment, please adhere to the following adjustment instructions.

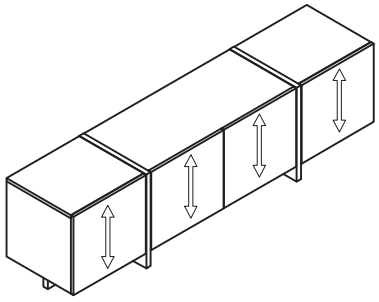

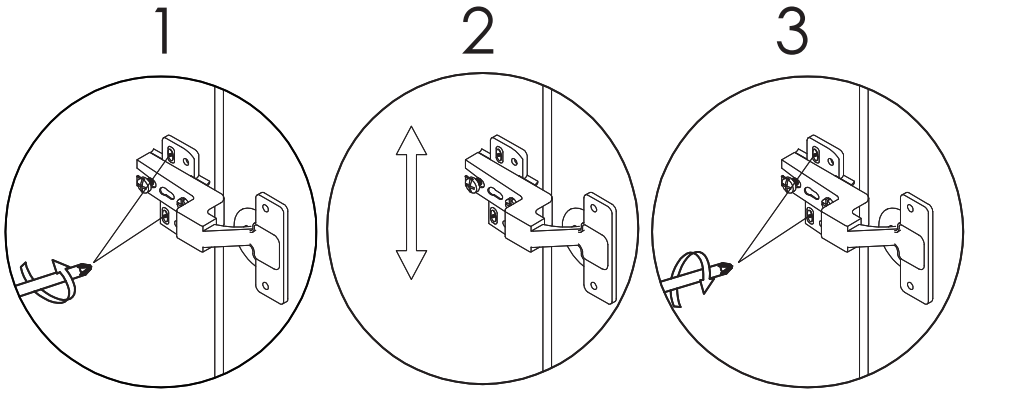



lose these 2 screws move hinge up/down tighten these 2 screws again

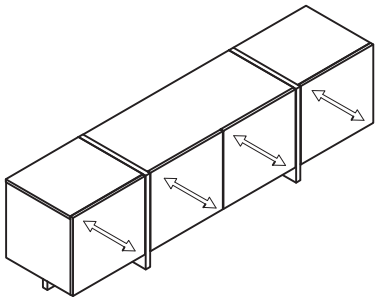

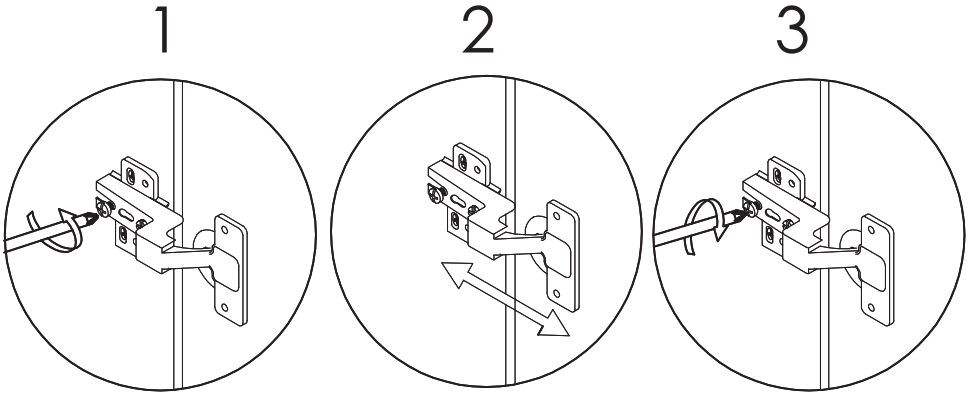

lose these screws shift hinge in/out tighten this screw again

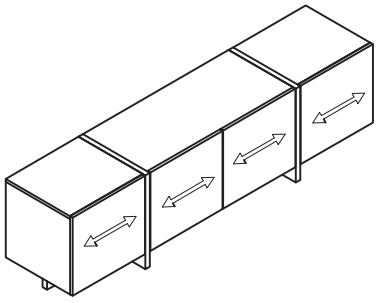

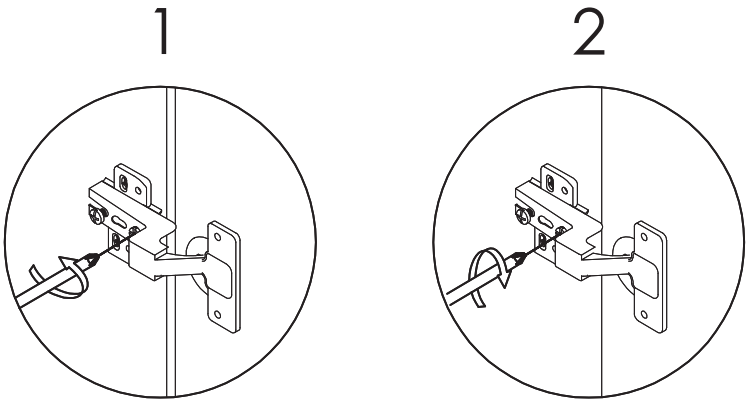


lose this screw would get hinge/door closer to side board


tighten this screw would get hinge/door away from side board

26

YOU WILL NEED	
H x16	

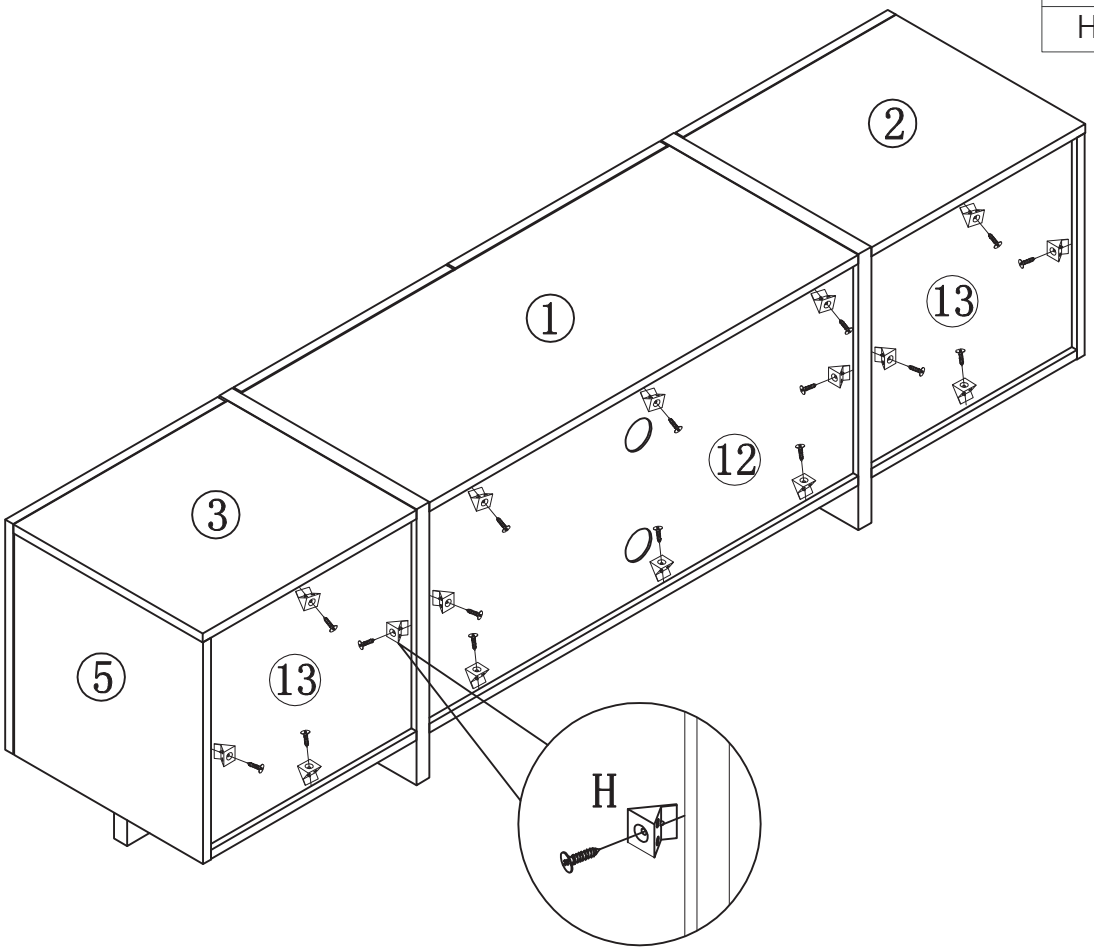

27

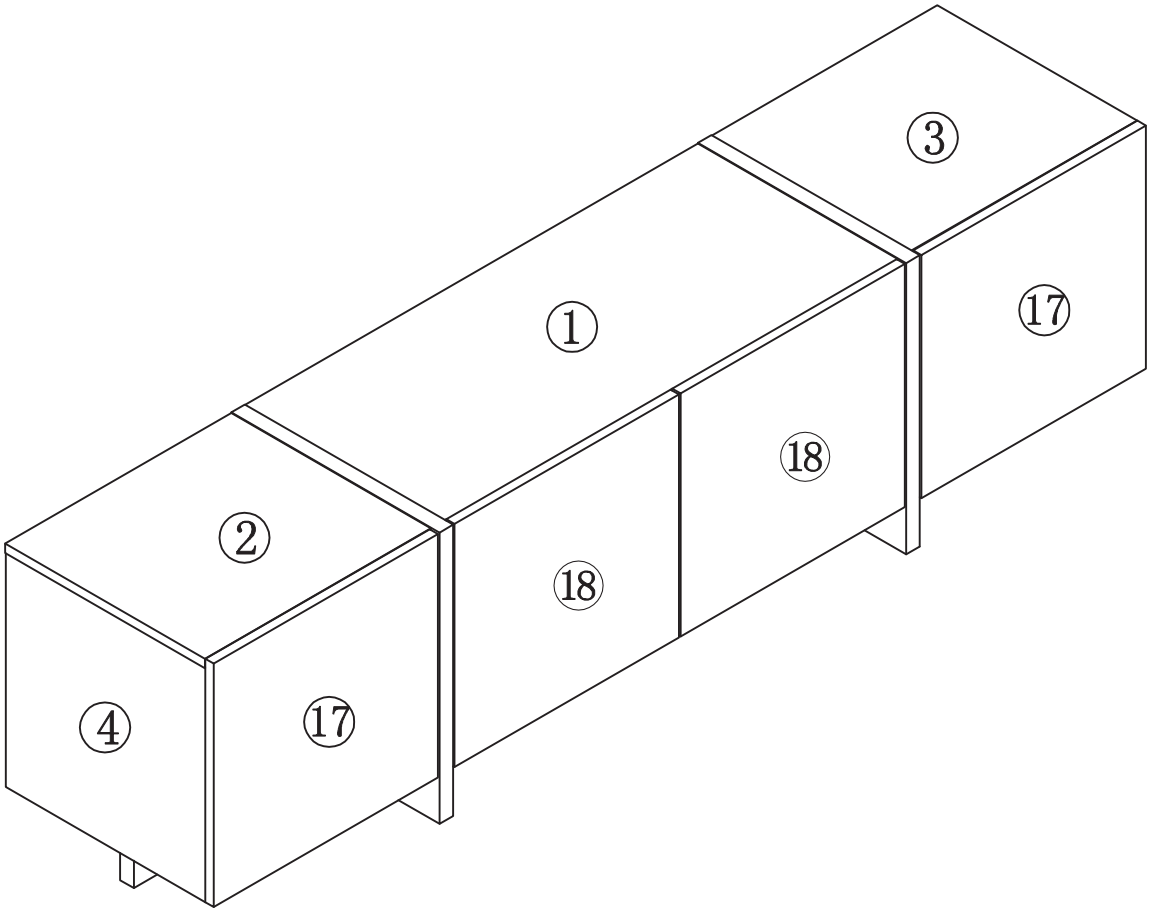

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **ALWAYS install tipover restraint provided.**
- **NEVER allow children to stand, climb or hang on drawers, doors, or shelves.**
- **NEVER open more than one drawer at a time.**
- **Place heaviest items in the lowest drawers.**

Made in China

