


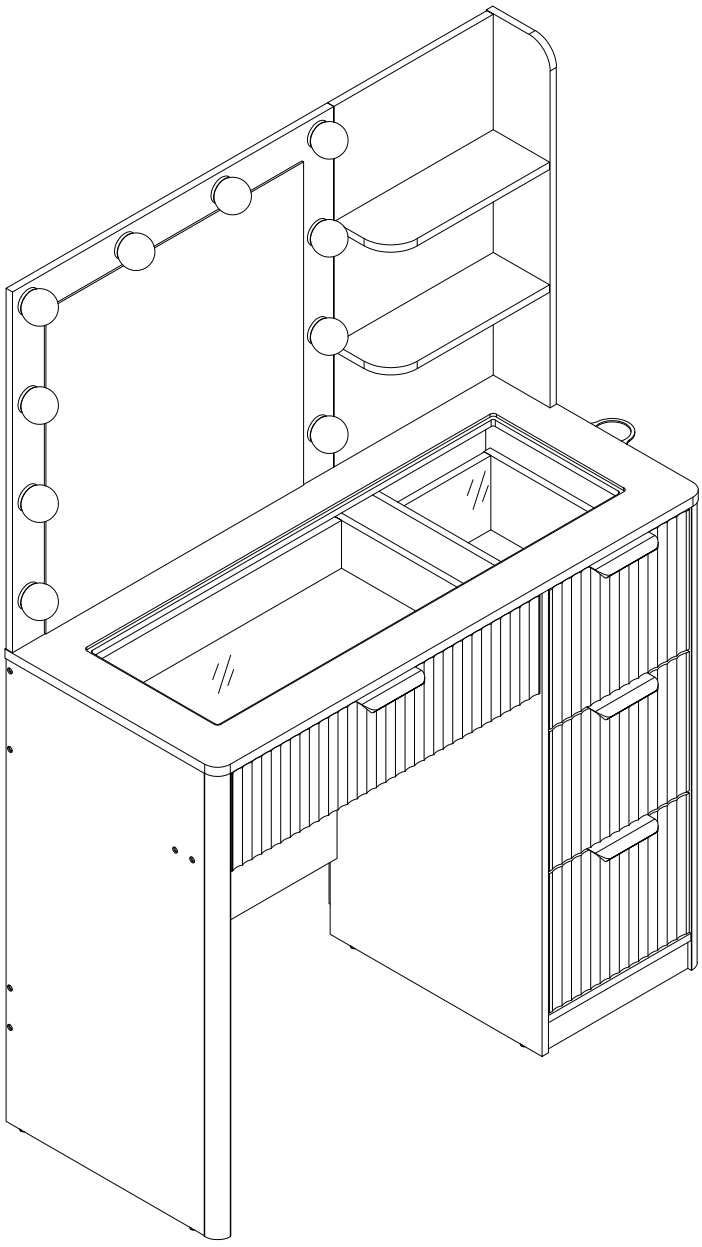


WARNING!

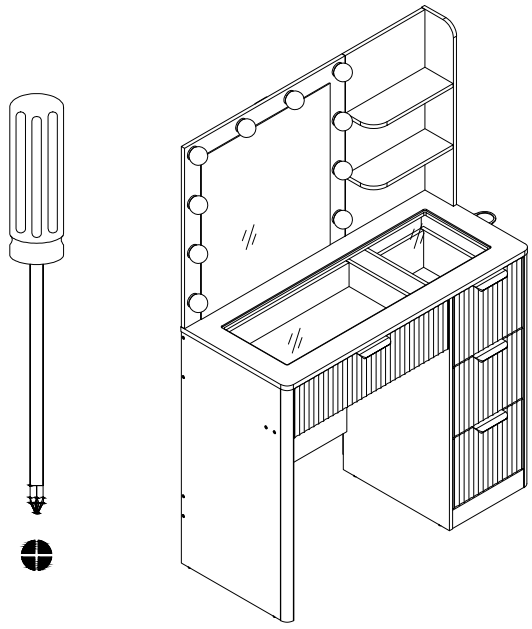

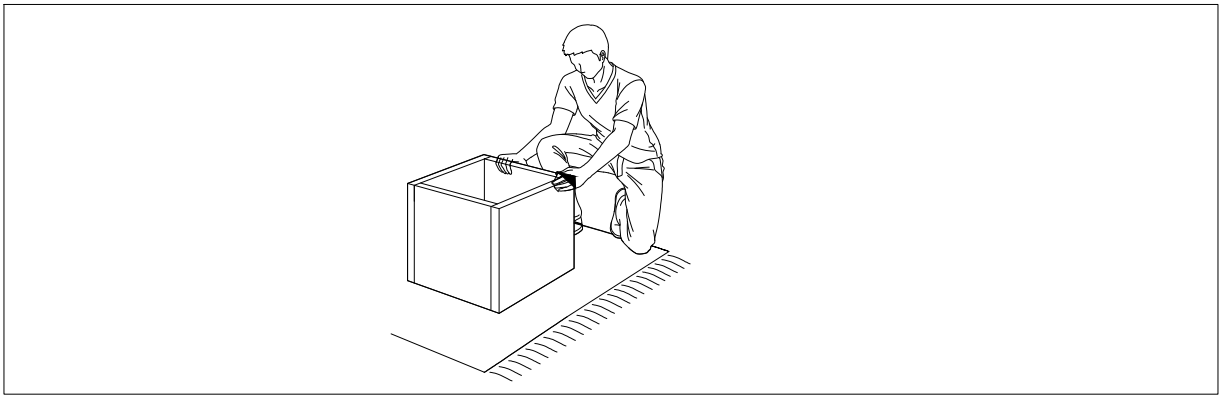


Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

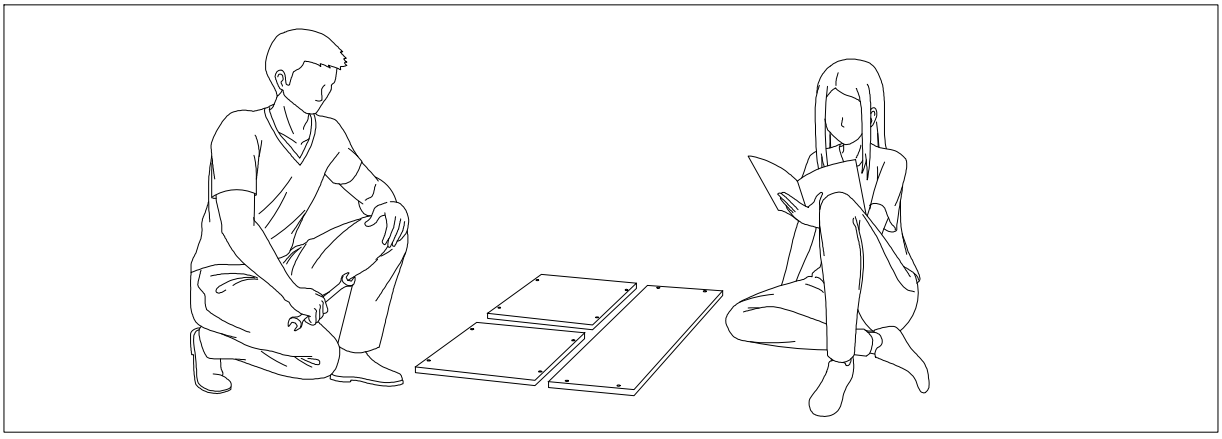


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Not actual size

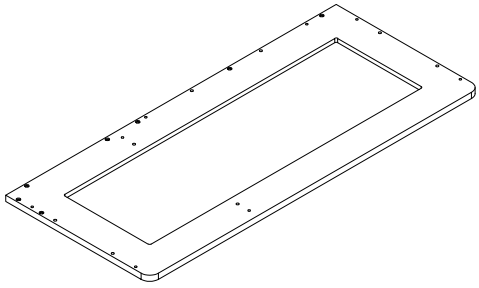


①(91.9X40X1.5cm) X1

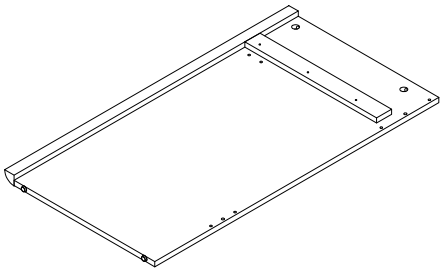


②(75.6X39.9X2.5cm)X1

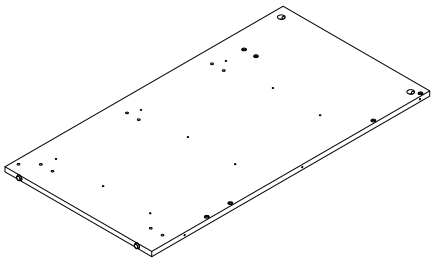


③(75.6X39.9X1.2cm)X1

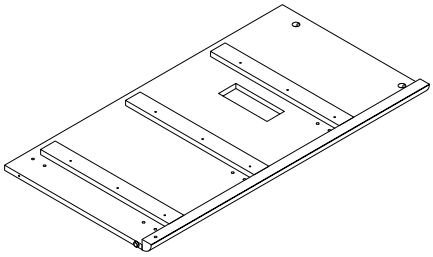


④(75.6X39.9X2.5cm)X1

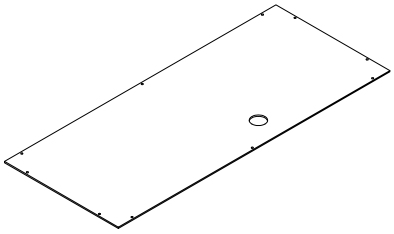


⑤(72.2X30.3X0.3cm)X1

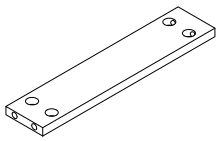


⑥(28.1X6X1.2cm)X2

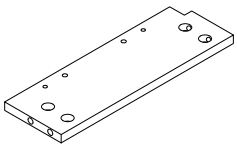


⑦(28.1X9.2X1.2cm)X1

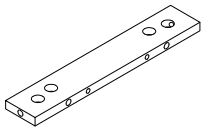


⑧(26.9X4.8X1.2cm)X1

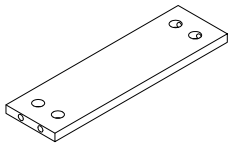


⑨(28.1X8X1.2cm)X1

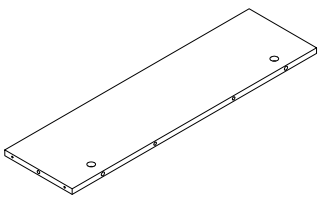

⑩(59.8X16.5X1.2cm)X1

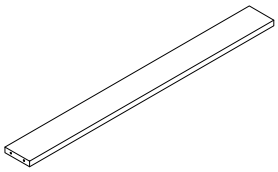


⑪(59.8X8X1.2cm)X1

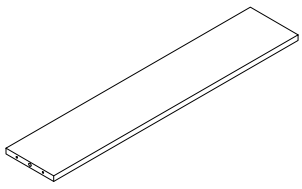


⑫(59.8X11.7X1.2cm)X1


Not actual size

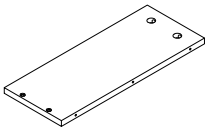


⑬(35X14X1.2cm)X3

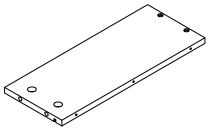


⑭(35X14X1.2cm)X3

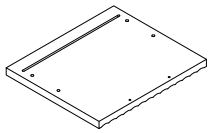


⑮(22.7X26.3X1.5cm)X3




⑯(22X14X1.2cm)X3

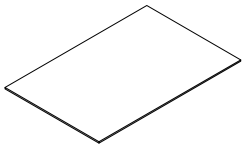


⑰(34.7X23X0.3cm)X3

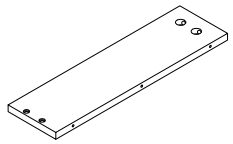


⑱(35X9.7X1.2cm)X1

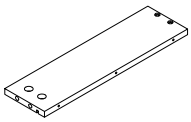


⑲(35X9.7X1.2cm)X1

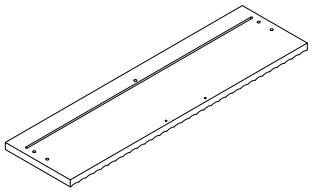


⑳(15.9X58X1.5cm)X1

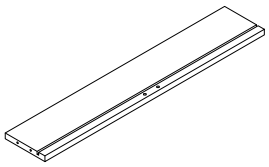


㉑(53.7X9.7X1.2cm)X1

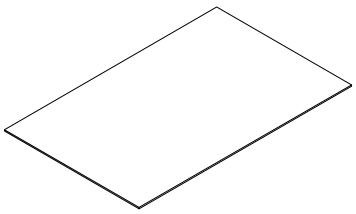

㉒(54.7X34.7X0.3cm)X1

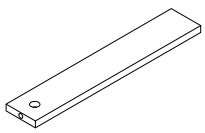


㉓(33.7X6X1.2cm)X1

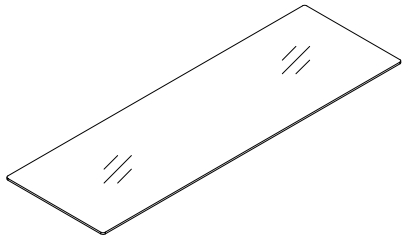


㉔(76.9X25X0.4cm)X1


Not actual size

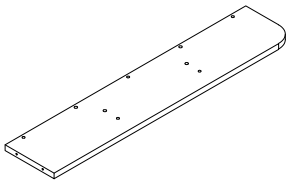


25(58.9X12X1.2cm)X1

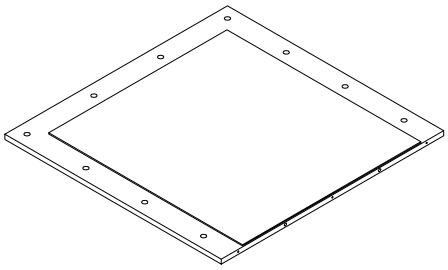

26(58.8X60.5X1.2cm)X1

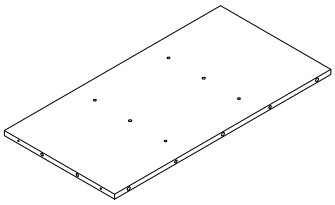


27(58.8X30X1.2cm)X1

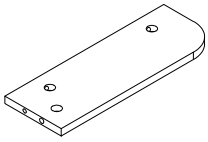


28(29.9X10.6X1.2cm)X2


Not actual size

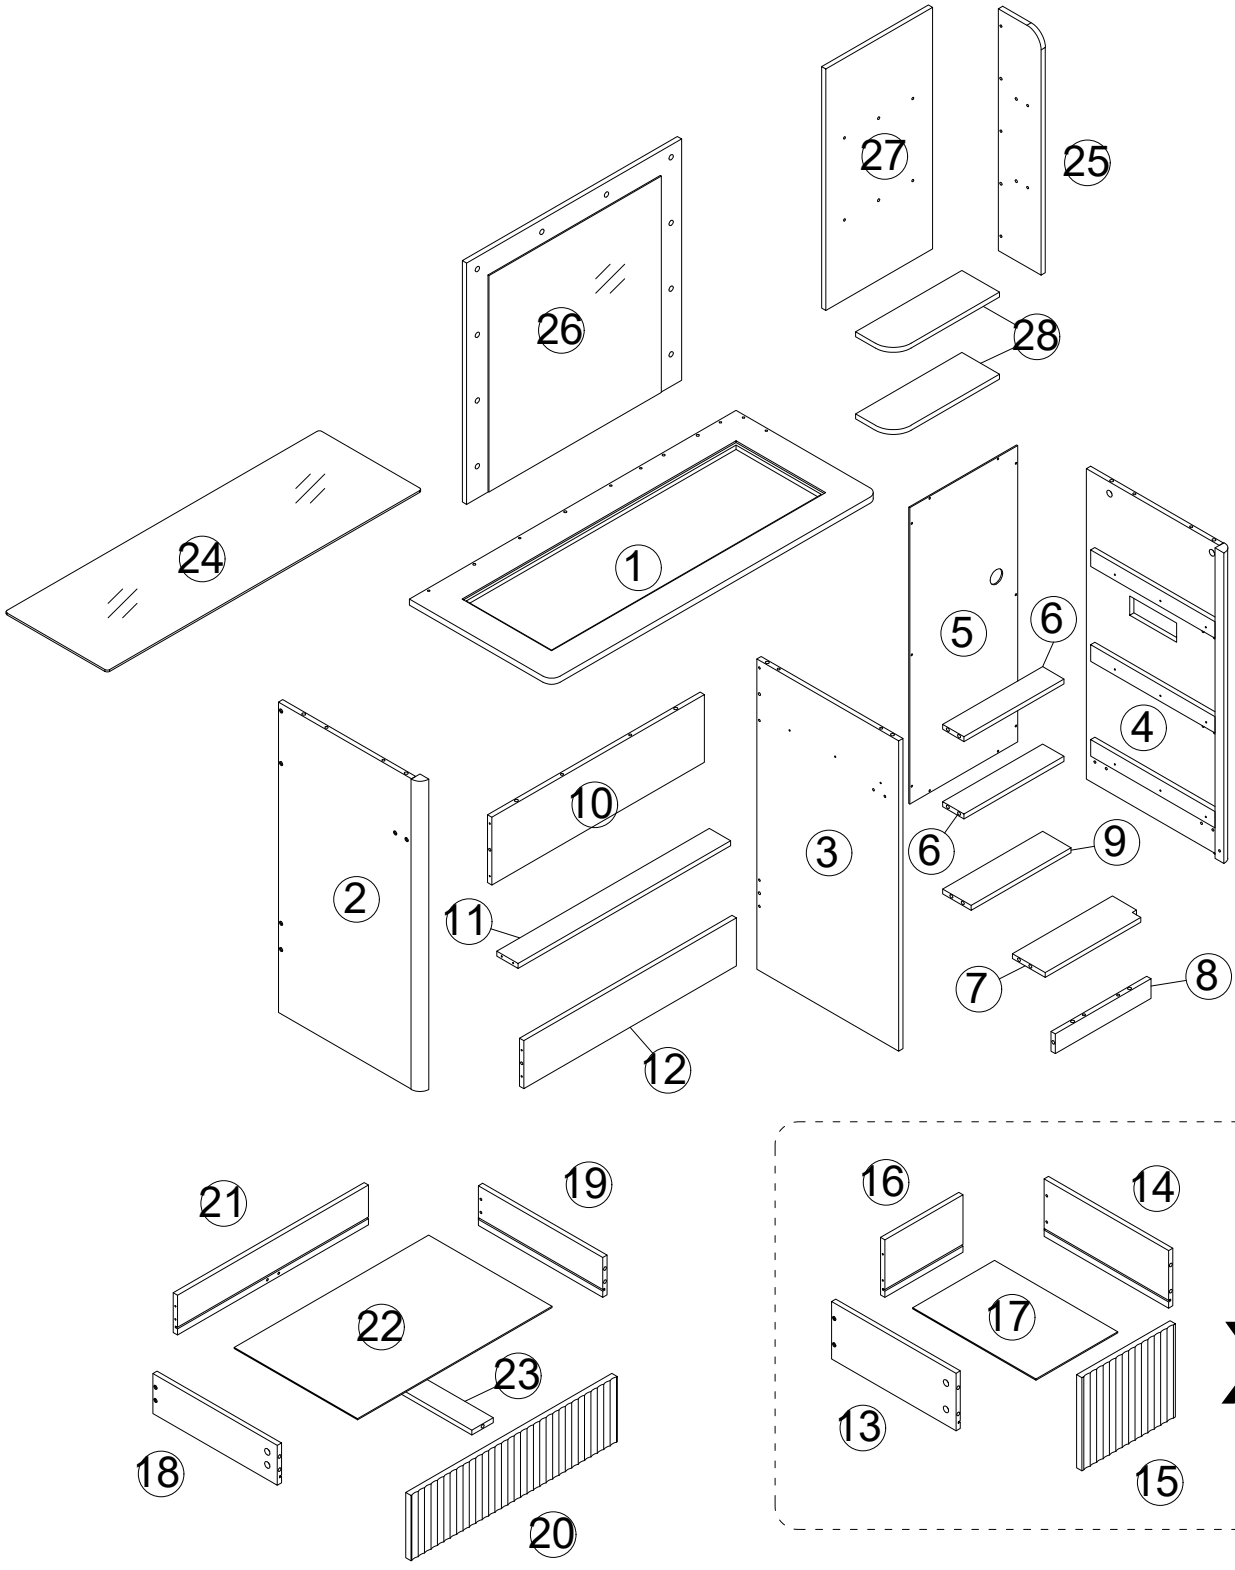

Not actual size


Ⓐ	X54+3
	
ϕ15*9.5	

Ⓑ	X54+3
	
ϕ6.5*35	

Ⓒ	X24+2
	
ϕ6*30	


Ⓓ	X56+3
	
ϕ3.5*12	


Ⓔ	X8+1
	
ϕ3*12	

Ⓕ	X37+2
	
ϕ4*35	


Ⓖ	X10+1
	
ϕ3*14	


Ⓗ	X2+1
	
ϕ4*12	


Ⓘ	X3
	
45*12	


Ⓙ	X4
	
120*38*17	


Ⓚ	X1
	
109*99*38.5	

Ⓛ	X4
 CL	
L=350	

Ⓛ	X4
 CR	
L=350	


Ⓛ	X4
 DL	
L=350	


Ⓛ	X4
 DR	
L=350	


Ⓜ	X1
	
145*55*45	

Not actual size

N	X29+2
	
ϕ21	

O	X1
	
70*30*5	

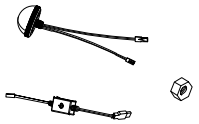
P	X10
	

Q	X1set
	


Cam LockFasteningSystem

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

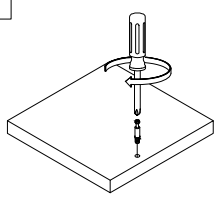

2

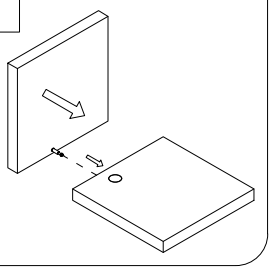


3

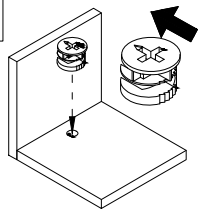



The opening must point toward the edge of the board


4

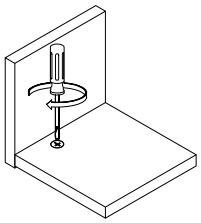



STEP 1

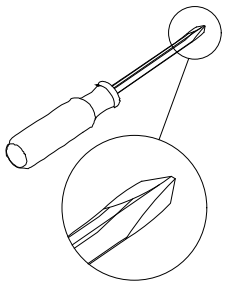


D	X12
	
ø3.5*12	

L	X1
 CL	
L=350	


L	X3
 CR	
L=350	

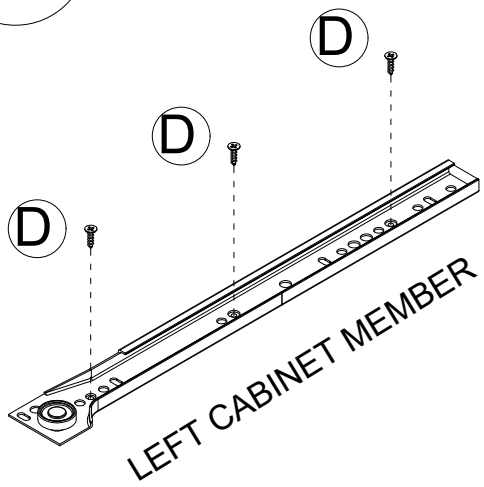


LCL

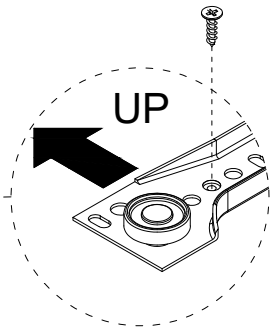


Second hole

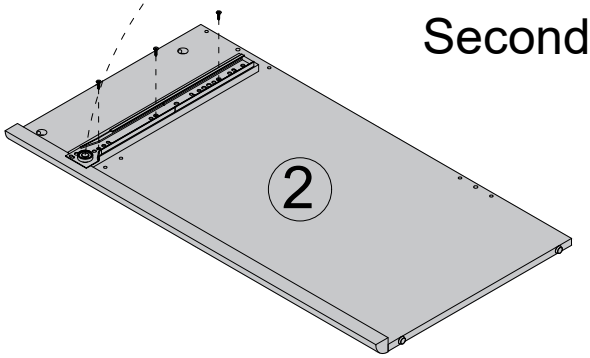


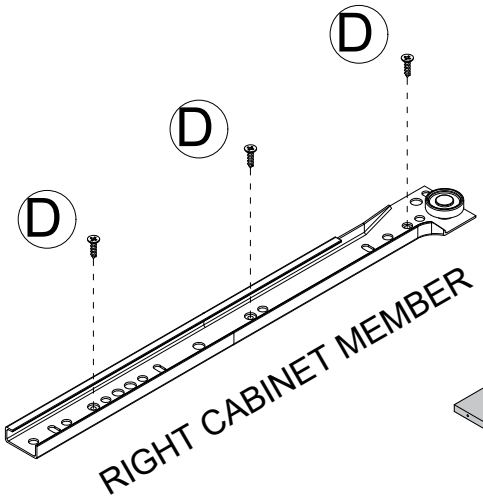


LCR

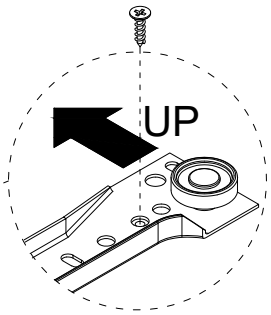



Second hole

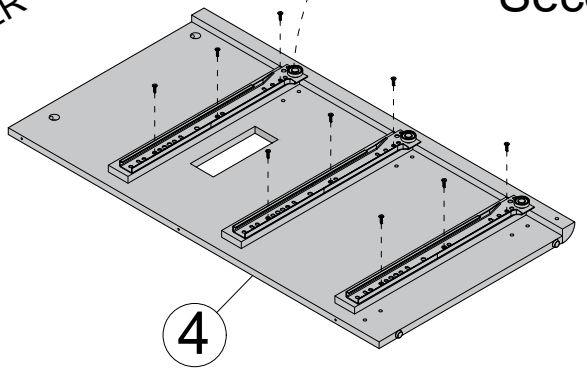



STEP 2

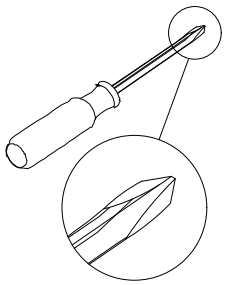



B	X9
	
ø6.5*35	

D	X9
	
ø3.5*12	


L	X3
 CL	
L=350	

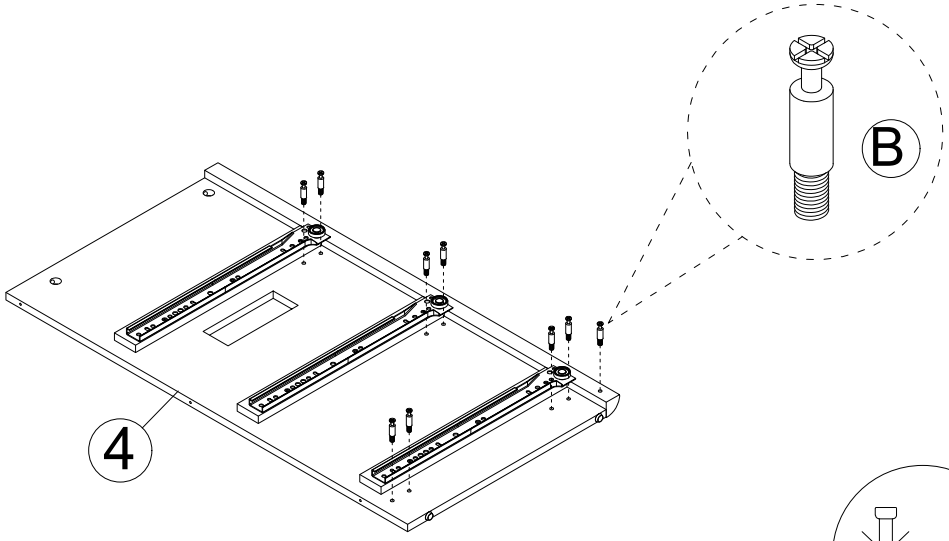

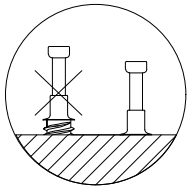


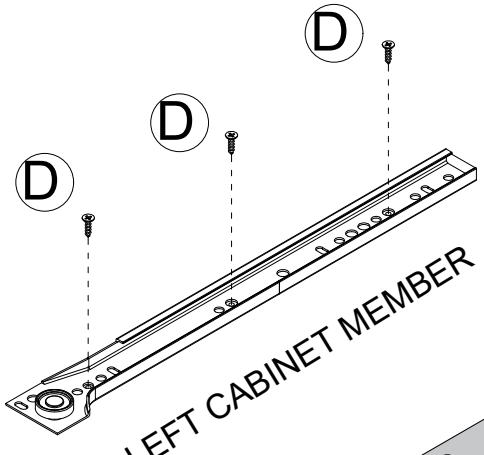


LCL

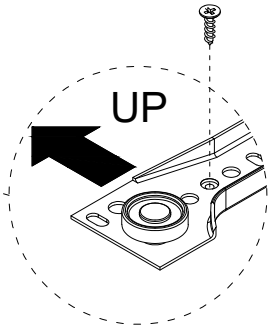



Second hole

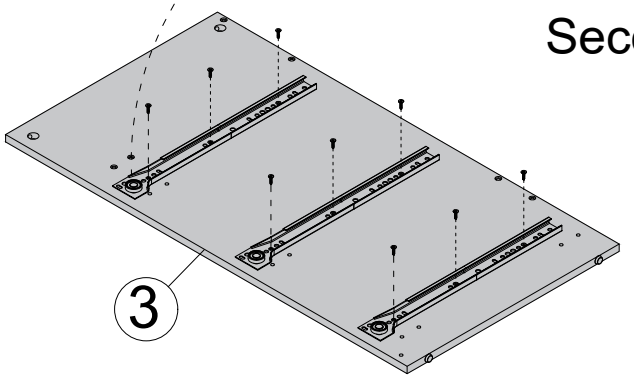



STEP 3

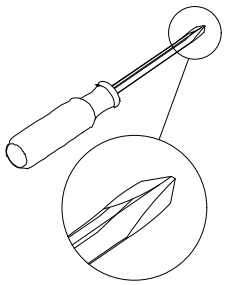



B	X9
	
ø6.5*35	

D	X3
	
ø3.5*12	

L	X1
 CR	
L=350	

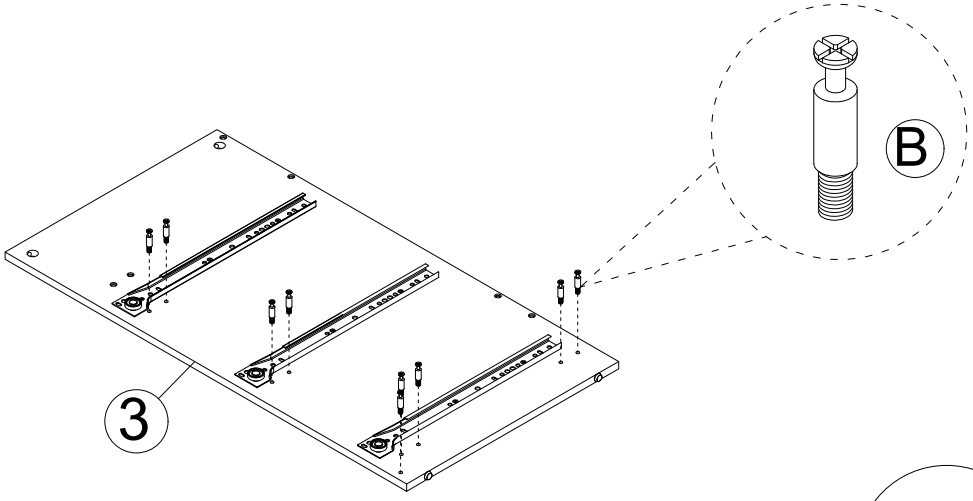


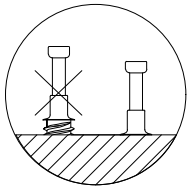

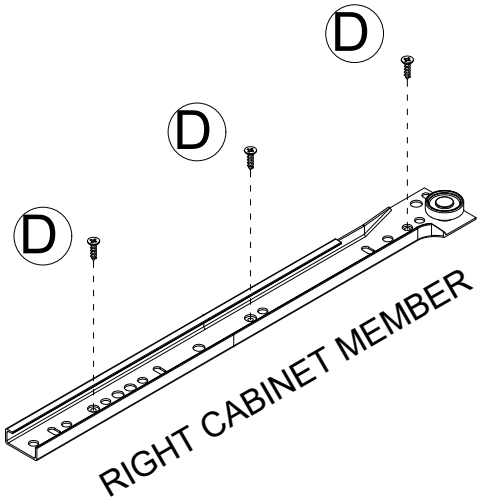


LCR


FLIP OVER


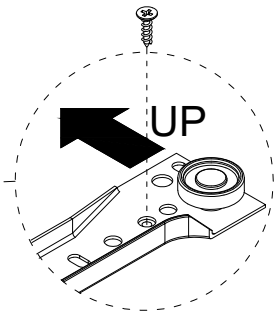



Second hole

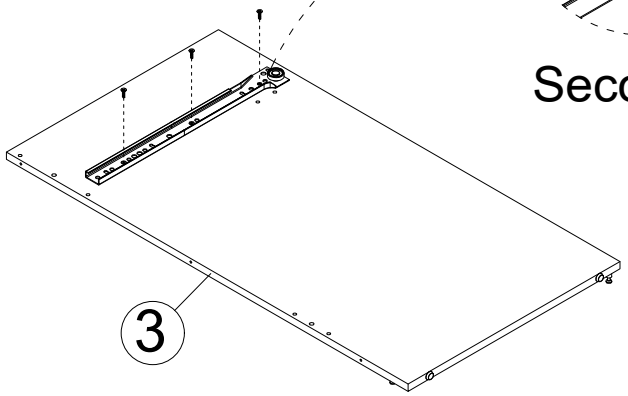


STEP 4

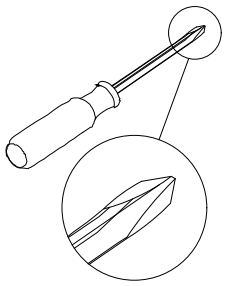



C	X4	F	X12	N	X6
					
ϕ6*30		ϕ4*35		ϕ21	

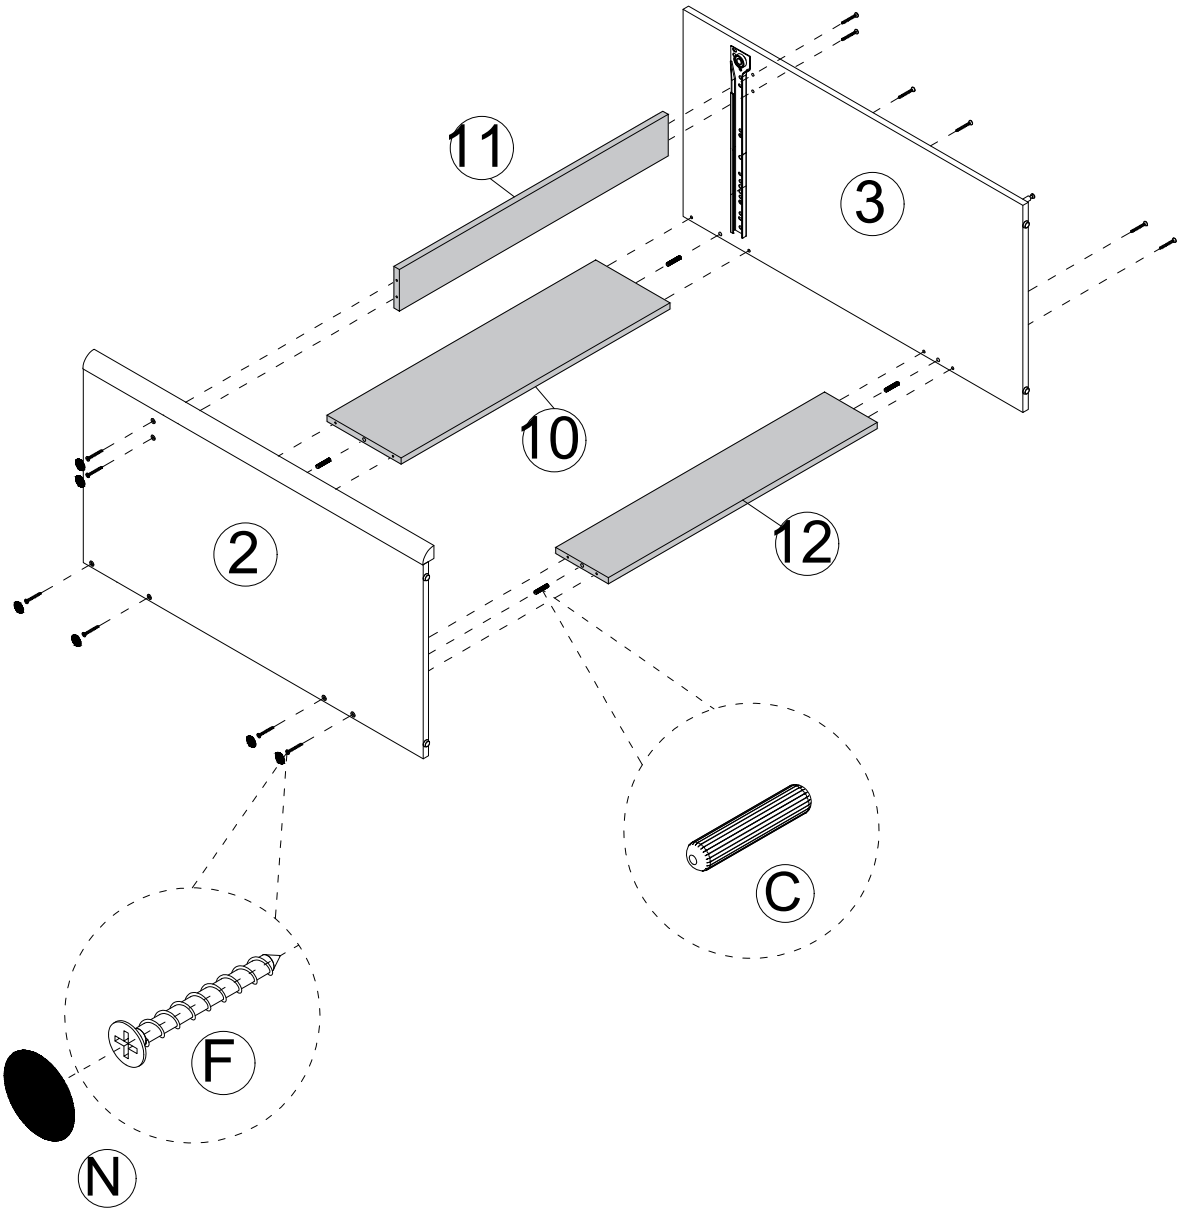



STEP 5

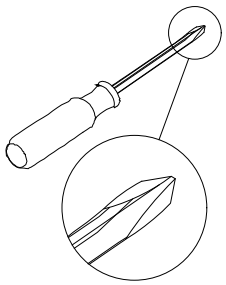



A	X2
	
ϕ15*9.5	

B	X2
	
ϕ6.5*35	


C	X2
	
ϕ6*30	

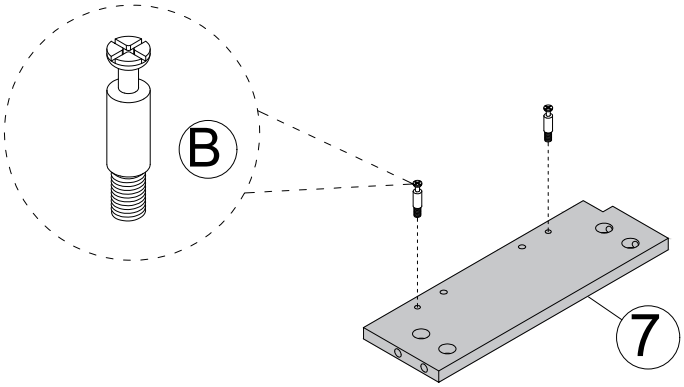

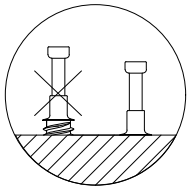

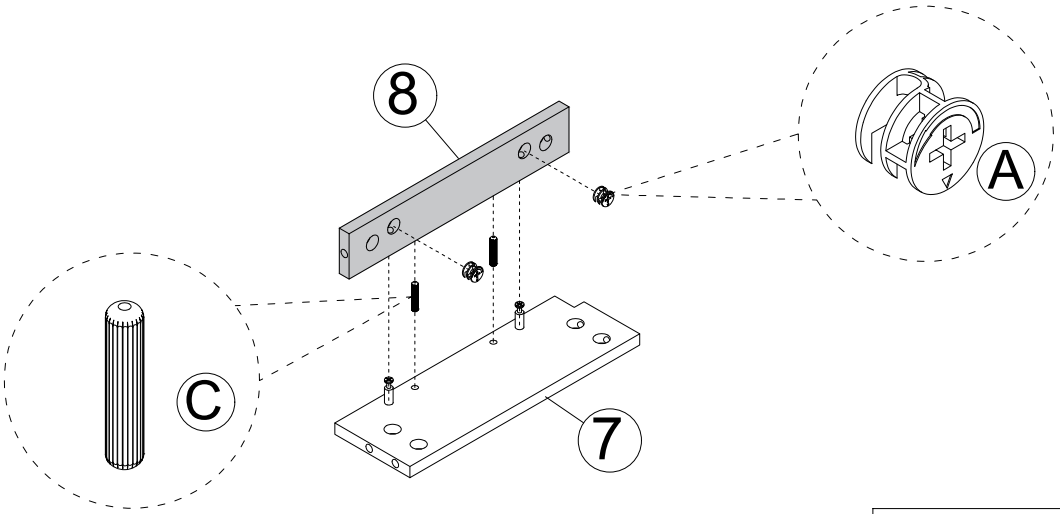



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

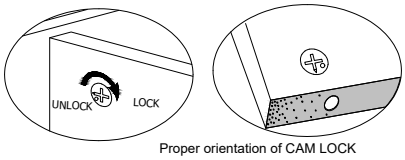


Proper orientation of CAM LOCK


STEP 6

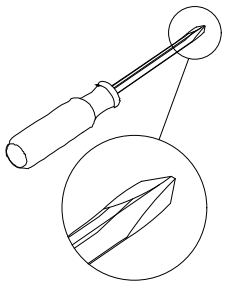

A	X9
	
ϕ15*9.5	

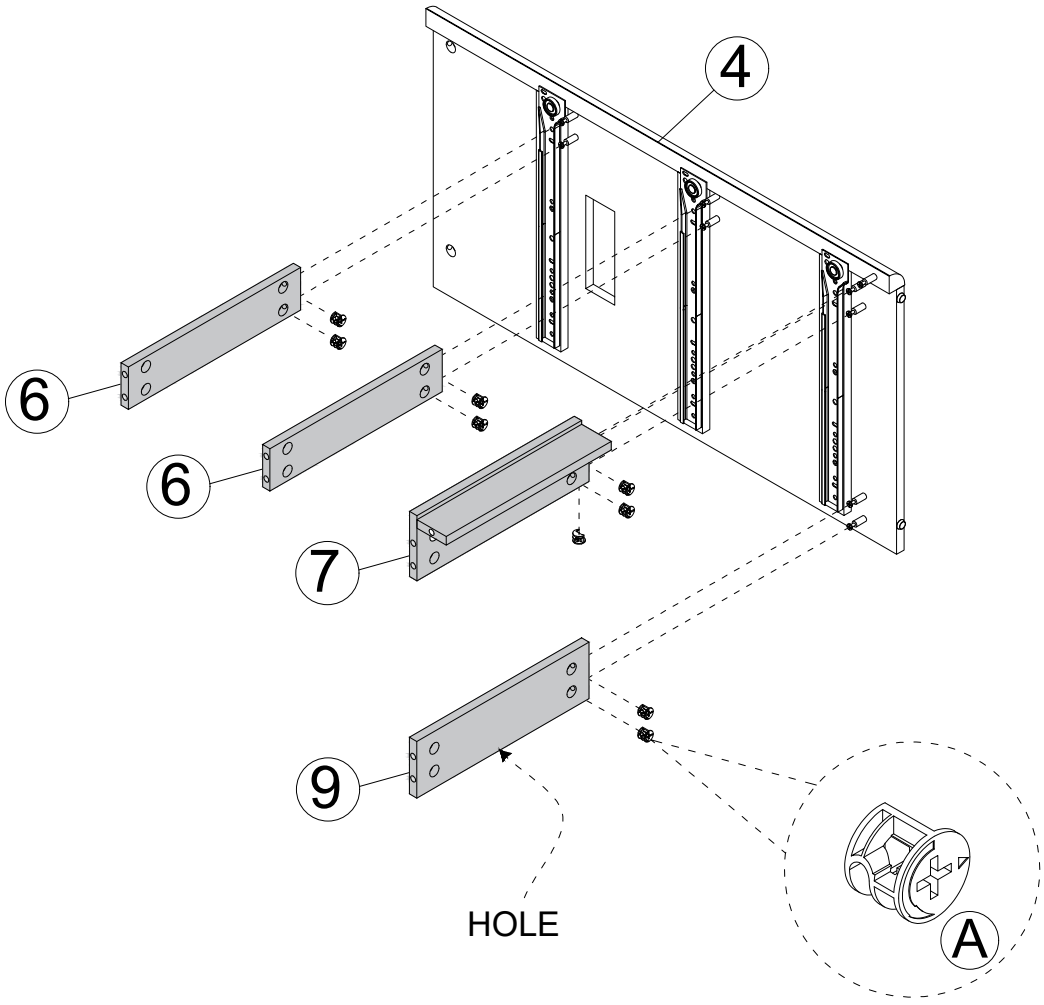



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

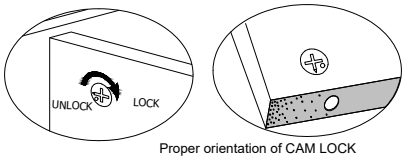


Proper orientation of CAM LOCK


STEP 7

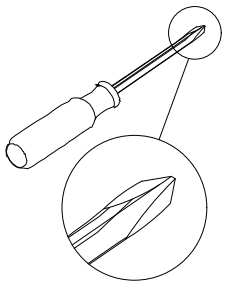

A	X9
	
ϕ15*9.5	

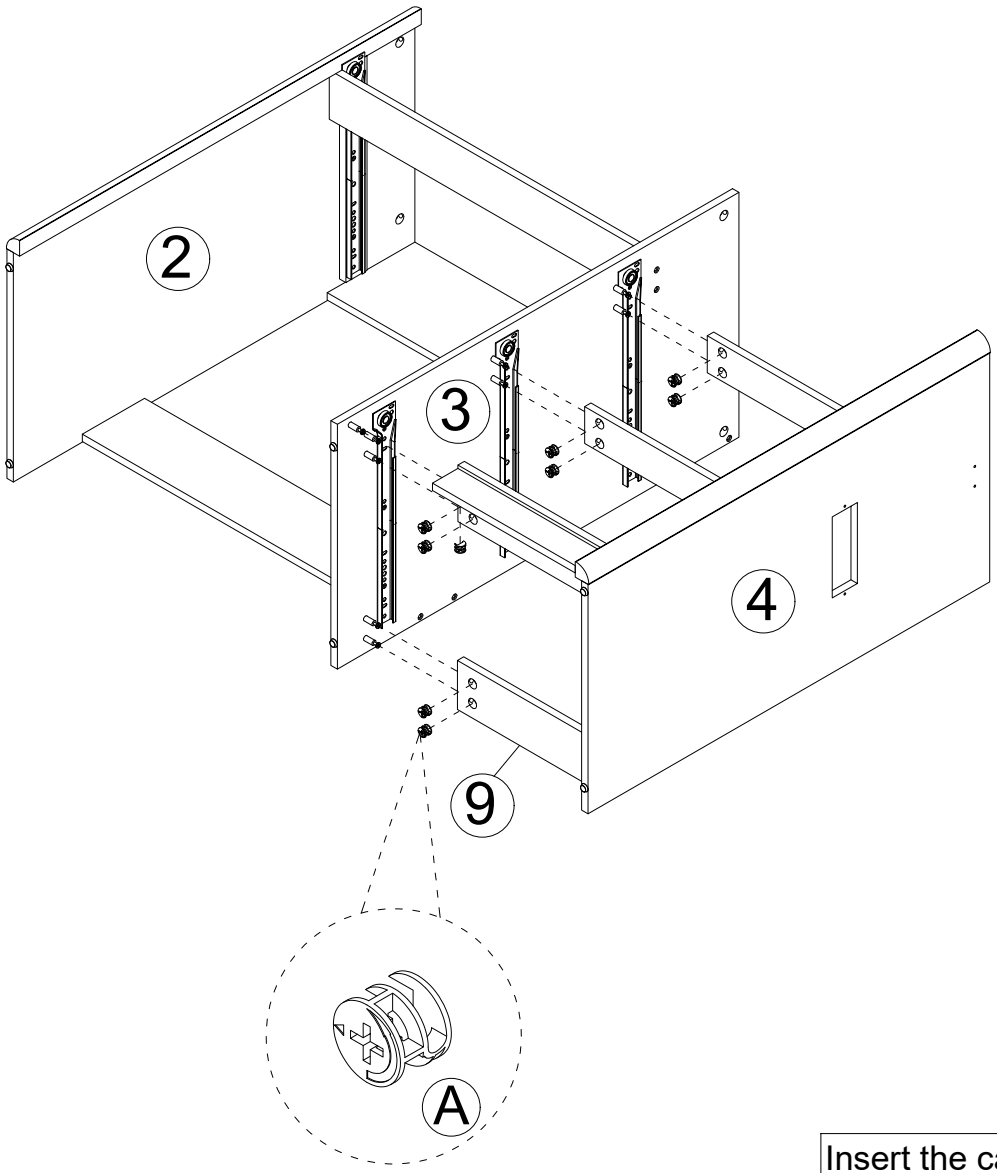





Insert the cam bolt into the hole first, then insert the cam lock and lock it.

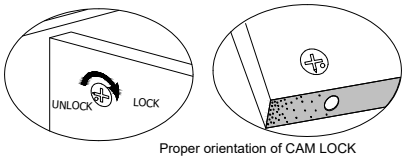



Proper orientation of CAM LOCK


STEP 8

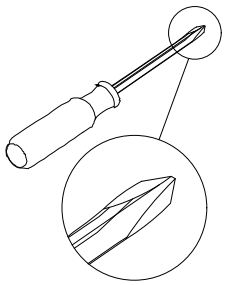

A	X4	B	X4	C	X2	N	X4
							
ϕ15*9.5		ϕ6.5*35		ϕ6*30		ϕ21	

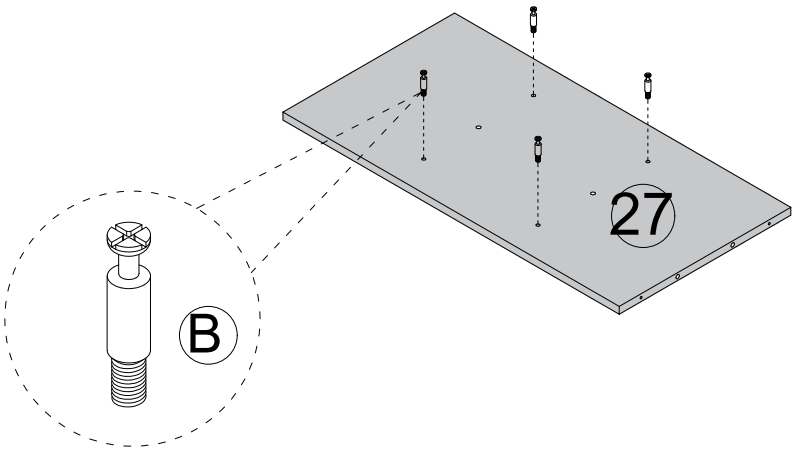

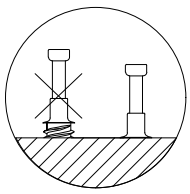


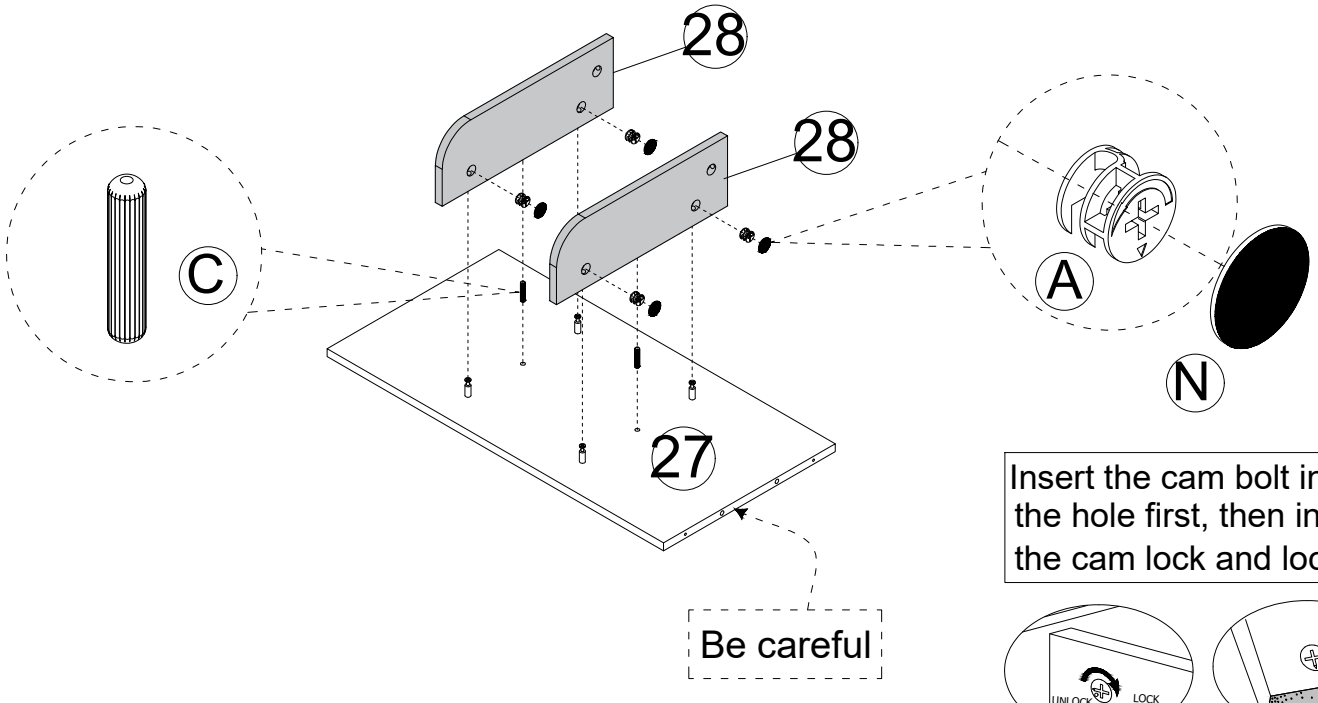



Insert the cam bolt into the hole first, then insert the cam lock and lock it.


Proper orientation of CAM LOCK

STEP 9

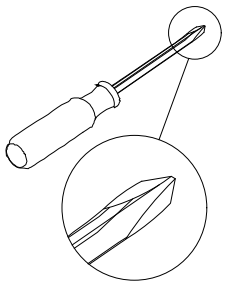



A	X5
	
ϕ15*9.5	


B	X5
	
ϕ6.5*35	


C	X4
	
ϕ6*30	

N	X2
	
ϕ21	

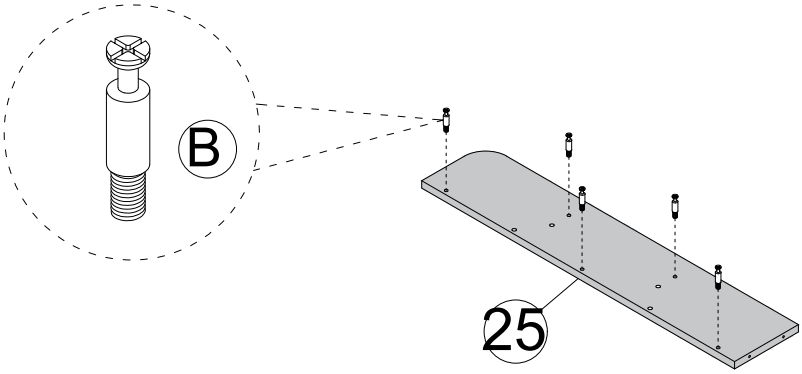


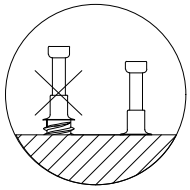

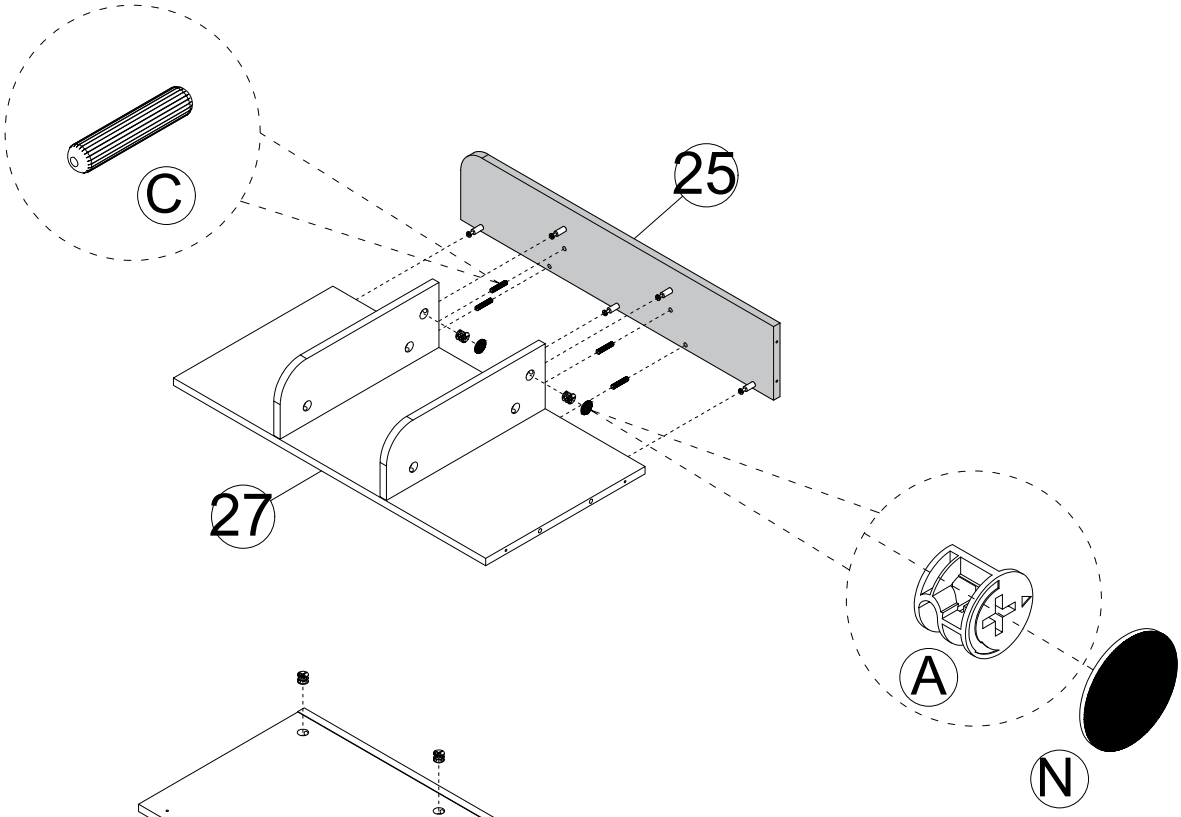

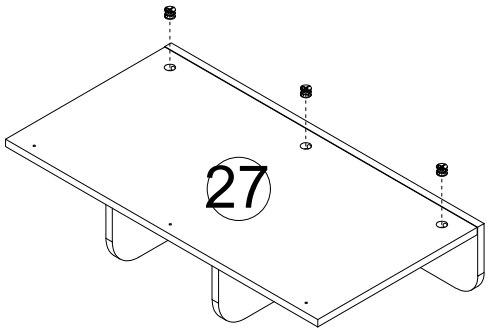


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

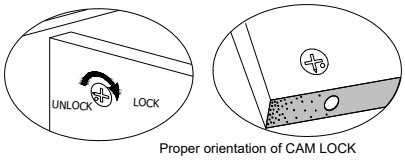


Proper orientation of CAM LOCK


STEP 10

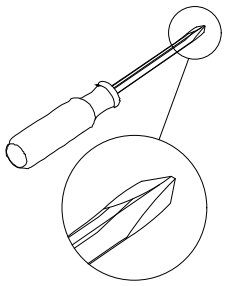


E	X6
	
ø3*12	


I	X3
	
45*12	


THIS STEP REQUIRES 2 PEOPLE

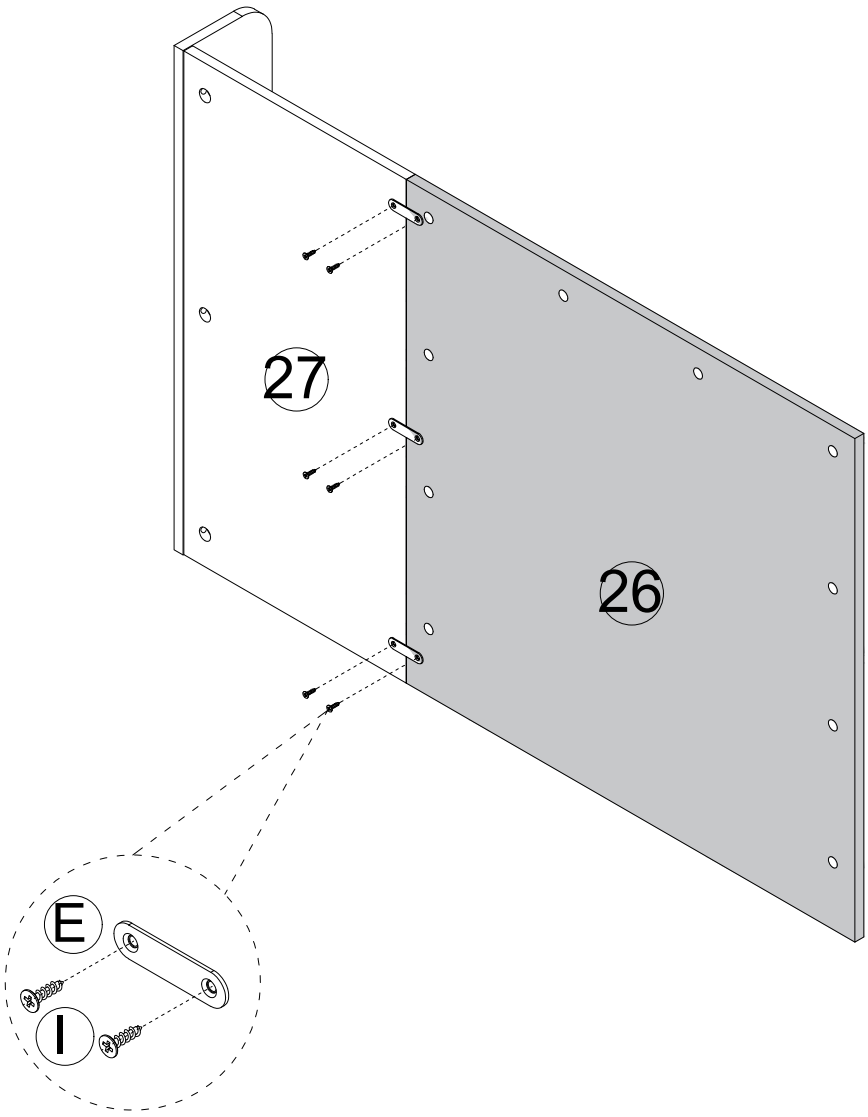


STEP 11

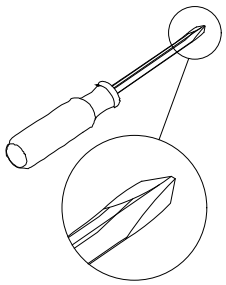



C	X4
	
ϕ6*30	


F	X7
	
ϕ4*35	

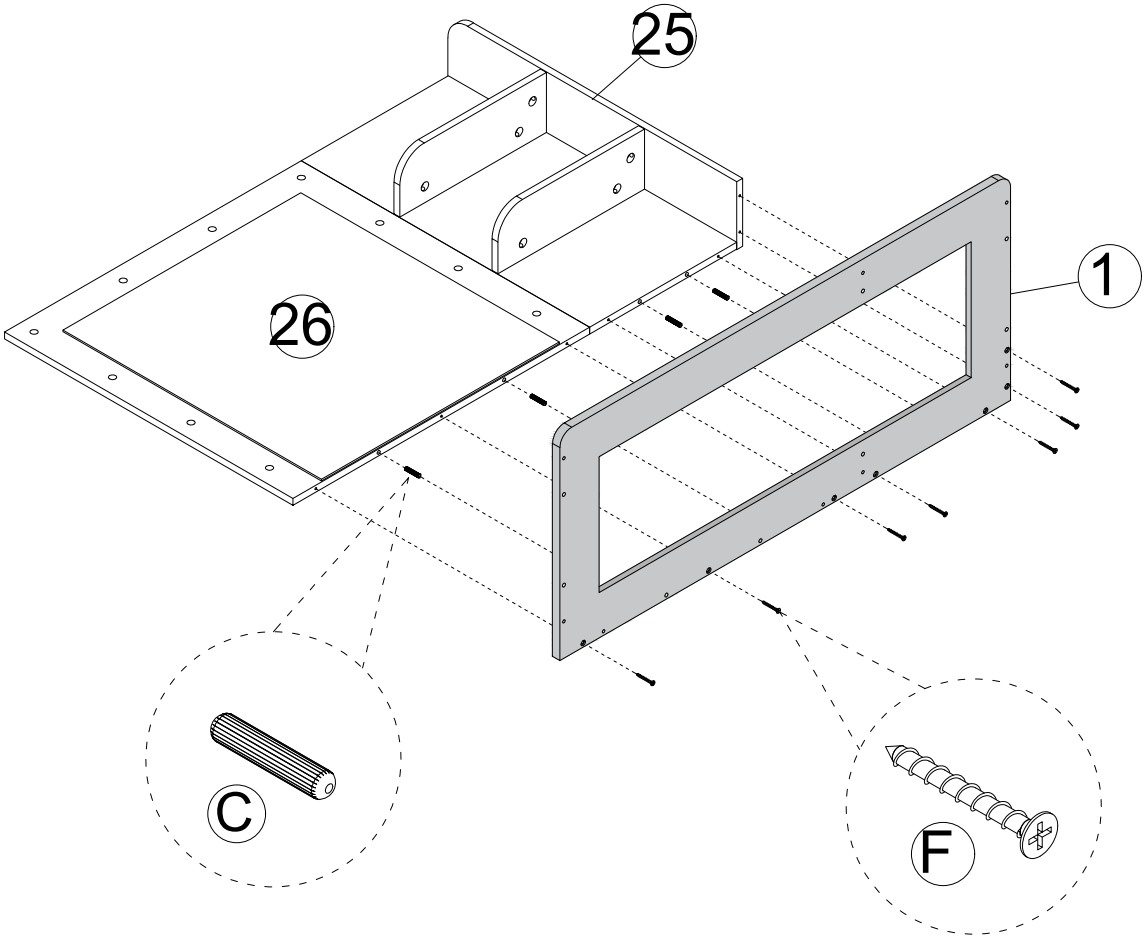


STEP 12

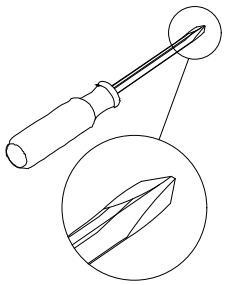



B	X8
	
ϕ6.5*35	

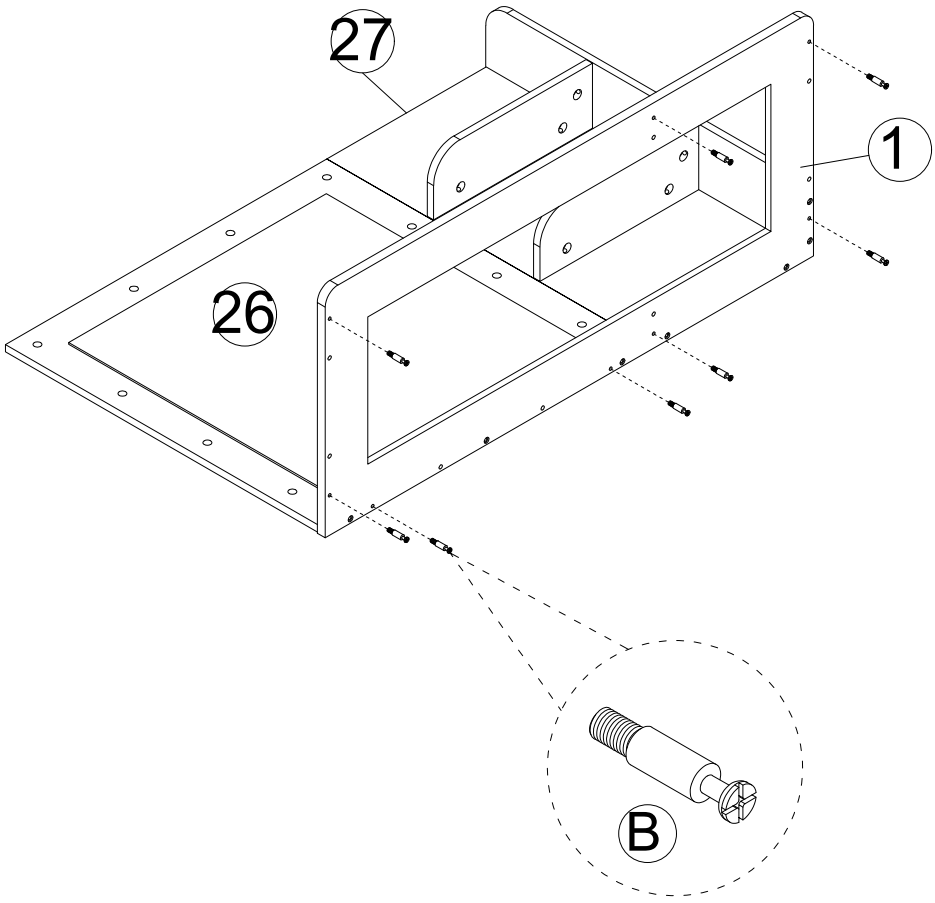


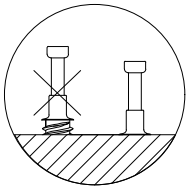


STEP 13

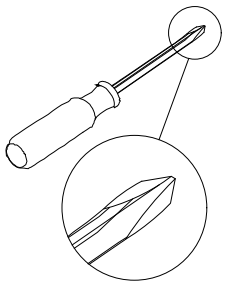


A	X6
	
ϕ15*9.5	

C	X8
	
ϕ6*30	

THIS STEP REQUIRES 2 PEOPLE

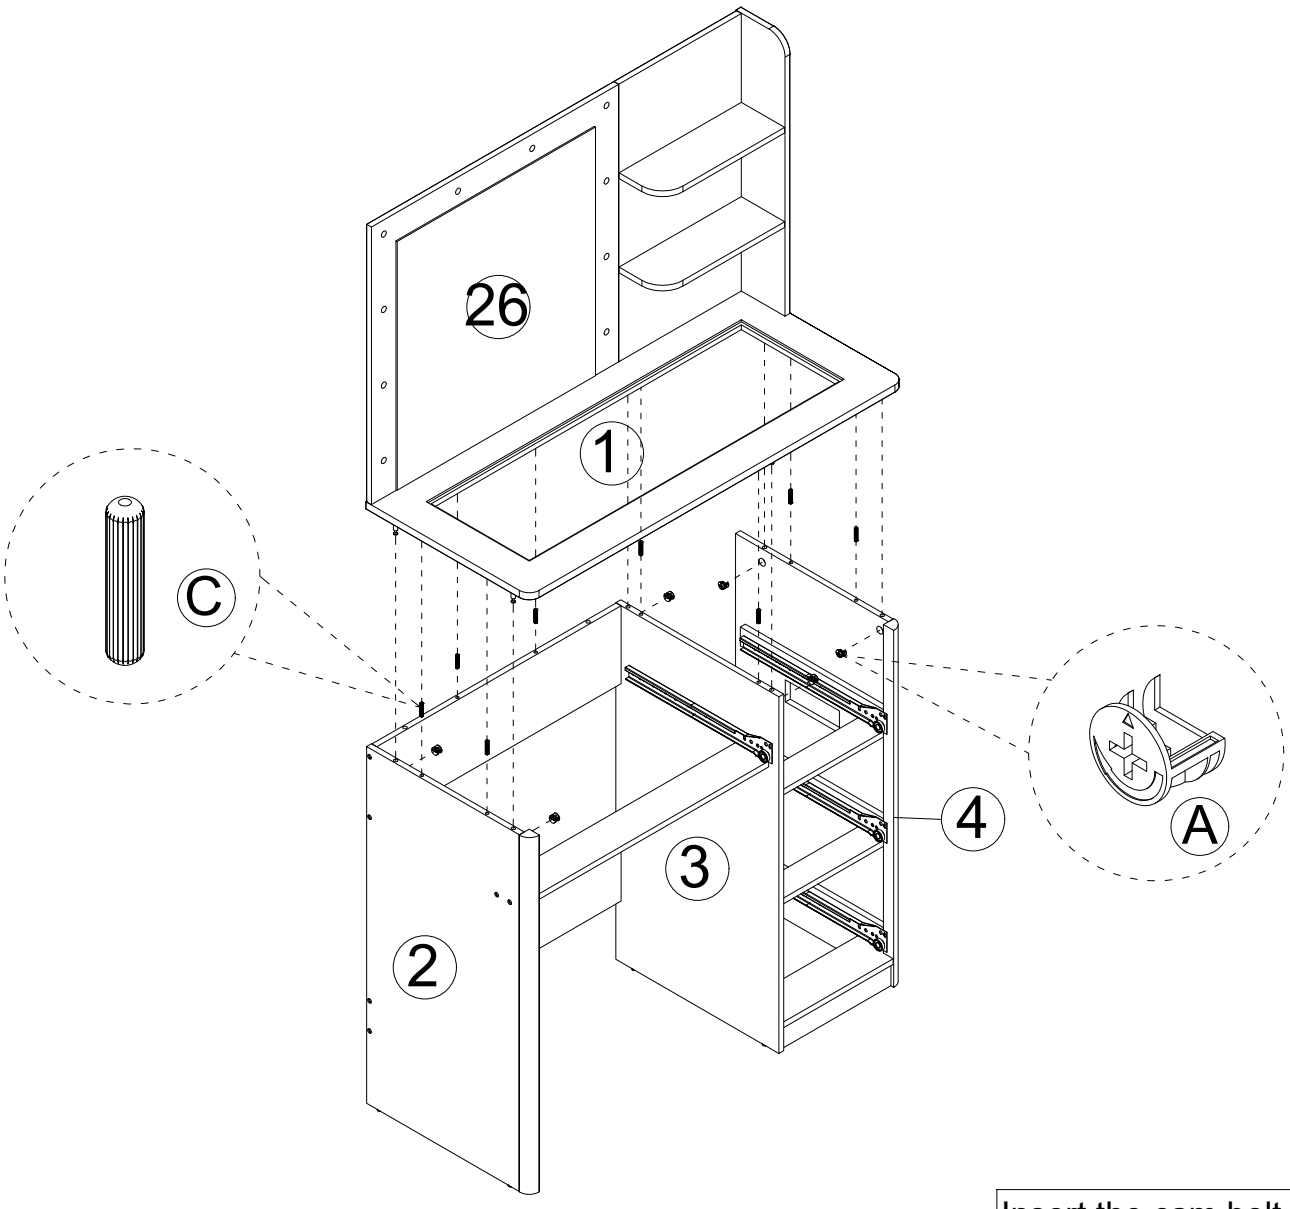



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

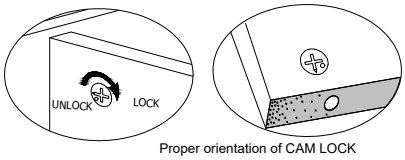

Proper orientation of CAM LOCK


STEP 14

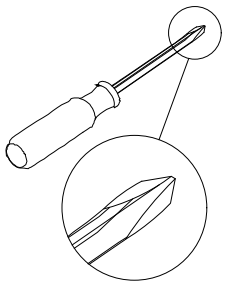

A	X2
	
ϕ15*9.5	


G	X10
	
ϕ3*14	

Q	X1set
	

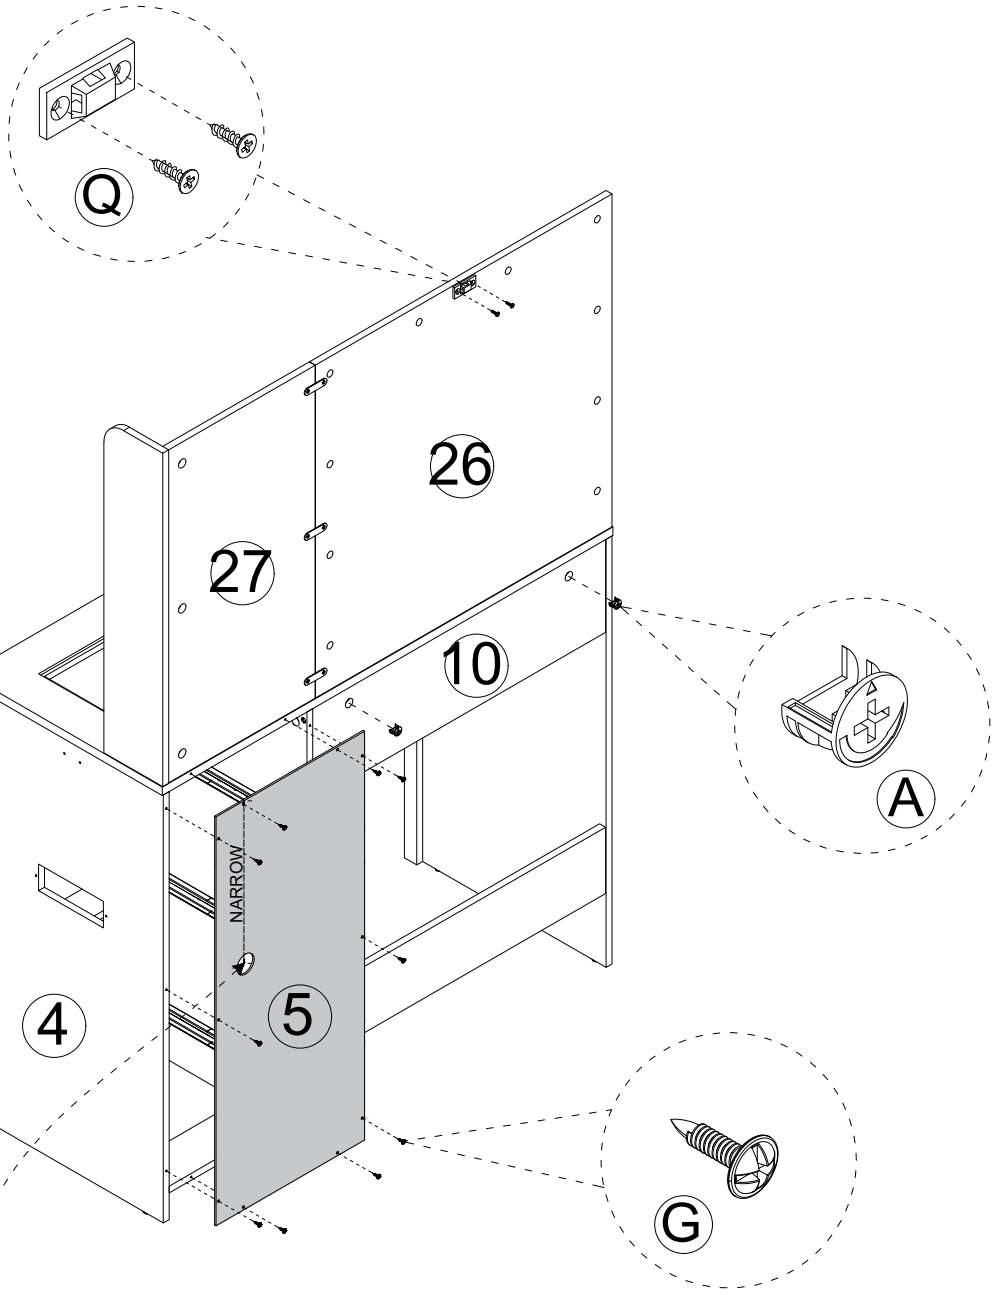


When installing the No.5 plate, pay attention to the distanceand direction of the round hole, the narrow distance is on it.

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

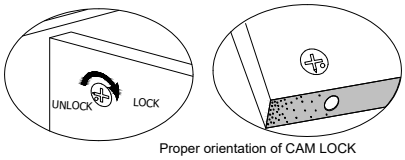


Proper orientation of CAM LOCK

STEP 15

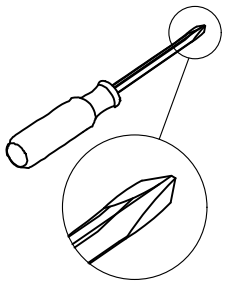


Ⓔ	X2
	
ϕ3*12	


Ⓜ	X1
	
145*55*45	

Ⓗ	X2
	
ϕ4*12	


Ⓚ	X1
	
109*99*38.5	

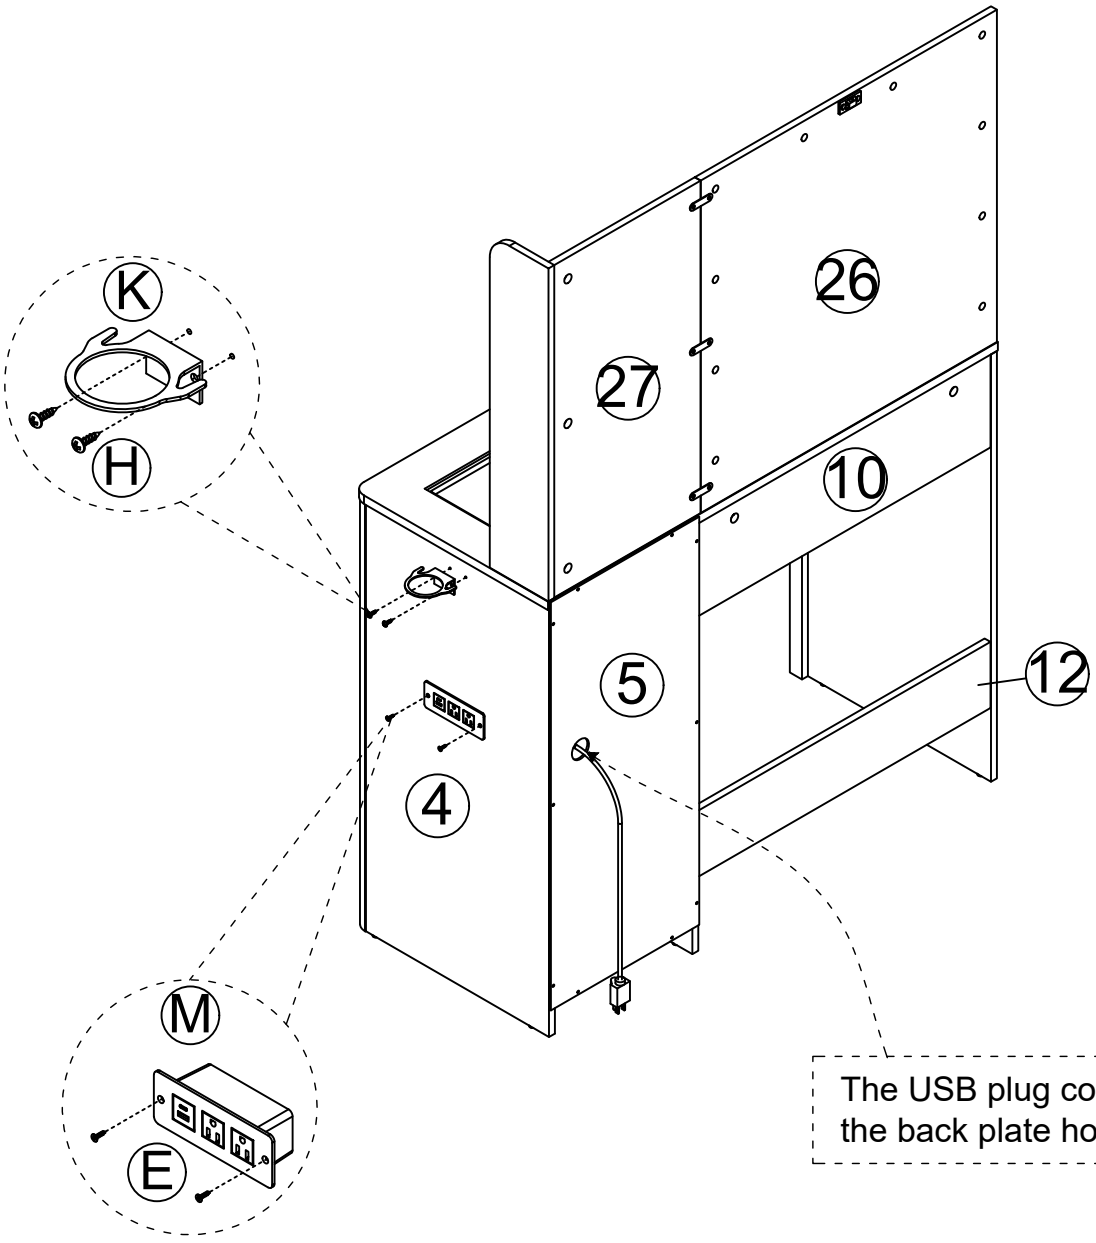


STEP 16

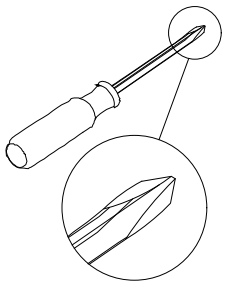

F	X12
	
ø4*35	

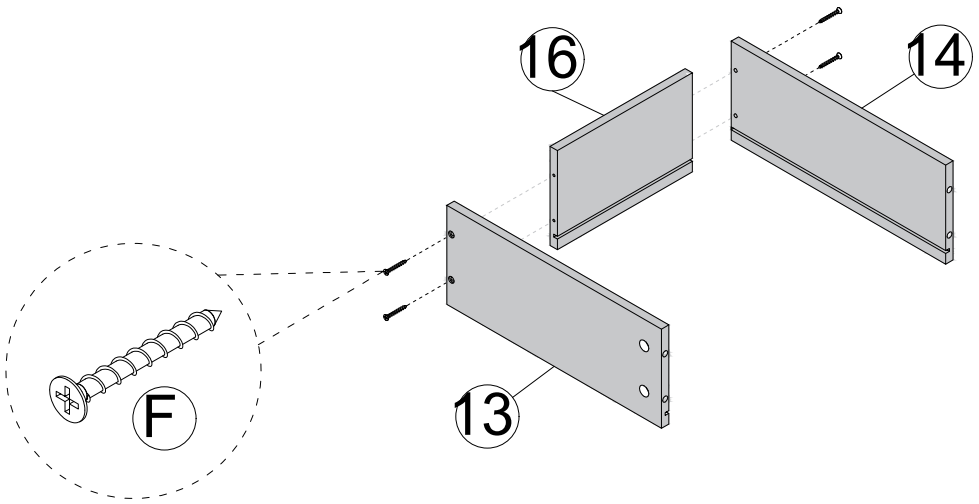



X3

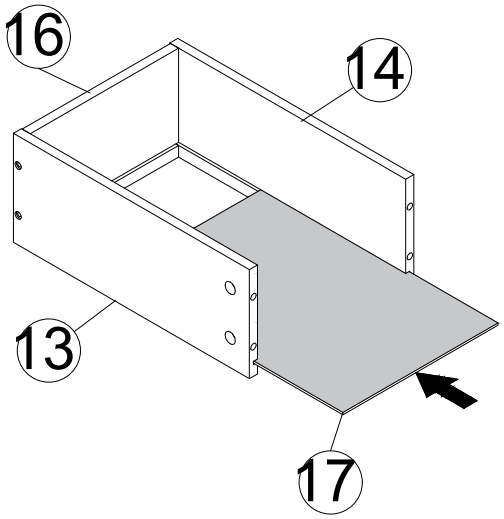


X3


STEP 17

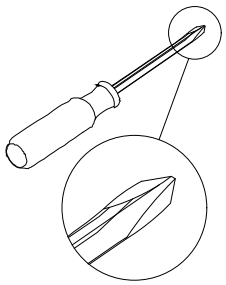


A	X12
	
ϕ15*9.5	

B	X12
	
ϕ6.5*35	


D	X6
	
ϕ3.5*12	

J	X3
	
120*38*17	


N	X12
	
ϕ21	

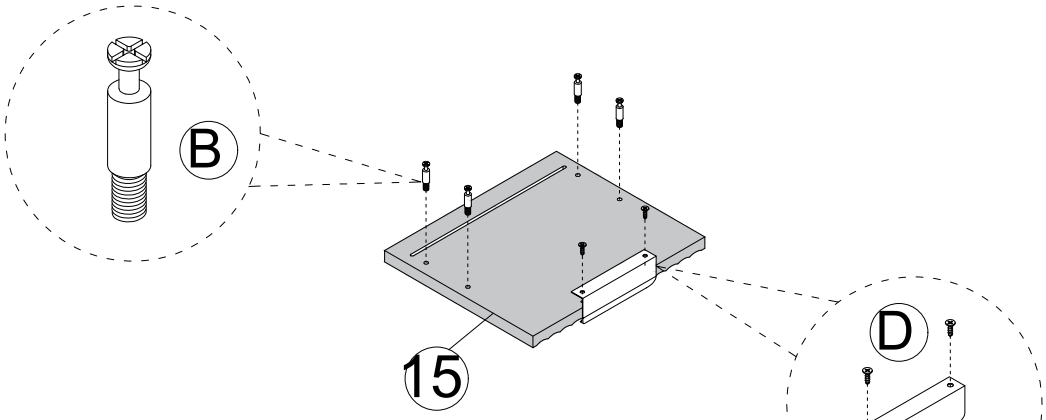

X3

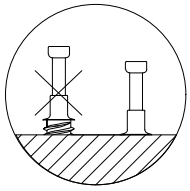


FLIP OVER

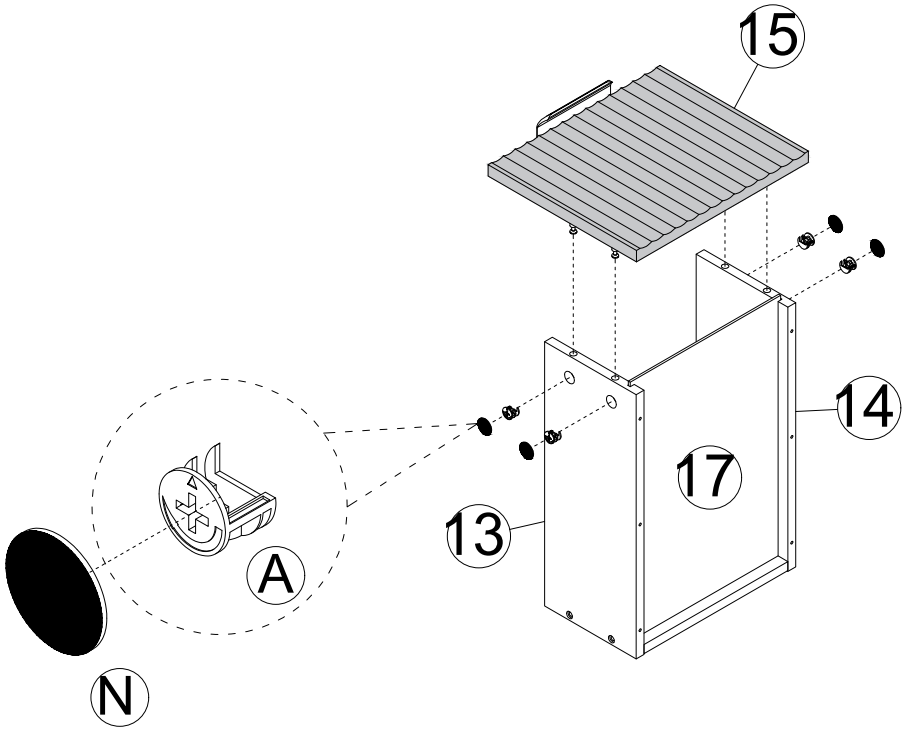


X3


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

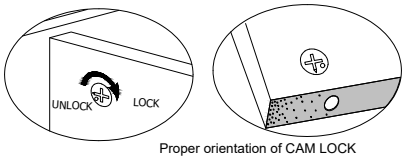



Proper orientation of CAM LOCK


STEP 18

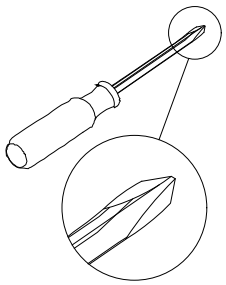

D	X18
	
ø3.5*12	


L	X3
 DL	
L=350	

L	X3
 DR	
L=350	

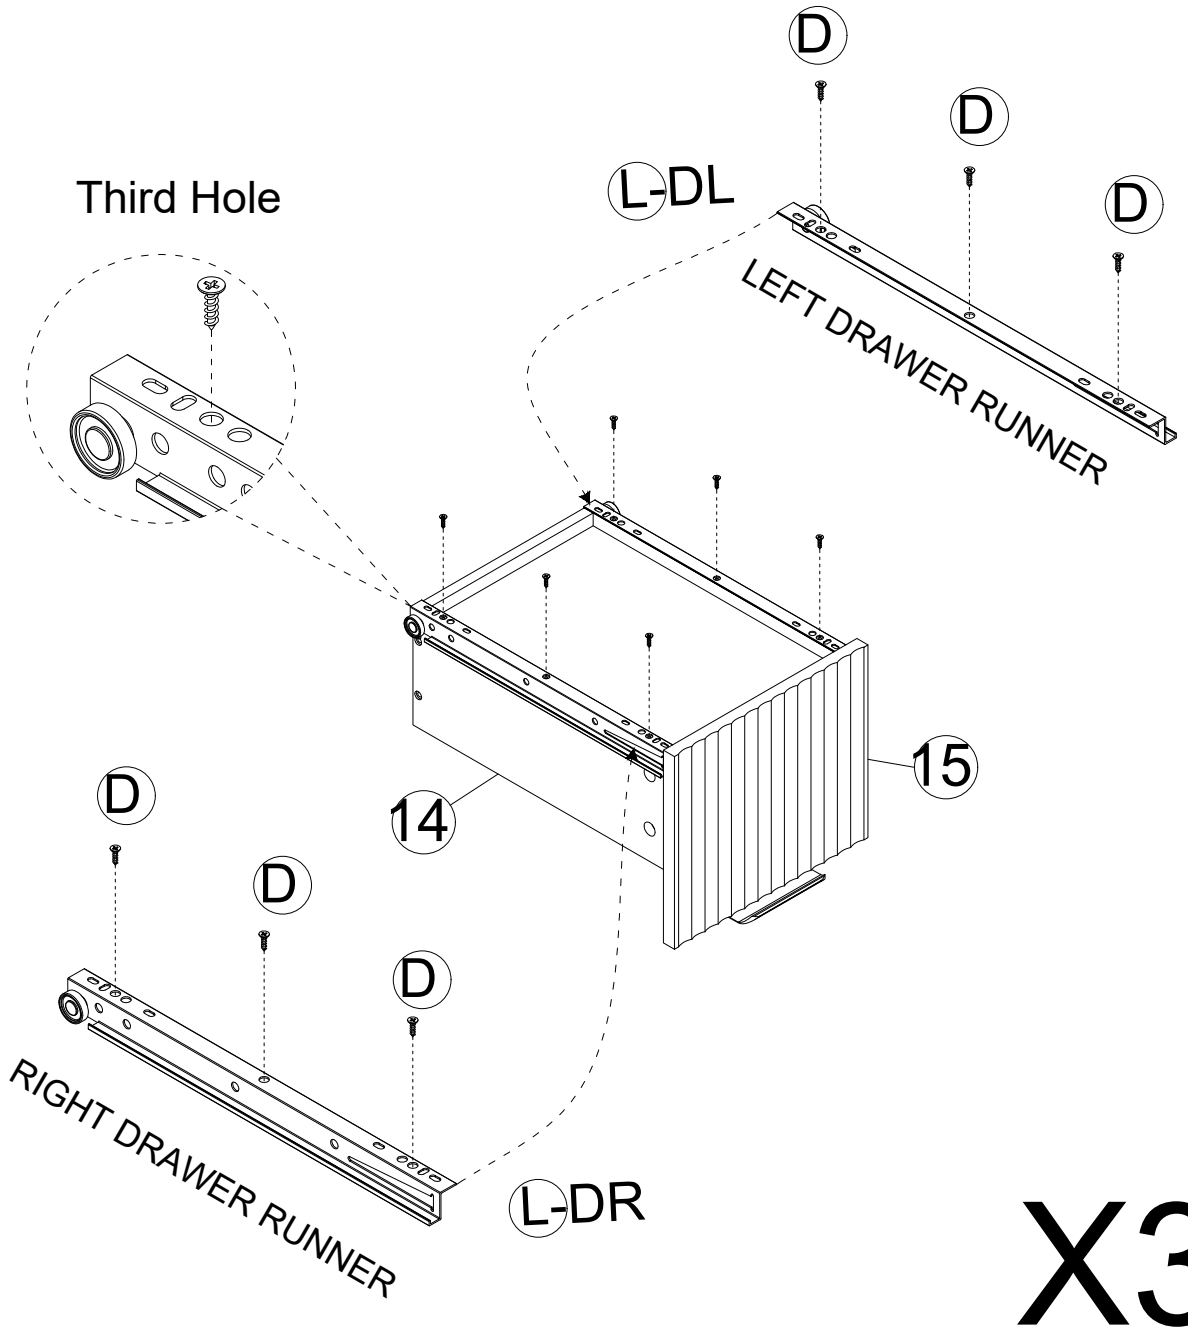



X3

STEP 19

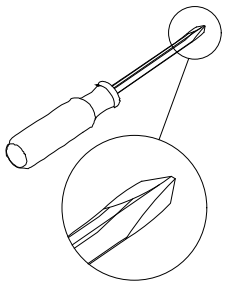



F	X6
	
ϕ4*35	

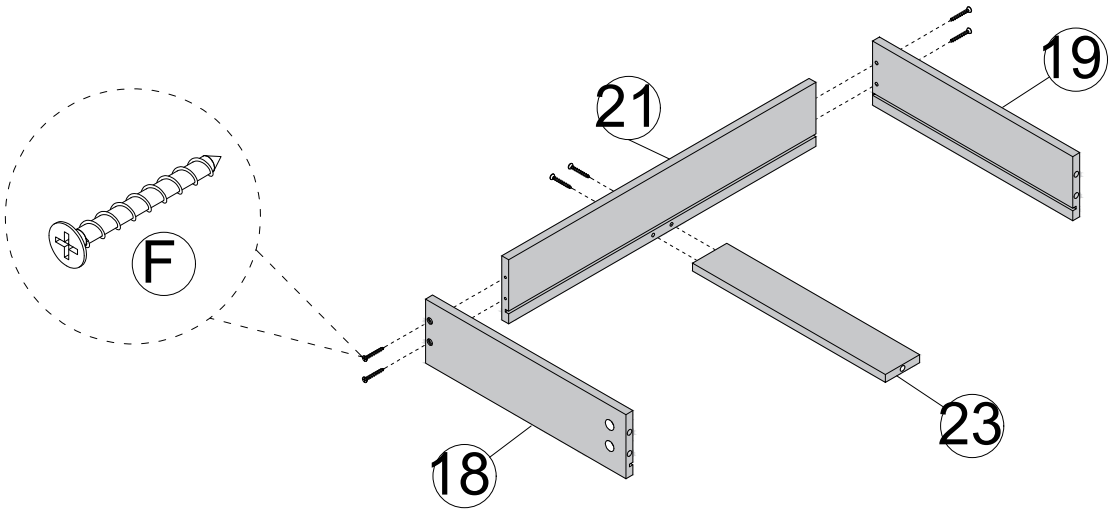


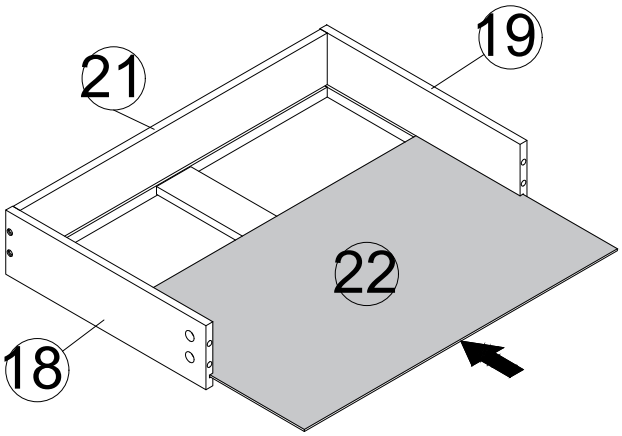


STEP 20

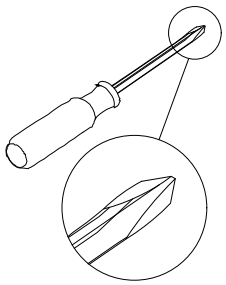


A	X5
	
ϕ15*9.5	


B	X5
	
ϕ6.5*35	

D	X2
	
ϕ3.5*12	

J	X1
	
120*38*17	


N	X5
	
ϕ21	

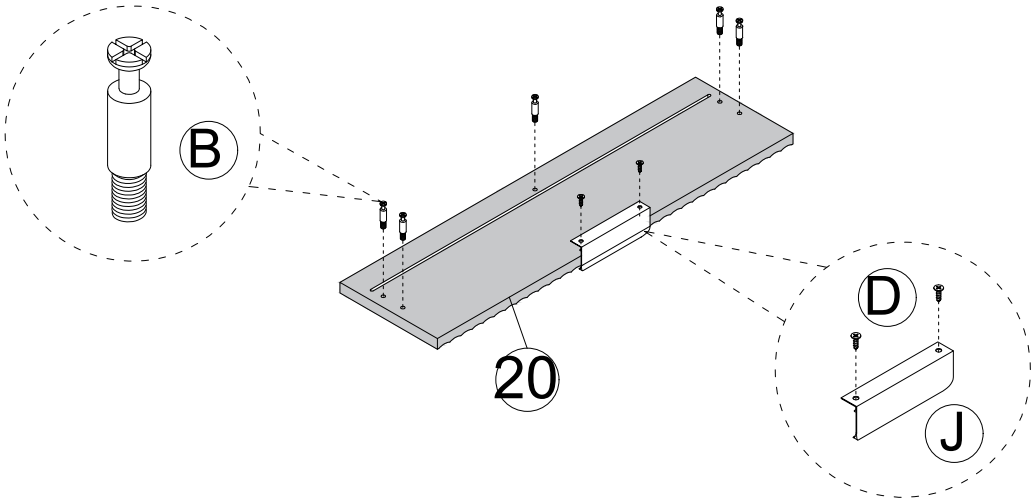

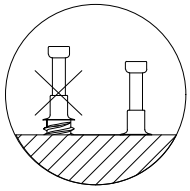




FLIP OVER

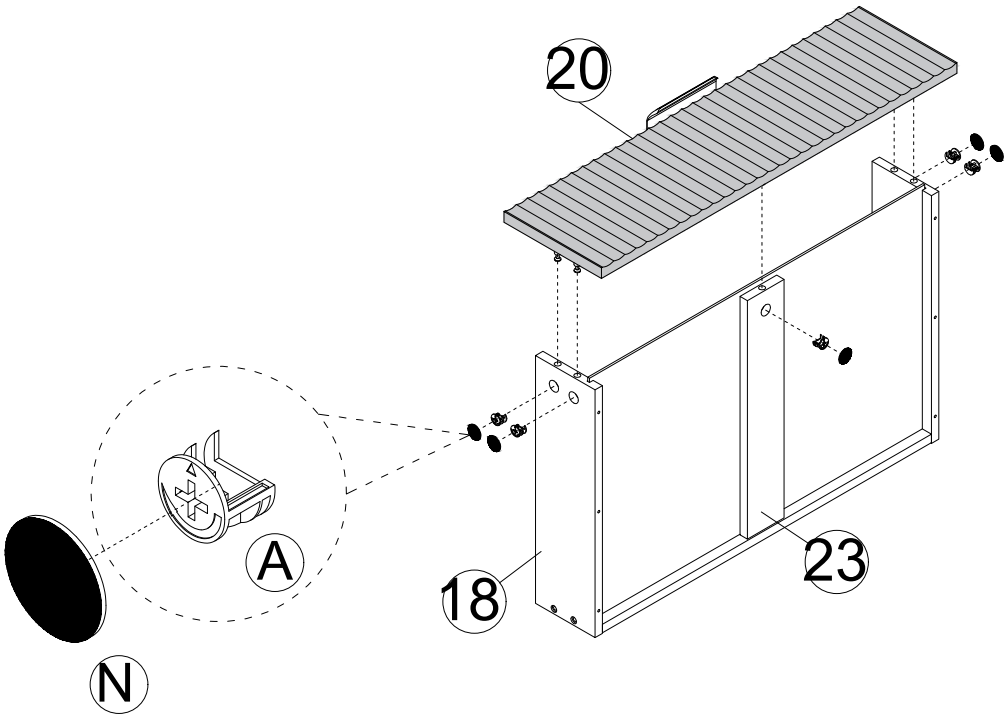



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

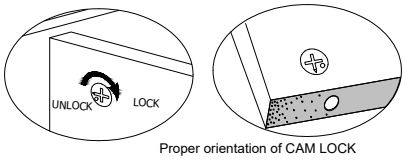



Proper orientation of CAM LOCK


STEP 21

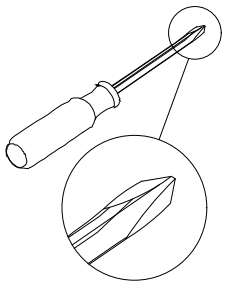


D	X6
	
ø3.5*12	


L	X1
 DL	
L=350	


L	X1
 DR	
L=350	

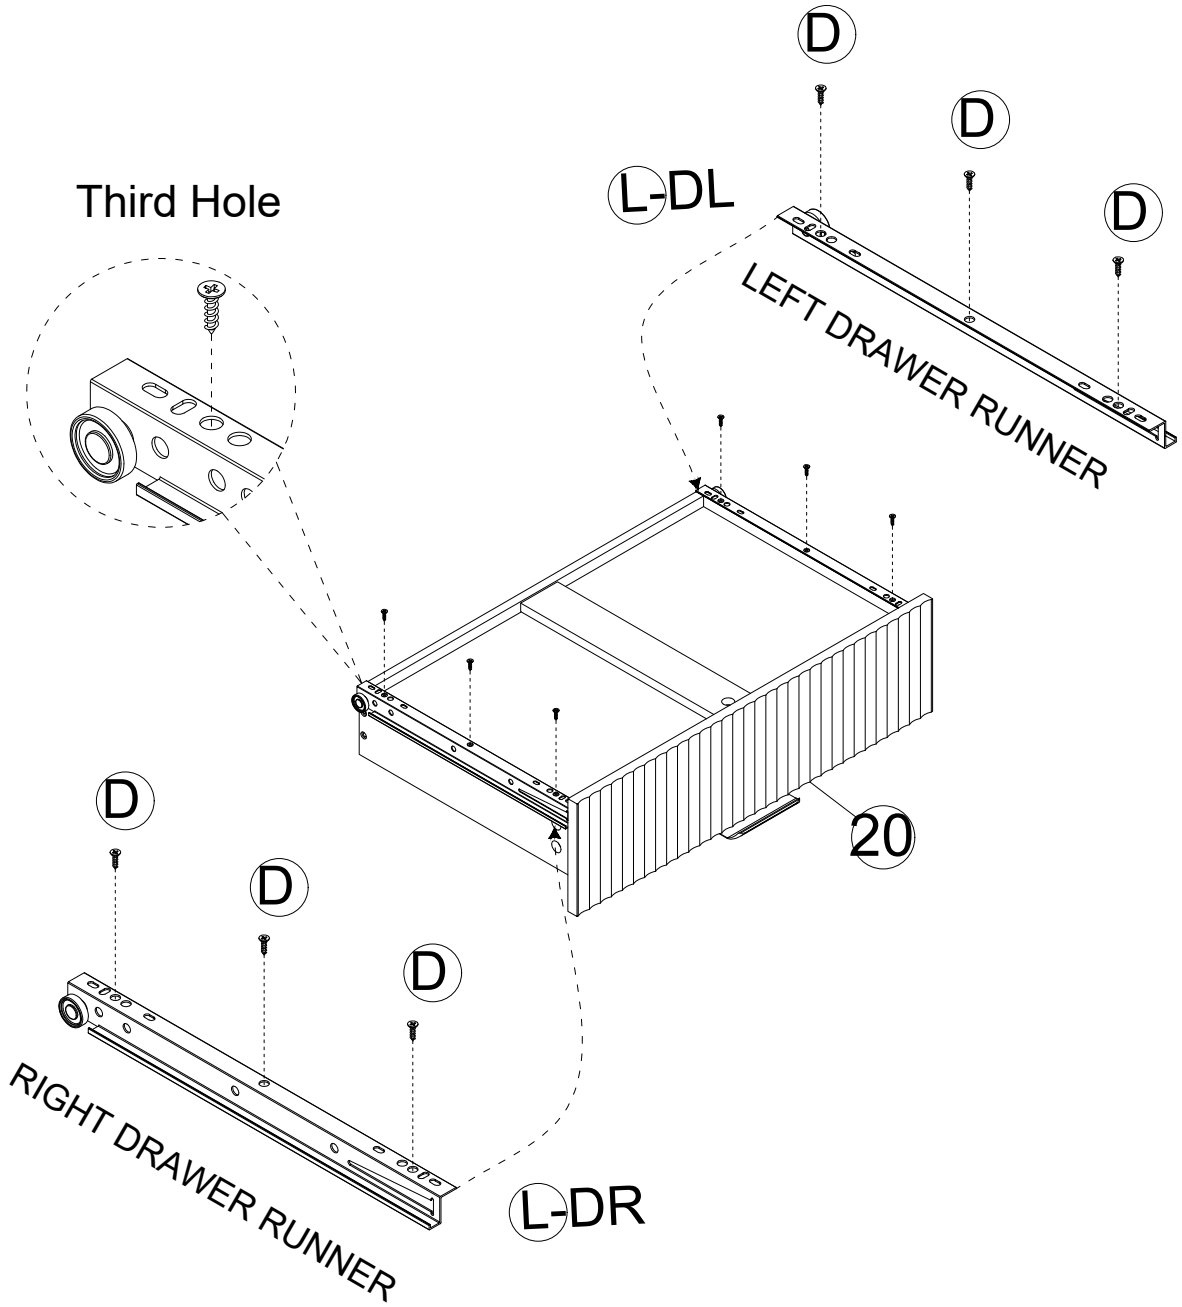

STEP 22

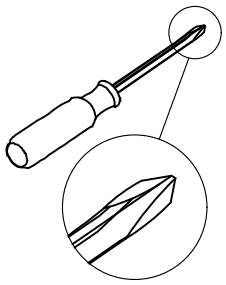


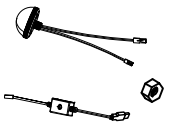Ⓟ	X10
	

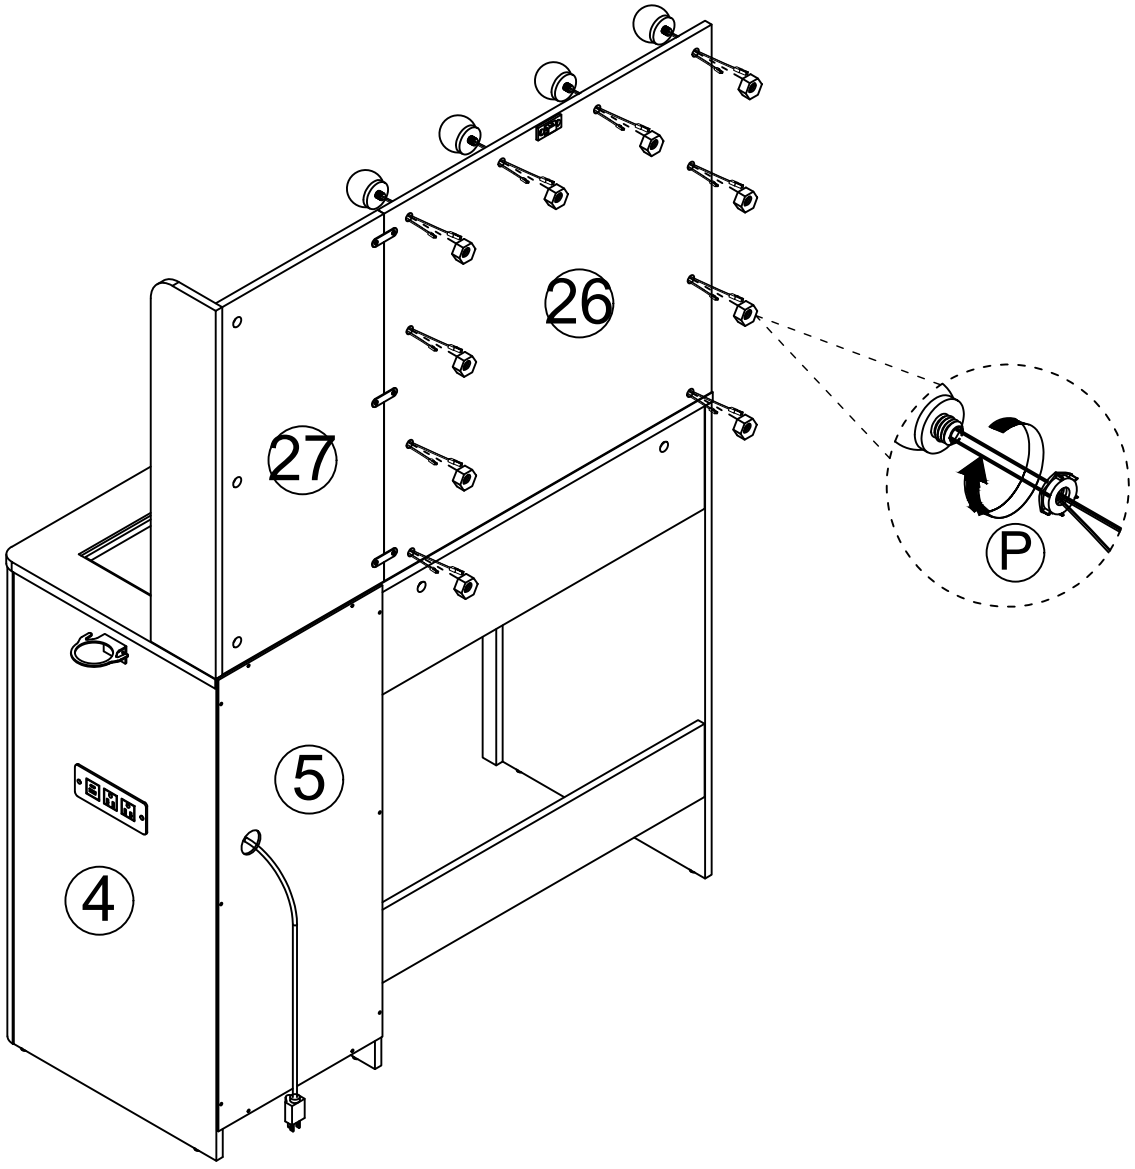


STEP 23


Pass the bulb wire through the pre punched plate, then gently press the bulb and make it adhere to the plate, and then connect the adjacent bulbs successively through the wire head slot on the opposite side (corresponding to the line of the same color).
When making up，you can use the switch to turn on or off the light.The dressing table brings you 3 color temperature light modes，touch the button you can easy light up the mirror and change colors to meet your different needs，long press to adjust the brightness.

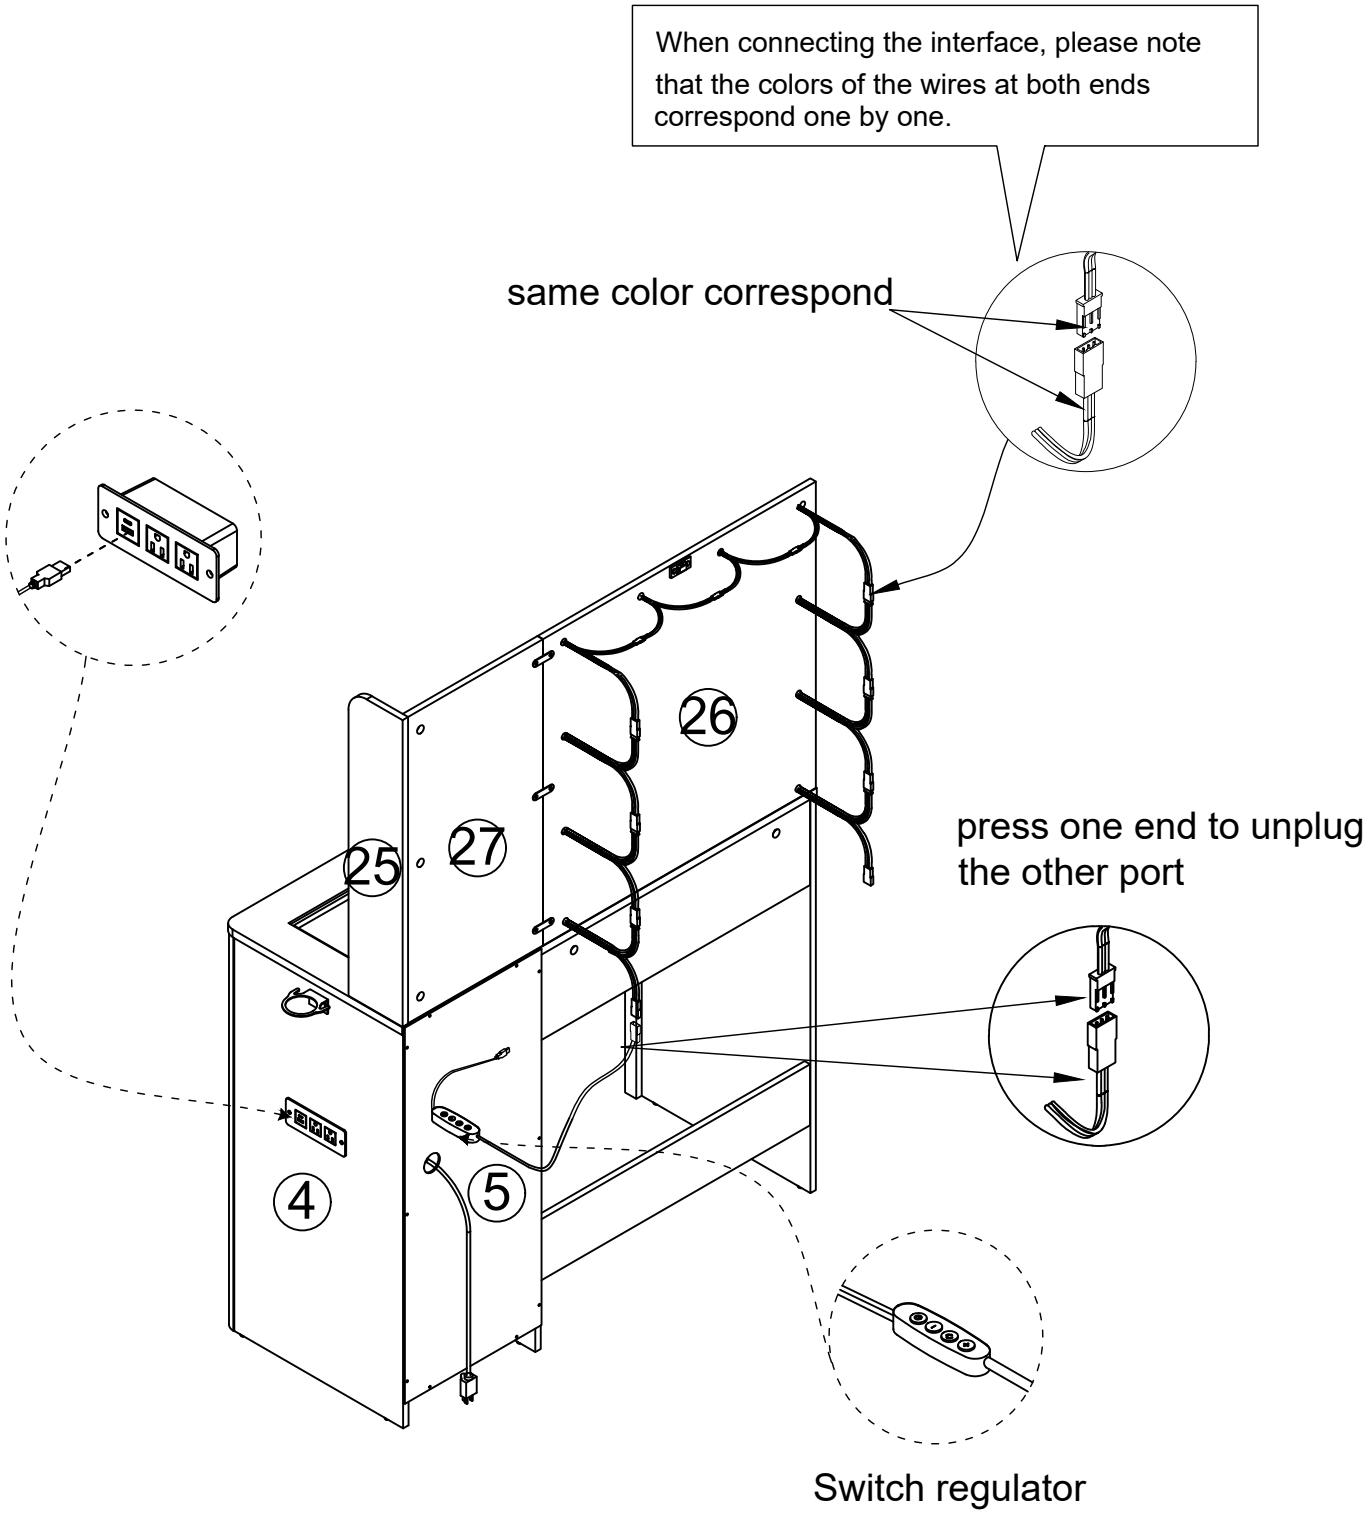


STEP 24

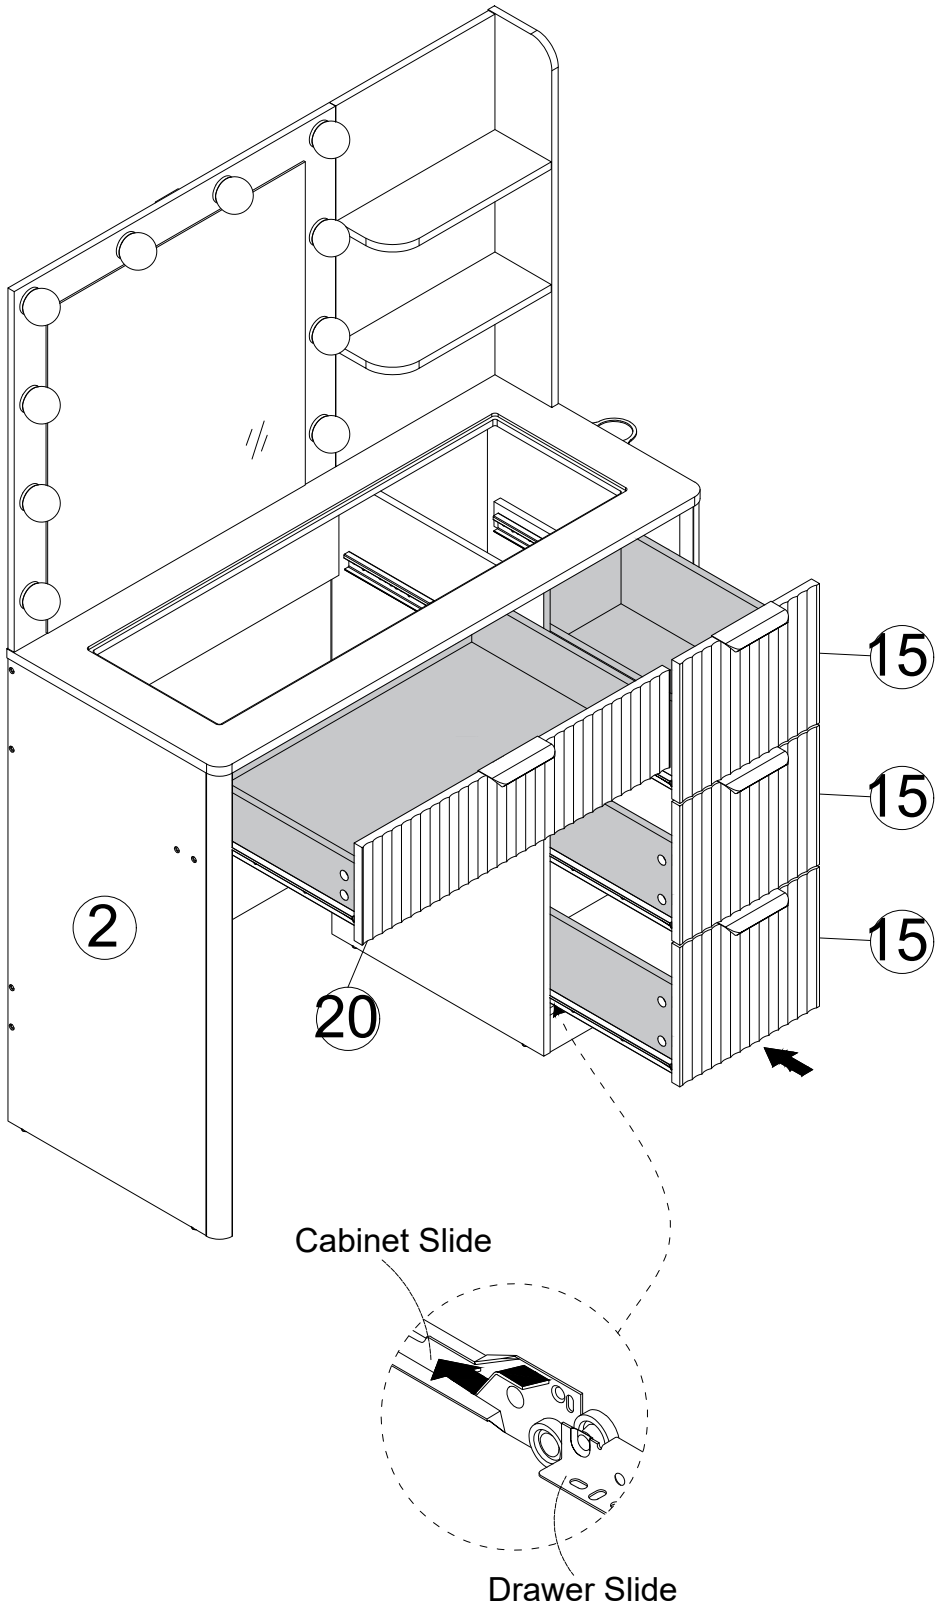


STEP 25

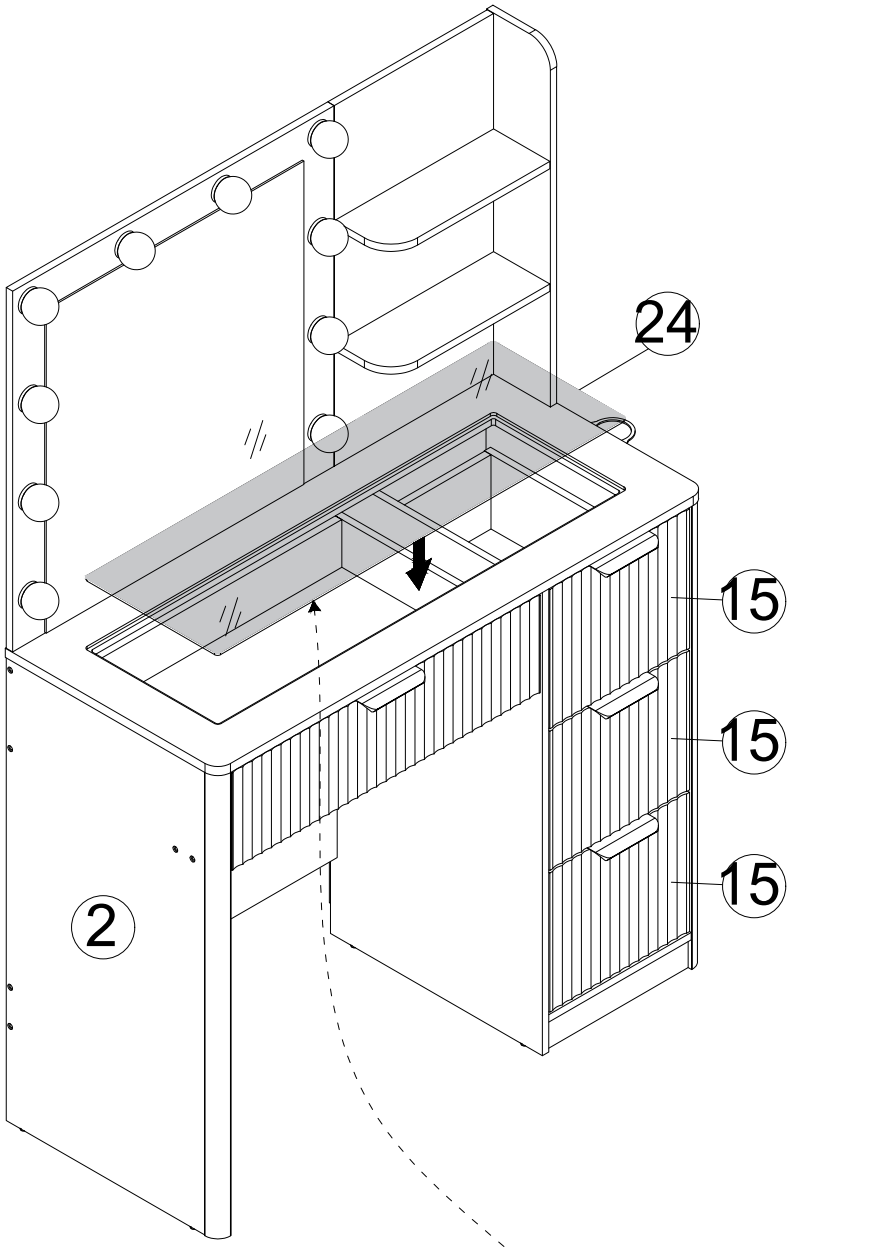
24
15
15
15
2
Aim the tempered glass at the panel groove and put it vertically down.

STEP 26

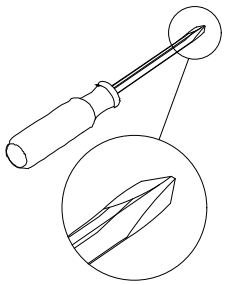


Q	X1set
	

NOTE:The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.


We have included a set of tipping restraint hardware for this unit.You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed,this restraint can provide protection against the unexpected tipping of the unit due to small tremors,bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.




Install the tipping restraint hard ware

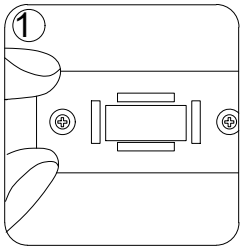


1.make mark on the wall

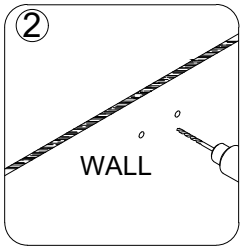


2.drill two Ø6 holes on the wall

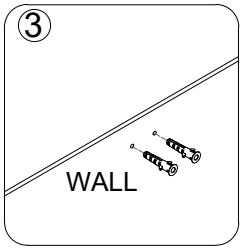

3.put two anchors in the holes

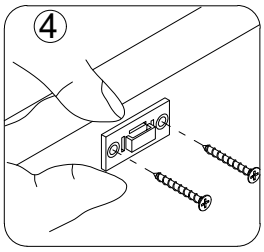

4.fix the device on the wall by the long screws

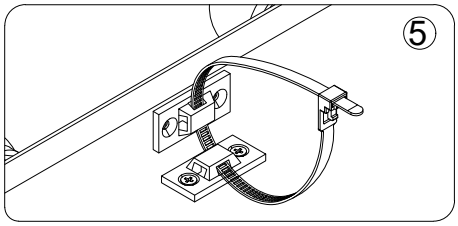

5.Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

