
## ASSEMBLY INSTRUCTIONS

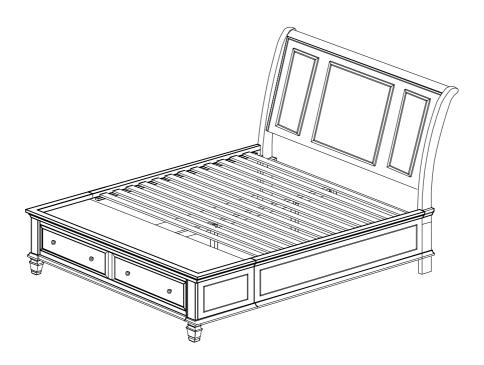

Queen Storage Bed

PAGE 1 OF 8

#### **ASSEMBLY INSTRUCTIONS**


#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

35 MINUTES

### PARTS IDENTIFICATION

B1 ( BOX 1 )				
Α	HEADBOARD PANEL		1PC	
B1	LEFT HEADBOARD LEG		1PC	
B2	RIGHT HEADBOARD LEG		1PC	
н	HEADBOARD BOTTOM RAIL		1PC	
B2 ( BOX 2 )				
С	STORAGE FOOTBOARD		1PC	
E	CENTER RAIL SUPPORT WITH LEVELER		2PCS	
F	CENTER RAIL		1PC	
G	ROLL SLAT (12PCS)		1SET	
B3 ( BOX 3 )				
D1	LEFT BED RAIL		1PC	
D2	RIGHT BED RAIL		1PC	
НВ	FROM BOX 1 HEADBOARD COMPLETE		1PC	
С	FROM BOX 2 STORAGE FOOTBOARD		1PC	
		PAGE 2 OF 8		

#### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

### HARDWARE IDENTIFICATION


#### **Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED**

1	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
2	SHORT BOLT WITH WASHER (M6 x 35mm - BLK)	<b>ODD</b>	8PCS
3	WOOD DOWEL (M8 x 30mm)		12PCS
4	LONG FLAT HEAD SCREW (#8 x 1 1/8" - BLK)	& Talanta	24PCS
5	LONG BOLT WITH WASHER (M6 x 60mm - BLK)	O DODO	10PCS
6	MEDIUM BOLT WITH WASHER (M6 x 45mm - BLK)	O DONNE	6PCS
7	SHORT FLAT HEAD SCREW (M4 x 20mm - BLK)	& Timenes	8PCS
8	WRENCH (2 x 24.5 x 85 - RBW)		1PC
9	HEX NUT (M6 - RBW)		2PCS
10	U BRACKET (26 x 63 x 70mm - RBW)		2PCS


#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


# ASSEMBLY INSTRUCTIONS STEP 1

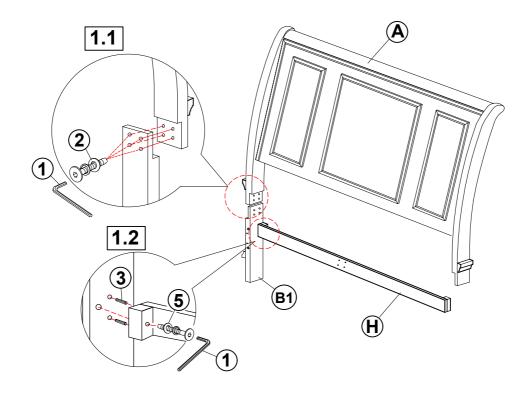


## STEP 2

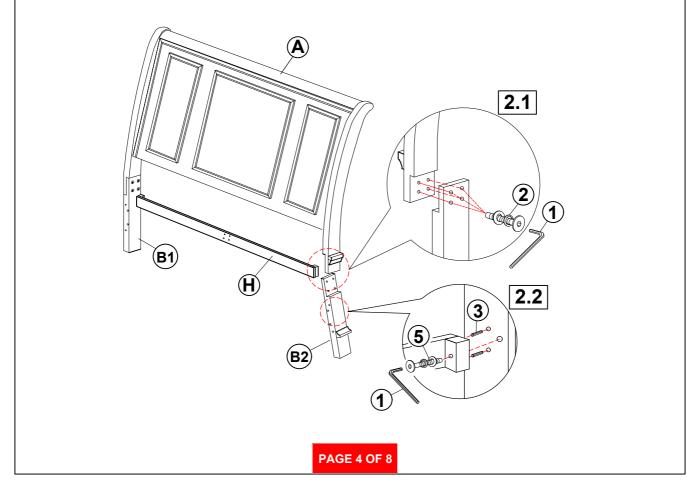


# ASSEMBLY INSTRUCTIONS STEP 3

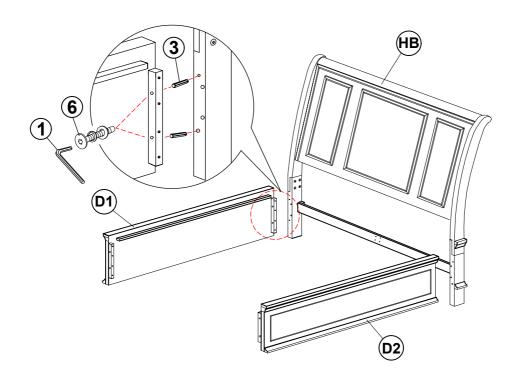


## STEP 4

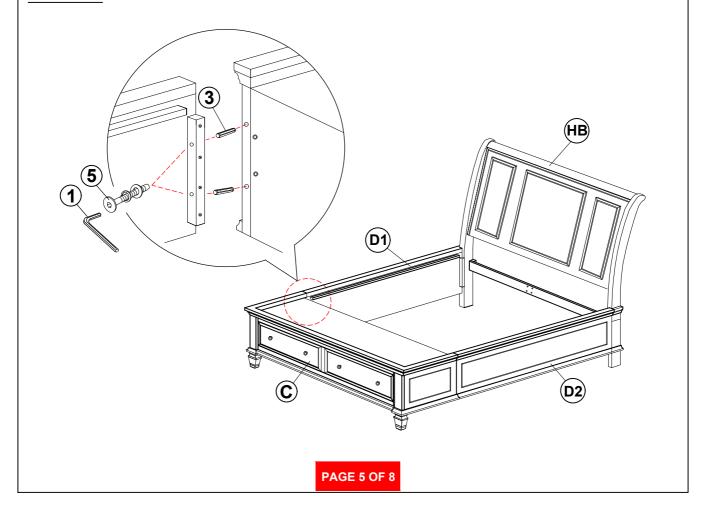


# ASSEMBLY INSTRUCTIONS STEP 5

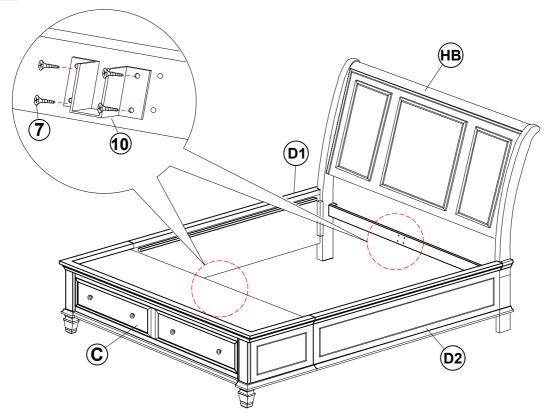


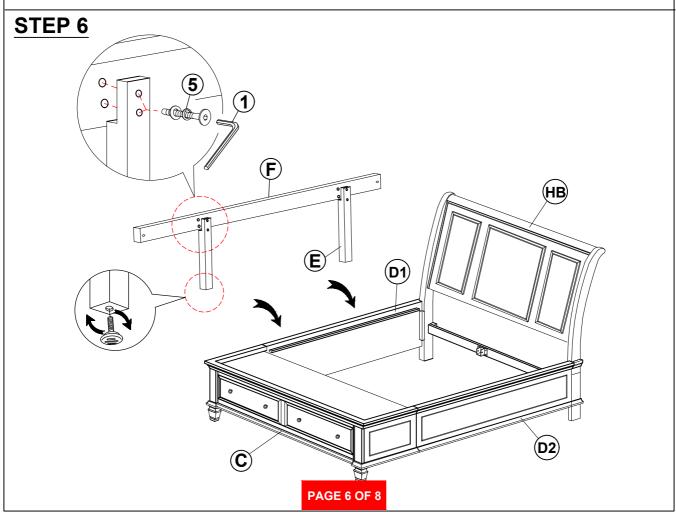

# 

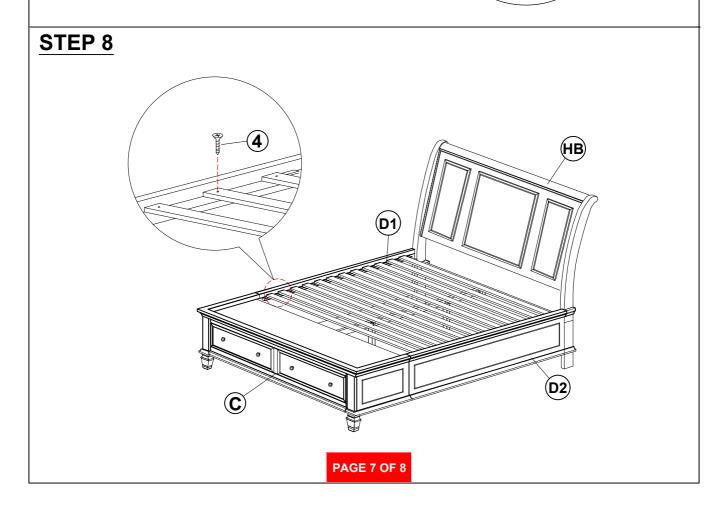


# ASSEMBLY INSTRUCTIONS STEP 9 COMPLETE

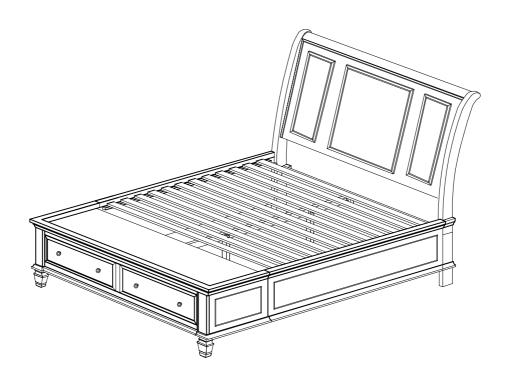



Inner Size: 61.00"W X 81.00"D

Inner Size of Drawer: 25.50"W X 14.75"D X 5.50"H X 0.25"T

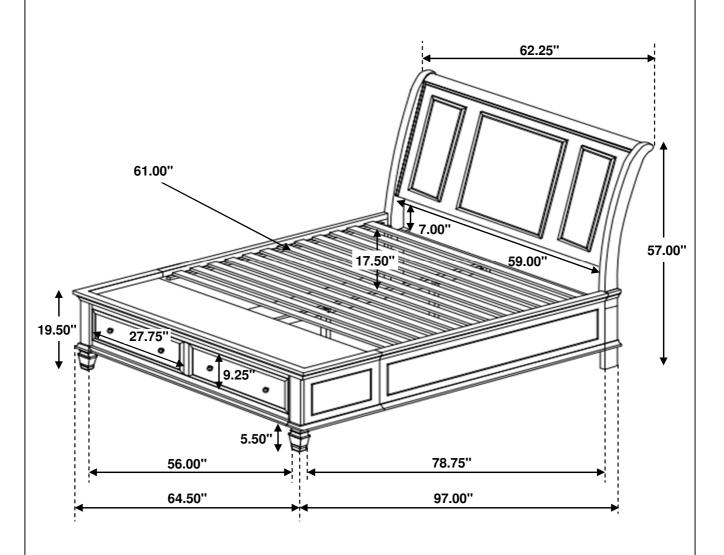

**Note: Dimension tolerance ±5%**