

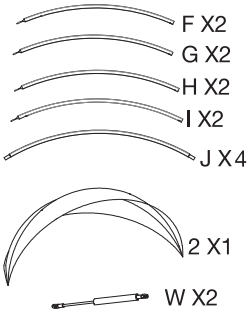
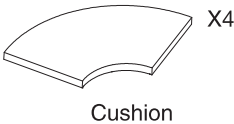

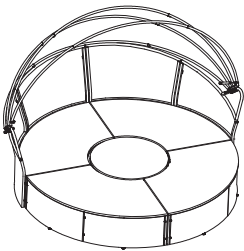








5-Piece Round Sectional Set
Assembly tip: Do not tighten the screws
fully until each of them is aligned.



CARTON 1/2




CARTON 2/2

5-Piece Round Sectional Set

Assembly tip: Do not tighten the screws fully until each of them is aligned.


Item no.	Reference Image	Description	Qty.
A1		Far Right Back	1
A2		Far Left Back	1
B1		Right Middle Back	1
B2		Left Middle Back	1
C1		Left Side Panel	1
C2		Right Side Panel	1
D		Base Panel	2
E1		Side Base	1
E2		Side Base	1
P		Fasteners	4
Q		Fasteners	4
R	 M6*15	M6*15 Socket Head Cap Screw	16
S	 M6*32	M6*32 Socket Head Cap Screw	12
T	 M6*50	M6*50 Socket Head Cap Screw	5
U		Flat Washers	38
V		M6 Nut	5

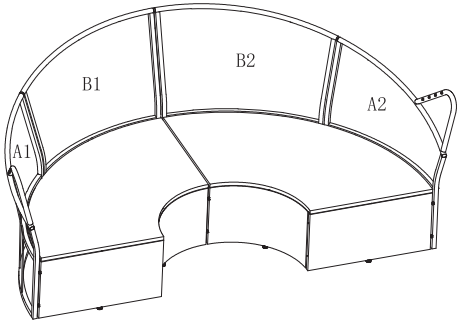


Step 1:Position (A1)(B1)(B2)(A2) in order.

Secure pieces together using M6*50 head cap screws(T) with flat washers(U) through the lower holes and secure with a washer(U) and then a nut(V). Use the allen key and wrench to tighten. Do this in three places.

Secure pieces together using fasteners(P), M6*15 the shortest screws(R) and washers (U) in the top holes. Use the allen key to tighten. Do this in three places.


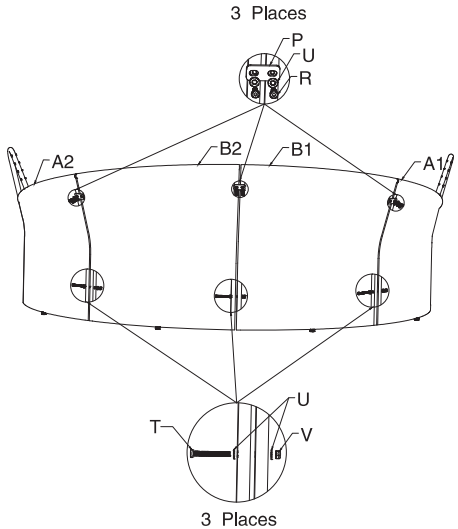


5-Piece Round Sectional Set
Assembly tip: Do not tighten the screws fully until each of them is aligned.

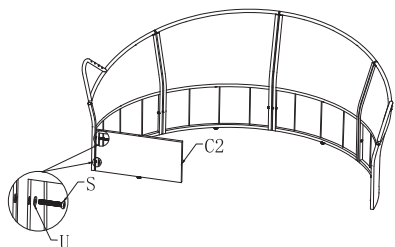

Step 2: Attach the Right Side Panel (C2) to the assembly (A1) using an M6*32 socket head cap screw (S) with a flat washer (U). DO this in two places.

Step 3: Attach the Side Base (E1) to the assembly (C2) using an M6*32 socket head cap screw (S) with a flat washer (U). DO this in two places.
Attach the Side Base (E2) to the assembly (E1) using a M6*50 socket head cap screw (T) with a flat washer (U) and secure with a washer (u) and then a nut (V). Use the allen key to tighten. DO this in two places.

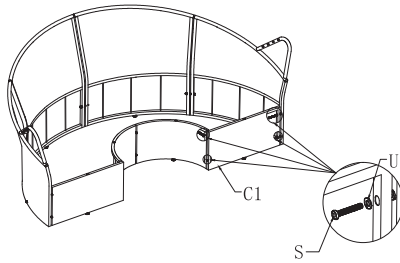
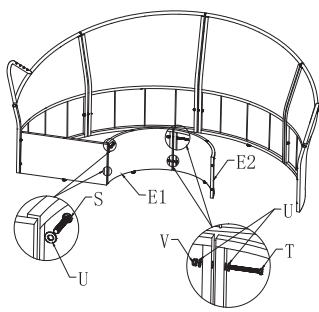


Step 4: Attach the Left Side Panel (C1) to the assembly (A2/E2) using an M6*32 socket head cap screw (S) with a flat washer (U). DO this in four places.

D Base Panel

Step 5: Secure pieces together using Fasteners (P/Q) and an M6*15 Socket Head Cap Screw(R) and a flat washer (U). Do this in five places, four with fasteners(U) and one with fastener(P).
Secure pieces together using an M6*32 socket head cap screw (S) with a flat washer (U) DO this in four places .

D Base Panel

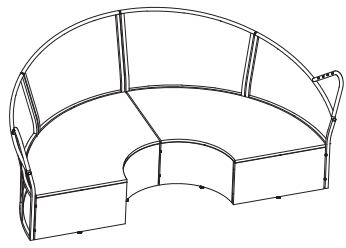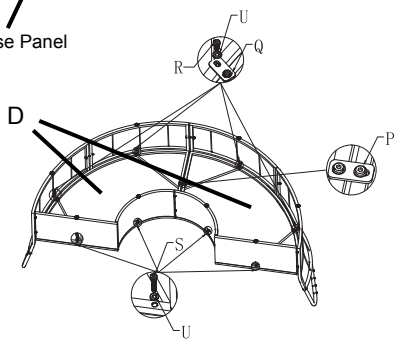


5-Piece Round Sectional Set


Assembly tip: Do not tighten the screws fully until each of them is aligned.

Item no.	Reference Image	Description	Qty.
F		Shortest Lowest Bar	2
G		2nd Shortest 2nd Lowest Bar	2
H		2nd Longest 2nd Highest Bar	2
I		Longest Highest Bar	2
J		Middle Bar	4
W		Extender	2
X		Spacer	4
R	 M6*15	M6*15 Socket Head Cap Screw	4
S	 M6*32	M6*32 Socket Head Cap Screw	8
U		Flat Washers	20
V		M6 Nut	8
1		Nut cover	8
2		Canopy	1


Step 1: There are two of each F,G,H,I. Line them up side by side and you can identify them by their length. I is the longest, H is the second longest, G is the second shortest and F is the shortest. Connect the two I pieces by putting a J piece between them. Do the same for the other bars.

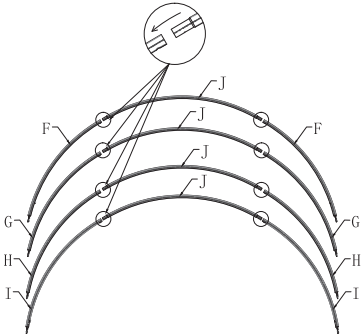

Step 2: Insert pole F through the hole in the canopy that has the tie down on it. This pole will rest on the back on the daybed when the canopy is fully extended. Strap pole G closest to pole F. Strap pole H closest to pole G. Insert pole I through the other hole in the canopy.

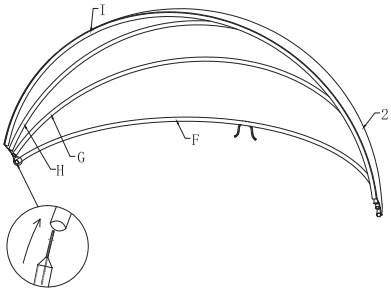

Step 3: Secure poles F,G and H to the three bottom holes on the outside of the daybed. Use M6*32 socket head cap screws(S) with washers (U) and secure with a washer (U) and then a nut (V). Put a nut cover (1) on part (V). Do this on both sides.

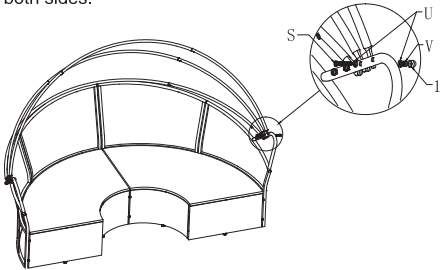


5-Piece Round Sectional Set


Assembly tip: Do not tighten the screws fully until each of them is aligned.

Step 4: Attach the extender (W) to the daybed. The thicker end of the extender should be close to the base of the daybed.

Thread the M6*15 socket head cap screws(R) with a washer(U), the insert of the extender (W) followed by a spacer (X). Connect this to the extra holes on poles (F) and (I) . Do this on both sides.



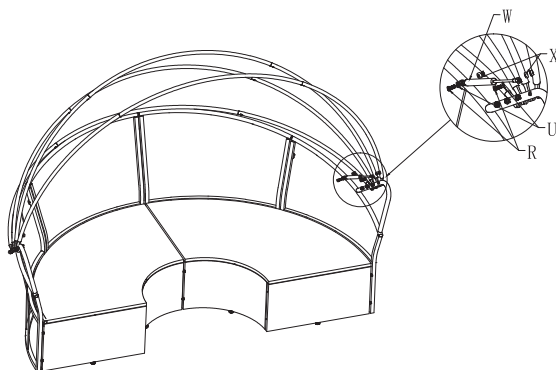


Step 5: Secure pole (I) to the top holes on the outside of the daybed . Use M6*32 socket head cap screws(S) with washers (U) and secure with a washer (U) and then a nut (V) .Use the allen key and wrench to tighten. Do this on both sides .

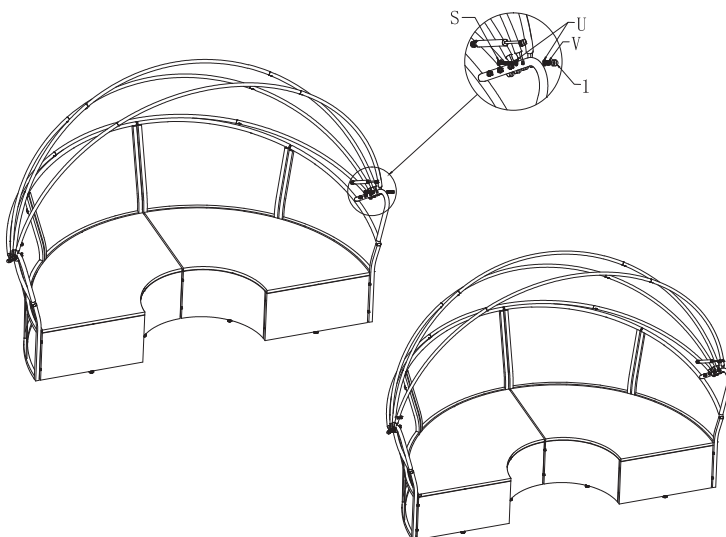


5-Piece Round Sectional Set


Assembly tip: Do not tighten the screws fully until each of them is aligned.

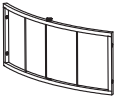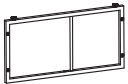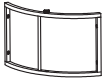Item no.	Reference Image	Description	Qty.
D		Base Panel	2
M		Outside Panel	4
N		Side Panel	4
O		Intside Panel	2
S	 M6*32	M6*32 Socket Head Cap Screw	26
T	 M6*50	M6*50 Socket Head Cap Screw	4
U		Flat Washers	34
V		M6 Nut	4



Step 1: Connect the two outside panels(M), using the M6*50 Socket Head Cap Screw (T) with Flat Washers (U) and a nut (V) with Flat Washers(U).Use the allen key and wrench to tighten. Do this in two places. Attach the two Base Panels(D) to the two Outside Panels (M) using M6*32 Socket Head Cap Screw(S) and flat Washers (U).Do this in two places.

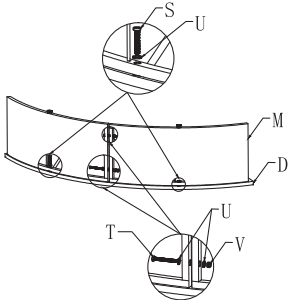

Step 2: Attach the side panels (N) to panels (M/D) using M6*32 Socket Head Cap Screw(S) and flat Washers (U).Do this in six places.

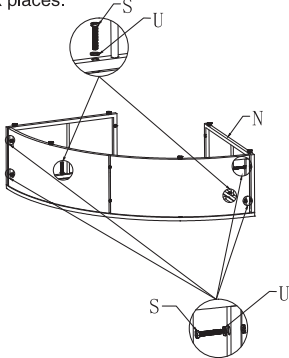


Step 3: Attach the inside panels (O) to panels (N/D) using M6*32 Socket Head Cap Screw(S) and flat Washers (U).Do this in five places.

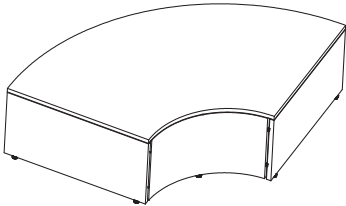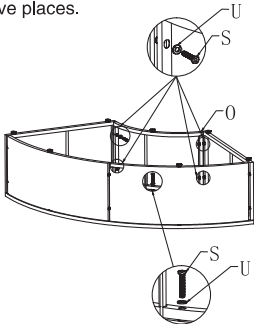


5-Piece Round Sectional Set



Assembly tip: Do not tighten the screws fully until each of them is aligned.

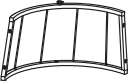Item no.	Reference Image	Description	Qty.
K		Top of Base	1
L		Side Base	3
S	 M6*32	M6*32 Socket Head Cap Screw	3
T	 M6*50	M6*50 Socket Head Cap Screw	6
U		Flat Washers	15
V		M6 Nut	6
Y		4mm Allen Key	1
Z		Wrench	1

Step 1: Attach the top of base (K) to side base (L) using M6*32 Socket Head Cap Screw (S) and flat Washers (U). Do this in three places.

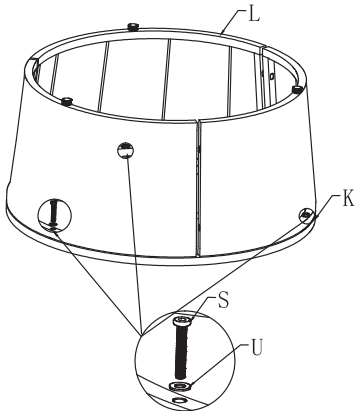

Step 2: Connect the three side bases (L), using the M6 Socket Head Cap Screw (T) with Flat Washer (U) and a nut (V) with Flat Washers (U). Use the allen key and wrench to tighten. Do this in six places.

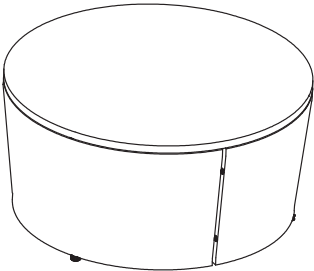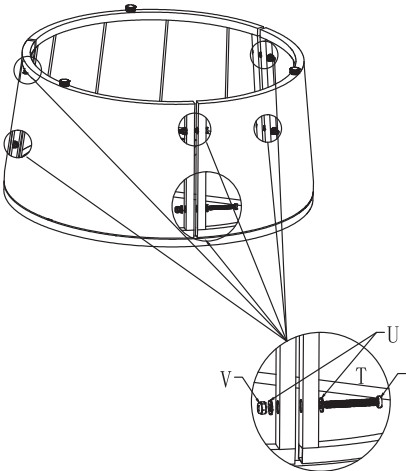

5-Piece Round Sectional Set

Assembly tip: Do not tighten the screws fully until each of them is aligned.

