
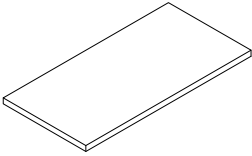


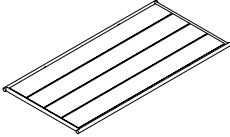







Kitchen Island



PART LIST


<div data-bbox="65 176 124 232" style="border: 1px solid black; padding: 2px; text-align: center;">A</div> 	<div data-bbox="352 176 411 232" style="border: 1px solid black; padding: 2px; text-align: center;">B</div> 	<div data-bbox="639 176 699 232" style="border: 1px solid black; padding: 2px; text-align: center;">C</div> 	<div data-bbox="927 176 986 232" style="border: 1px solid black; padding: 2px; text-align: center;">D</div> 	<div data-bbox="1214 176 1273 232" style="border: 1px solid black; padding: 2px; text-align: center;">E</div> 
<p style="text-align: center;">Marble Top 1 PC</p>	<p style="text-align: center;">Top Frame 1 PC</p>	<p style="text-align: center;">Side Panel 2 PCS</p>	<p style="text-align: center;">Shelf Panel 2 PCS</p>	<p style="text-align: center;">Hand Rail 2 PCS</p>

HARDWARE LIST

<div data-bbox="65 786 124 842" style="border: 1px solid black; padding: 2px; text-align: center;">#1</div> 	<div data-bbox="352 786 411 842" style="border: 1px solid black; padding: 2px; text-align: center;">#2</div> 	<div data-bbox="639 786 699 842" style="border: 1px solid black; padding: 2px; text-align: center;">#3</div> 	<div data-bbox="927 786 986 842" style="border: 1px solid black; padding: 2px; text-align: center;">#4</div> 	<div data-bbox="1214 786 1273 842" style="border: 1px solid black; padding: 2px; text-align: center;">#5</div> 
<p style="text-align: center;">1/4" x 1/2"L</p> <p style="text-align: center;">Short Bolt 8 PCS (Extra 1)</p>	<p style="text-align: center;">1/4" x 5/8"L</p> <p style="text-align: center;">Bolt 6 PCS (Extra 1)</p>	<p style="text-align: center;">1/4" x 1"L</p> <p style="text-align: center;">Medium Bolt 4 PCS (Extra 1)</p>	<p style="text-align: center;">1/4" x 1-1/2"L</p> <p style="text-align: center;">Long Bolt 8 PCS (Extra 1)</p>	<p style="text-align: center;">Allen Wrench 1 PC</p>

Step 1. Attach top frame (part B) to side panels (part C) using medium bolts (part #3) and allen wrench (part #5).


Note: Please do not fully tighten bolts at this time.

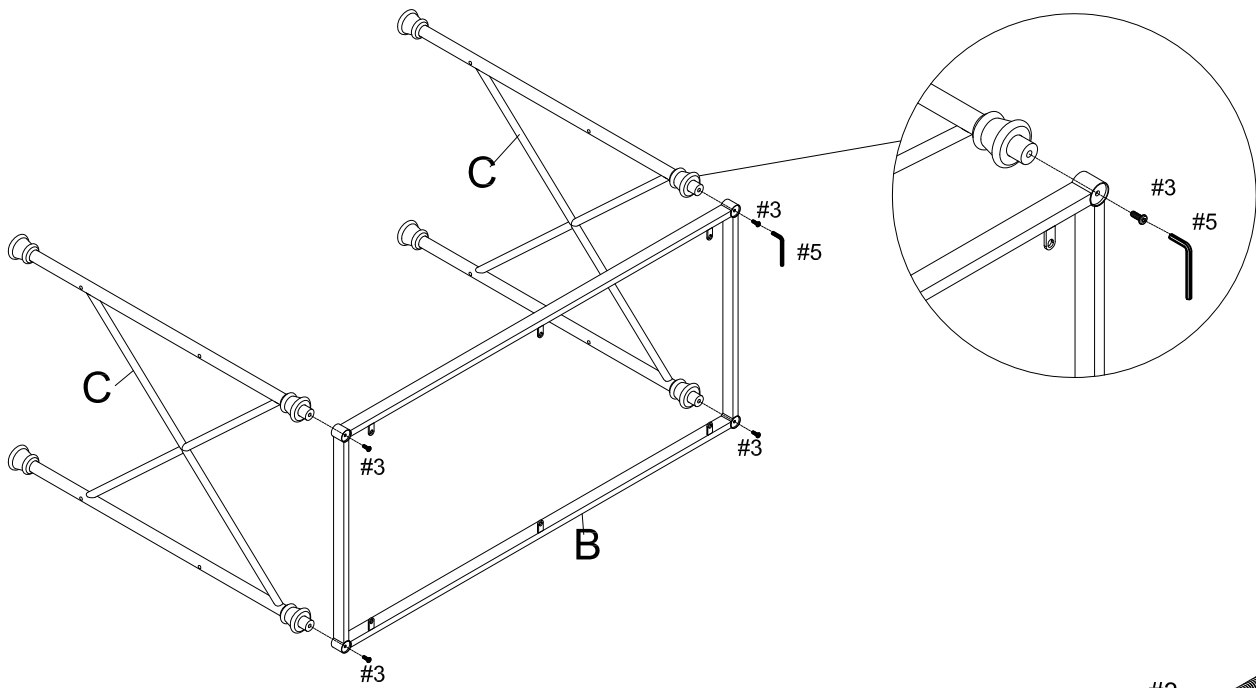

- #3  x 4
- #5  x 1

Step 2. Attach shelf panels (part D) to side panels (part C) using long bolts (part #4) and allen wrench (part #5).


Note: Please fully tighten all bolts at this time.

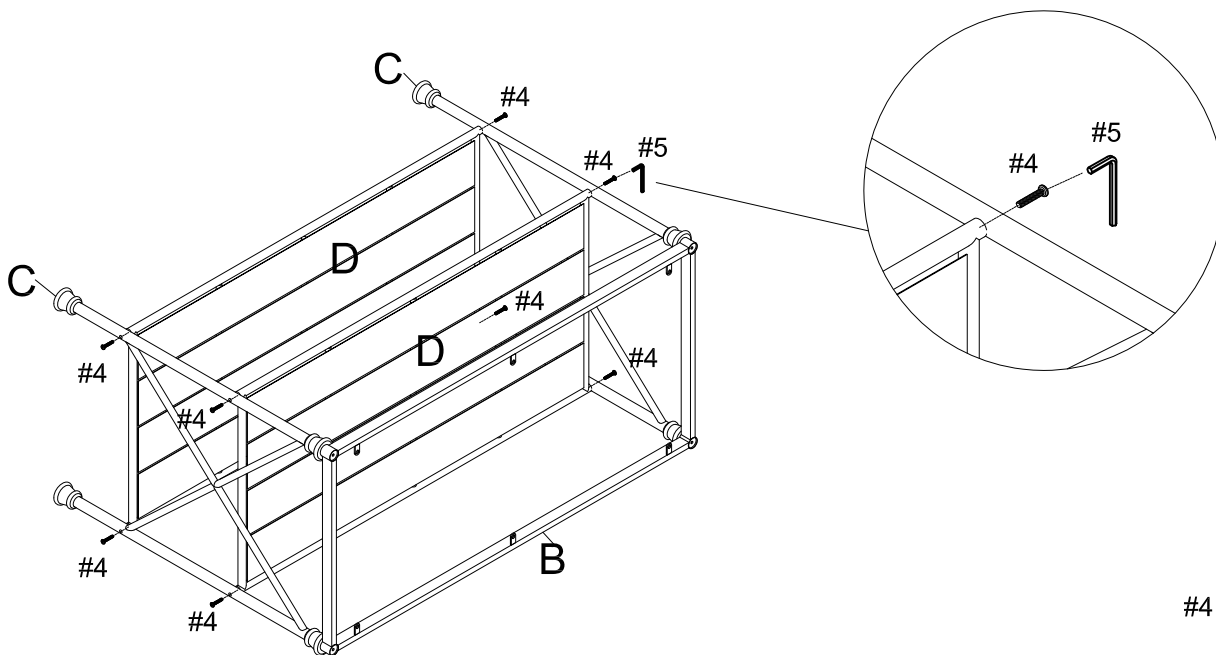

- #4  x 8
- #5  x 1

Step 3. Carefully lay marble top (part A) upside down on a flat, soft surface, such as carpet. Attach assembled unit (parts B, C & D) to marble top (part A) using bolts (part #2) and allen wrench (part #5).

Note: Please fully tighten all bolts at this time.

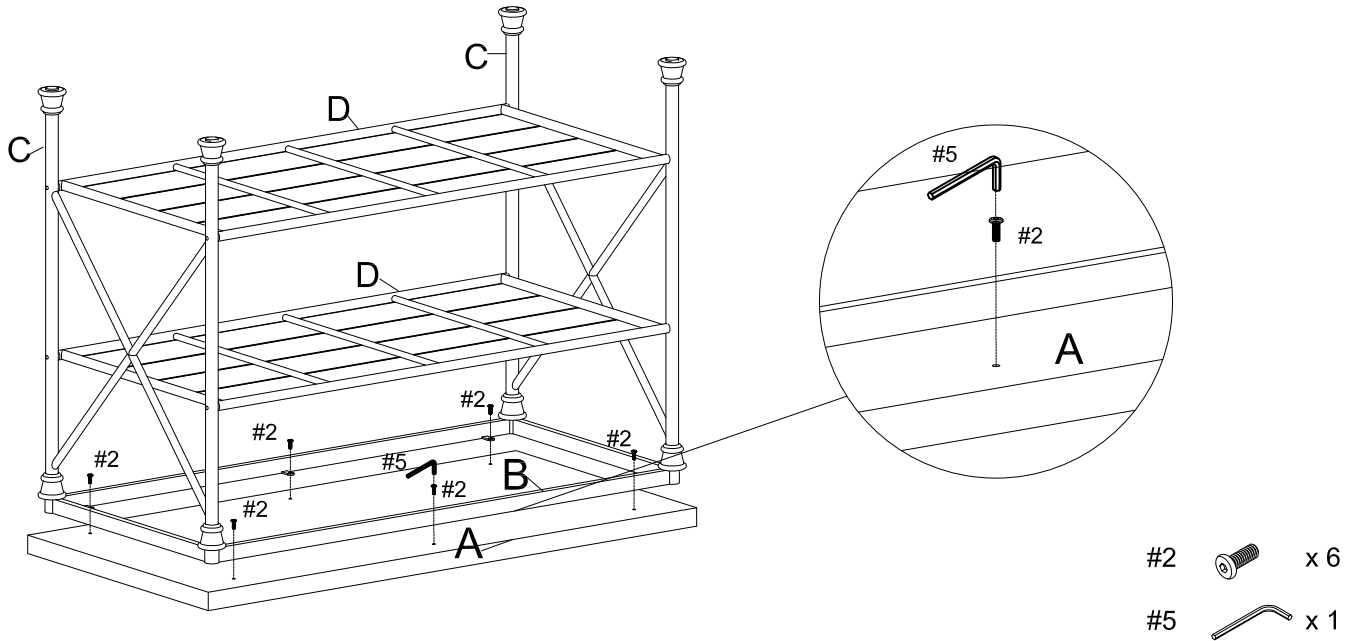

Step 4. Carefully turn unit upright. Attach hand rails (part E) to side panels (part C) using short bolts (part #1) and allen wrench (part #5).

Note: Please fully tighten all bolts at this time.

