

Assembly Instructions

Part List		QTY
1	Top Panel	1
2	Right Side Panel	1
3	Left Side Panel 1	1
4	Left Side Panel 2	1
5	Bottom Panel	1
6	Middle Panel Support	1
7	Middle Panel	1


Hardware		QTY
A	Allen Key M4	1
B	Wood Dowel	20
C	Mini Fix Bolt	20
D	Mini Fix Housing	20
E	Mini Fix Cap	20
F	White Nail Leg	6

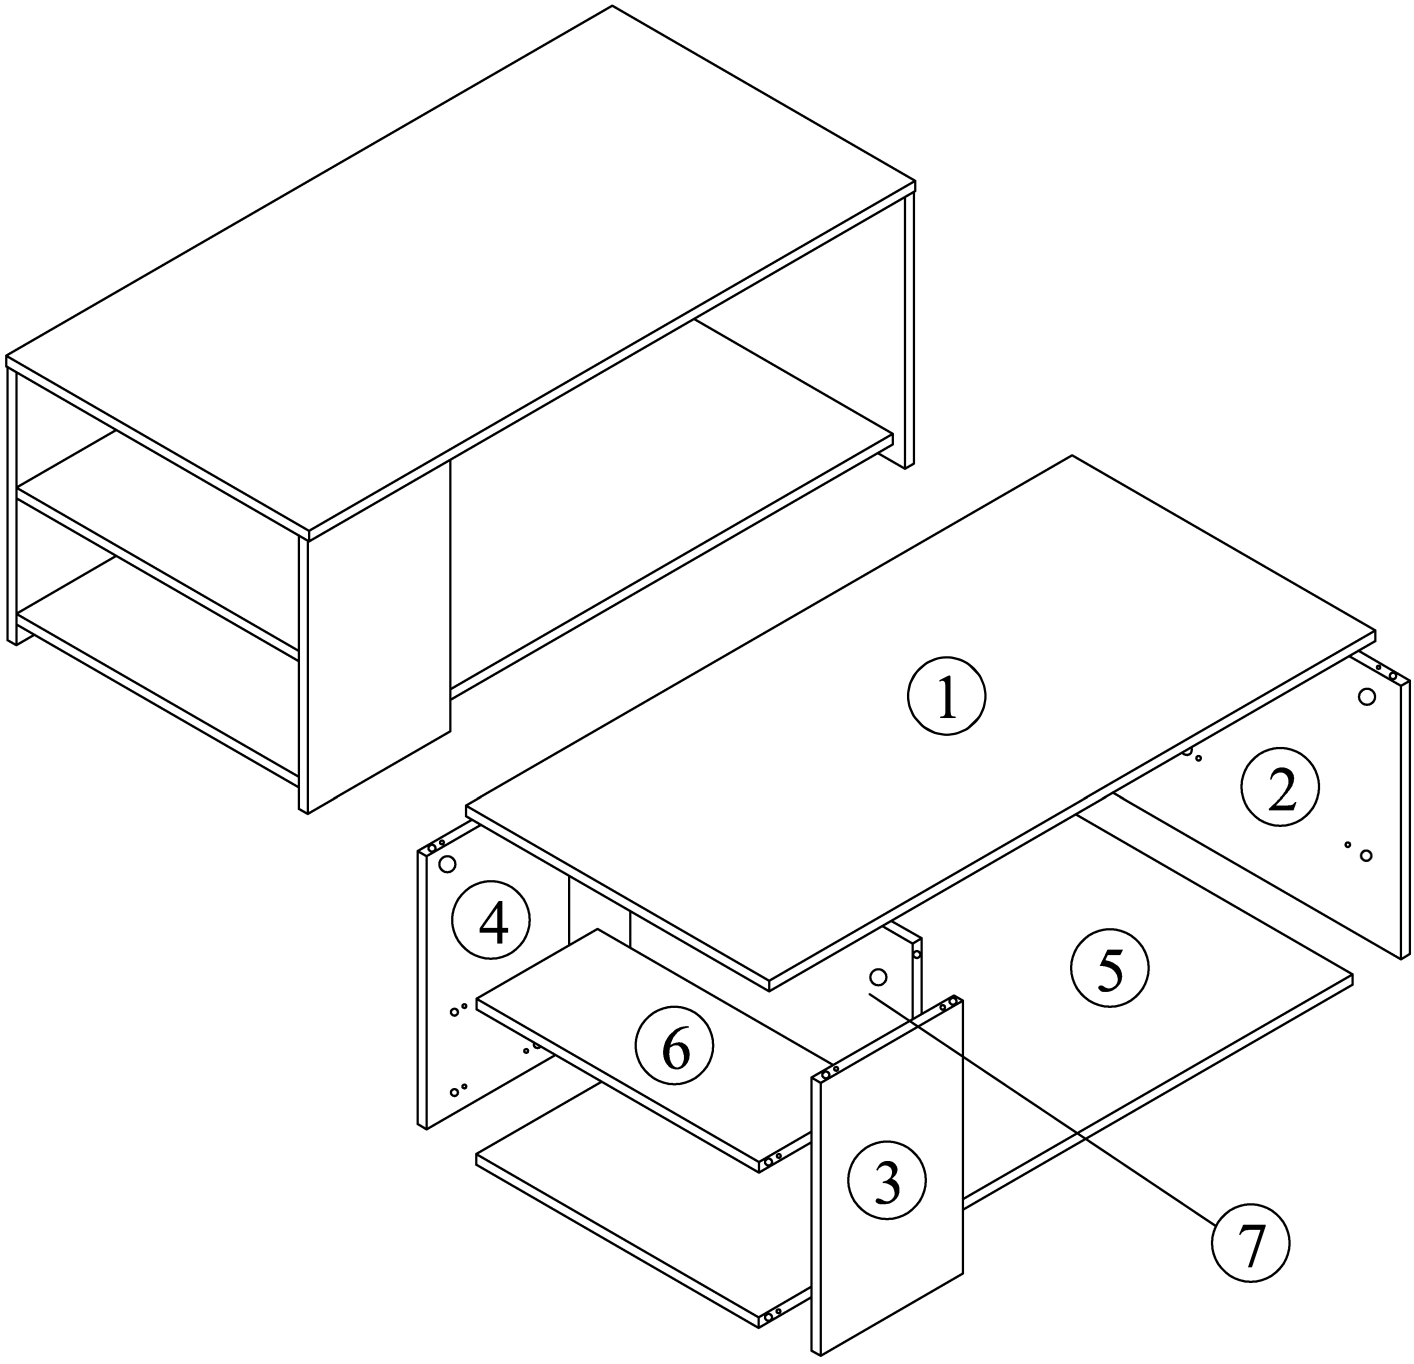

Step 1

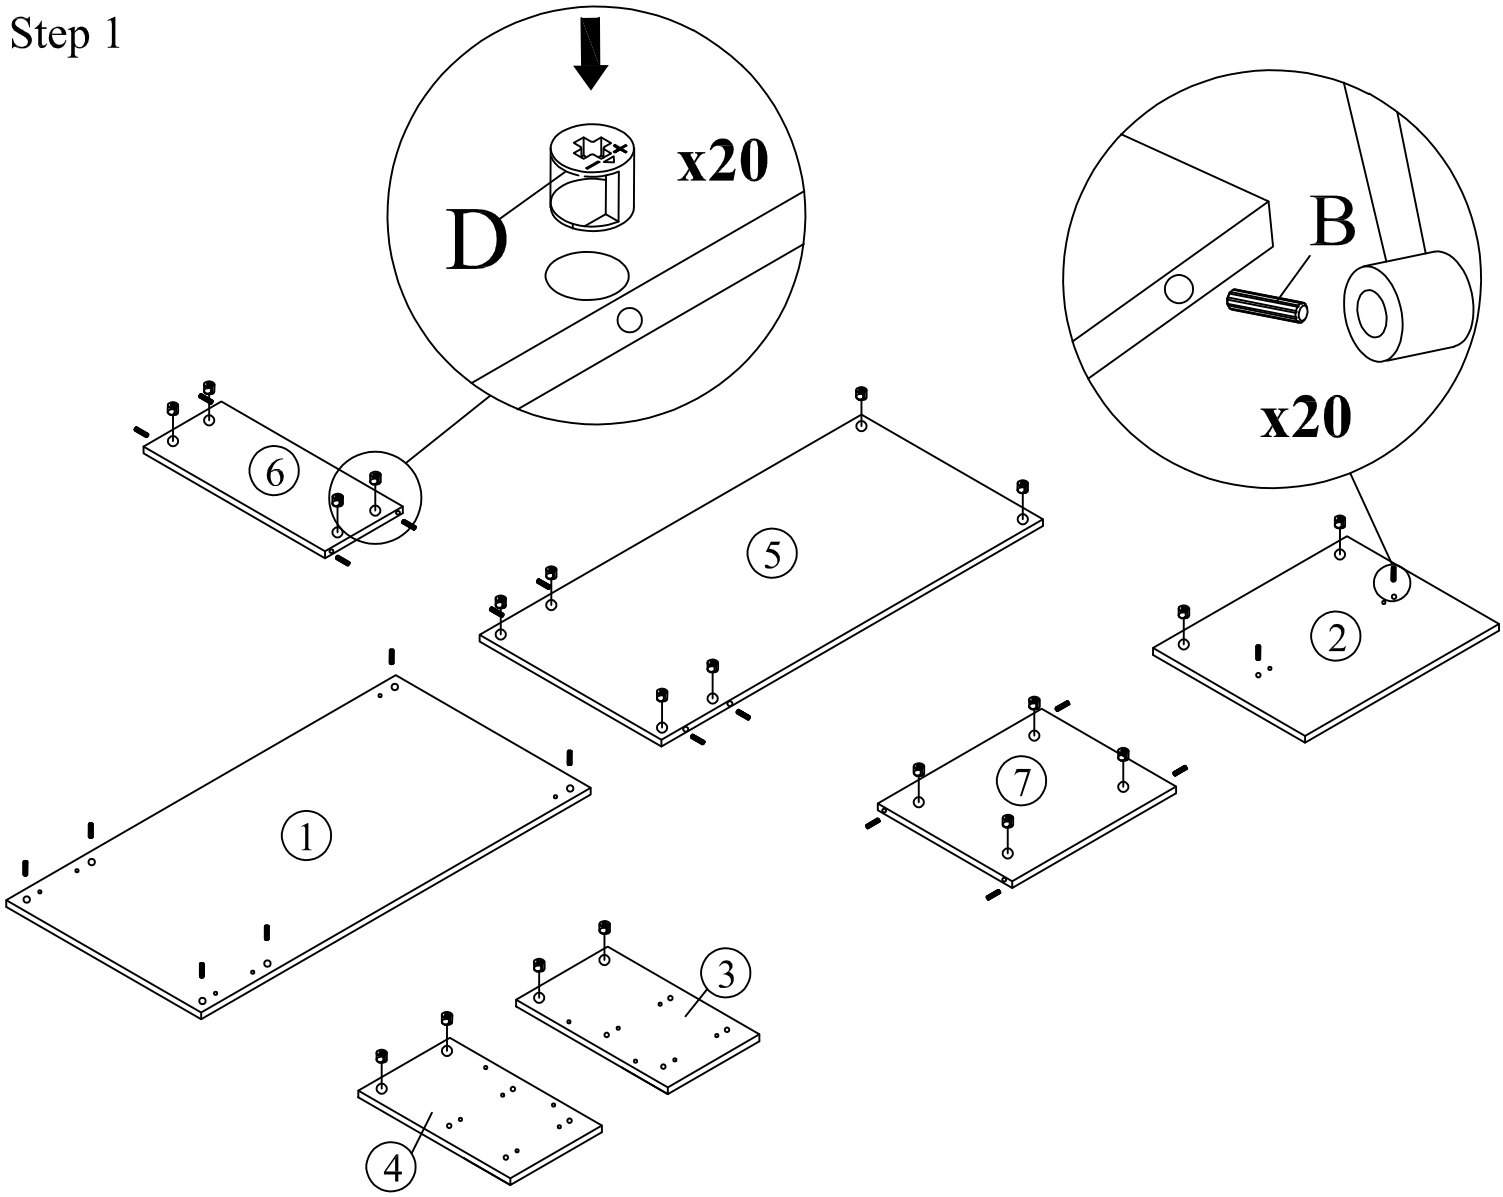


Step 2

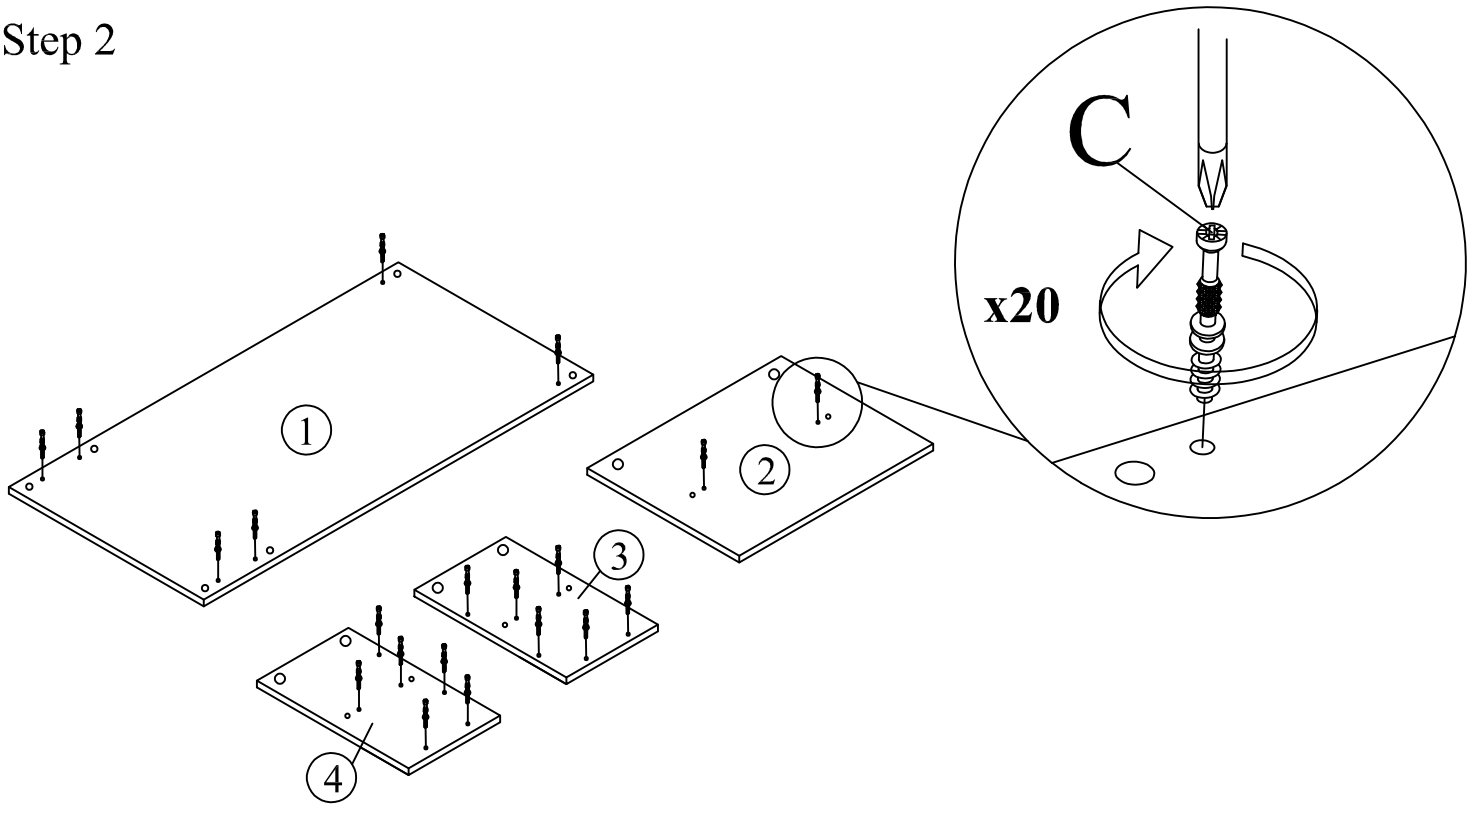

Step 3

This is how a mini fix works...

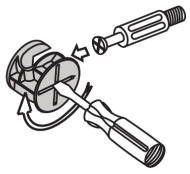


The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.


***Attach Minifix Cap as shown.**

Step 4

This is how a mini fix works...

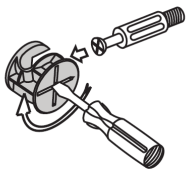


The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

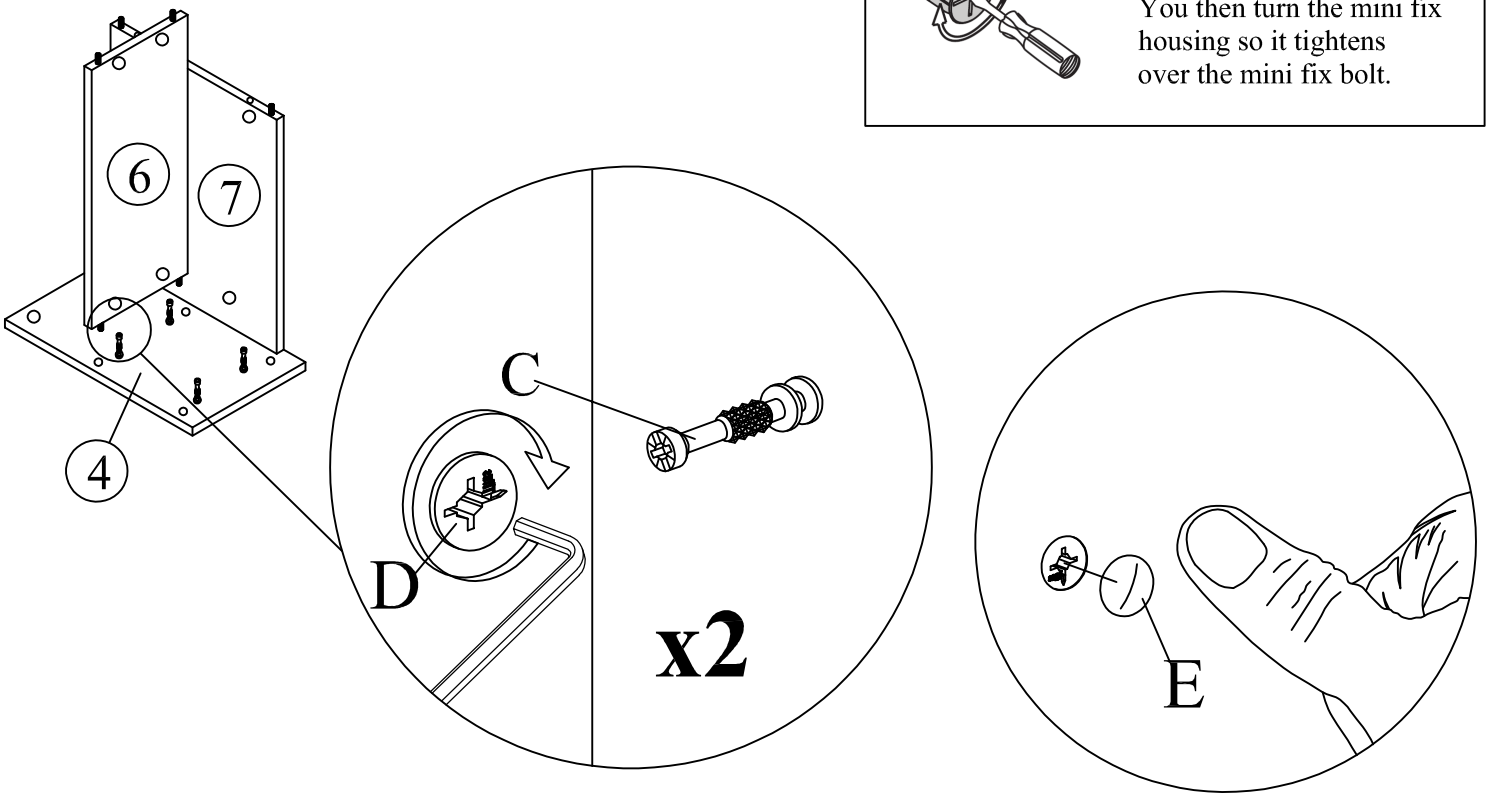


***Attach Minifix Cap as shown.**


Step 5

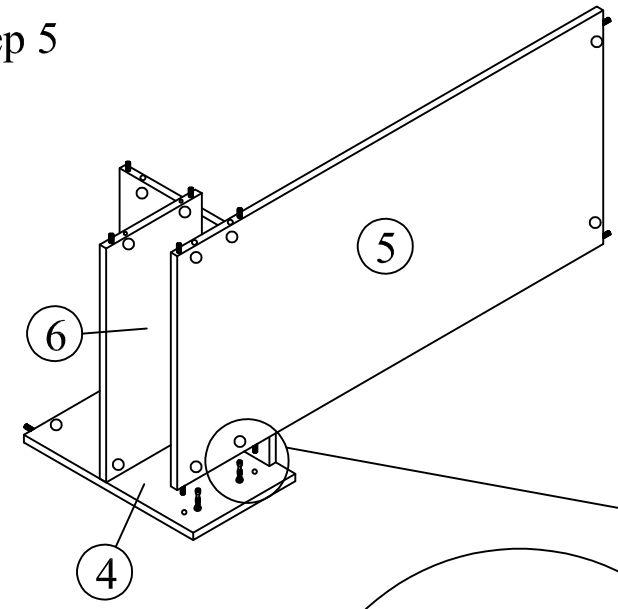


This is how a mini fix works...

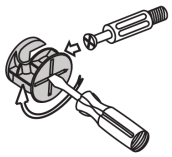


The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

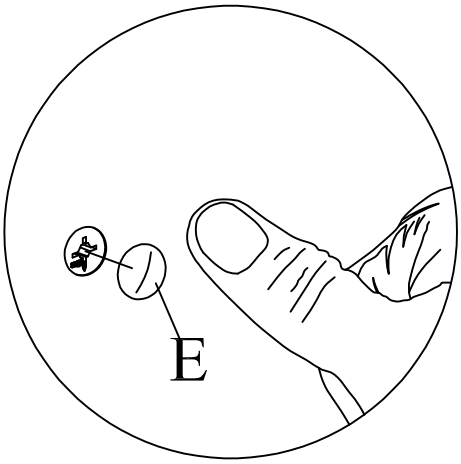

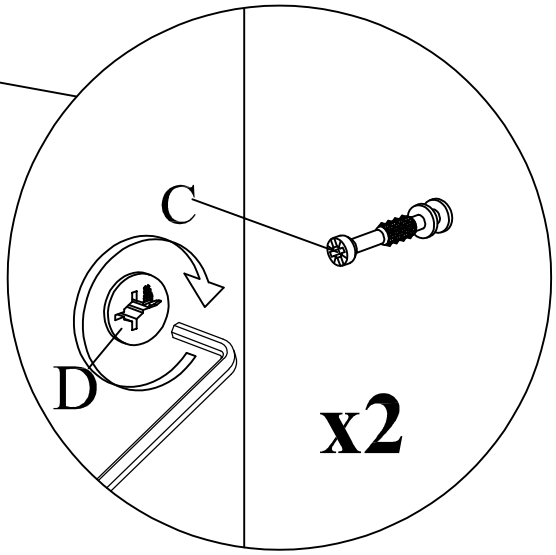


Attach Minifix Cap as shown.


Step 6

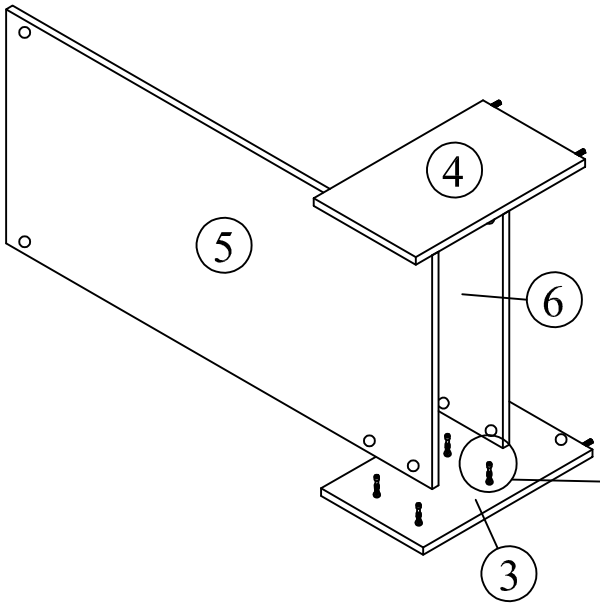


This is how a mini fix works...

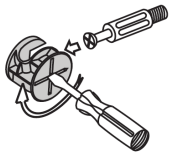


The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

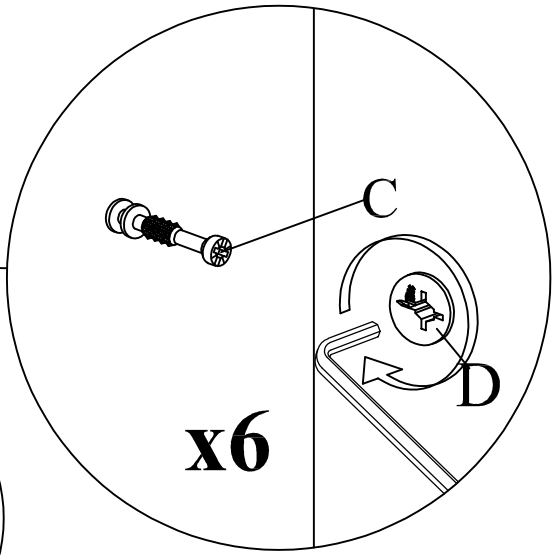

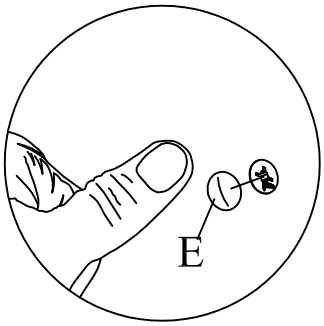


Attach Minifix Cap as shown.


Step 7

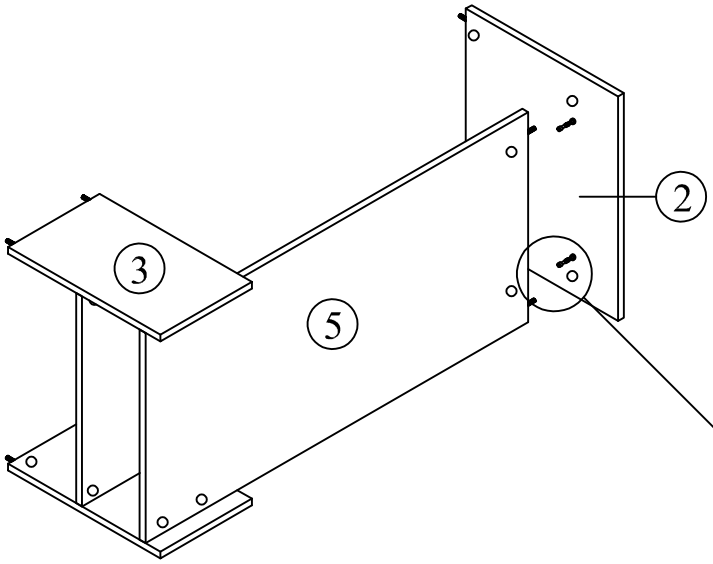


This is how a mini fix works...

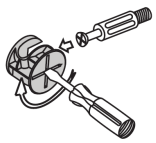


The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

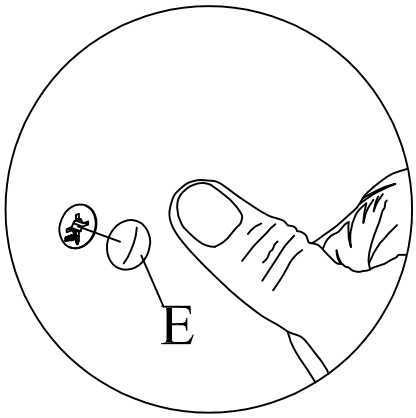

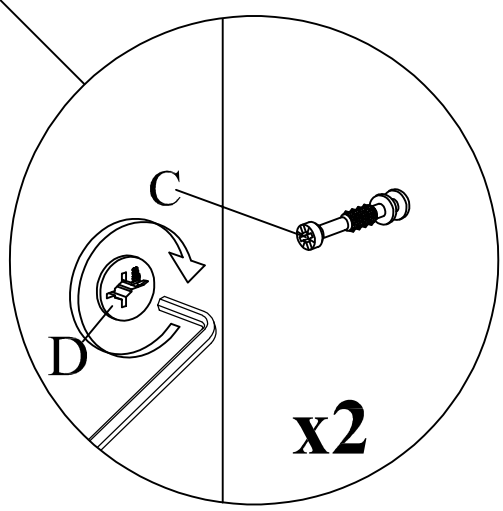


Attach Minifix Cap as shown.


Step 8

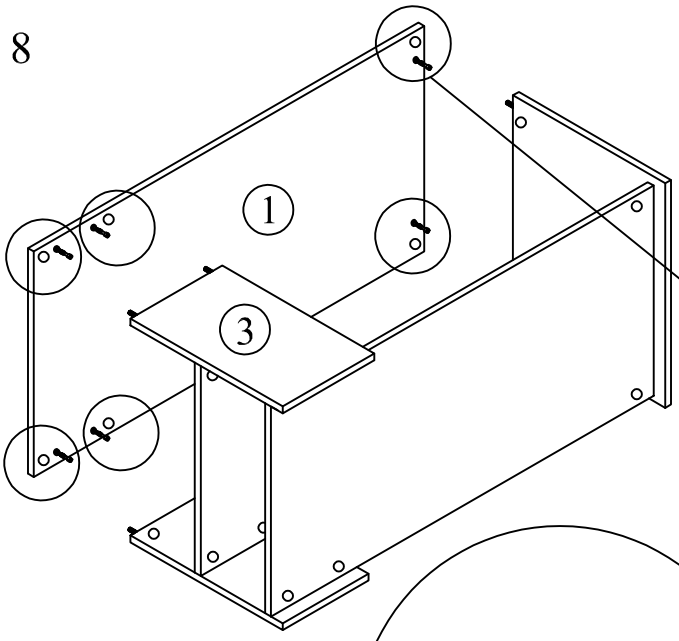


This is how a mini fix works...

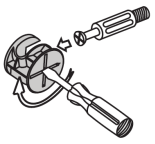

The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

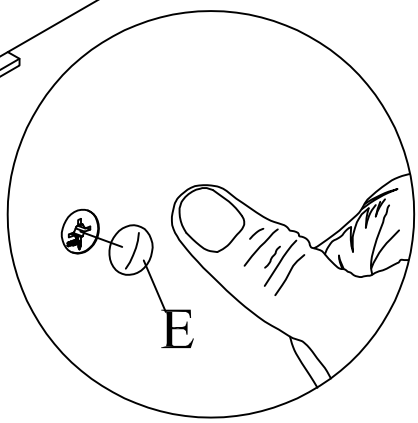

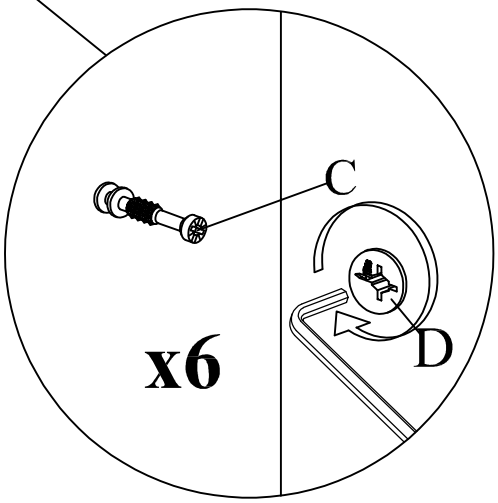

Attach Minifix Cap as shown.

Step 9

