



IMPORTANT NOTICE:
HARDWARE PACKAGE IS ATTACHED ON THE BOTTOM OF SEAT CUSHION.

(1)X1	(2)x1	(3)x1 (L)x1 (R)
 Back Cushion	 Seat Cushion	 Left & Right-Arm
(4)x1	**(5)x1**	**(6)x1**
 Sled Base	 Connecting Bar	

(A)X2		M6 X 16	**CONNECTING BAR SCREW** (Please find these 2 screws on sled base.)
(B)x8		M6 X 30	**ARM SCREW**
(C)x4		M6 X 22	**SLED BASE / SEAT SCREW**
(D)x1			**ALLEN KEY**

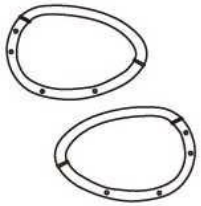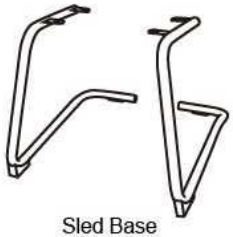

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

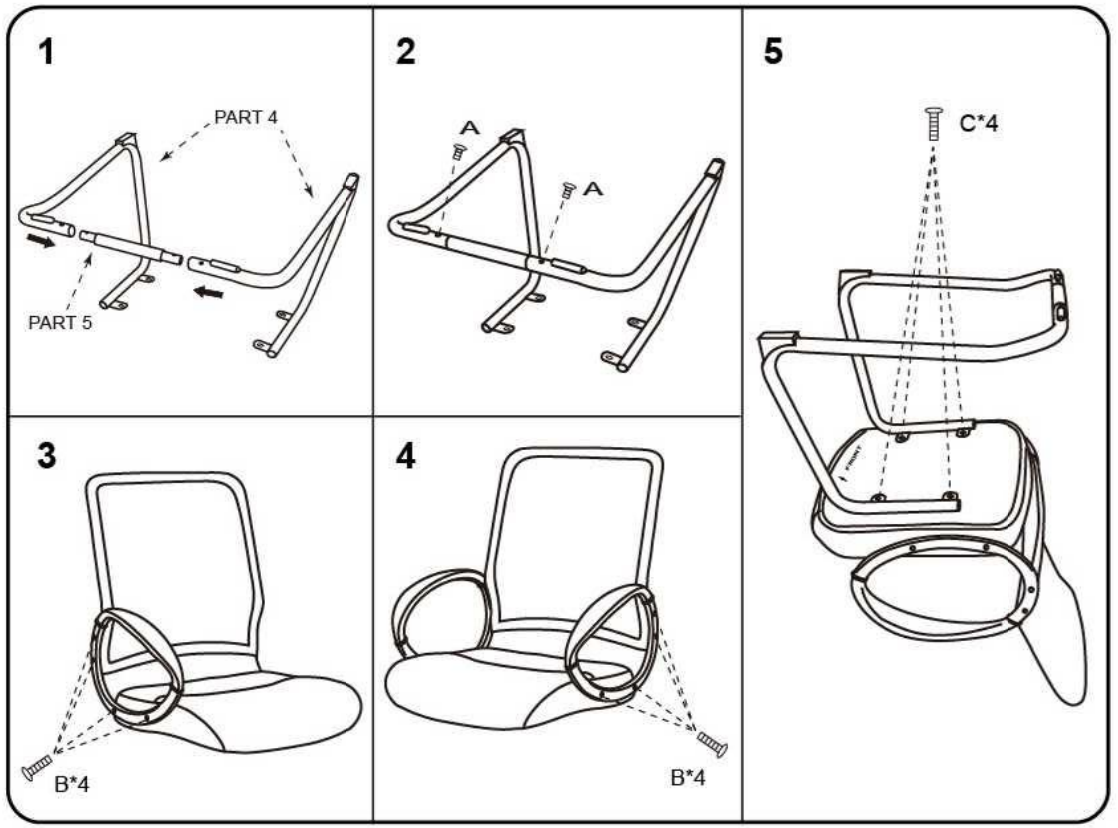

