



Thanks for purchasing one of ourproducts, please carefully read the assembly instructions before installation(Attention:Do not tighten the screws beforeall screws are in place).

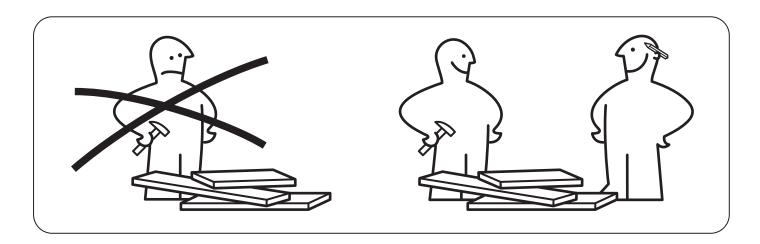

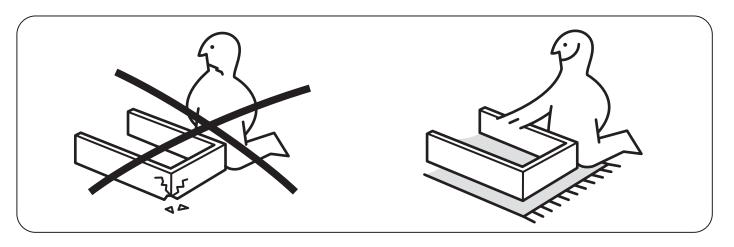


(Tools not provided)
Flat Blade Screwdriver
Phillips Head Screwdriver
Wooden Hammer





To Assemble the Unit Wooden Hammer


PAGE1 Exploded View

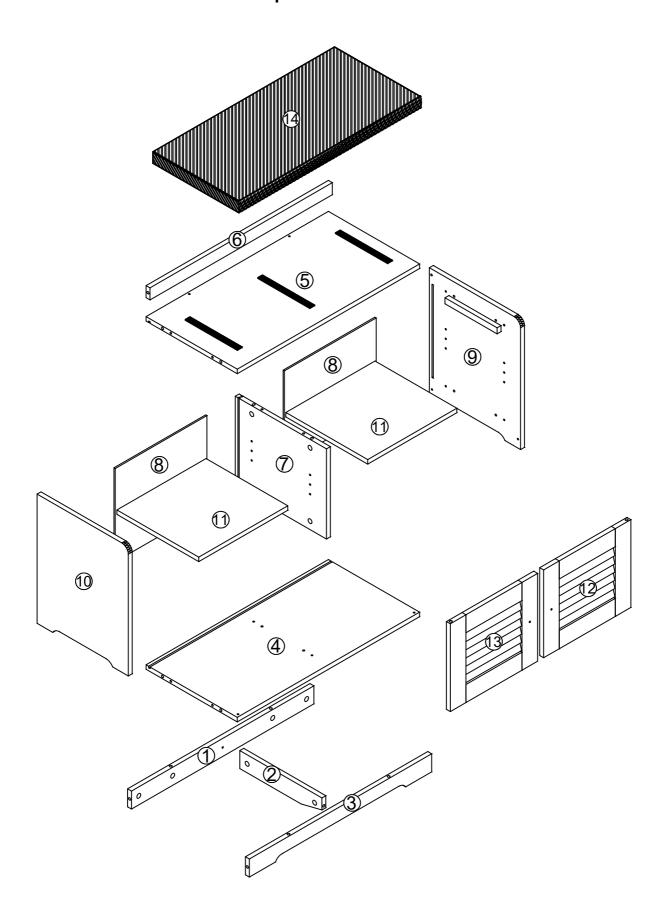


### PAGE2 will require these parts

will require these parts			
A O	B	C M6X30MM	D
26+2PCS	26+2PCS	12+2PCS	4+1PCS
E	F	G	H
4+1PCS	2PCS	4PCS	2PCS
I M4X20M	J (3*16MM)	K	
2PCS	8PCS	8PCS	


PAEG3 will require these parts

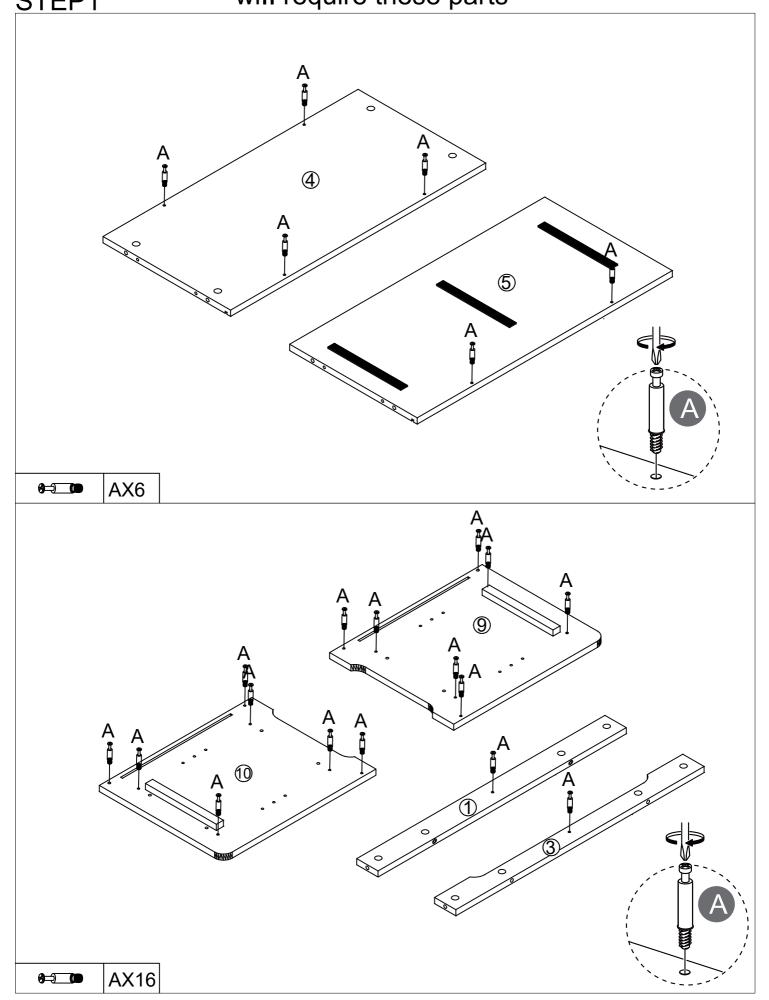


### PAEG4 will require these parts

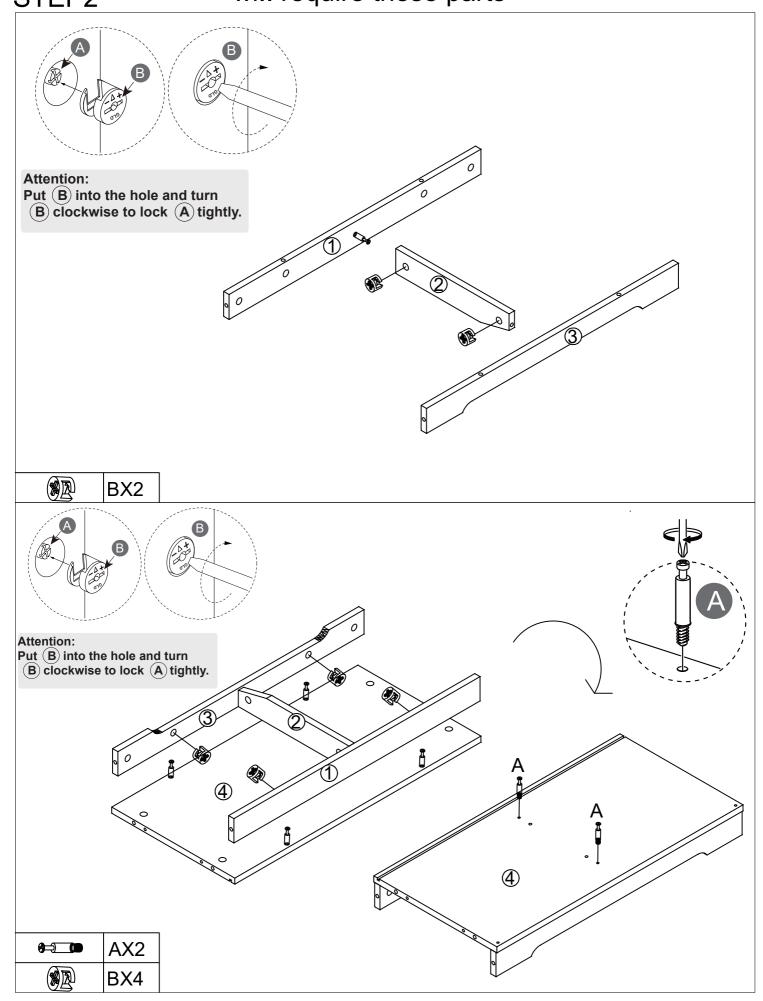

PAEG5 will require these parts

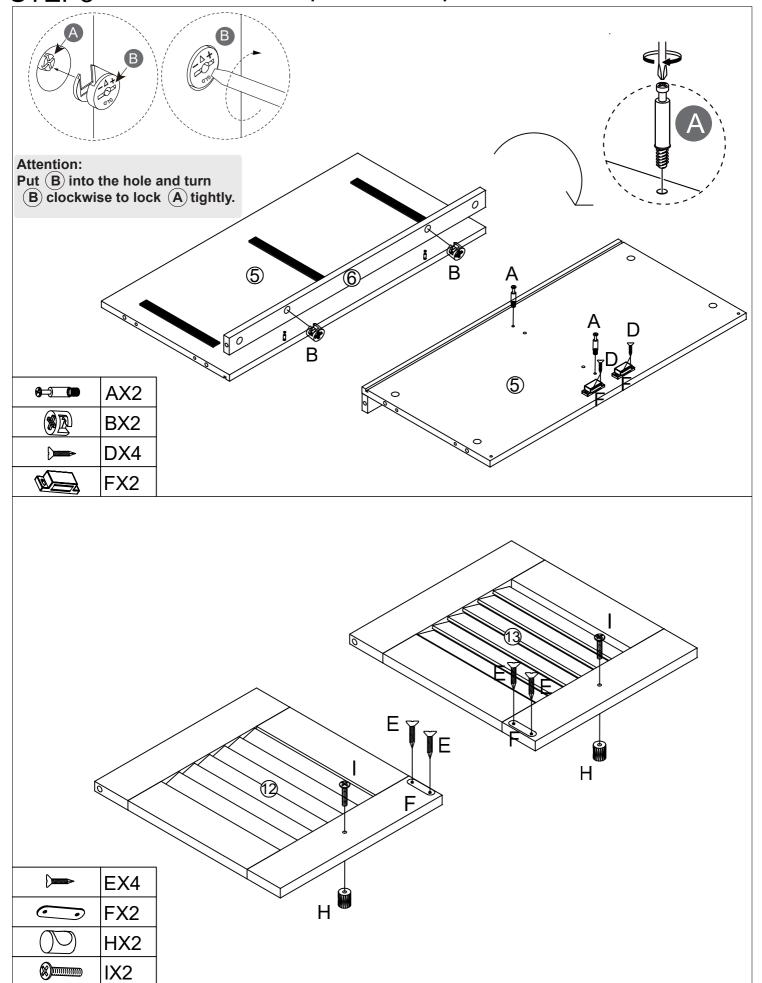


# PAEG6 will require these parts

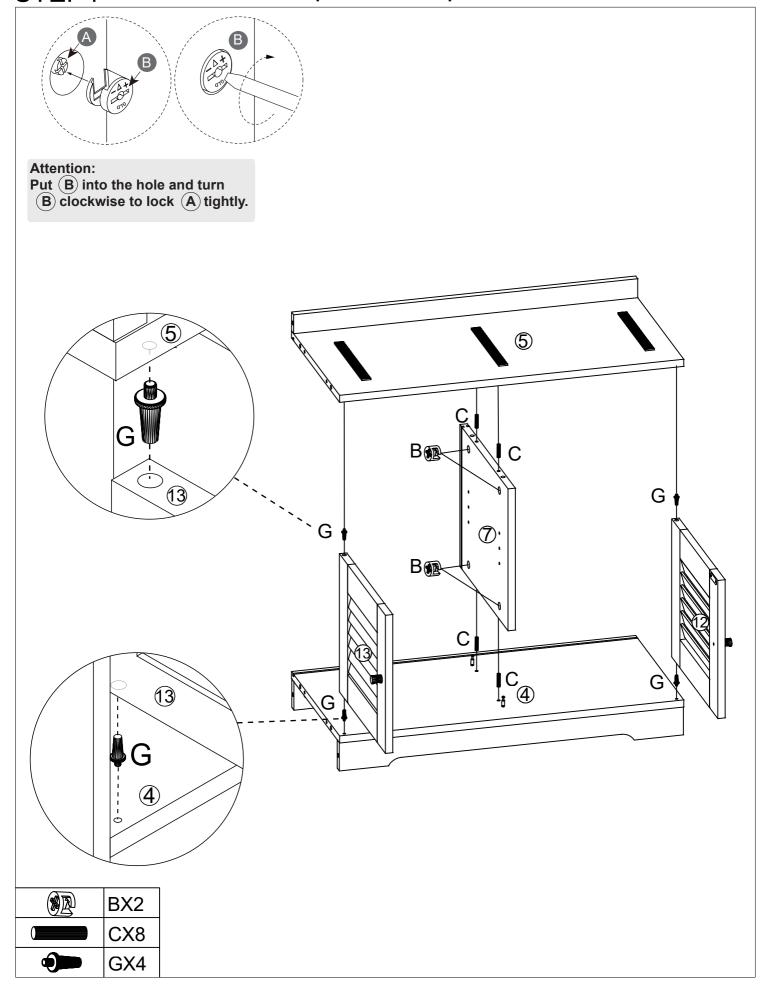


CX8


#### PAEG7 will require these parts

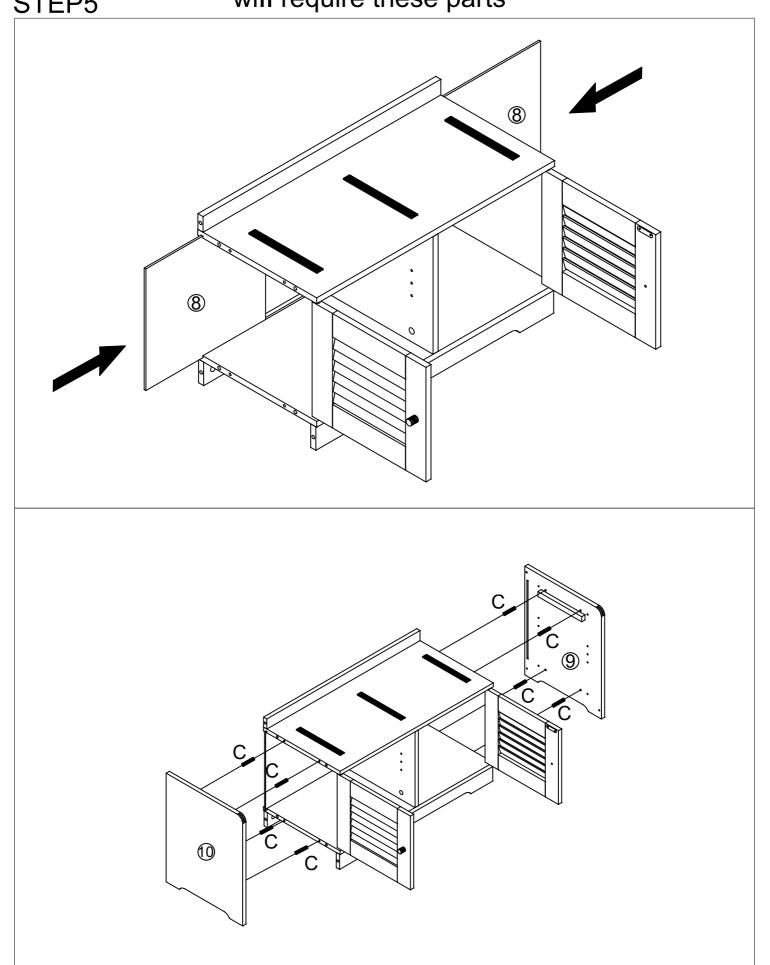

### PAEG8 will require these parts

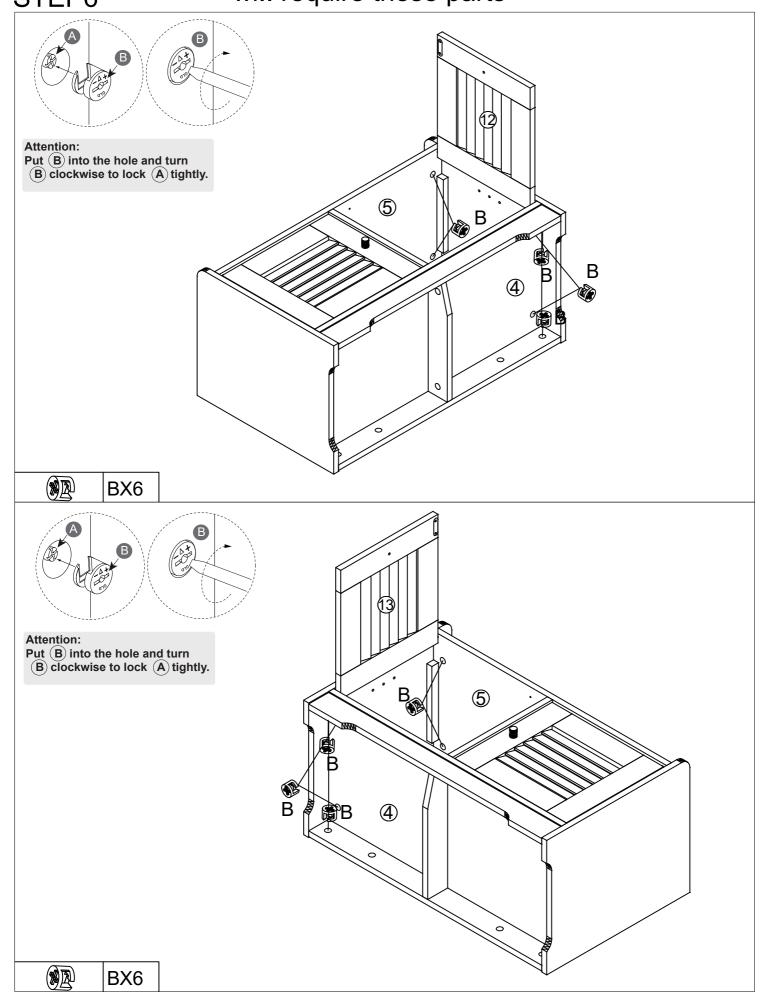

## PAEG9 will require these parts

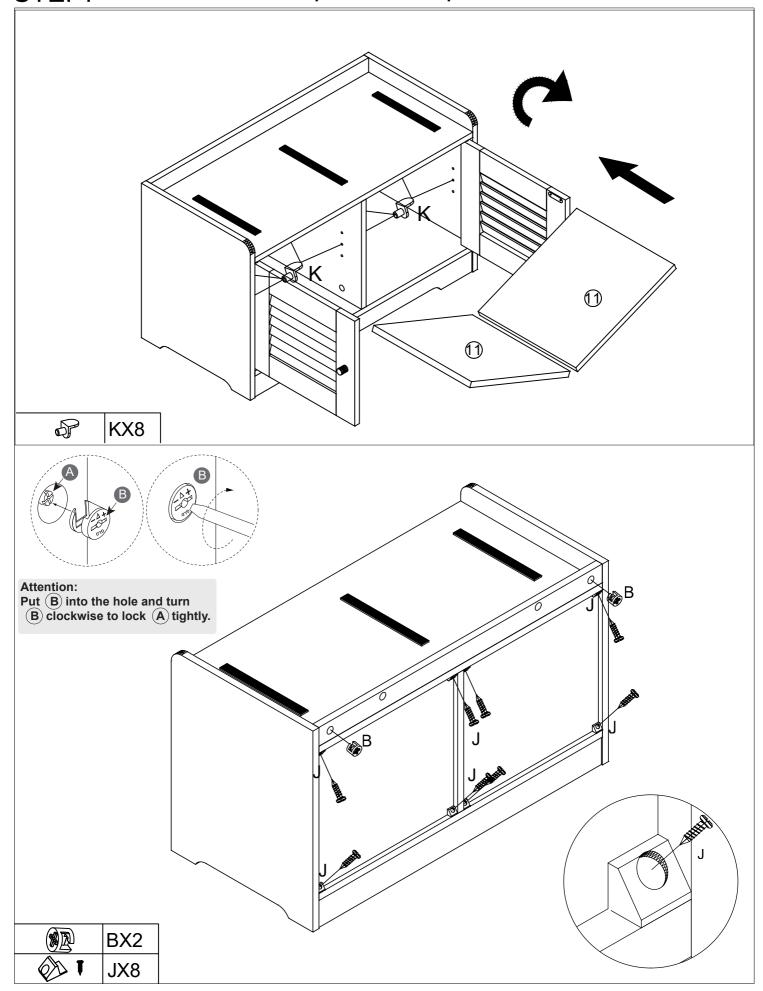

PAEG10 will require these parts

