
Hall tree

Assembly Instructions - Please keep for future reference

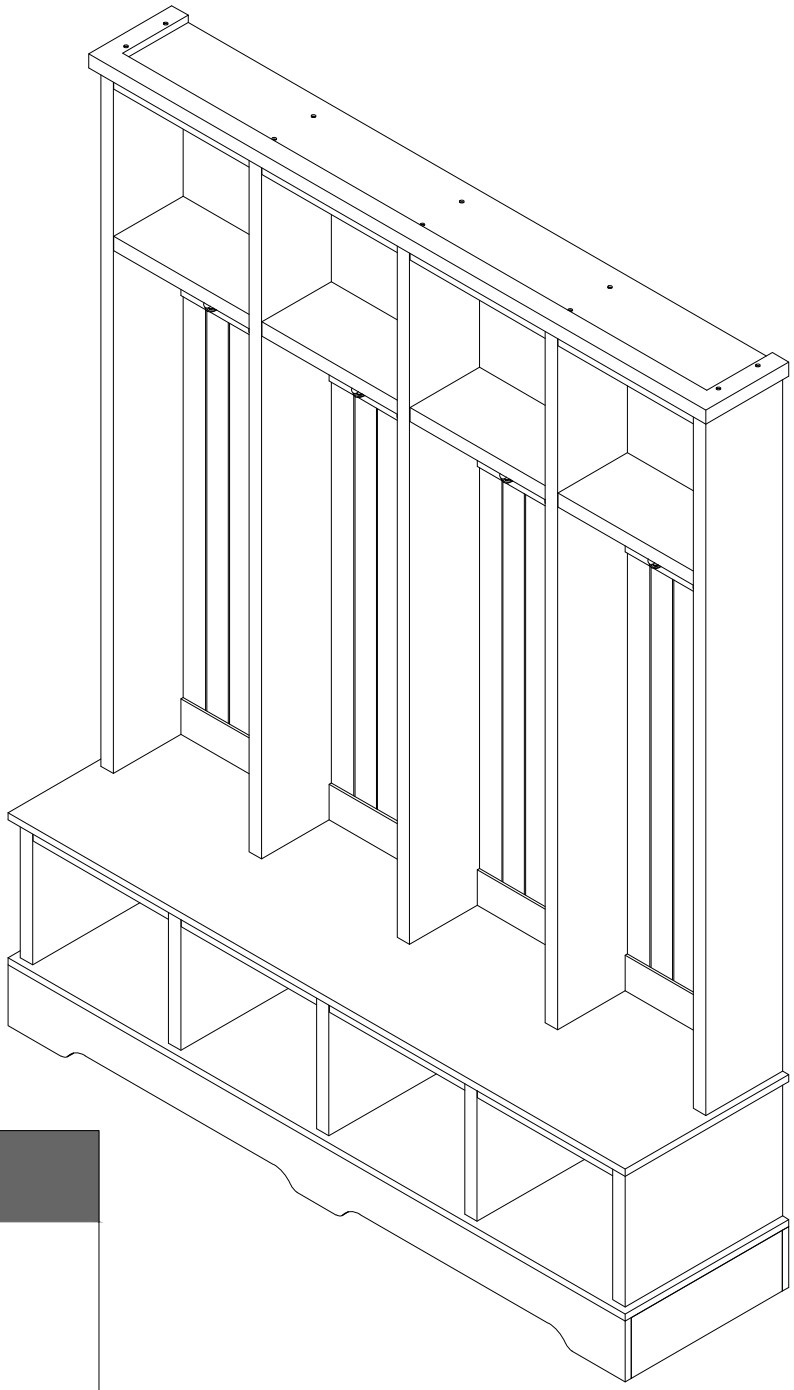

Dimensions

Width-59inch

Depth-15.7inch

Height-76.8inch

Important-Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.














WARNING
In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittinas









Please check you have all the panels listed below

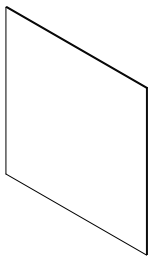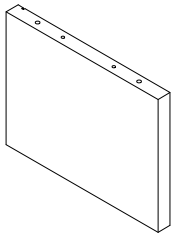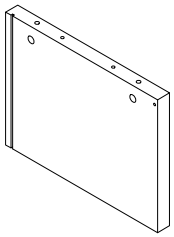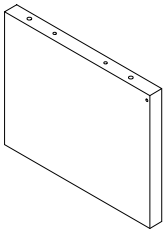1 x1  1500x202x30mm	2 x1  1470x187x30mm	3 x1  1470x187x30mm	4 x3  1470x187x30mm	5 x8  330x30x15mm
6 x4  330x186x30mm	7 x4  330x176x15mm	8 x4  330x75x15mm	9 x4  347x337x2.5mm	10 x4  855x337x2.5mm
11 x1  1500x398x15mm	12 x1  290x385x30mm	13 x1  290x385x30mm	14 x3  290x367x30mm	15 x1  1500x398x15mm
16 x1  1417x29.7x2.5mm	17 x2  368x128x15mm	18 x1  1498x128x15mm	19 x1  1498x128x15mm	


Components - Fittinas

Please check you have all the panels listed below

Note : The quantities below are the correct amount to complete the assembly . In some cases more fittings may be supplied than are required.

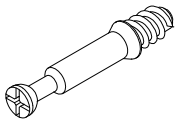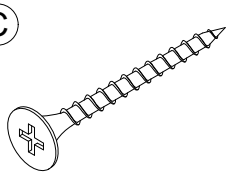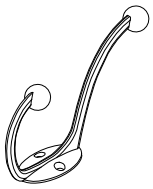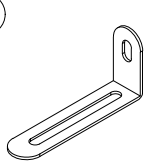A  Ø6*35mm Cam Bolt x 76+1	B  Ø15*9mm Cam lock x 76+1	C  5*50mm Screw x 30+1	D  6*30mm Dowel x 92+2	E  3*14mm Screw x 16+1
F  Clothes-Hook x 8	G  30*15mm Non-Slip mat x 10	H  3*14mm Screw x 40+2	I  Plastic Nail x 40+2	J  4*40mm Screw x 2
K  4*12mm Screw x 4	L  6*30mm Wall Anchor x 2	M  Iron sheet x 2		

Tools required

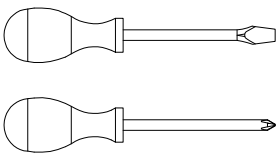


Phillips screwdriver
(medium large)

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

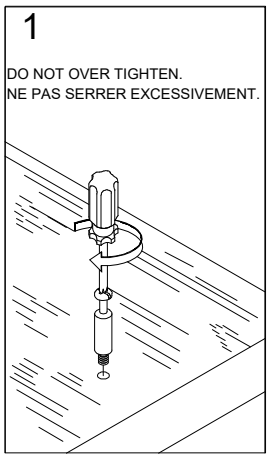

Step 2


Push the male camlock into the entry hole.

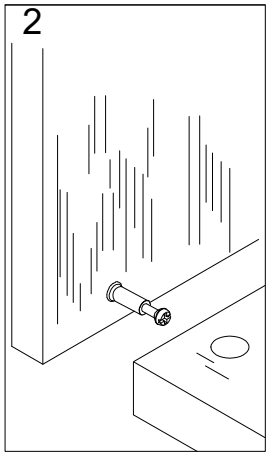

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

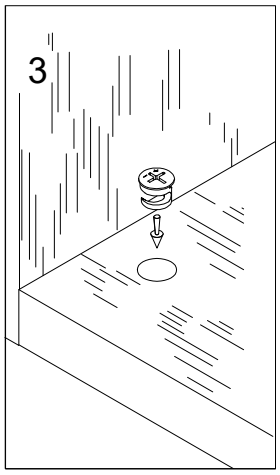


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

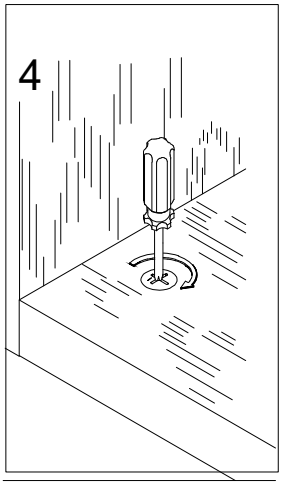


Assembly Instructions

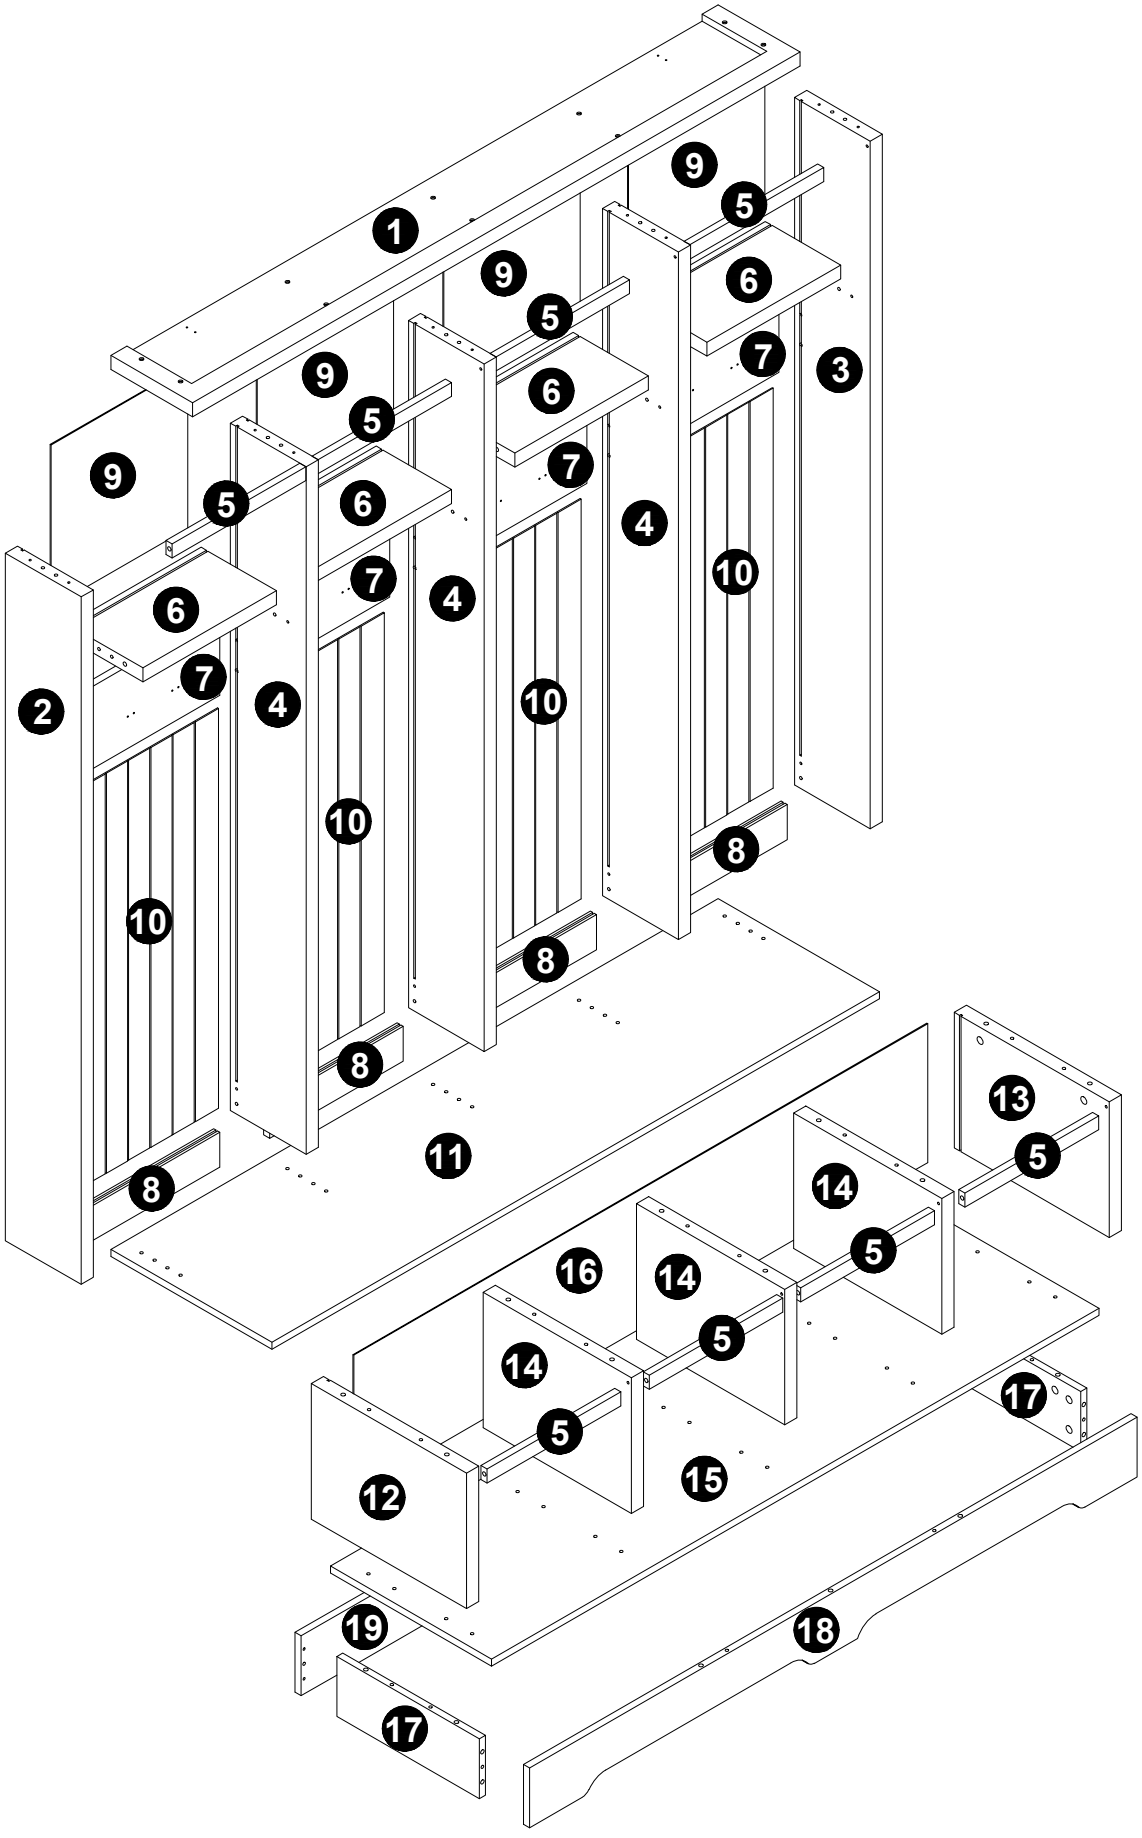


Assembly Instructions


step 1

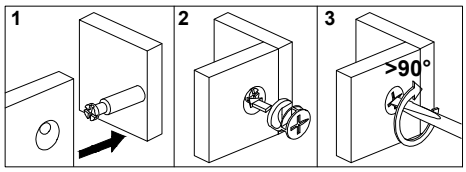

A	B
	
Ø6*35mm Cam Bolt x 8	Ø15*9mm Cam lock x 8


step 2

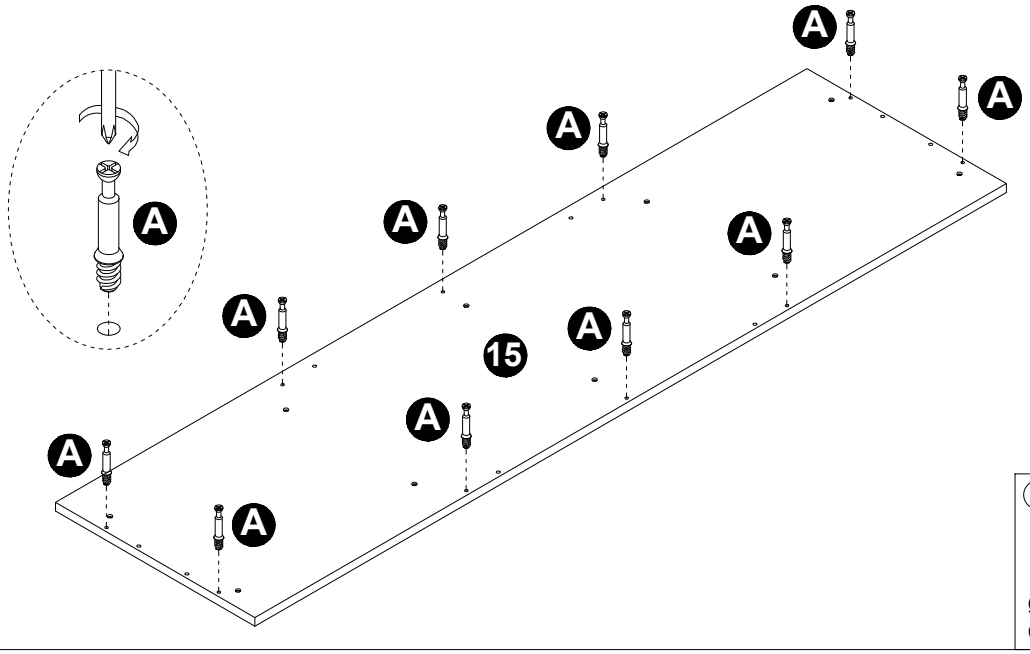

A

Ø6*35mm Cam Bolt x 10

Assembly Instructions

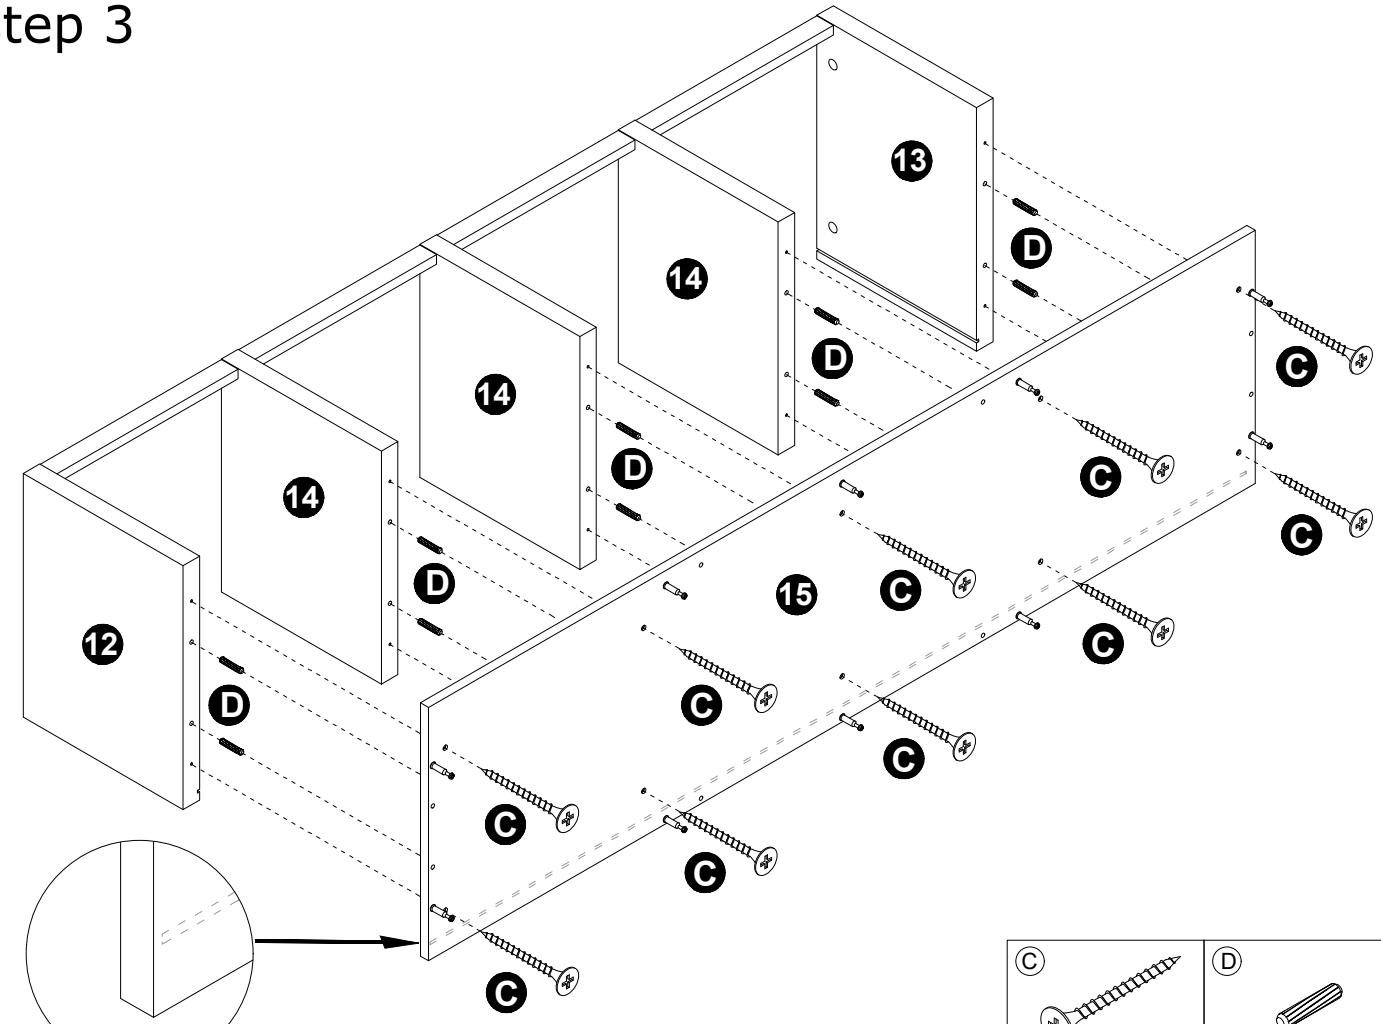
step 3



Please note that when installing board 15, the slot on the board is at the bottom.

C	D
5*50mm Screw x 10	6*30mm Dowel x 10


step 4

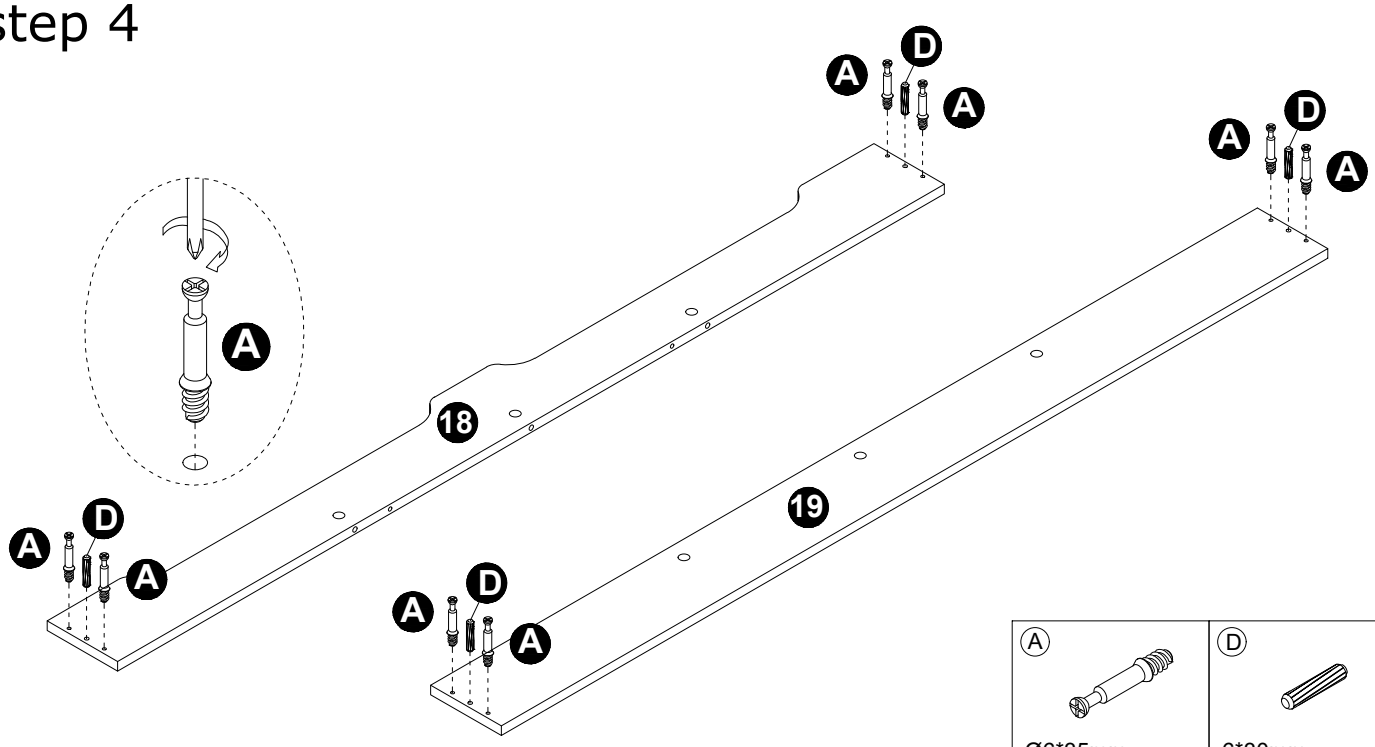


A	D
Ø6*35mm Cam Bolt x 8	6*30mm Dowel x 4

Assembly Instructions


step 5

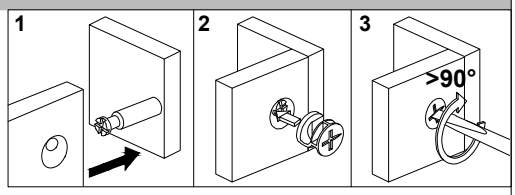


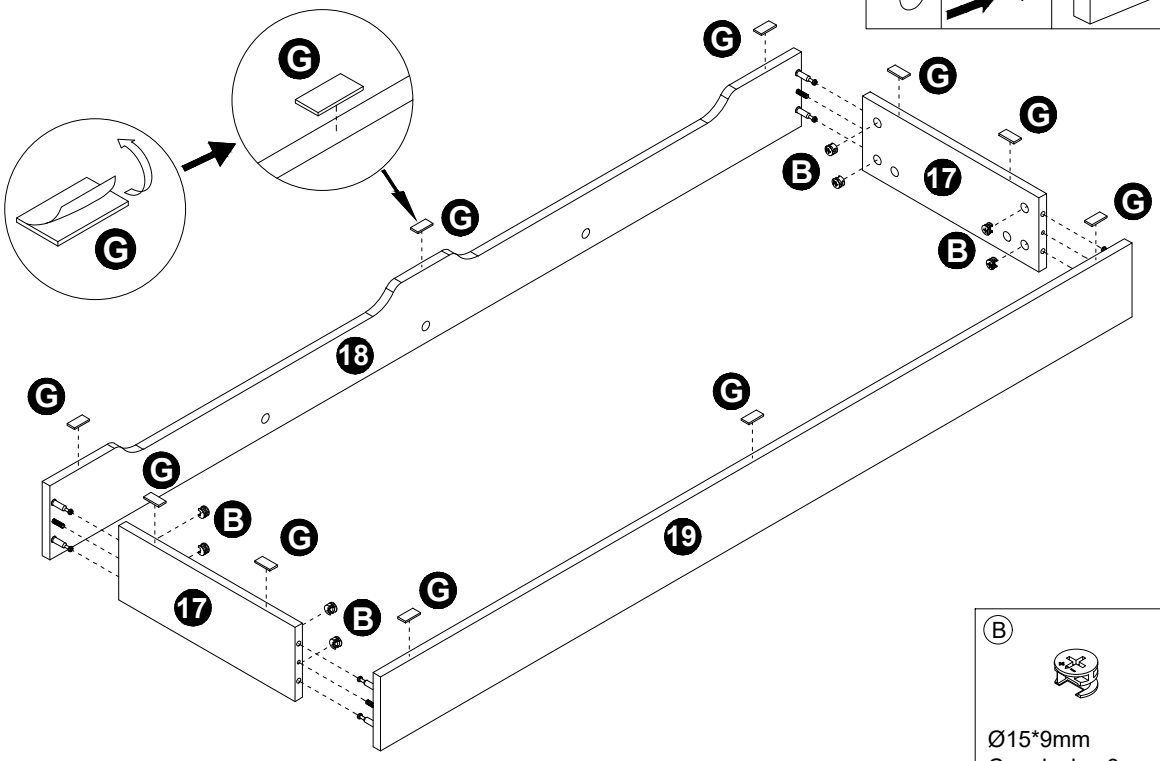

B	G
	
Ø15*9mm Cam lock x 8	30*15mm Non-Slip mat x 10

step 6

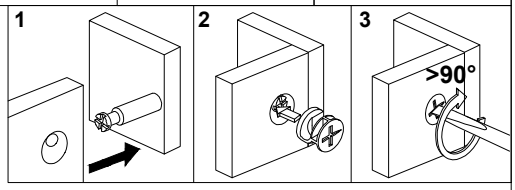


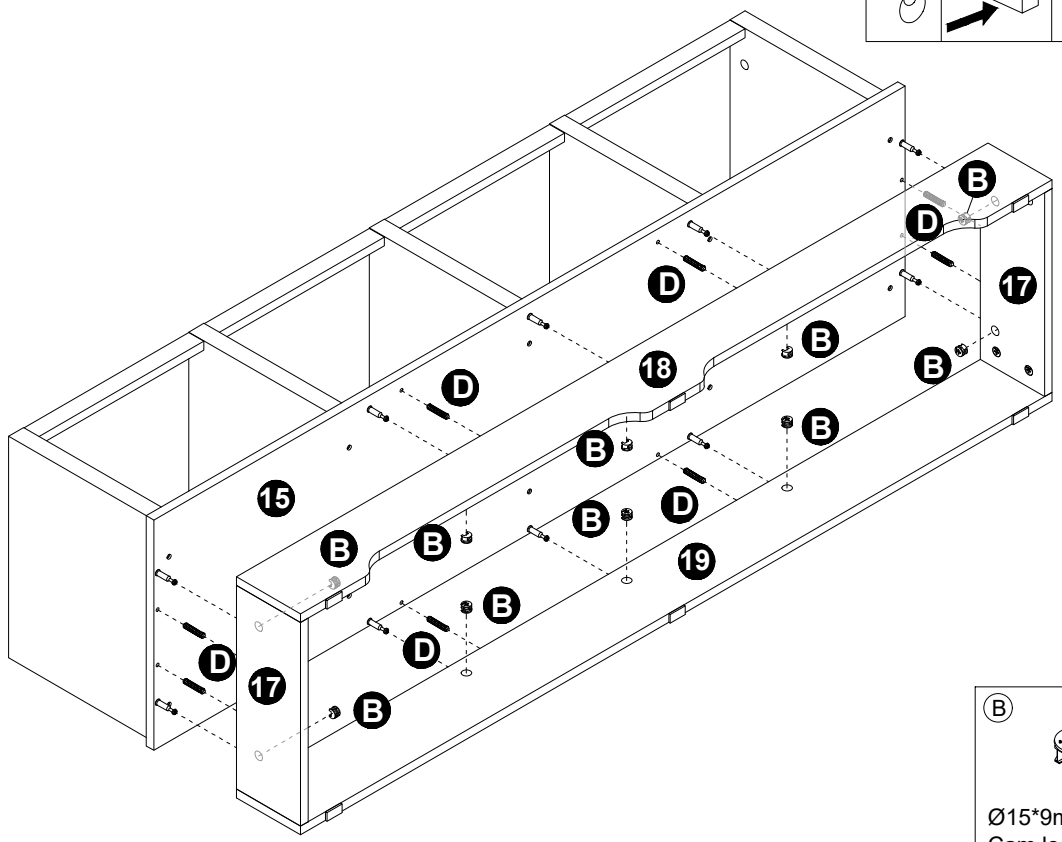

B	D
	
Ø15*9mm Cam lock x 10	6*30mm Dowel x 8

Assembly Instructions

step 7

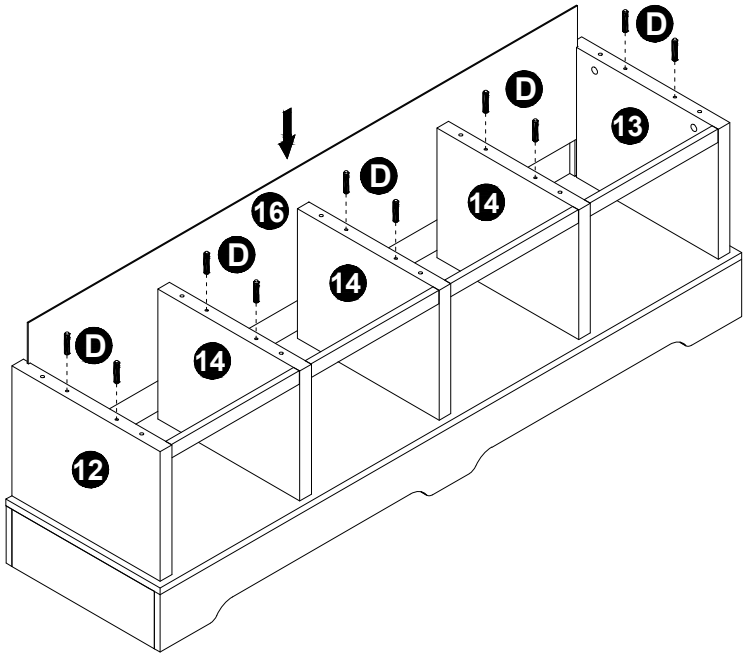


Ⓓ



6*30mm
Dowel x 10

step 8

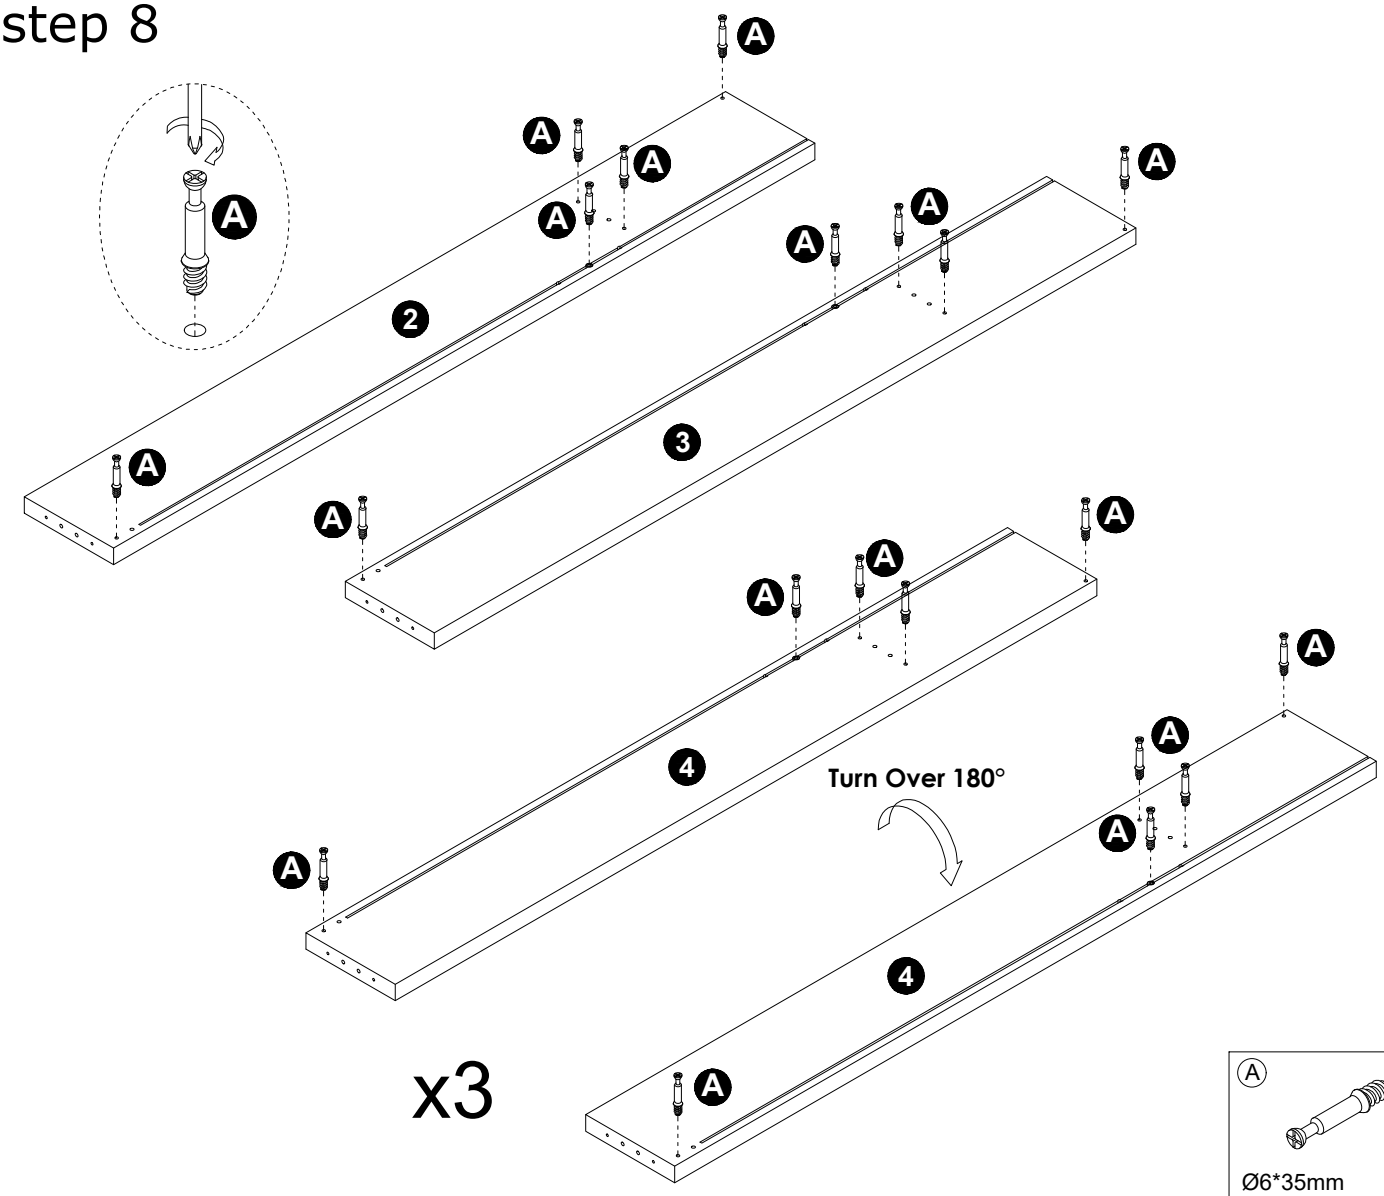



Ⓐ

Ø6*35mm
Cam Bolt x 40

Assembly Instructions

step 9

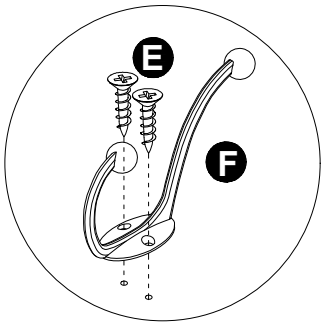


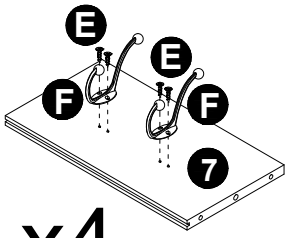

x4


E	F
 3*14mm Screw x 16	 Clothes-Hook x 8

step 10

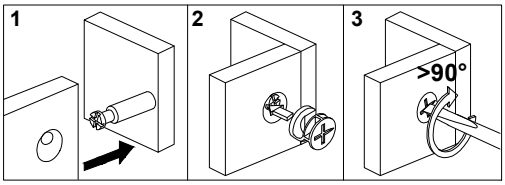

B	D
 Ø15*9mm Cam lock x 5	 6*30mm Dowel x 5


step 11

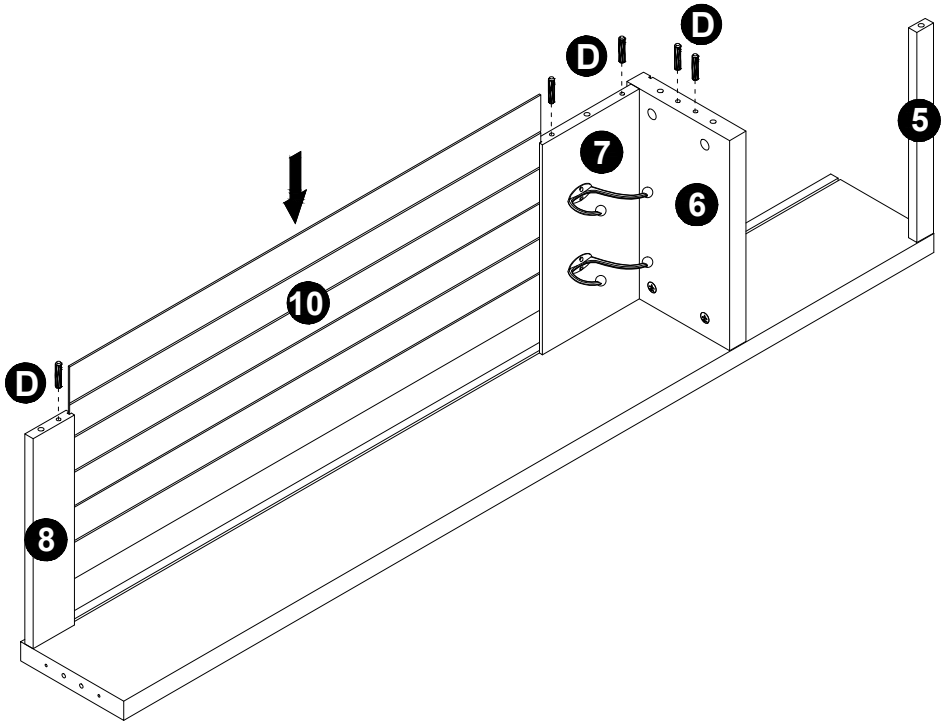

D
 6*30mm Dowel x 5

Assembly Instructions

step 12

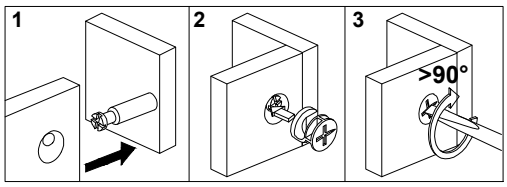


B



Ø15*9mm
Cam lock x 5

step 13

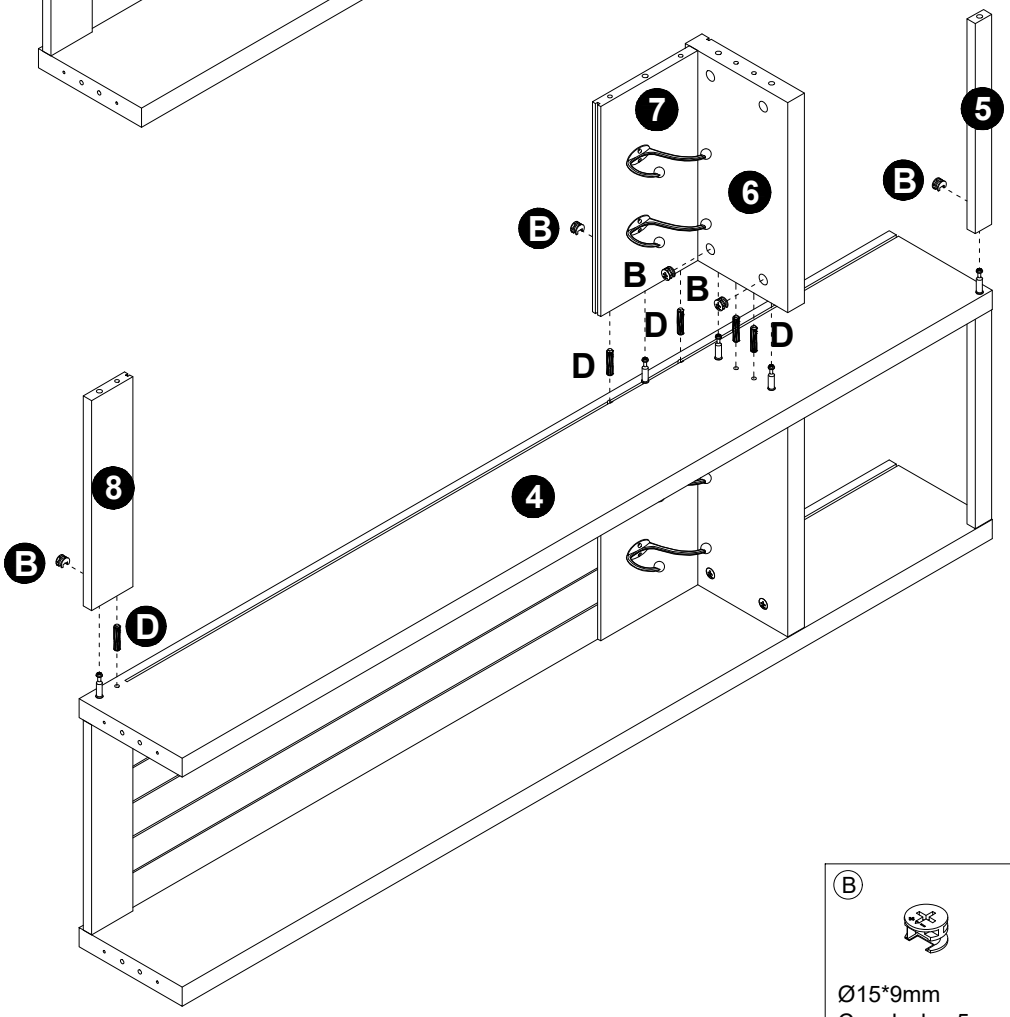

B

Ø15*9mm
Cam lock x 5


D




6*30mm
Dowel x 5


Assembly Instructions

step 14

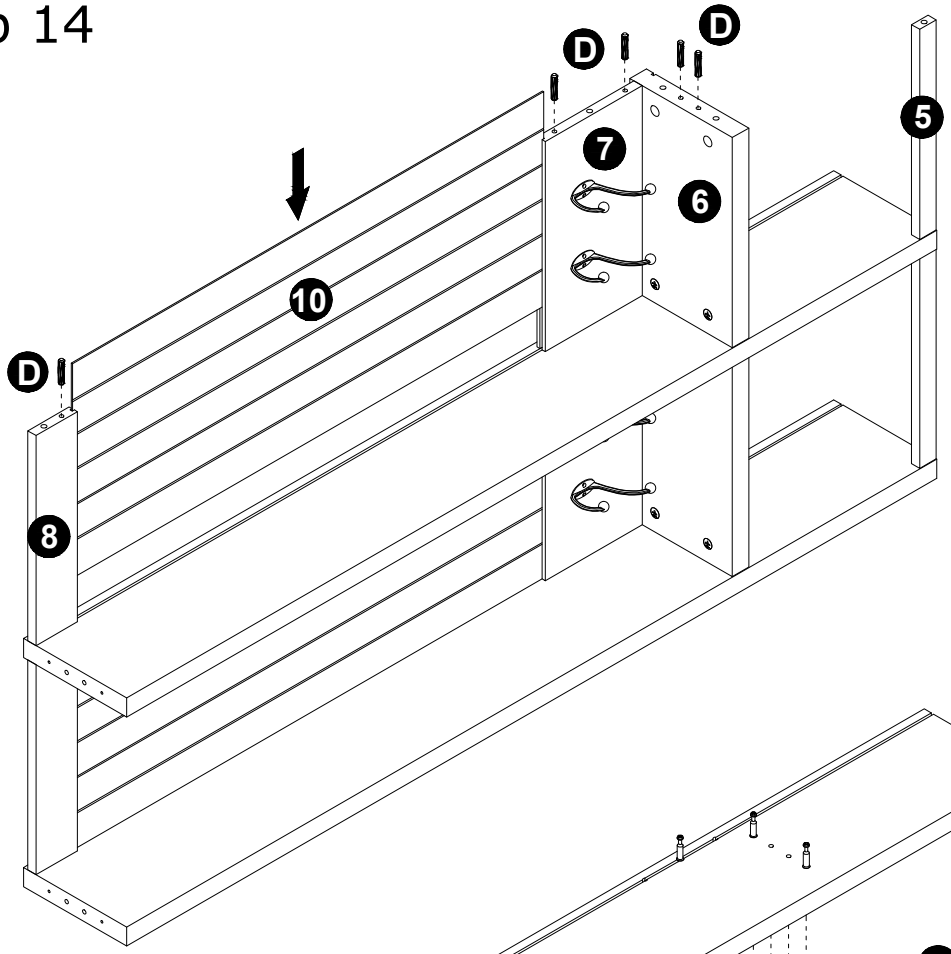

step 15

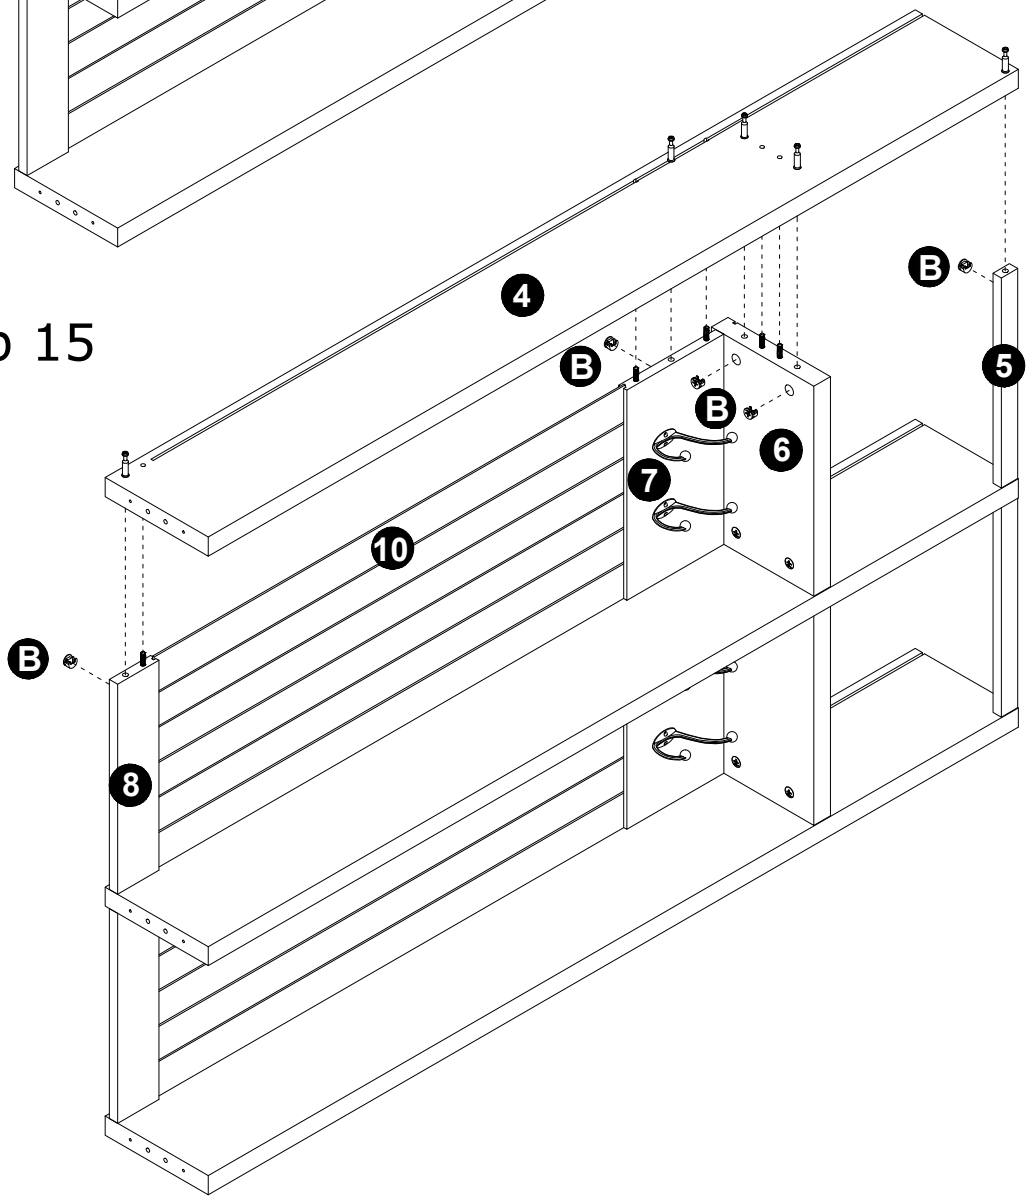

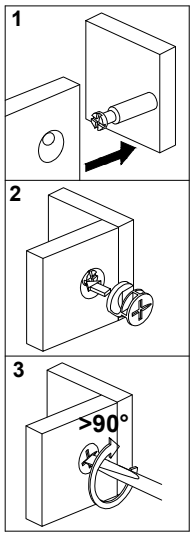

Ⓓ



6*30mm
Dowel x 5


Ⓑ



Ø15*9mm
Cam lock x 5

Assembly Instructions

step 16

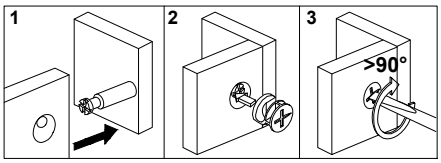

Ⓑ




Ø15*9mm
Cam lock x 5

Ⓓ



6*30mm
Dowel x 5

step 17

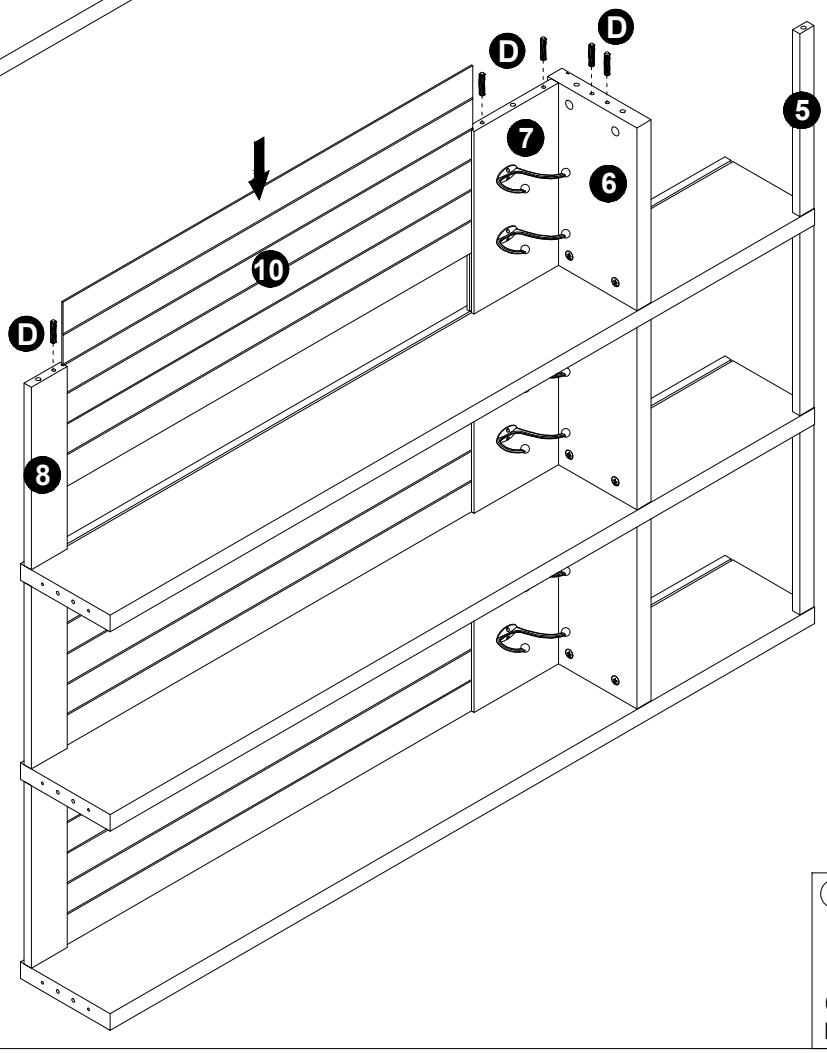


Ⓓ



6*30mm
Dowel x 5

Assembly Instructions

step 18

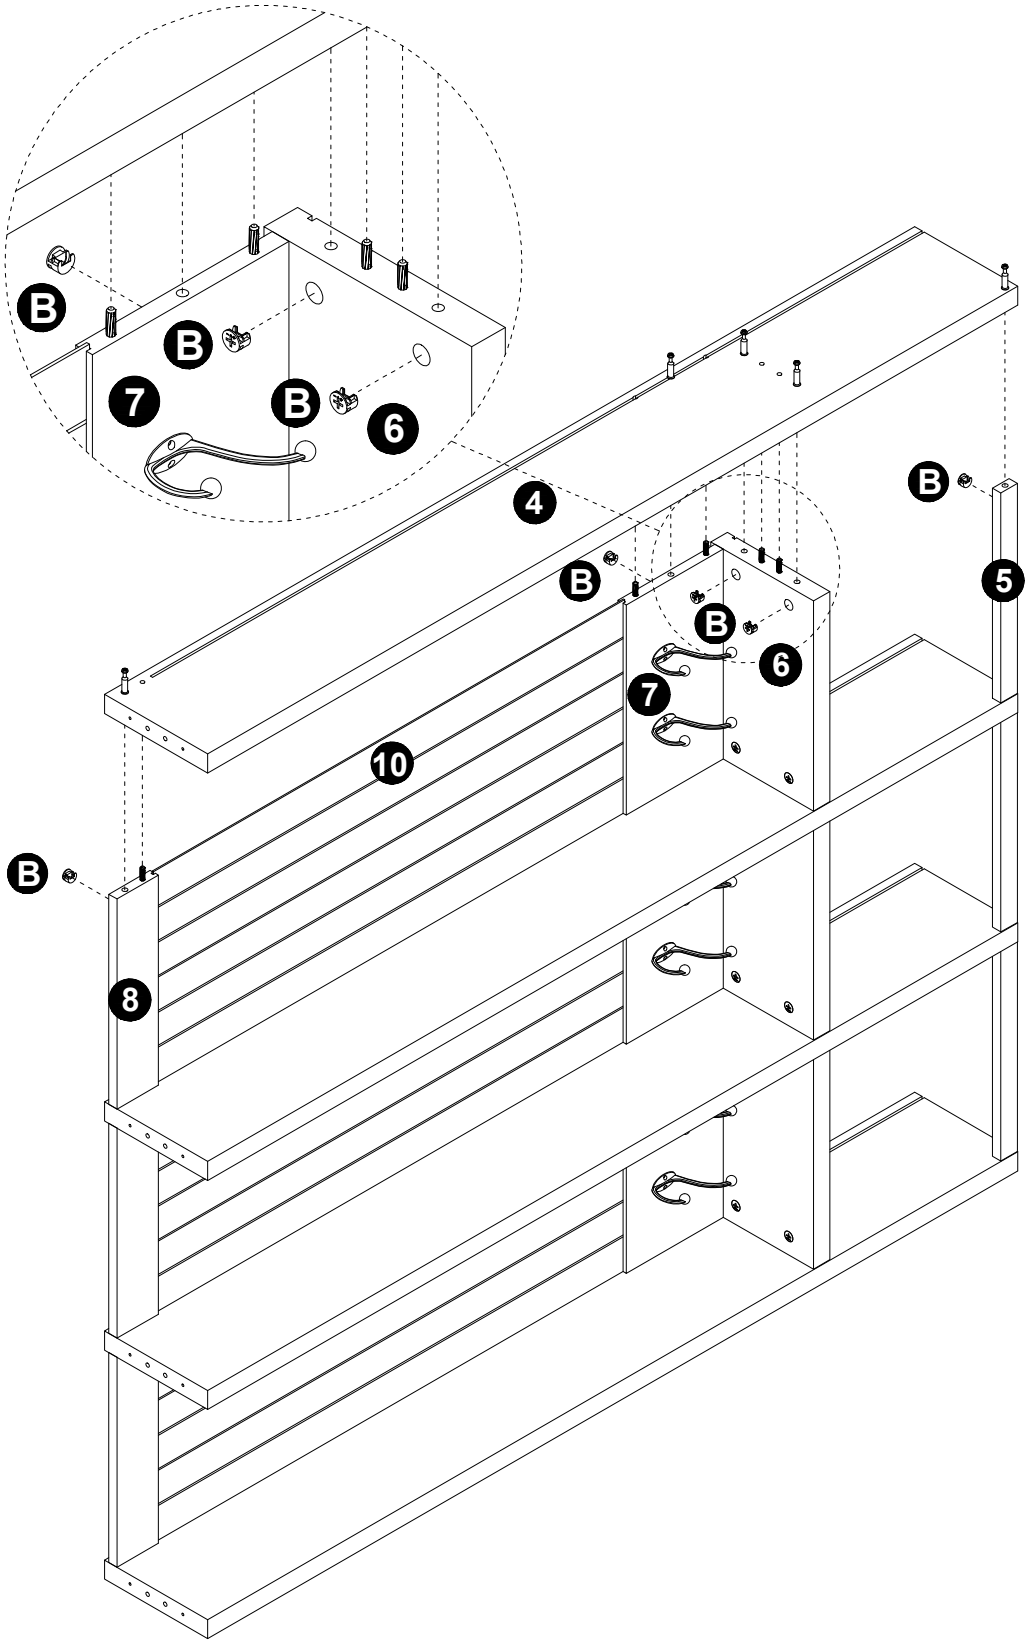


Ⓑ




Ø15*9mm
Cam lock x 5

Assembly Instructions

step 19

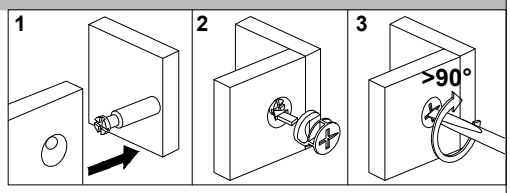


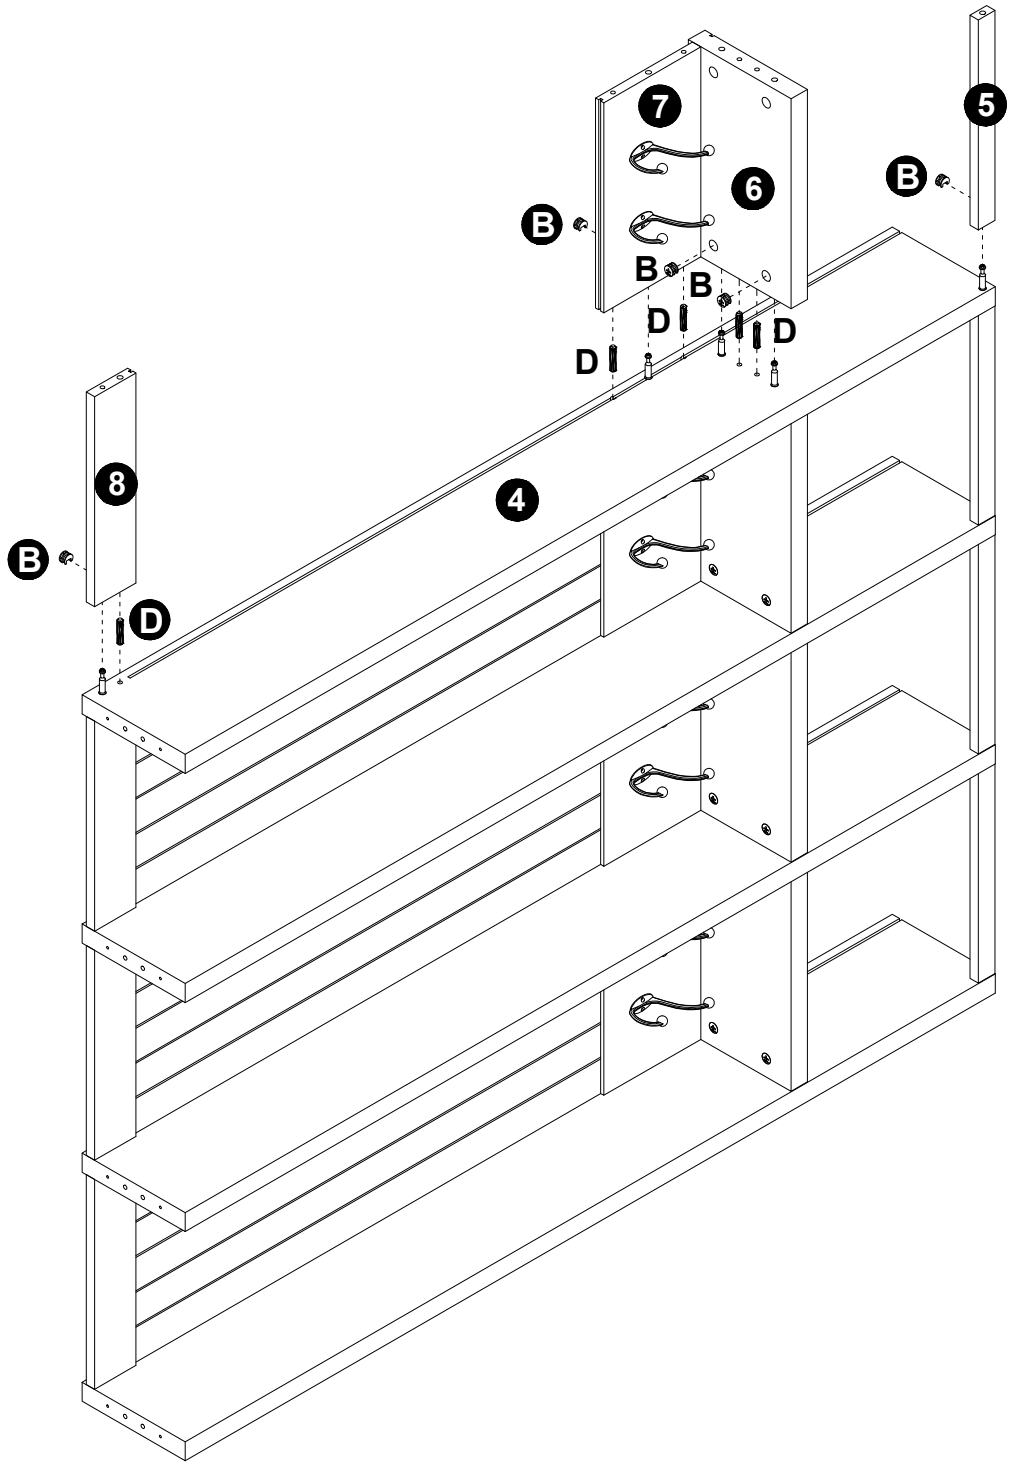

B	D
	
Ø15*9mm Cam lock x 5	6*30mm Dowel x 5

Assembly Instructions

step 20

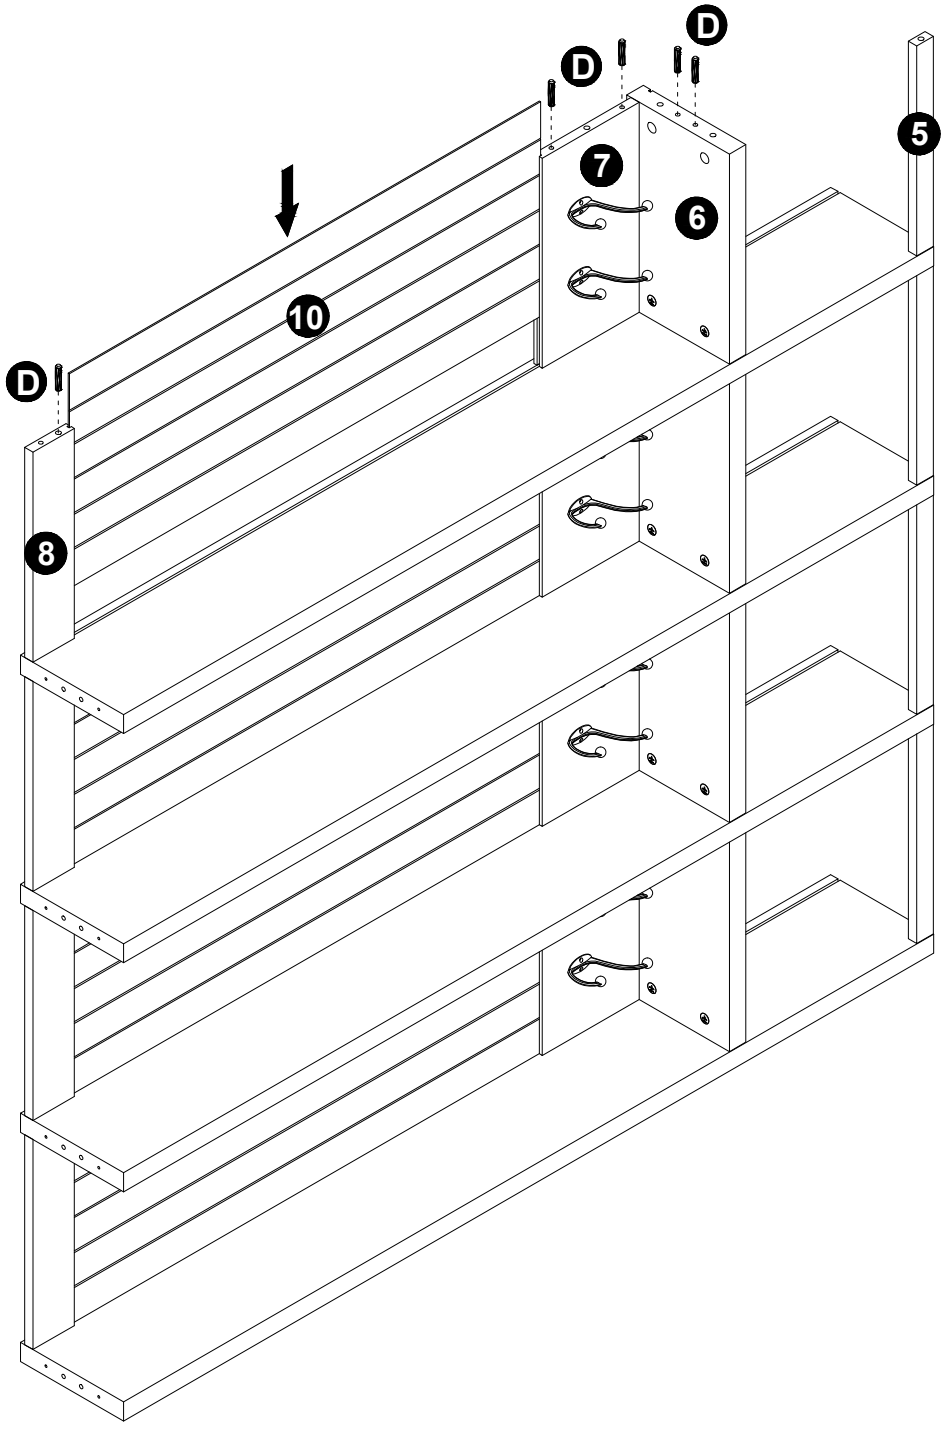


Ⓓ



6*30mm
Dowel x 5

Assembly Instructions

step 21

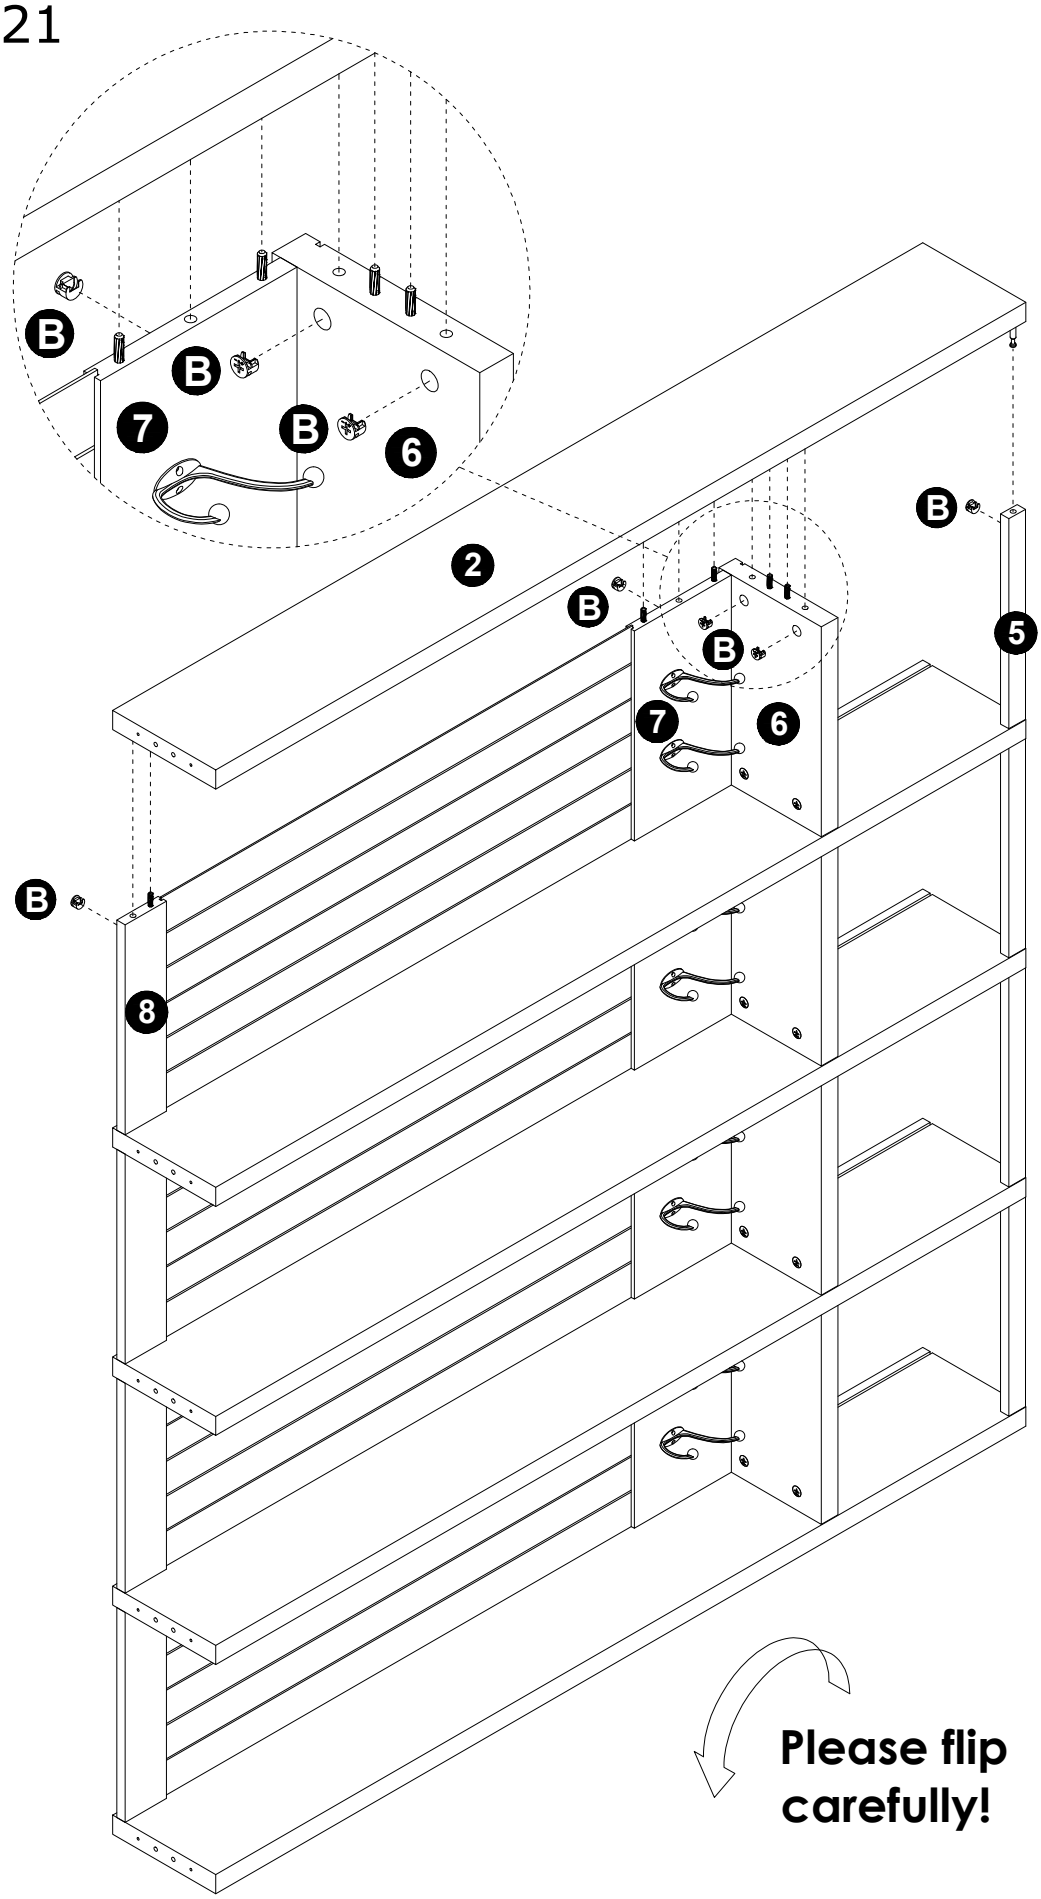


Ⓑ



Ø15*9mm
Cam lock x 5

Assembly Instructions

step 22

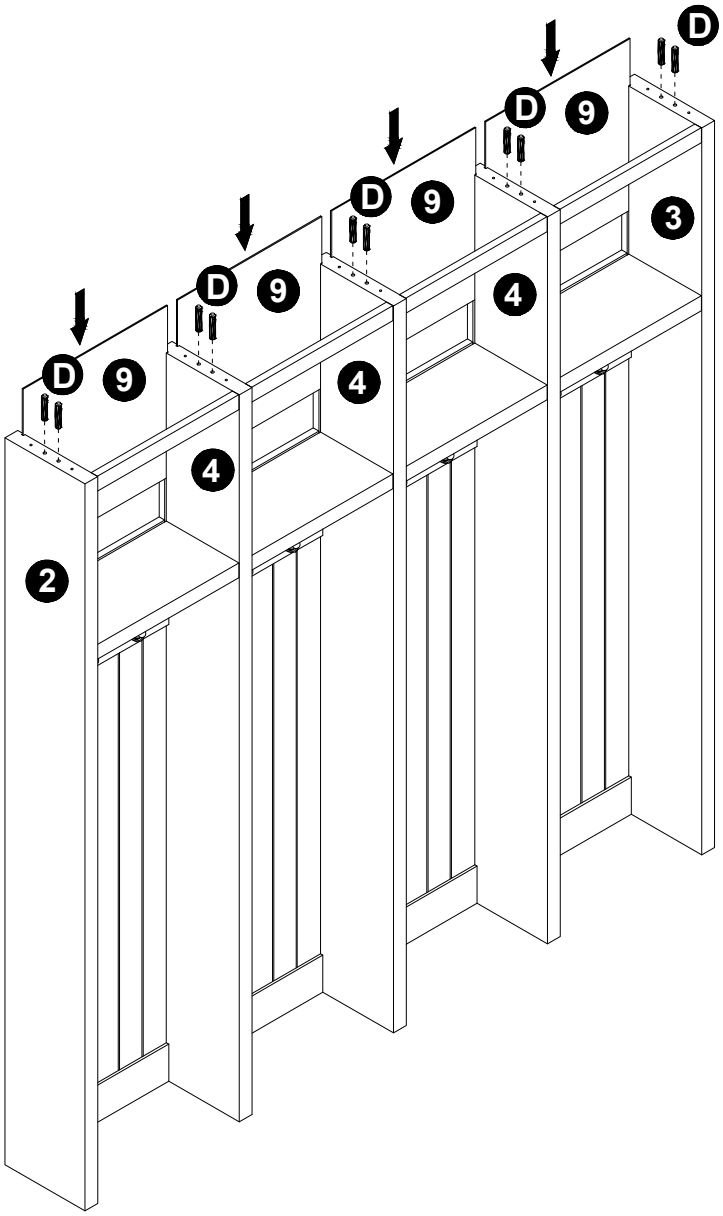


Ⓓ



6*30mm
Dowel x 10

step 23

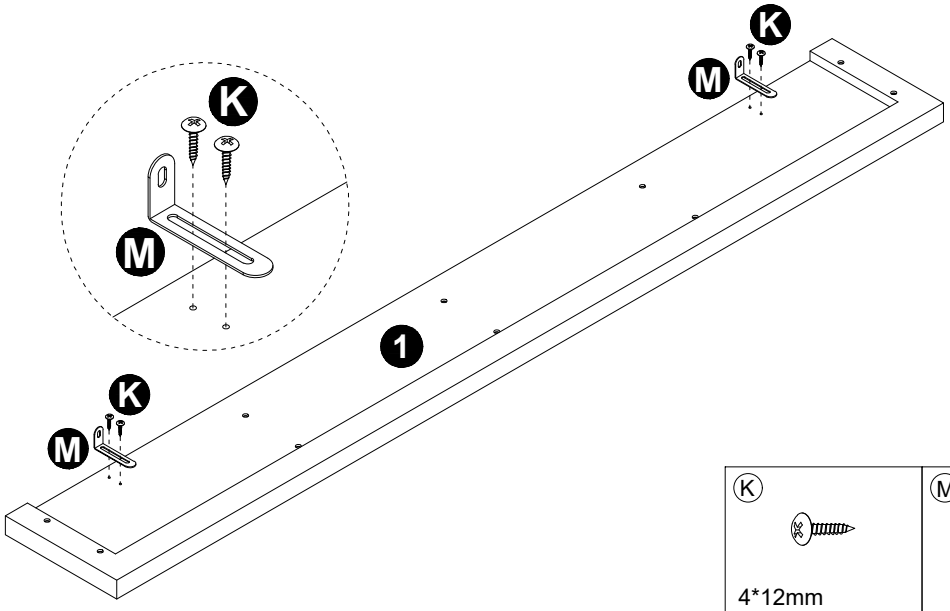

Ⓚ

4*12mm
Screw x 4


Ⓜ



Iron sheet x 2

Assembly Instructions

step 24

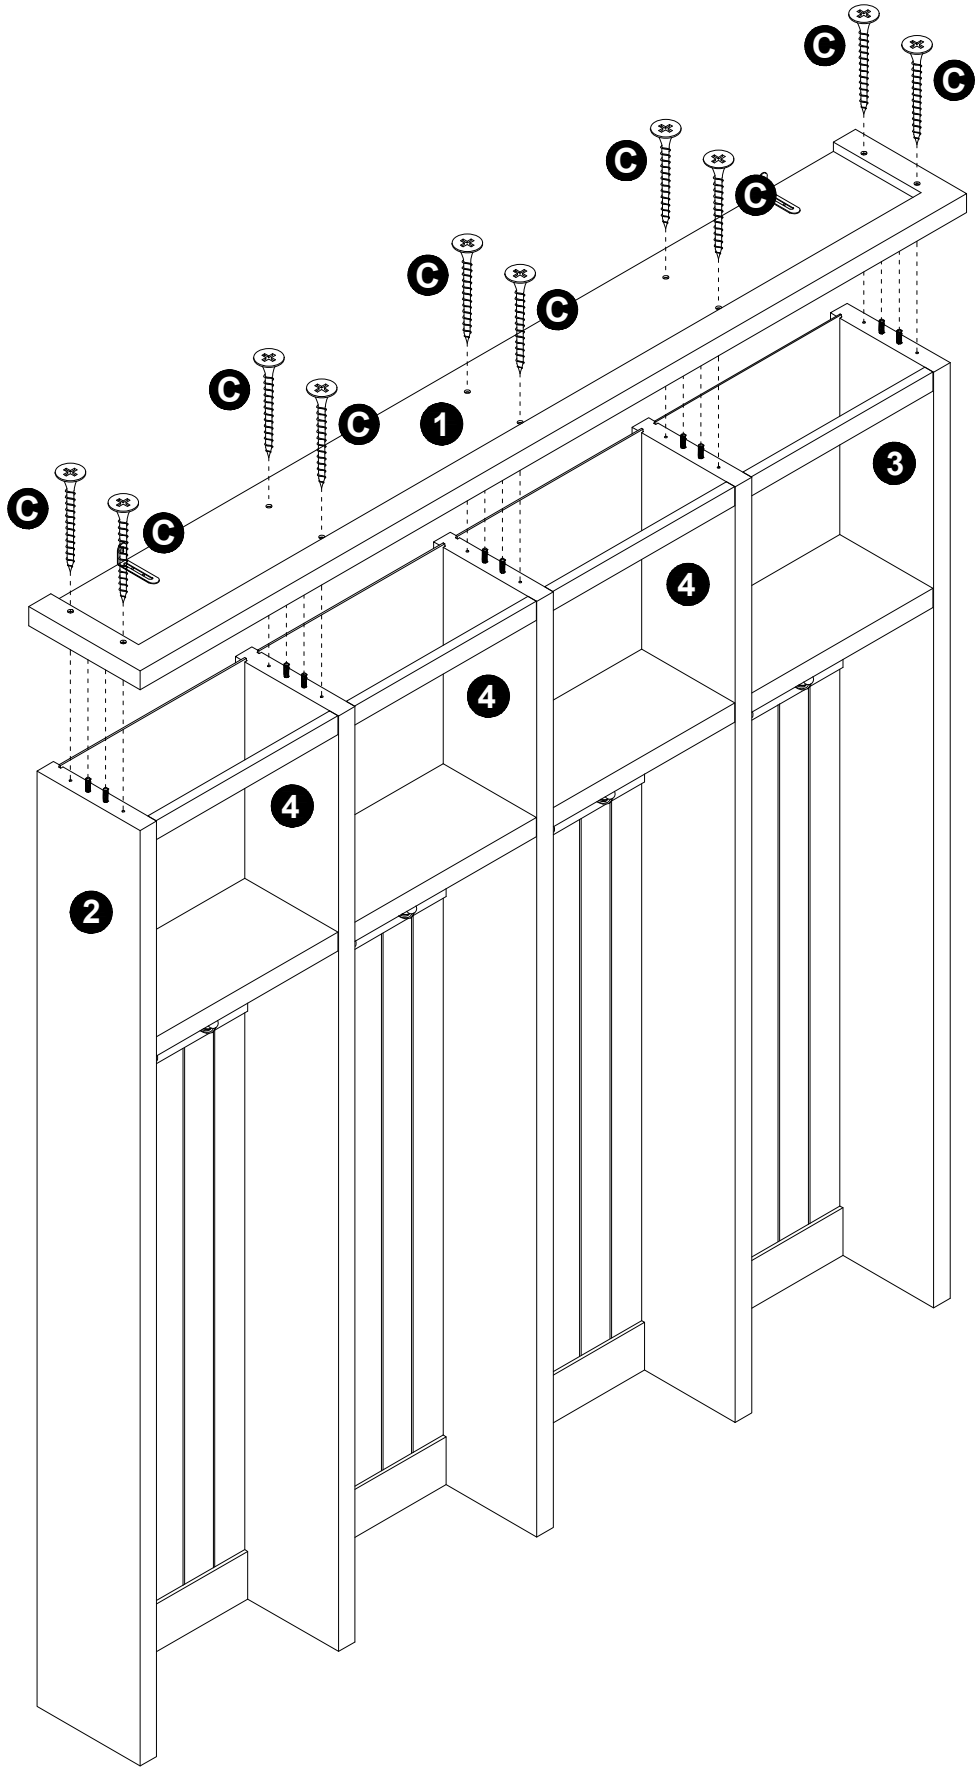


Ⓒ

5*50mm
Screw x 10

Assembly Instructions


step 25

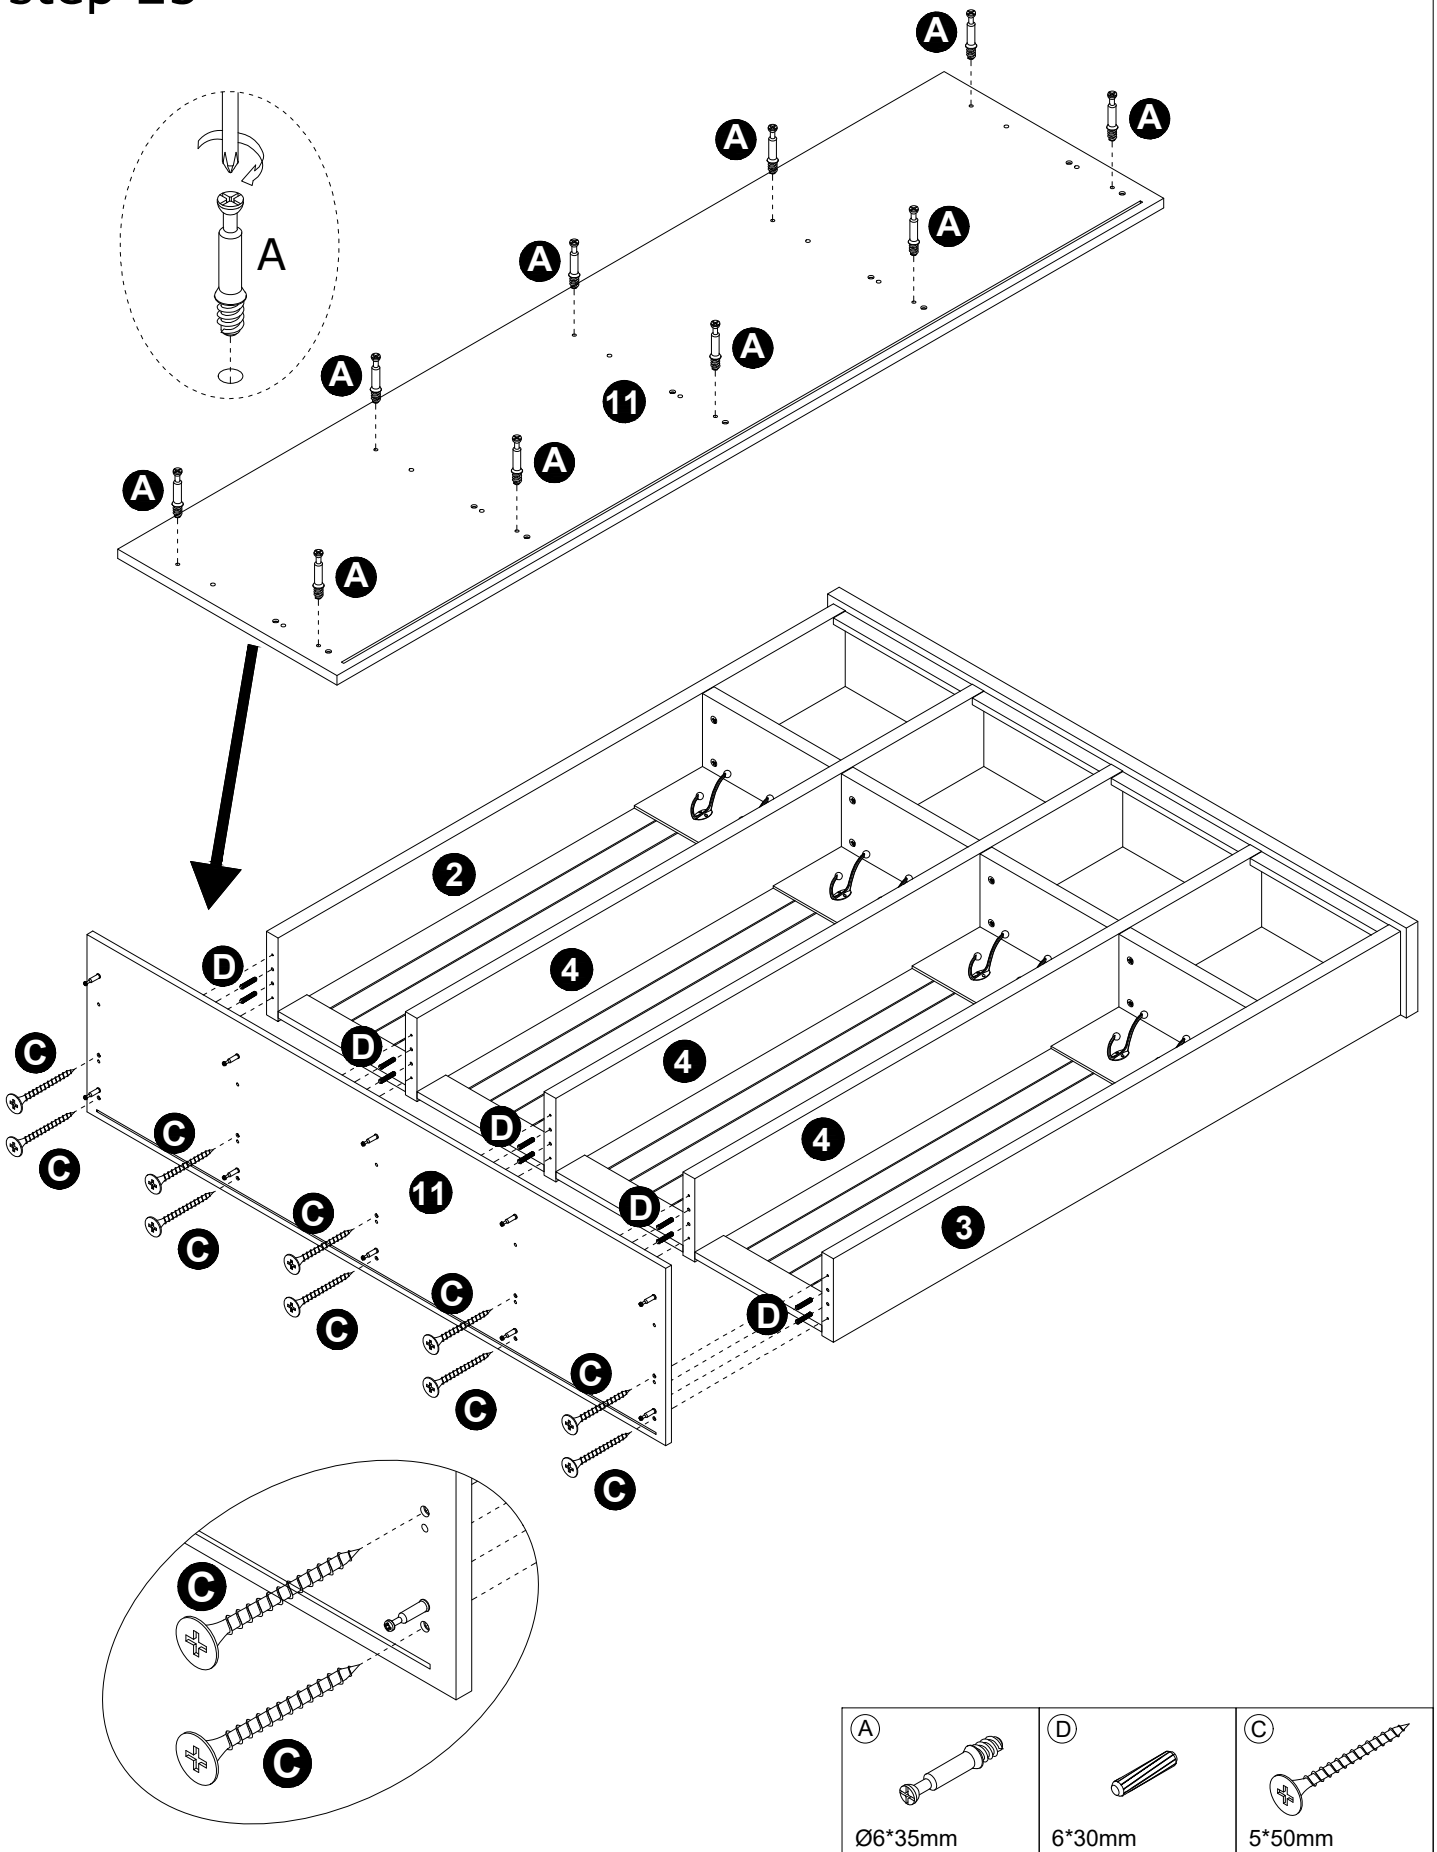


Ⓐ	Ⓓ	Ⓒ
Ø6*35mm Cam Bolt x 10	6*30mm Dowel x 10	5*50mm Screw x 10

Assembly Instructions

step 26

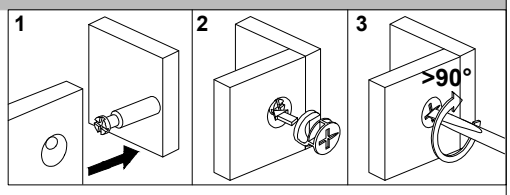

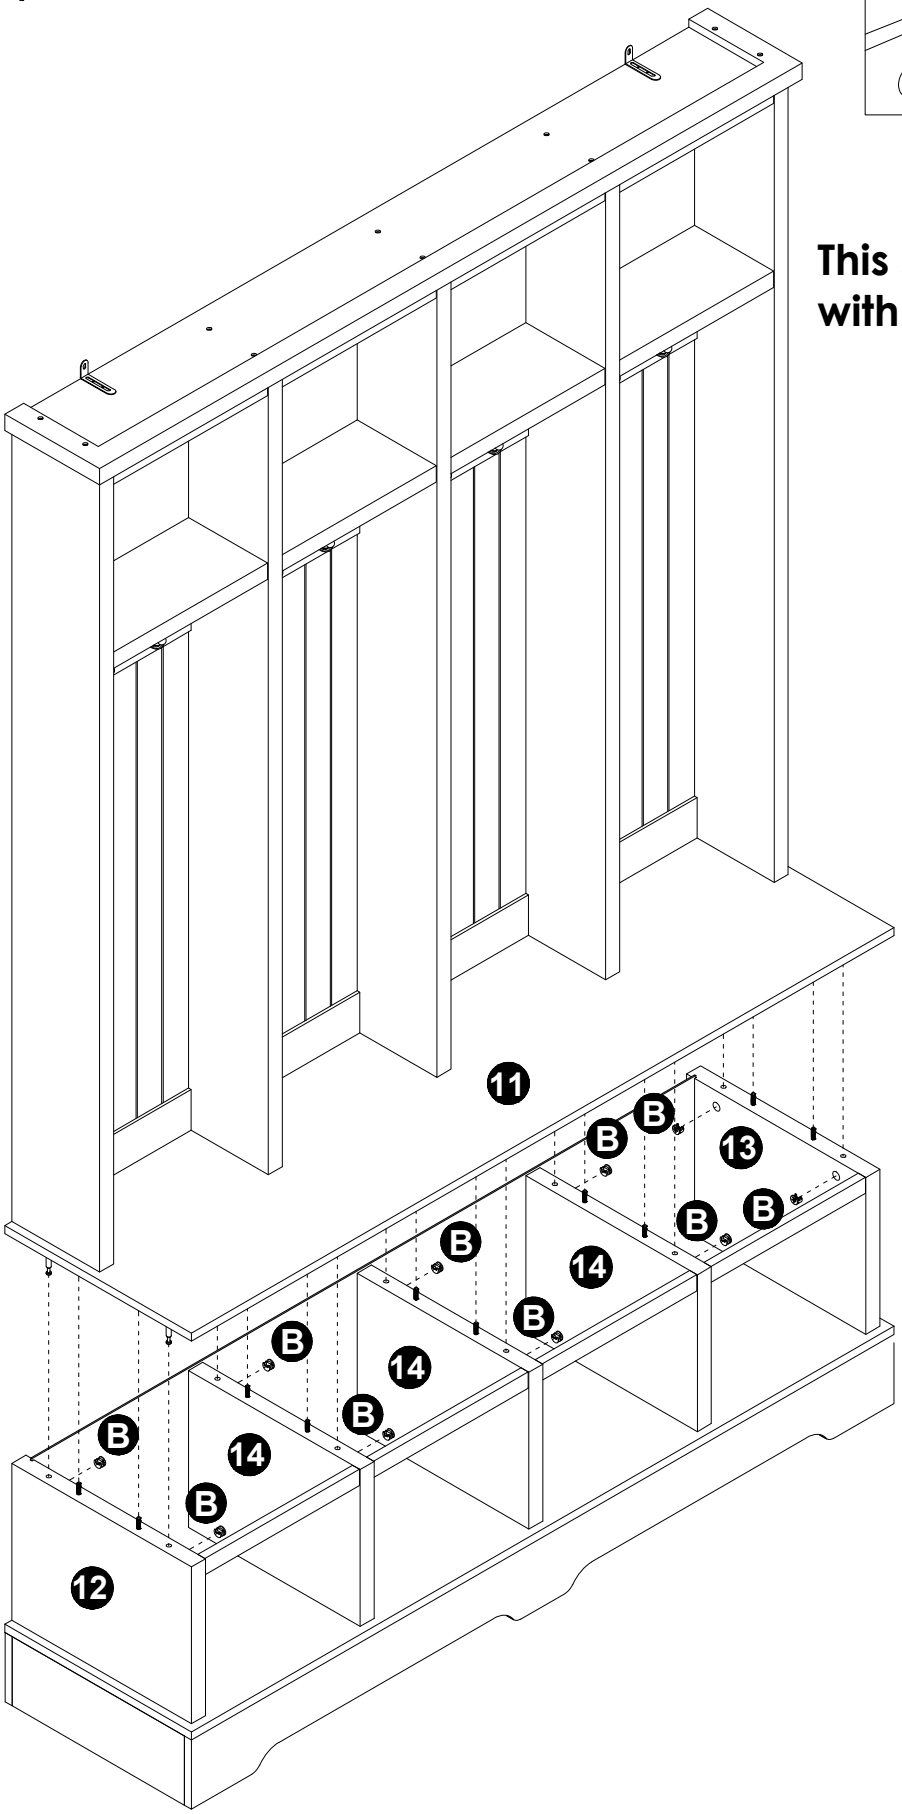

This step is best done with two or more people.


Ⓑ



Ø15*9mm
Cam lock x 10

Assembly Instructions


step 27

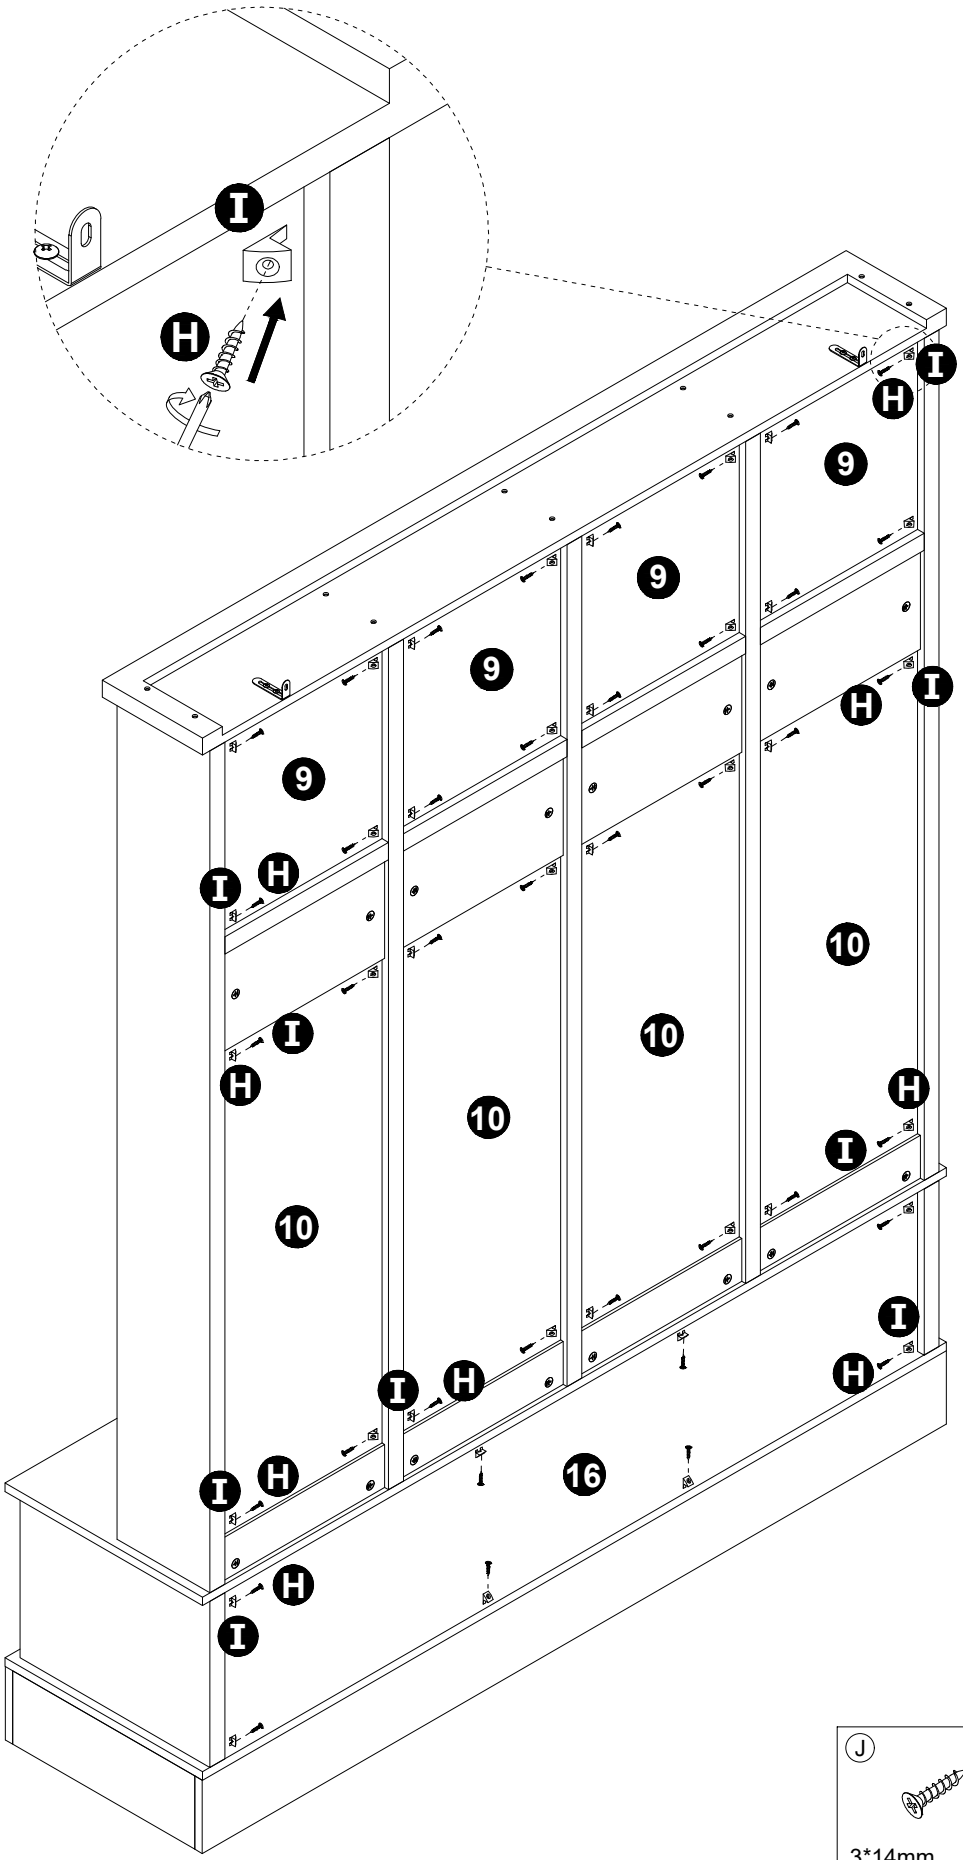

Ⓙ	Ⓚ
3*14mm Screw x 40	Plastic Nail x 40

Assembly Instructions

step 28

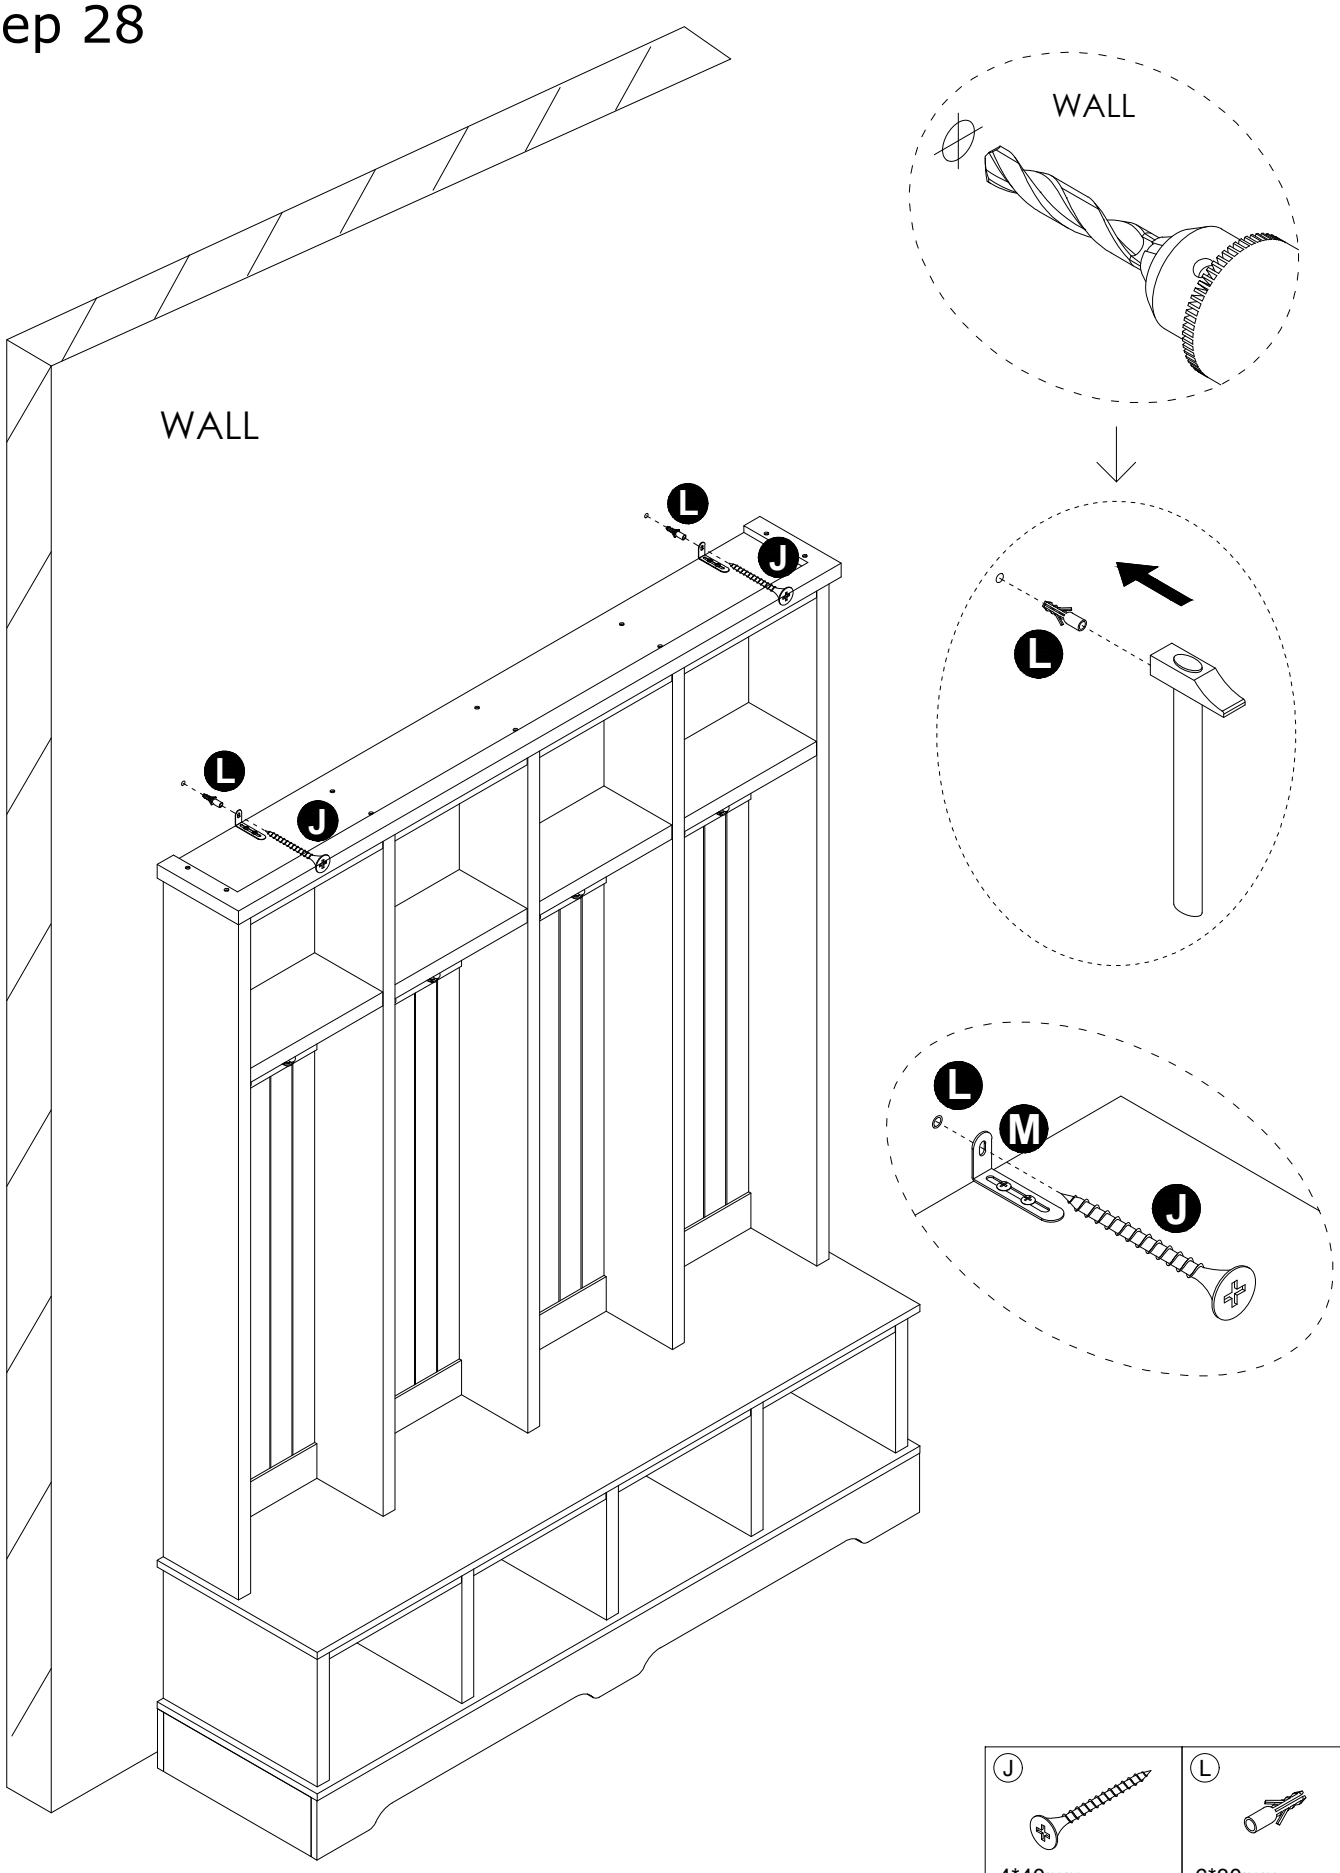

J	L
4*40mm Screw x 2	6*30mm Wall Anchor x 2