

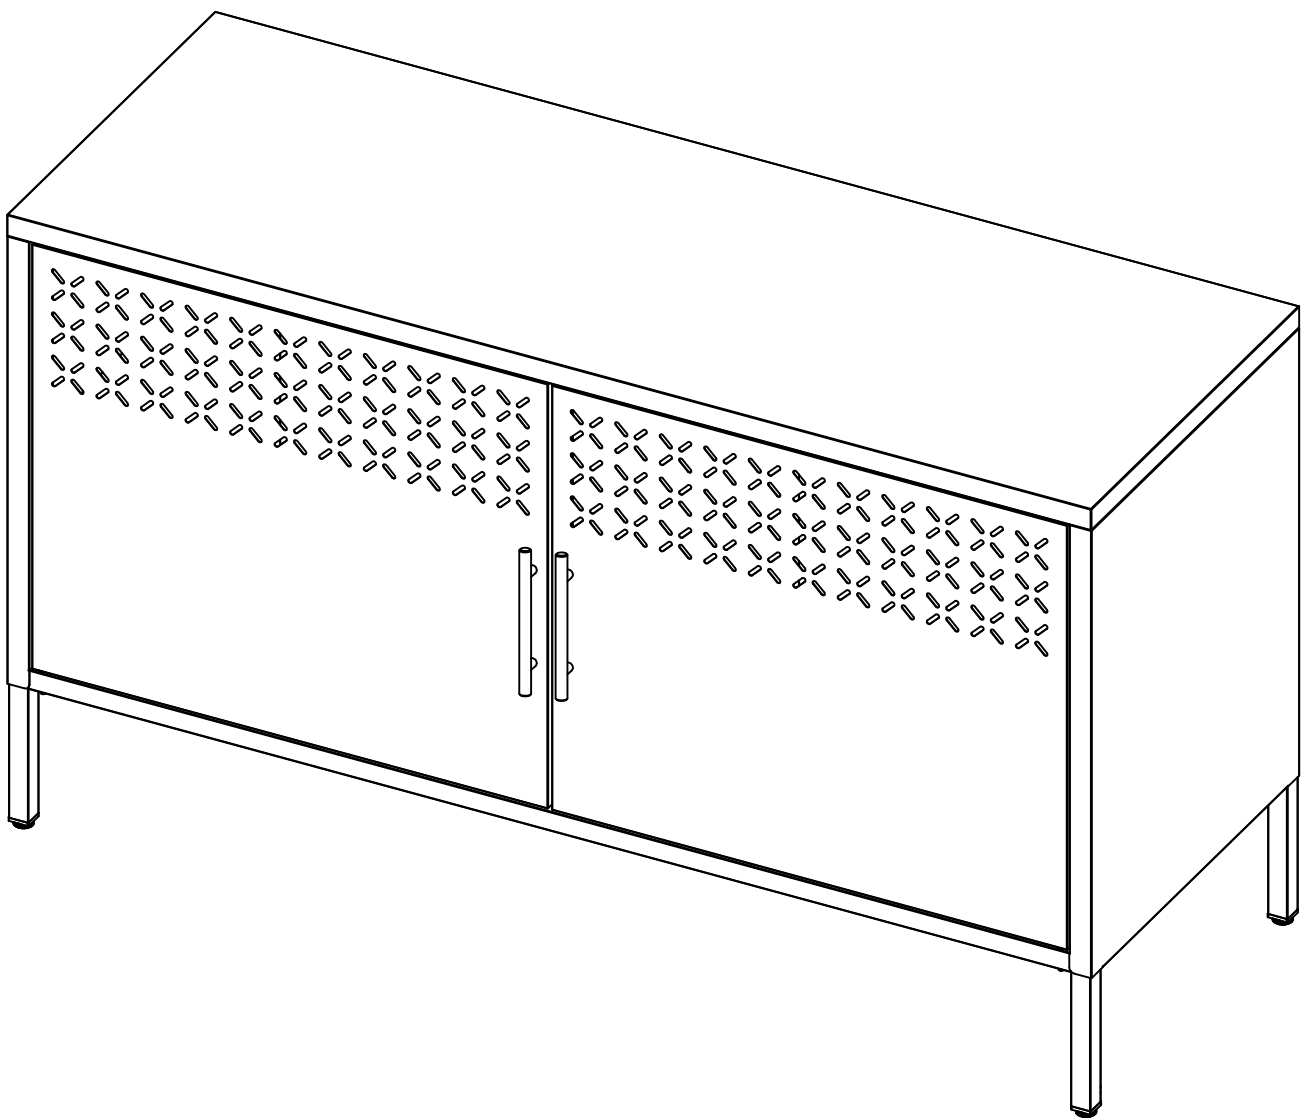
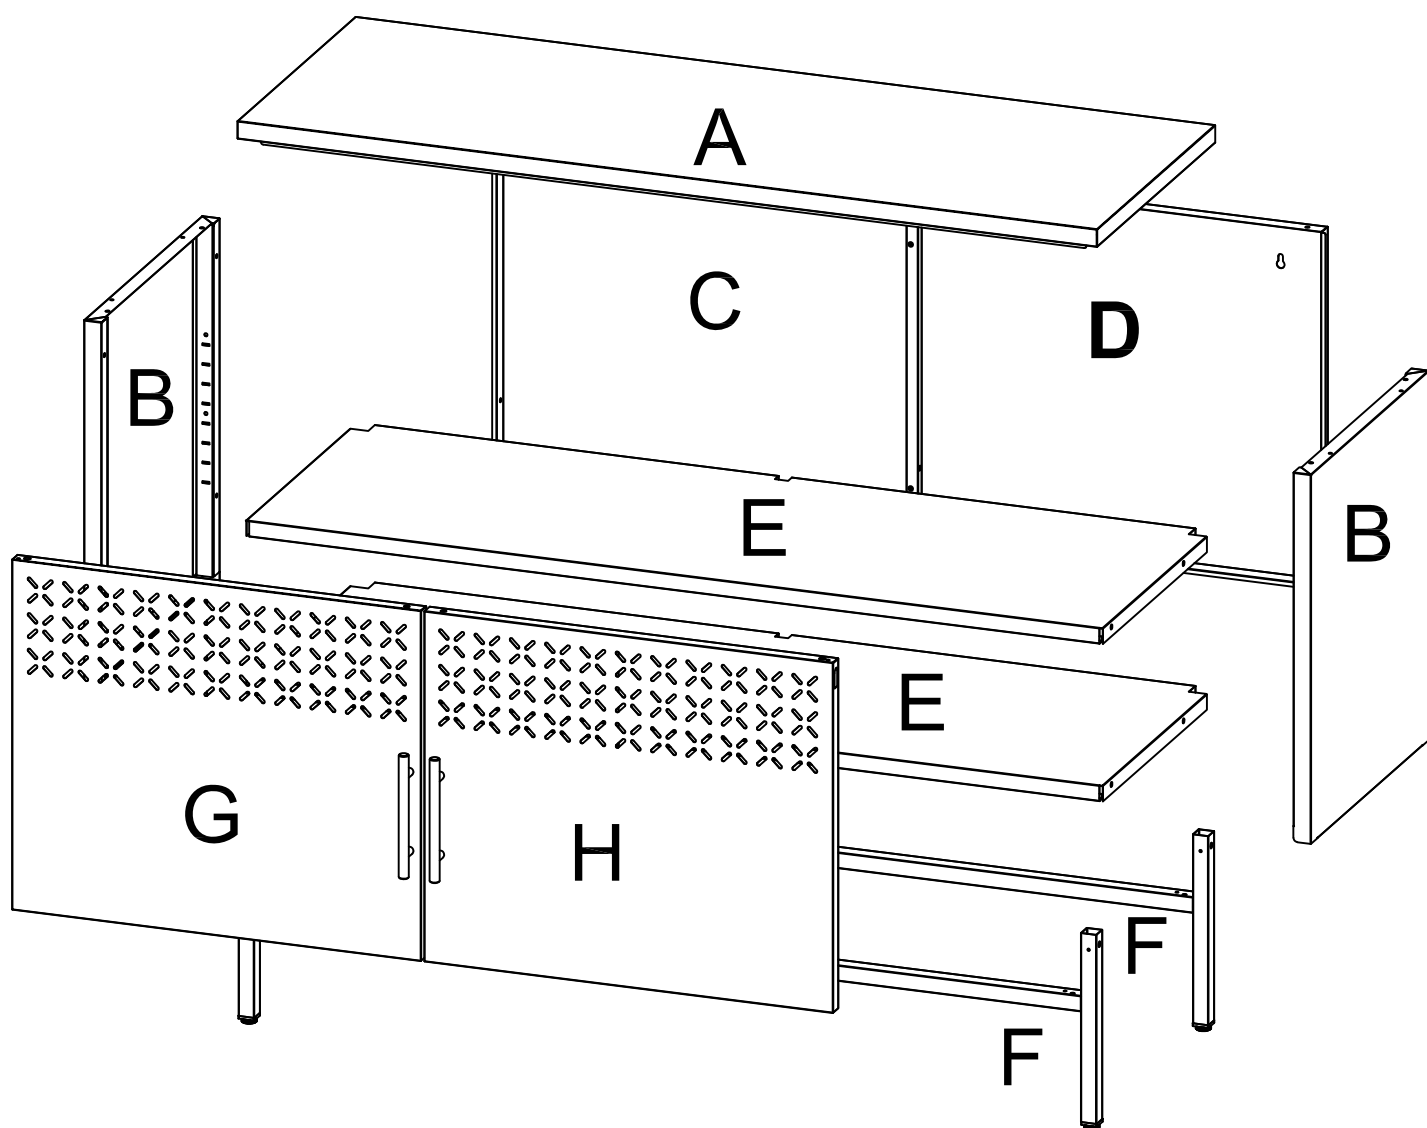

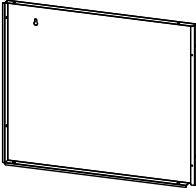
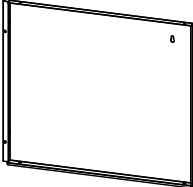


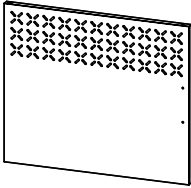


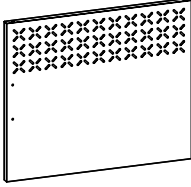




PARTS LIST				LISTE DES PIÈCES				LISTE DE PIEZAS			
Nom Nombre		Part Piece Pieza	Qty Qte	Spare Epargner Sobrante	Nom Nombre		Part Piece Pieza	Qty Qte	Spare Epargner Sobrante		
A	Top panel		1		K	Door pivot		2			
B	Side panel		2		L	Shock-absorbing pad		4			
C	Left back panel		1		M	Magnet		4			
D	Right back panel		1		N	Shelf support		4			
E	Base panel Partition panel		2		O	Expansion screw		2			
F	Lower frame		2			Screwdriver		1			
G	Left door panel		1			Gloves		1			
H	Right door panel		1								
I	Screw		24								
G	Handles and matching screws		2								


1

When installing, please note that you need to adjust the bottom frame so that the door shaft hole points upwards, and ensure that the near end face of the hole is on the outside of the cabinet.

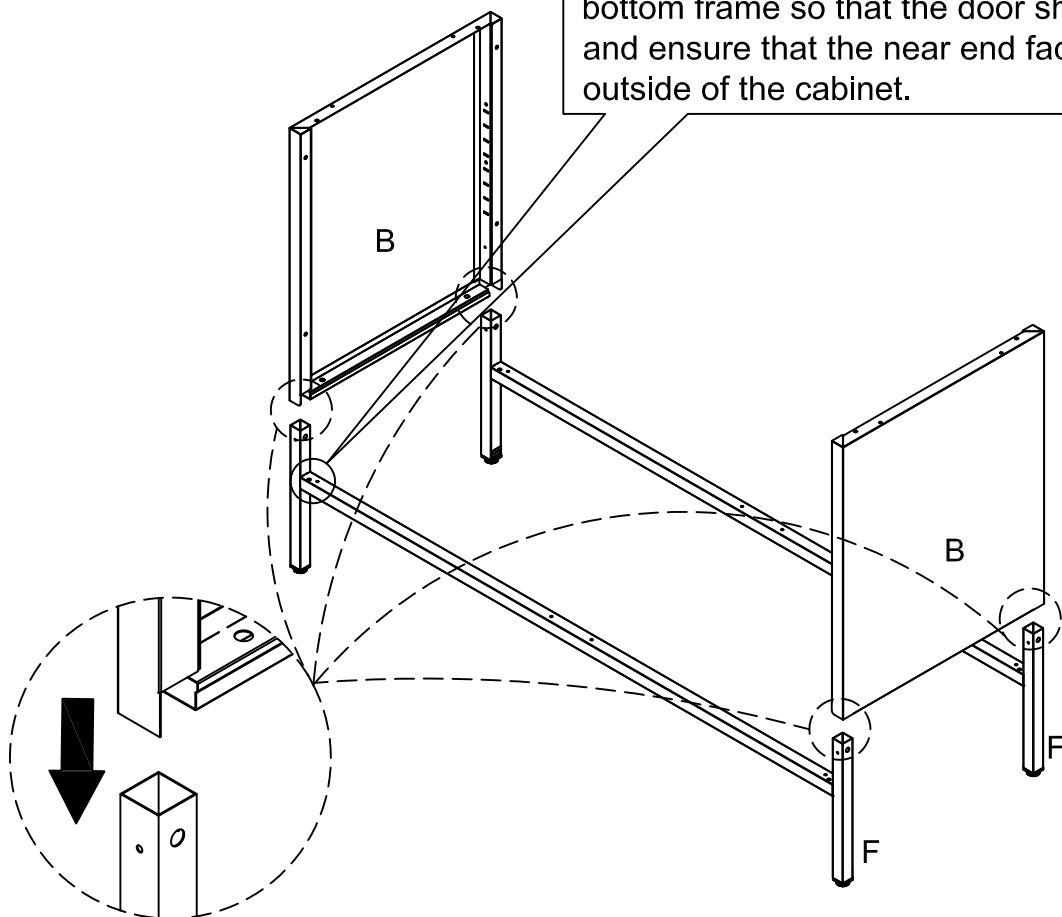

2

Connect the two side panels and the bottom frame together

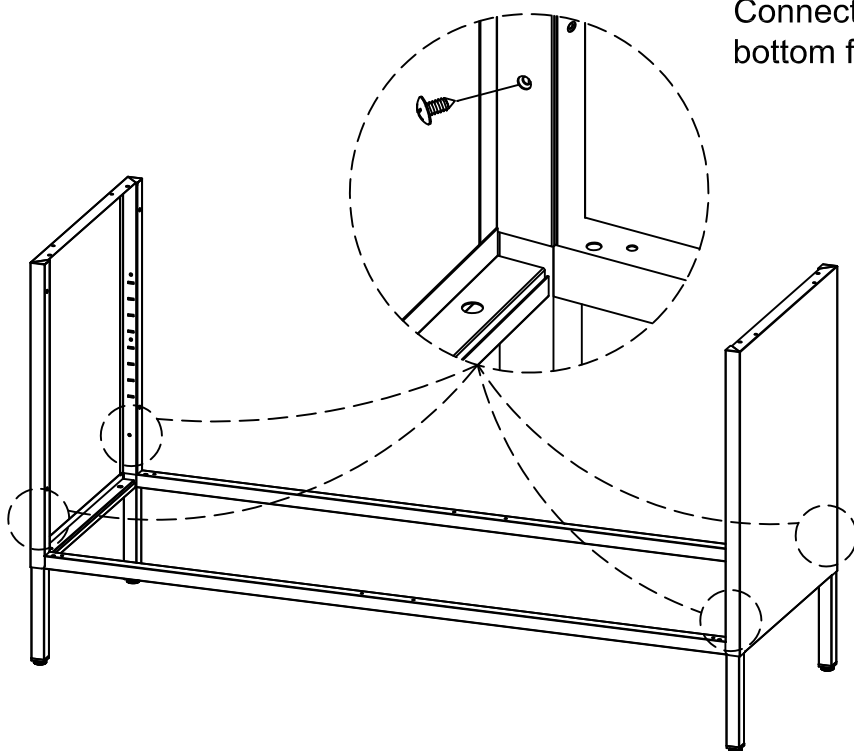


1 x 4




3

Follow the instructions to attach the two rear covers together and secure them with screws.

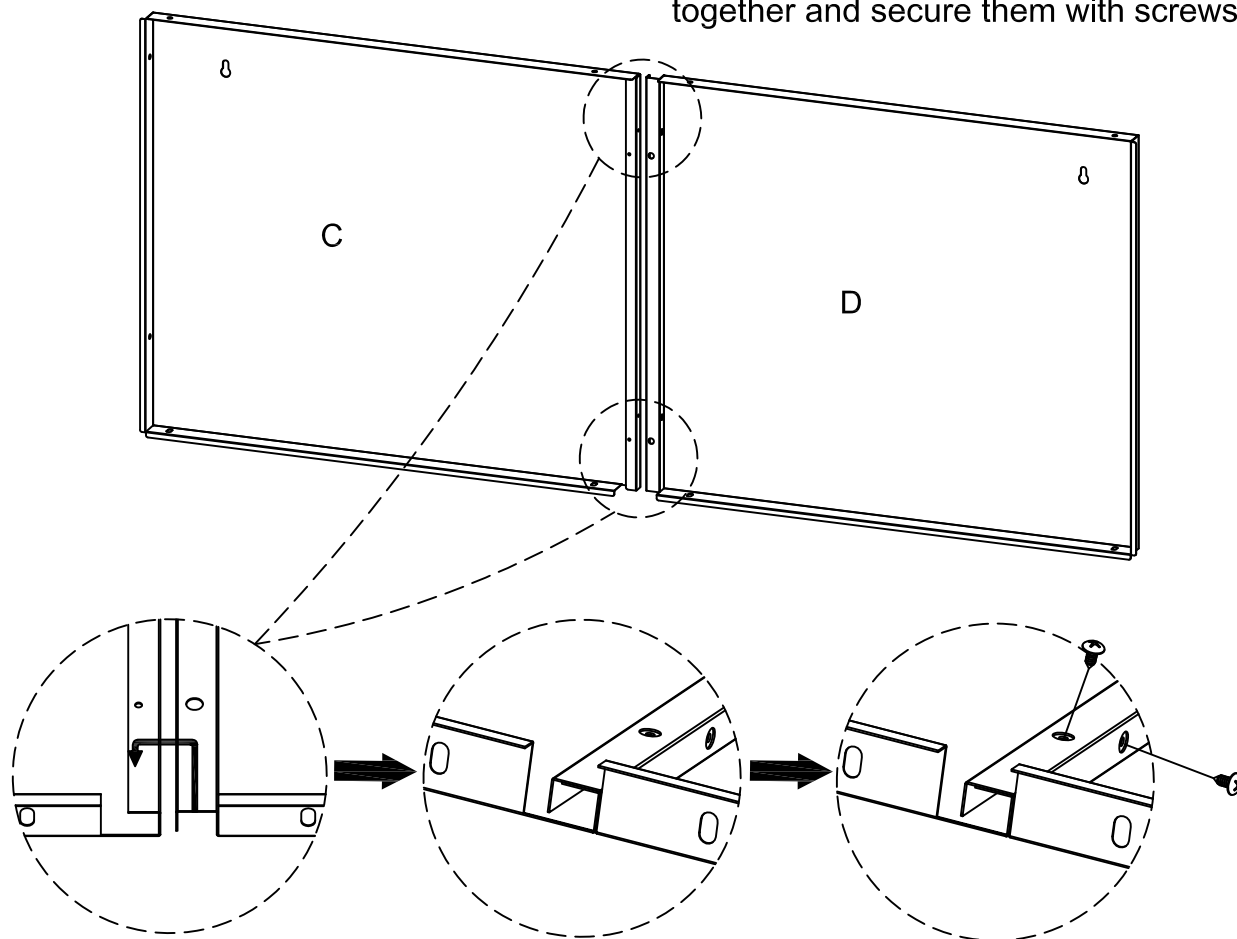


4



Connect and fasten the back panel, the bottom frame, and the two side panels together.

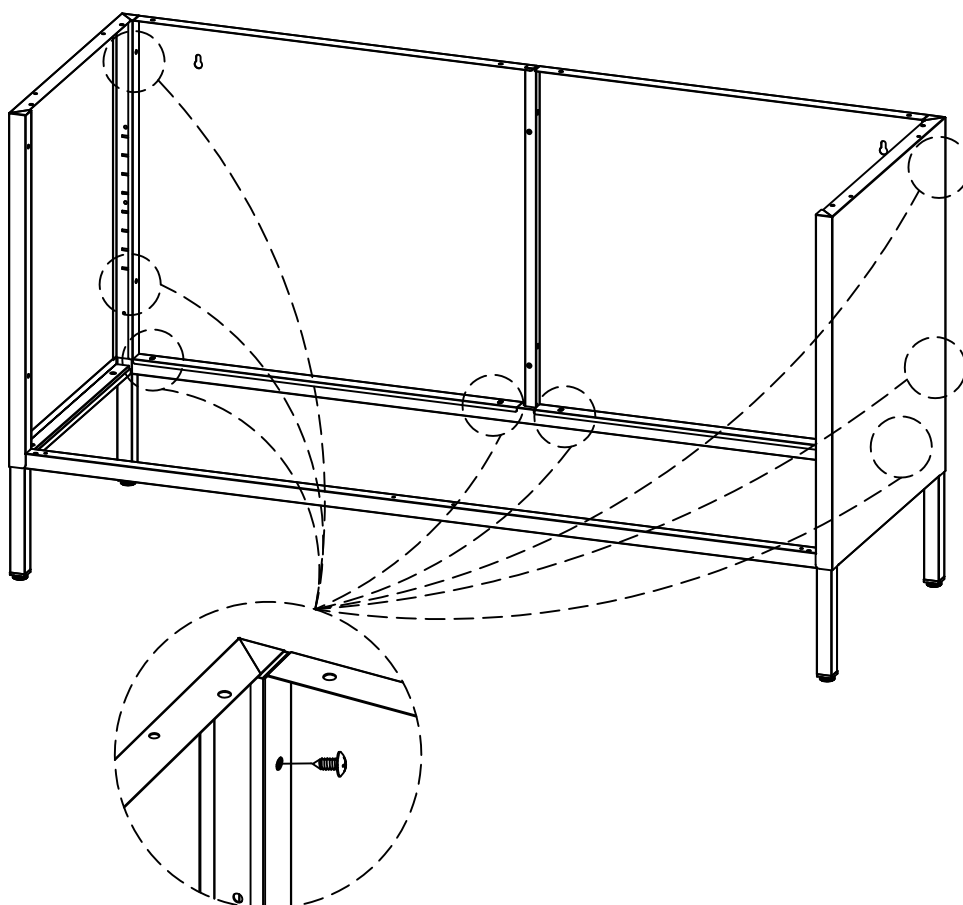


5

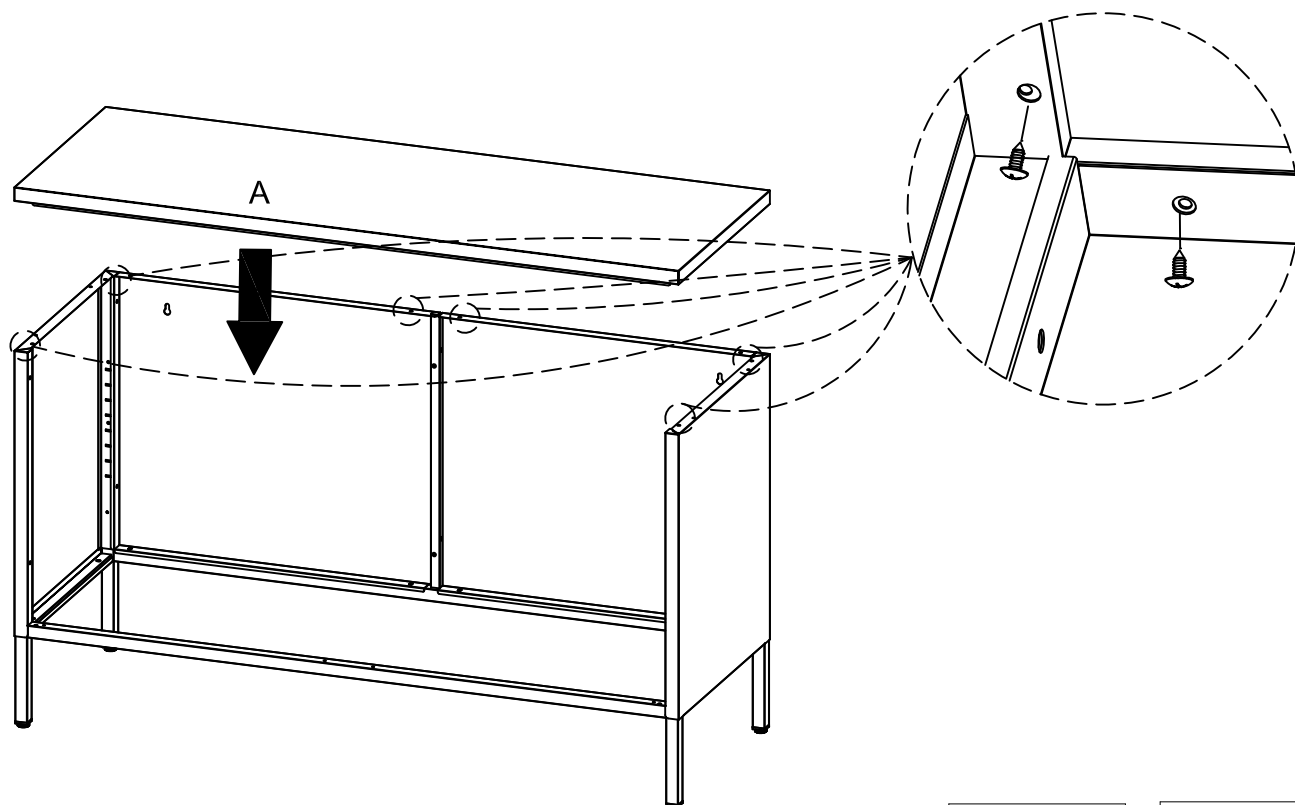

Install the top panel and secure it with screws.

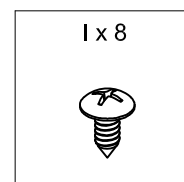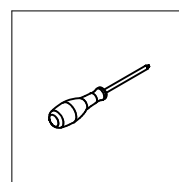


6


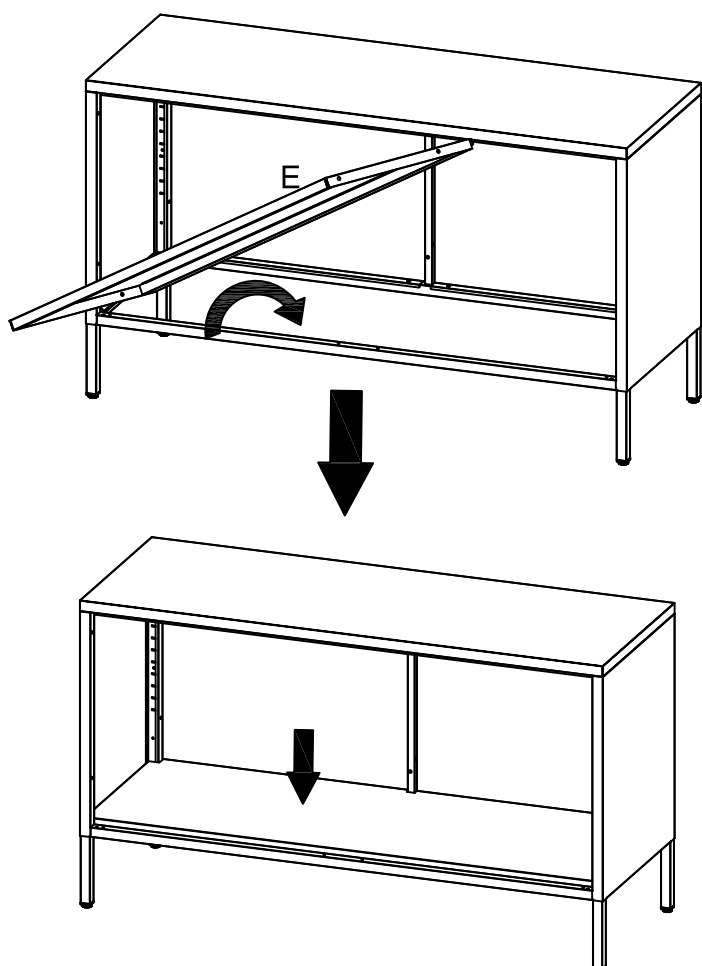


Place the bottom panel inside the cabinet frame, making sure it is level and stable.


7

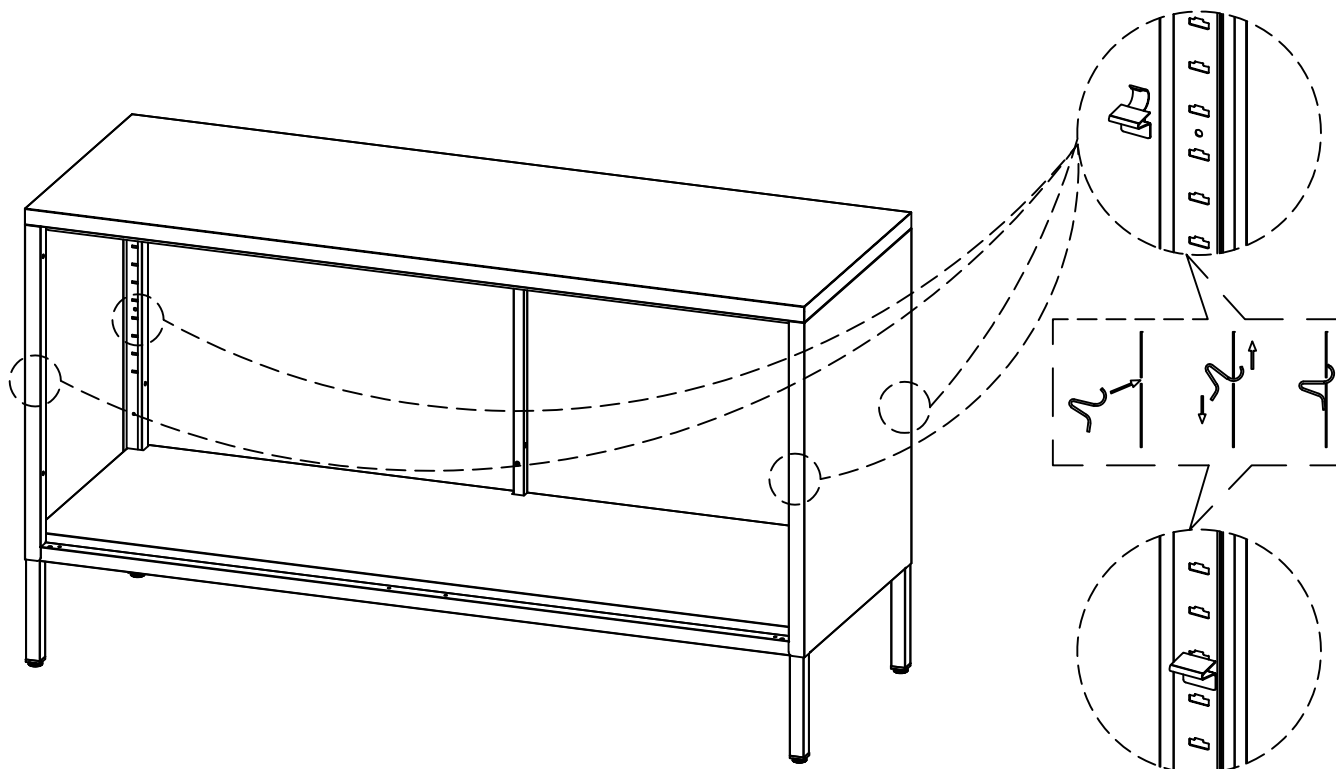

Make sure that the partition frames are all on the same level surface.

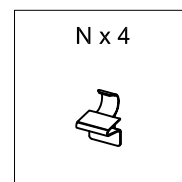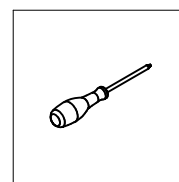


8

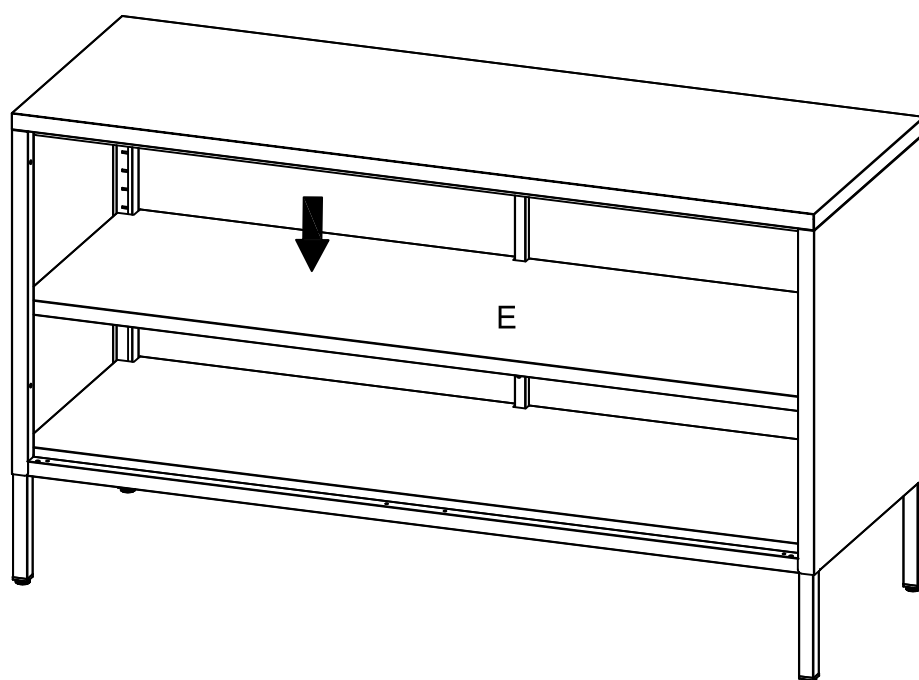


Place the partition on the partition clip and make sure it is stable.

9

Press the spring shaft on the door to make it smoothly enter the door shaft hole inside the door frame

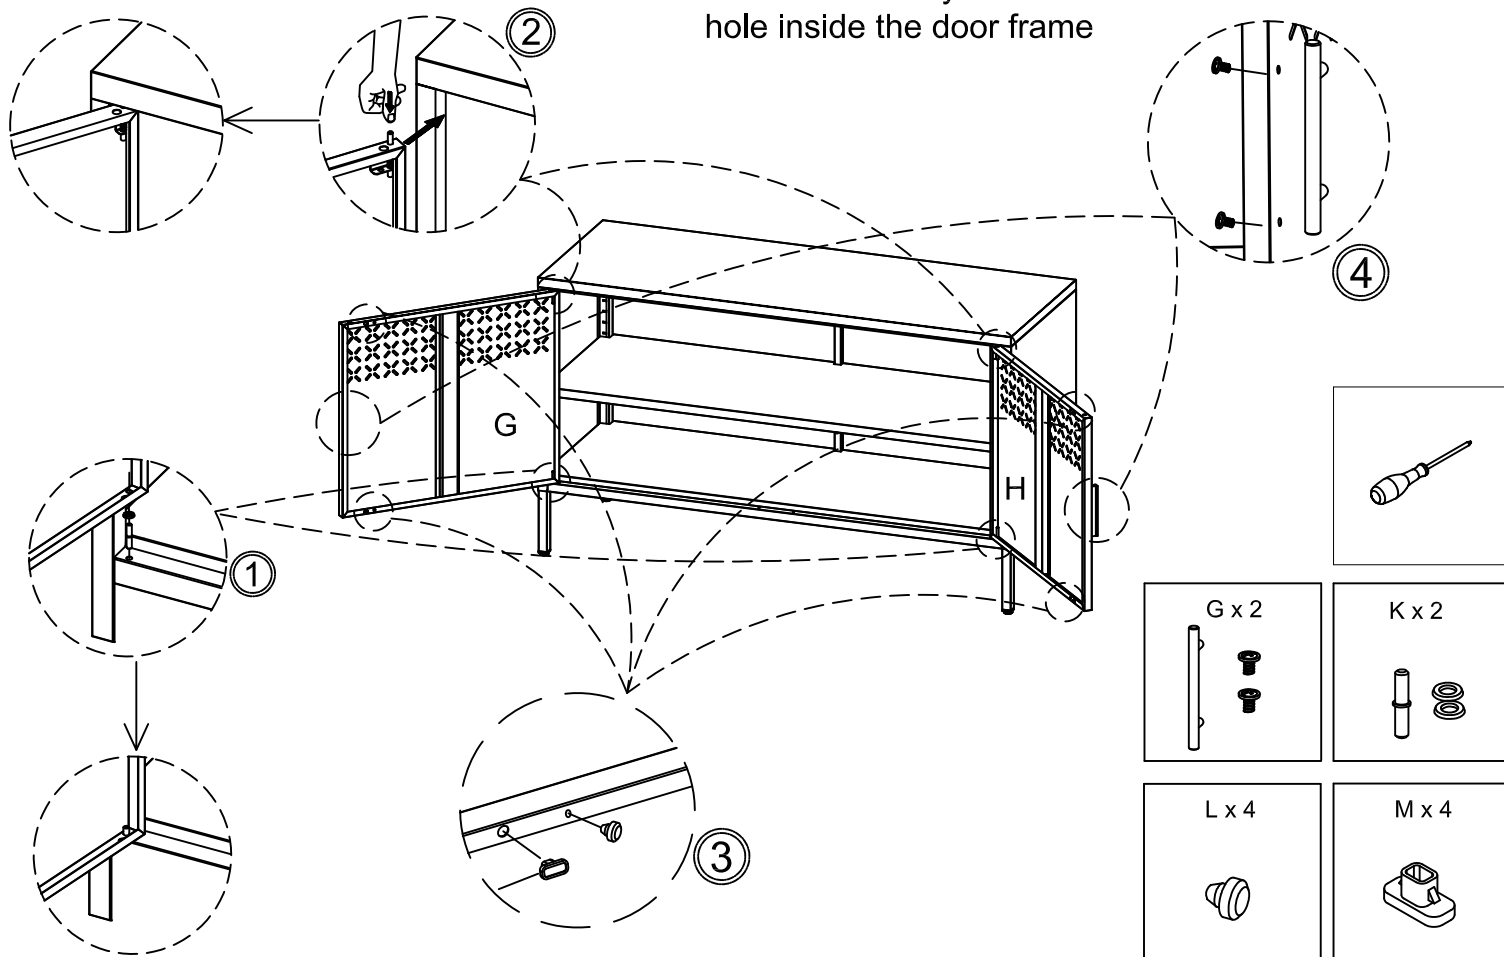

10

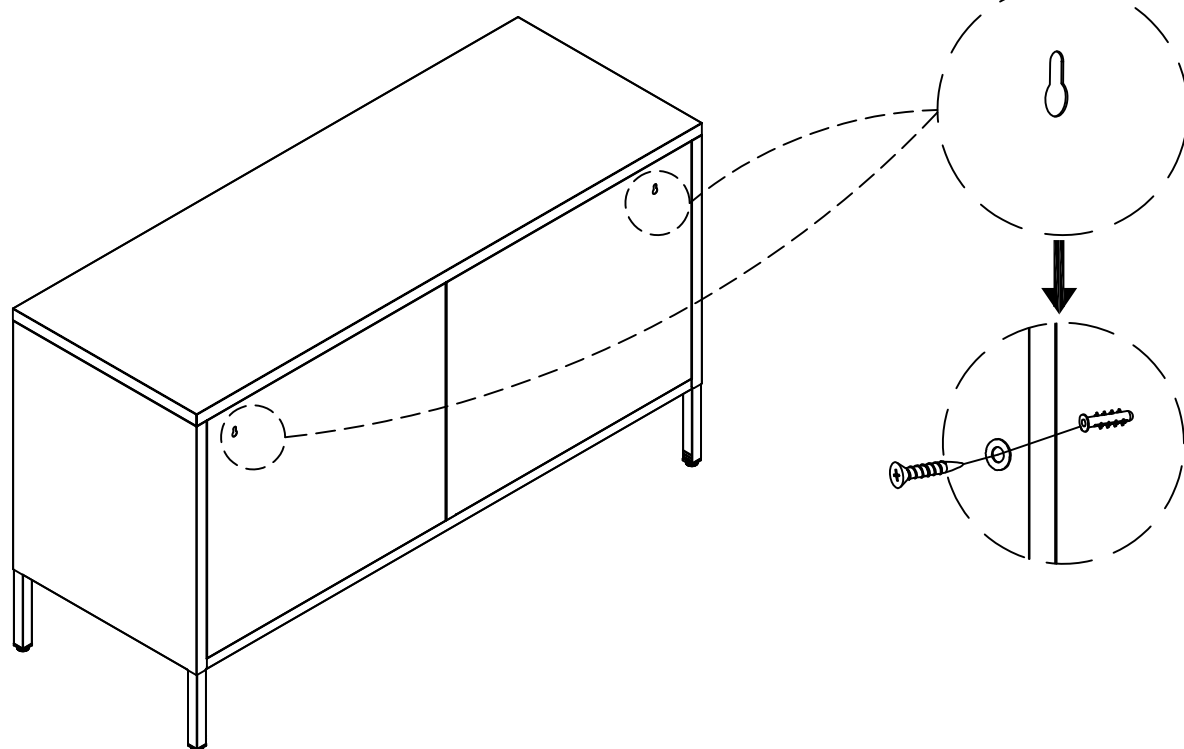

If you need to secure the wall, use expansion screws to fix the cabinet to the wall.

