



Setup | Installation | Instalacion


1

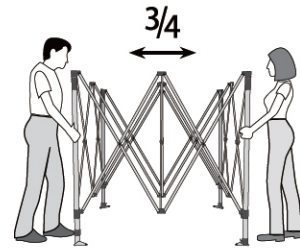

2

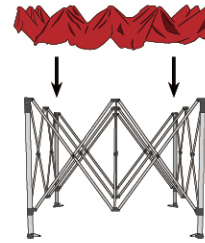

3

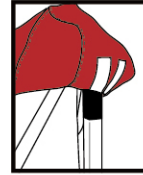

Very important: Stitches need to be 1/2" lower than the bracket's upper surface when attach the top to the frame corner.



Attach the (4) Velcro corners

4





Lift the frame and step backwards

5

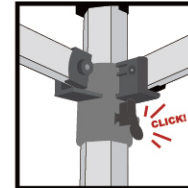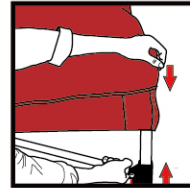

Open the canopy as widely as you can and then lock each corner until you hear "CLICK".

6

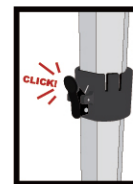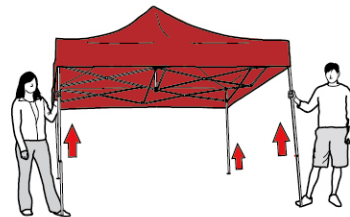

Step on footplate, pull leg upward until it locks in extended position.