


INSTALLATION MANUAL

RY - DE2509

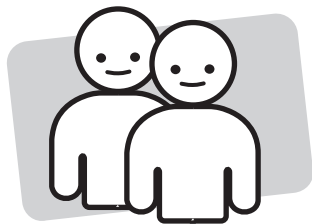

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



Before You Start



-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.






Please do not return to the store
Broken or missing Hardware?
Need help with Assembly?
If you have any questions just email us at
ryhome_service@163.com

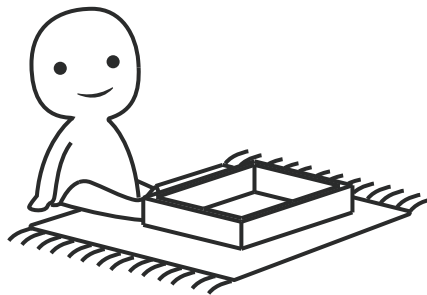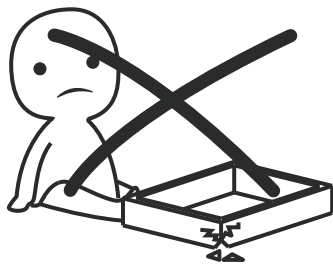

AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

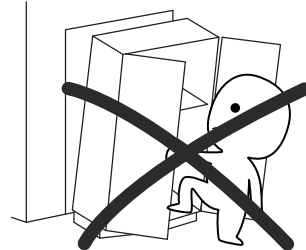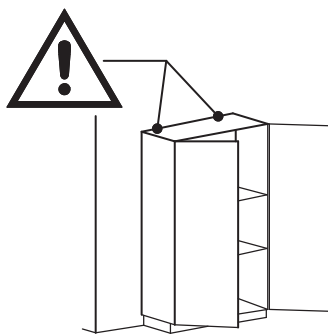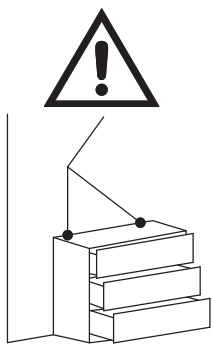

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.



For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


Completed Assembly

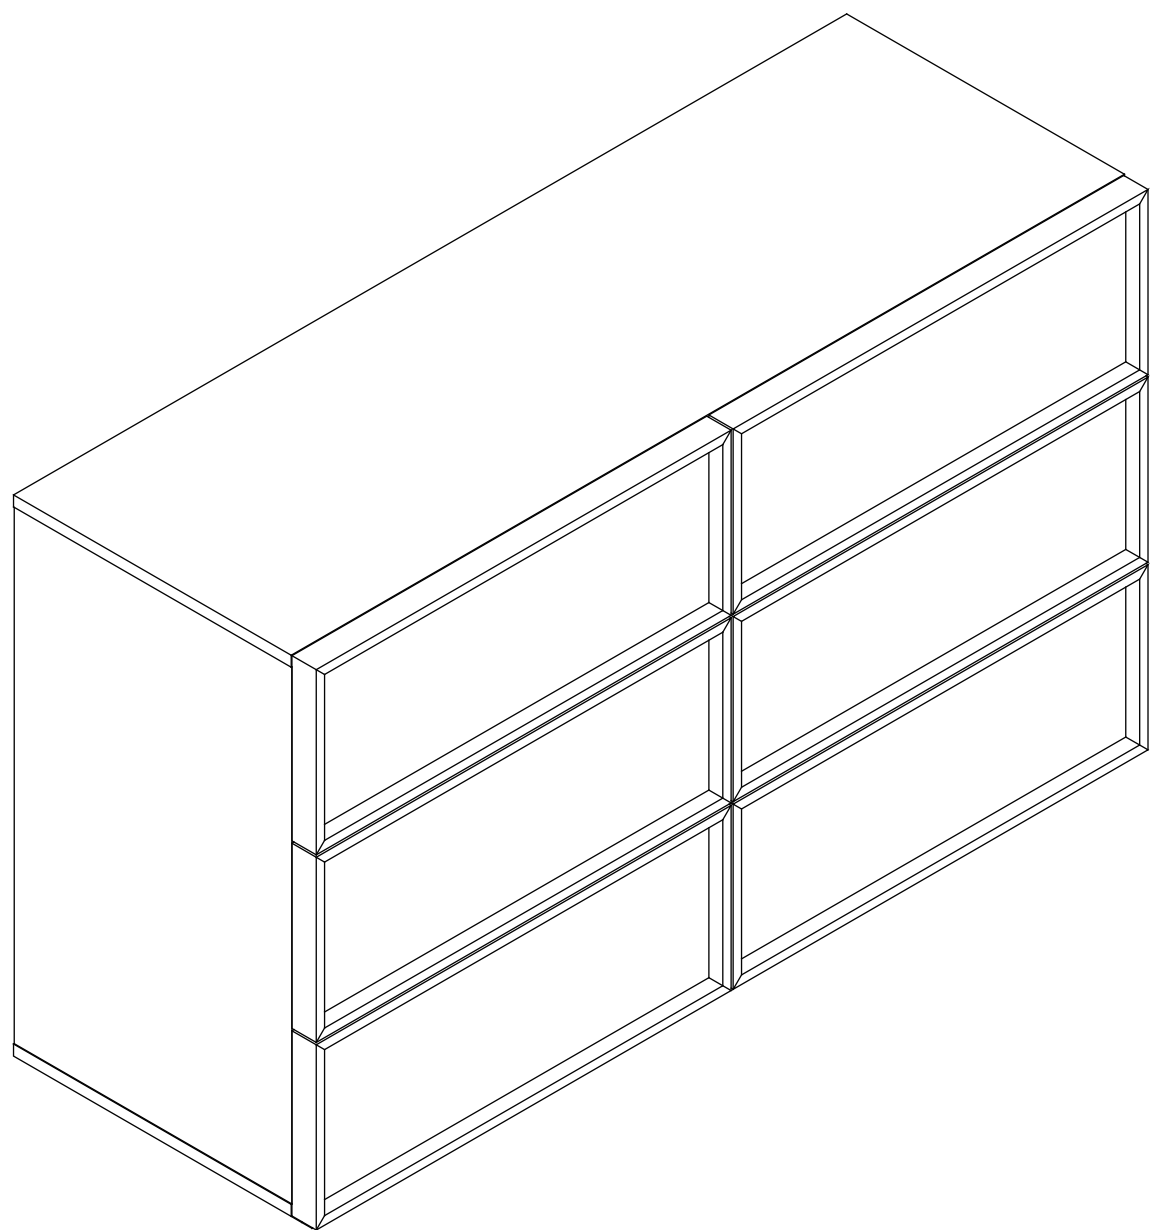


















Parts Description














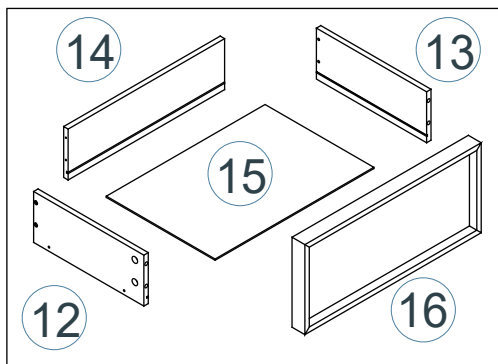
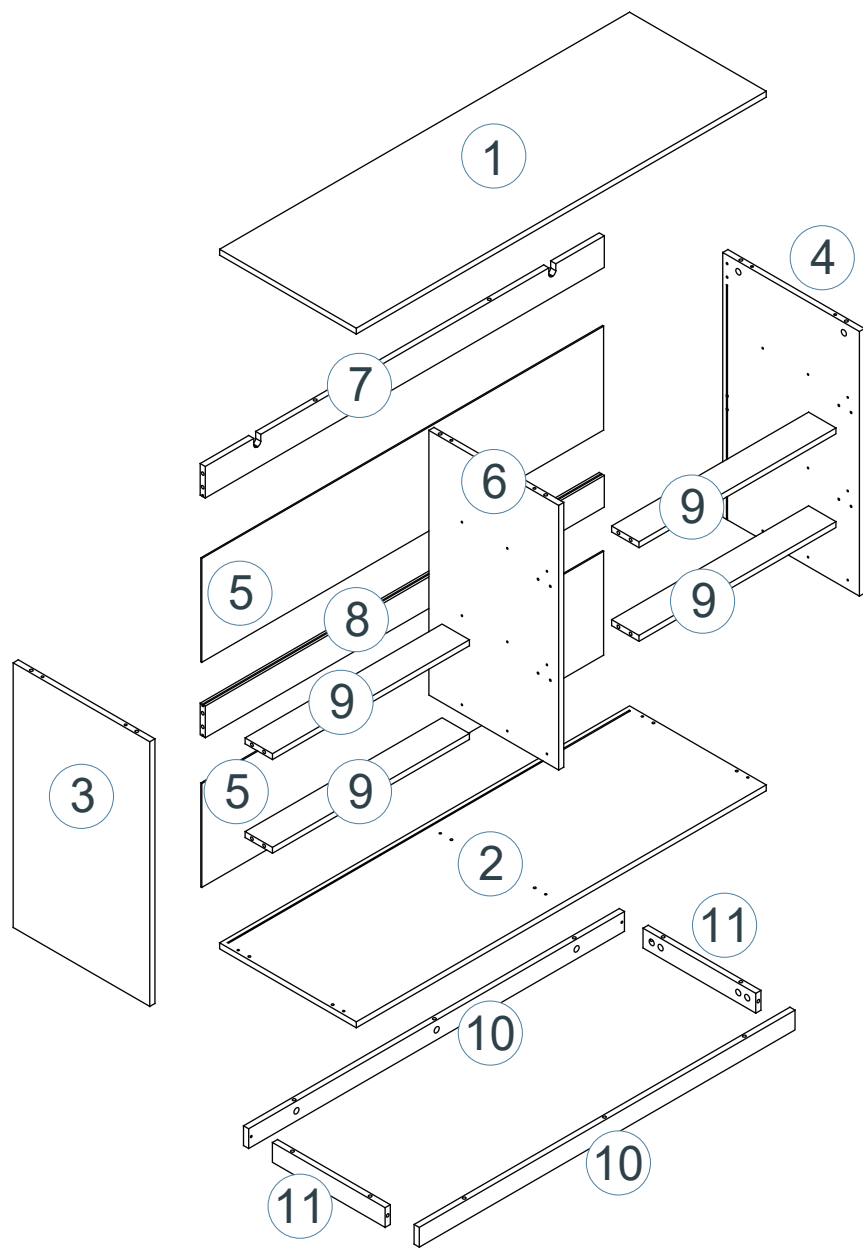


x3

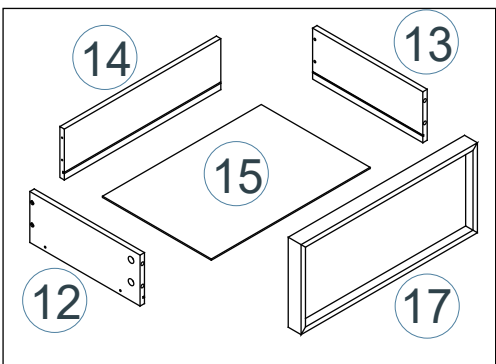


x3

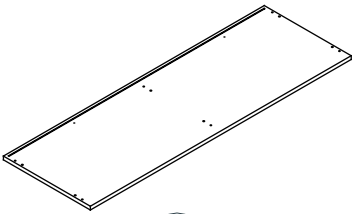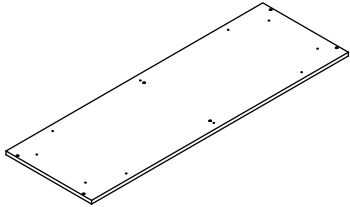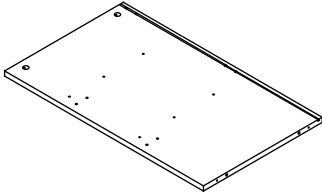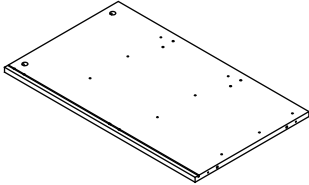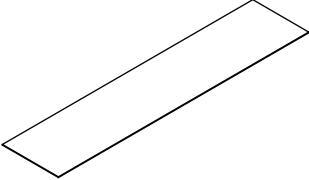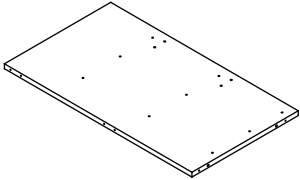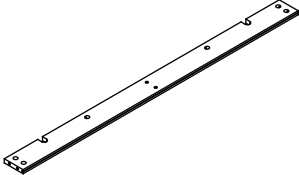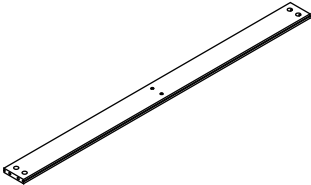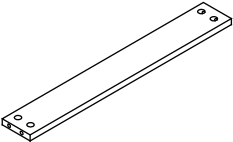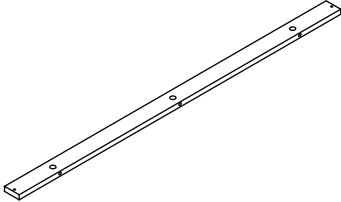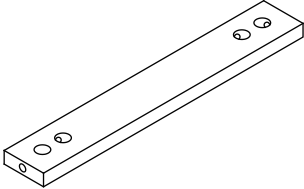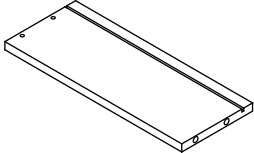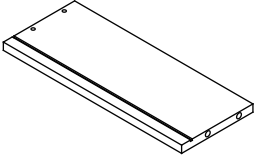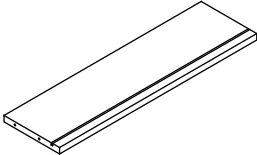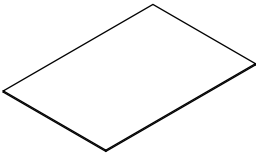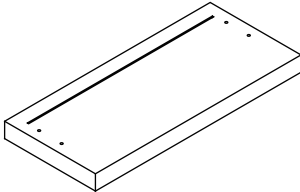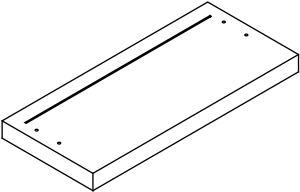 ①	 ②	 ③	 ④
 ⑤ x2	 ⑥	 ⑦	 ⑧
 ⑨ x4	 ⑩ x2	 ⑪ x2	 ⑫ x6
 ⑬ x6	 ⑭ x6	 ⑮ x6	 ⑯ x3
 ⑰ x3			

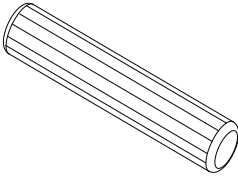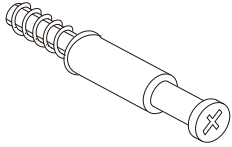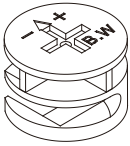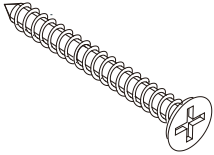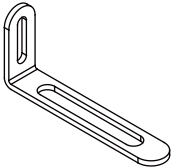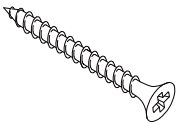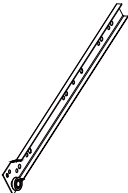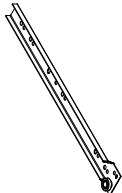A  8 X 30mm Dowel 12pcs	B  4 x 35mm Screw 8pcs	C  Bolt 70pcs
D  Locking Nut 70pcs	E  3 x 12mm Screw 60pcs	F  4 x 30mm Long Screw 24pcs
G  Wedge 8pcs	H  3 x 14mm Screw 8pcs	I  Plastic Glide 6pcs
J  Bracket 2pcs	K  Screw 2pcs	L  Wall Anchor 2pcs
M  Wall Screw 2pcs	CL  Slide Rail 6pcs	CR  Slide Rail 6pcs


DL

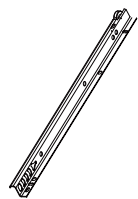

Slide Rail

6pcs

DR

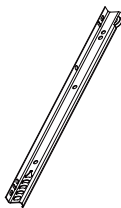

Slide Rail

6pcs



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock





CAM BOLT





CAM LOCK

Cam Bolt

Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

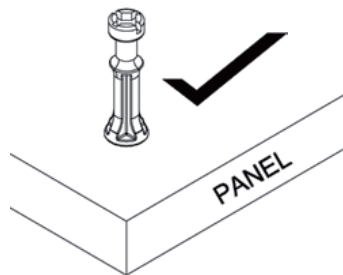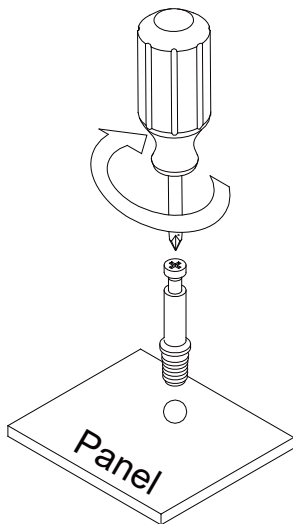



Shoulder is flushed
(on the same level)
with the panel.

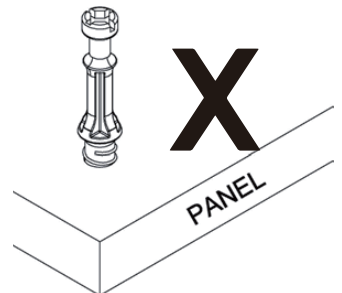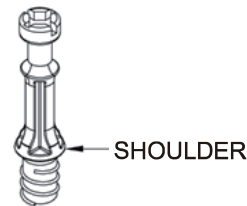

Shoulder is
above the panel.


CAM-LOCK

Align the arrow on the Cam-lock to the
Cam-bolt head and insert the Cam-lock.

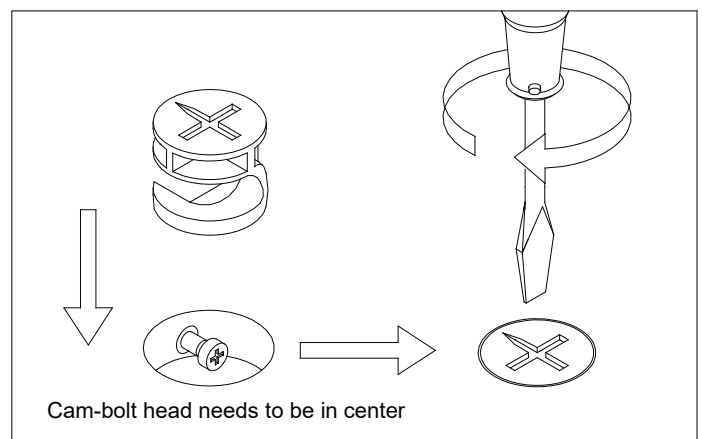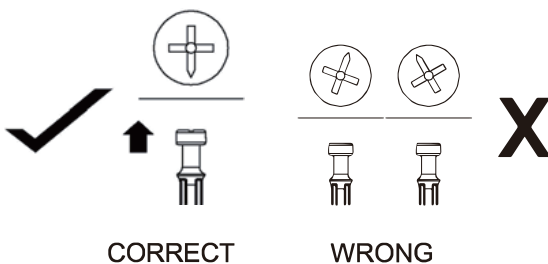


Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.

Step 1

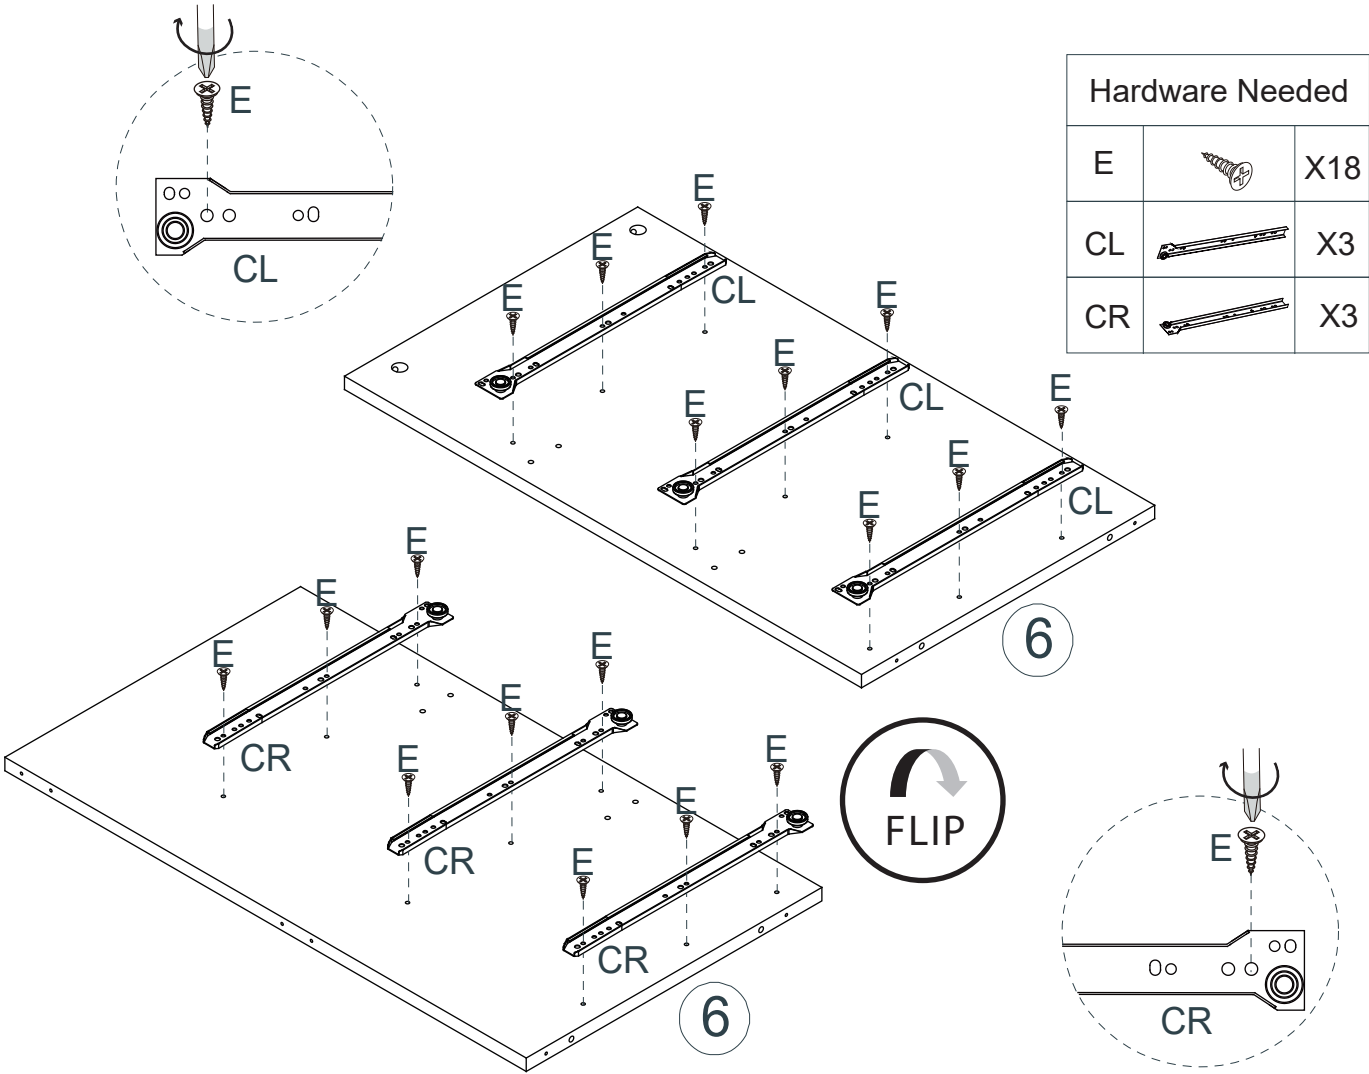


Step 2

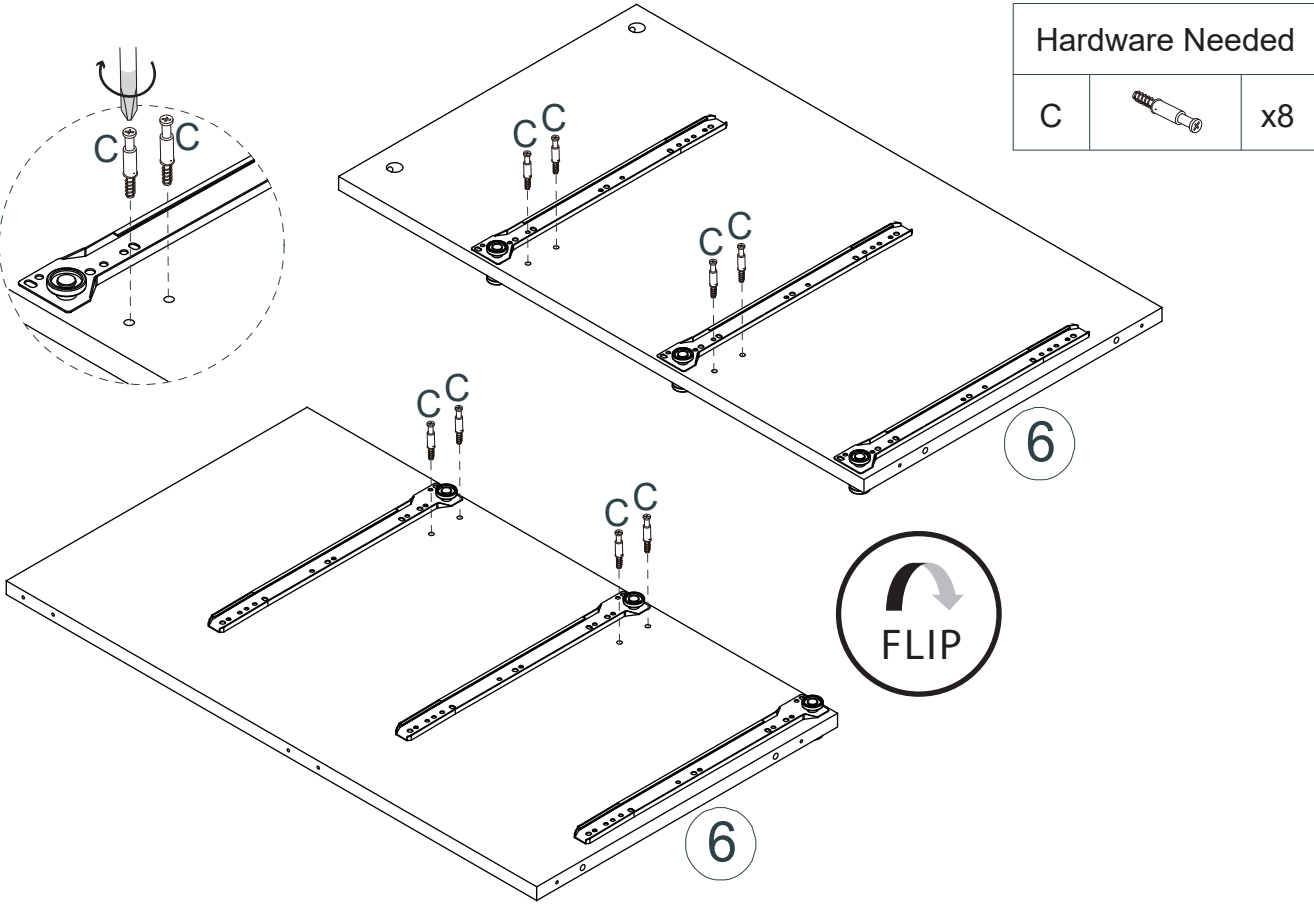


Step 3

Hardware Needed		
D		X8

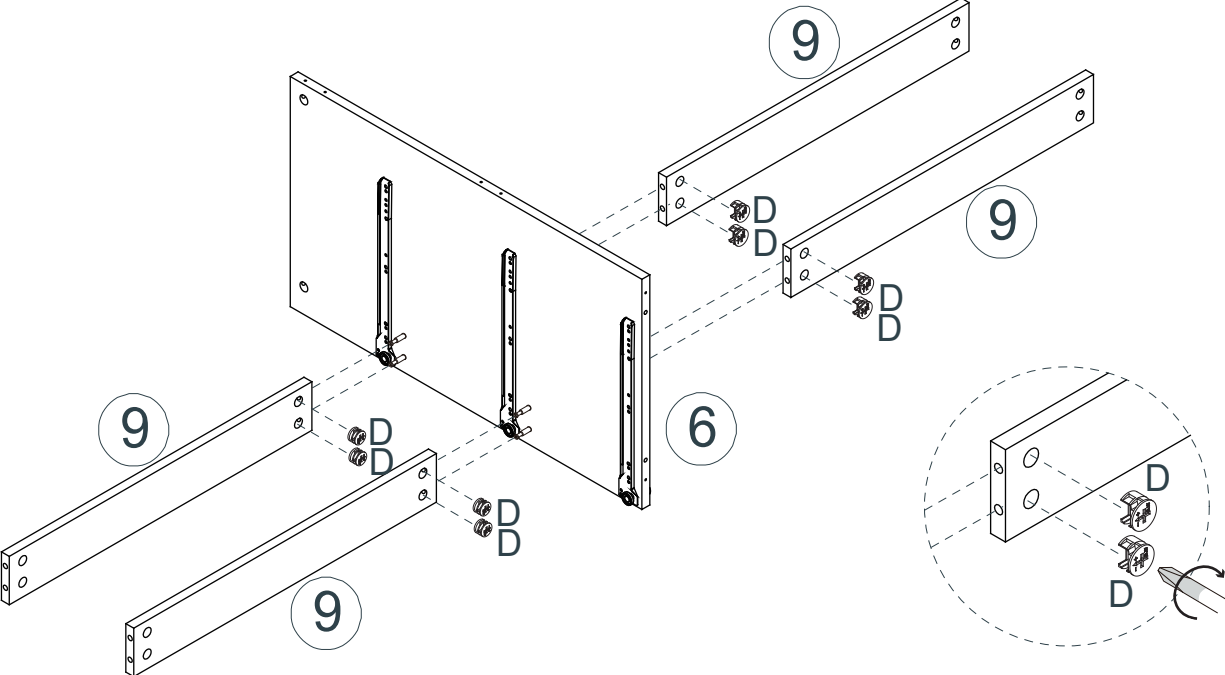


Step 4


Hardware Needed		
E		X18
CL		X3
CR		X3

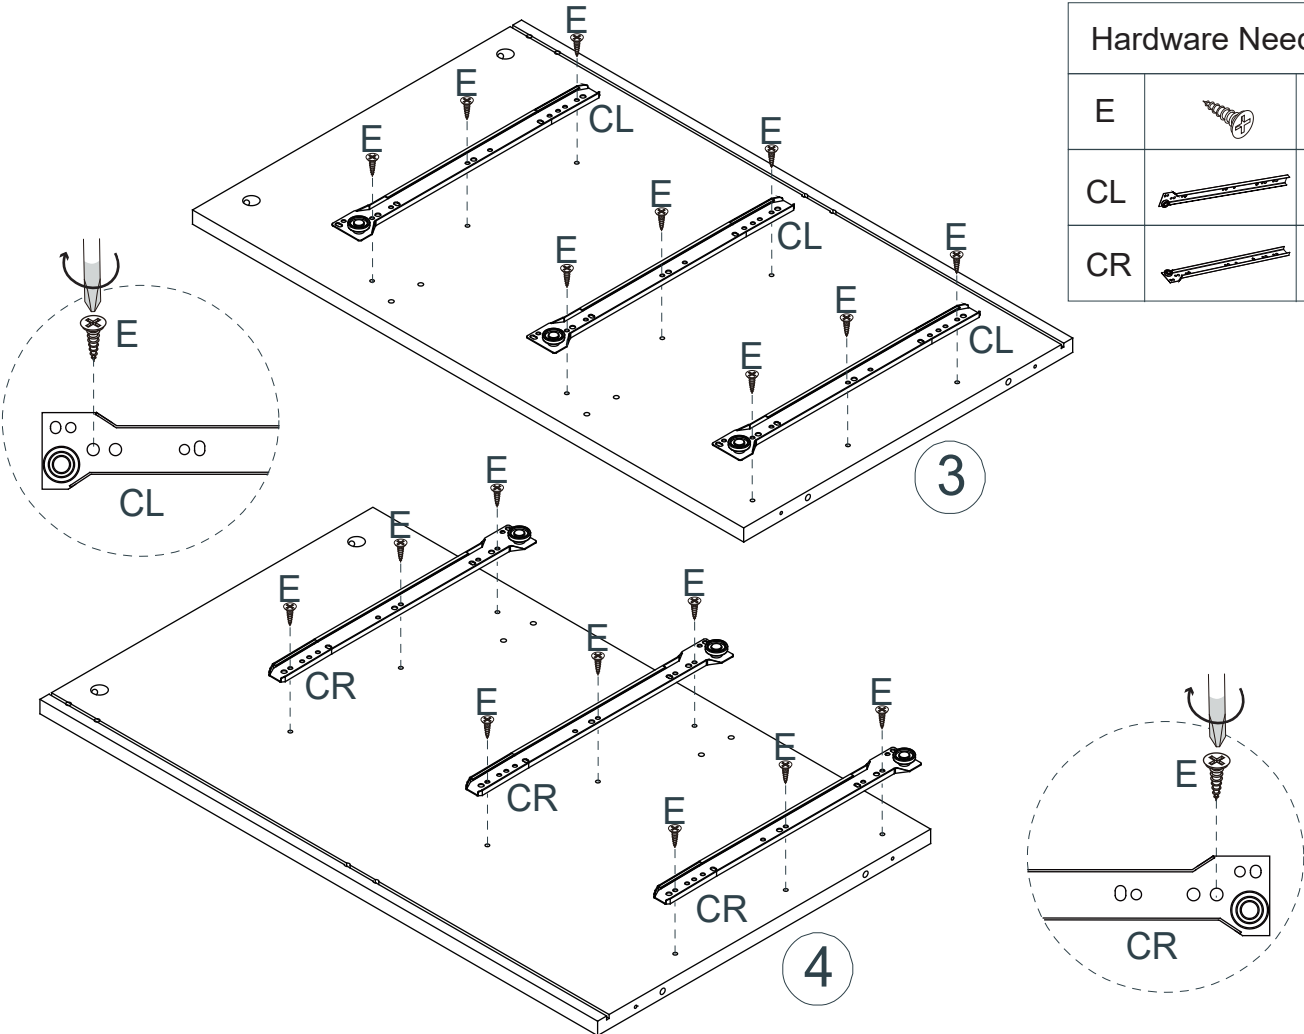


Step 5

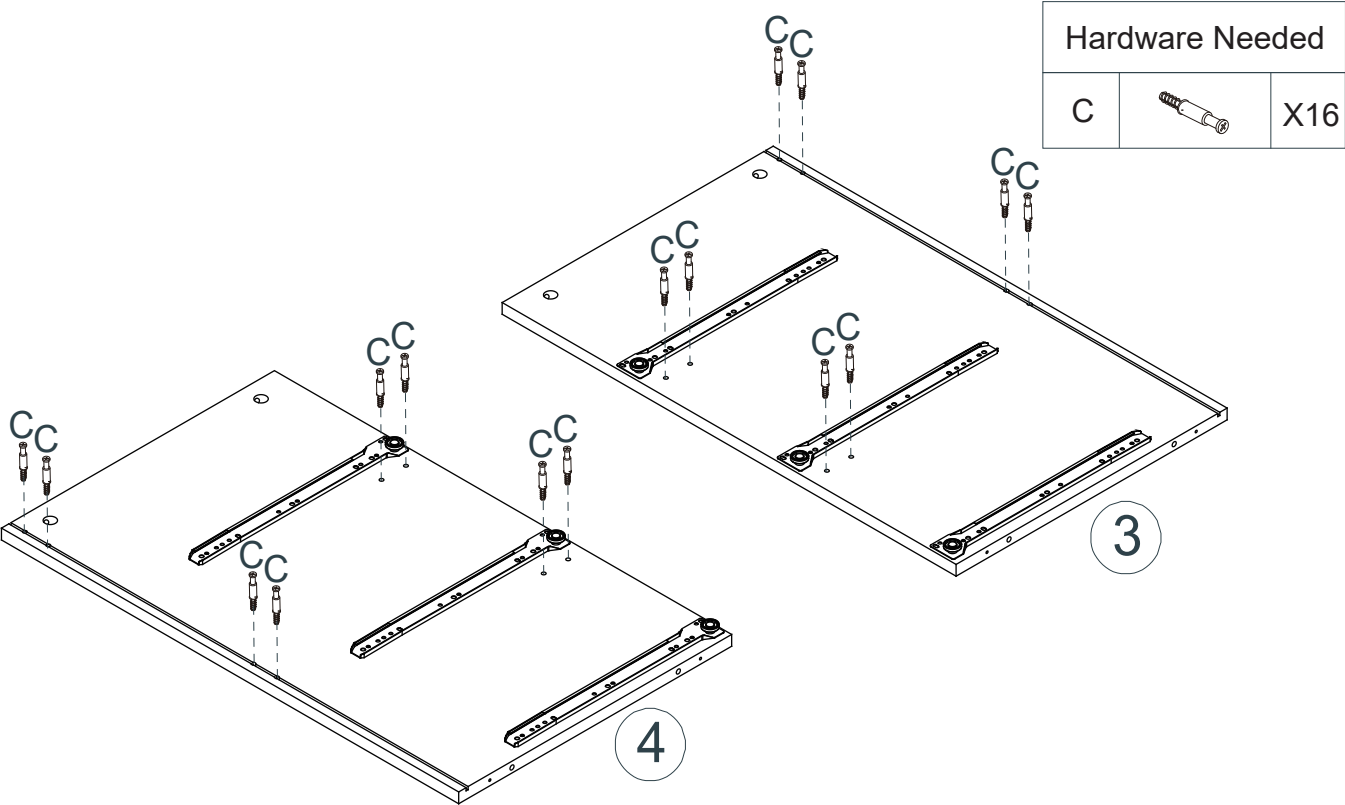


Step 6

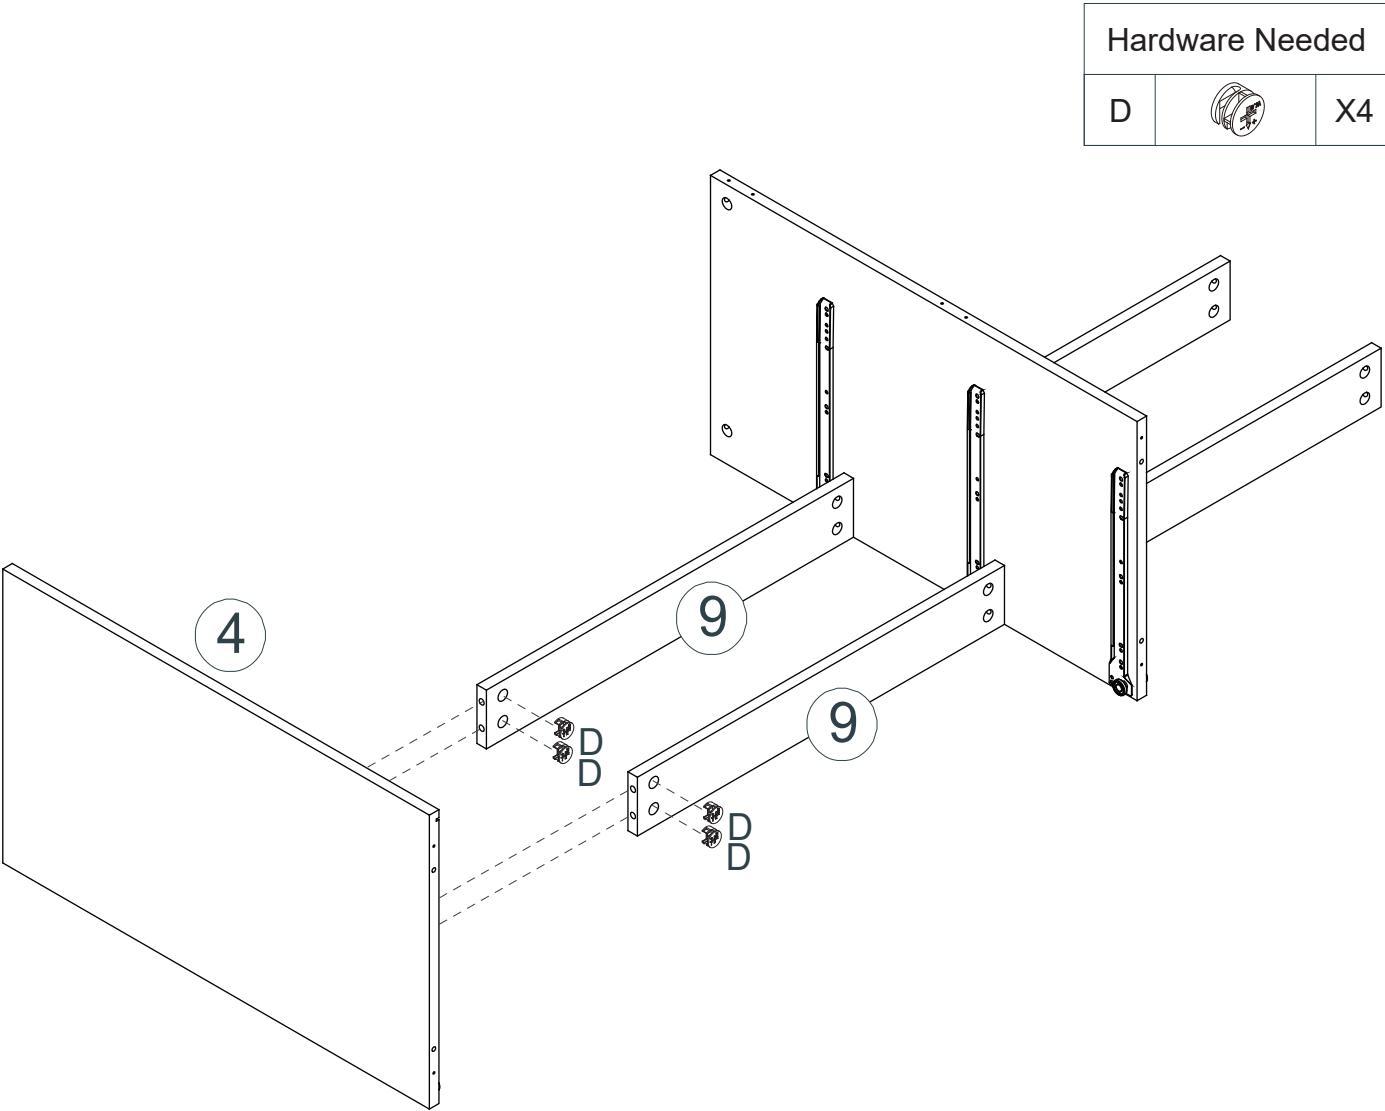


Step 7

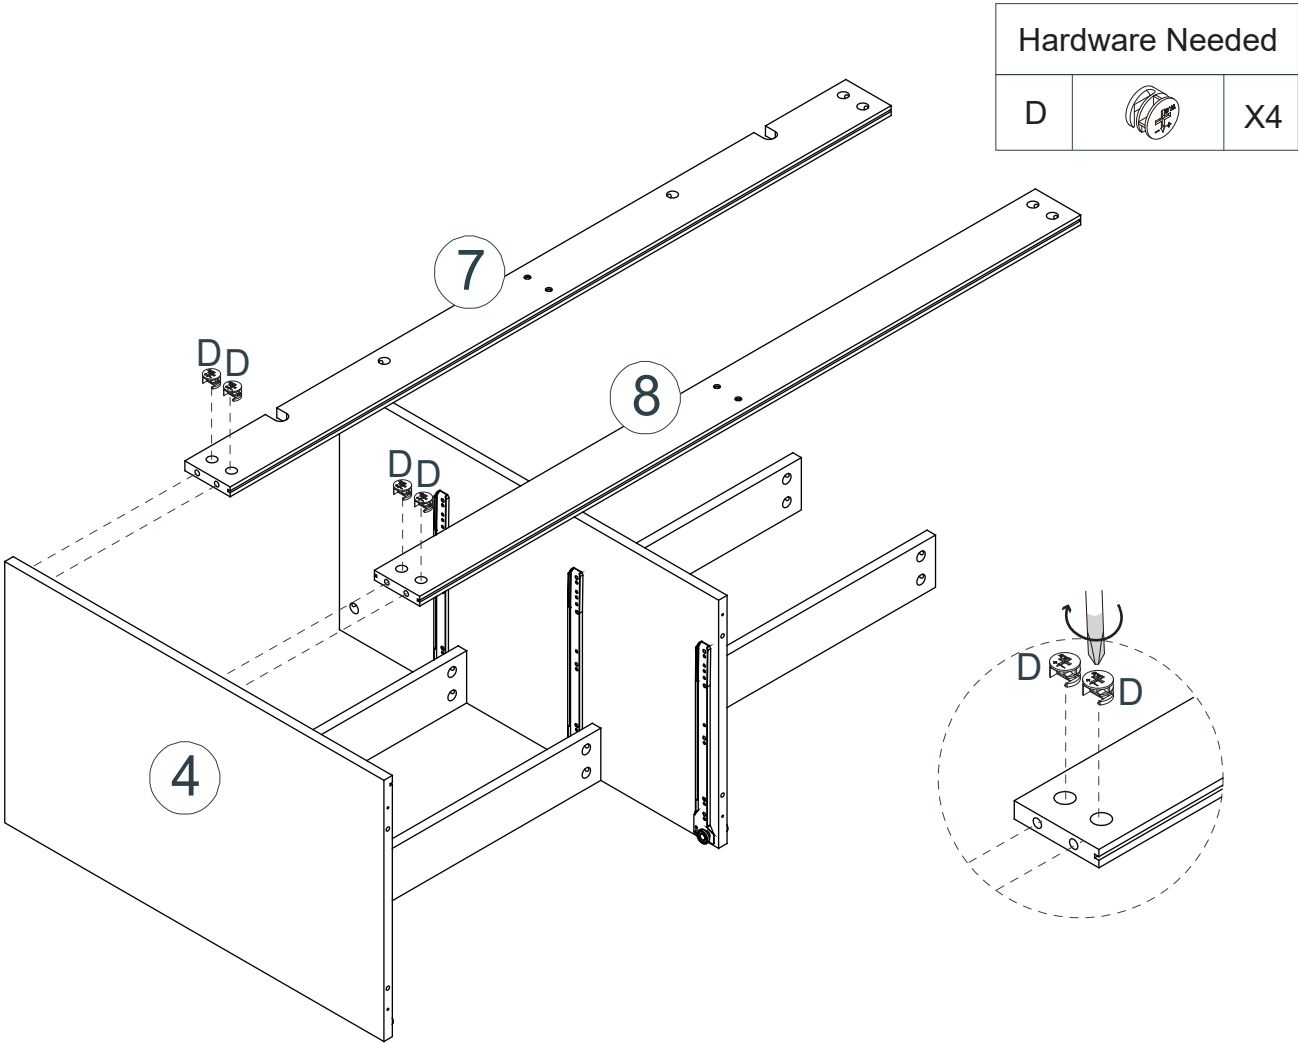


Step 8

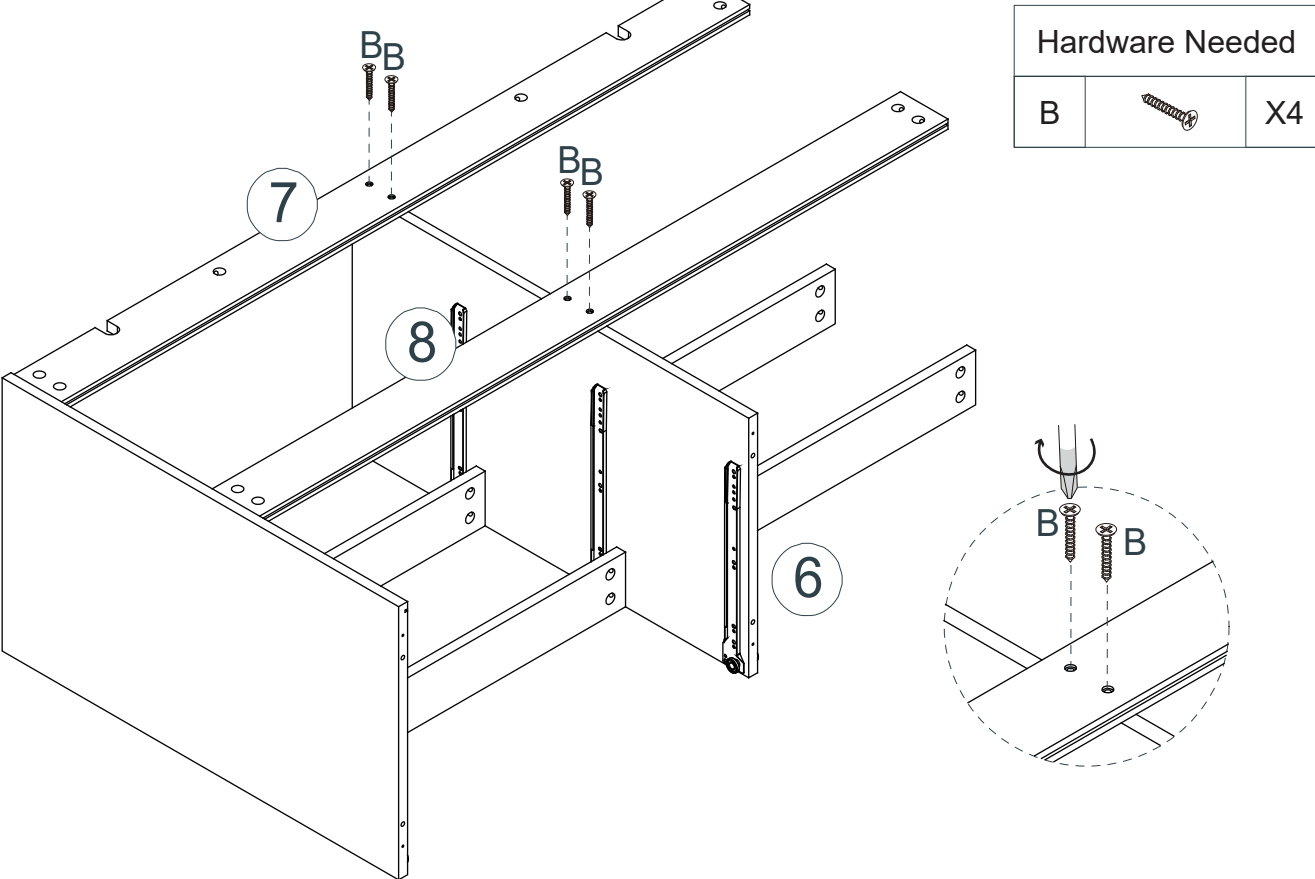


Step 9

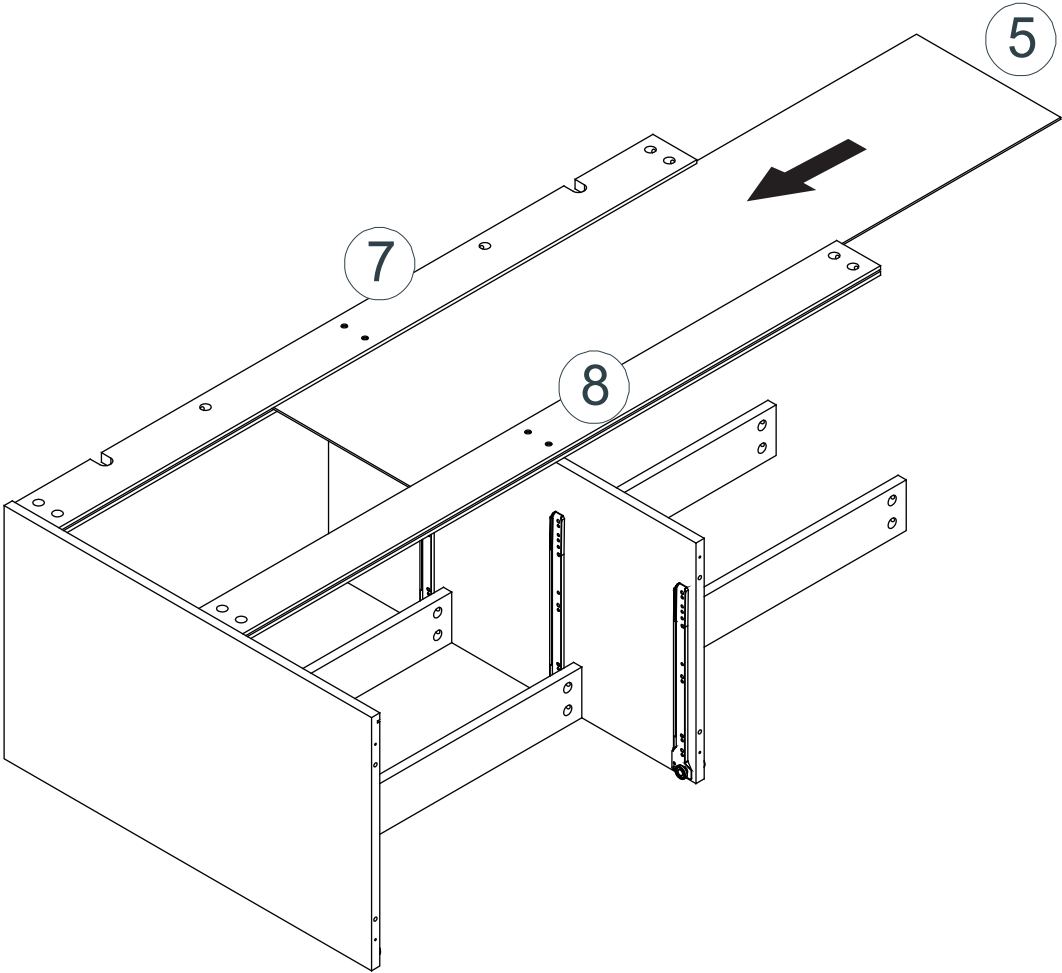


Step 10

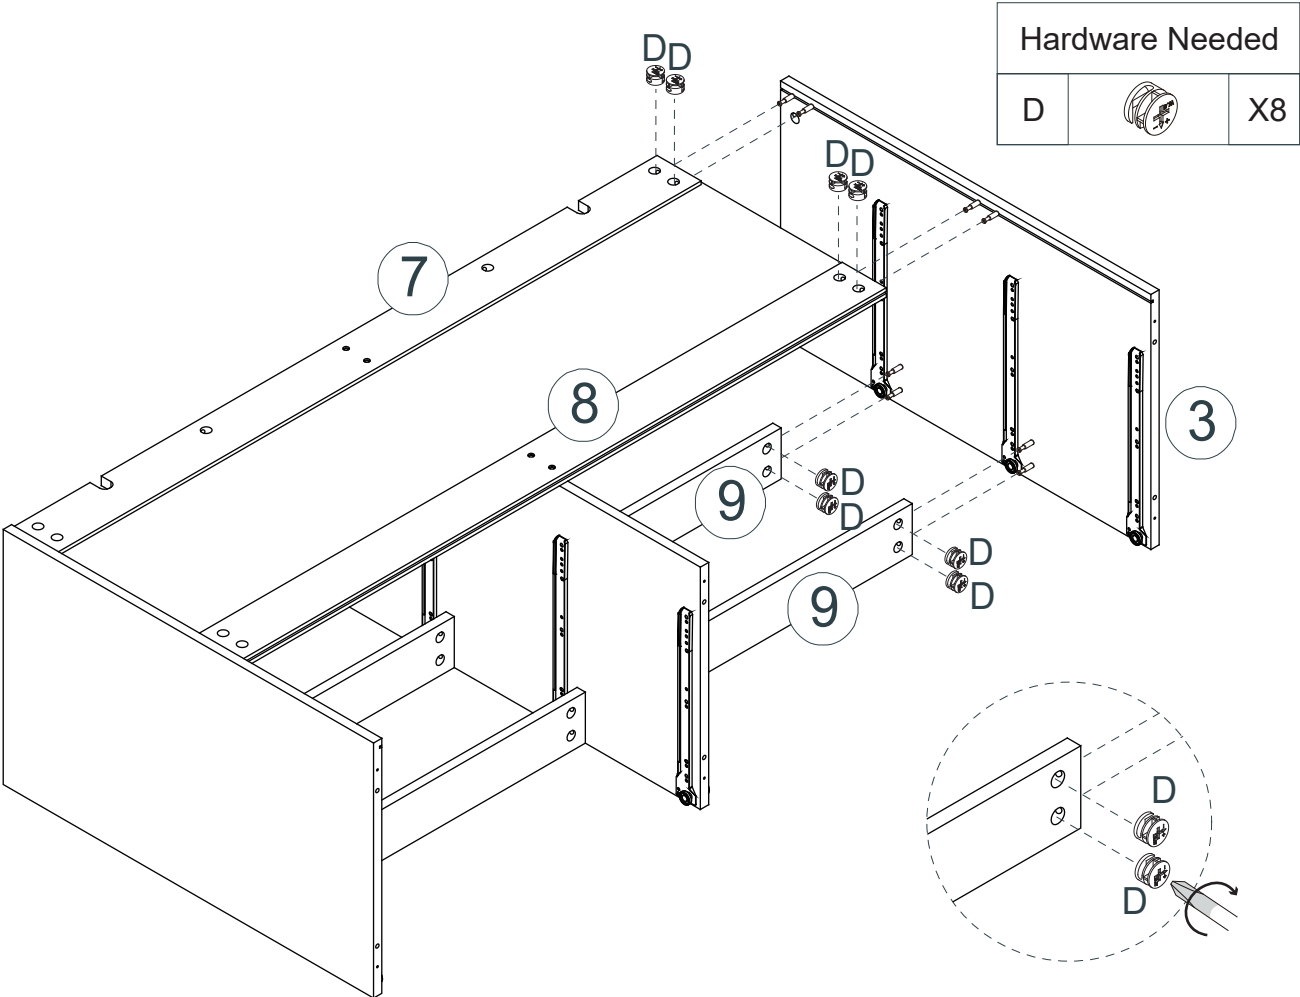


Step 11

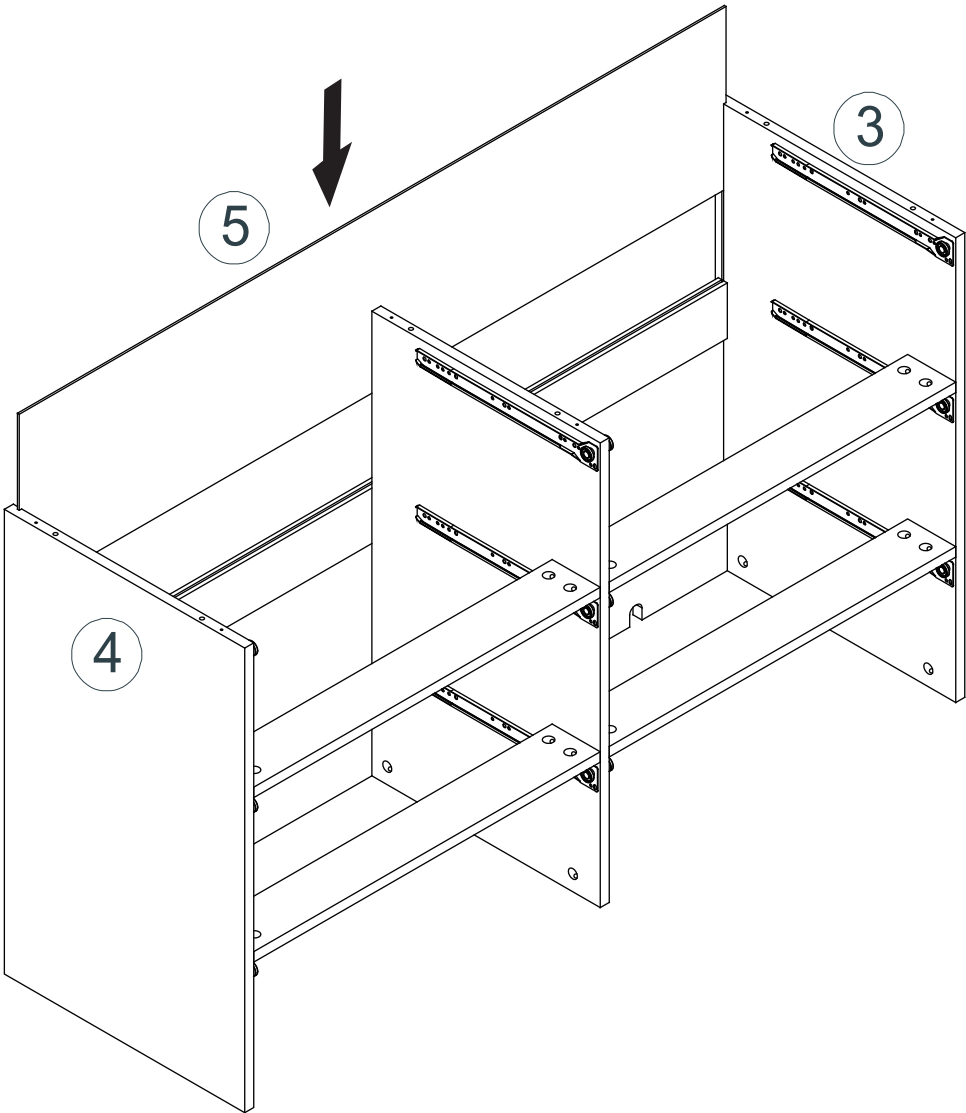


Step 12

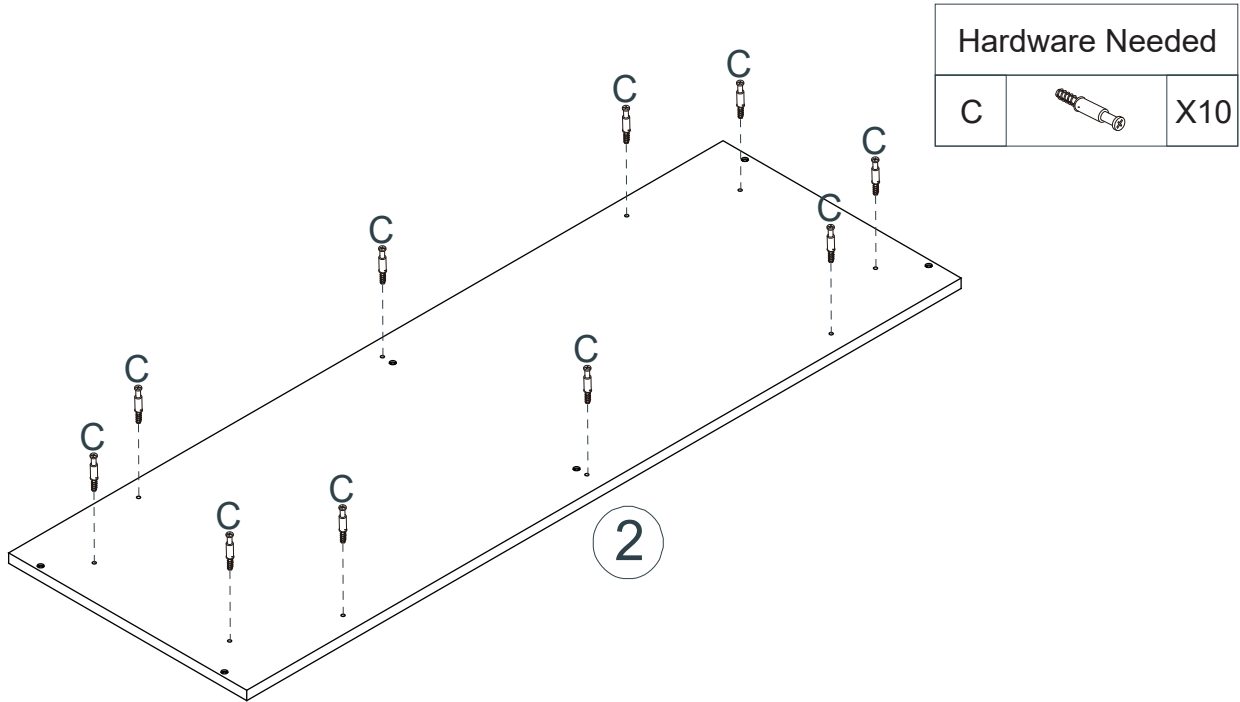


Step 13

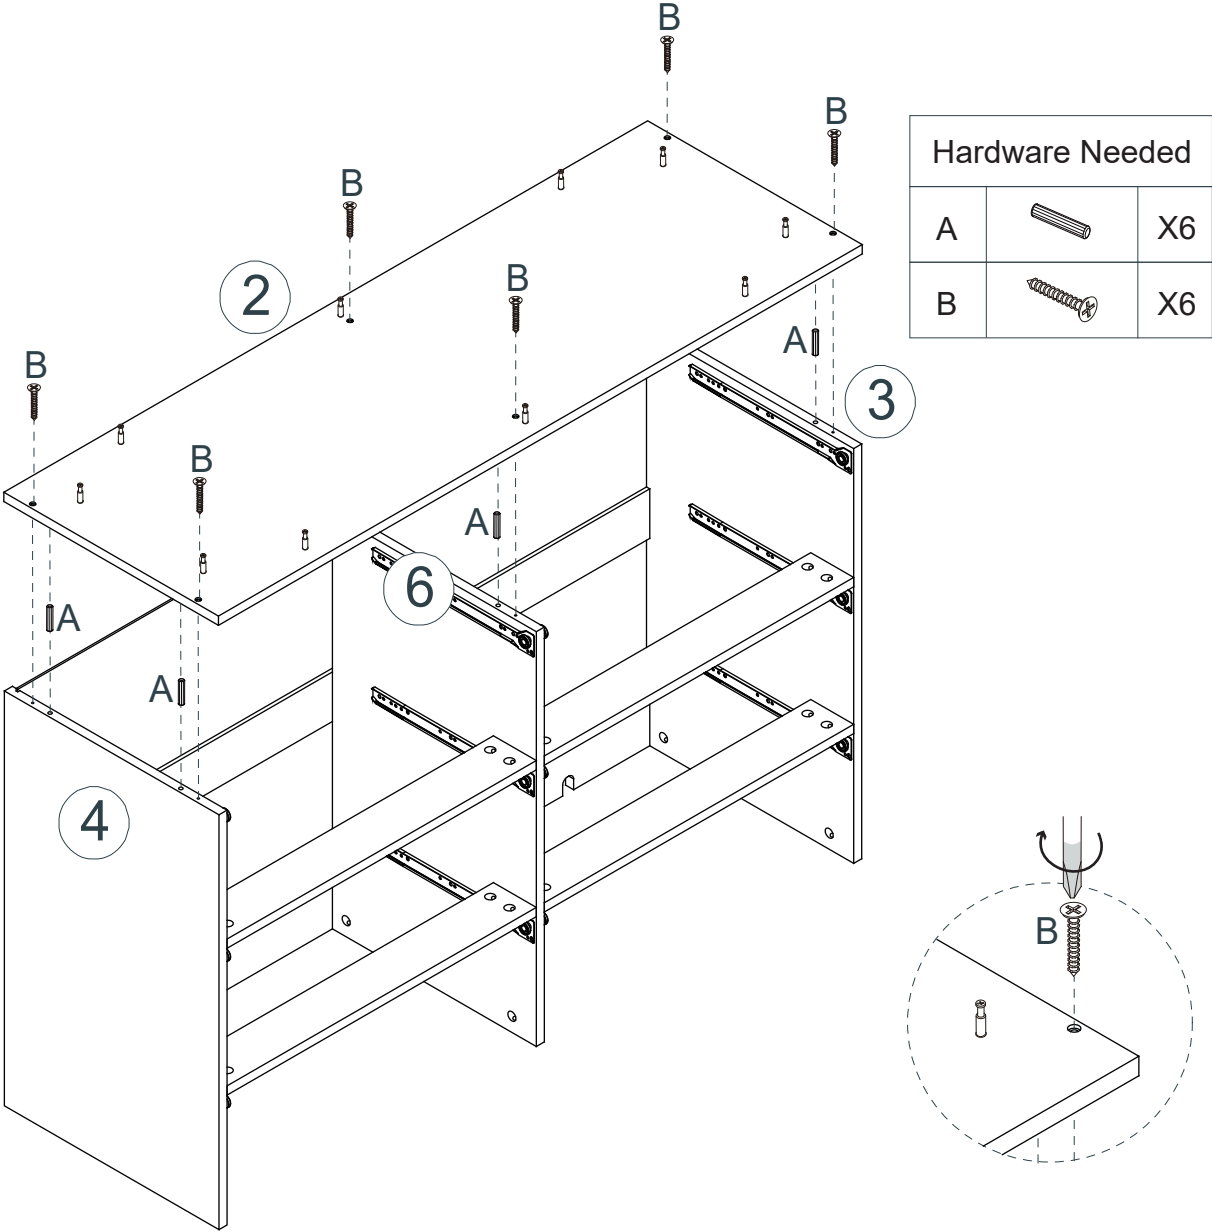


Step 14

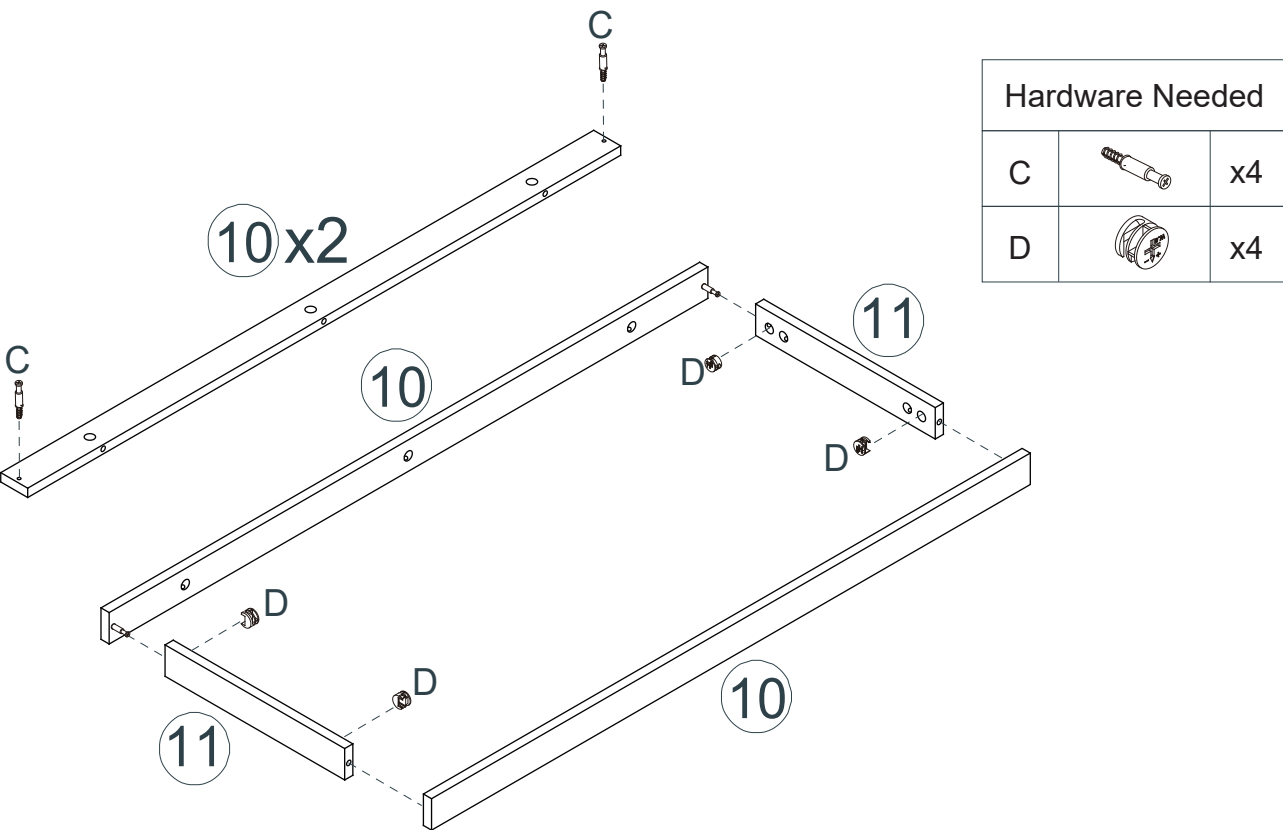


Step 15

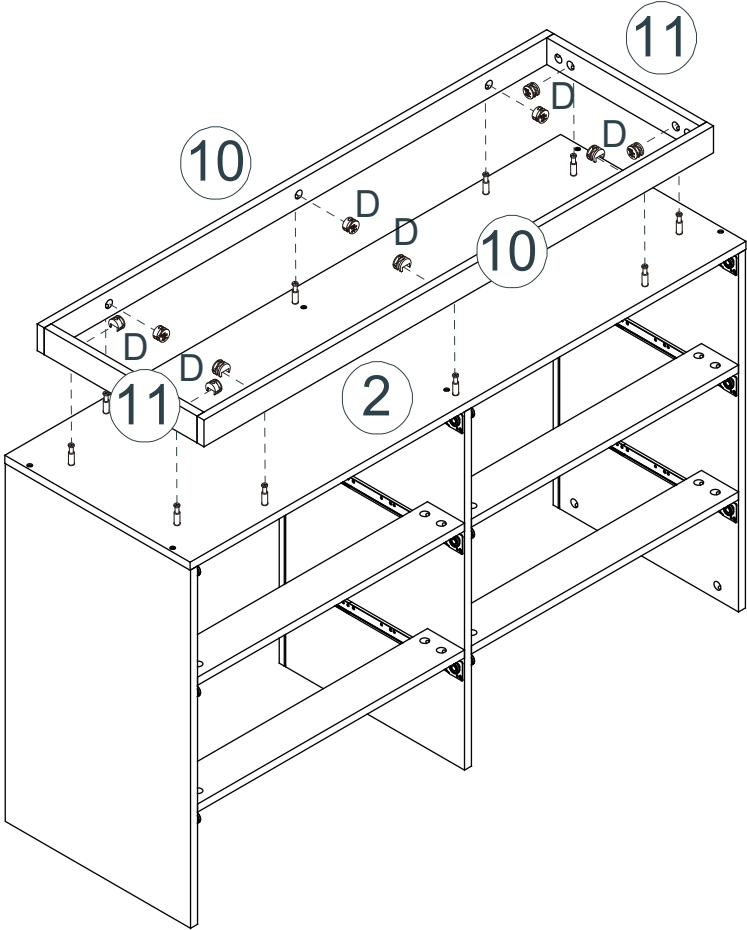


Hardware Needed		
D		x10

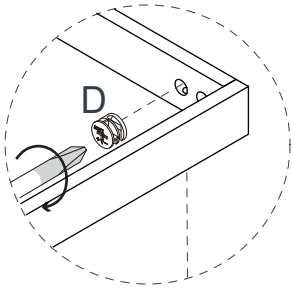


Step 16

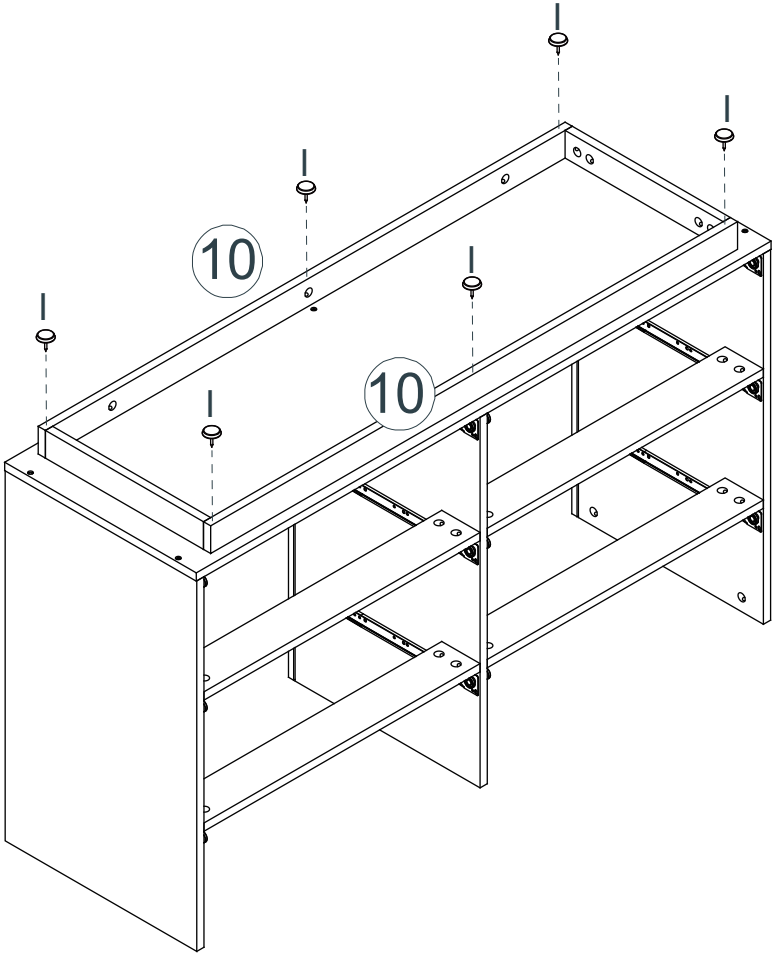

Hardware Needed		
I		X6

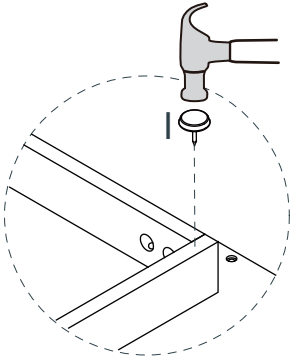


Step 17

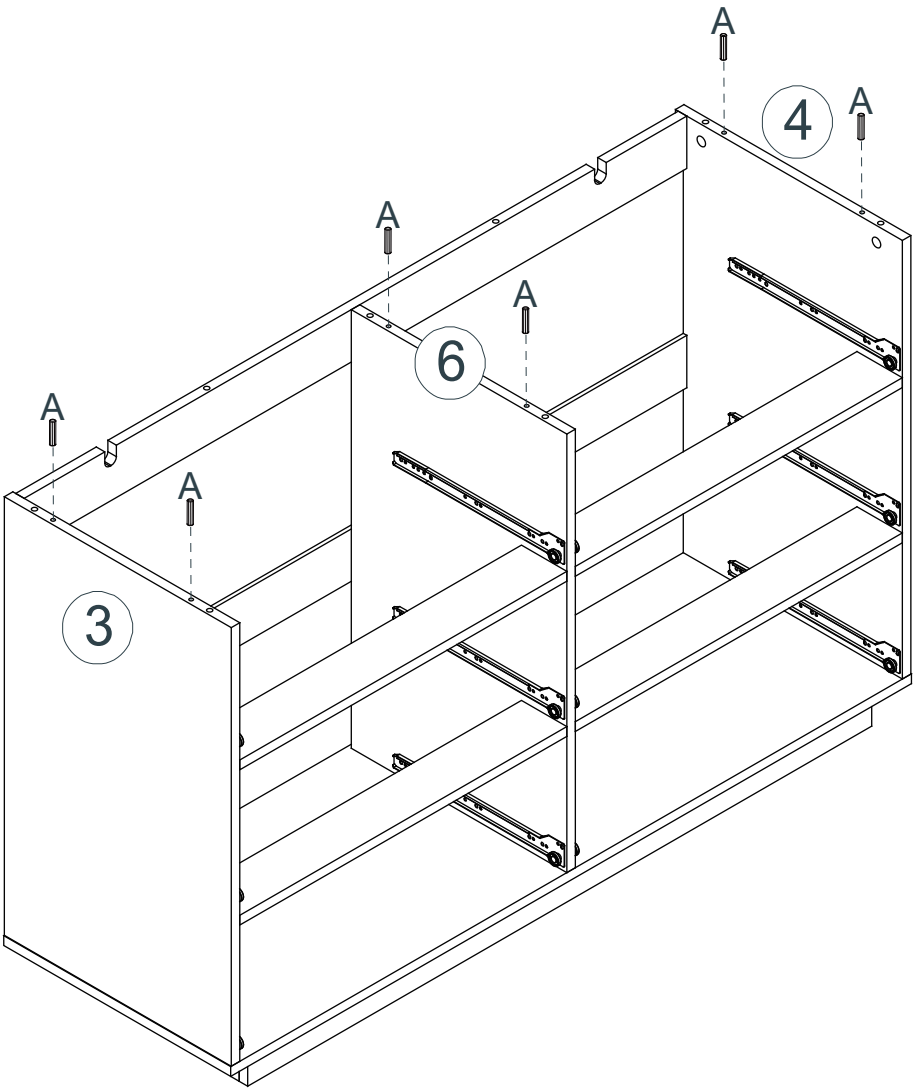


Hardware Needed		
A		X6

Step 18

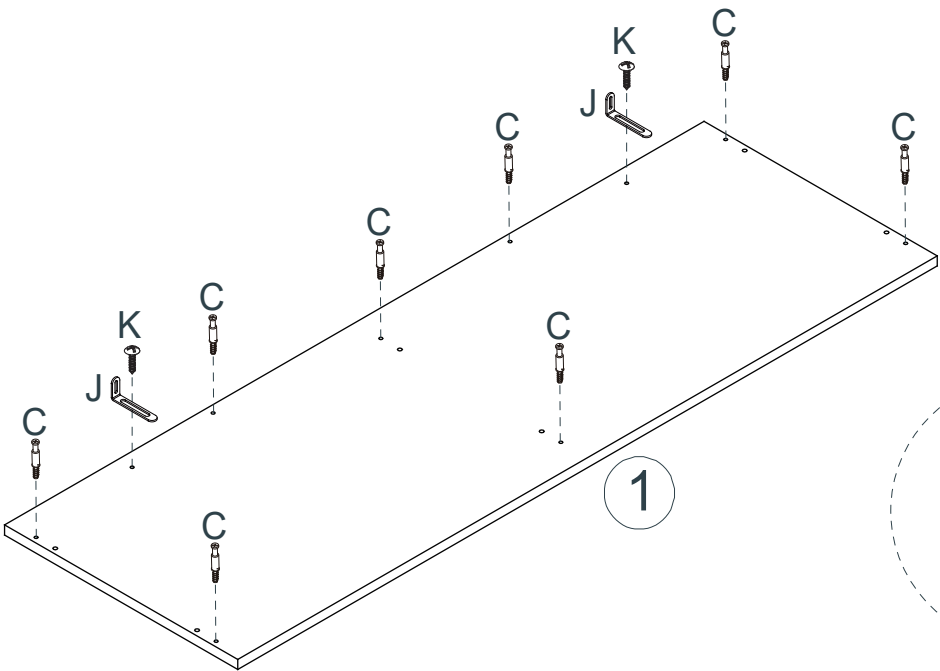


Hardware Needed		
C		x8
J		x2
K		x2


Step 19

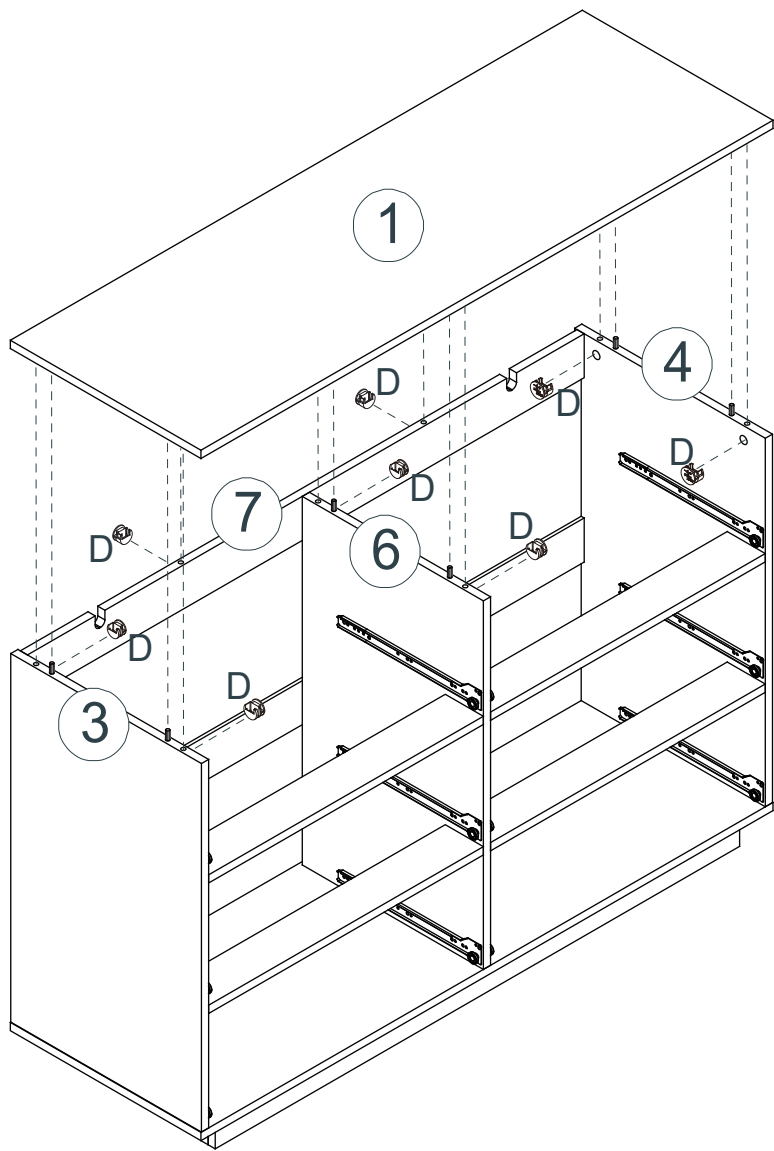


Hardware Needed		
D		X8

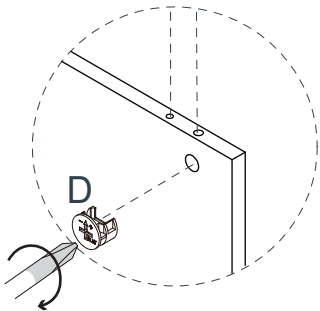


Step 20

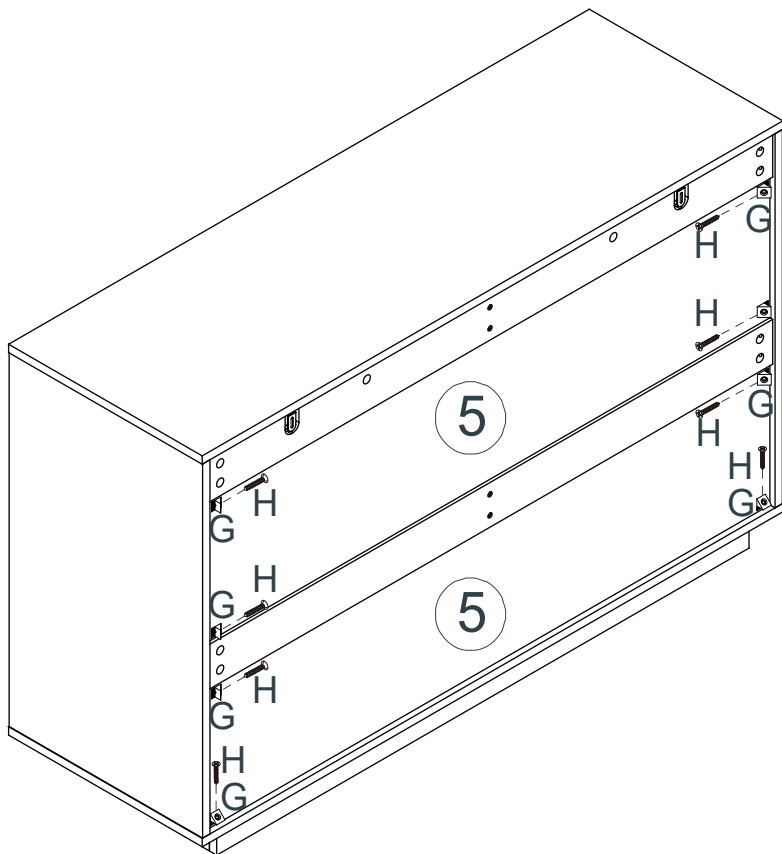


Hardware Needed		
G		X8
H		X8

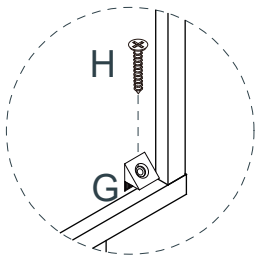


Step 21

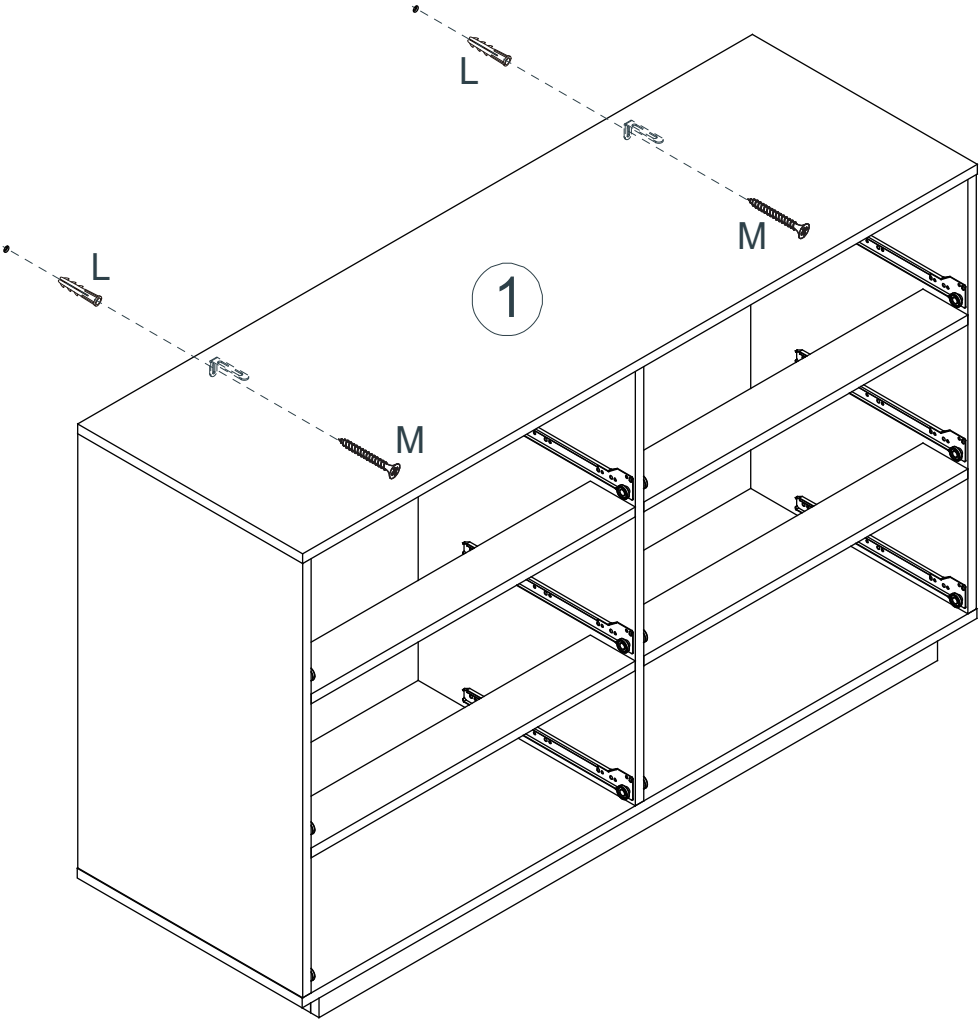

Hardware Needed		
L		X2
M		X2

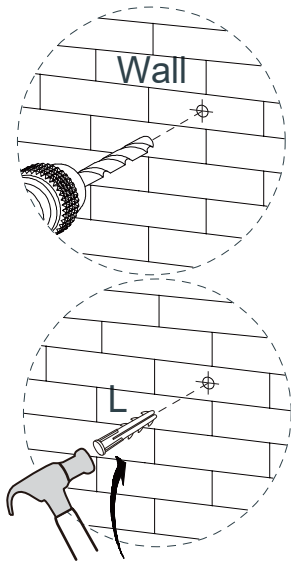

Step 22

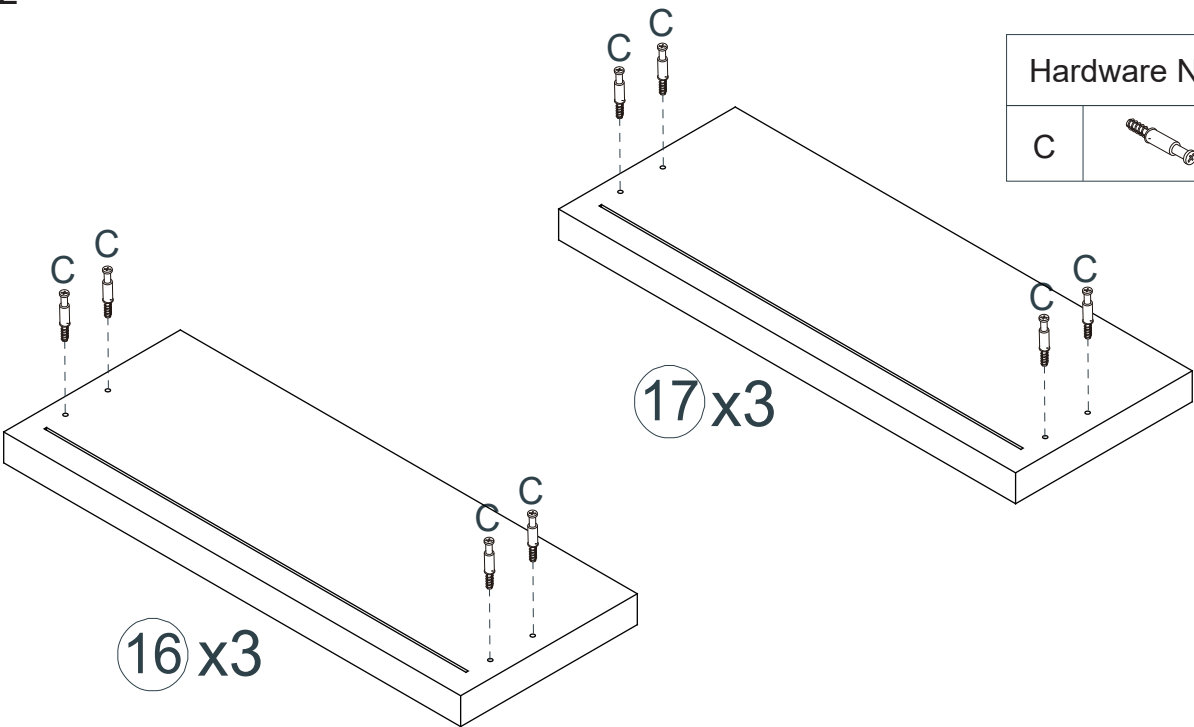


Hardware Needed		
C		x24


Drawer x6

Step 23

Hardware Needed		
D		X24

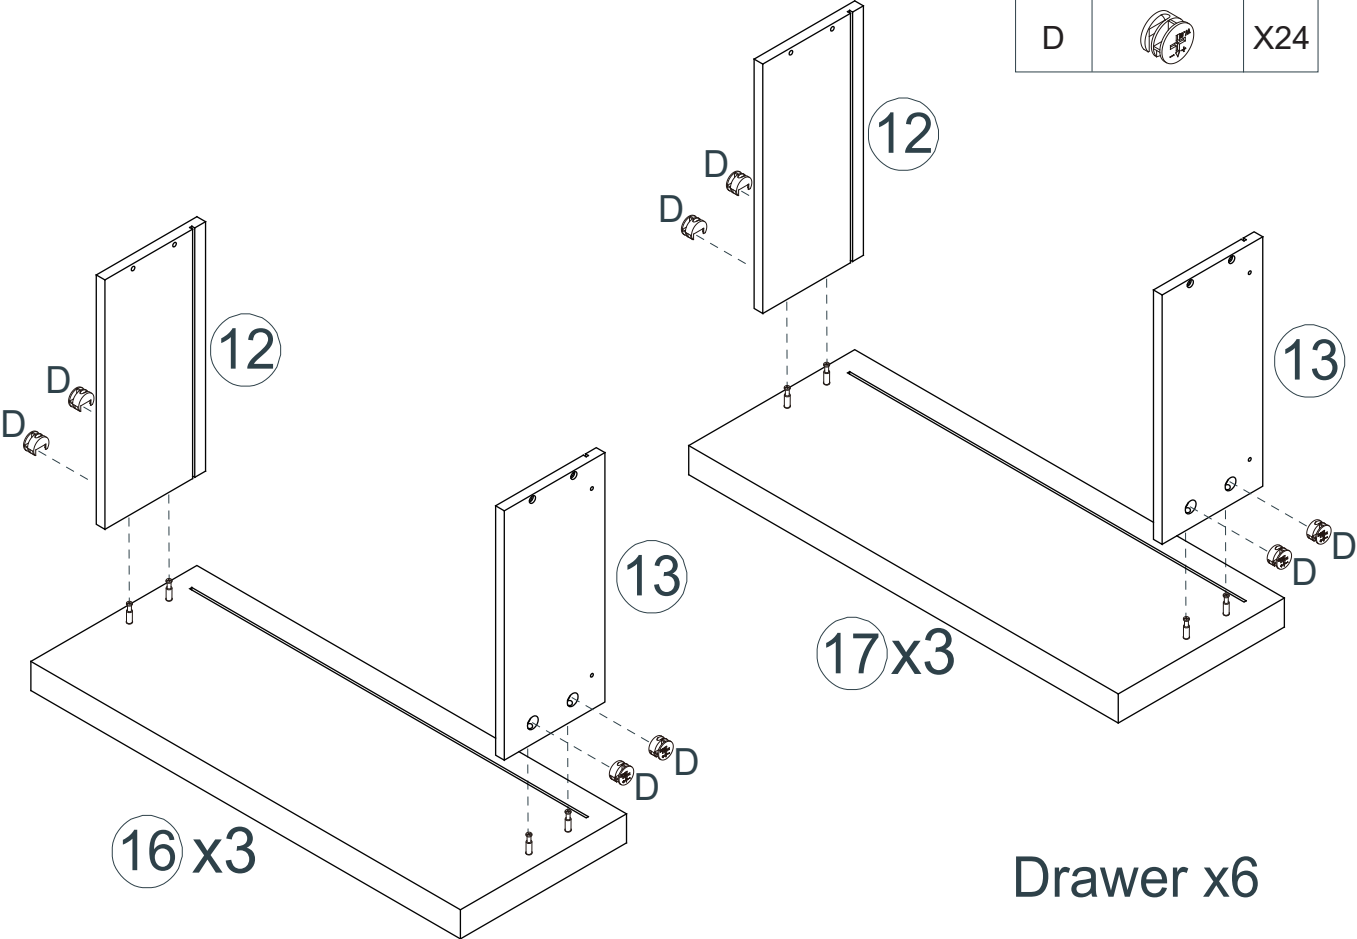


Step 24

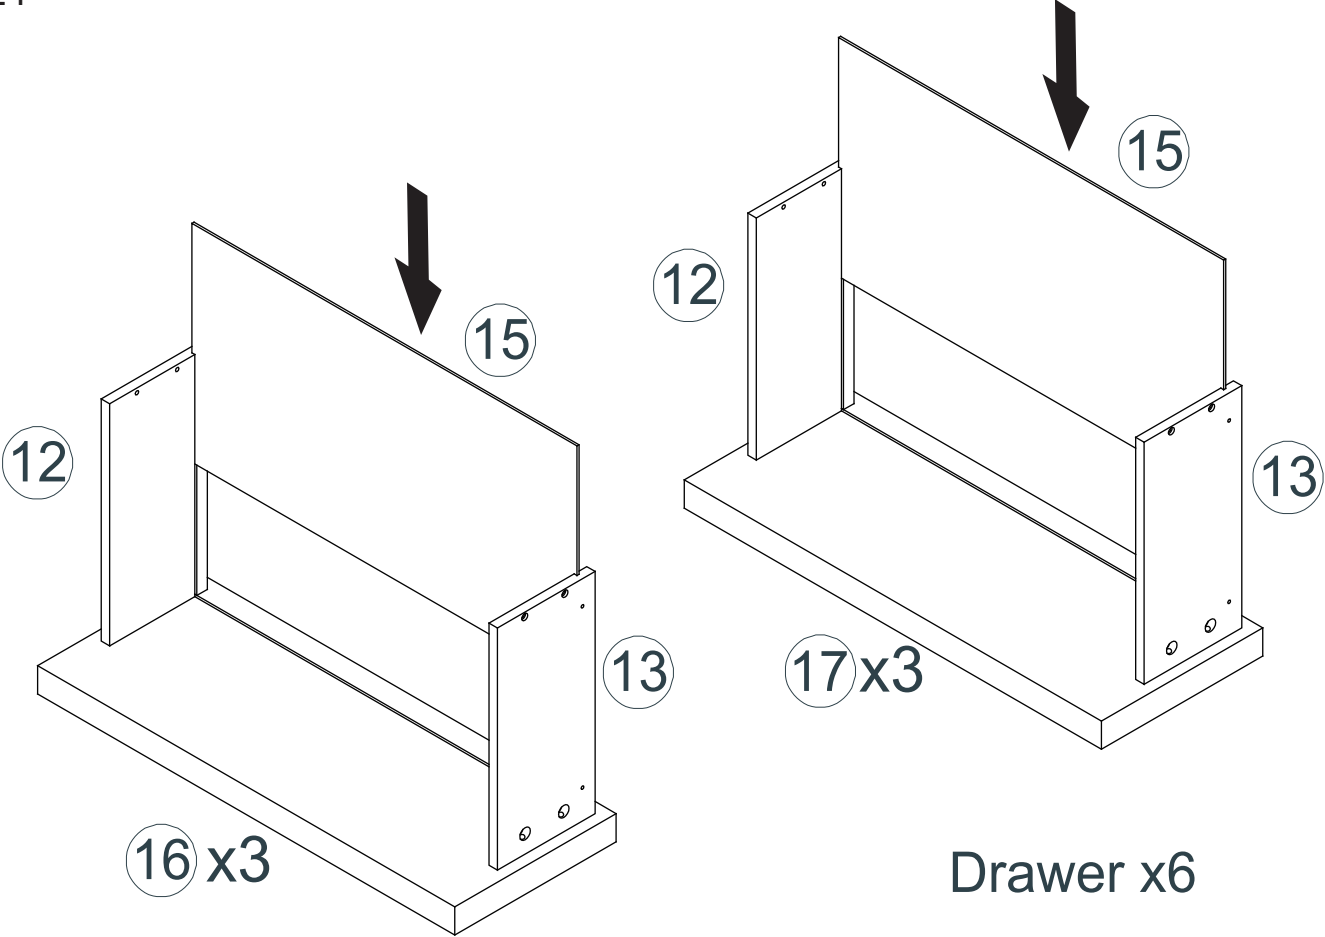

Step 25



Hardware Needed		
F		x24

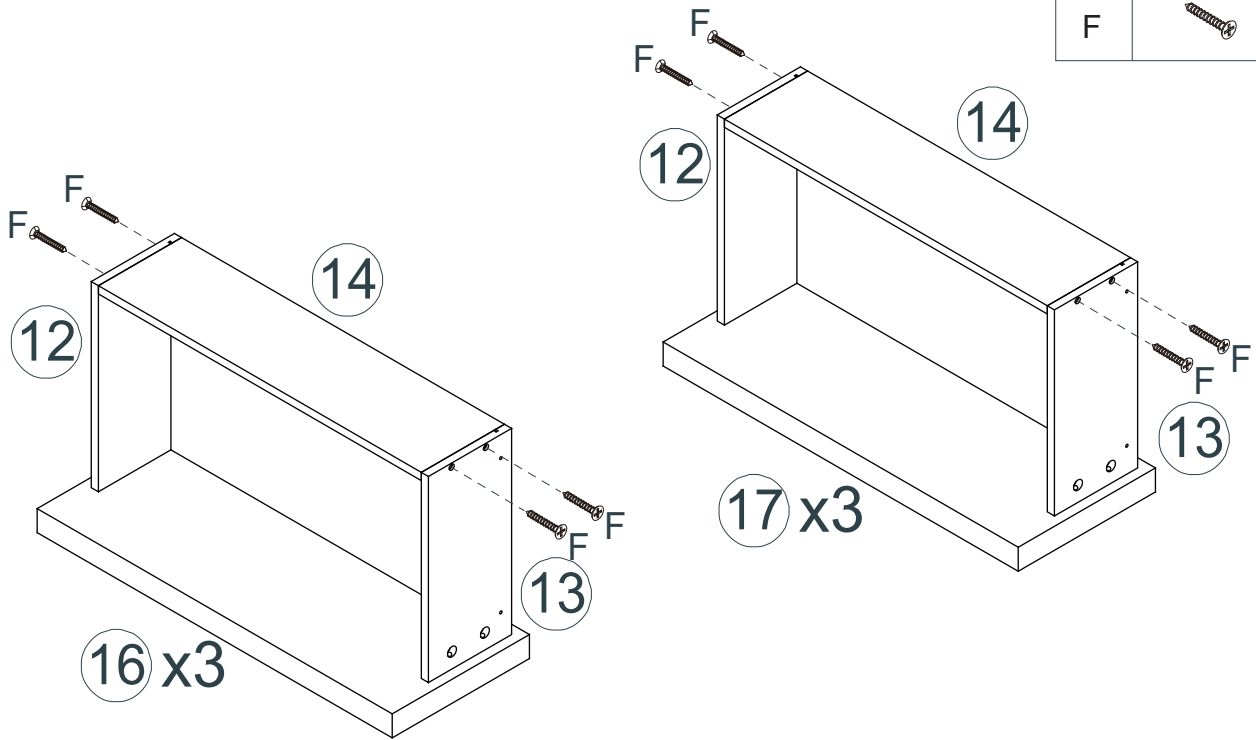

Drawer x6


Step 26

Hardware Needed		
E		x24
DL		x6
DR		x6

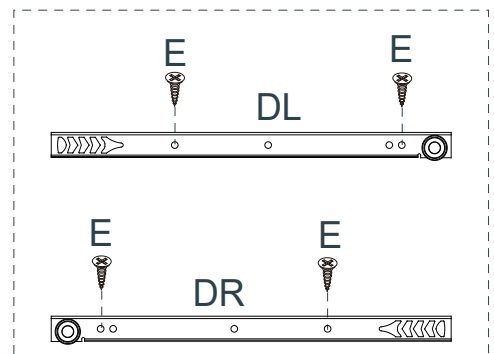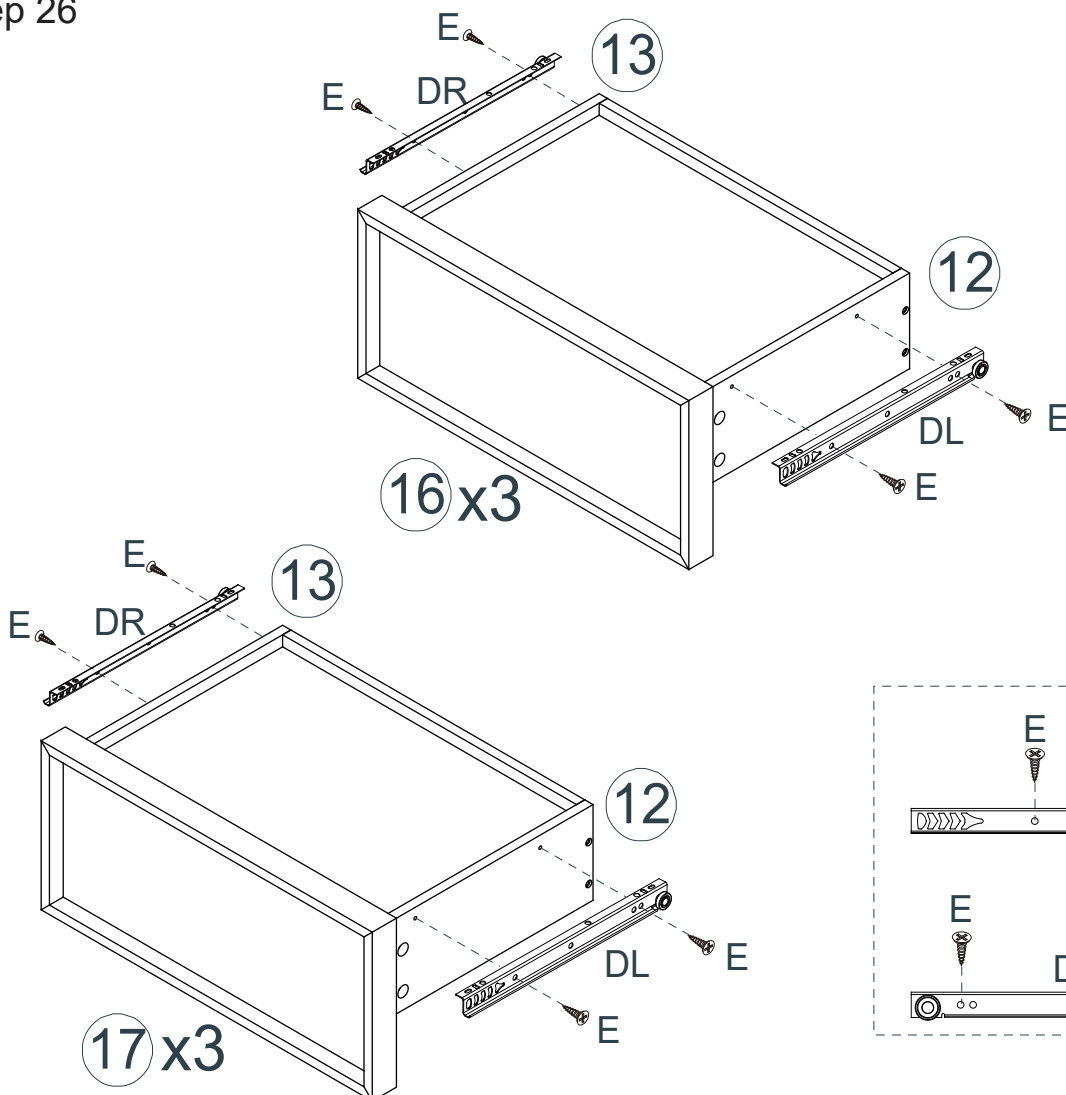

Drawer x6

Step 27

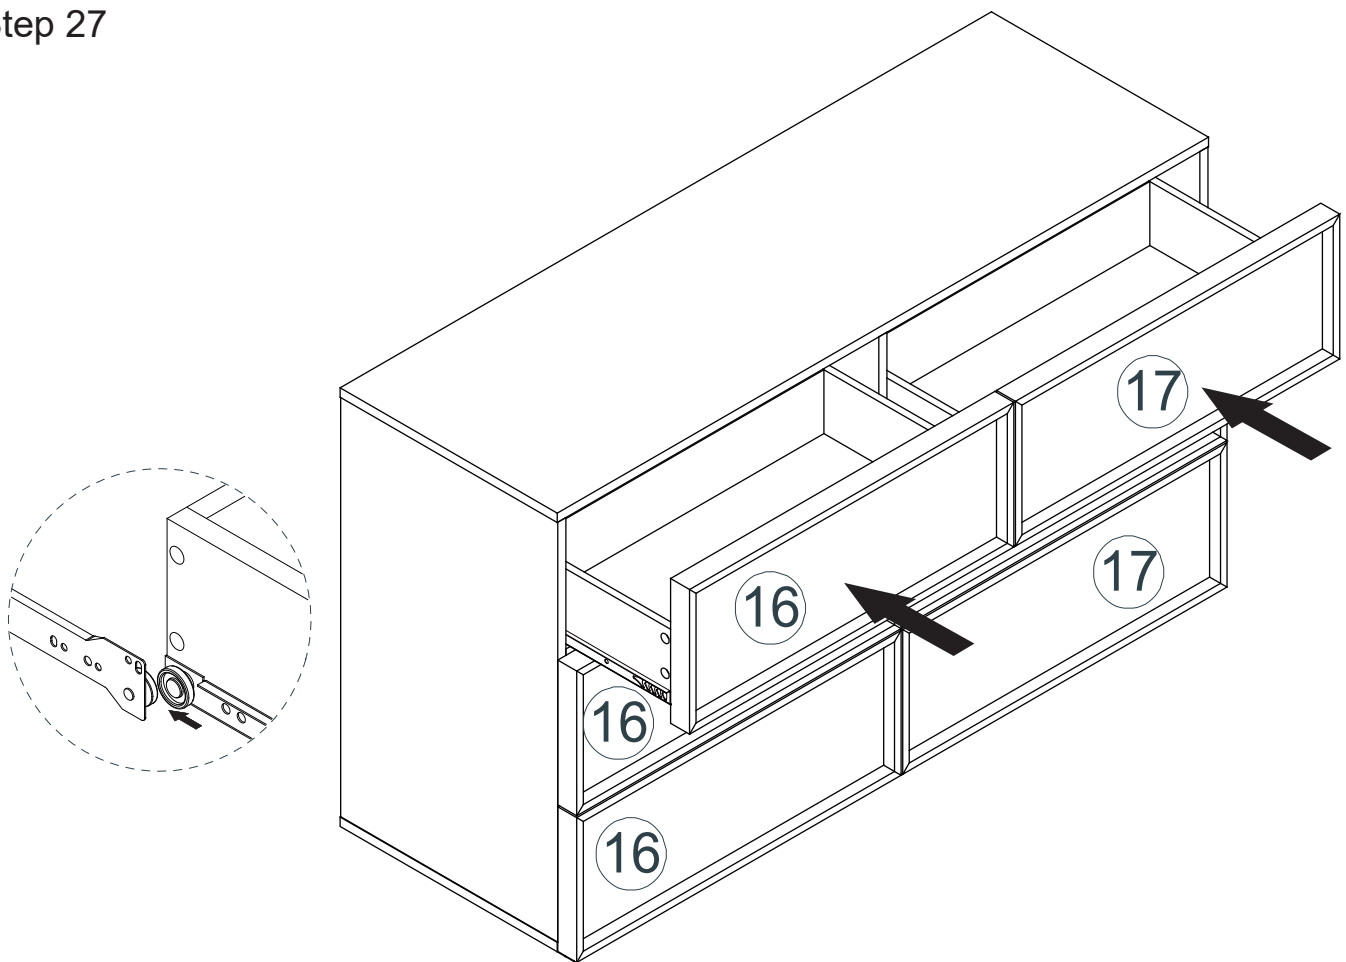

Insert the assembled drawers into the corresponding compartments as shown.

Step 28

