



PLATFORM BED ASSEMBLY INSTRUCTIONS

Video Tutorial available at www.DavidFrancisFurniture.com/pages/bed-assembly-instructions

BED PARTS

- One (1) foot rail
One (1) headboard rail
- Two (2) side rails
- Slats
Twin/Double - 8 slats
Twin XL/Queen/King - 9 slats
- Center slat support & legs

OPTIONAL DAVID FRANCIS HEADBOARD

BED HARDWARE


- Countersunk head screws
- Sixteen (16) pan-head screws

HEADBOARD HARDWARE


- Four (4) hex bolts
- Four (4) wing nuts
- Four (4) washers

TOOLS NEEDED


- Power drill
- Phillips drill bit

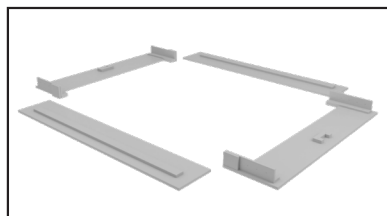

Step 1. Lay out foot rail, headboard rail, and side rails matching each corner with the corresponding numbers.

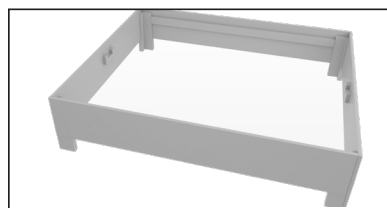


Step 2. Erect foot rail and headboard rail and mount side rails matching the corresponding numbers on each piece.

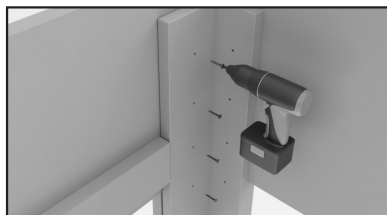


Step 3. Make sure you have perfectly square corners. Using a power drill, fasten four (4) pan-head screws into each connecting corner (4 pan-head screws per corner). Repeat for each corner until bed frame is fully secured.

IF YOU PURCHASED A DAVID FRANCIS HEADBOARD, PLEASE FOLLOW STEPS 4 - 6.

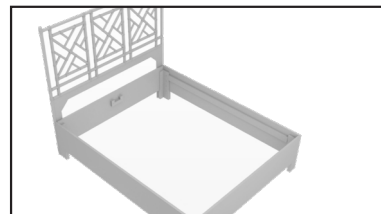

Step 4. Position the headboard against the headboard rail. The David Francis nameplate should face the wall.

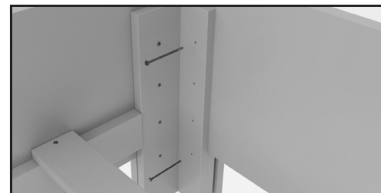


Step 5. Insert two (2) hex bolts through pre-drilled headboard rail from the inside of the headboard rail to the outside of the back of the headboard.



Step 6. Place one (1) washer per bolt, at the back of the headboard, secure with one (1) wingnut.

IF YOU DID **NOT** PURCHASE A DAVID FRANCIS HEADBOARD, SKIP TO STEP 7.

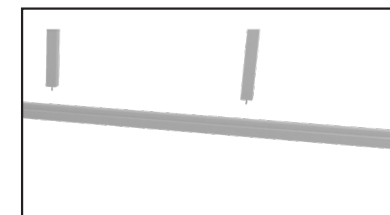

Step 7. Screw two (2) support legs on the center slat support. Place assembled center slat support on designated U-bracket support on foot rail and headboard rail.



Step 8. Place slats, spaced evenly, on the side rails. using a power drill, fasten one (1) countersunk screw at each end of slats. Ensure all screws are secure.