


ASSEMBLY INSTRUCTION INSTRUCTIONS DE MONTAGE

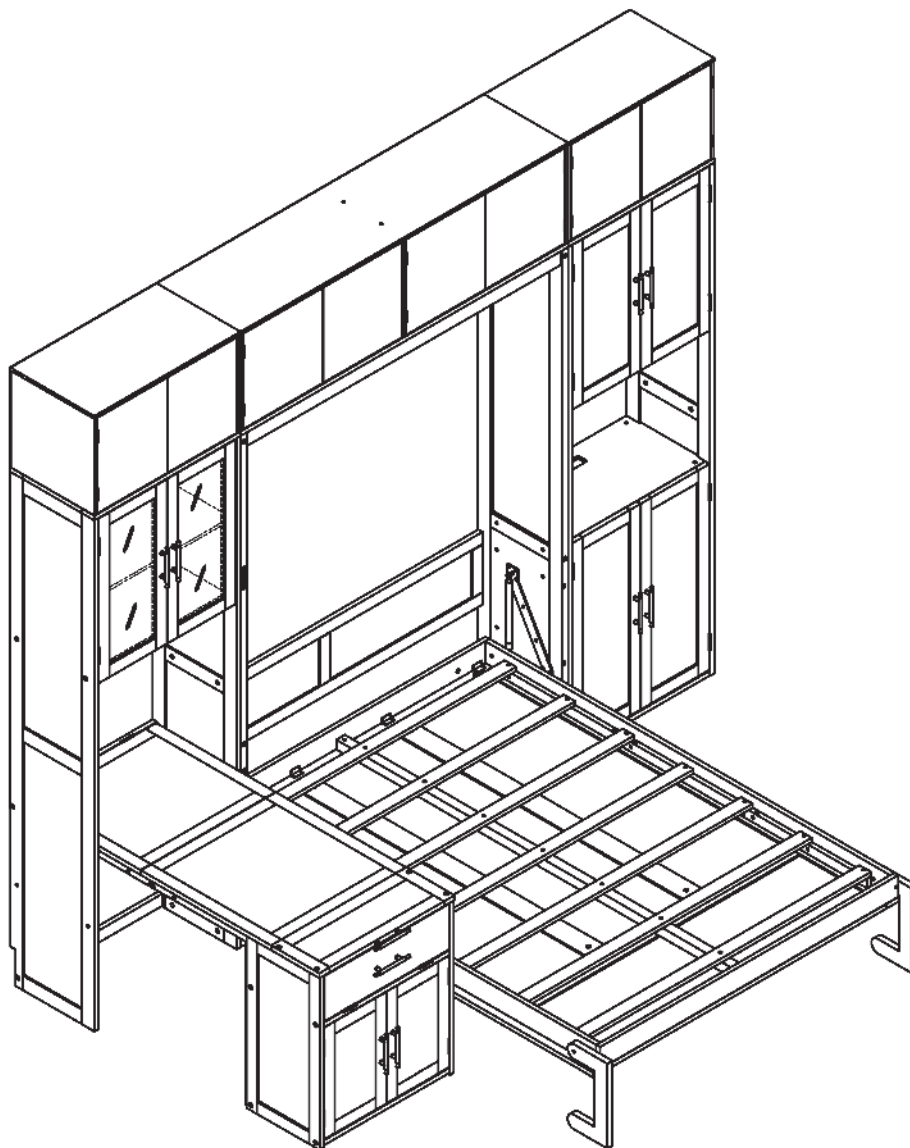


Two people are required to
assemble and move this model.
Deux personnes sont nécessaires pour
assembler et déplacer ce modèle.


Note: This bed must be equipped with
a mattress e quivalent to 44 lb

Remarque : Ce lit doit être équipé d'un
matelas équivalent à 44 livres


OPTION 1

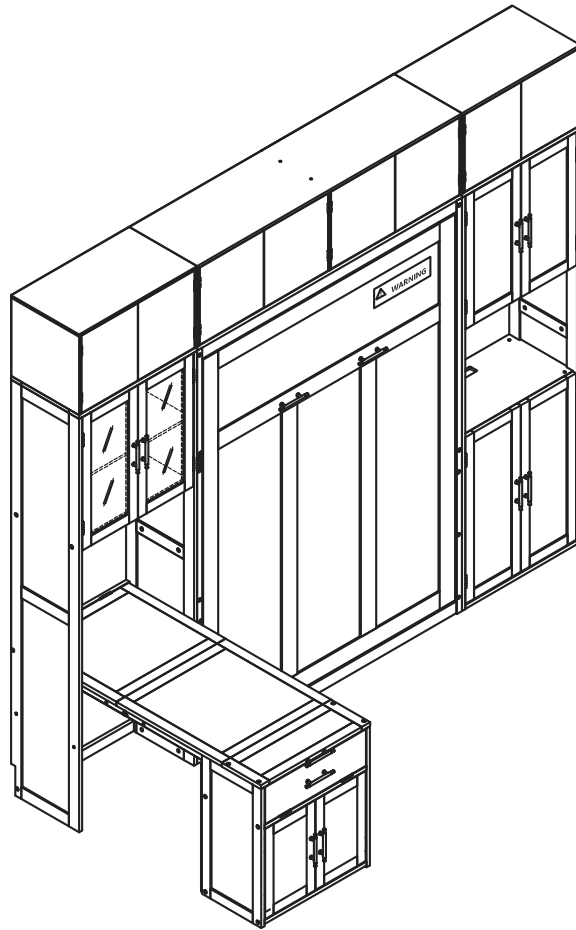


OPTION 2

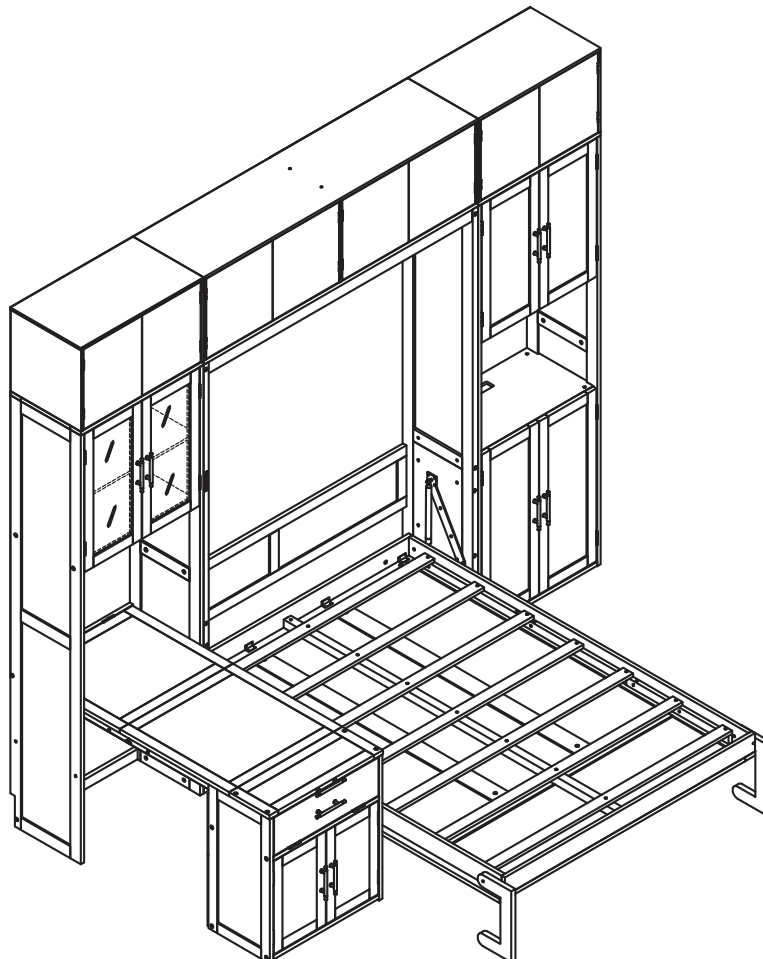


OPTION 3

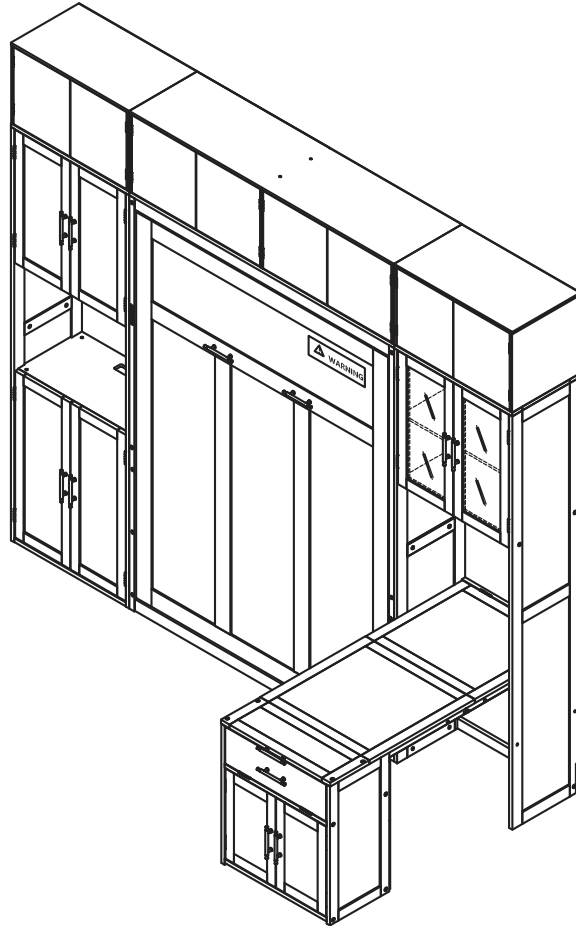

OPTION 4

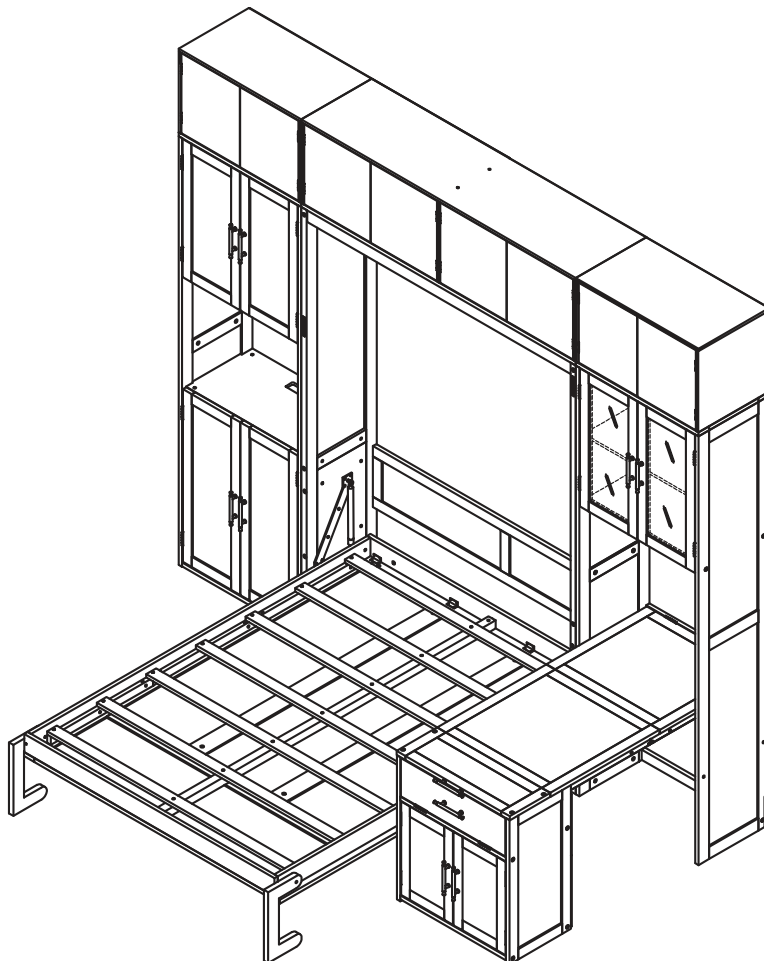


ASSEMBLY INSTRUCTION
INSTRUCTIONS DEMONTAGE

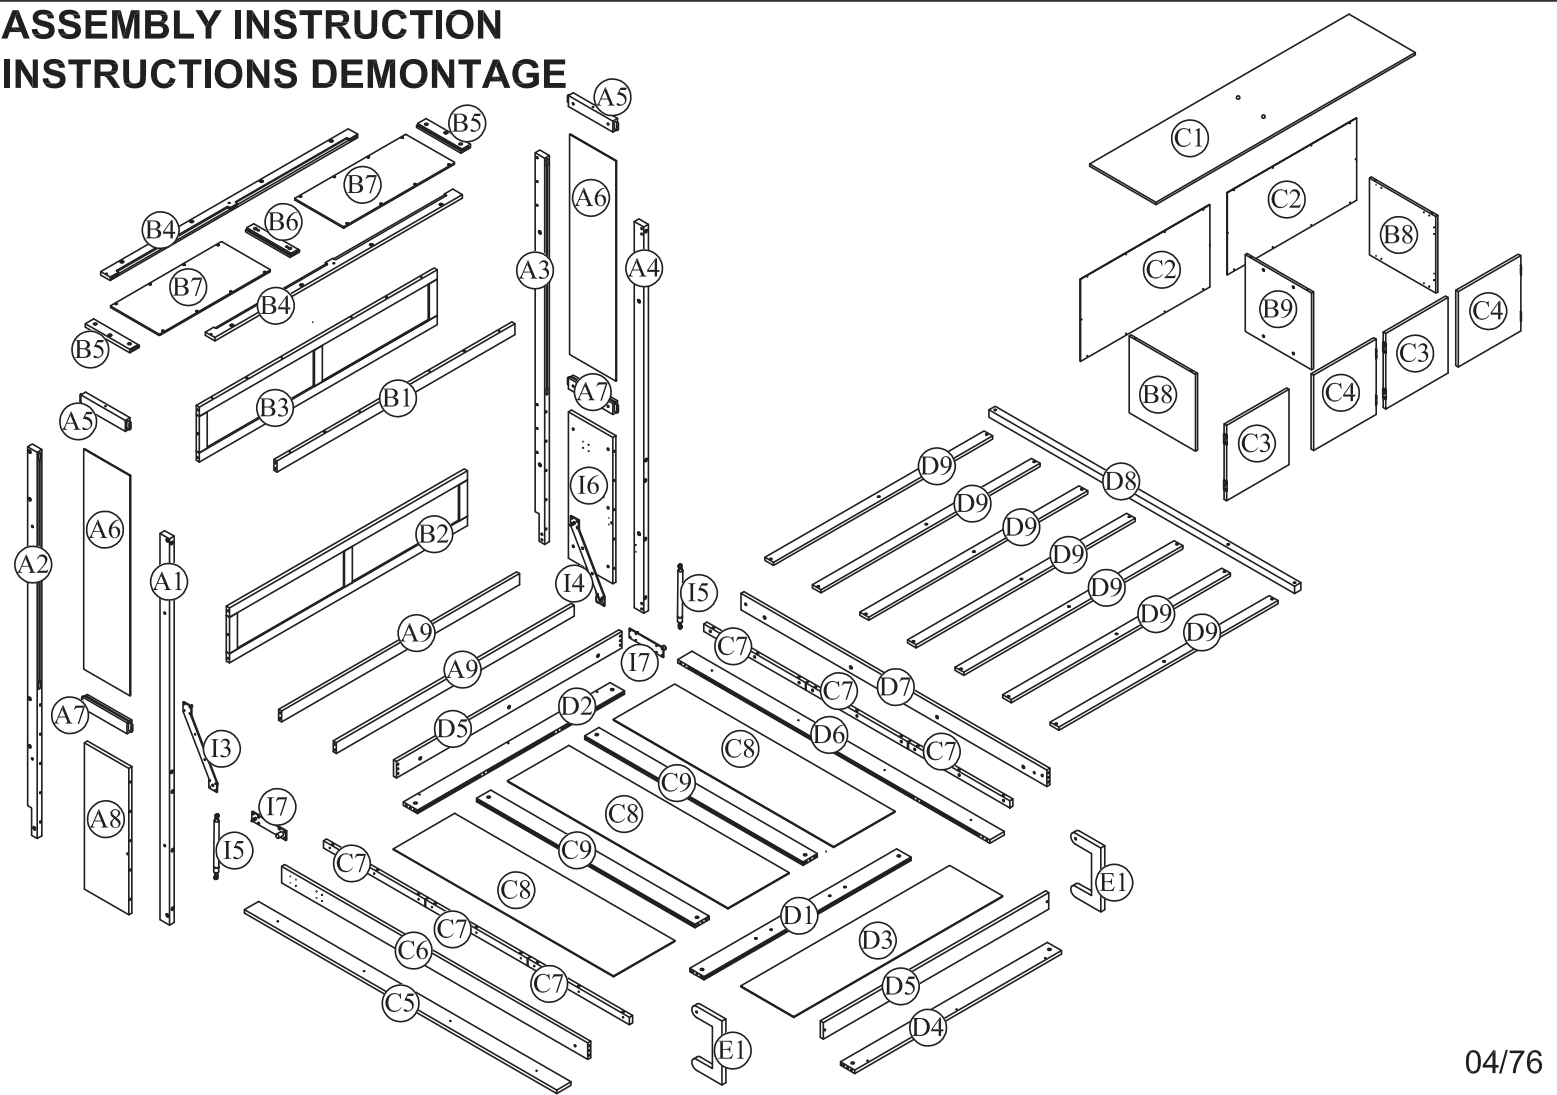


ASSEMBLY INSTRUCTION

INSTRUCTIONS DEMONTAGE

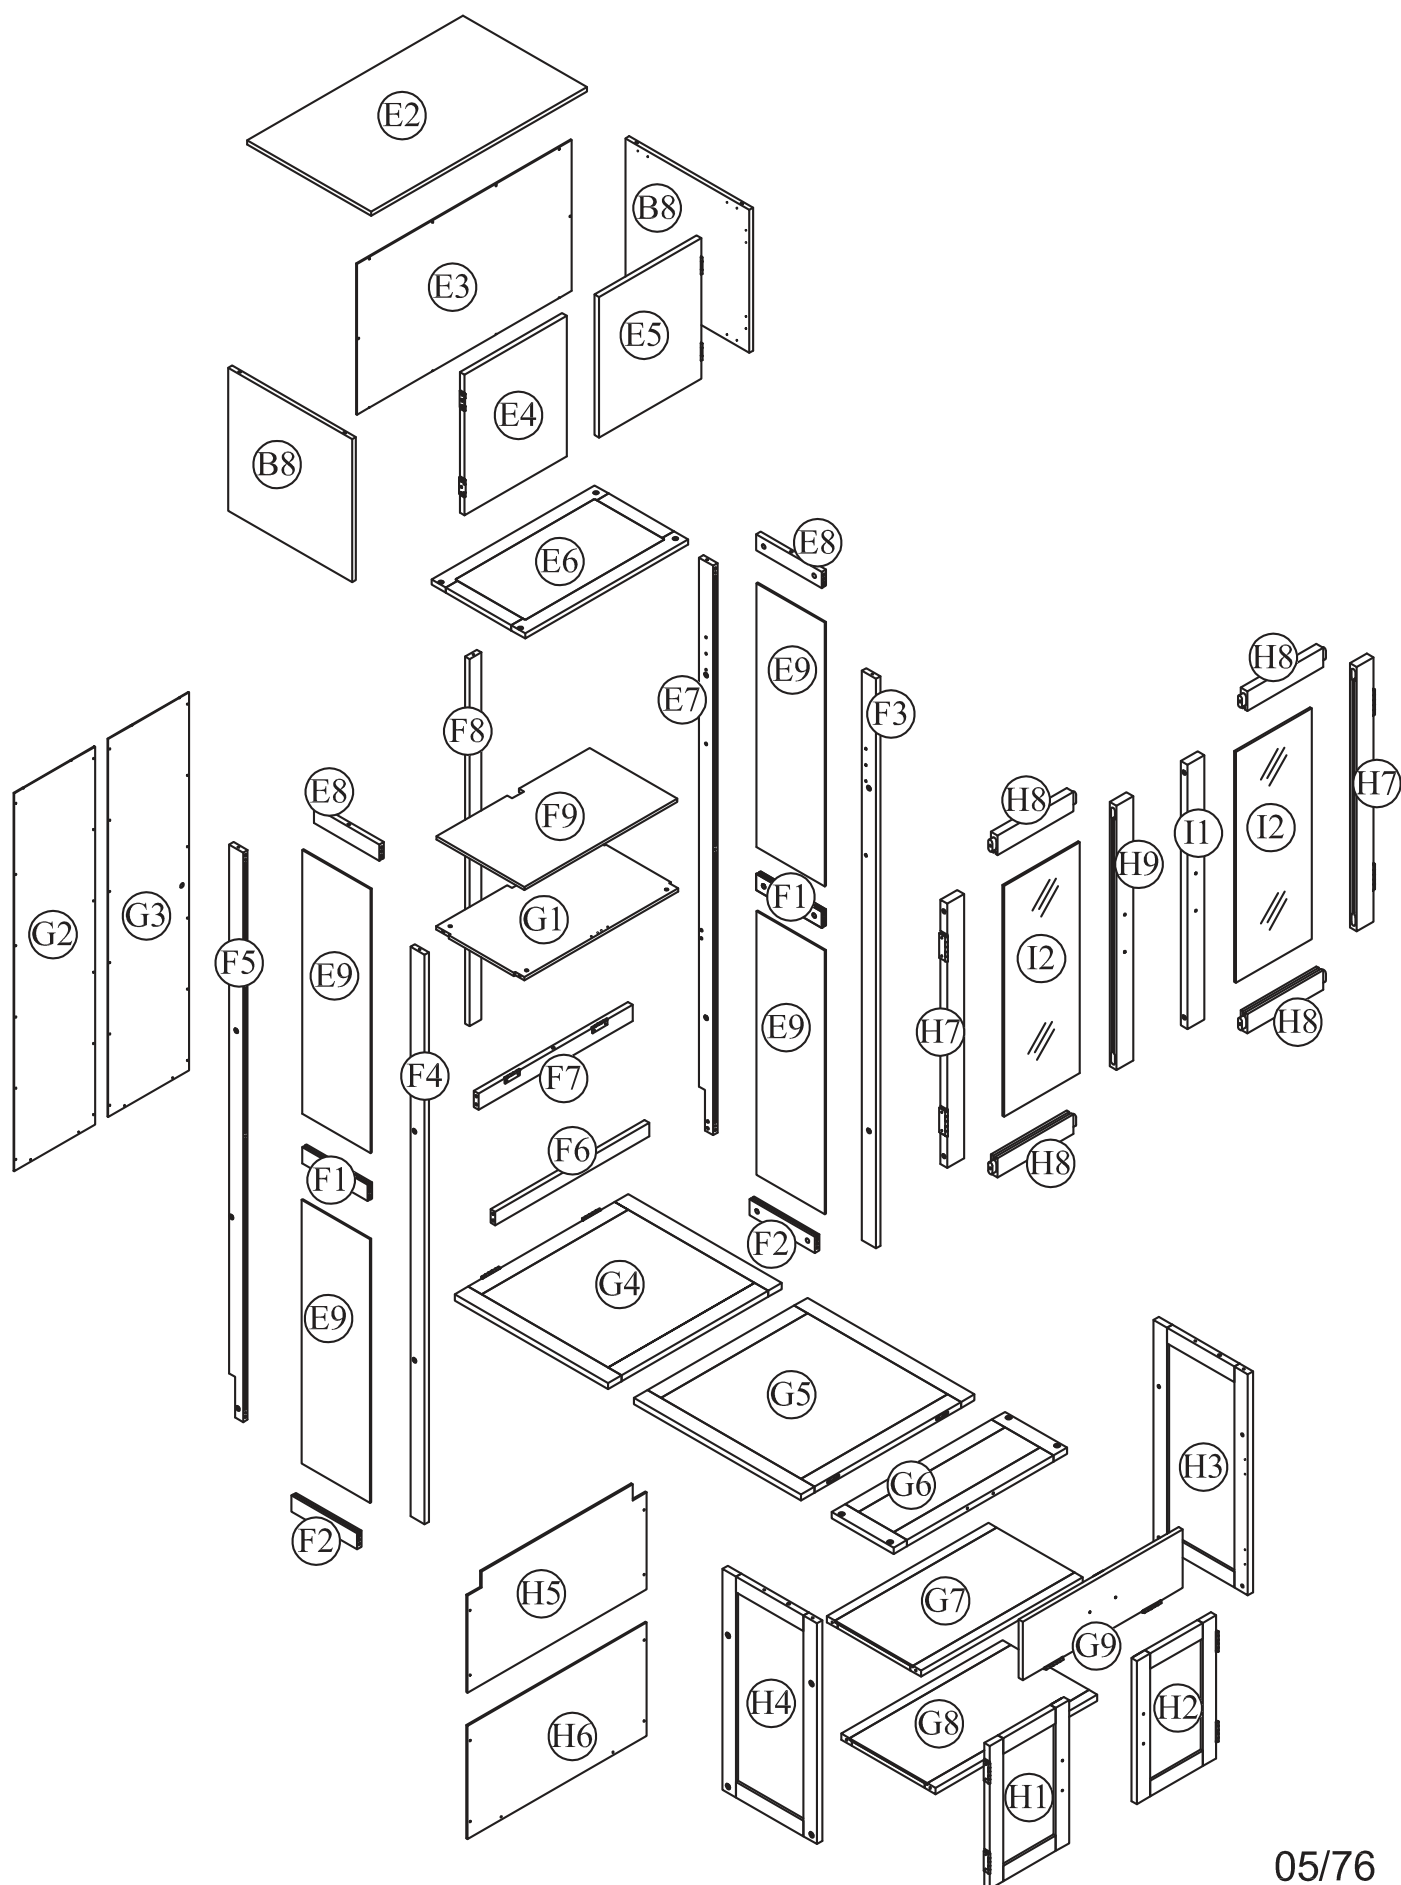

ASSEMBLY INSTRUCTION


INSTRUCTIONS DEMONTAGE

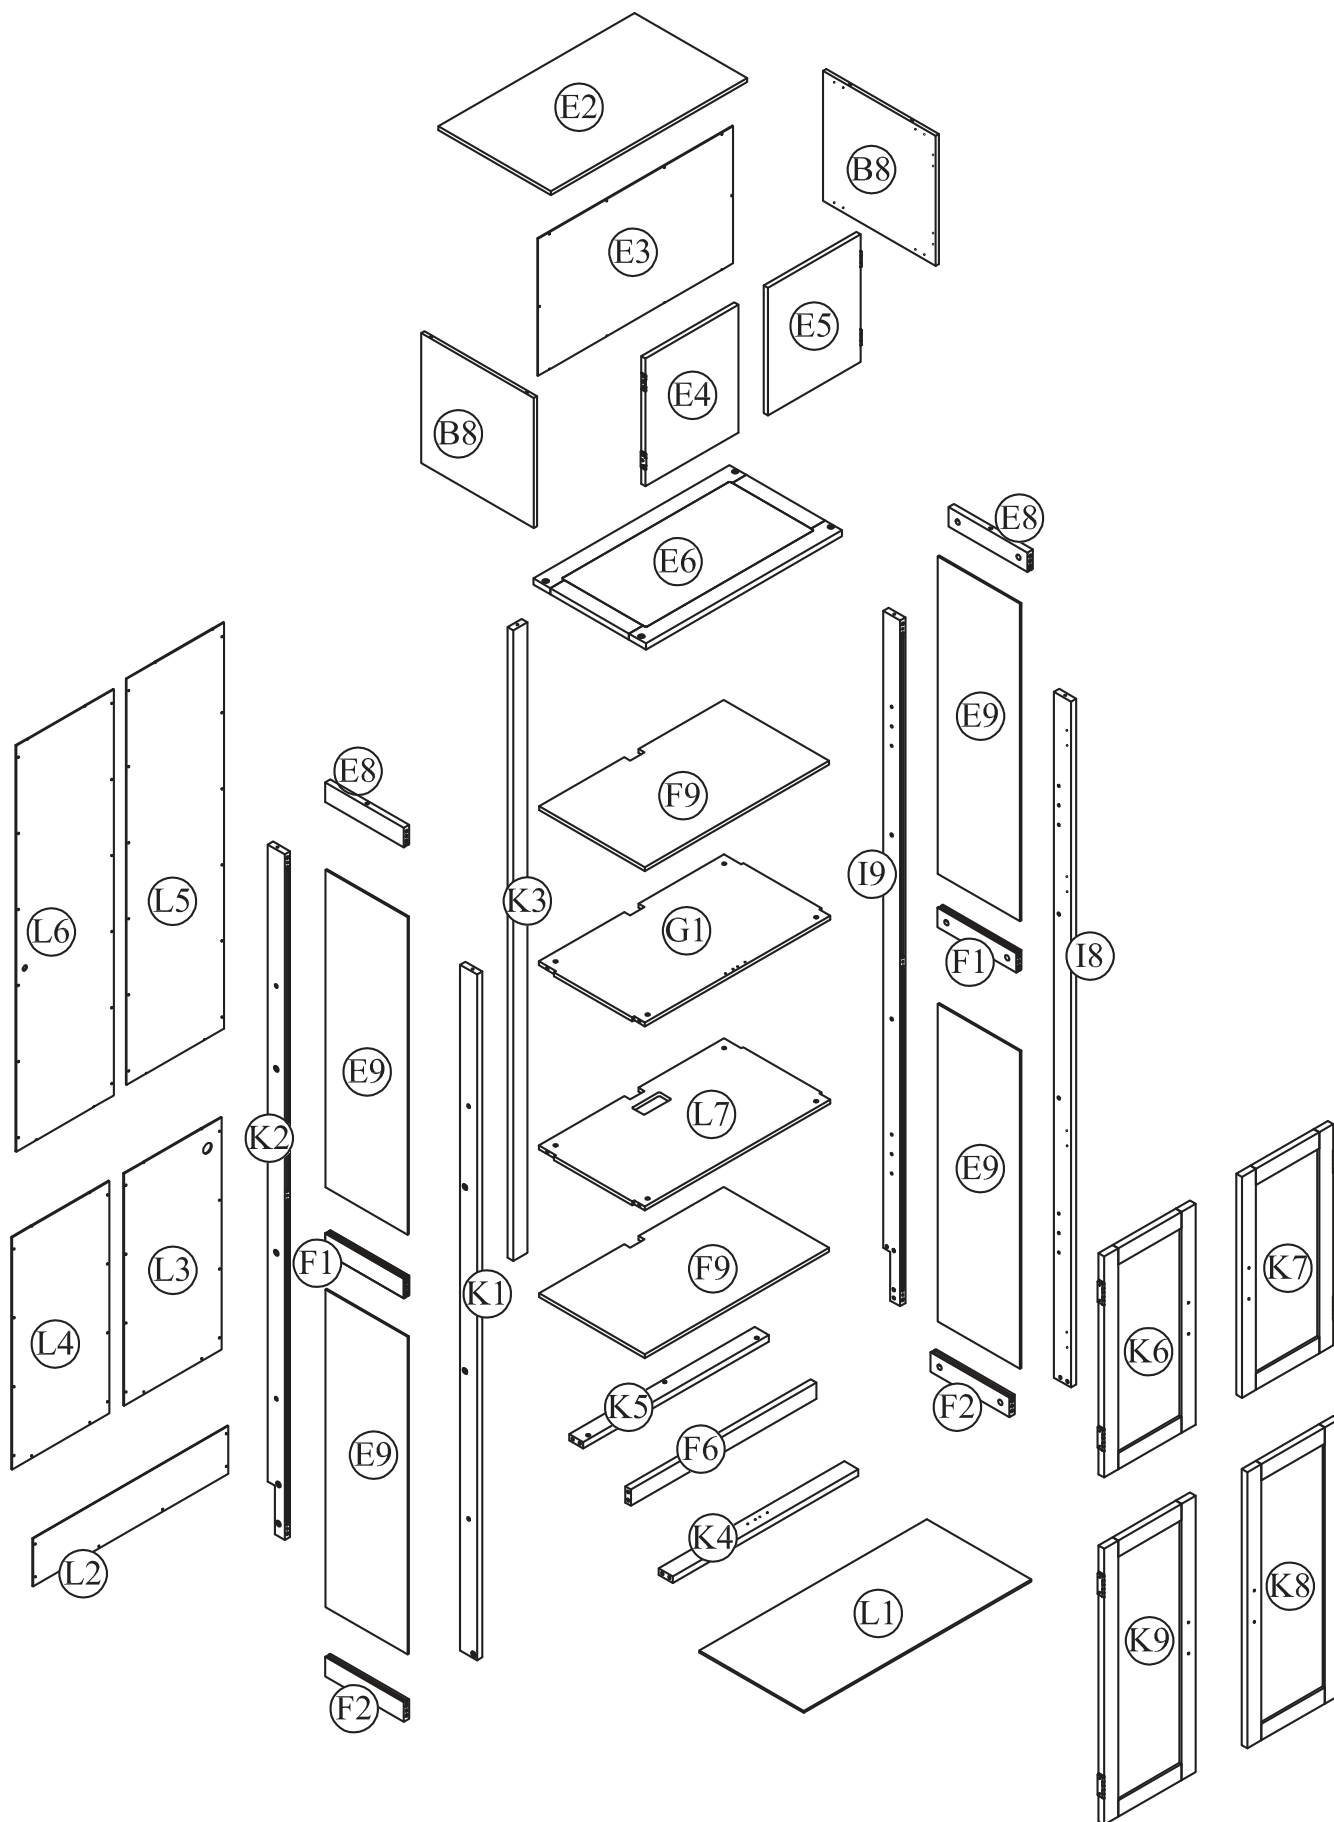

Part List (Box 1)


Liste des pièces

E6

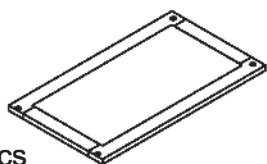


Panel - 2pcs
Planche

F9

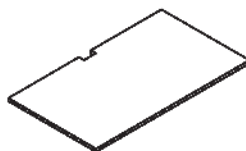


Panel - 3pcs
Planche

G1

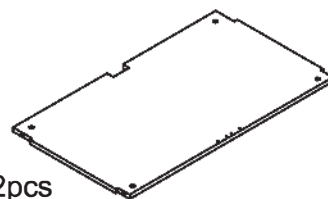


Panel - 2pcs
Planche

G7

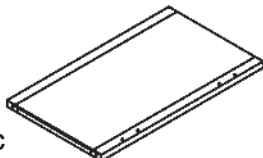


Panel - 1pc
Planche

G8

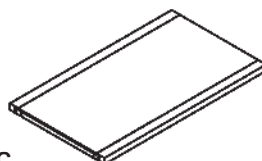


Panel - 1pc
Planche

G9

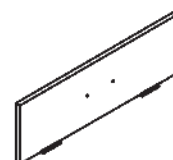

Panel - 1pc
Planche















L7

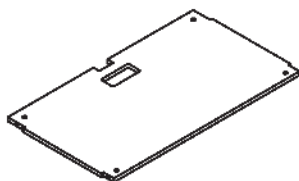

Panel - 1pc
Planche
















Part List (Box 2)

Liste des pièces

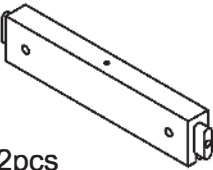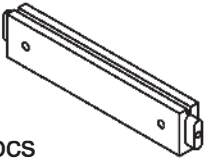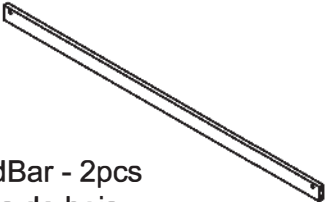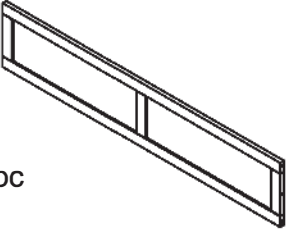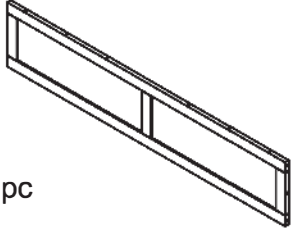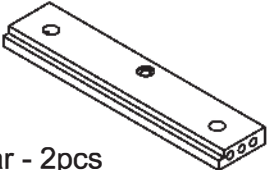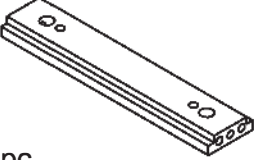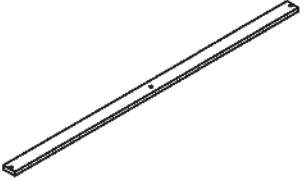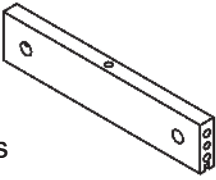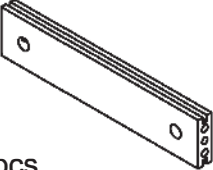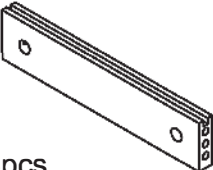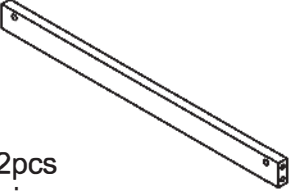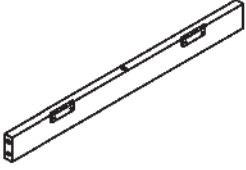A5  WoodBar - 2pcs Barres de bois	A7  WoodBar - 2pcs Barres de bois	A9  WoodBar - 2pcs Barres de bois
B1  WoodBar - 1pc Barres de bois	B2  Panel - 1pc Planche	B3  Panel - 1pc Planche
B5  WoodBar - 2pcs Barres de bois	B6  WoodBar - 1pc Barres de bois	D9  Slats-7pcs Lattes
E8  WoodBar - 4pcs Barres de bois	F1  WoodBar - 4pcs Barres de bois	F2  WoodBar - 4pcs Barres de bois
F6  WoodBar - 2pcs Barres de bois	F7  WoodBar - 1pc Barres de bois	H7  WoodBar - 2pcs Barres de bois
H8  WoodBar - 4pcs Barres de bois	H9  WoodBar - 1pc Barres de bois	I1  WoodBar - 1pc Barres de bois
K4  WoodBar - 1pc Barres de bois	K5  WoodBar - 1pc Barres de bois	












Part List & Hardware List (Box 3)

Liste des pièces et liste du matériel

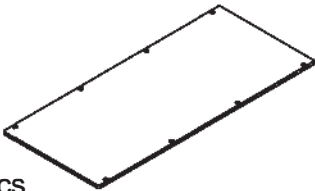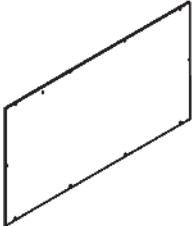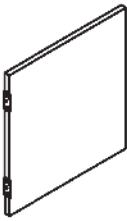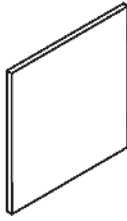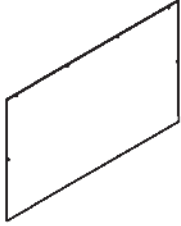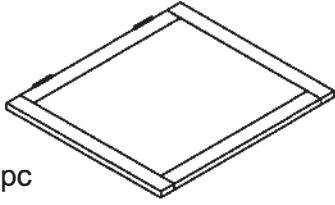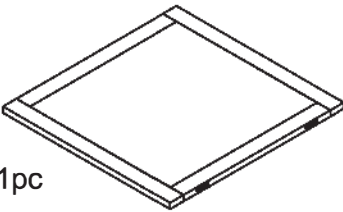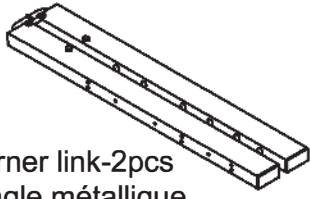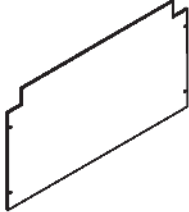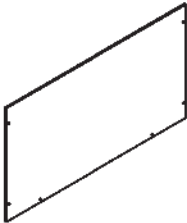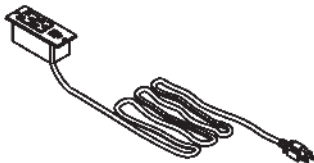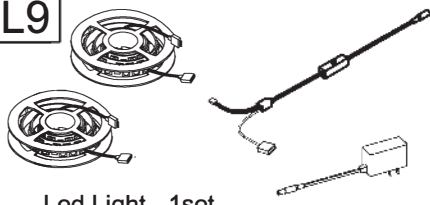A8  Panel - 1pc Planche	B7  Panel - 2pcs Planche	C2  Panel - 2pcs Planche
C3  Panel - 2pcs Planche	C4  Panel - 2pcs Planche	E4  Panel - 2pcs Planche
E3  Panel - 2pcs Planche	E5  Panel - 2pcs Planche	G4  Panel - 1pc Planche
G5  Panel - 1pc Planche	M1  Metal corner link-2pcs Lien d'angle métallique	H5  Panel - 1pc Planche
H6  Panel - 1pc Planche	I6  Panel - 1pc Planche	L3  Panel - 1pc Planche
L4  Panel - 1pc Planche	L8  USB power outlet - 1pc	L9  Led Light - 1set









Part List (Box 4)

Liste des pièces

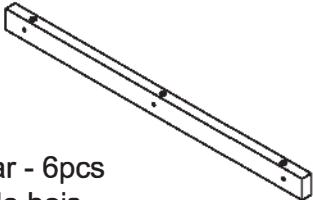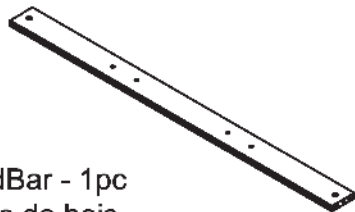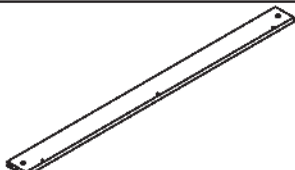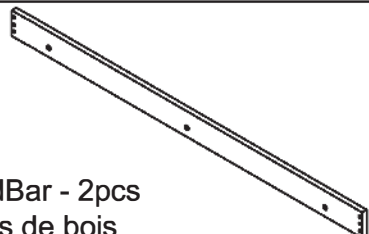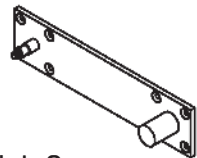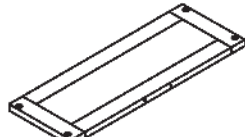C7  WoodBar - 6pcs Barres de bois	C9  WoodBar - 2pcs Barres de bois	D1  WoodBar - 1pc Barres de bois
D2  WoodBar - 1pc Barres de bois	D4  WoodBar - 1pc Barres de bois	D5  WoodBar - 2pcs Barres de bois
E1  WoodBar-2pcs Barres de bois	H1  Panel - 1pc Planche	H2  Panel - 1pc Planche
H3  Panel - 1pc Planche	I3  Metal corner link-1pc Lien d'angle métallique	I4  Metal corner link-1pc Lien d'angle métallique
I5  Piston Steam-2pcs Vapeur de piston	I7  Metal corner link-2pcs Lien d'angle métallique	K6  Panel - 1pc Planche
K7  Panel - 1pc Planche	K8  Panel - 1pc Planche	K9  Panel - 1pc Planche
H4  Panel - 1pc Planche	I2  Tempered Glass - 2 pcs Verre trempé thermique	G6  Panel - 1pc Planche







Part List (Box 5)

Liste des pièces

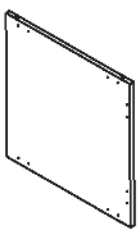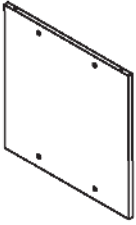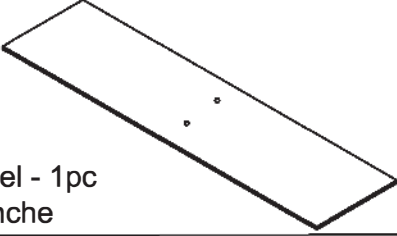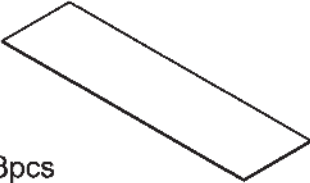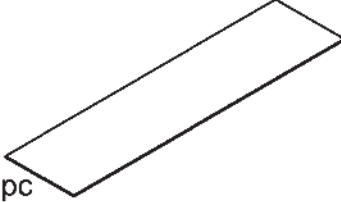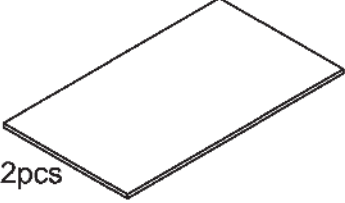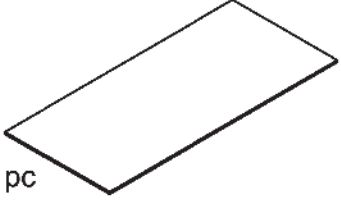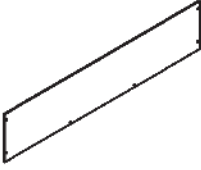A6  Panel - 2pcs Planche	B8  Panel - 6pcs Planche	B9  Panel - 1pc Planche
C1  Panel - 1pc Planche	C8  Panel - 3pcs Planche	D3  Panel - 1pc Planche
E2  Panel - 2pcs Planche	E9  Panel - 8pcs Planche	G2  Panel - 1pc Planche
G3  Panel - 1pc Planche	L6  Panel - 1pc Planche	L1  Panel - 1pc Planche
L2  Panel - 1pc Planche	L5  Panel - 1pc Planche	





Part List (Box 6)

Liste des pièces

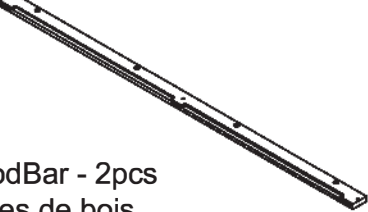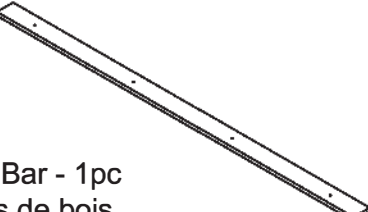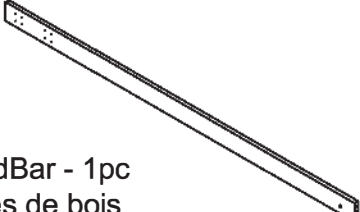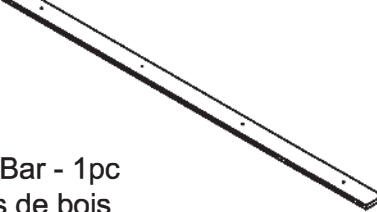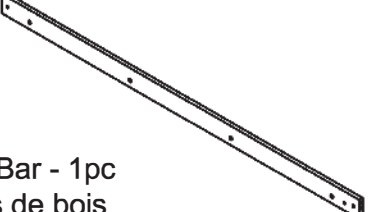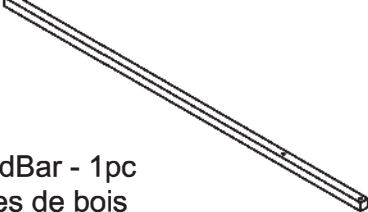A1  Leg - 1pc Jambe	A2  Leg - 1pc Jambe	A3  Leg - 1pc Jambe
A4  Leg - 1pc Jambe	B4  WoodBar - 2pcs Barres de bois	C5  WoodBar - 1pc Barres de bois
C6  WoodBar - 1pc Barres de bois	D6  WoodBar - 1pc Barres de bois	D7  WoodBar - 1pc Barres de bois
D8  WoodBar - 1pc Barres de bois	E7  Leg - 1pc Jambe	F3  Leg - 1pc Jambe
F4  Leg - 1pc Jambe	F5  Leg - 1pc Jambe	F8  WoodBar - 1pc Barres de bois
I8  Leg - 1pc Jambe	I9  Leg - 1pc Jambe	K1  Leg - 1pc Jambe
K2  Leg - 1pc Jambe	K3  WoodBar - 1pc Barres de bois	



Hardware List (Box 3)

Liste du matériel

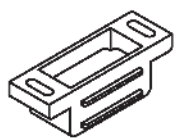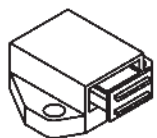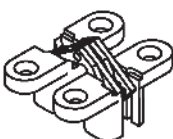1	 Bolts Ø1/4" x 100 mm - 18pcs Boulon	2	 Bolts Ø1/4" x 80 mm - 16pcs Boulon	3	 Bolts Ø1/4" x 60 mm - 30pcs Boulon
4	 Bolts Ø1/4" x 40 mm - 2pcs Boulon	5	 Ø1/4" x 13 mm Horizontal-Hole bolts - 64pcs Boulons à trou horizontal	6	 Wood dowel Ø8x30 mm-126pcs Cheville en bois
7	 Wood dowel Ø6x30 mm-24pcs Cheville en bois	8	 Cam bolt 54pcs Boulon à came	9	 Cam lock Ø15 x 12 mm- 54pcs Serrure à came
10	 Magnet Door Catcher 10pcs Attrape-porte aimanté	11	 Tip on 8pcs Conseil sur	12	 Door Wheel -6pcs Roue de Porte
13	 Door Wheel Catcher-6pcs Attrapeur de Roue de Porte	14	 Cross hinge- 2pcs Charnière en croix	15	 Wheels -4pcs Roues
16	 Handle 12pcs Poignée	17	 Handle 12pcs Poignée	18	 Nut 4pcs Écrou
19	 Ø1/3" x 40 mm Hex-Head bolts 2pcs	20	 Ø20 / Ø6 x 2 mm Washer 2pcs Rondelle	21	 Screws 1/4" x40mm- 41pcs Vis

Hardware List (Box 3)

Liste du matériel

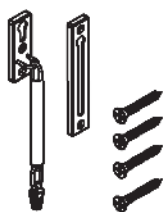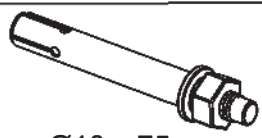
22  Screws 1/4" x60mm- 8pcs Vis	23  Ø1/4" x 15 mm Canopy head though - 2pcs Tête à baldaquin	24  Lock - 1set Verrou
25  Angle Metal 9pcs Angle métallique	26  Wood Screws M3 x12mm-64pcs Les vis à bois	27  Wood Screws M3.5 x15mm-112pcs Les vis à bois
28  Wood Screws M4 x 15mm-243pcs Les vis à bois	29  Wood Screws M4 x 20mm-39pcs Les vis à bois	30  Wood Screws M4 x 30mm-39pcs Les vis à bois
31  Wood Screws M4 x 45mm-21pcs Les vis à bois	32  Bolts Ø1/6" x 22 mm - 24pcs Boulon	33  Wood Screws M3.5 x12mm-118pcs Les vis à bois
34  Angle Metal 3pcs Angle métallique	35  Ø10 x 75 mm metal anchors-6pcs ancrages métalliques	36  Screws 1/4" x70mm- 6pcs Vis
37  Angle Metal 24pcs Angle métallique	38  Allen Key - 2pcs Clé Allen	39  Wrench 1pc Clé
40  Screws 1/4" x80mm- 1pc Vis	41  Angle Metal 12pcs Angle métallique	



Assembly Tools Required (Not Included)
Outils d'assemblage requis (Non Inclus)

STEP 1:


Étape 1:

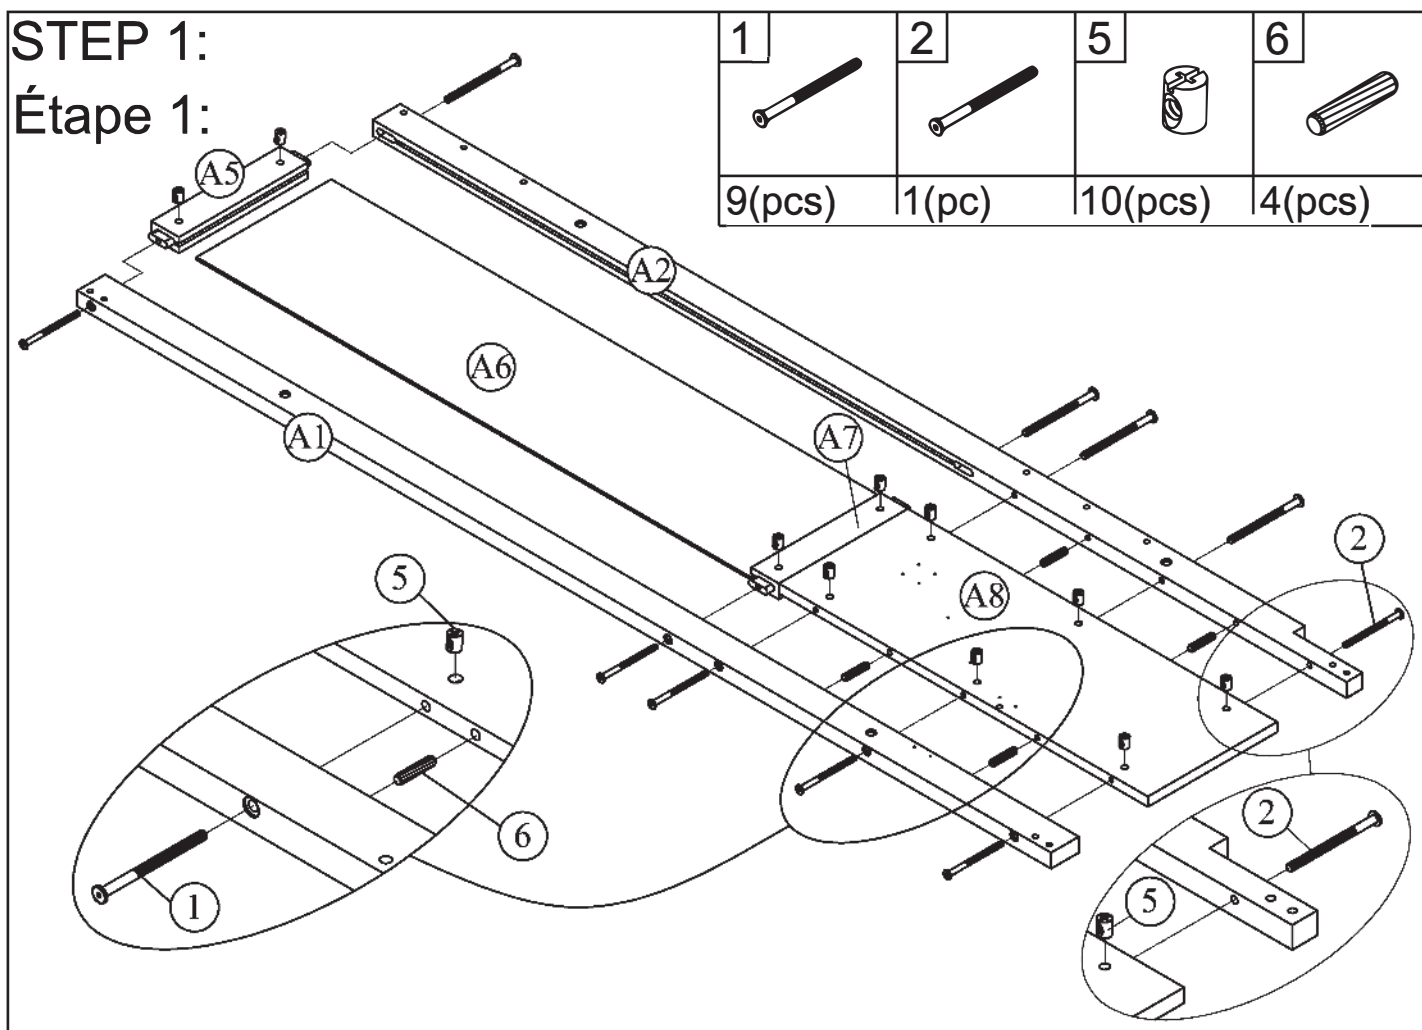

STEP 2:

Étape 2:


1	2	5	6
			
9(pcs)	1(pc)	10(pcs)	4(pcs)

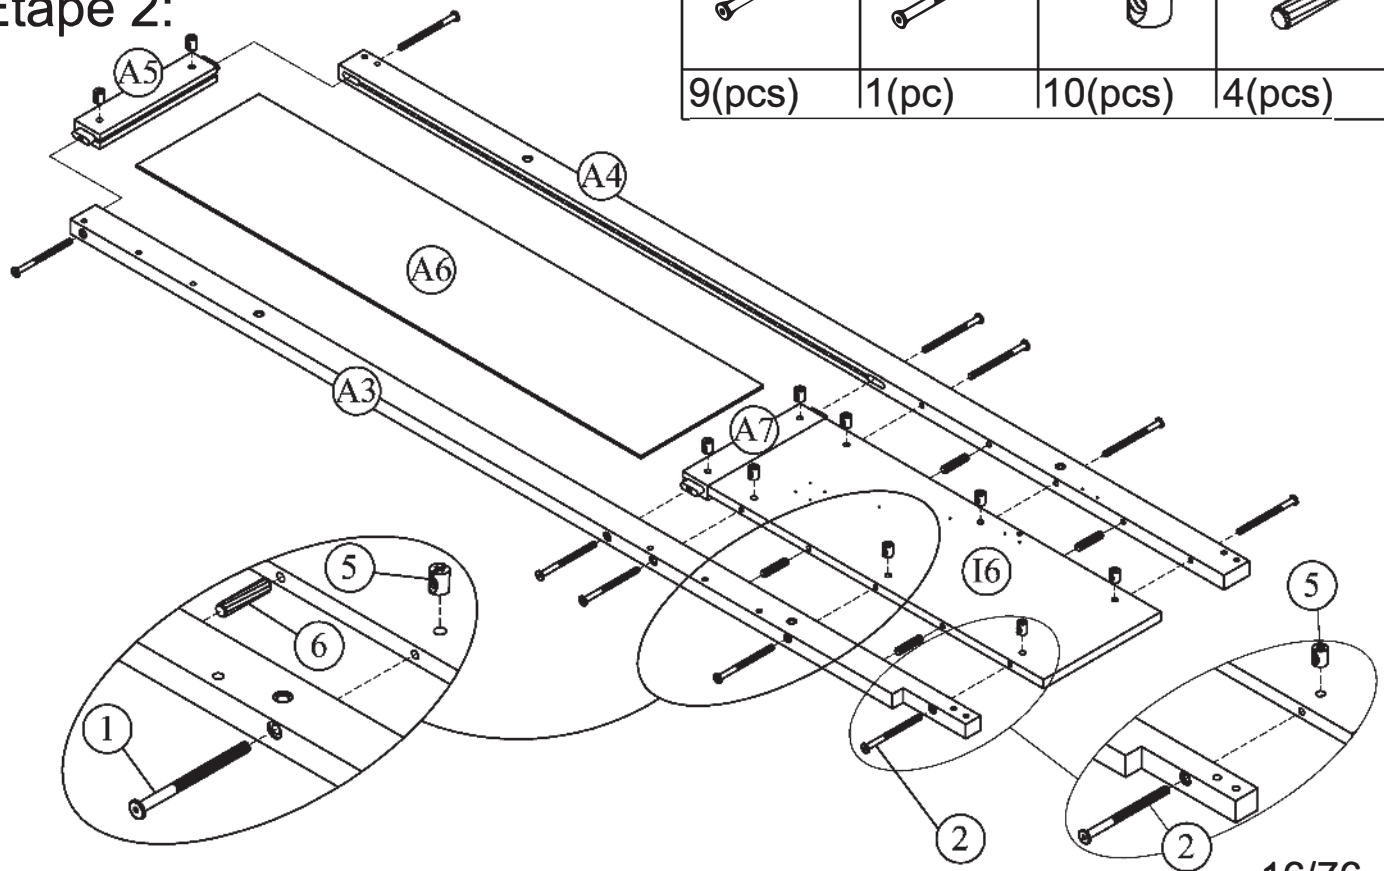

STEP 3:

Étape 3:


2	5	6
		
7(pcs)	7(pcs)	5(pcs)

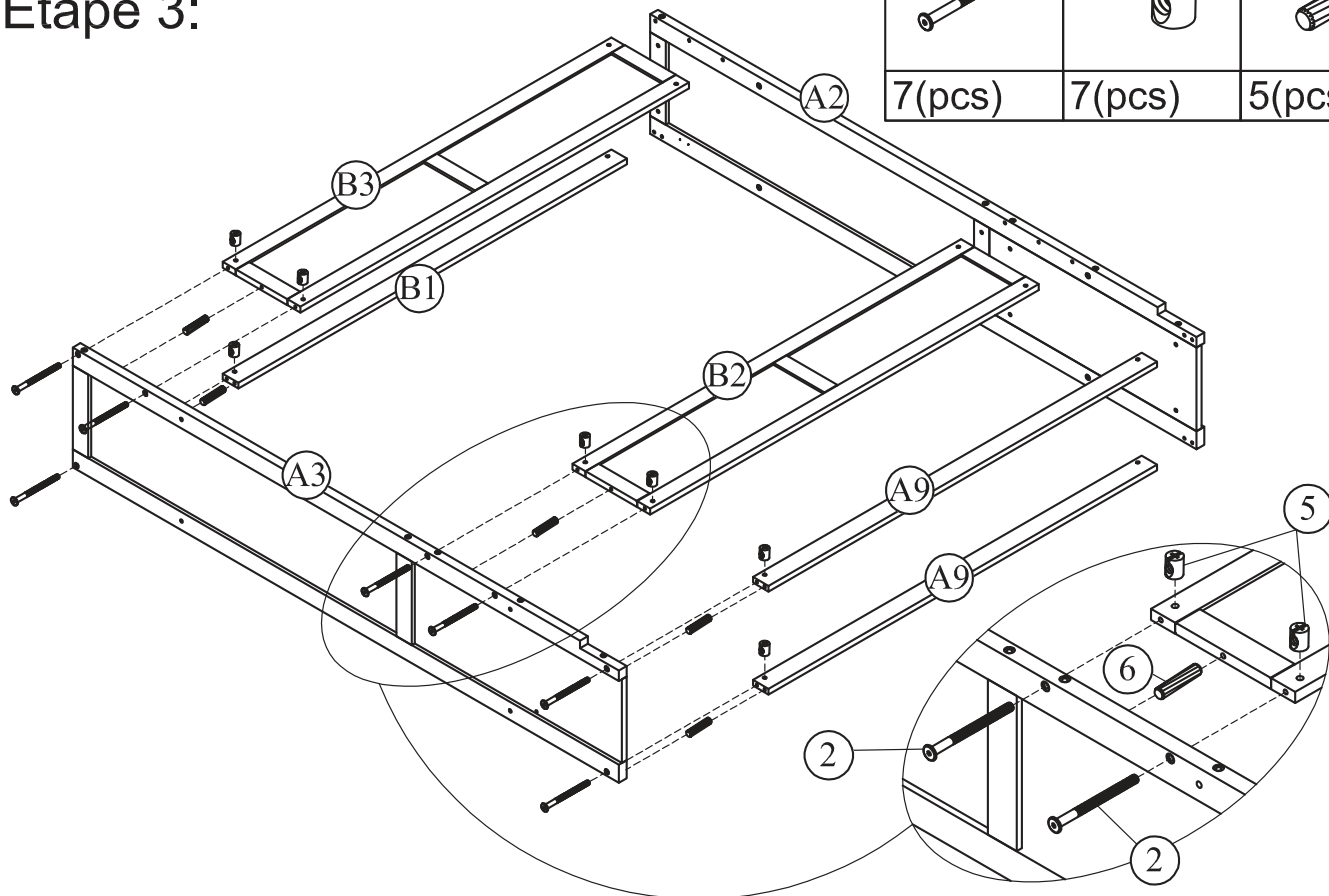

STEP 4:


Étape 4:

2	5	6
		
7(pcs)	7(pcs)	5(pcs)

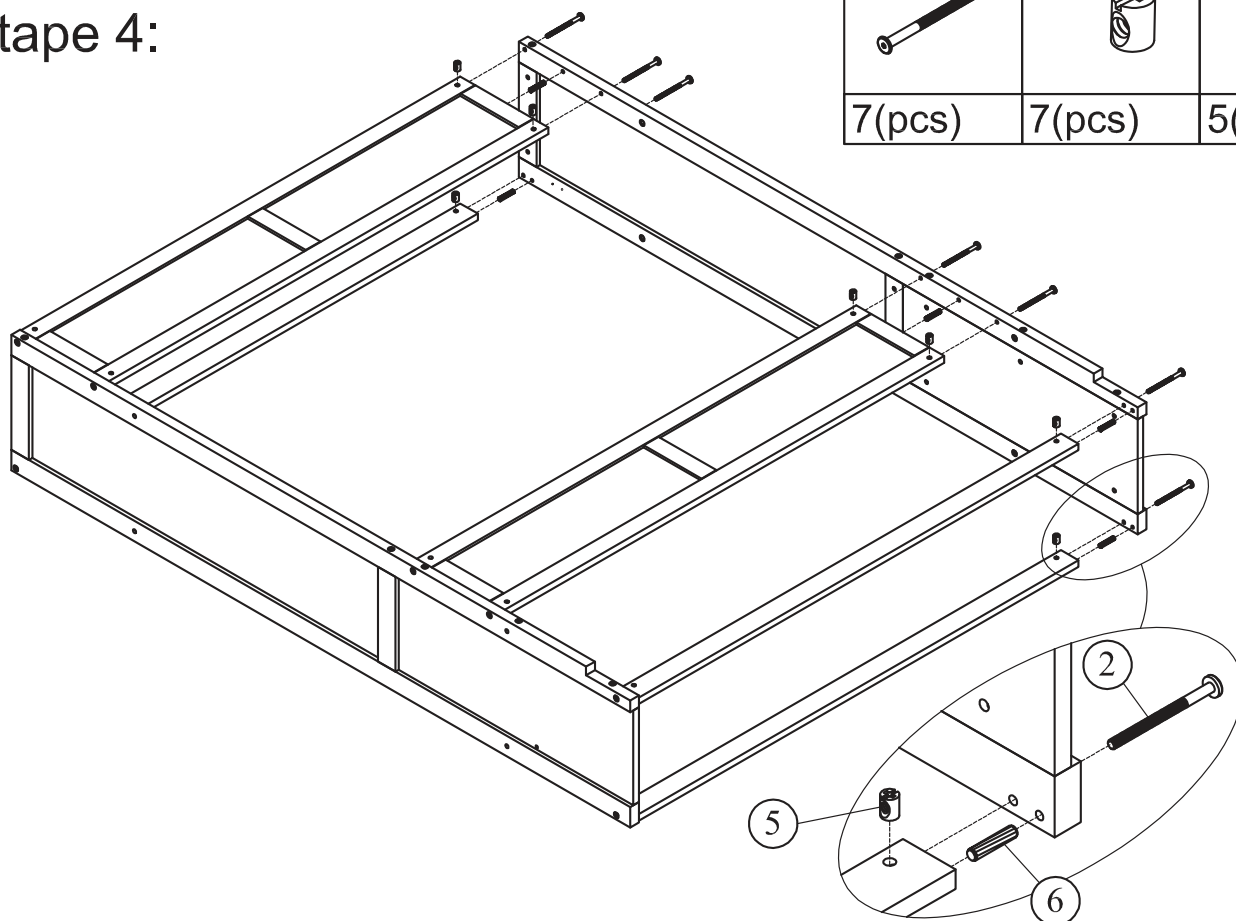

STEP 5:

Étape 5:

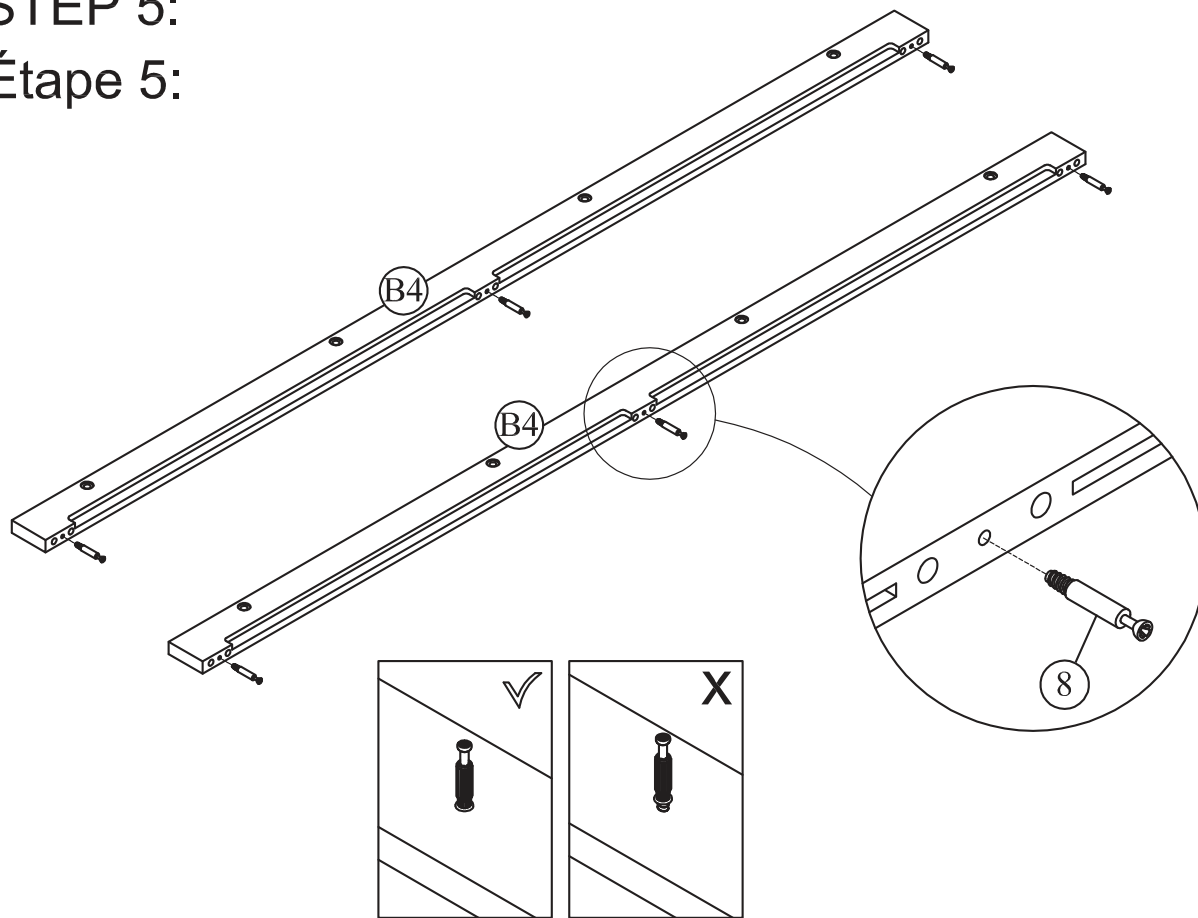


8



6(pcs)

STEP 6:

Étape 6:

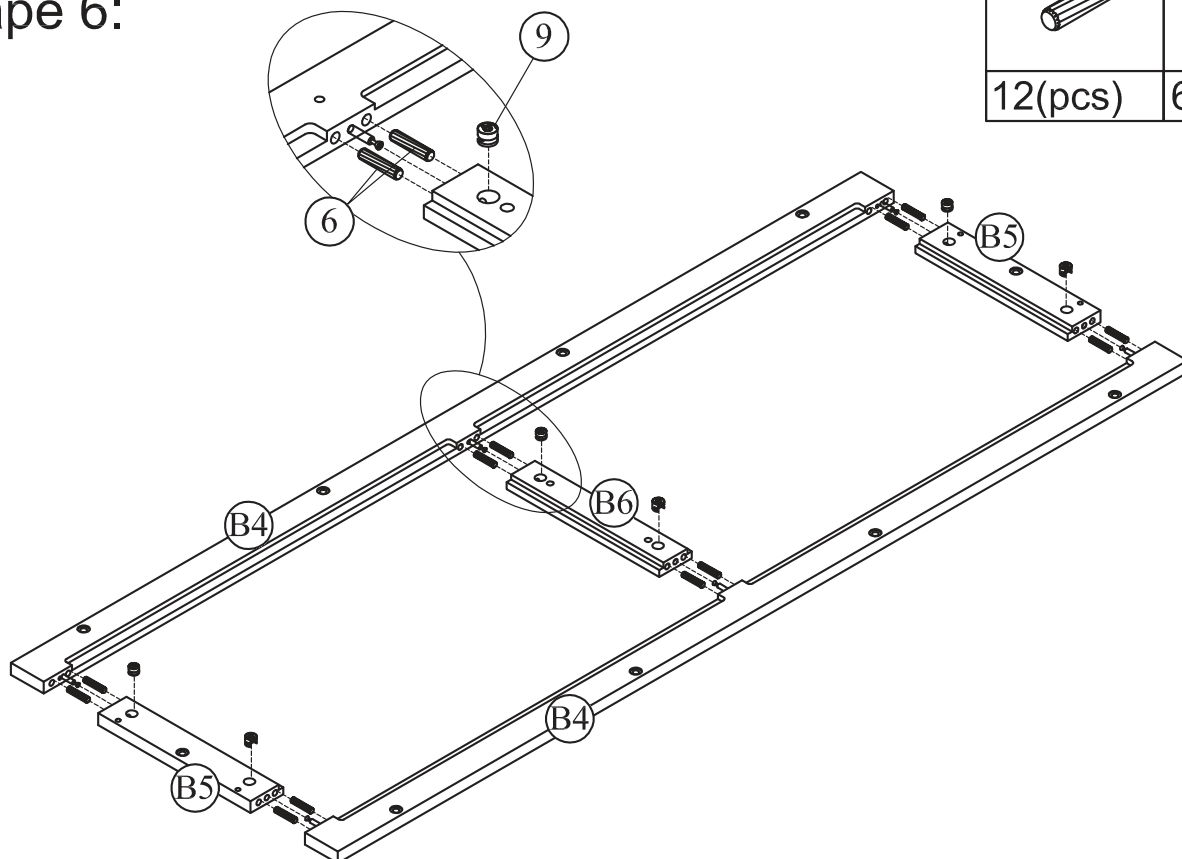

6



12(pcs)

9



6(pcs)


STEP 7:

Étape 7:

28



16(pcs)

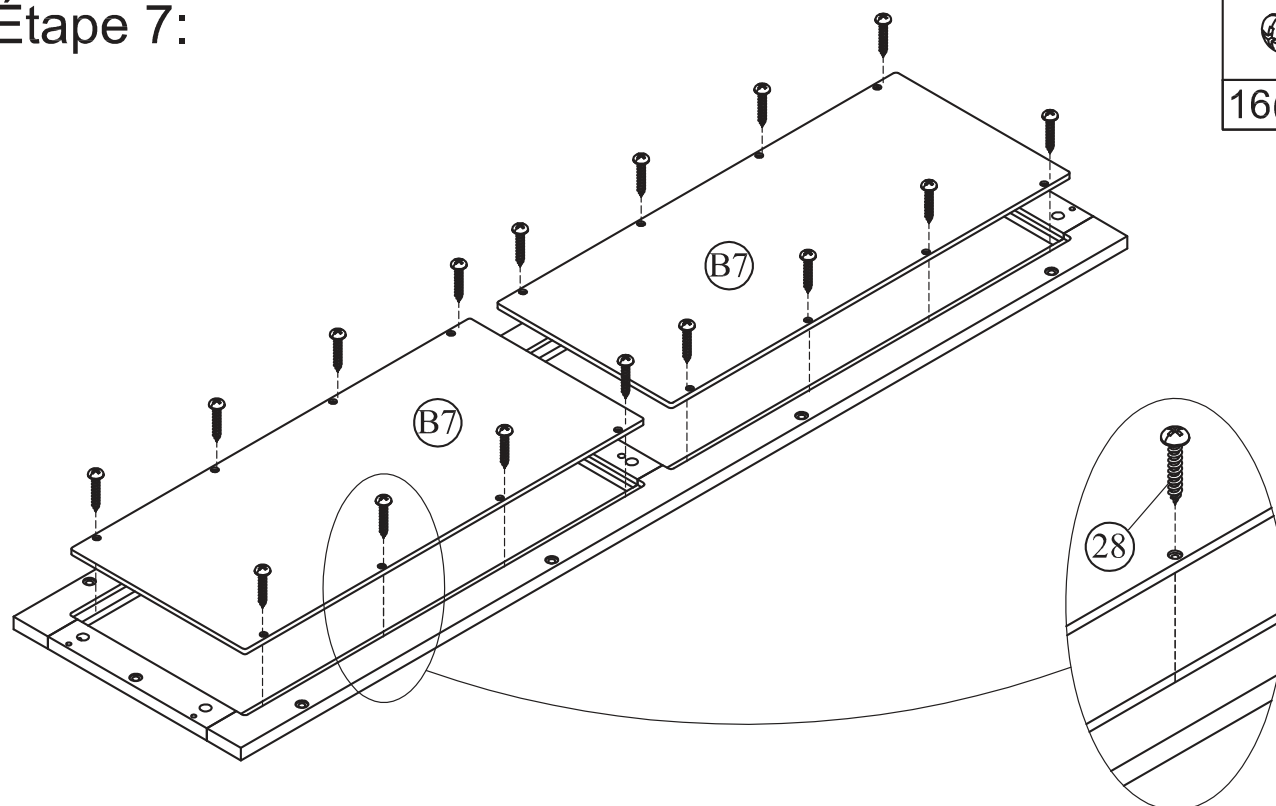

STEP 8:

Étape 8:

3




2(pcs)

5




2(pcs)

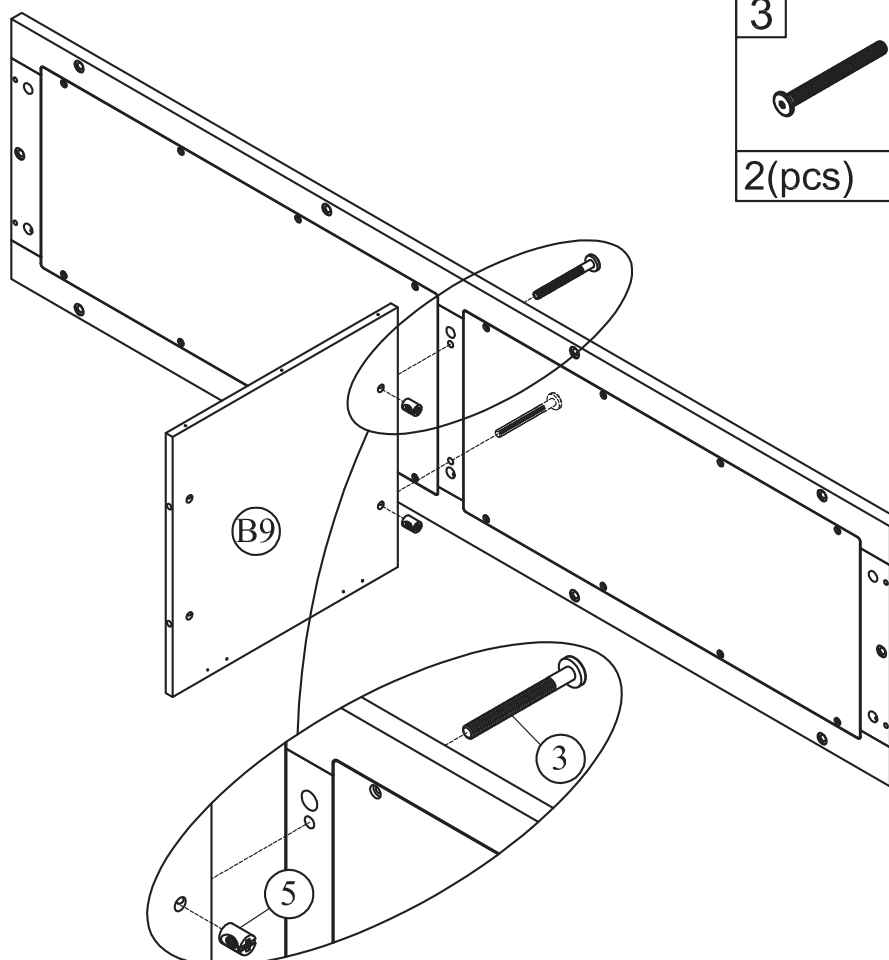


STEP 9:

Étape 9:

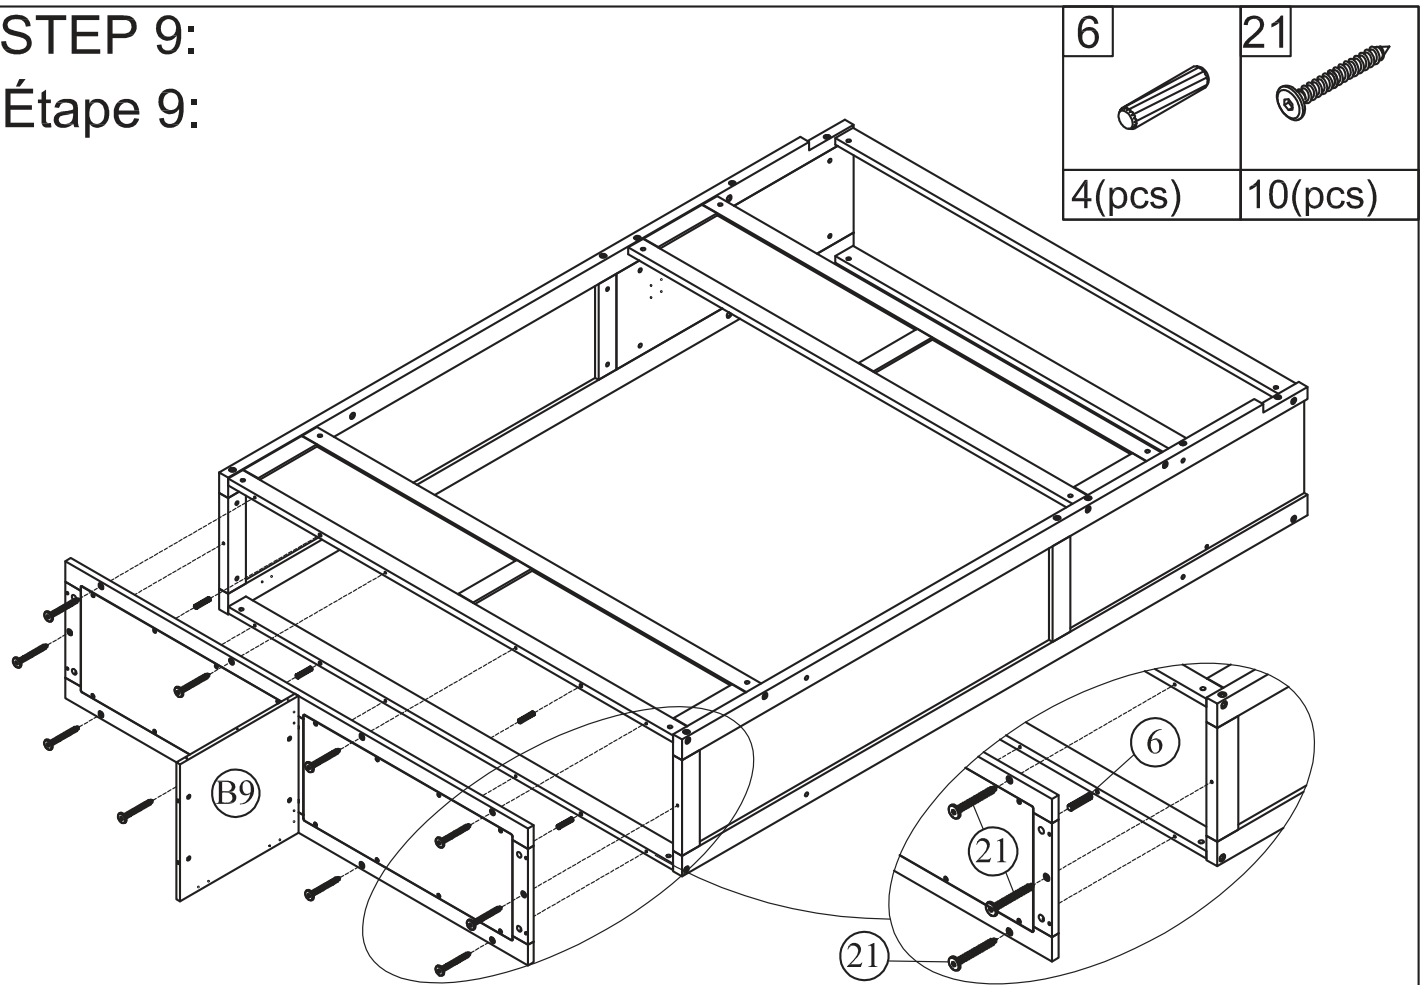


STEP 10:

Étape 10:

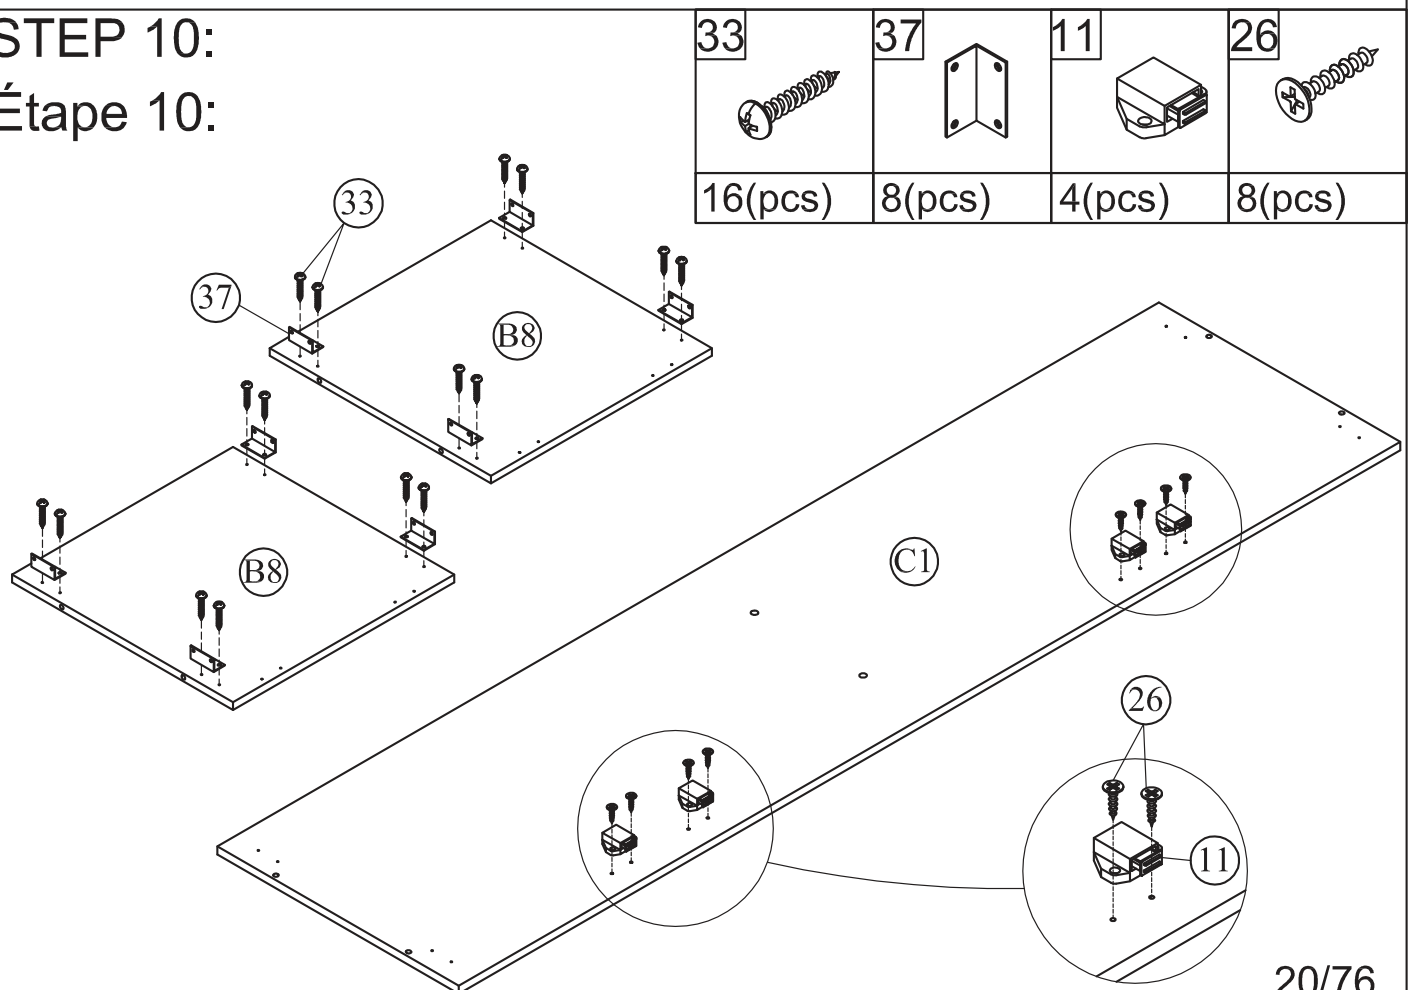


STEP 11:

Étape 11:

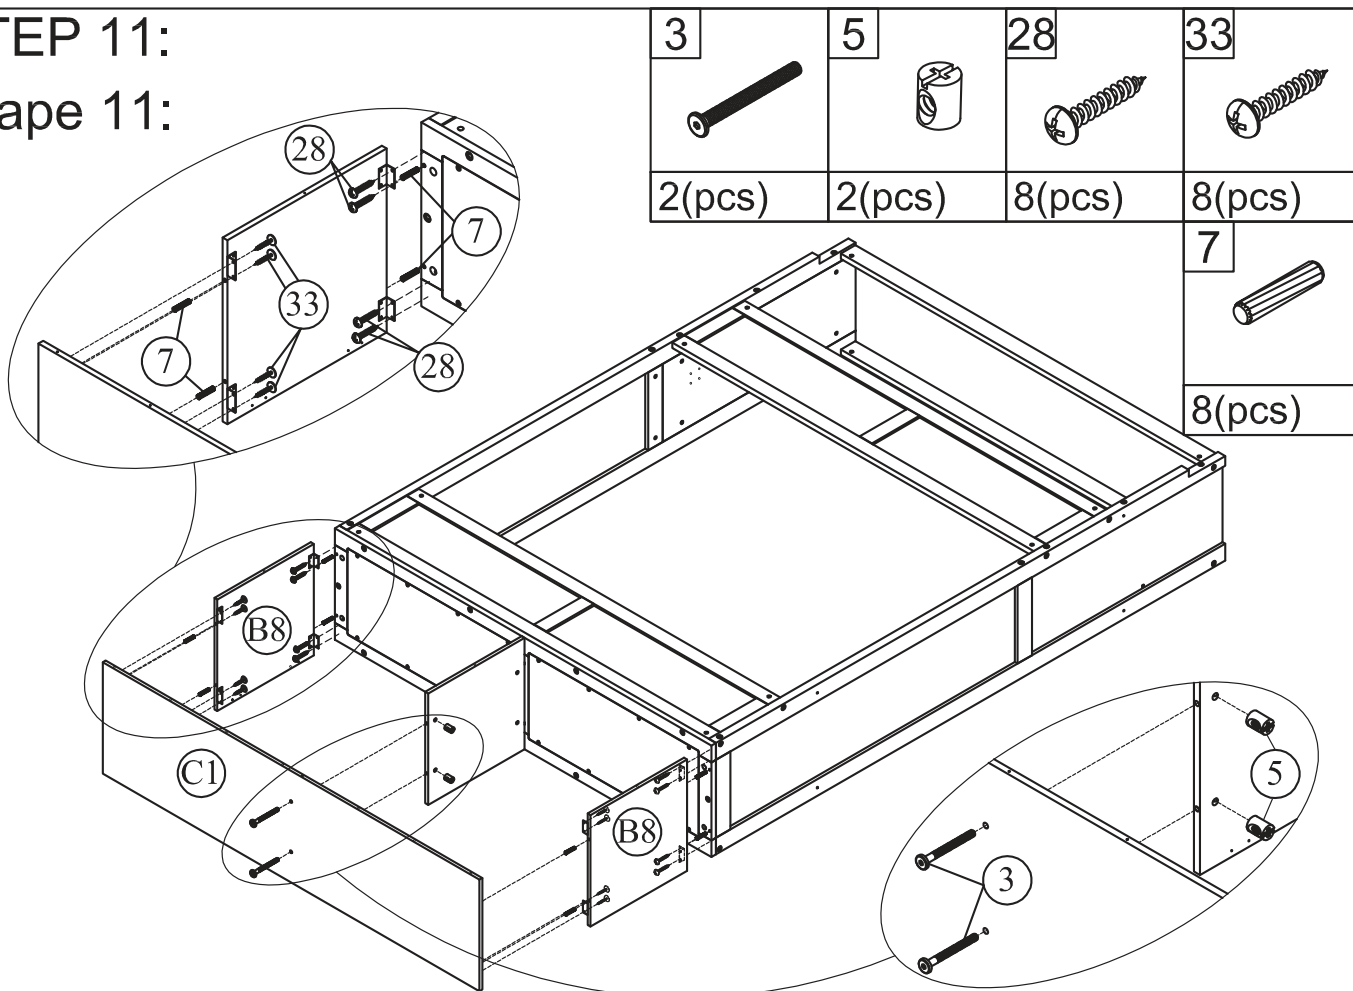

STEP 12:

Étape 12:

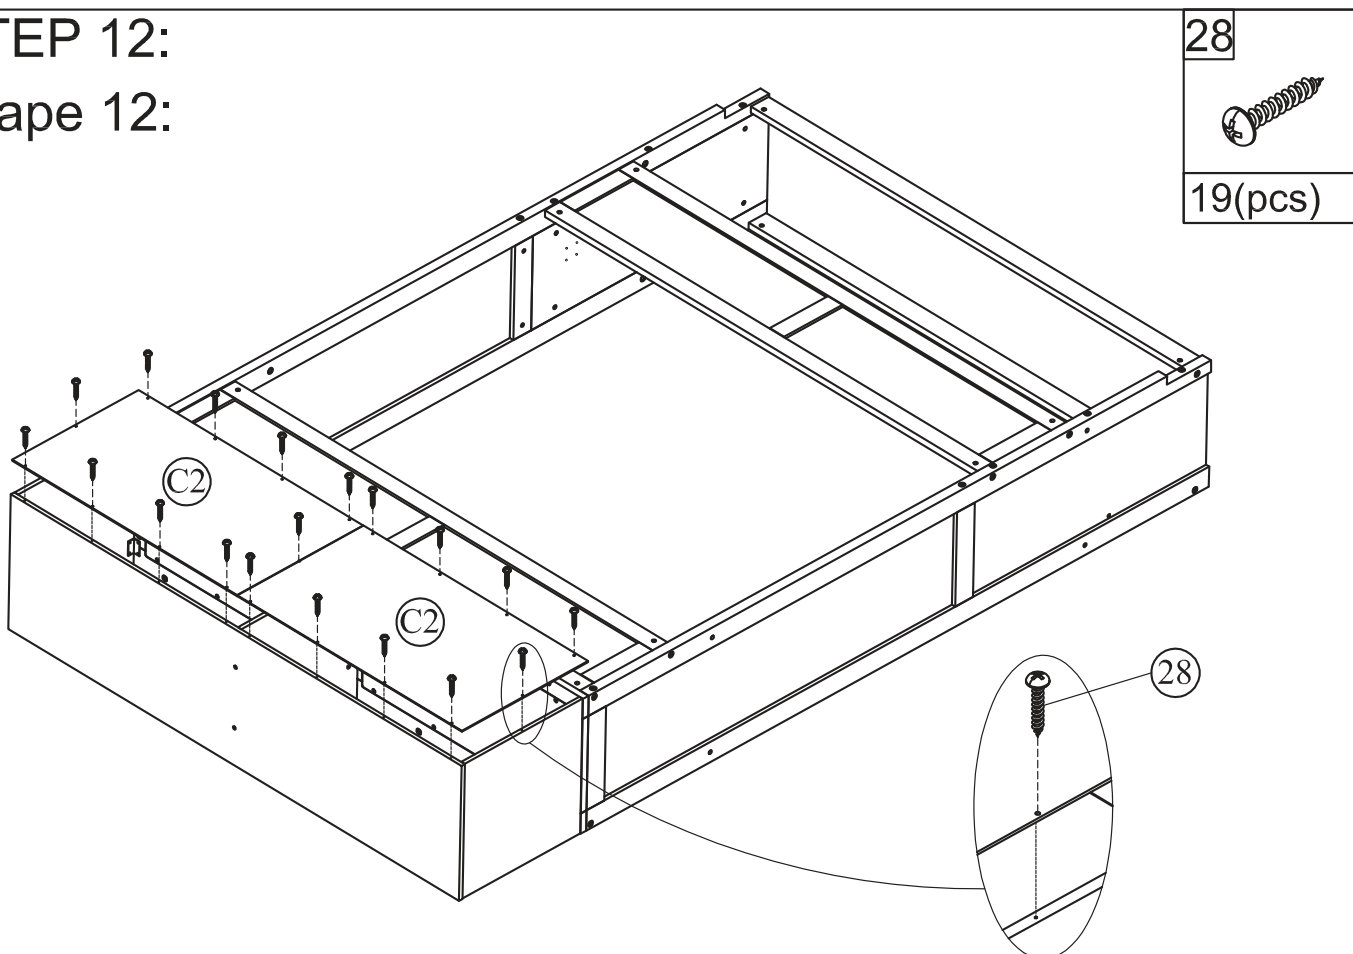




STEP 13:

Étape 13:

29




20(pcs)

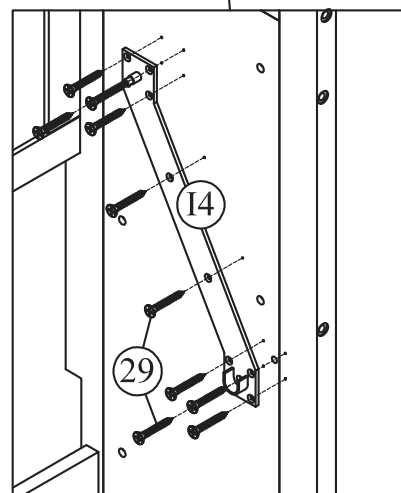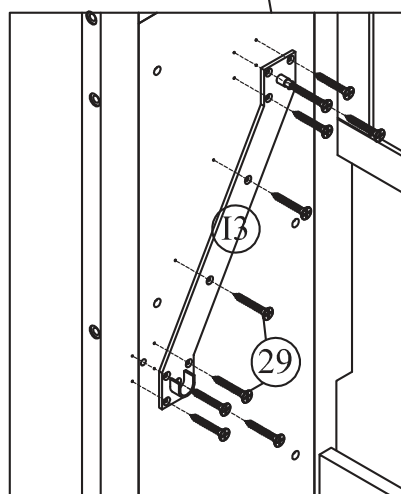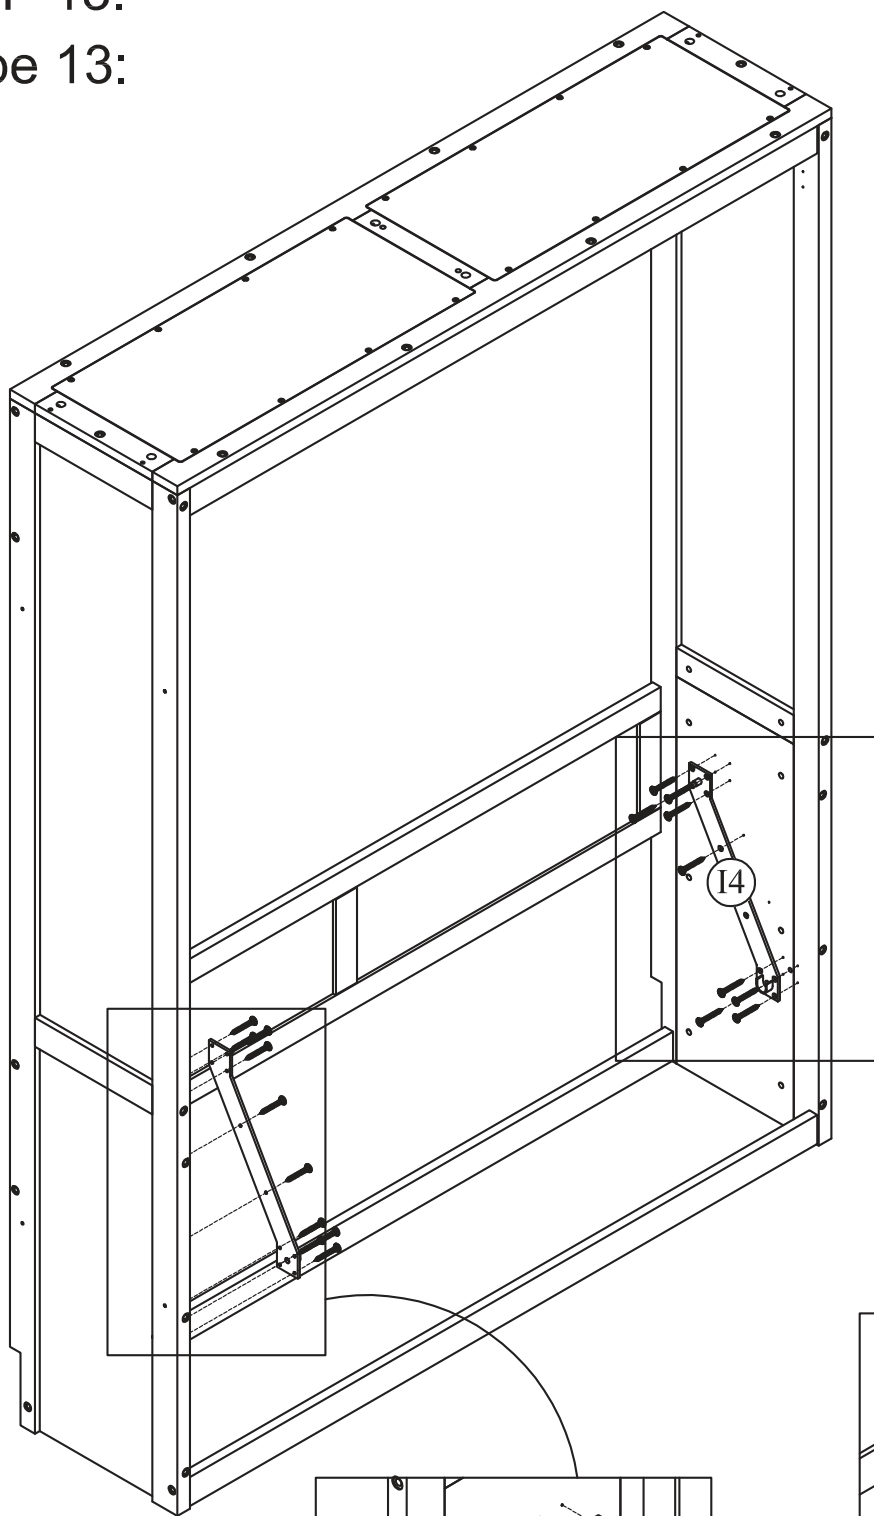


OPTION 1:

Partition wall made of wooden with plasterboard cladding.
Cloison en bois recouverte de plaques de plâtre.

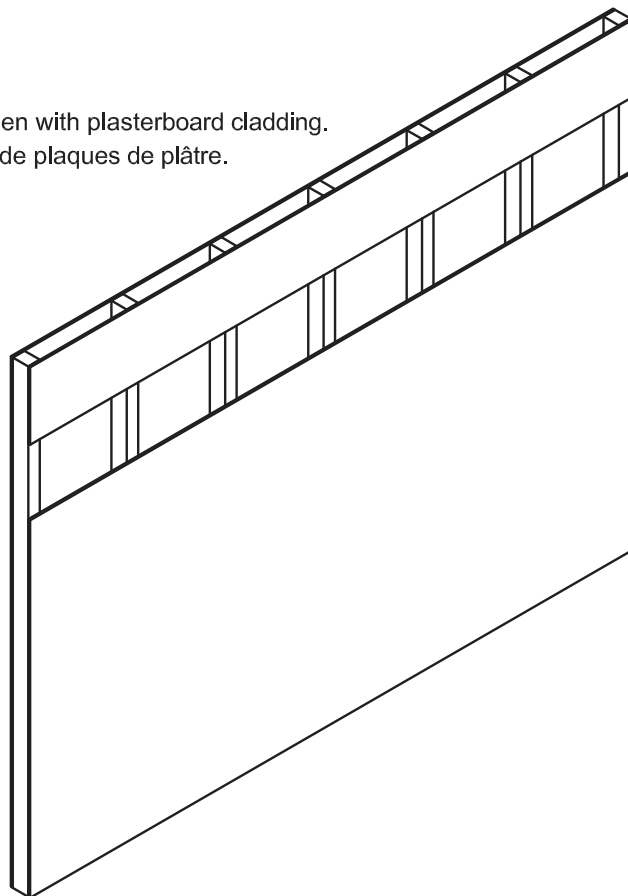


OPTION 1:

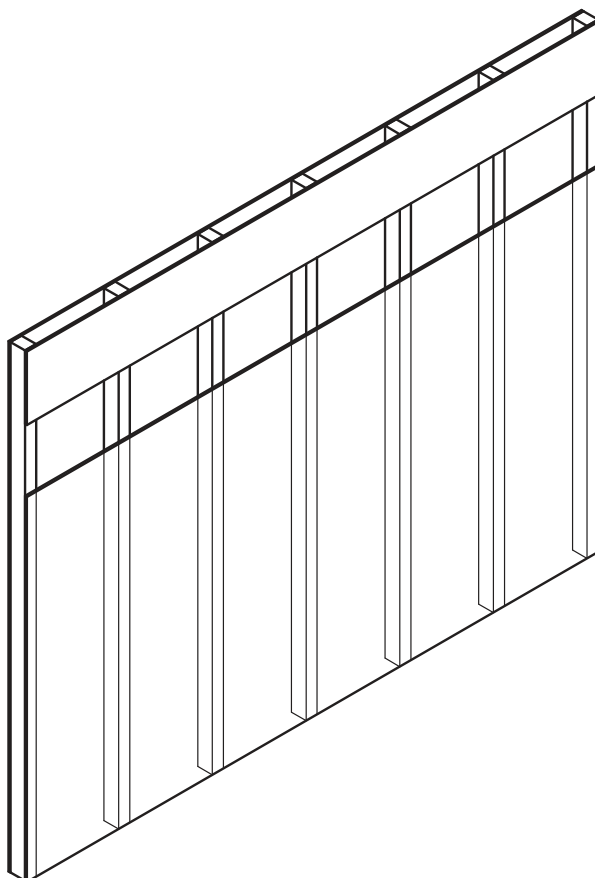


1- Determine the position of the bed in the room.

1- Déterminez la position du lit dans la pièce

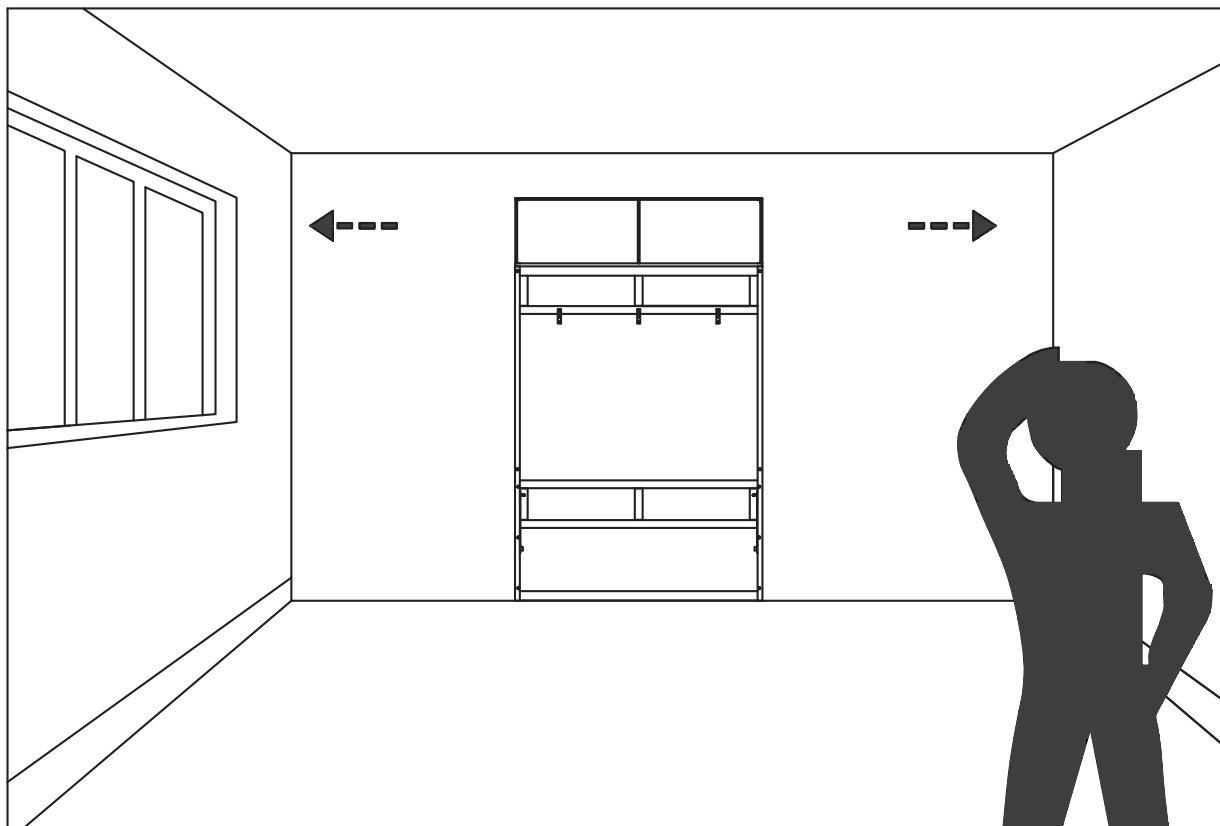


2- Put the bed back in its place. Please keep it vertical and horizontal.


2- Remettez le lit à sa place. Veuillez le garder vertical et horizontal.

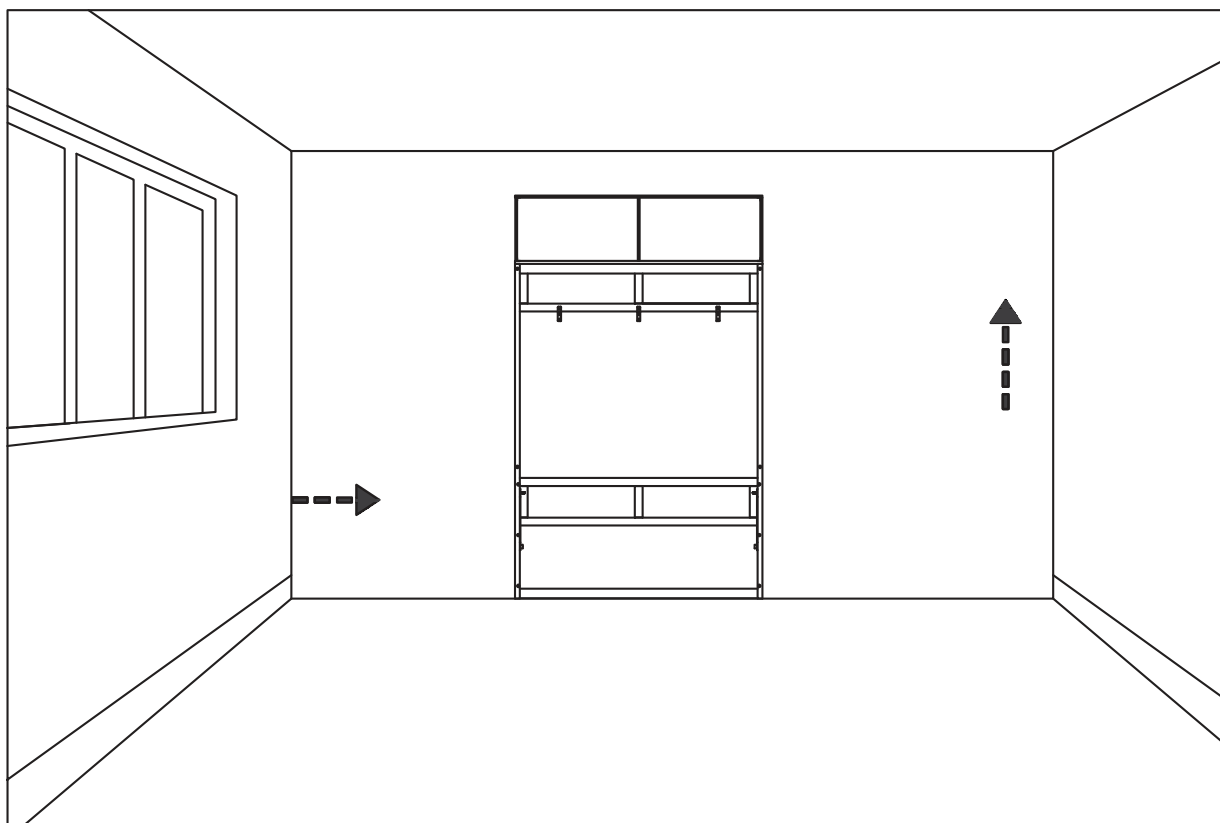


- 3- Mark the points drill holes according to actual products
3- Marquez les points de perçage en fonction des produits réels.

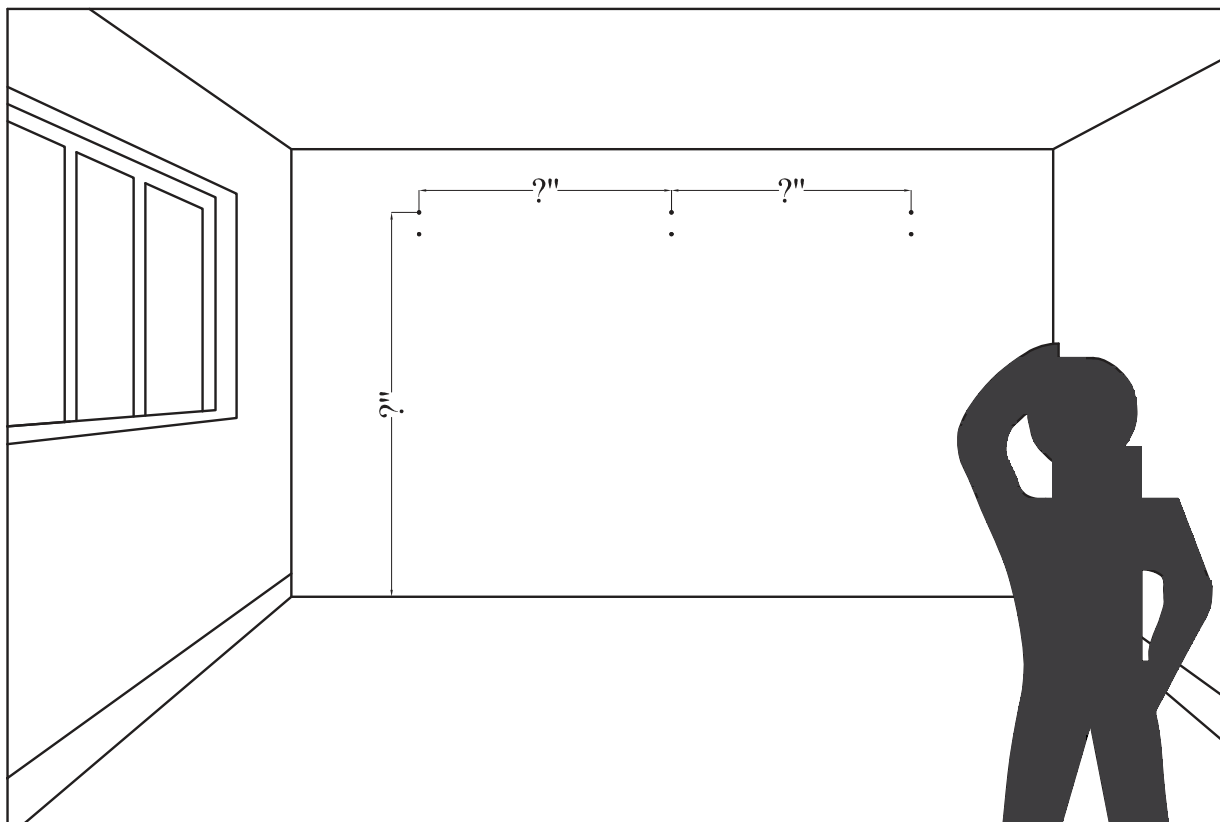


- 4- Drill holes at the marked locations in STEP 3.
4- Percez des trous aux emplacements marqués à l'ÉTAPE 3.

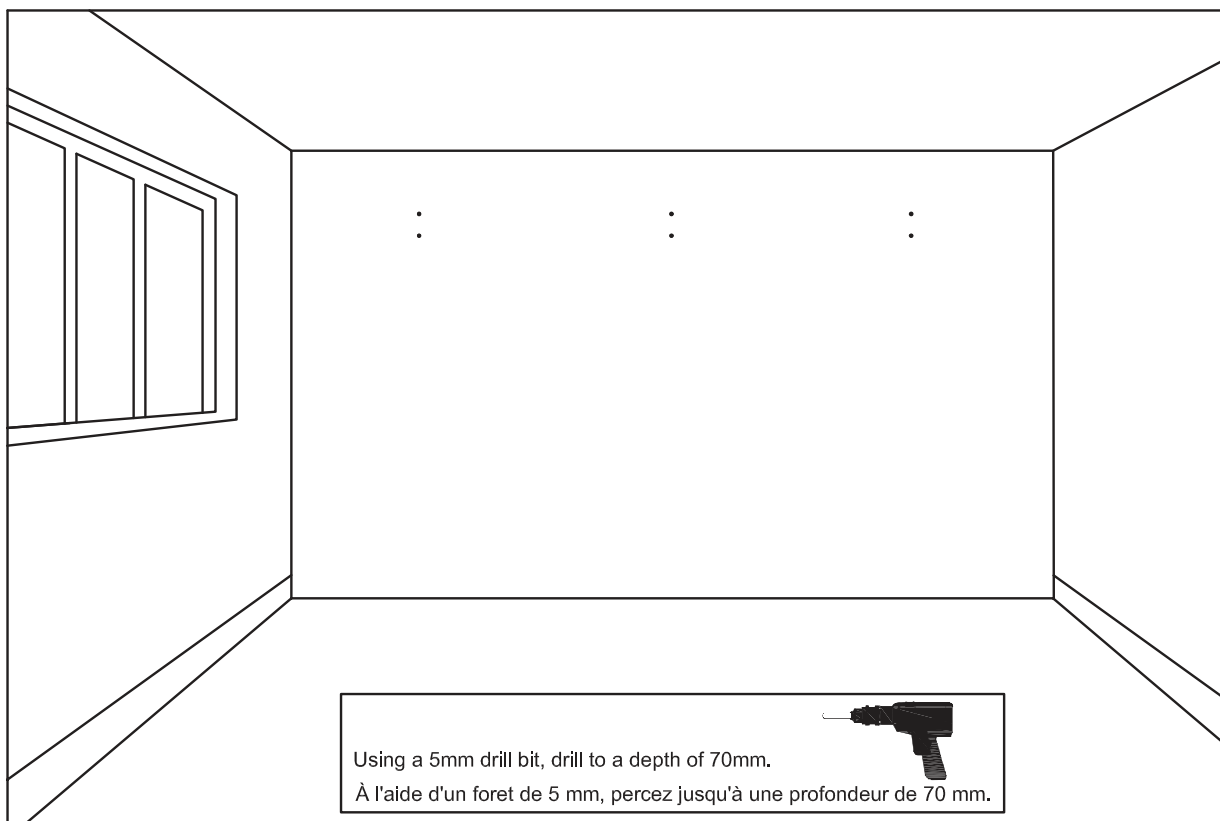

STEP 1:
Étape 1: OPTION 1:

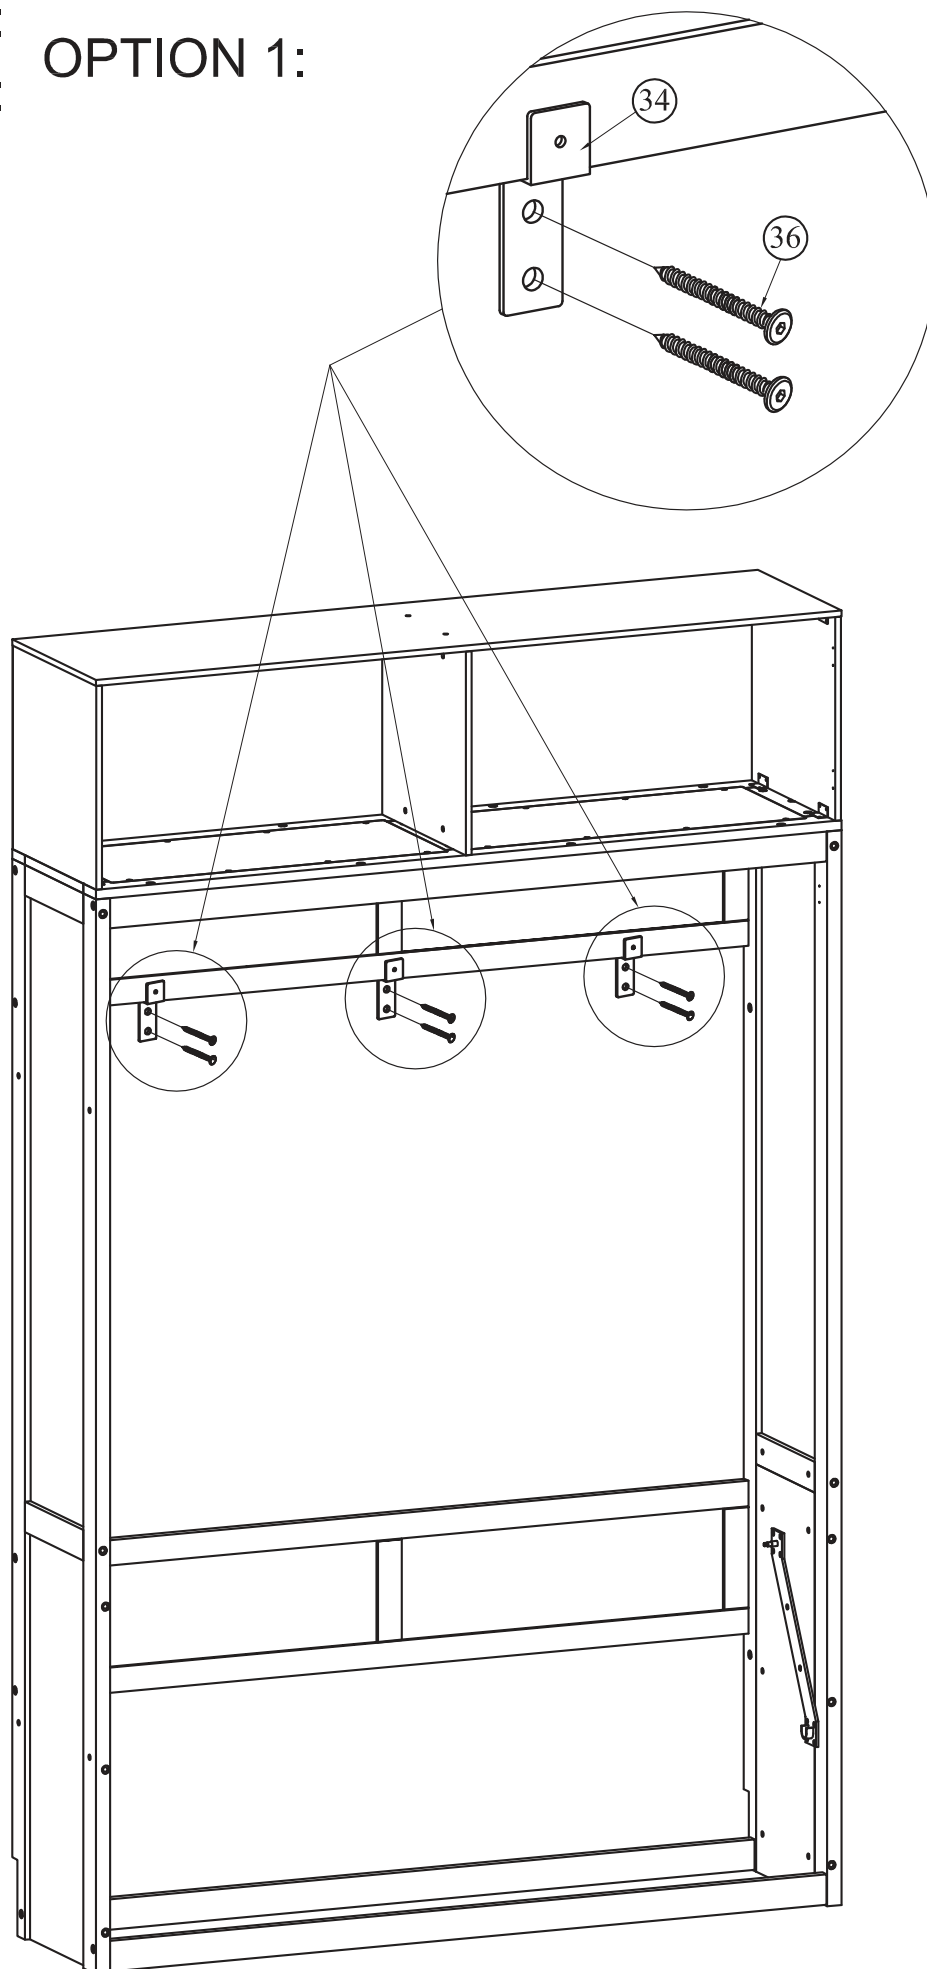

34



3(pcs)

36



6(pcs)


STEP 2:
Étape 2:

OPTION 1:

29




3(pcs)

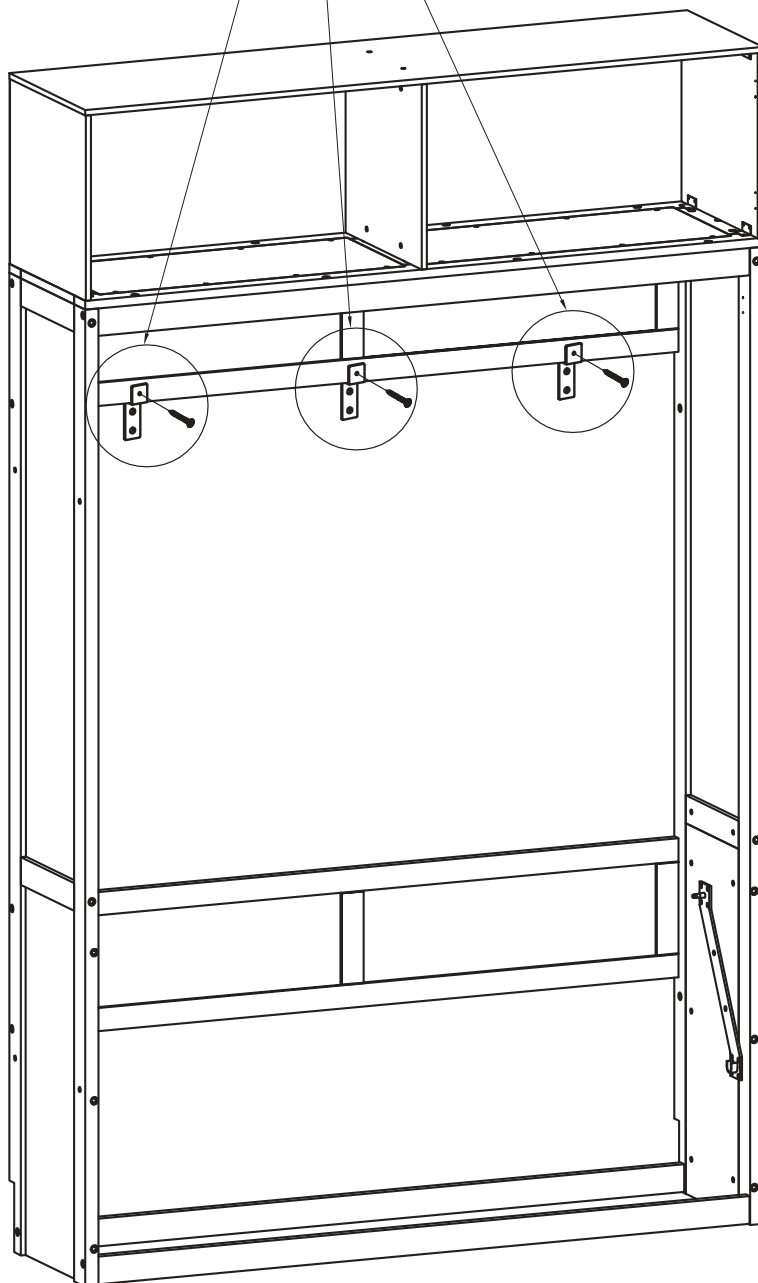


OPTION 2:

Concrete partition walls

Murs de séparation en béton

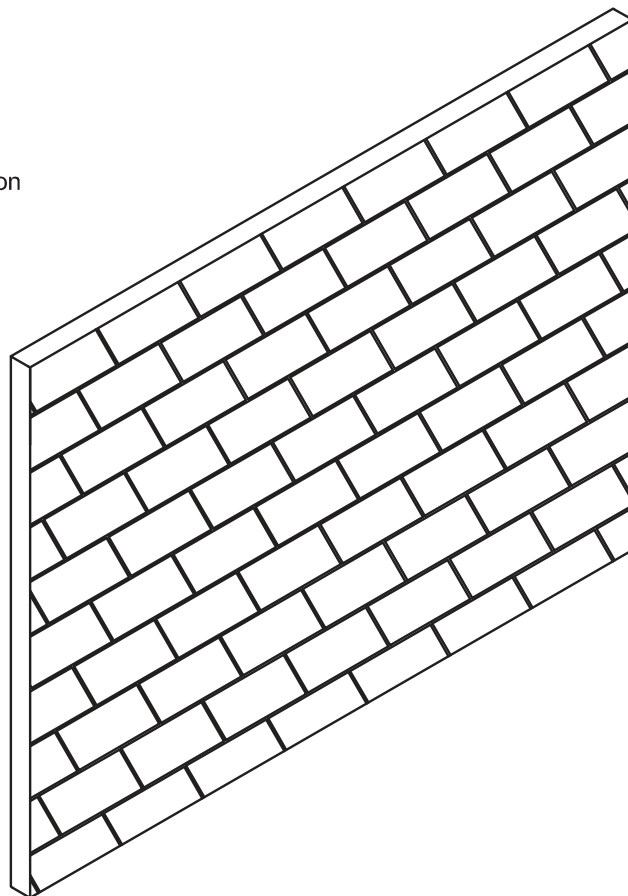

OPTION 2:

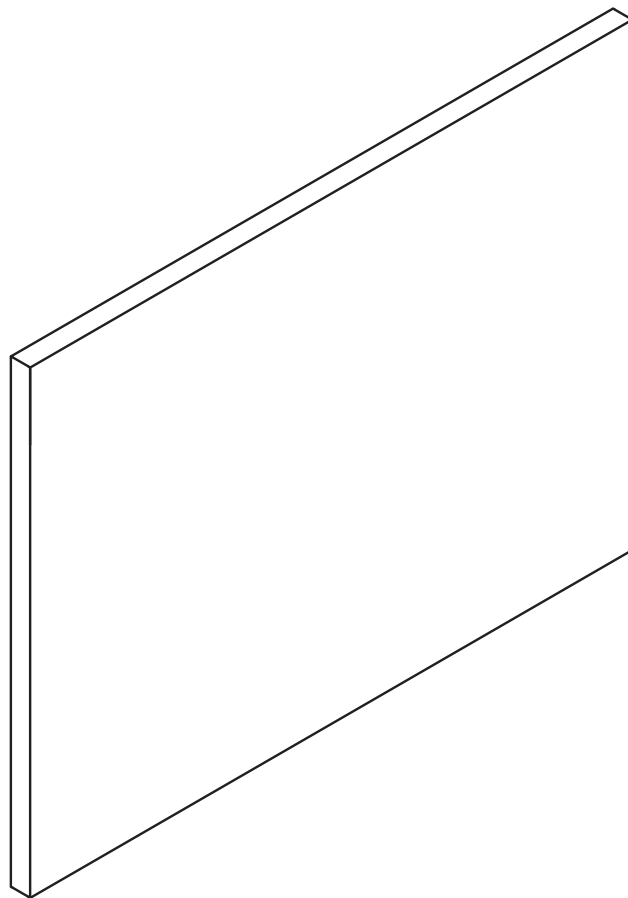


1- Determine the position of the bed in the room.

1- Déterminez la position du lit dans la pièce


Your house wall is concrete, you should choose this option 2

Le mur de votre maison est en béton, vous devriez choisir cette option 2

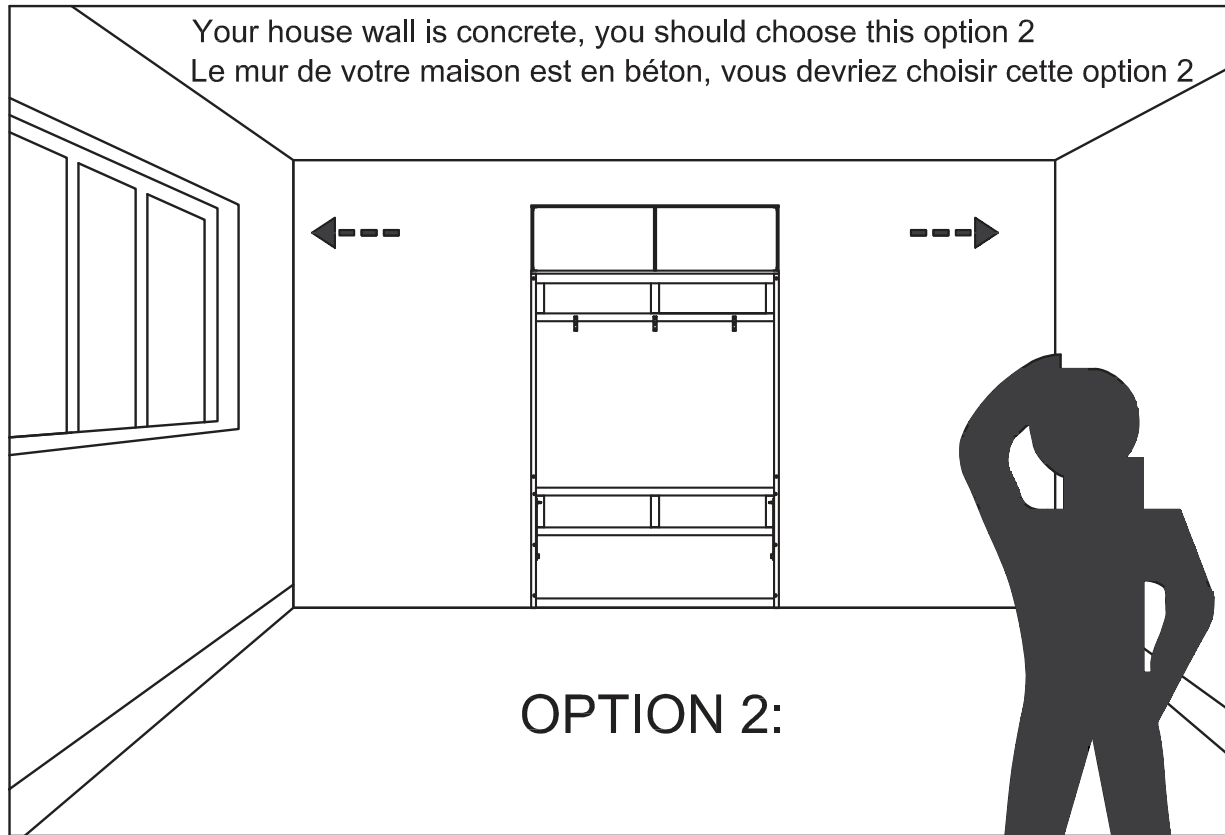

2- Put the bed back in its place. Please keep it vertical and horizontal.

2- Remettez le lit à sa place. Veuillez le garder vertical et horizontal.

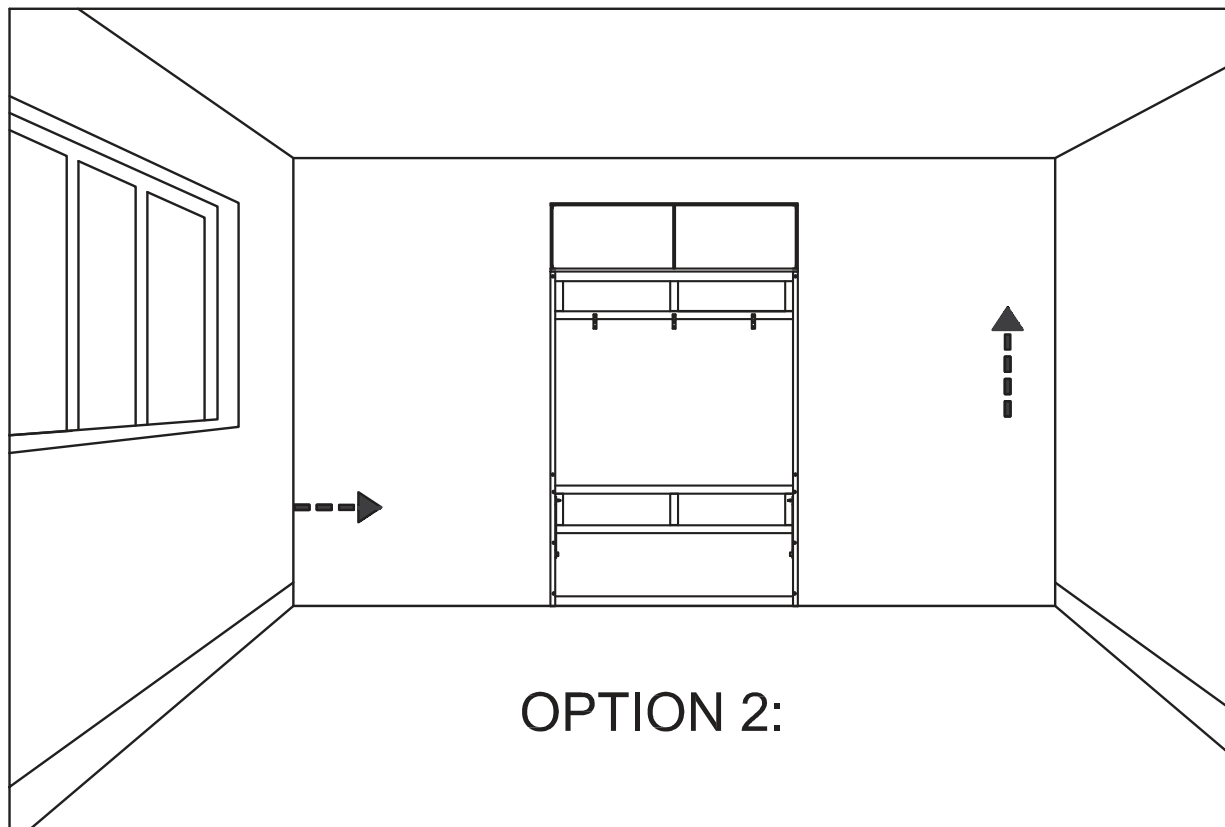

Wall attached item only:

A guide to wall mounting and fixings




Warning

Wall fixing screws are not included, since different wall materials require different types of screws / fixings. Please ensure you use the correct screws / fixings for your type of walls and seek professional advice if you are not sure.

Failure of the product due to incorrect fixings is the responsibility of the installer.

Important: When drilling into the walls always check that there are no hidden wires or pipes etc.

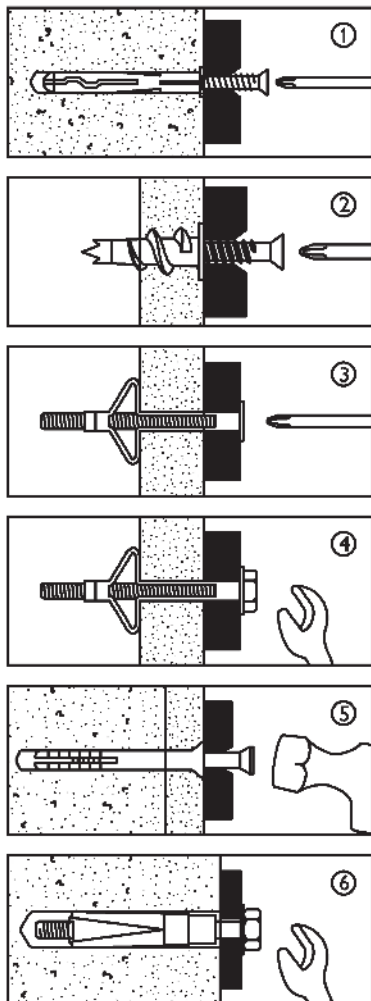

Types of walls

You can use one of the following types of wall plug if your walls are made of brick, breezeblock, concrete, stone or wood.

1. Genral Purpose wall plug

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general - purpose wall plugs can be used.

2. Plasterboard wall plug

For use when attaching light loads on to plasterboard partitions.

3. Cavity Fixing wall plug

For use with plasterboard partitions or hollow wooden doors.

4. Cavity Fixing - Heavy Duty wall plug

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

5. Hammer Fixing wall plug

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

6. Shield Anchor wall plug - Heavy loads

For use with heavier load such as TV and HI-Fi speakers and satellite dishes etc.



Care and maintenance

Safety: Periodically check all fittings and wall fixings to ensure they have not come loose and retighten as necessary.

Article à fixer au mur uniquement :

Guide de montage mural et de fixation




Attention

Les vis de fixation murale ne sont pas incluses, car différents matériaux de mur nécessitent différents types de vis / fixations.

Veillez vous assurer d'utiliser les vis / fixations correctes pour votre type de murs et demander conseil à un professionnel si vous n'êtes pas sûr.

L'échec du produit en raison de fixations incorrectes est de la responsabilité de l'installateur.

Important : Lorsque vous percez dans les murs, vérifiez toujours s'il n'y a pas de fils électriques ou de tuyaux cachés, etc

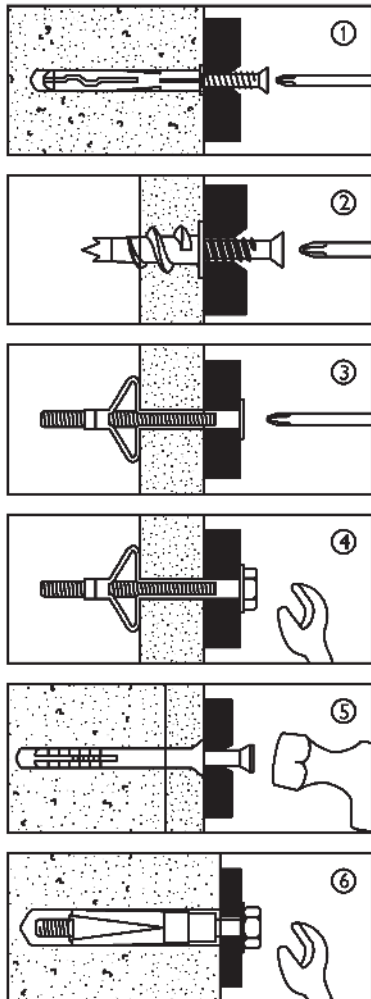

Types de murs

Vous pouvez utiliser l'un des types de cheville murale suivants si vos murs sont en brique, parpaing, béton, pierre ou bois.

1. Cheville murale polyvalente

En général, les blocs aérés ne devraient pas être utilisés pour supporter des charges lourdes. Dans ce cas, utilisez un dispositif de fixation spécialisé. Pour les charges légères, des chevilles murales polyvalentes peuvent être utilisées.

2. Cheville pour plaque de plâtre

Pour une utilisation lors de la fixation de charges légères sur des cloisons en placoplâtre

3. Cheville de fixation pour cavité

À utiliser avec des cloisons en placoplâtre ou des portes en bois creuses.

4. Cheville de fixation pour cavité - à usage intensif

À utiliser lors de l'installation ou du support de charges lourdes telles que des étagères, des armoires murales et des porte-manteaux.

5. Cheville de fixation à marteau

À utiliser avec des murs recouverts de placoplâtre. La fixation à marteau permet de la fixer au mur plutôt qu'au placoplâtre. Vérifiez toujours que la fixation est bien sécurisée au mur porteur.

6. Cheville à ancre de protection - Charges lourdes


À utiliser avec des charges plus lourdes telles que des téléviseurs, des enceintes hi-fi et des antennes satellites, etc.




Entretien et maintenance



Sécurité: Périodiquement, vérifiez tous les raccords et fixations murales pour vous assurer qu'ils ne se sont pas desserrés et resserrez-les si nécessaire.

- 3- Mark the points drill holes according to actual products
3- Marquez les points de perçage en fonction des produits réels.


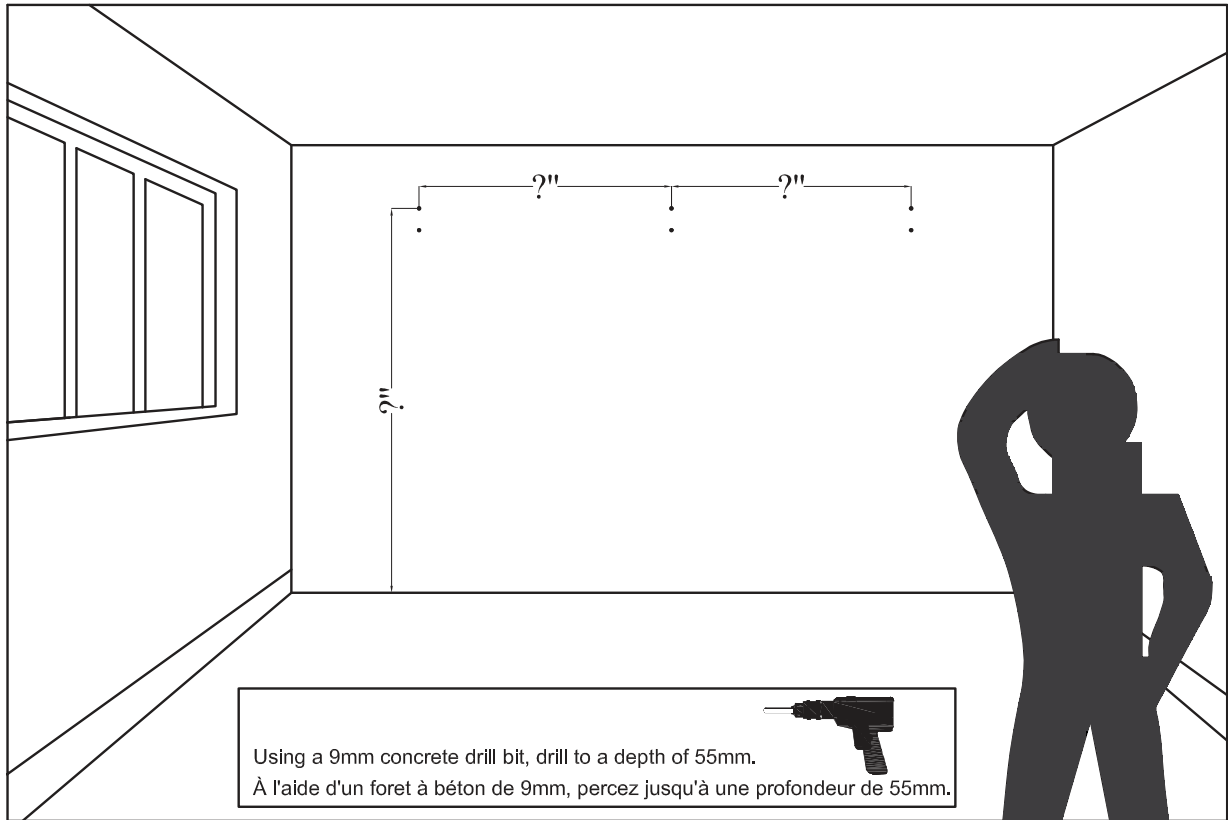


- 4- Drill the positions marked in STEP 3 and secure the plug.
4- Percez les positions marquées à l'ÉTAPE 3 et fixez la cheville.

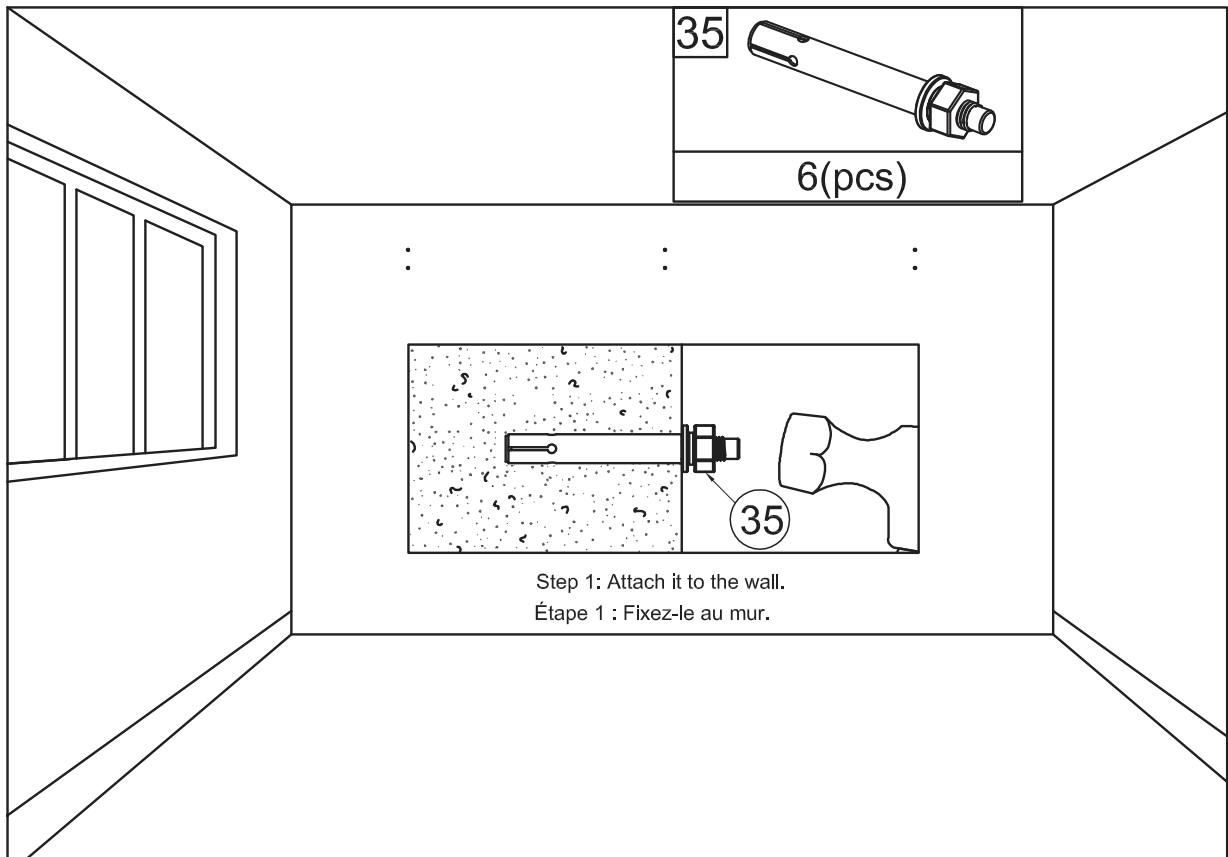

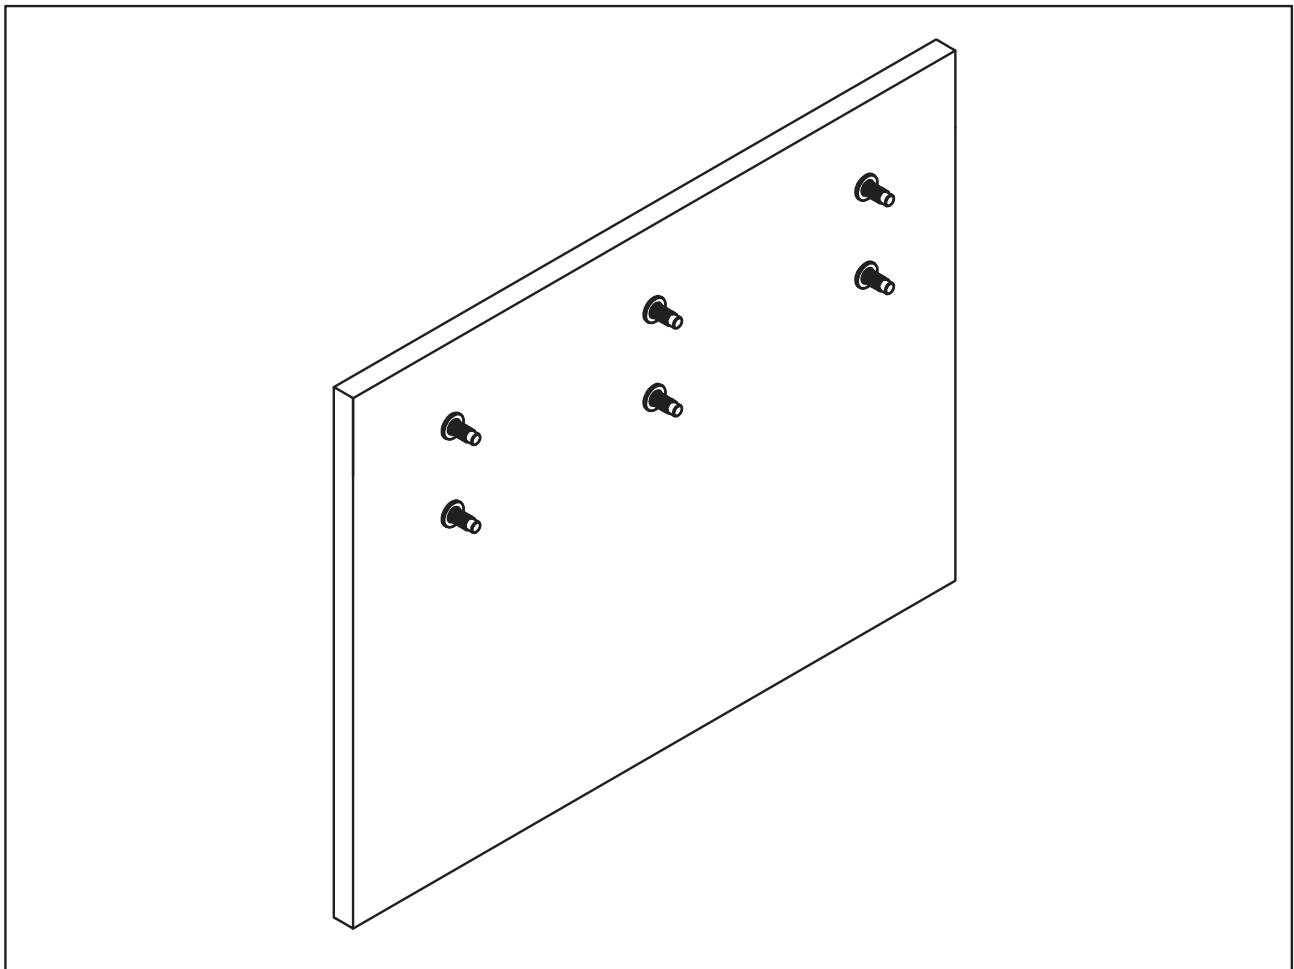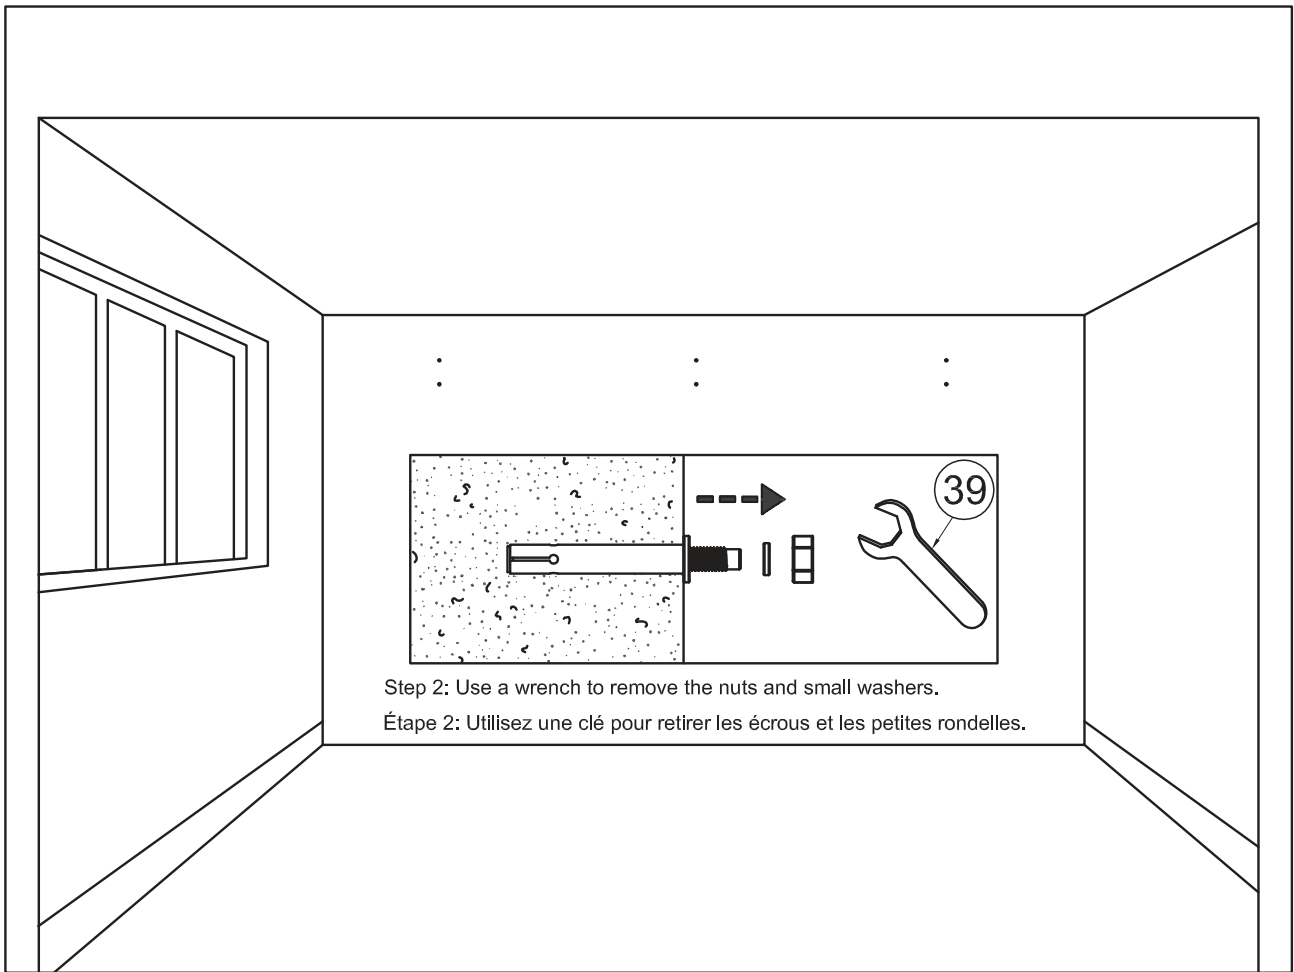

STEP 1: OPTION 2:
Étape 1:

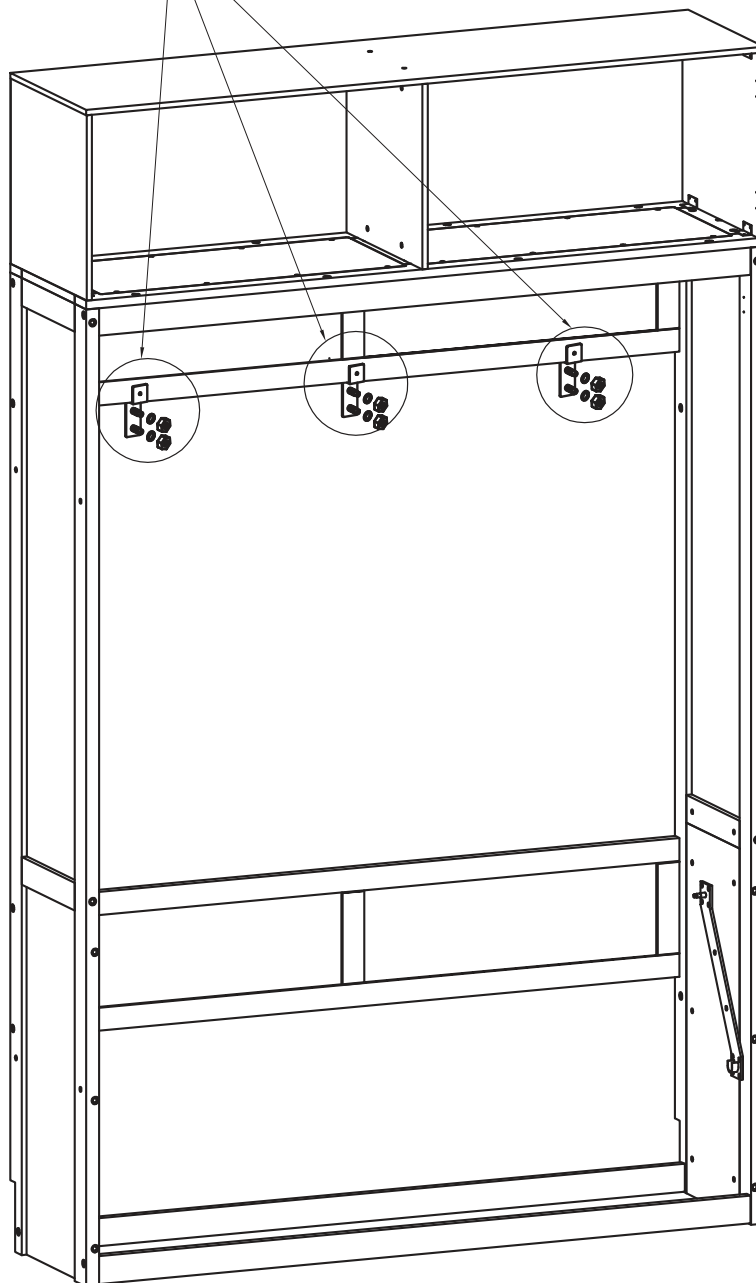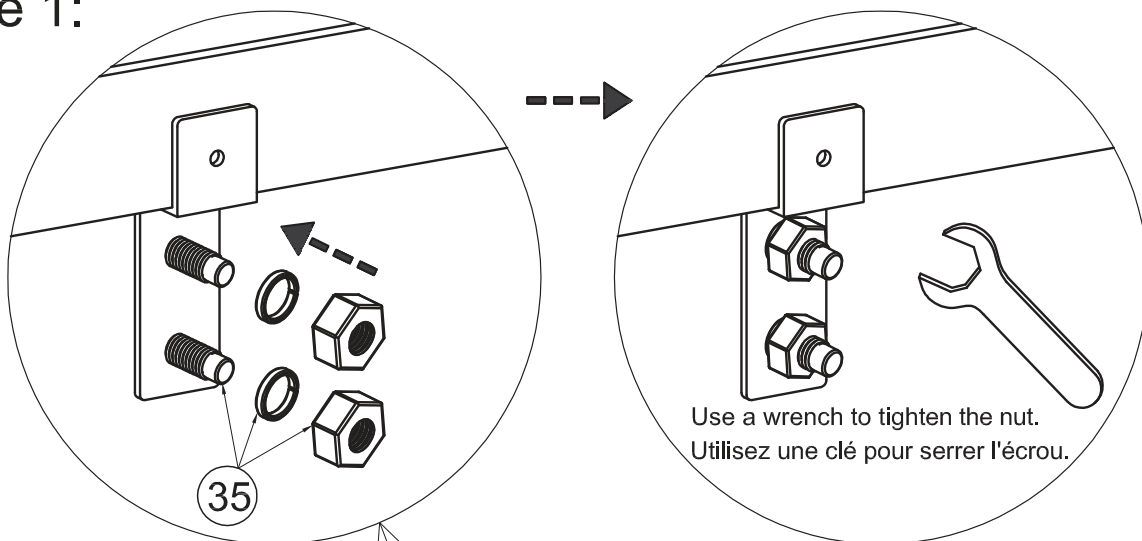


STEP 2:
Étape 2: OPTION 2:

29



3(pcs)


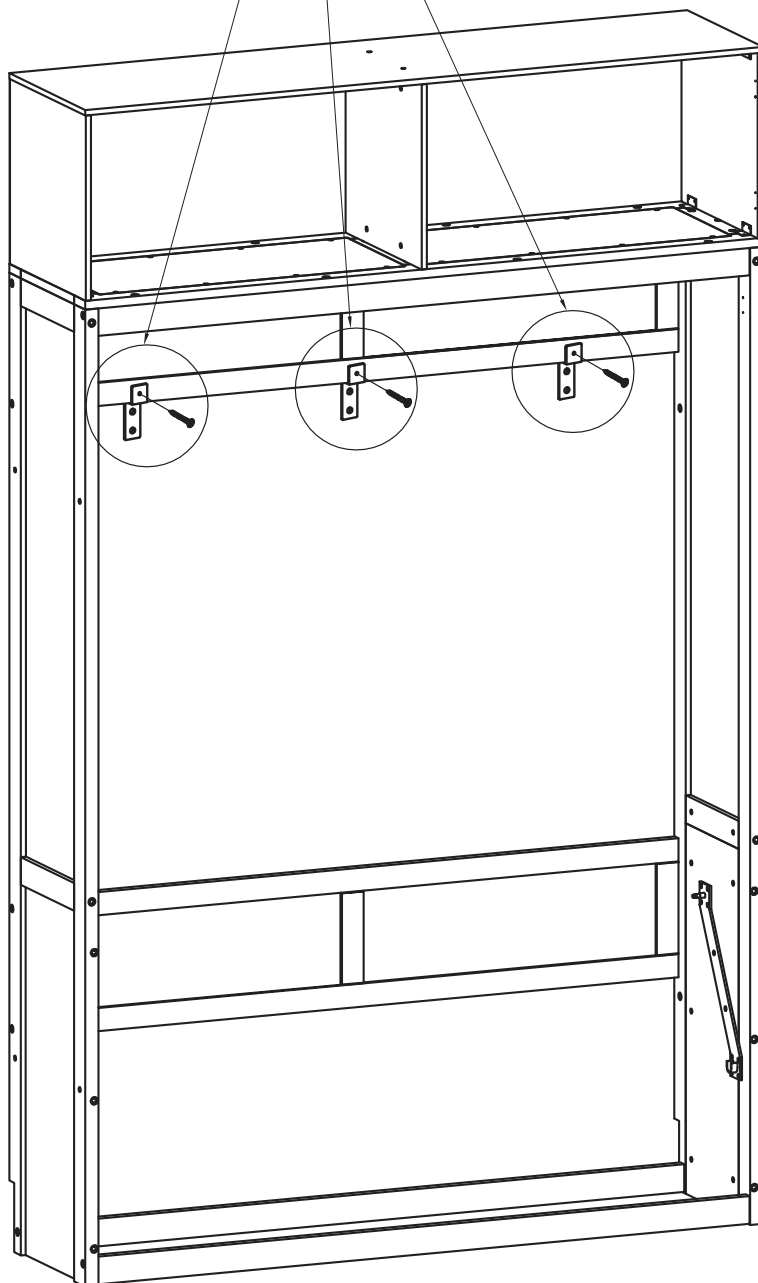


STEP 14:
Étape 14:

26




24(pcs)

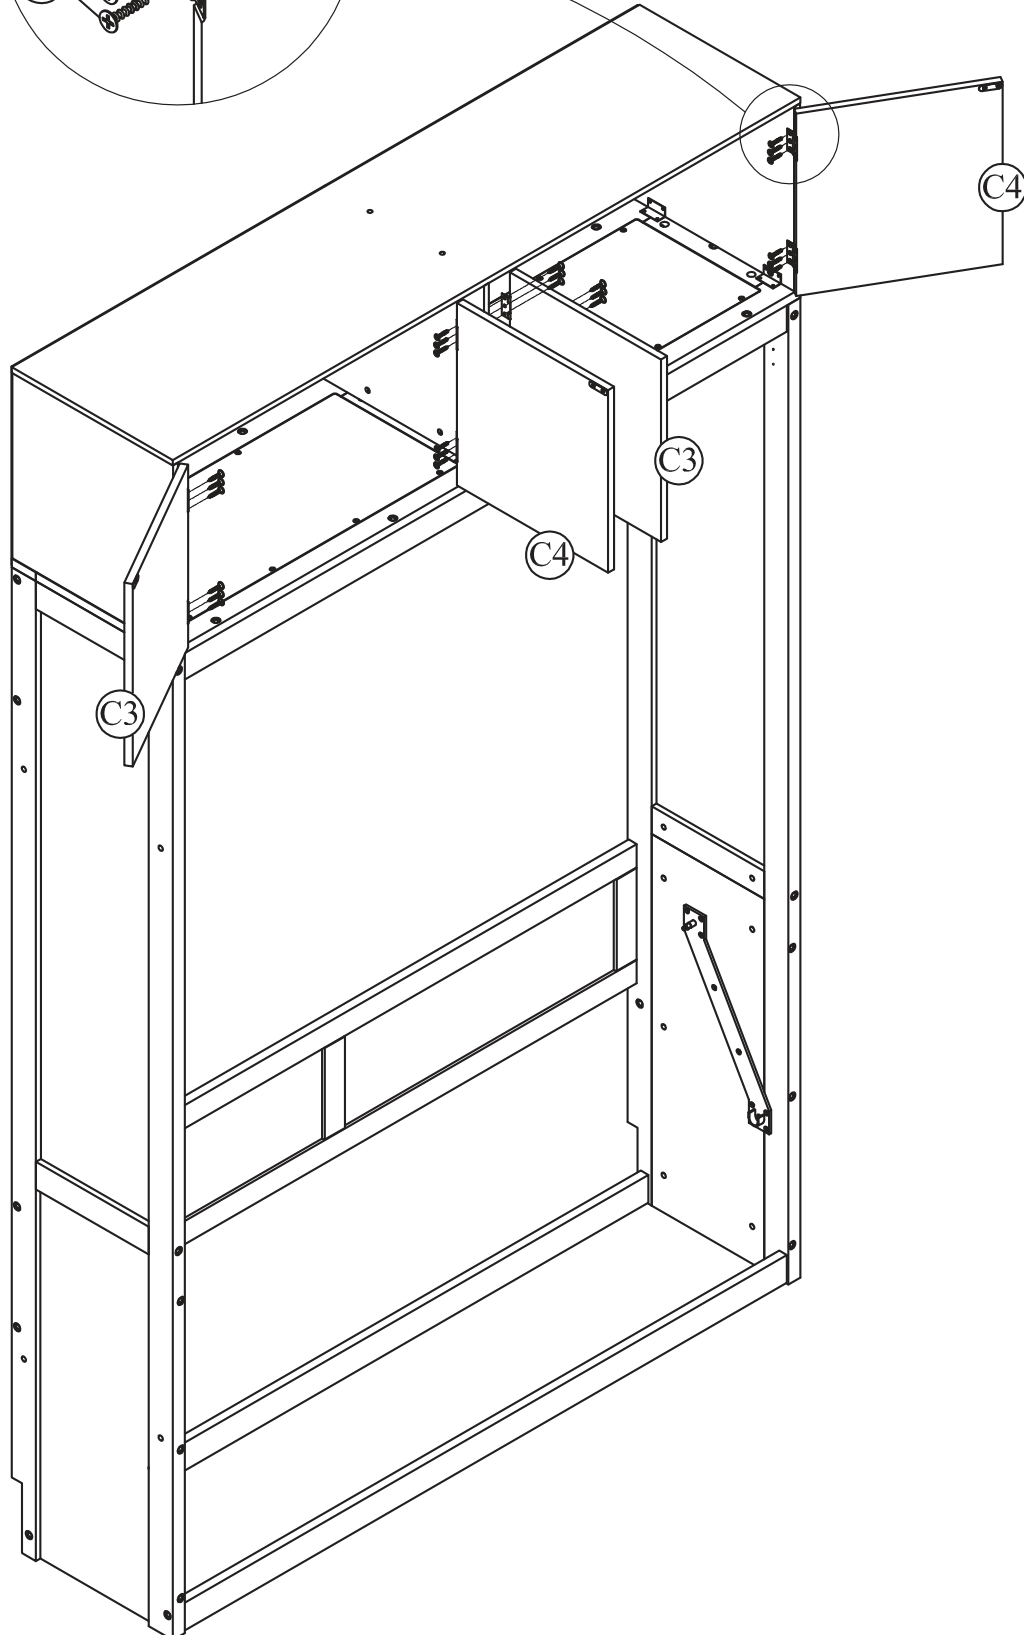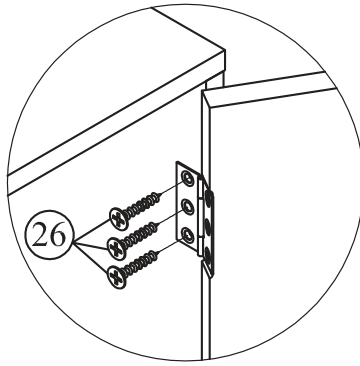


STEP 15:

Étape 15:

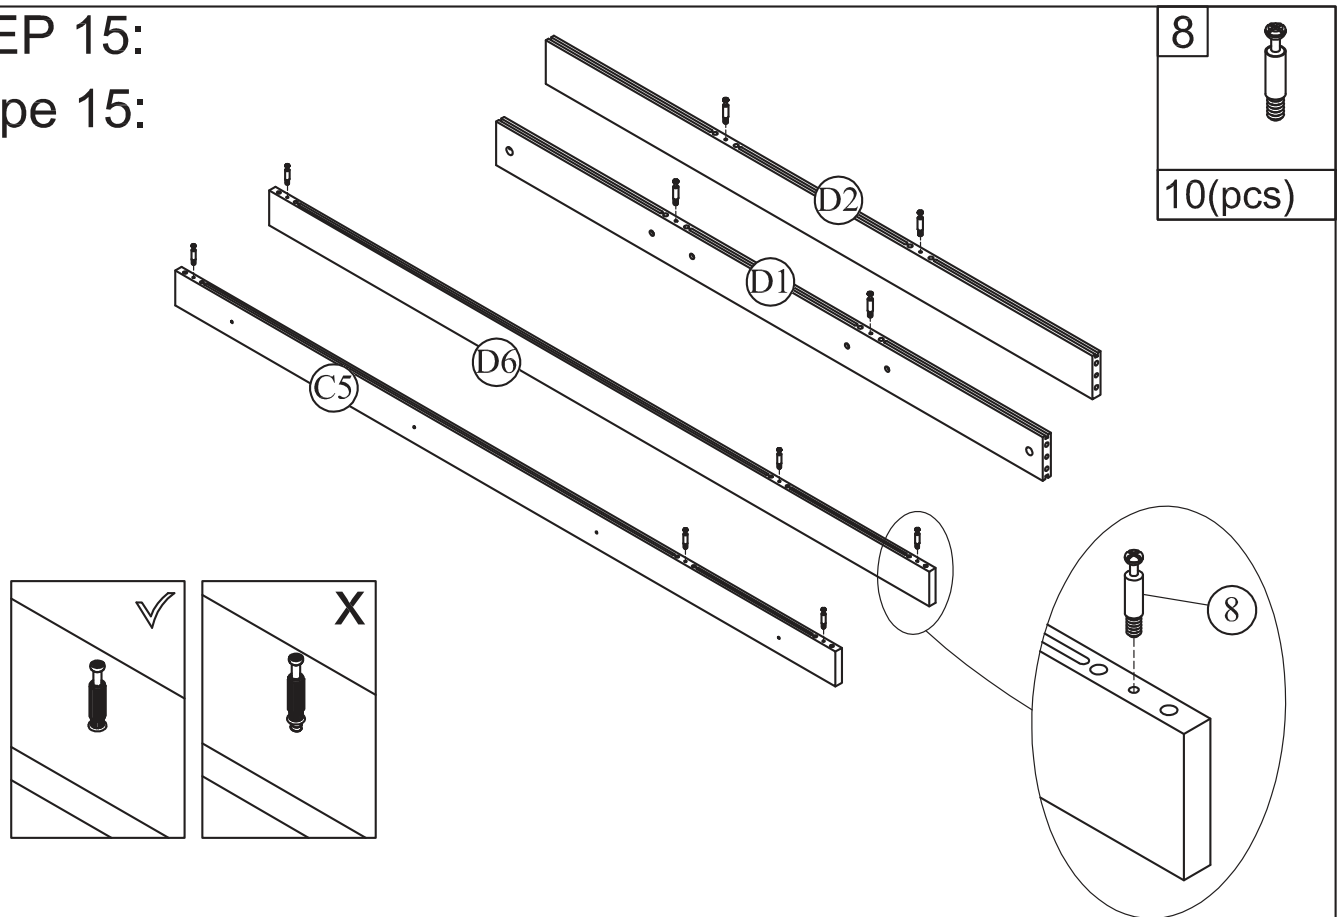


STEP 16:

Étape 16:

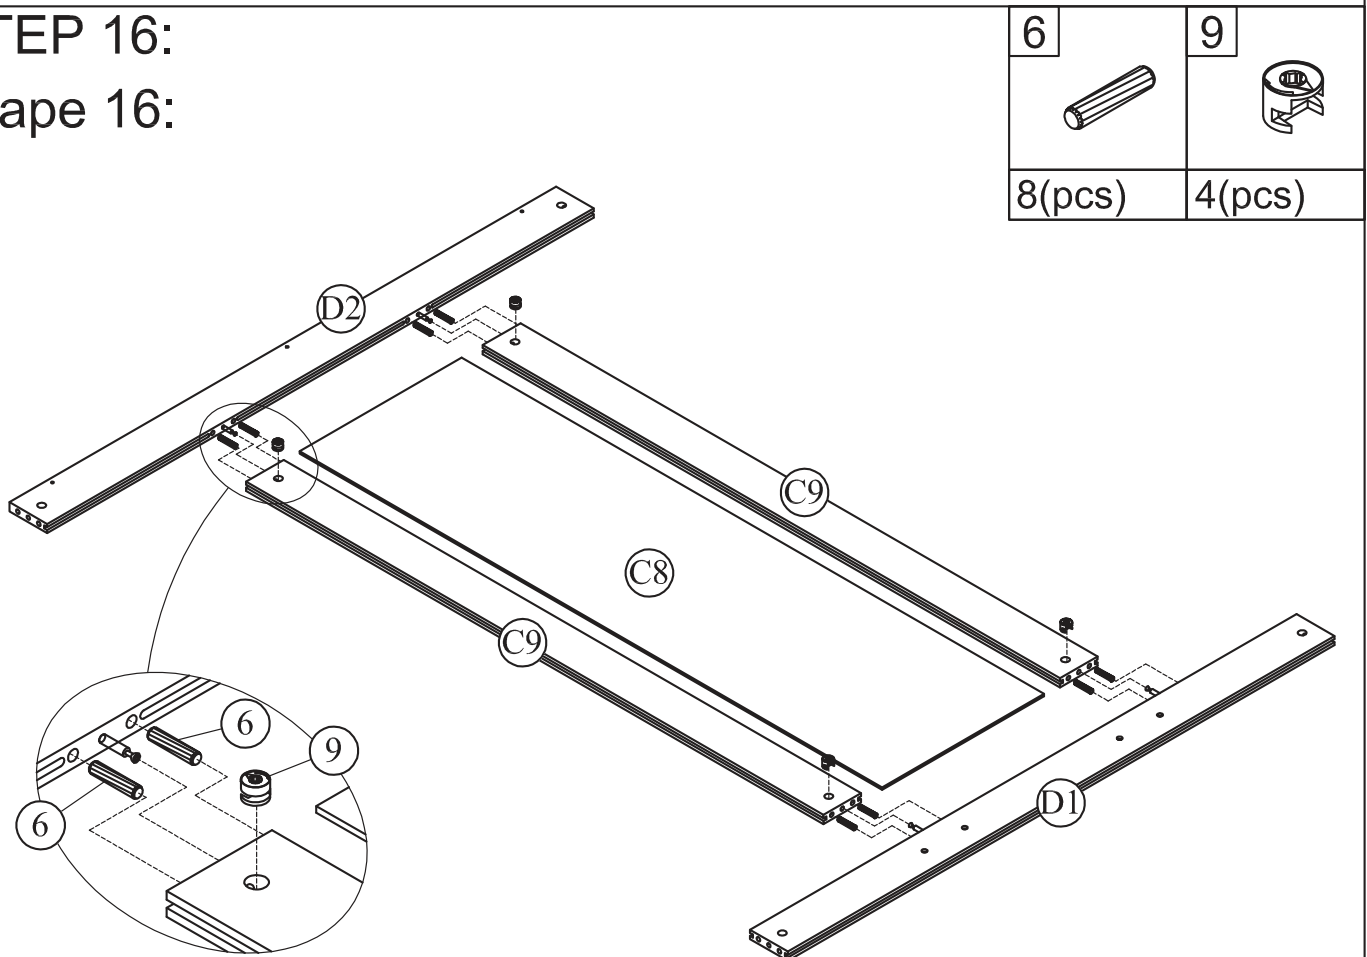


STEP 17:

Étape 17:

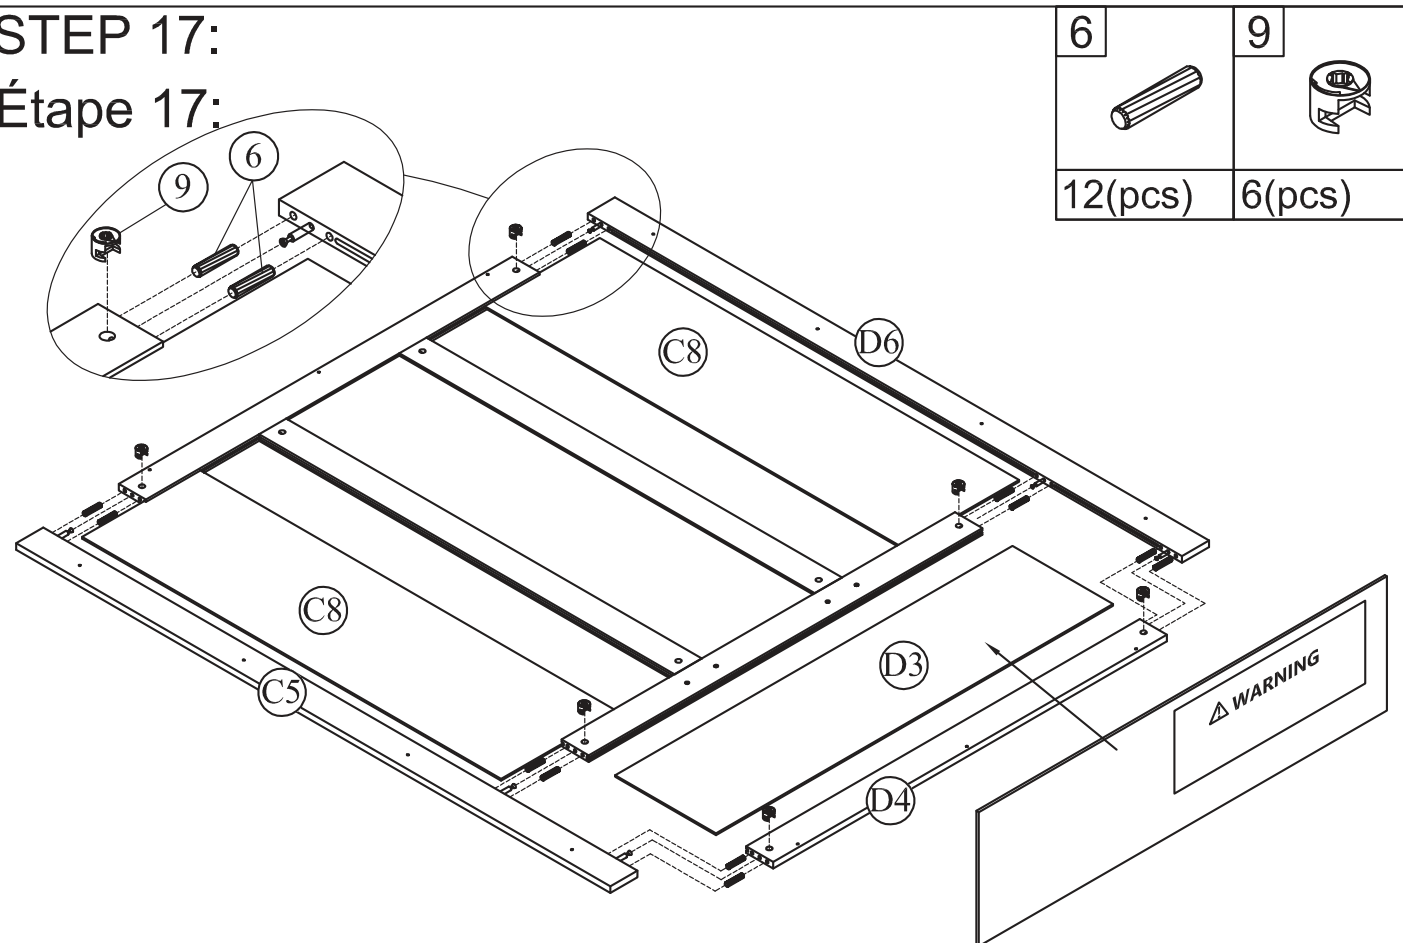


STEP 18:

Étape 18:

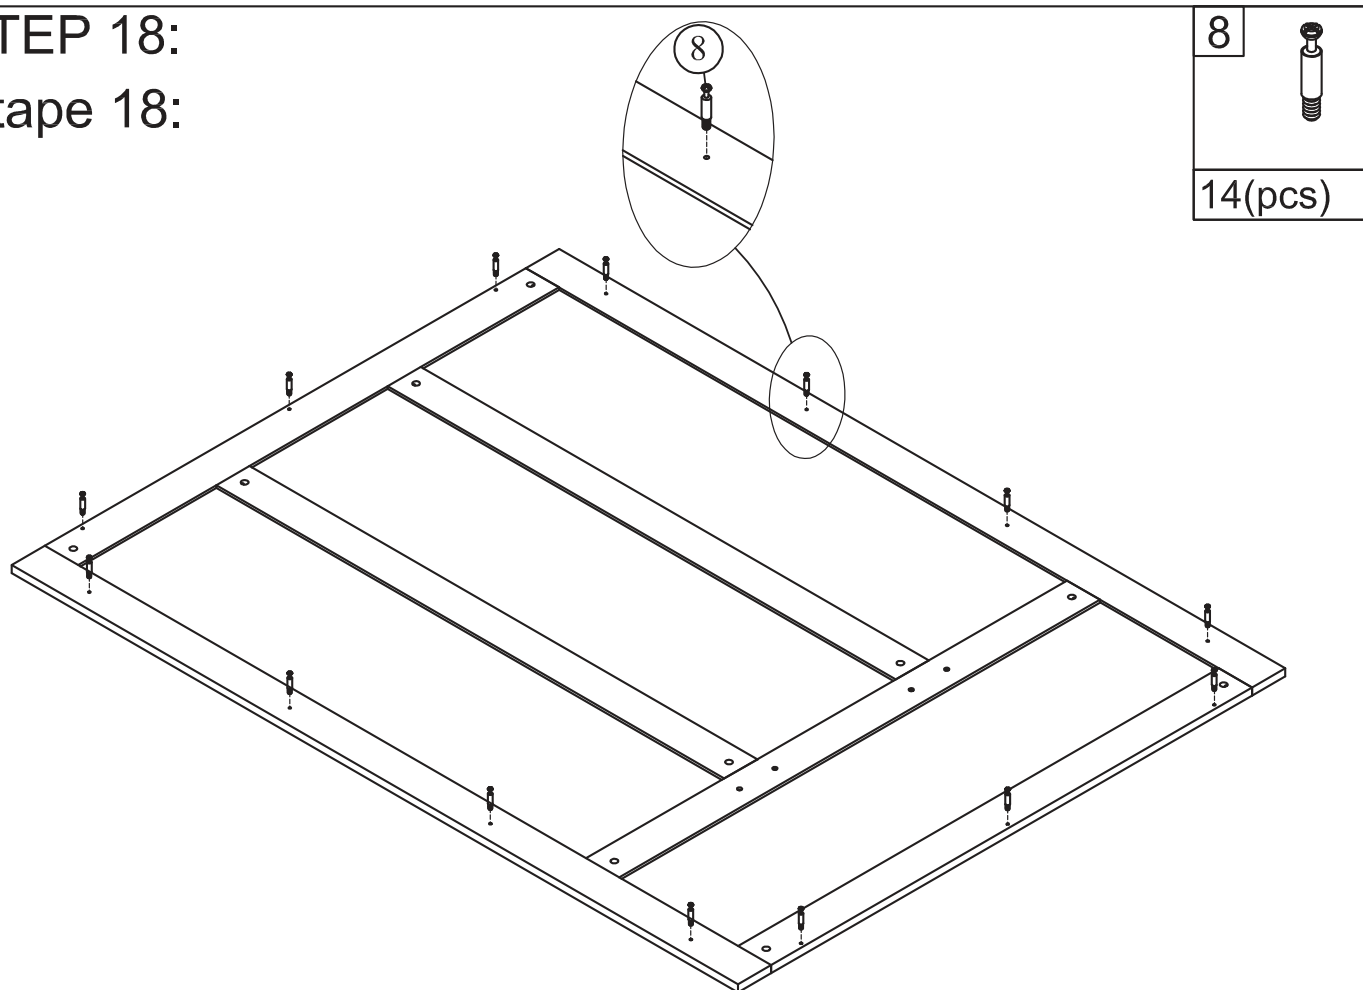

STEP 19:
Étape 19:

3	5	6
		
4(pcs)	4(pcs)	8(pcs)

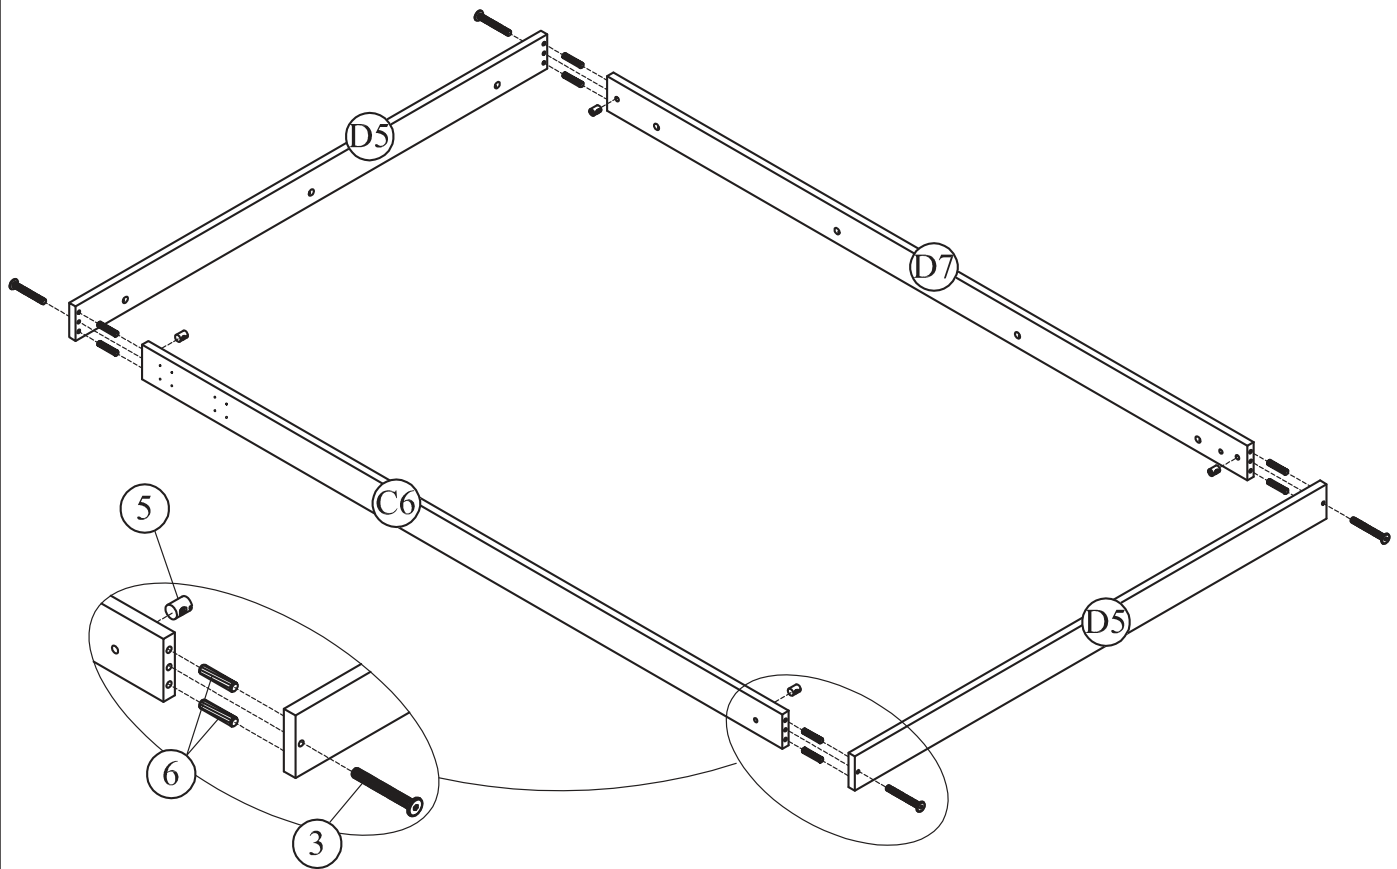


STEP 20:

Étape 20:

9



14(pcs)

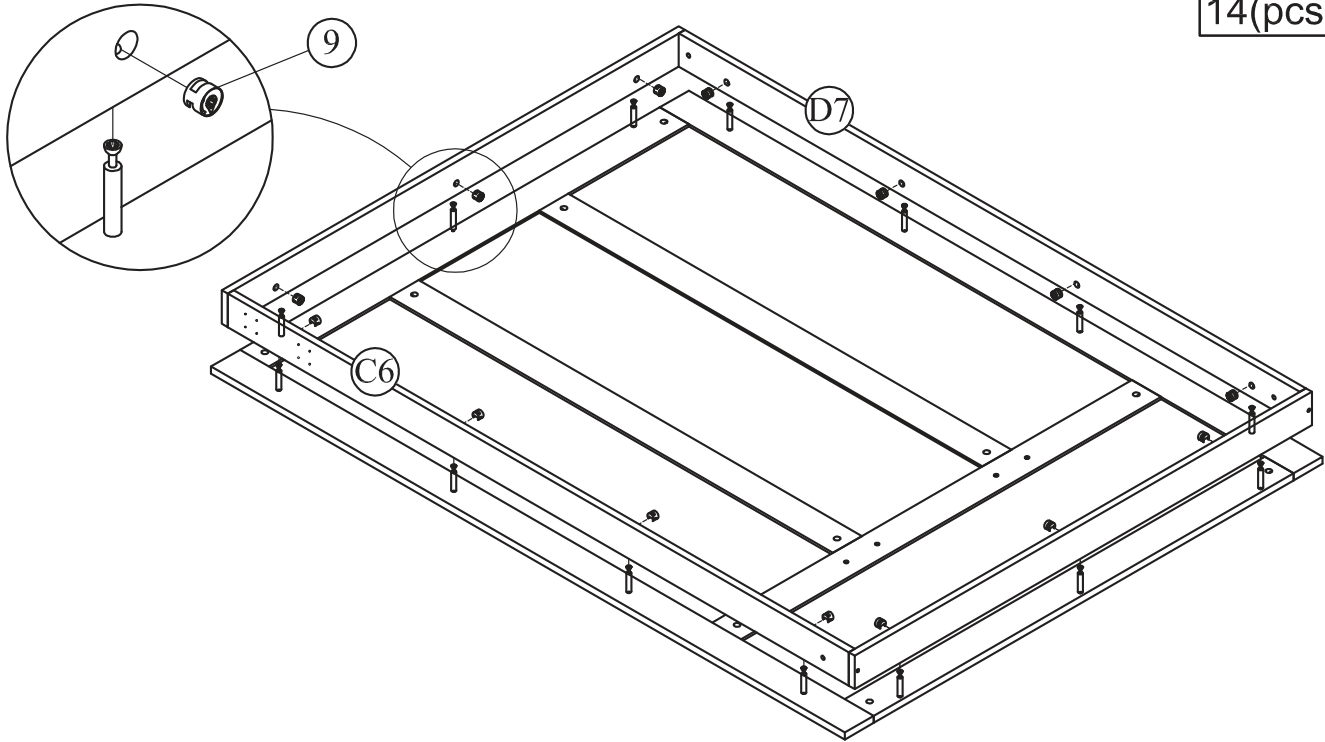


STEP 21:

Étape 21:

31




3(pcs)

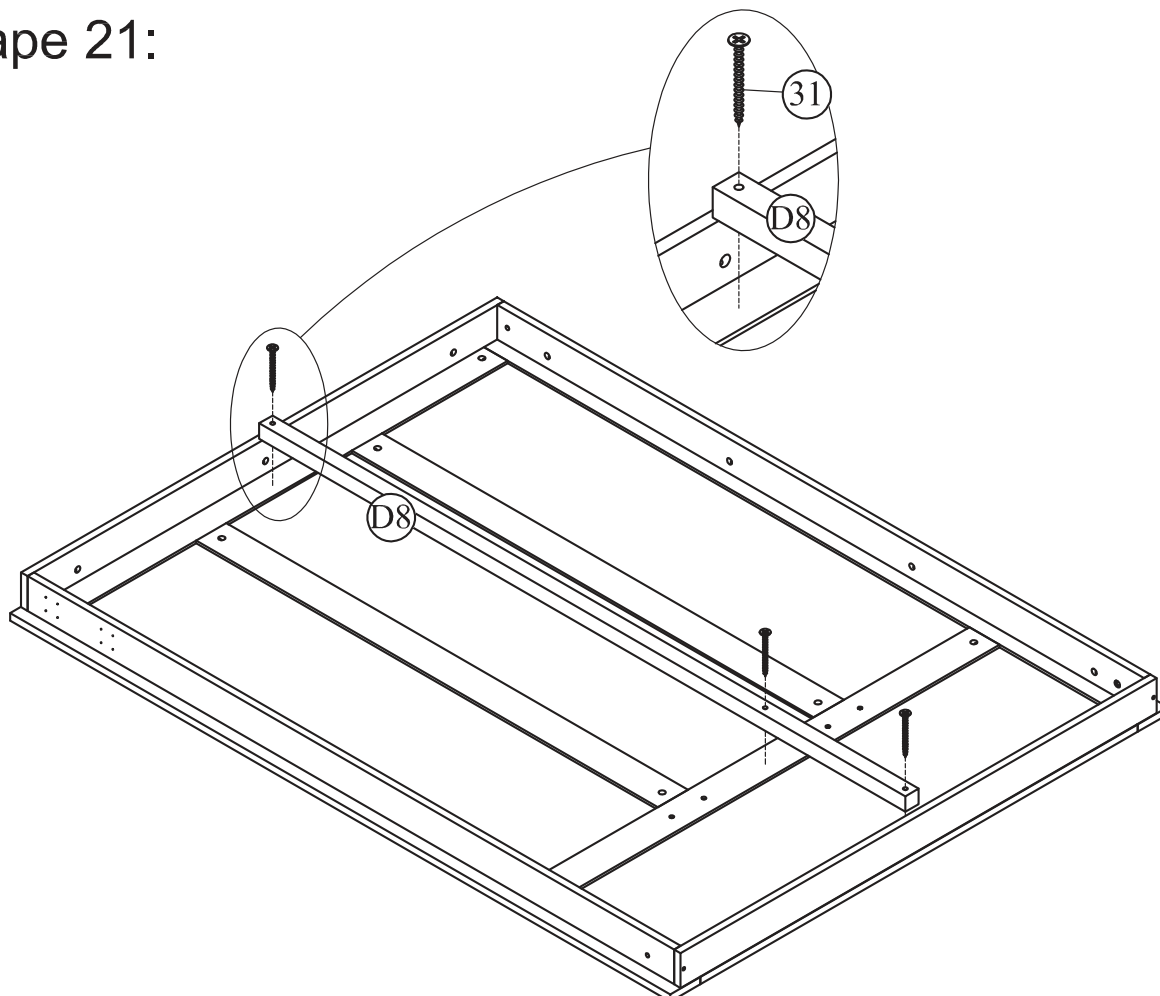

STEP 22:

Étape 22:

25	28
	
9(pcs)	36(pcs)

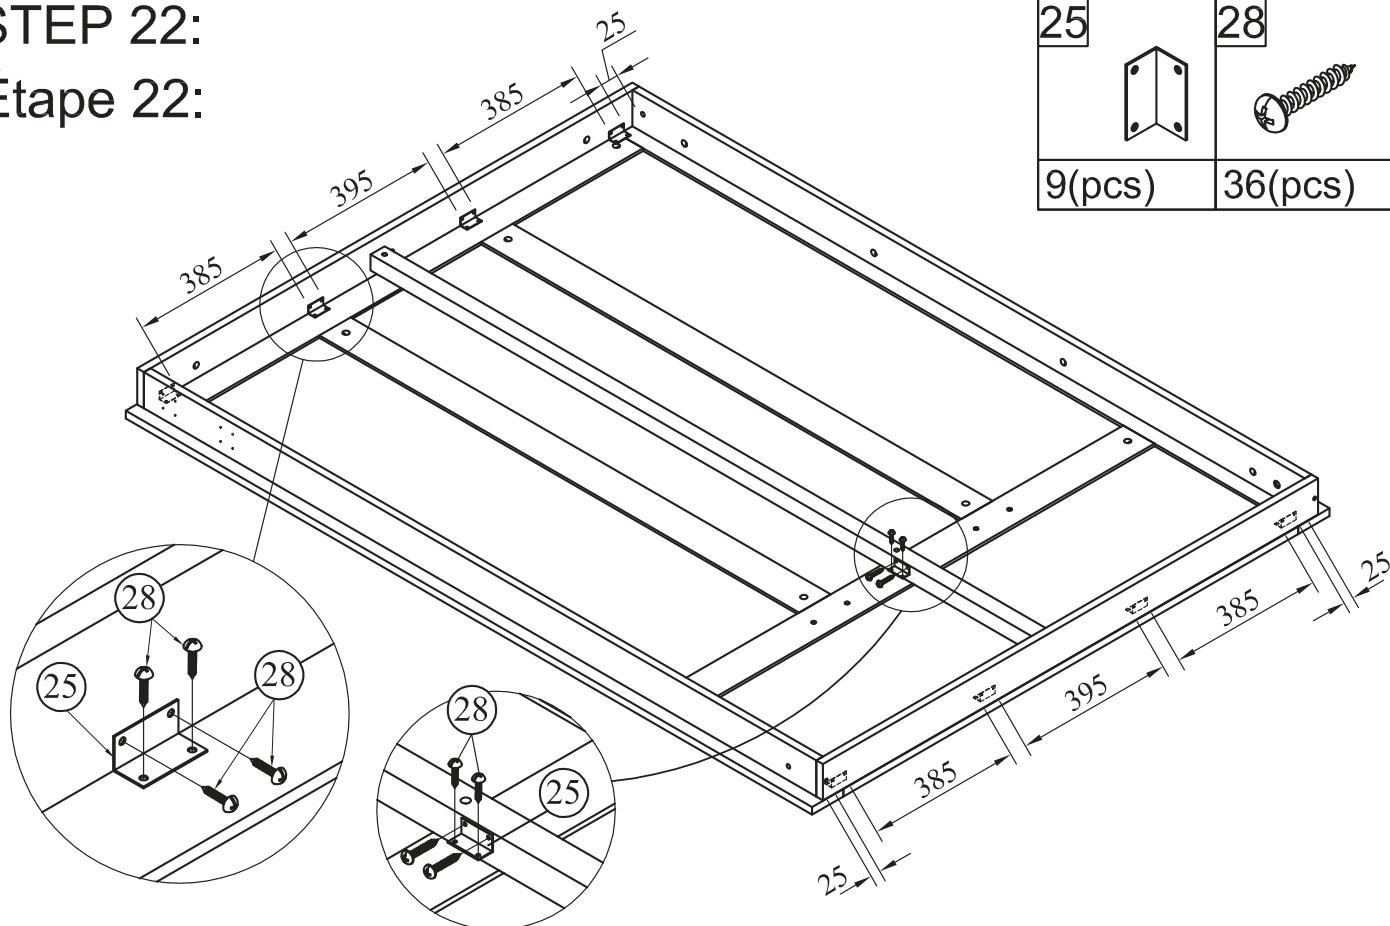


STEP 23:

Étape 23:

31

18(pcs)

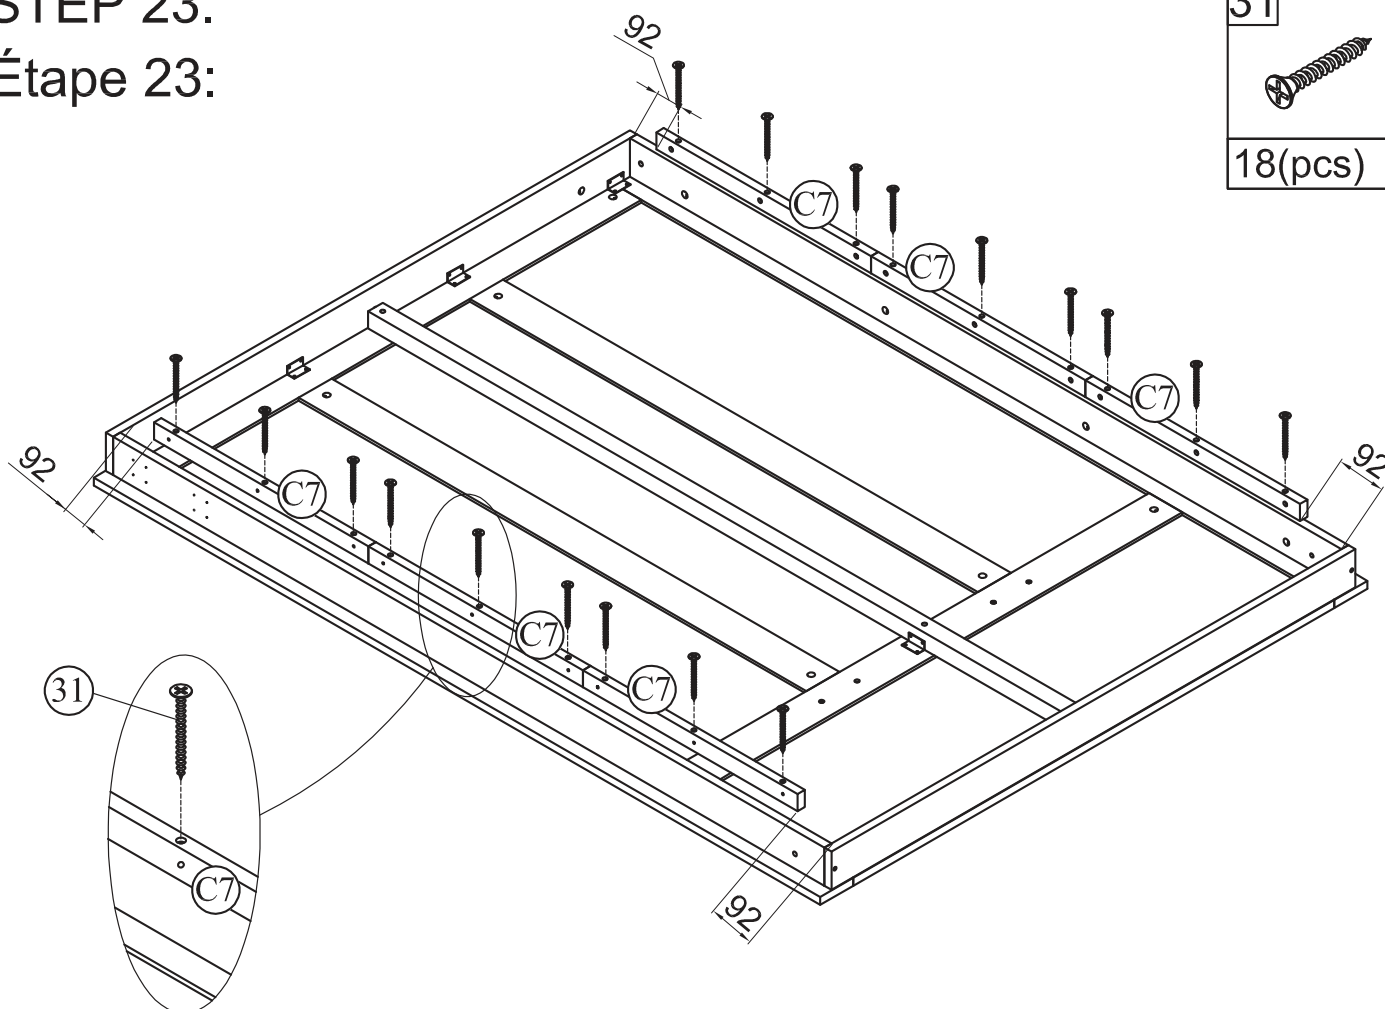



STEP 24:

Étape 24:

30



18(pcs)

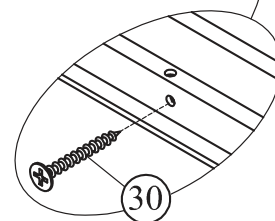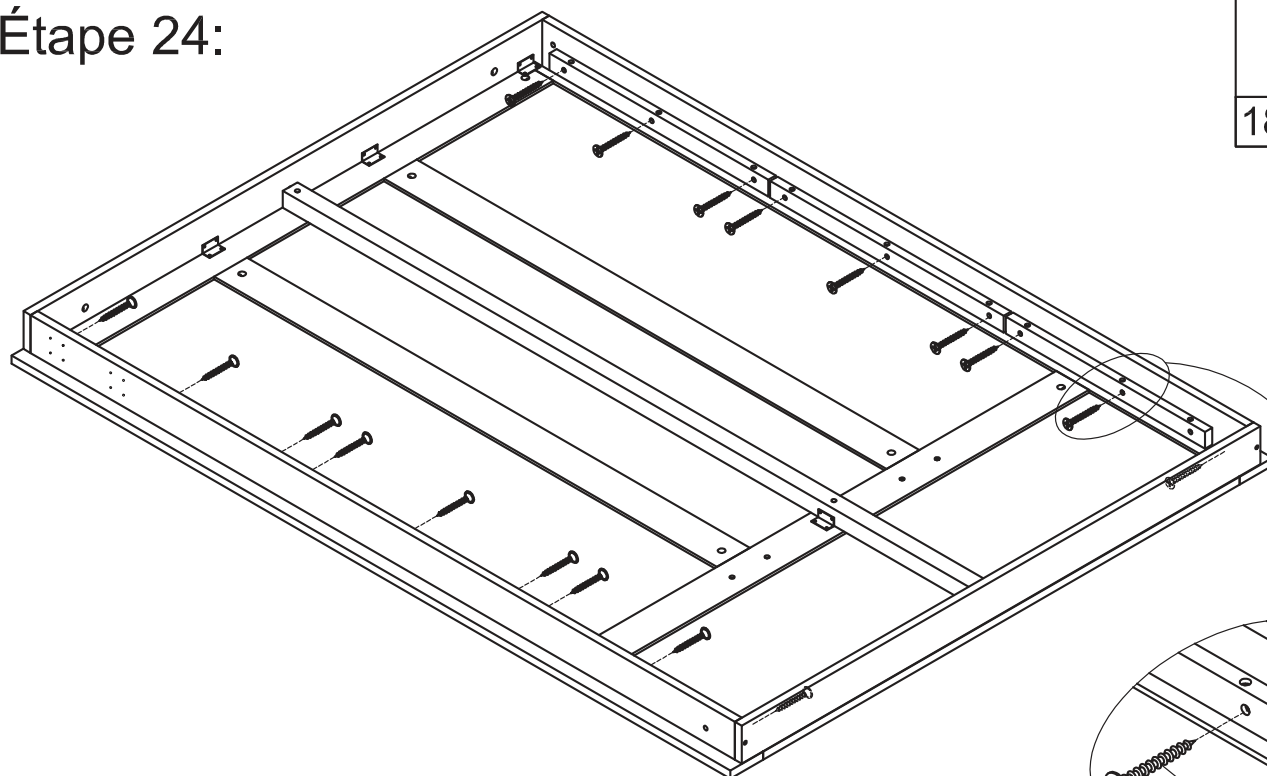


STEP 25:

Étape 25:

30



21(pcs)

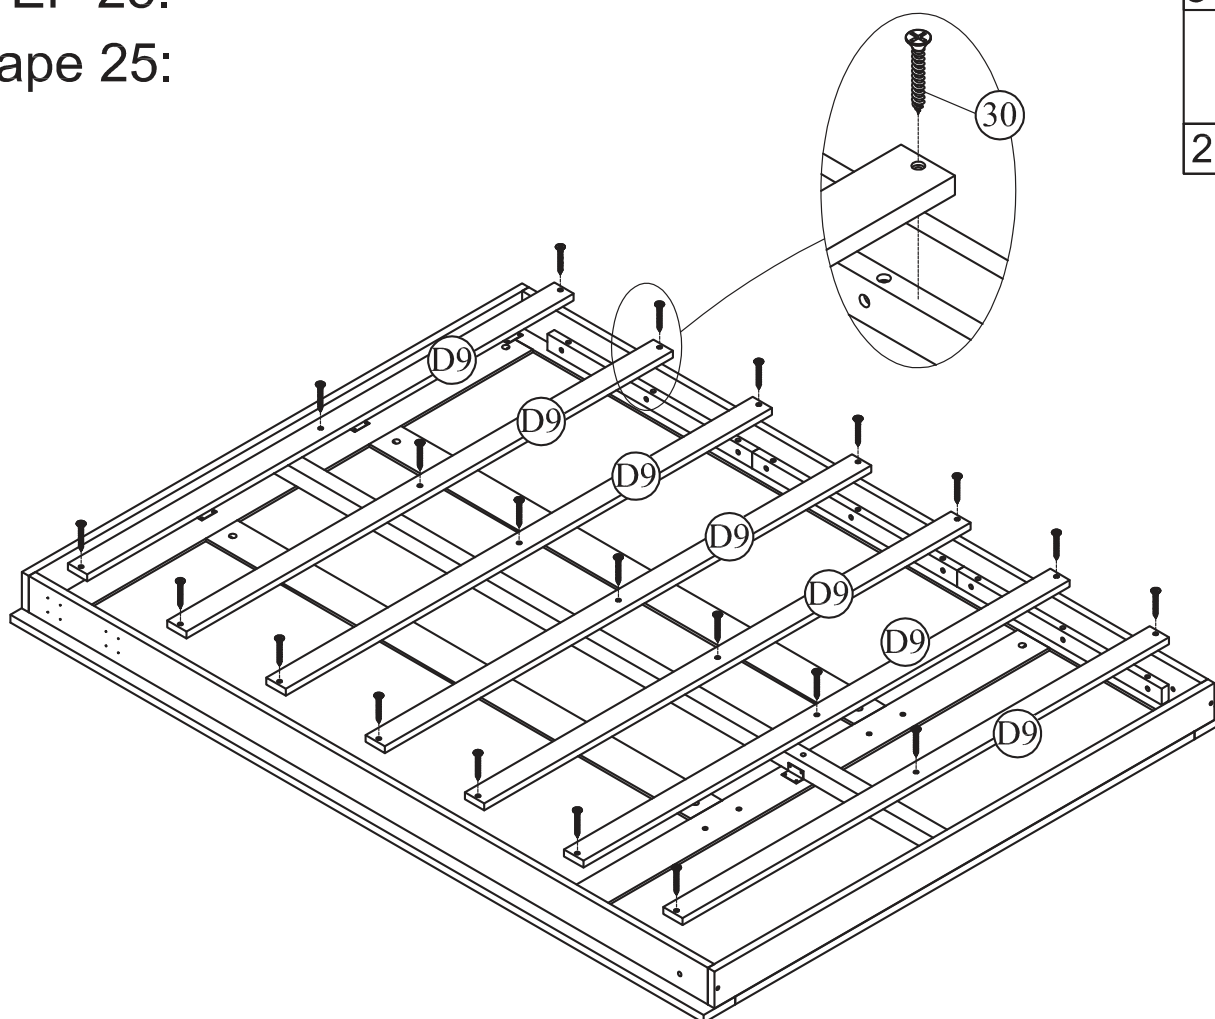


STEP 26:

Étape 26:

29



16(pcs)

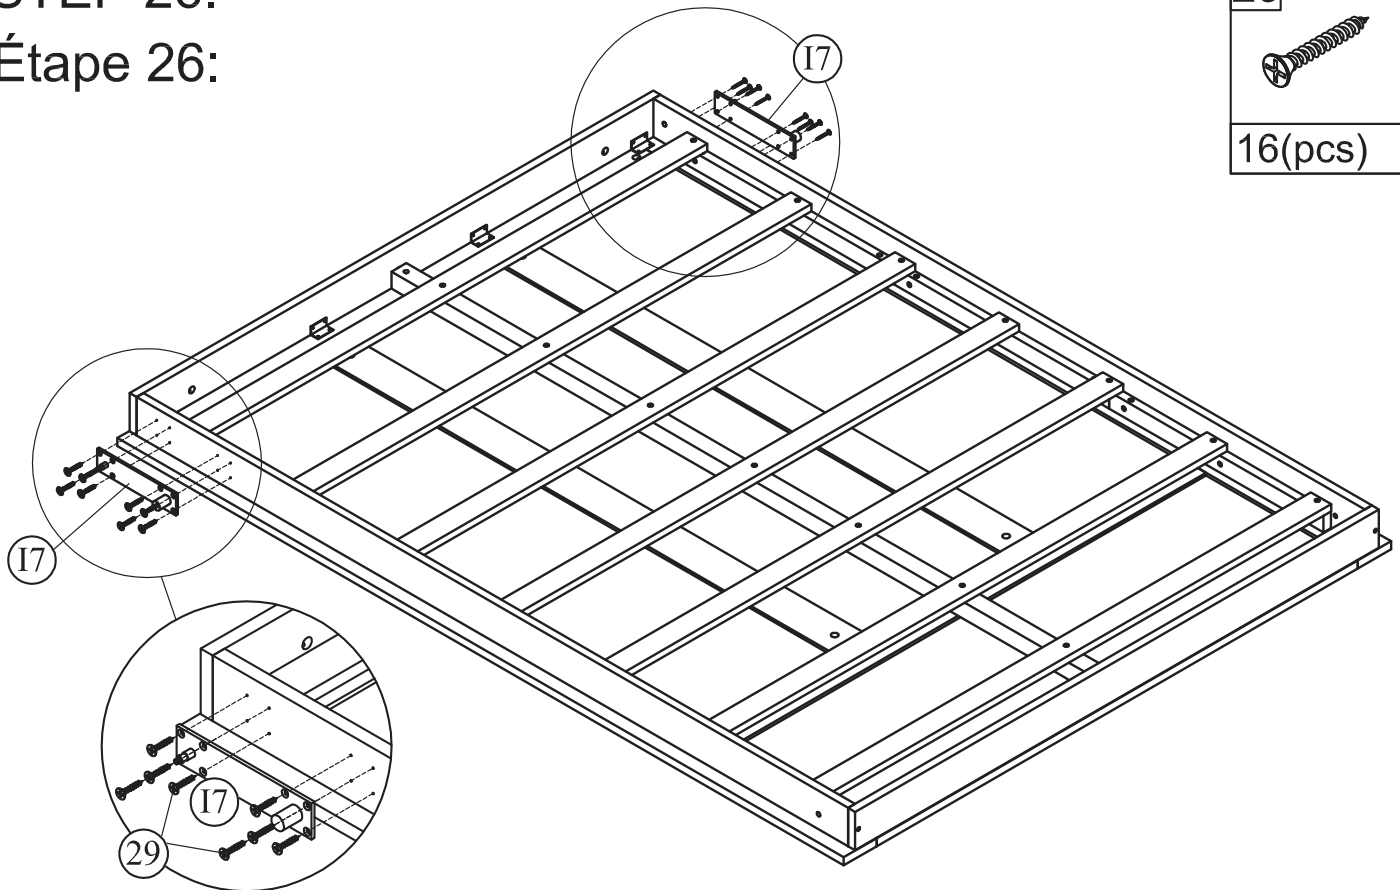


STEP 27:

Étape 27:



Before assembling, we need to remove the plastic ties.

Avant le montage, il faut d'abord retirer les attaches en plastique.

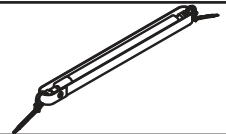

Press the lock and pull the cord out.

Appuyez sur le verrou et tirez sur le cordon.

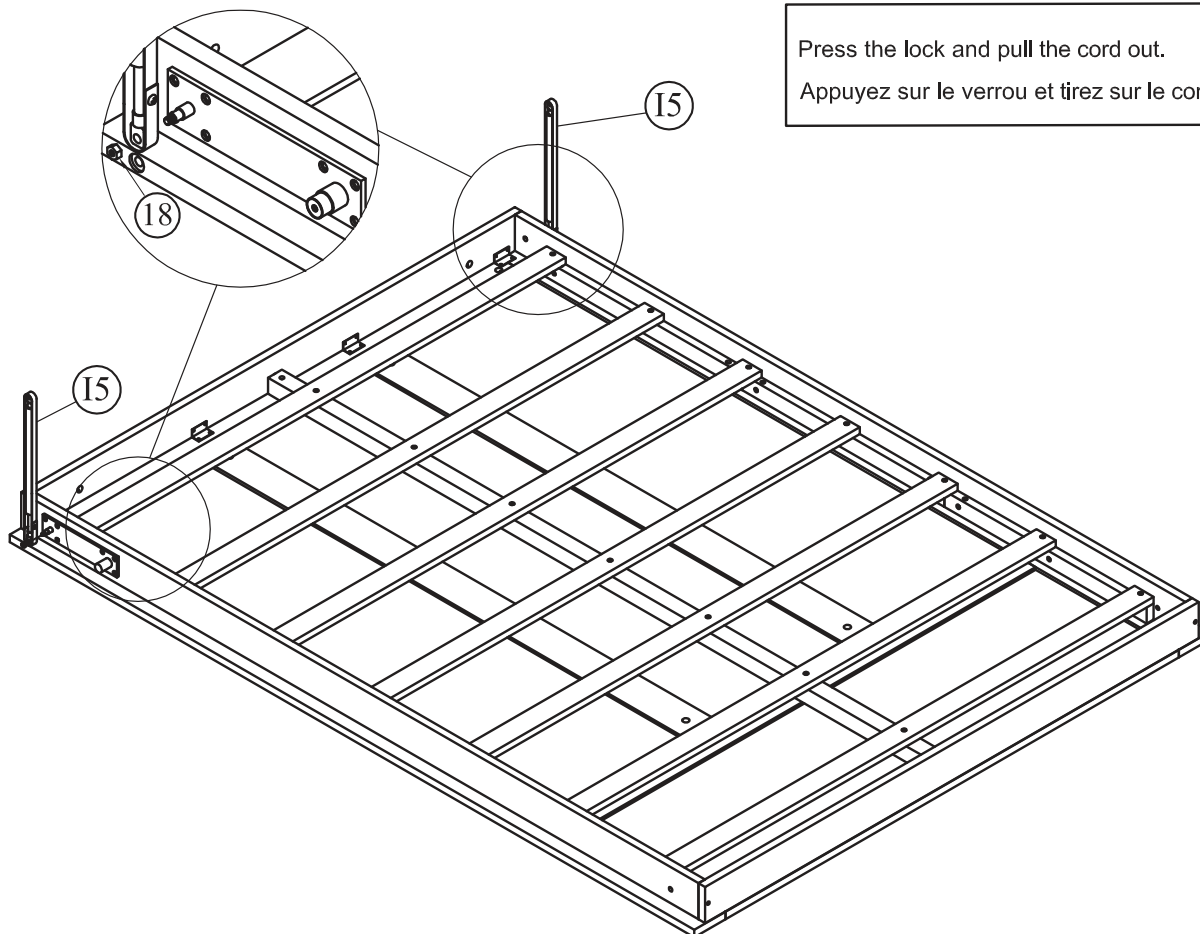



18



2(pcs)

STEP 28:
Étape 28:

32	16	19
		
4(pcs)	2(pcs)	2(pcs)

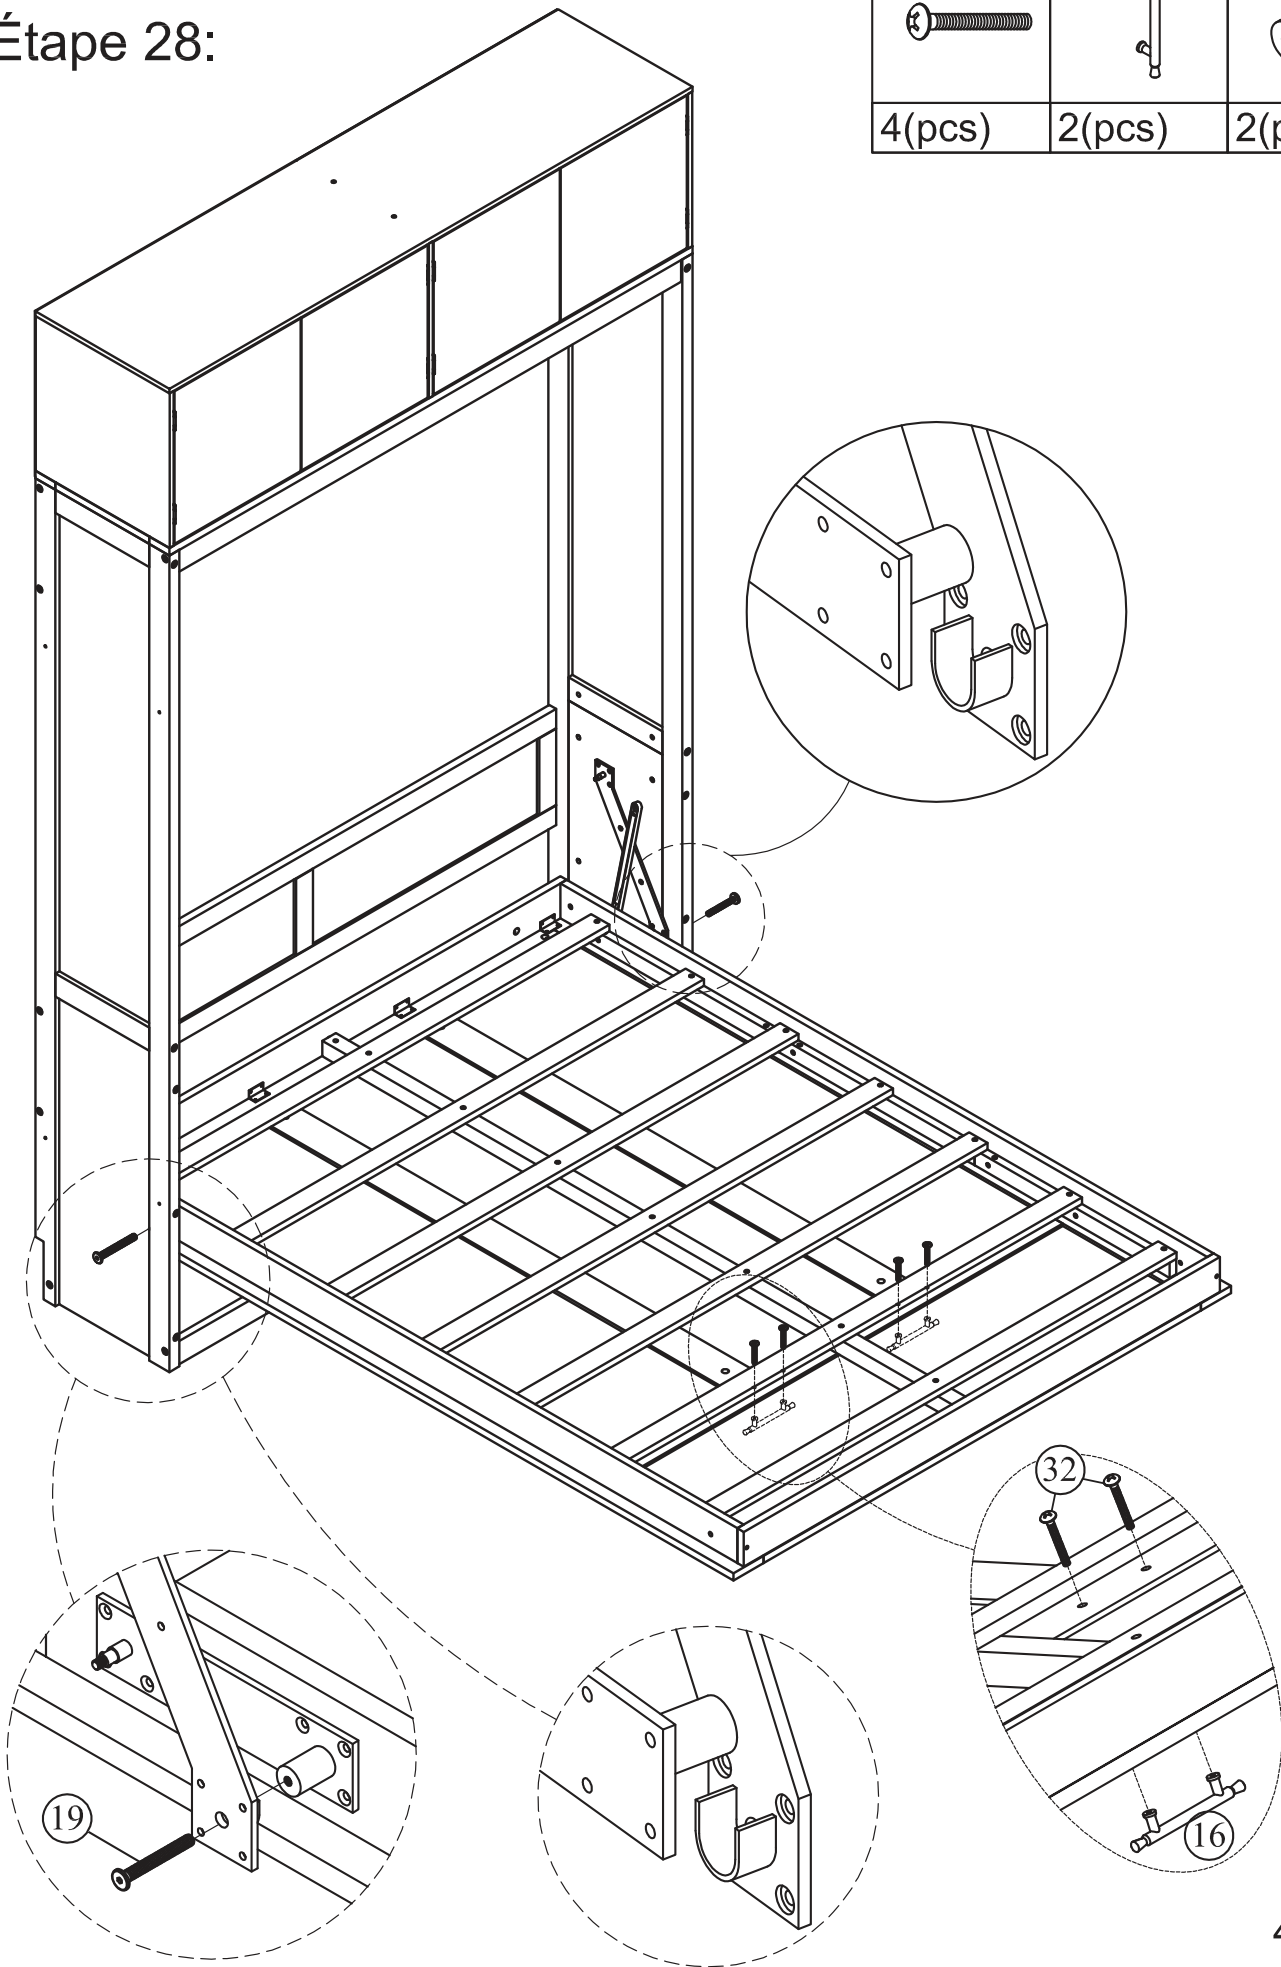




STEP 29:

Étape 29:

18




2(pcs)

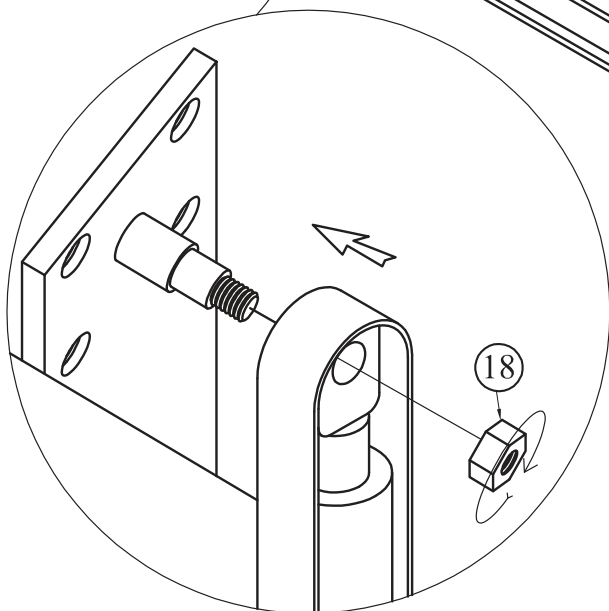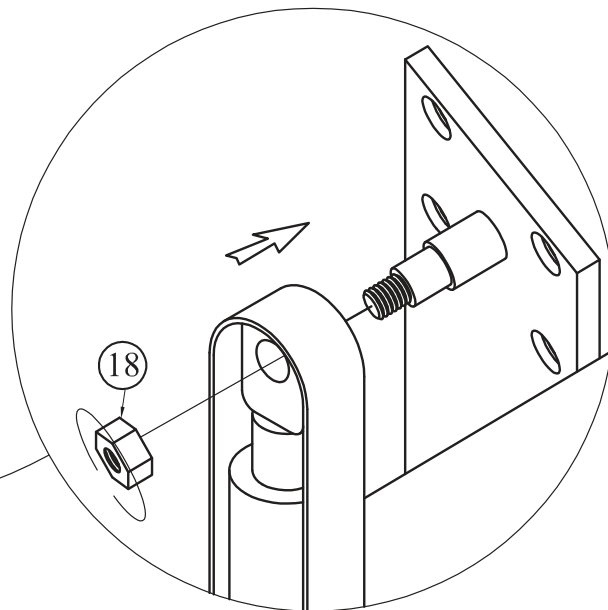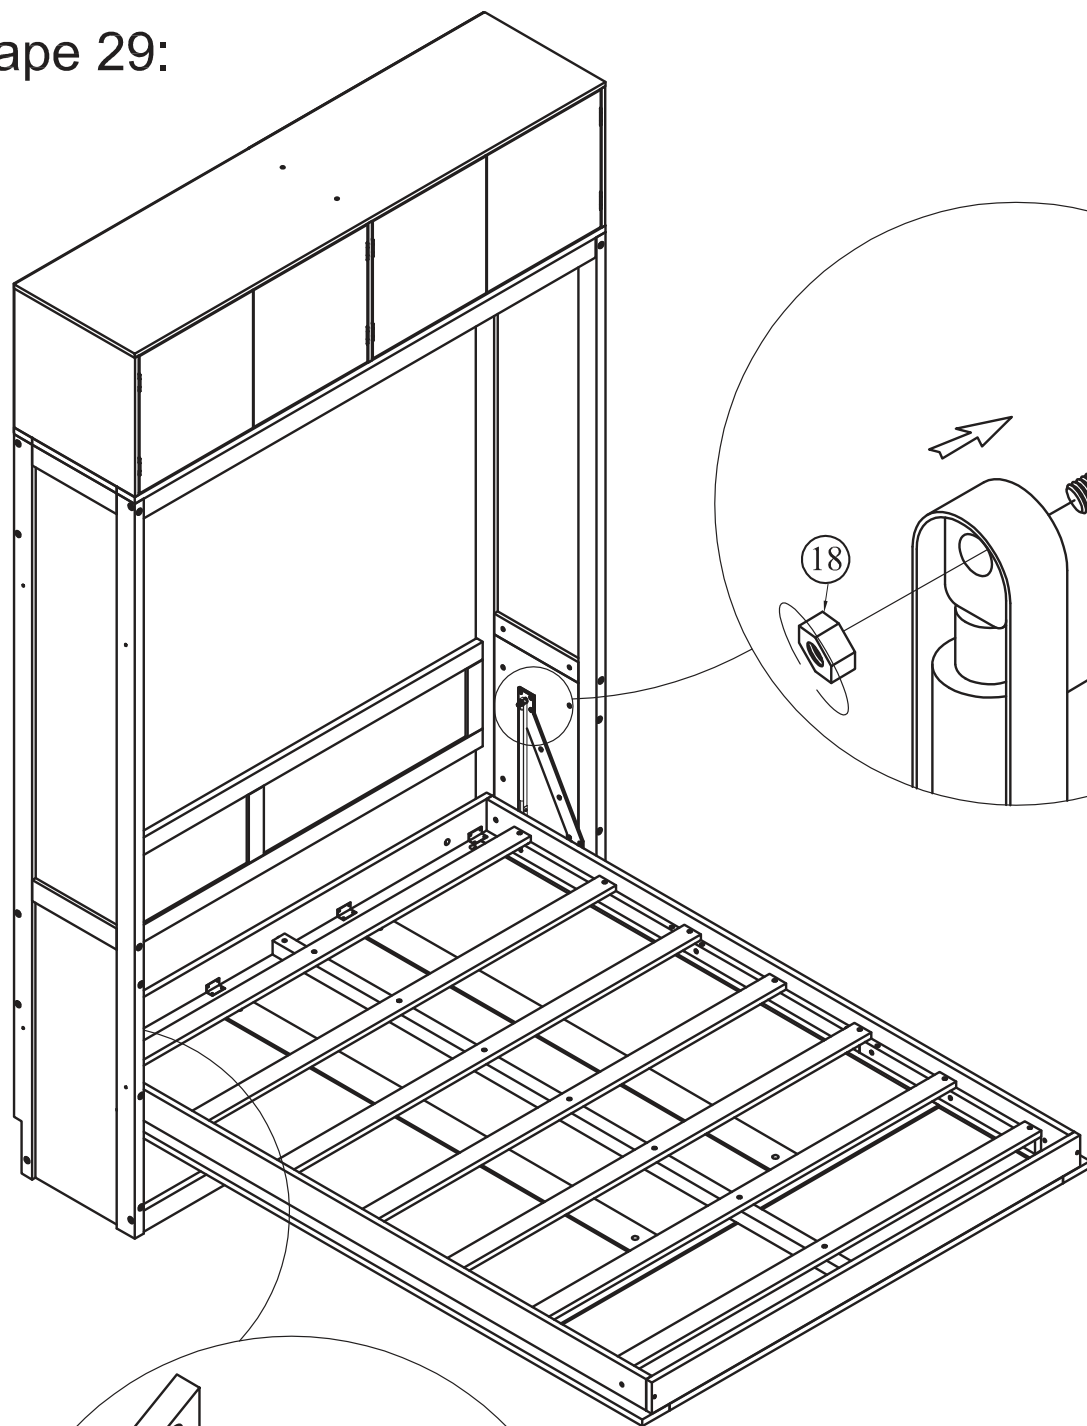


Before assembling, we need to remove the plastic ties.

Avant le montage, il faut d'abord retirer les attaches en plastique.

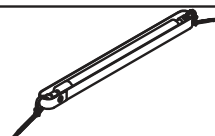


Press the lock and pull the cord out.

Appuyez sur le verrou et tirez sur le cordon.




STEP 30:

Étape 30:

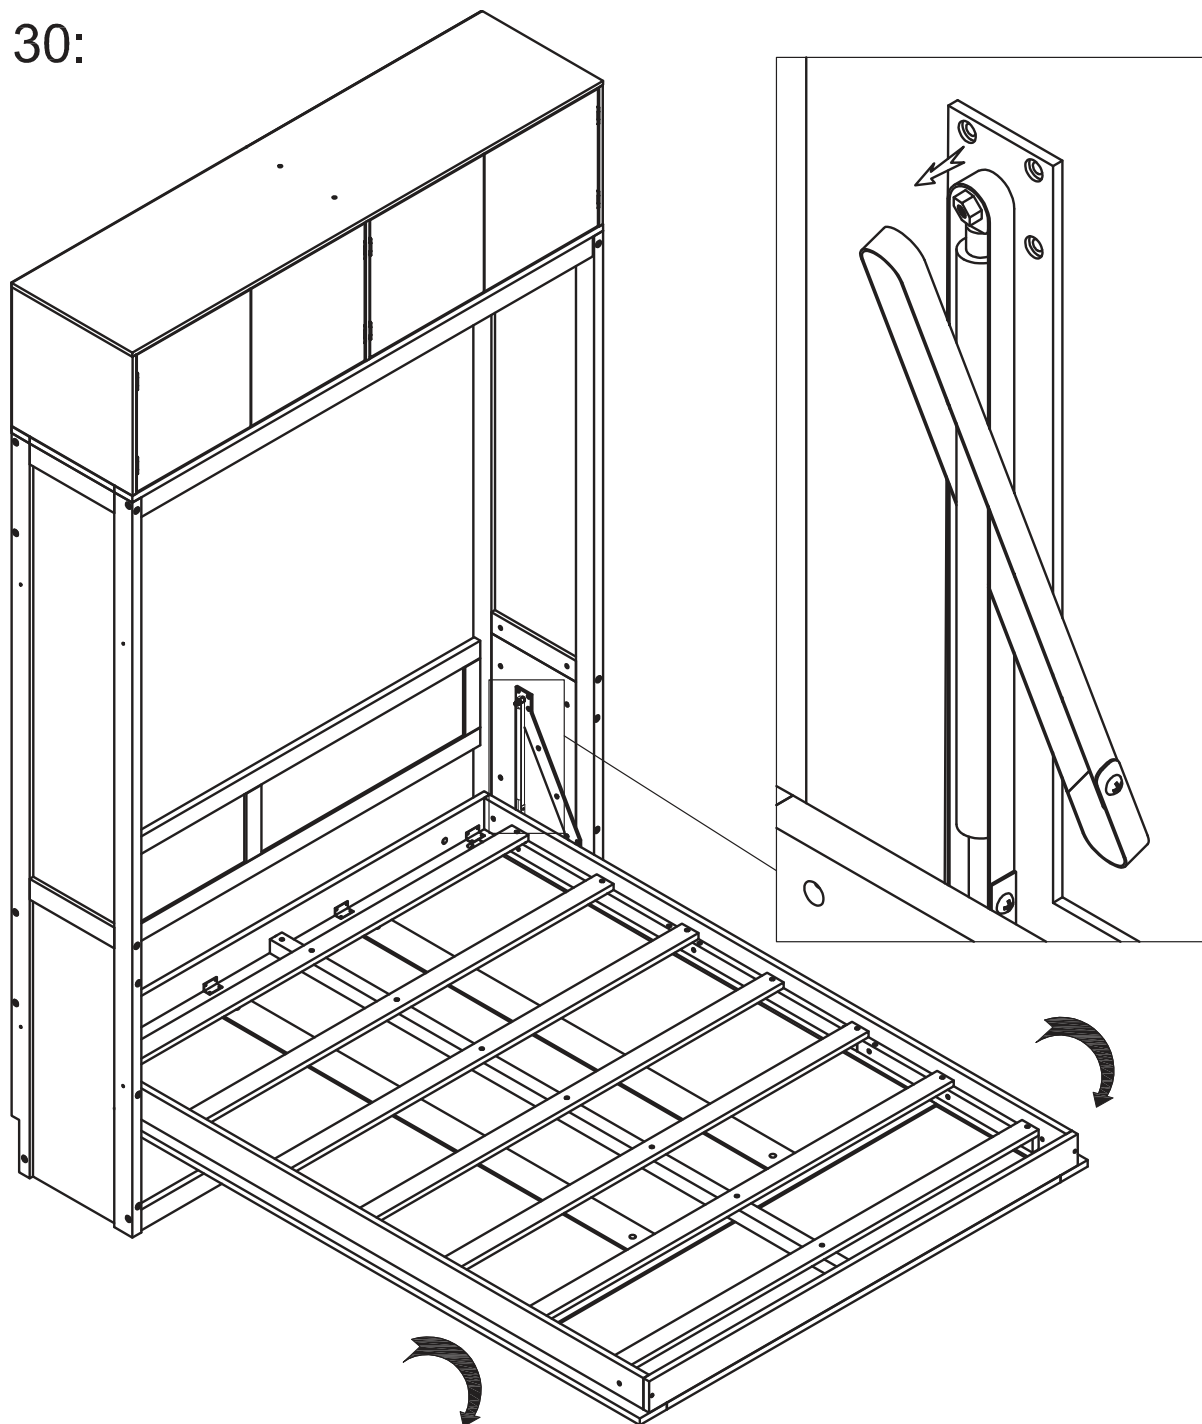


Move the bed frame in the direction of the arrow, pull the straps to the side, then use a screwdriver to open and remove the straps.

Déplacez le cadre de lit dans le sens de la flèche, tirez les sangles sur le côté, puis utilisez un tournevis pour ouvrir et retirer les sangles.

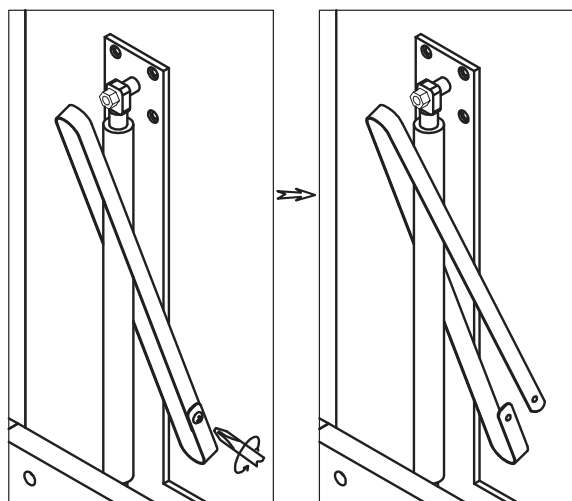

STEP 31:
Étape 31:

4	23	20
		
2(pcs)	2(pcs)	2(pcs)

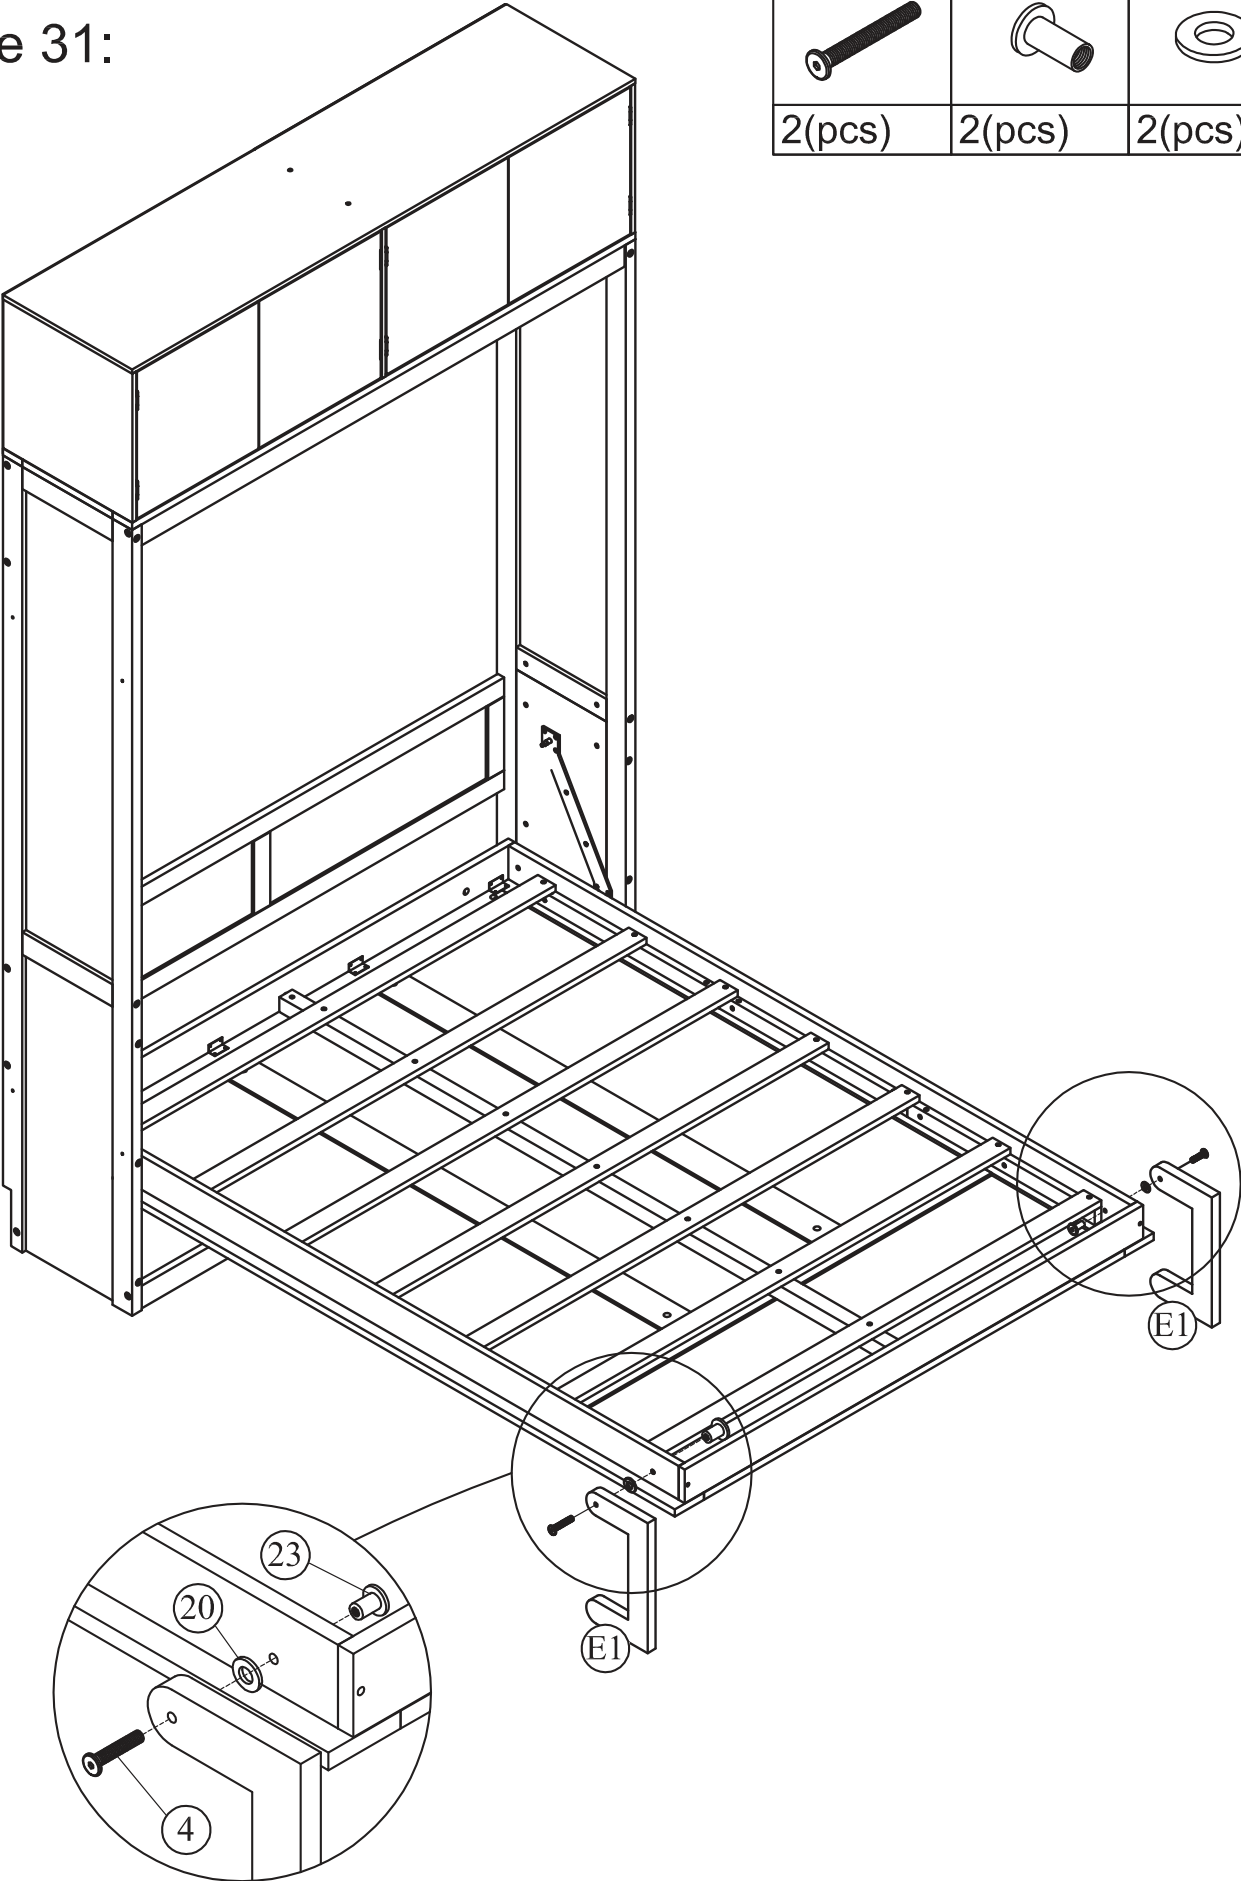


STEP 32:

Étape 32:

8



12(pcs)

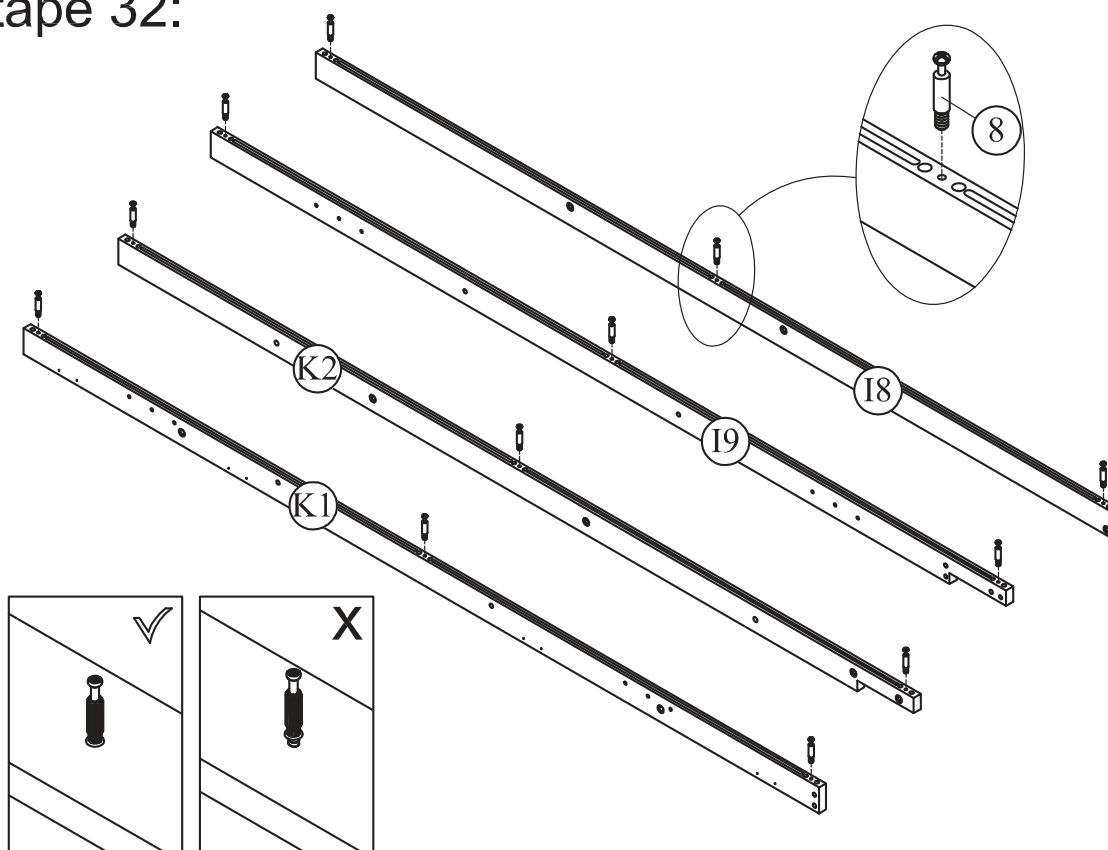

STEP 33:

Étape 33:

6




12(pc)

9




6(pcs)

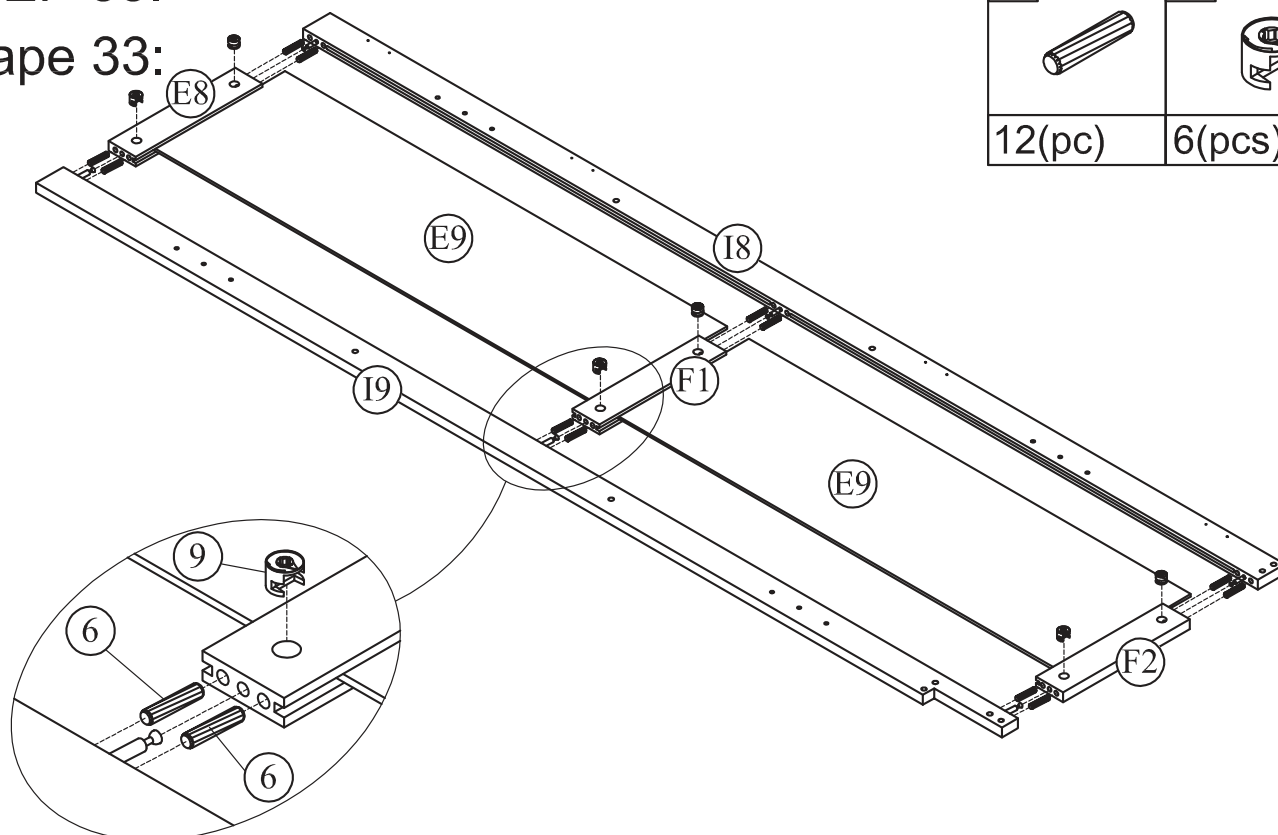

STEP 34:


Étape 34:

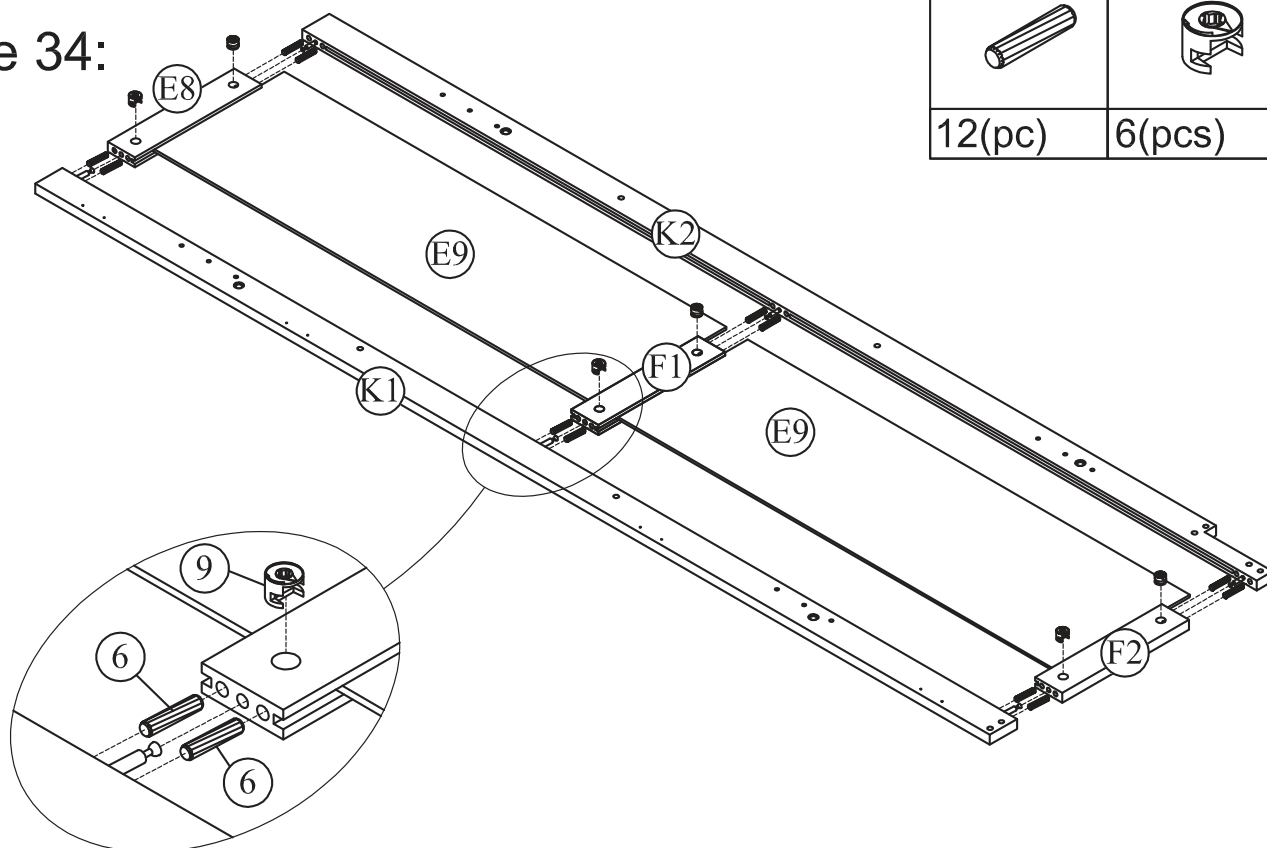

6	9
12(pc)	6(pcs)

STEP 35:


Étape 35:

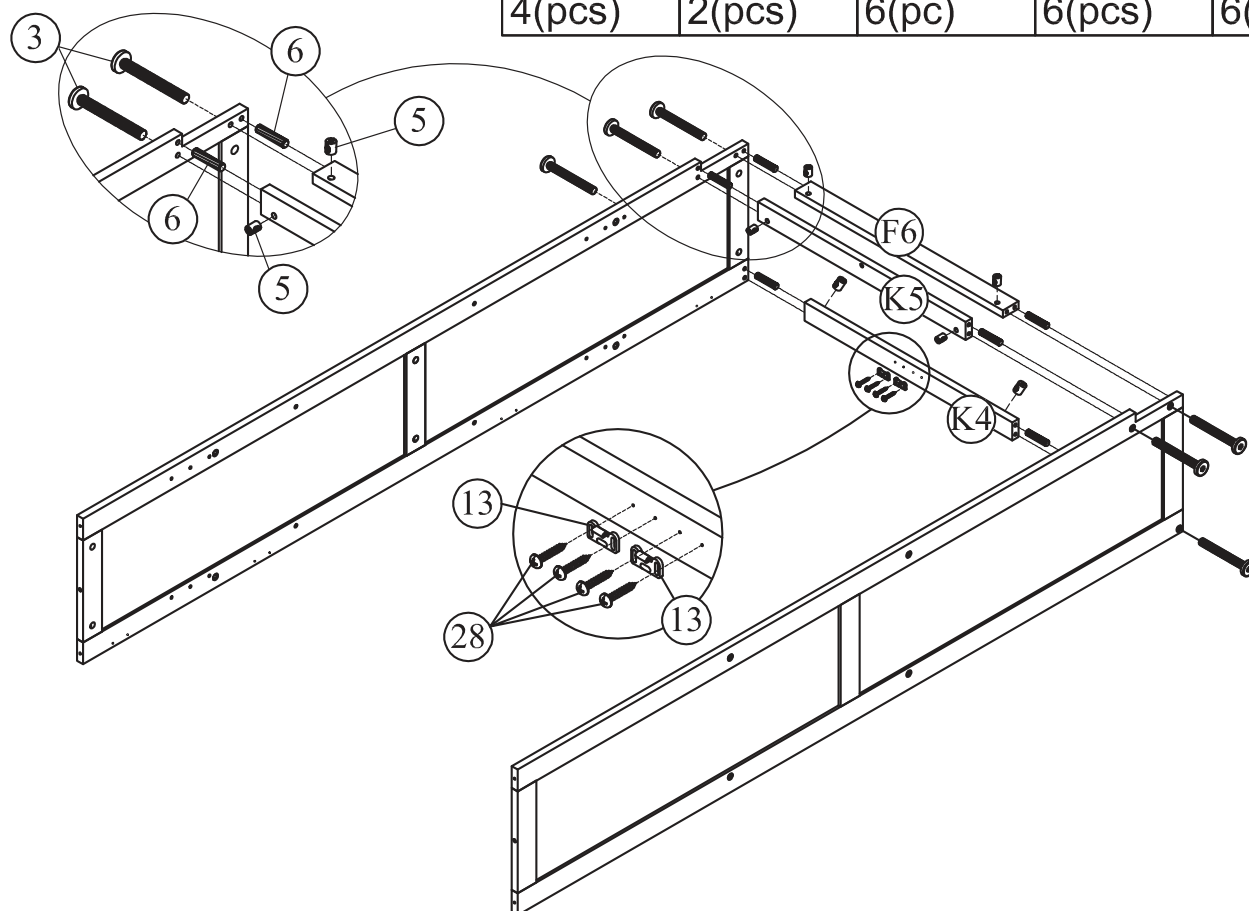


28	13	6	3	5
4(pcs)	2(pcs)	6(pc)	6(pcs)	6(pcs)

STEP 36:

Étape 36:


28	10	3	5
			
4(pcs)	2(pcs)	4(pcs)	4(pcs)

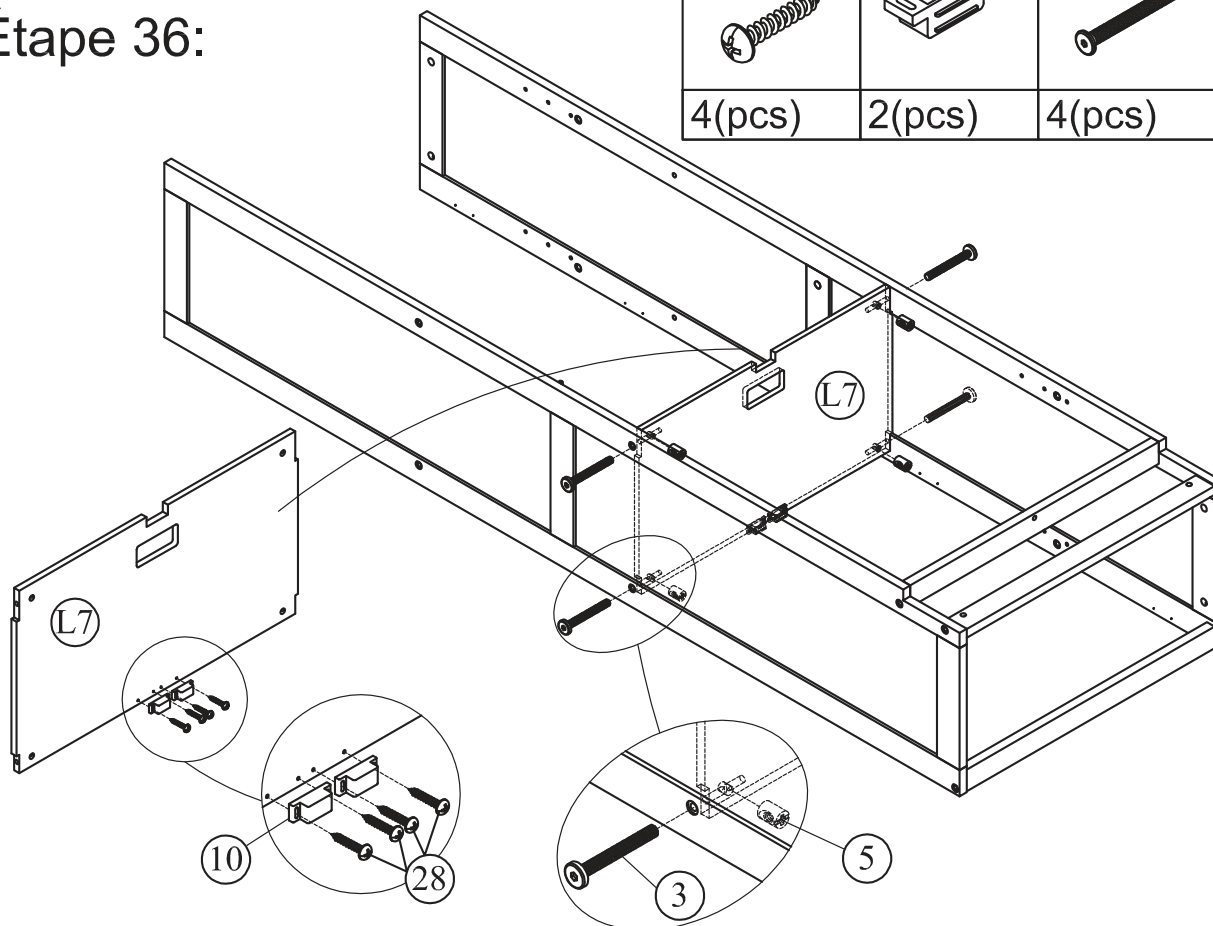

STEP 37:


Étape 37:


33	13	3	5
			
4(pcs)	2(pcs)	4(pcs)	4(pcs)

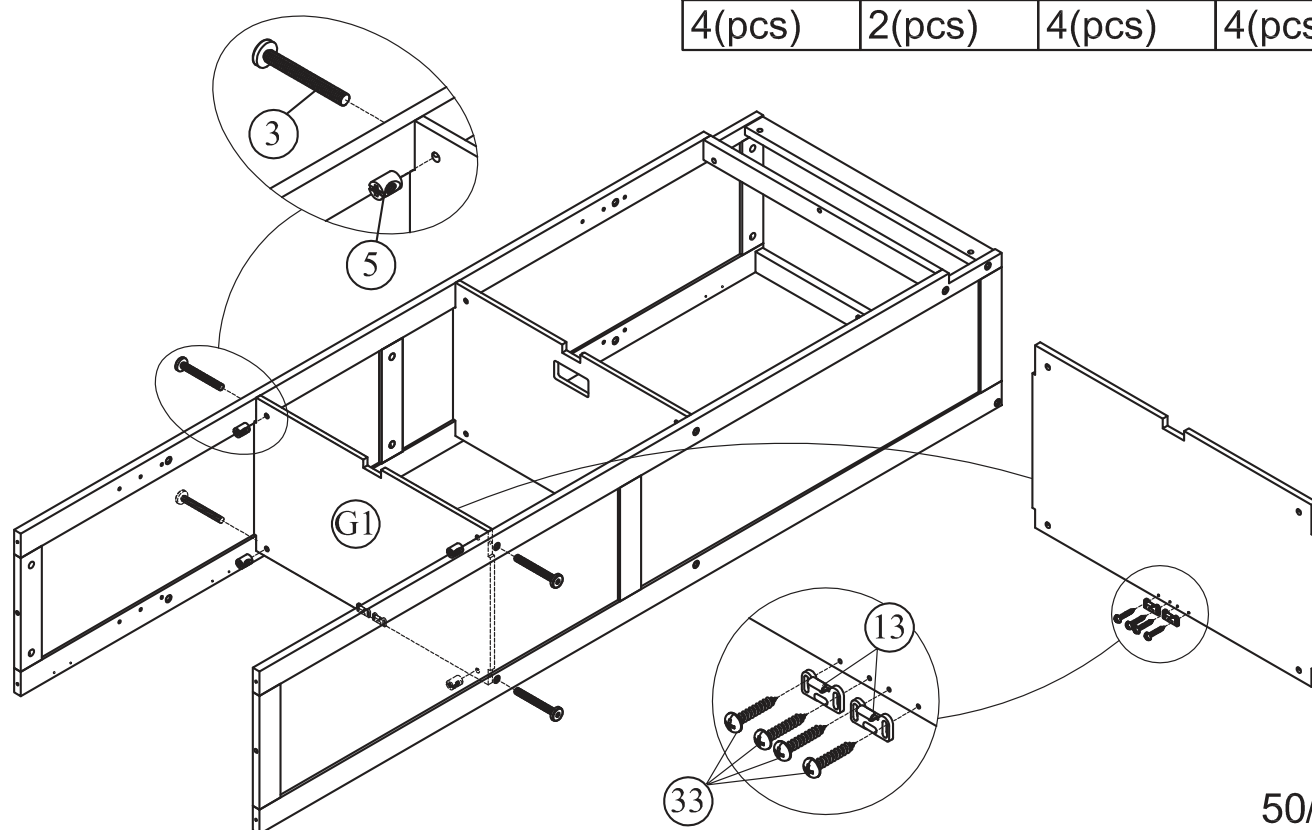

STEP 38:


Étape 38:


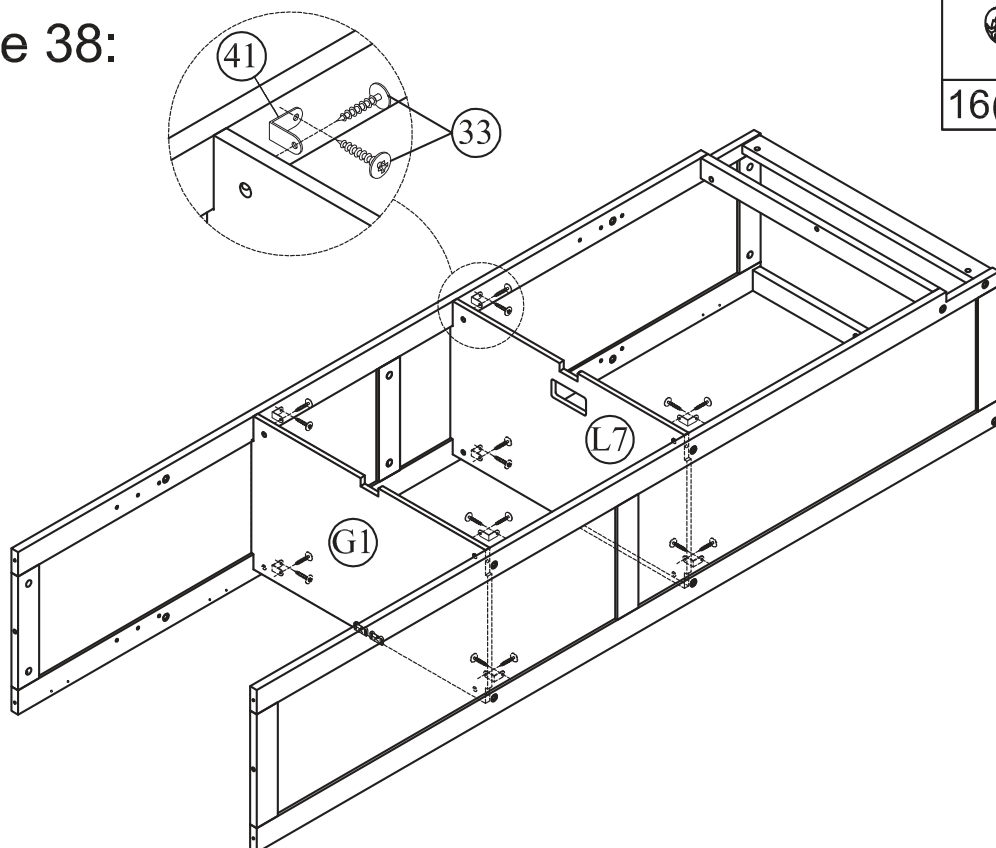


33	41
	
16(pcs)	8(pcs)

STEP 39:


Étape 39:

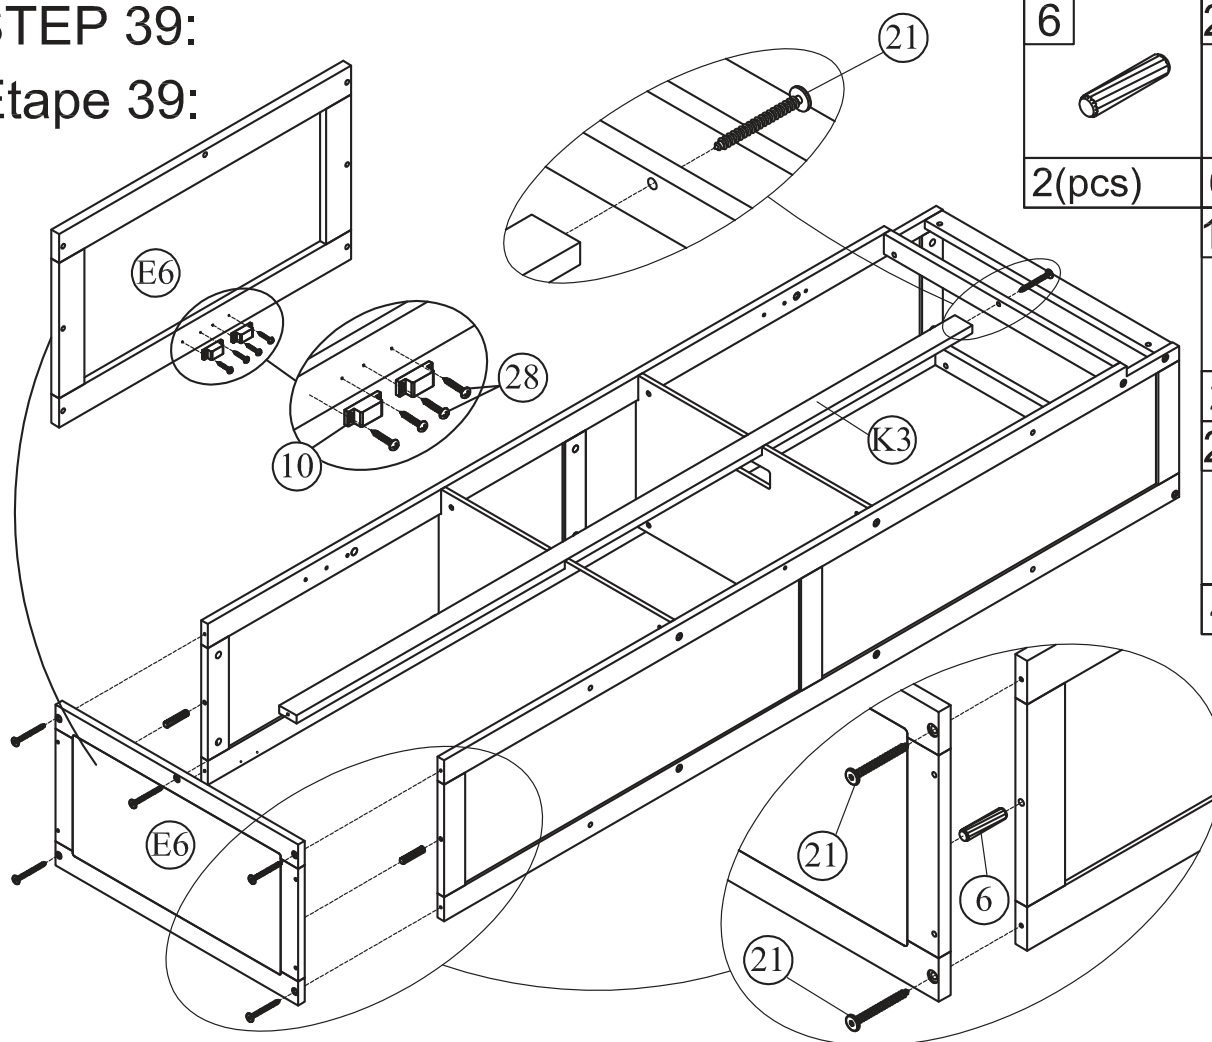

6	21
	
2(pcs)	6(pcs)
	10
	
	2(pcs)
	28
	
	4(pcs)


STEP 40:
Étape 40:

11		26		28		37		33		7	
2(ps)		4(pcs)		8(pcs)		8(pcs)		24(pcs)		8(pcs)	

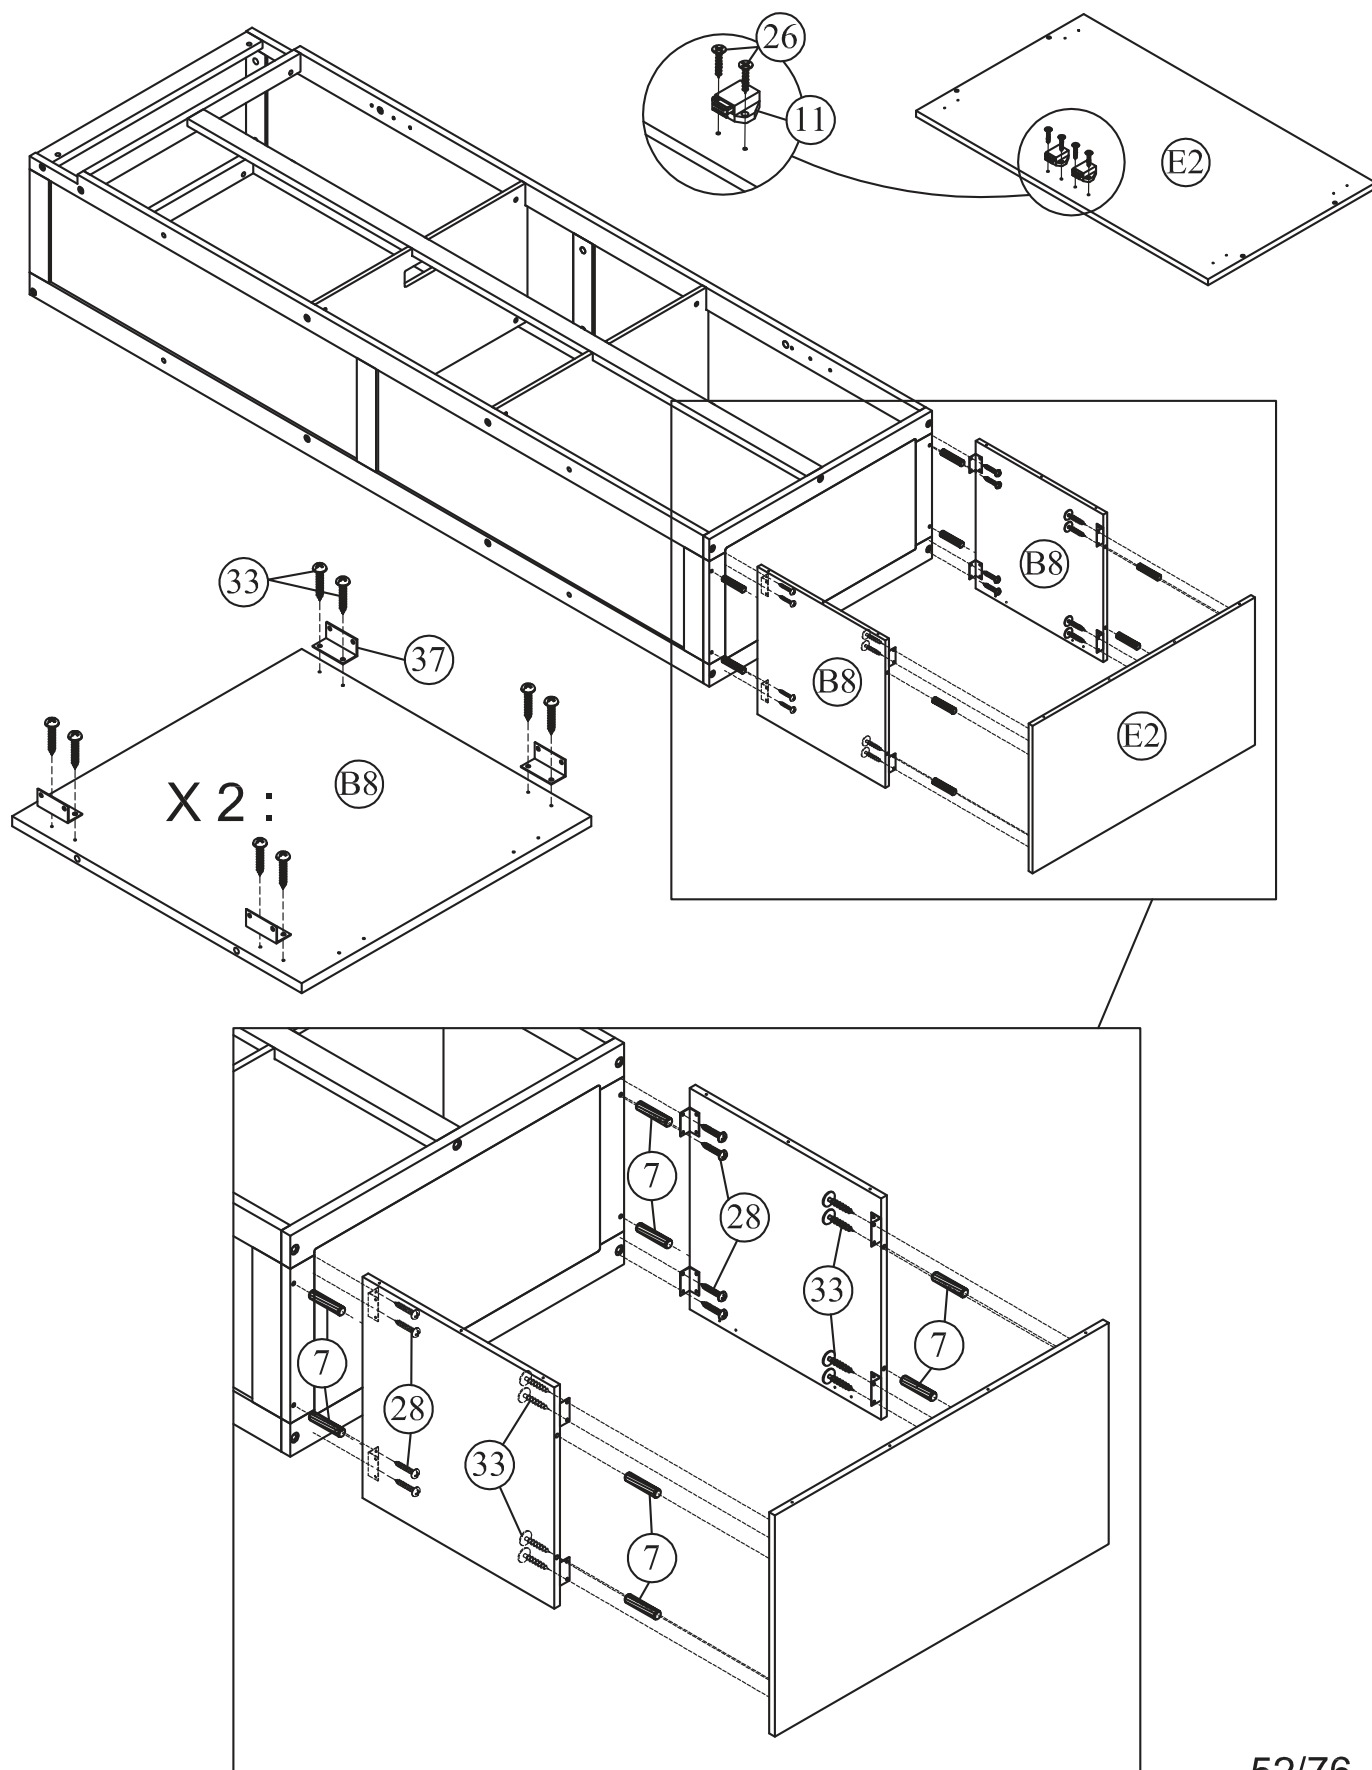

STEP 41:

Étape 41:

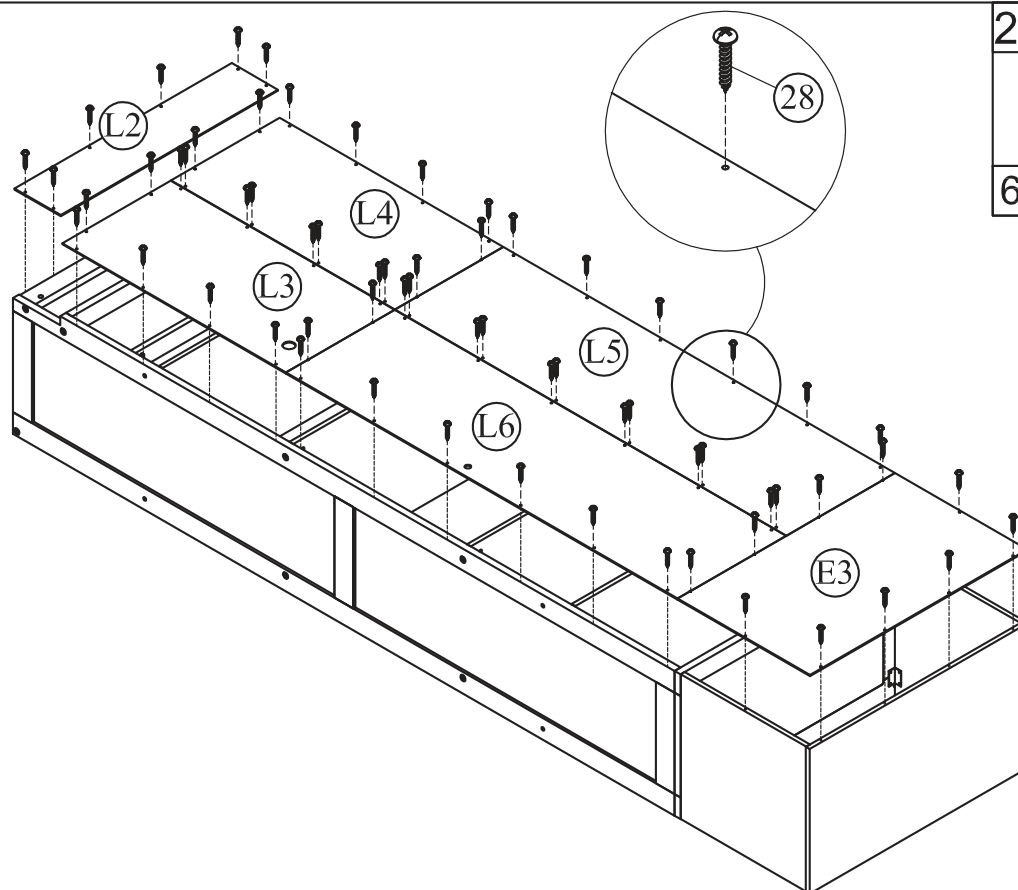


28



64(pcs)

STEP 42:

Étape 42:

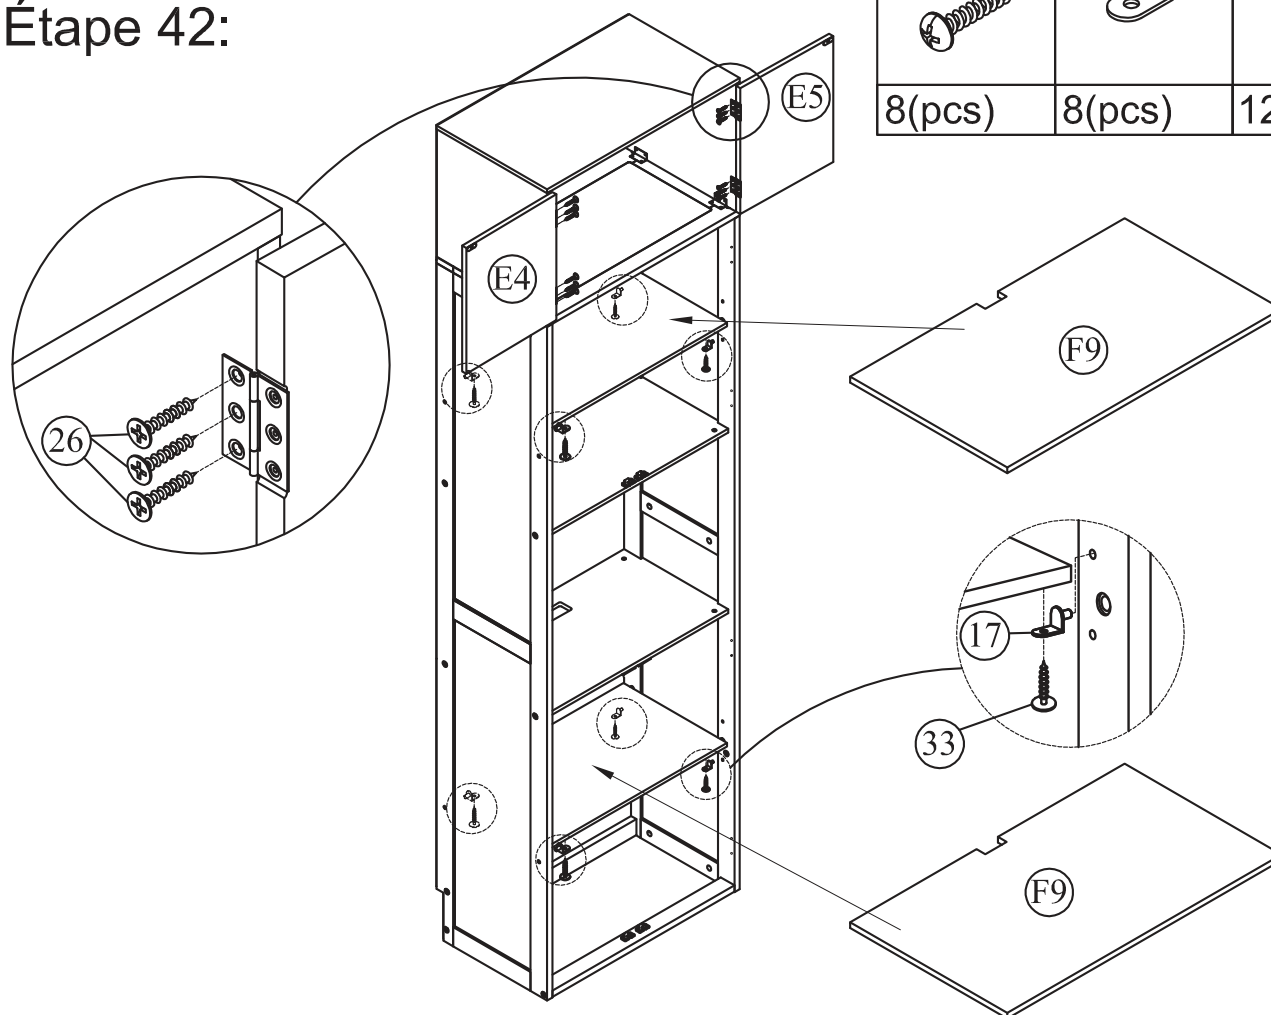

33



8(pcs)

17



8(pcs)

26




12(pcs)

STEP 43:

Étape 43:

28	12	27	32	16
				
8(pc)	4(pcs)	24(pcs)	8(pcs)	4(pcs)

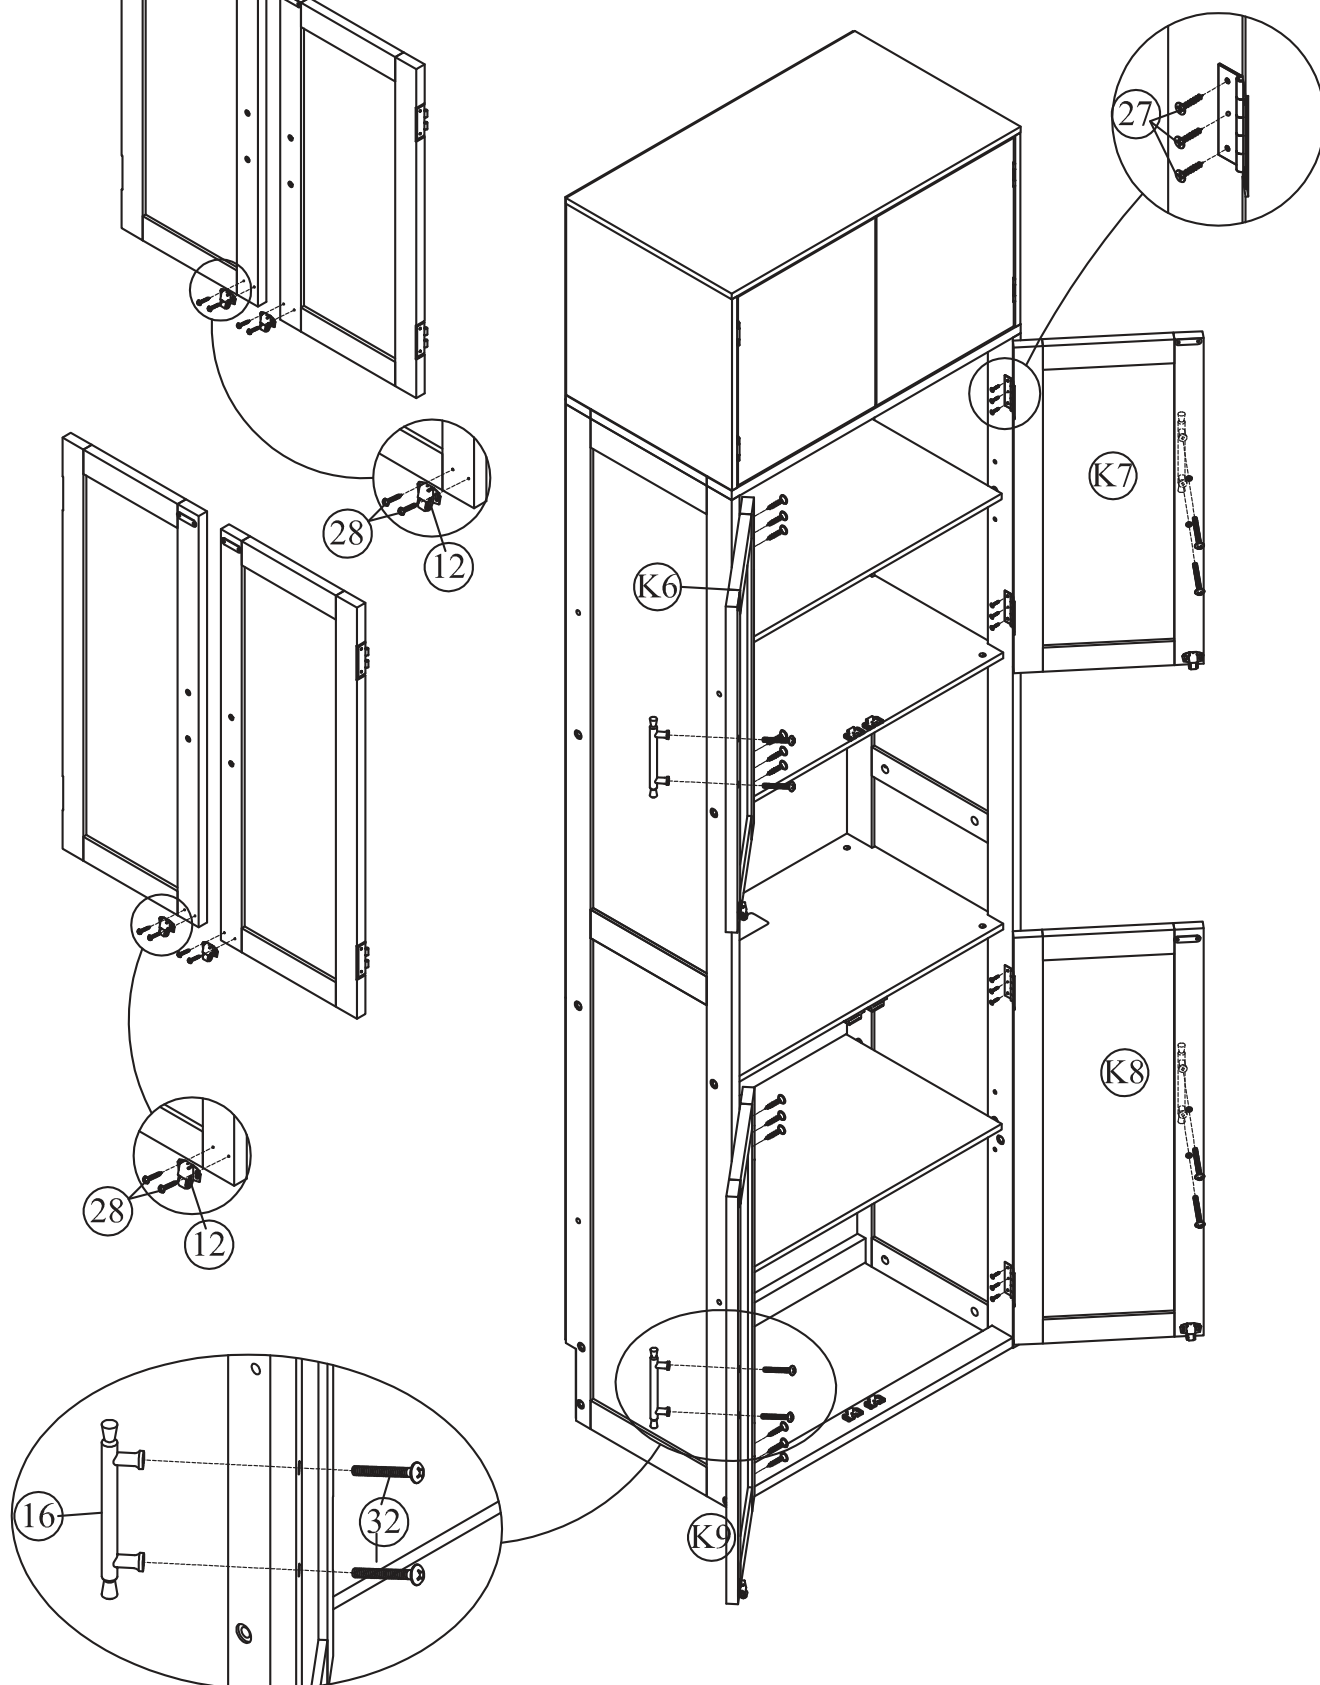


STEP 44:

Étape 44:

8



12(pcs)

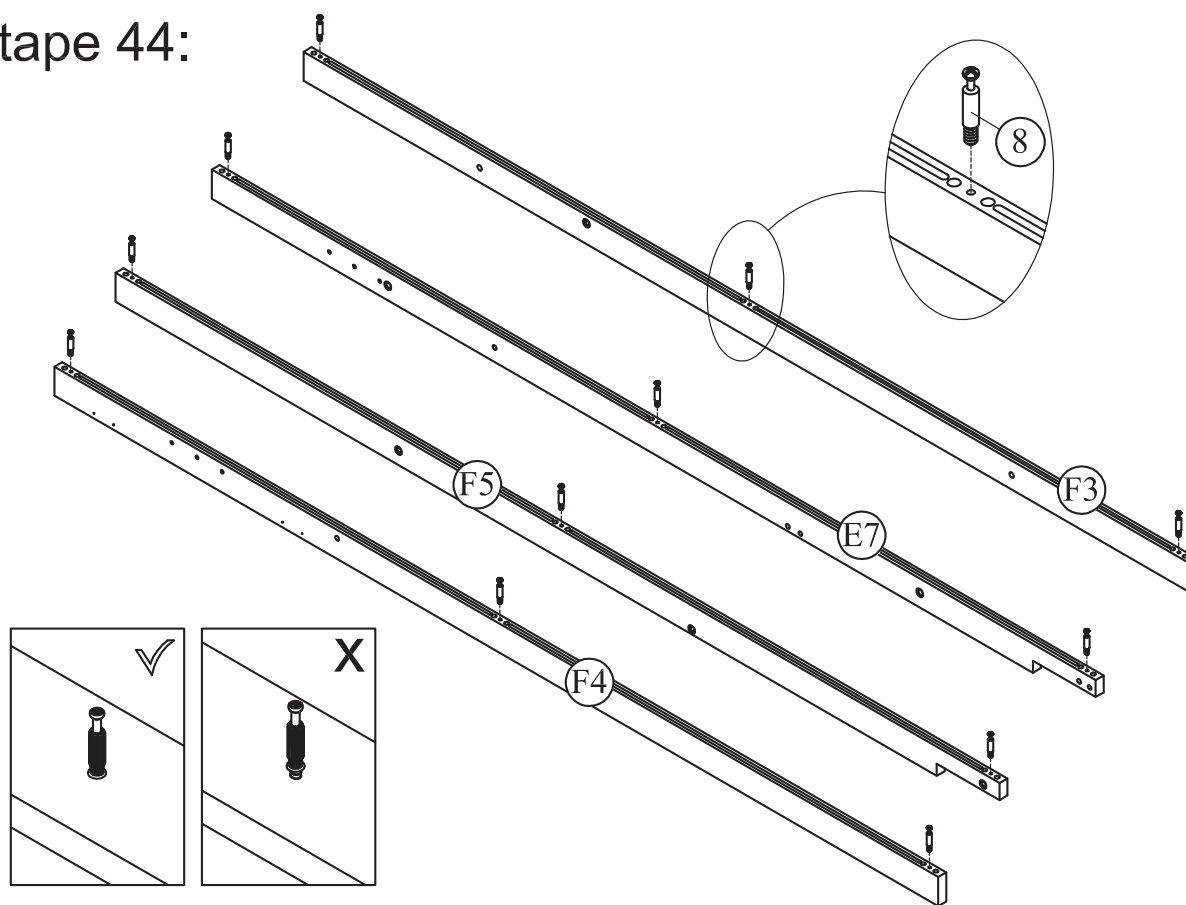

STEP 45:

Étape 45:

6




12(pc)

9




6(pcs)

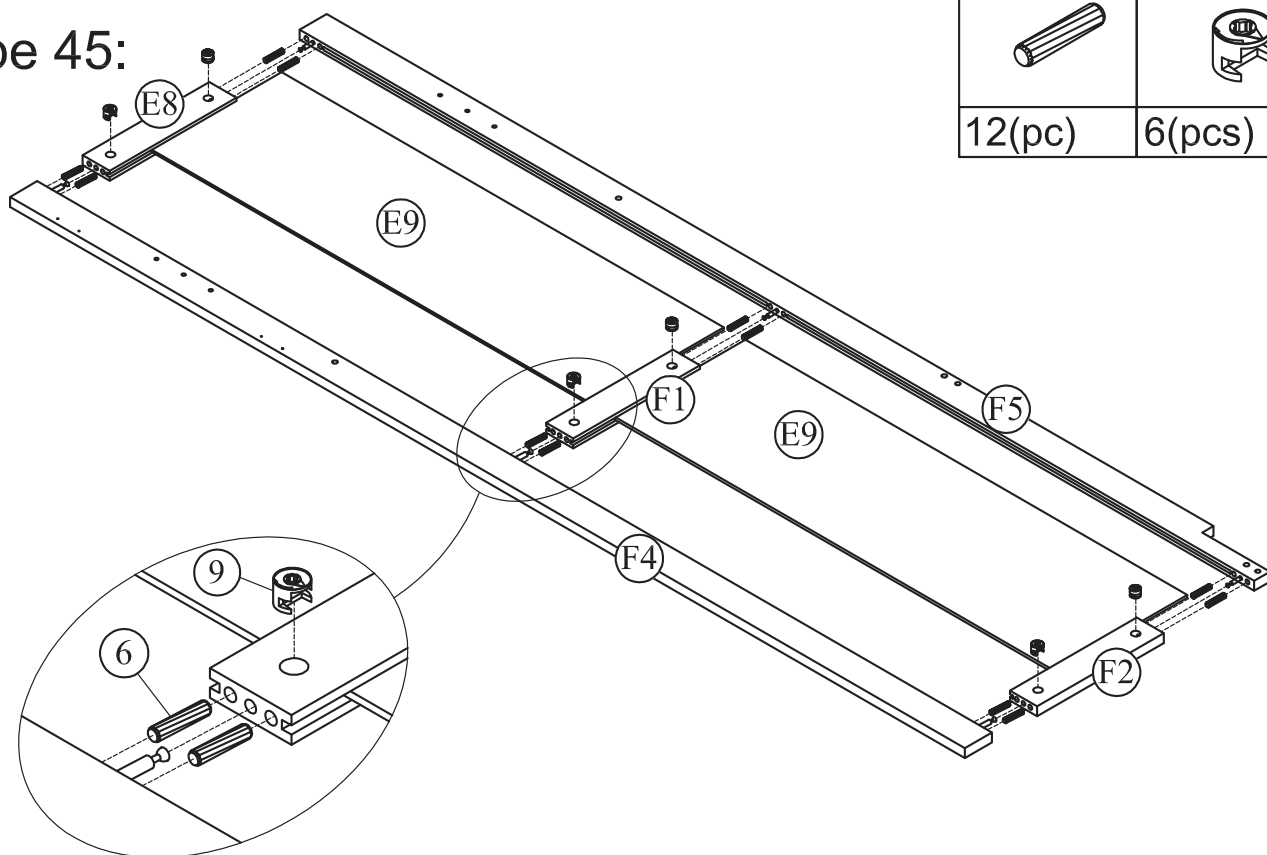


STEP 46:

Étape 46:

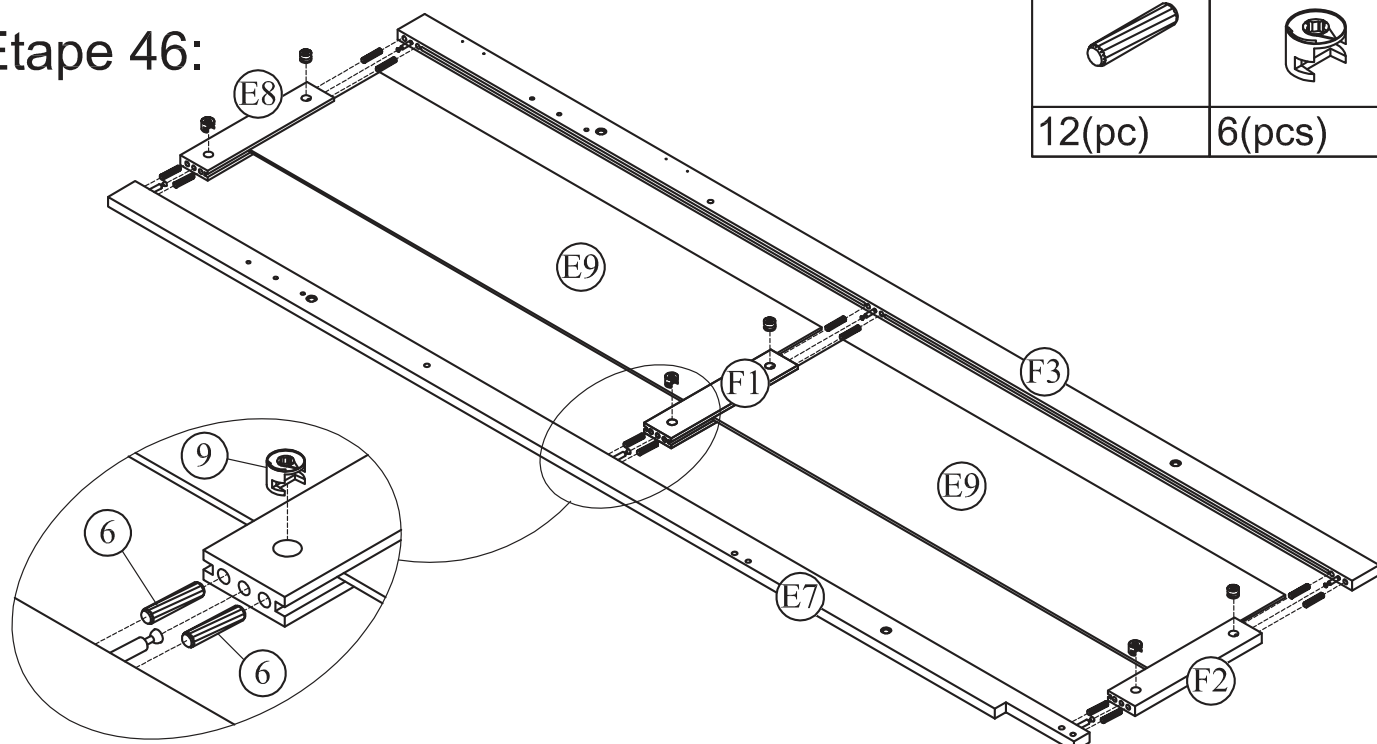


STEP 47:

Étape 47:

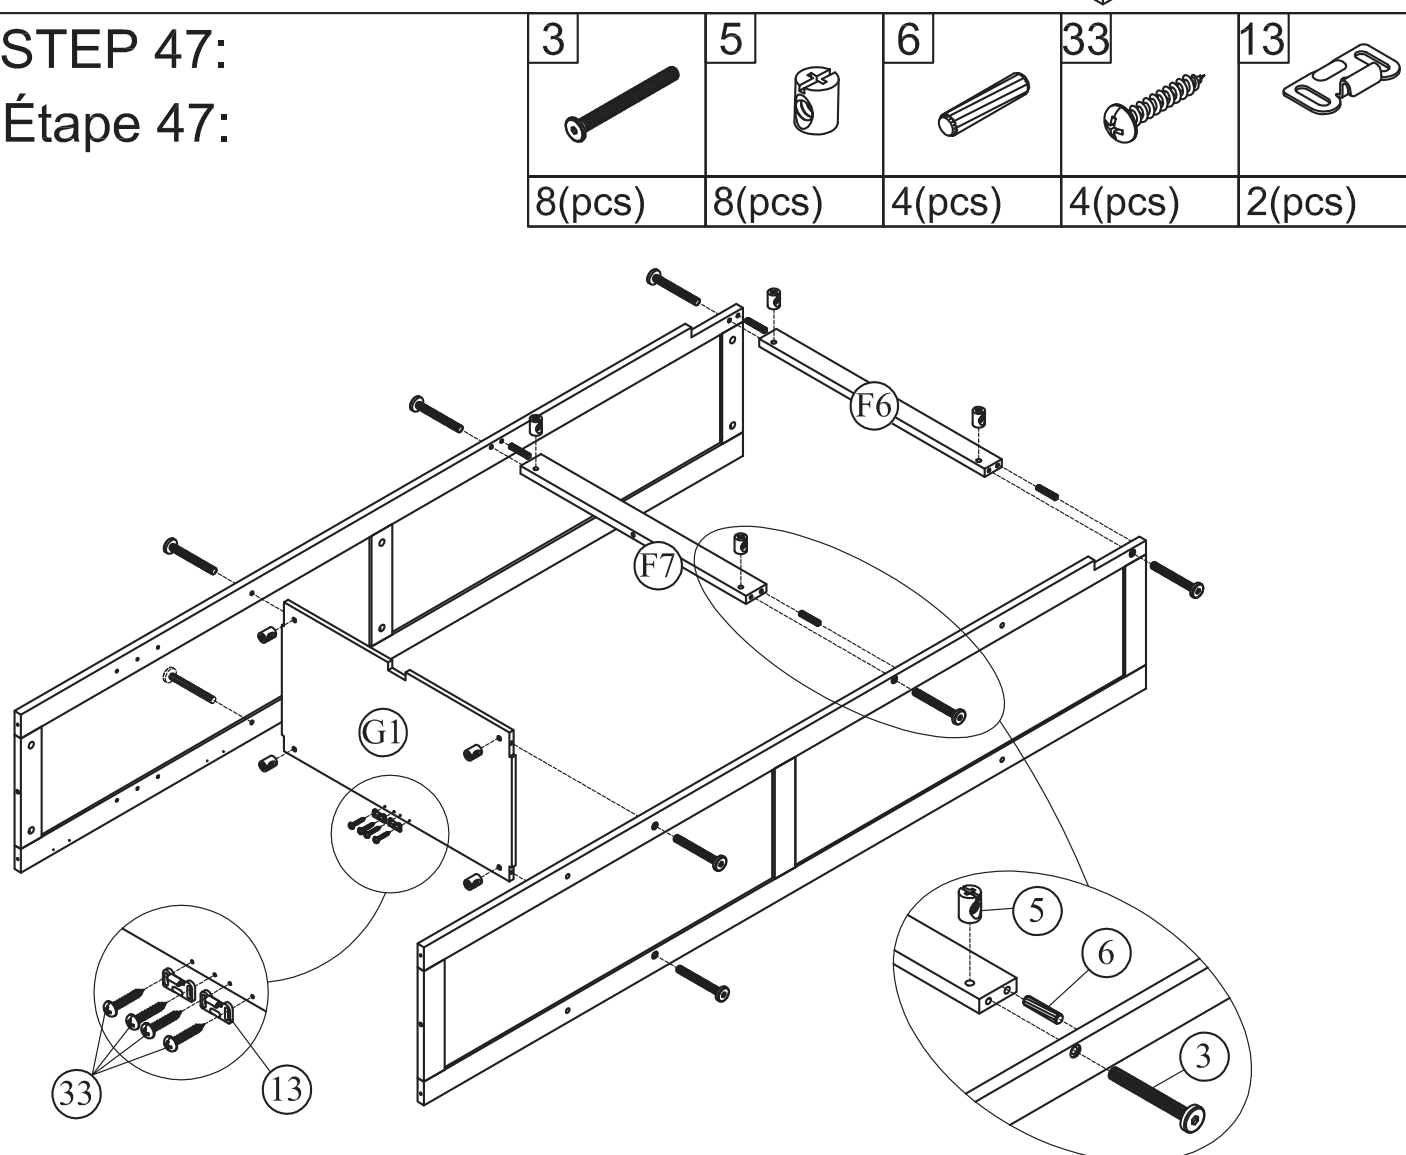


STEP 48:

Étape 48:

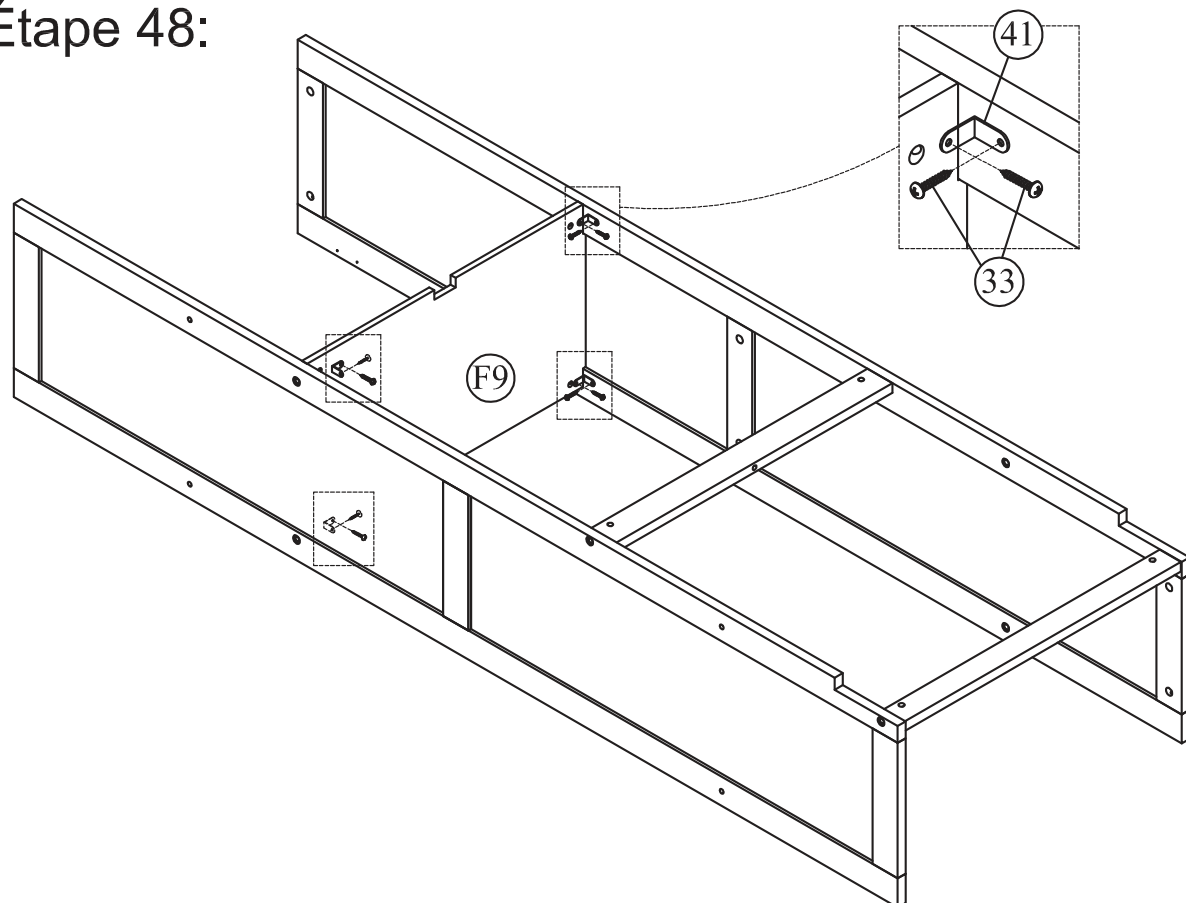

41



4(pcs)


33




8(pcs)

STEP 49:

Étape 49:

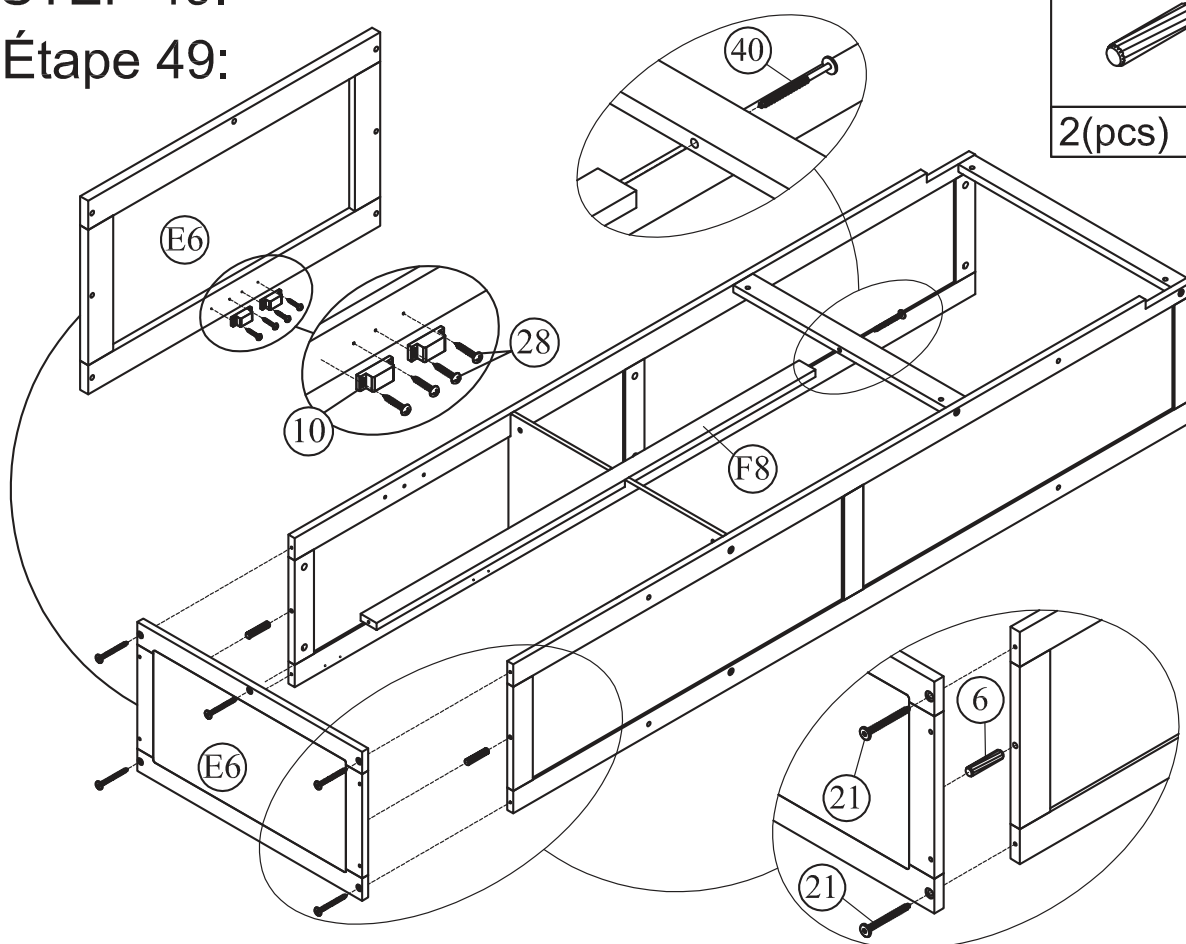


6




2(pcs)

21




5(pcs)

40



1(pc)

10



2(pcs)


28



4(pcs)

STEP 50 : Étape 50 :


11	28	37	33	7
				
2(pcs)	8(pcs)	8(pcs)	24(pcs)	8(pcs)

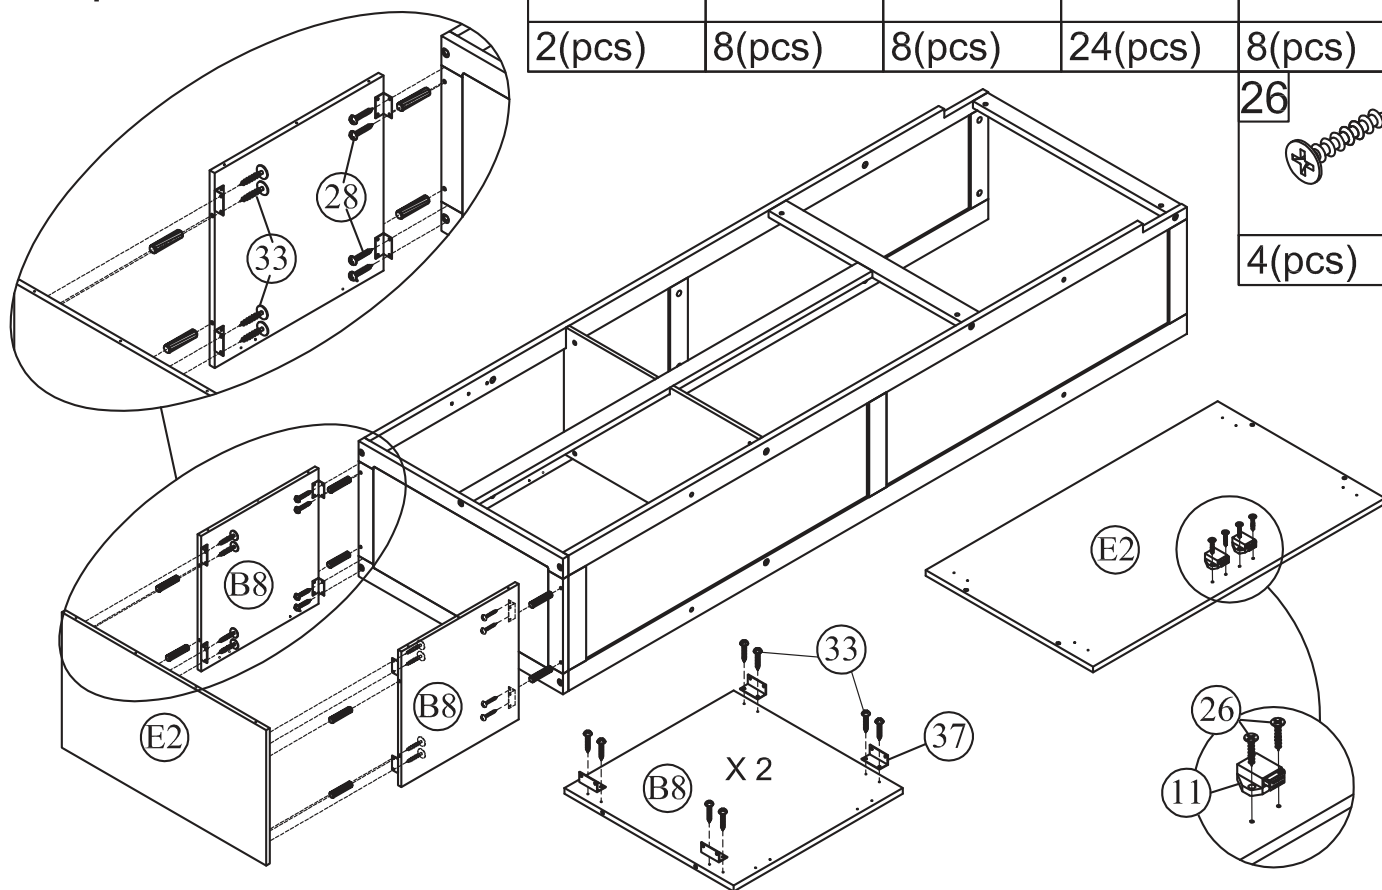

STEP 51: Étape 51:

28





38(pcs)

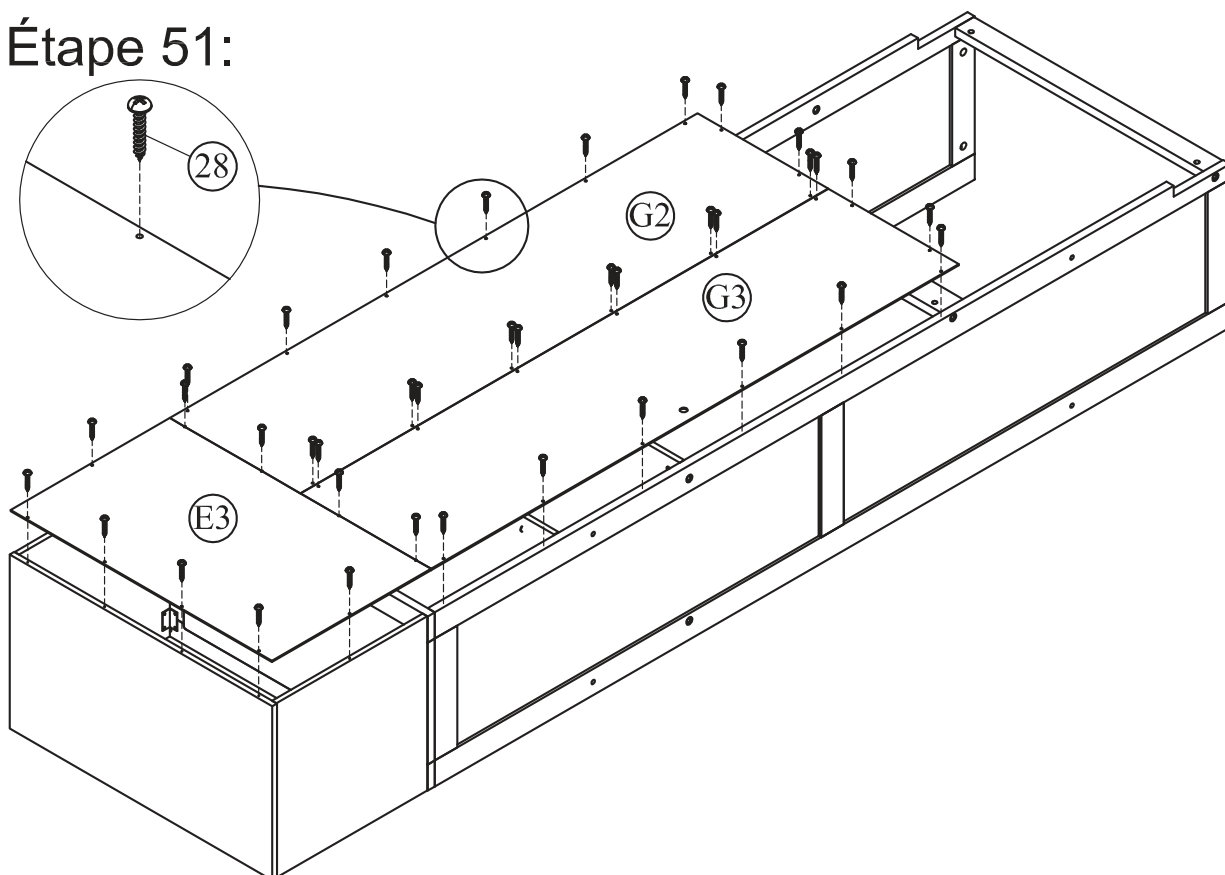

STEP 52:

Étape 52 :





33	17	26
		
4(pcs)	4(pcs)	12(pcs)

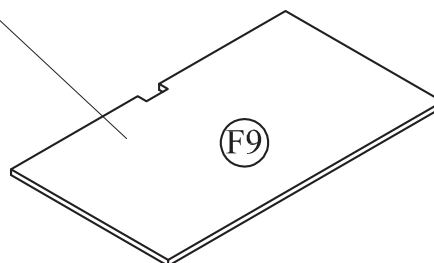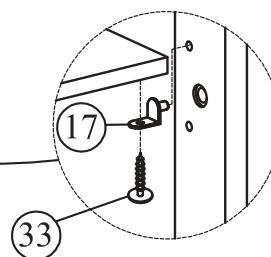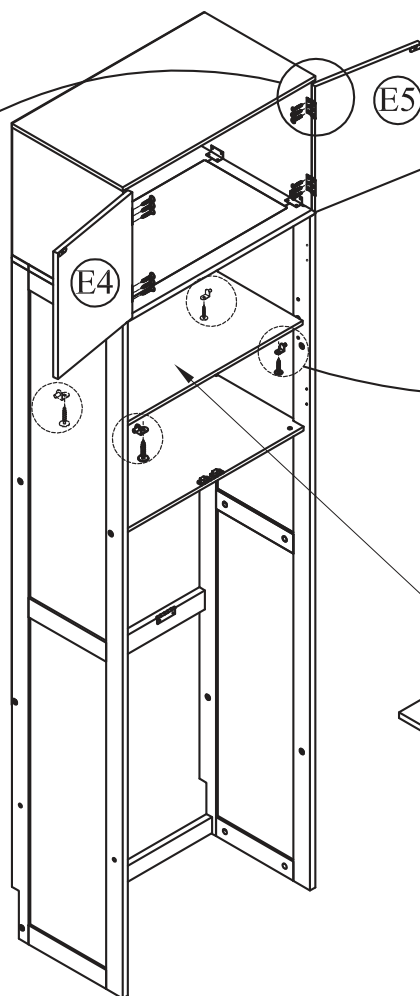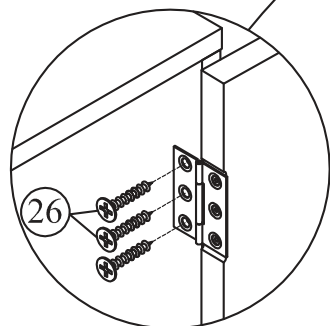

STEP 53:



Étape 53:

22	28	12
		
8(pcs)	4(pcs)	2(pcs)

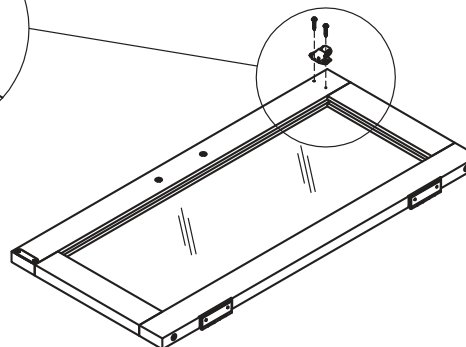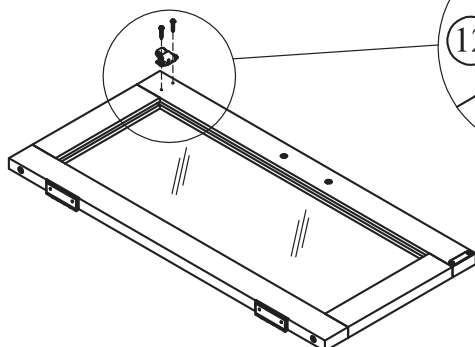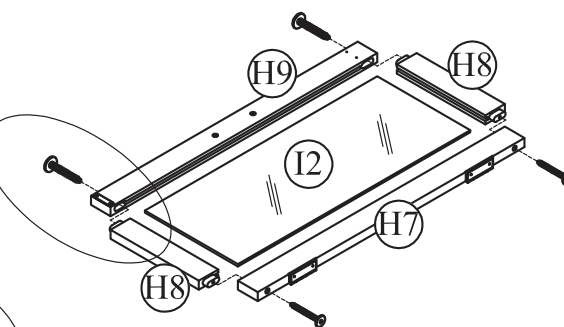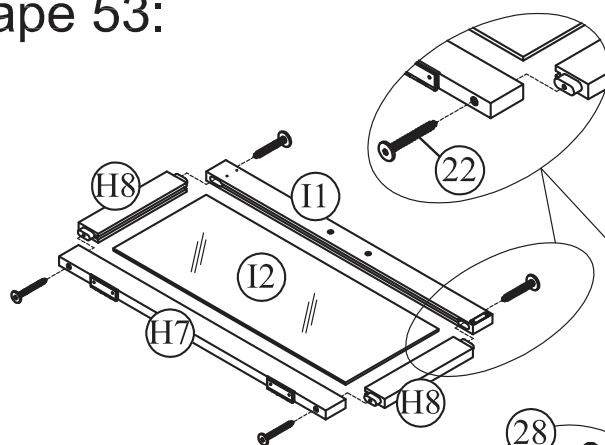


STEP 54:
Étape 54:


27	32	16
		
24(pcs)	4(pcs)	2(pcs)

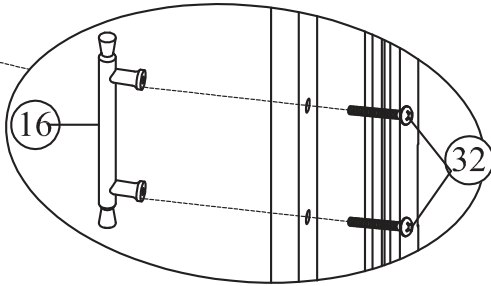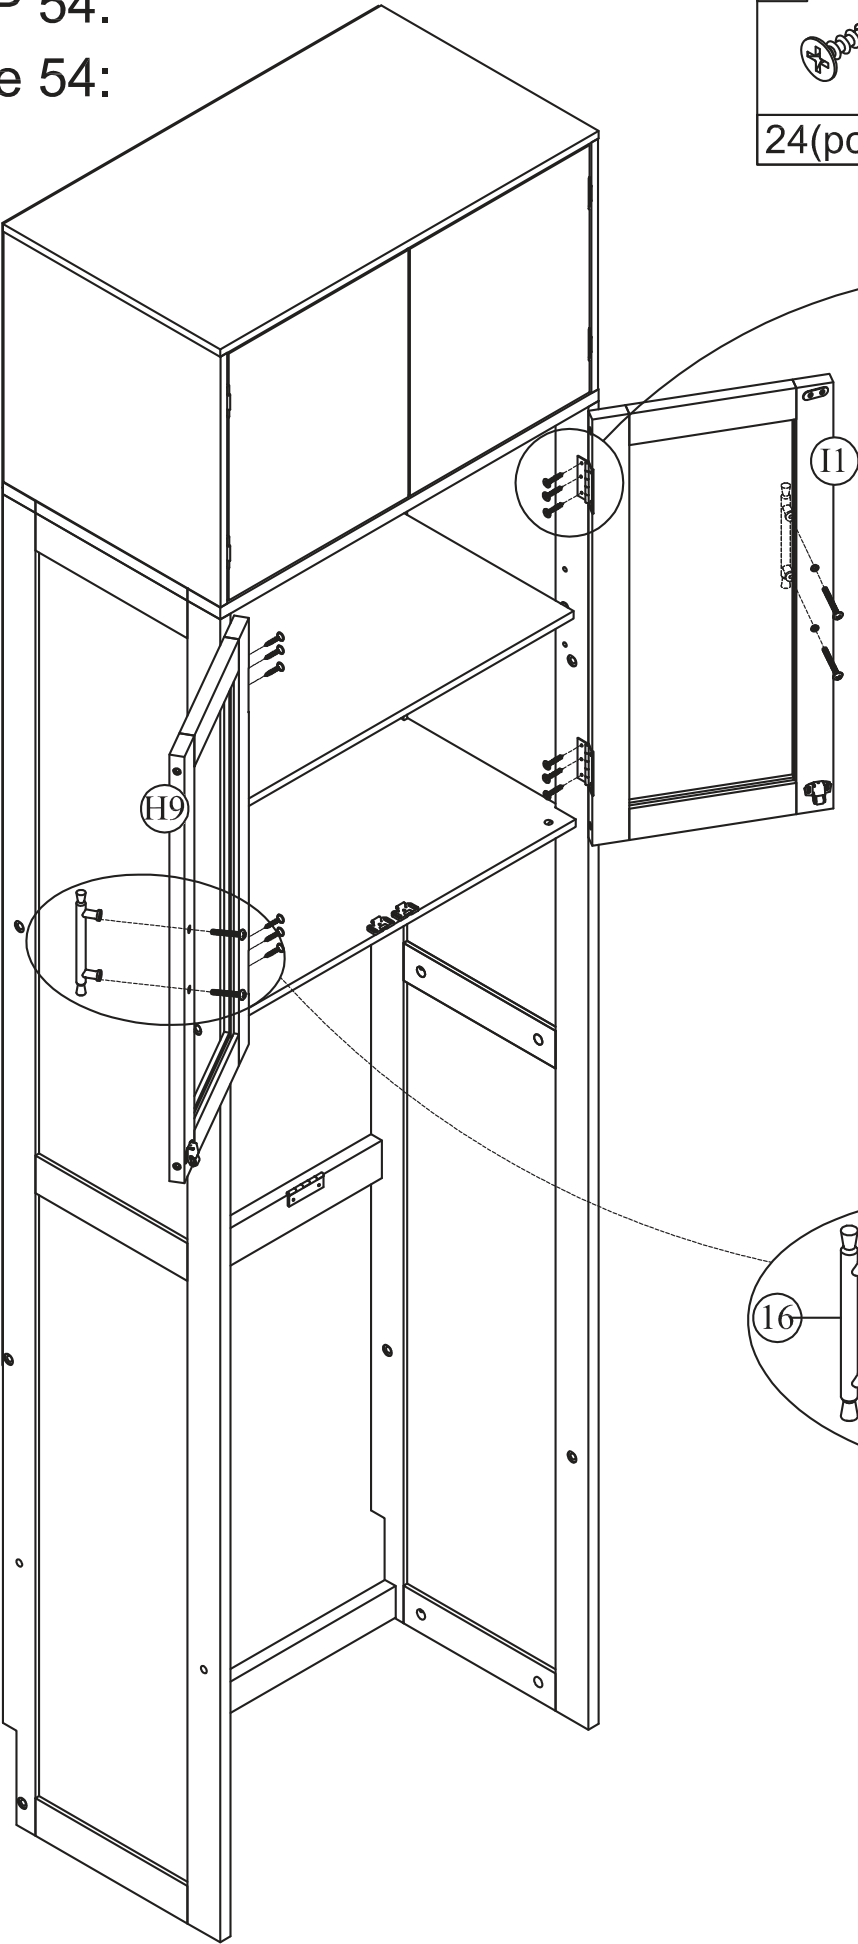

STEP 55:
Étape 55 :

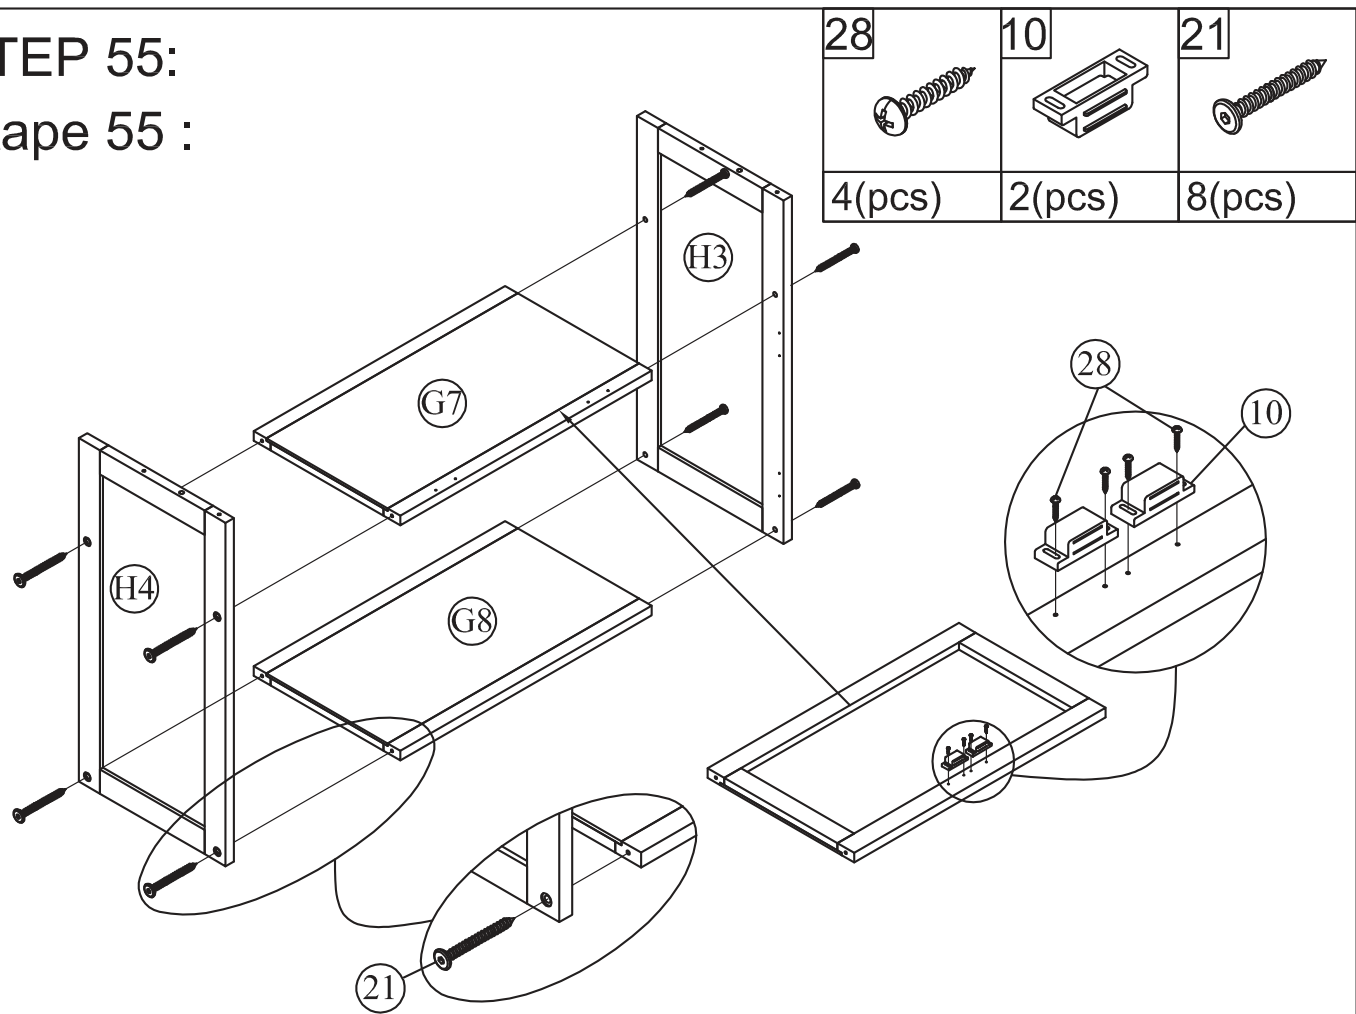

STEP 56:
Étape 56:

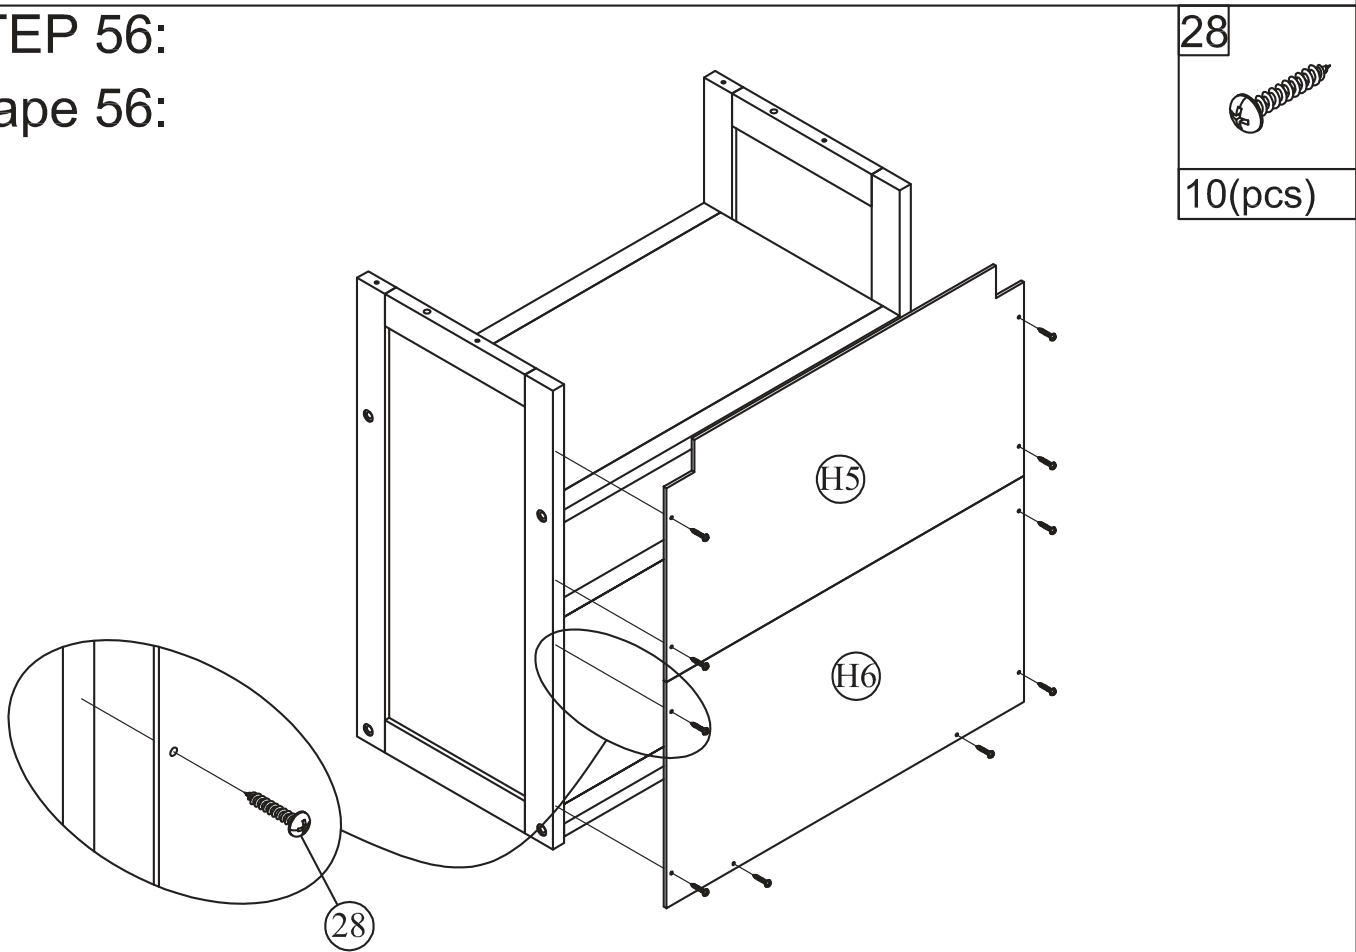

STEP 57:

Étape 57:

15




4(pcs)

27





8(pcs)

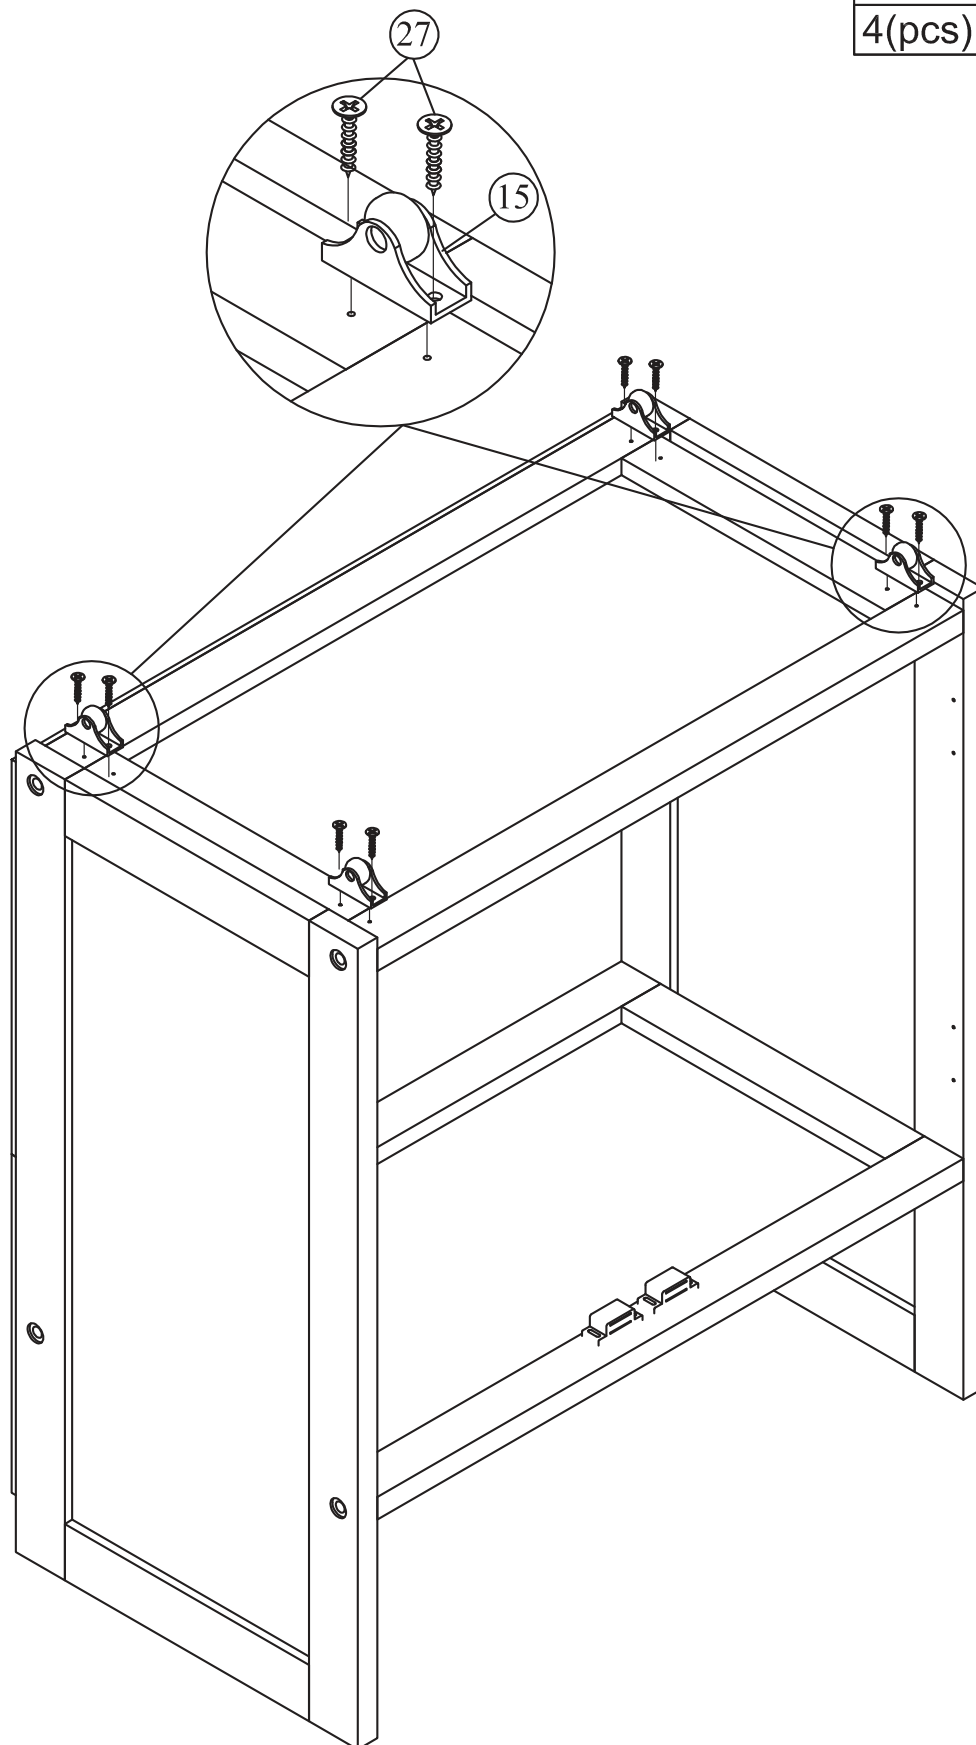

STEP 58:


Étape 58:


28	10	32	16
			
4(pcs)	2(pcs)	2(pcs)	1(pc)

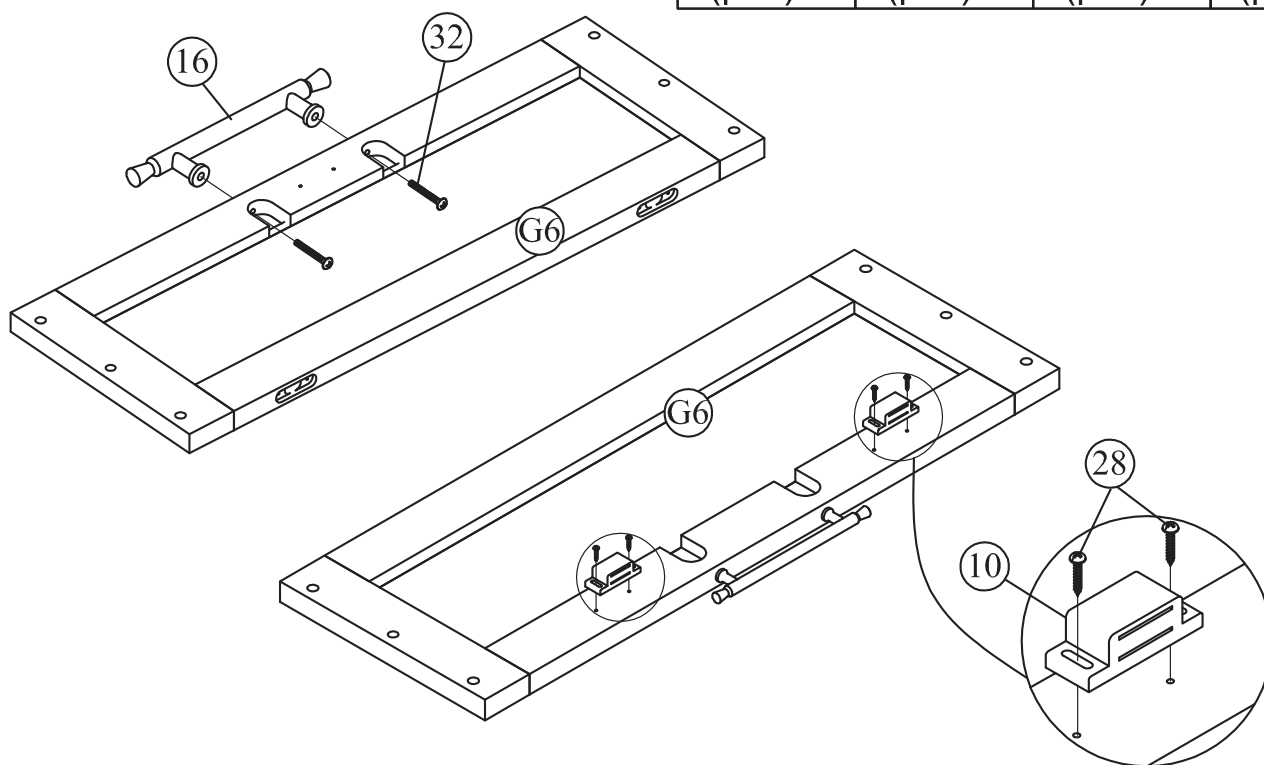

STEP 59:


Étape 59:

27	14
	
8(pcs)	2(pcs)

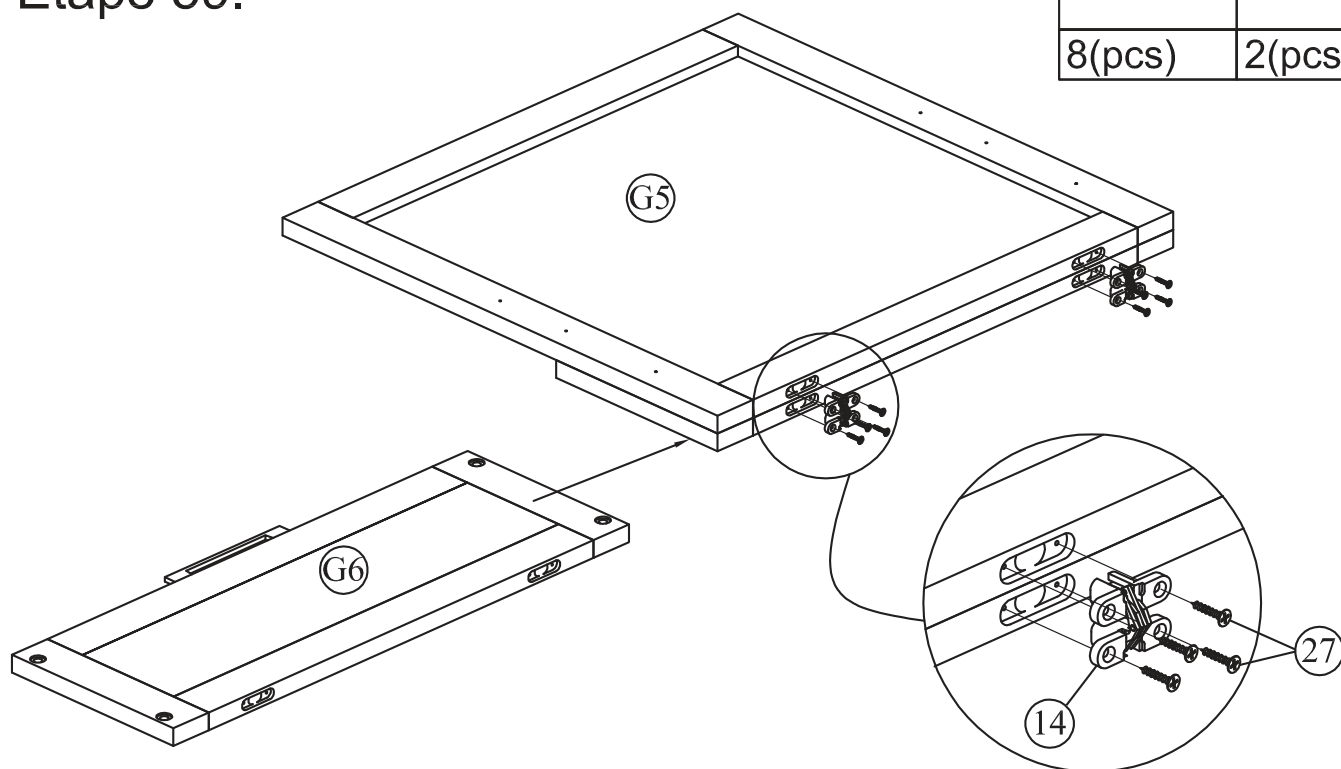


STEP 60:

Étape 60:

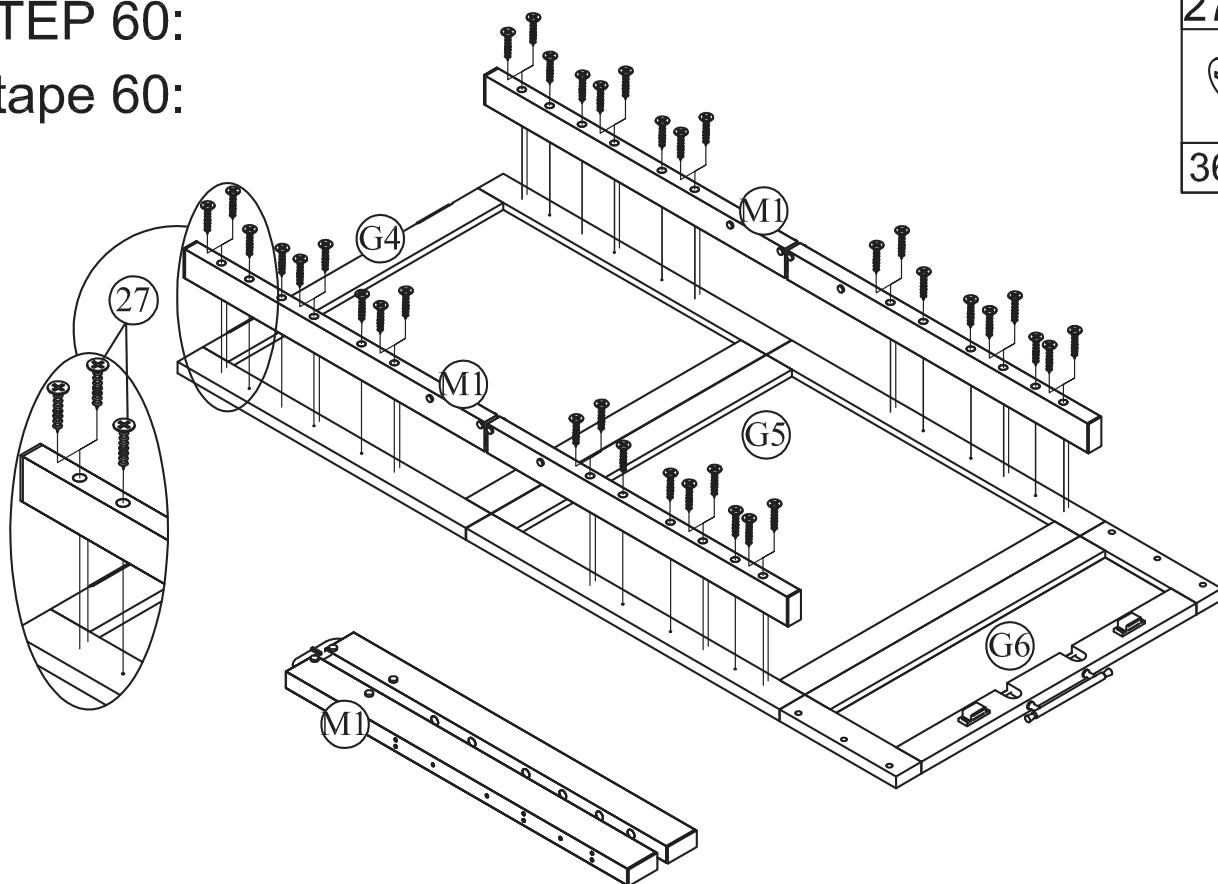


27




36(pcs)

STEP 61:

Étape 61:

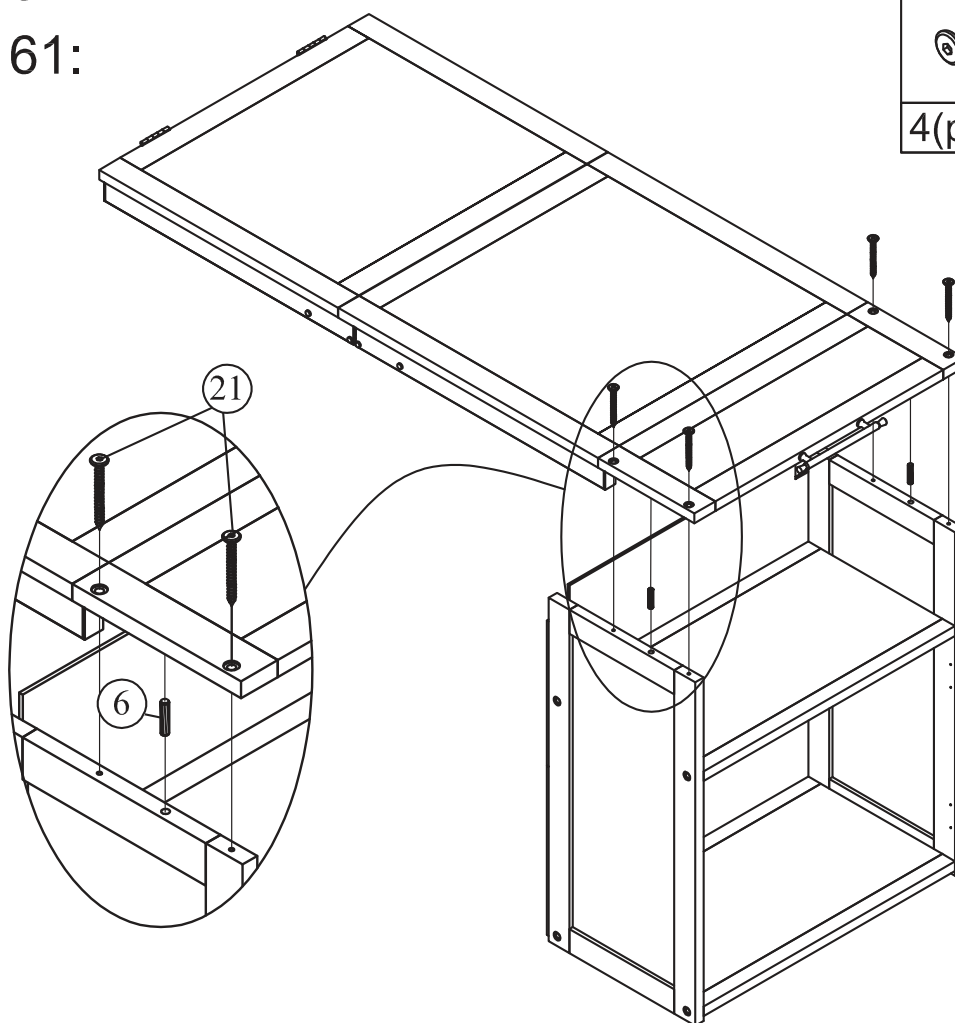

21



4(pcs)



6



2(pcs)

STEP 62:


Étape 62:

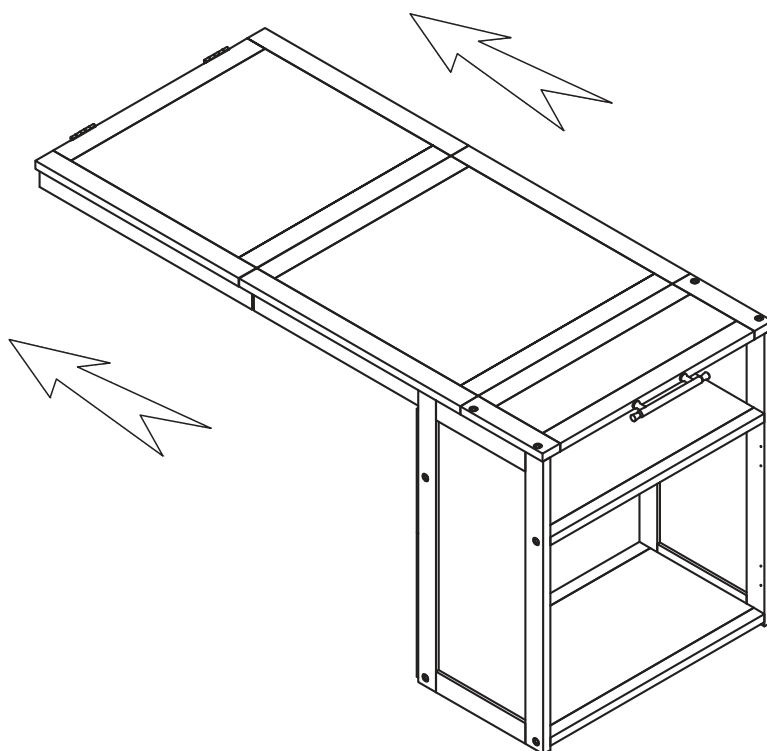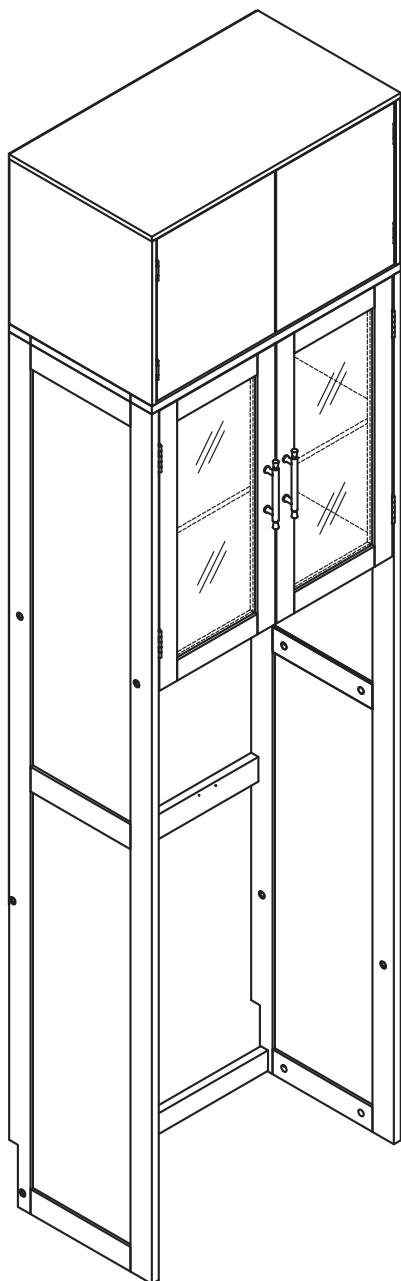



STEP 63:

Étape 63:

27





6(pcs)

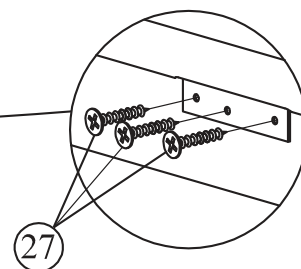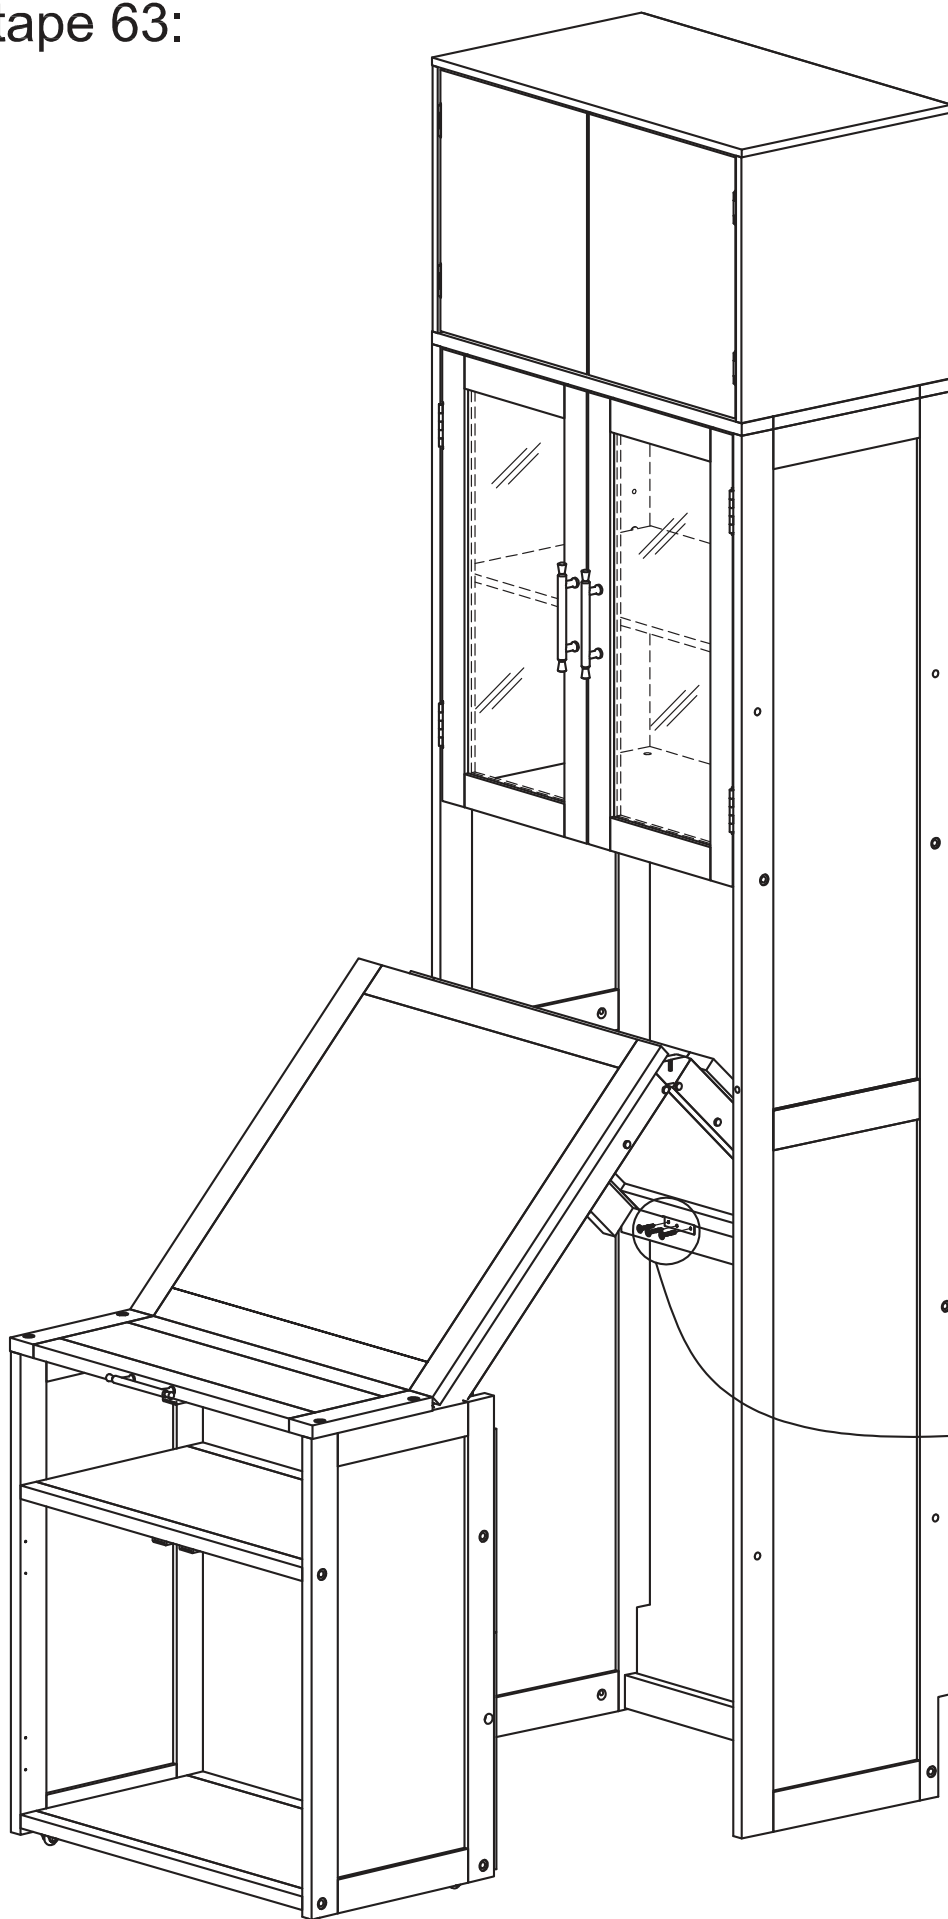

STEP 64:


Étape 64:

27	32	16
		
6(pcs)	2(pcs)	1(pc)


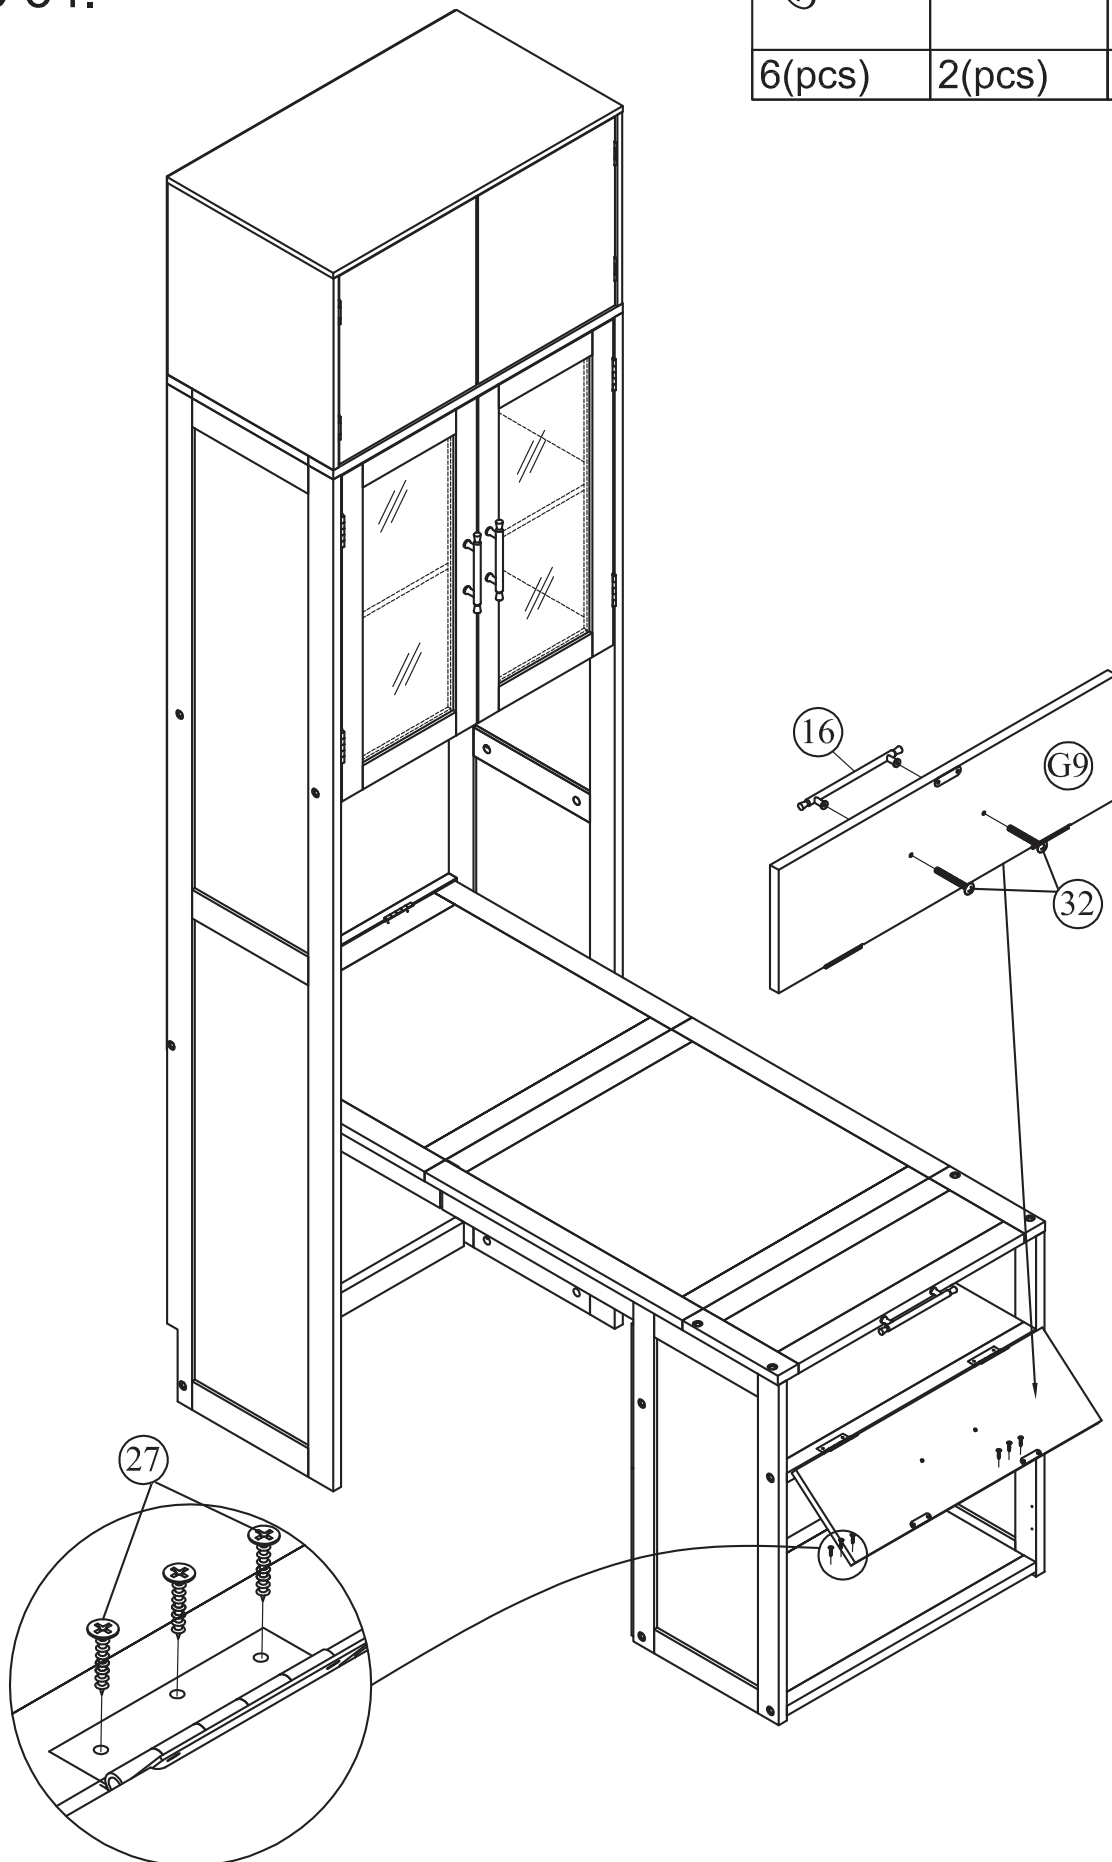


STEP 65:

Étape 65:



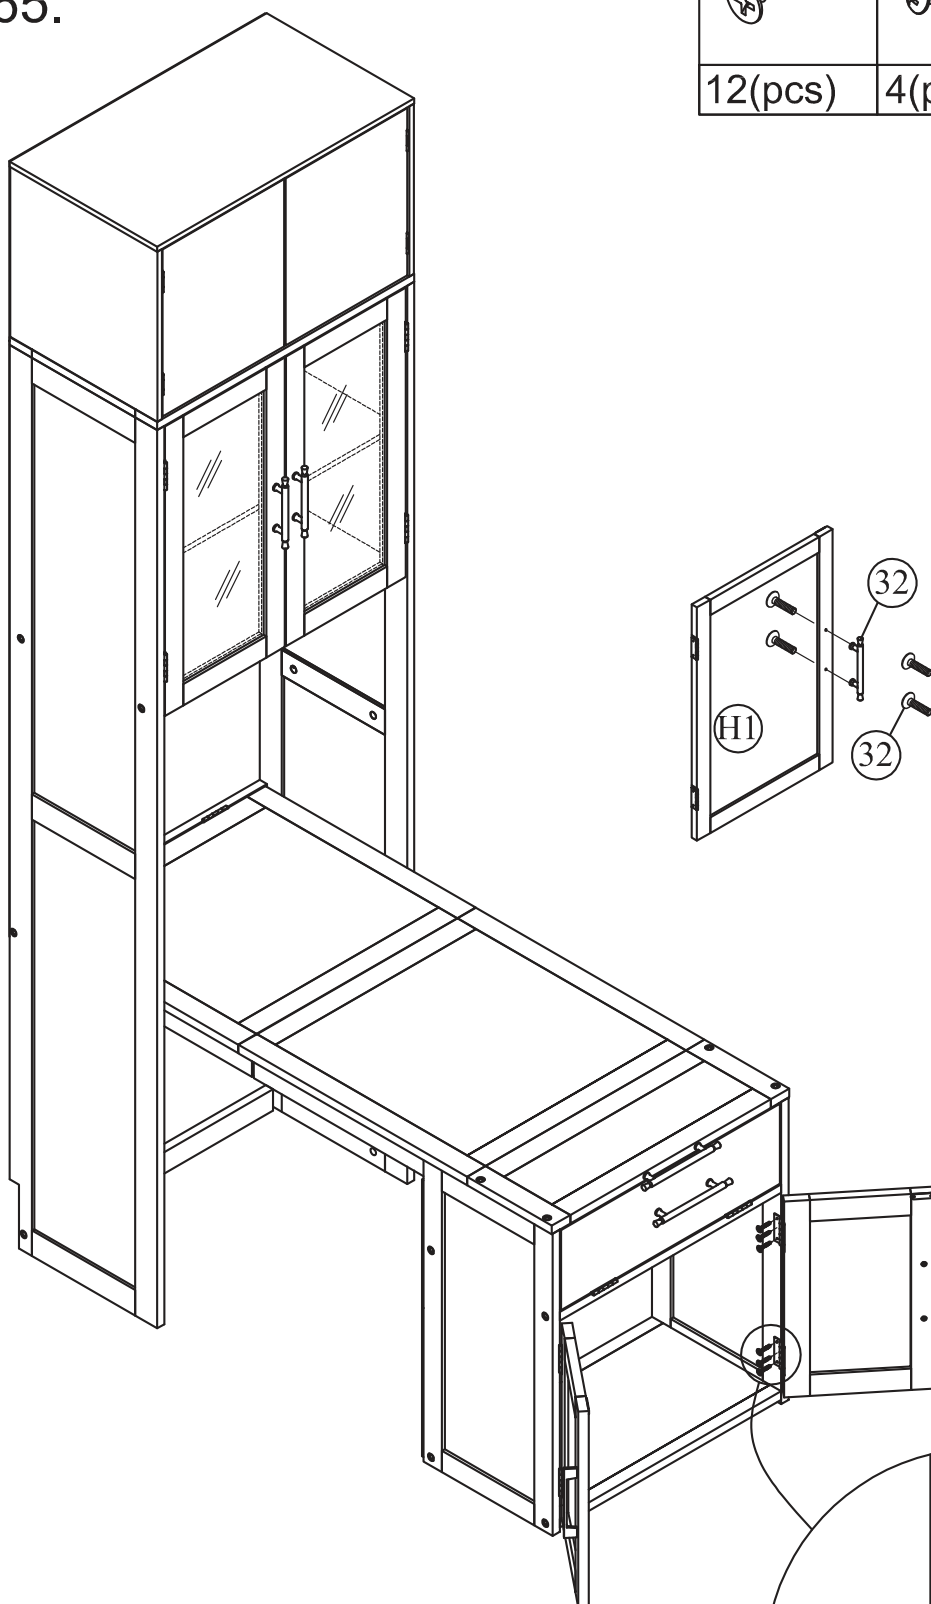


27	32	16
		
12(pcs)	4(pcs)	2(pcs)

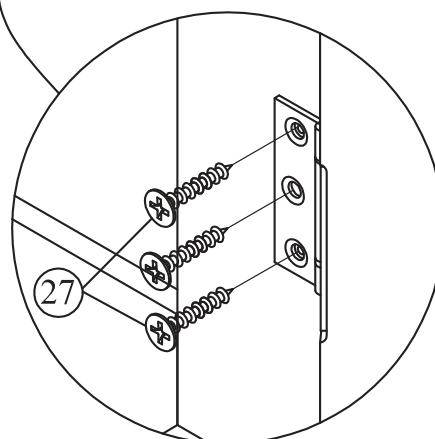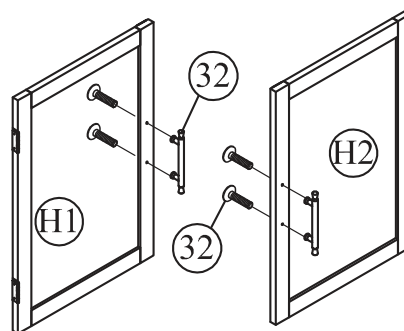



STEP 66:

Étape 66:

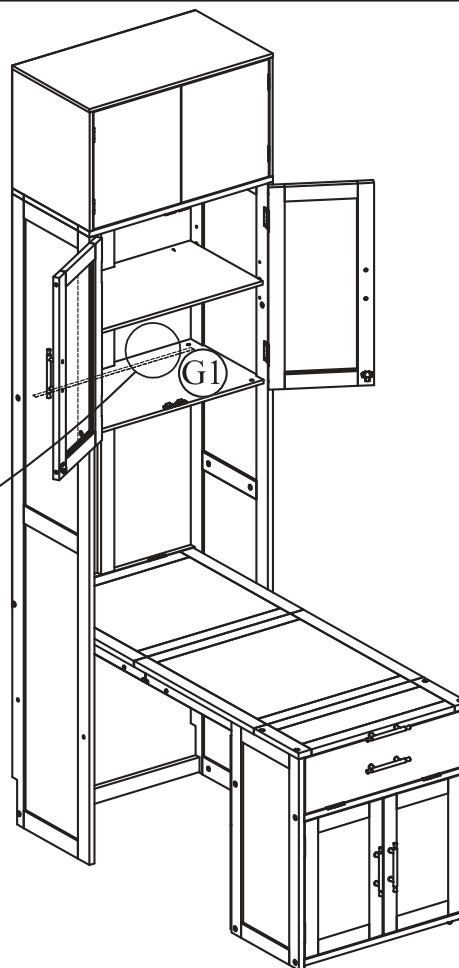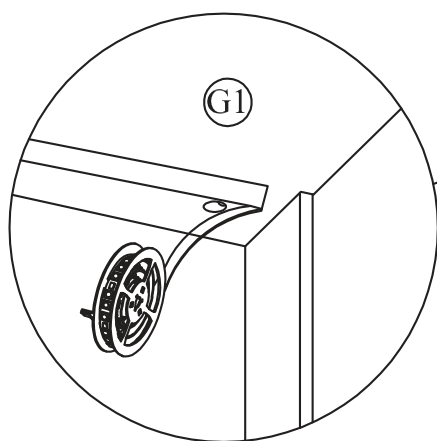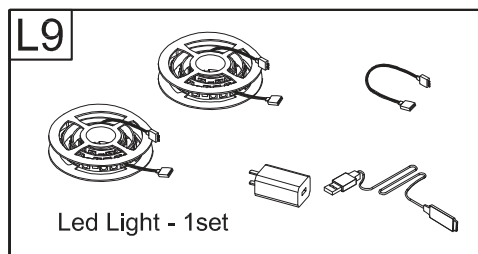

STEP 67:




Étape 67:

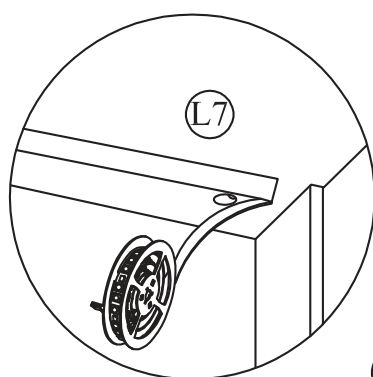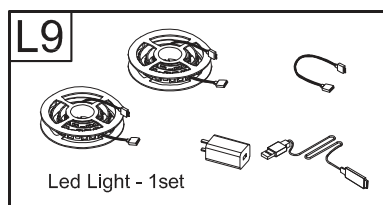


33




2(pcs)

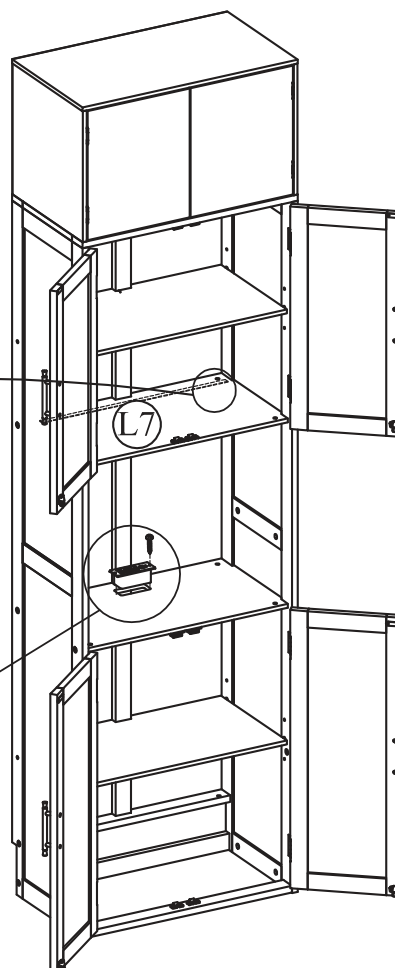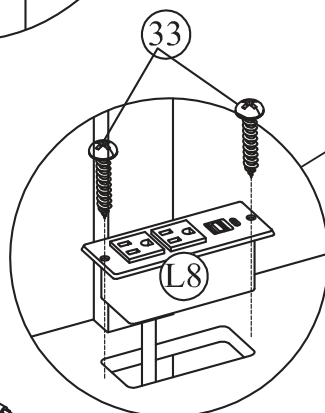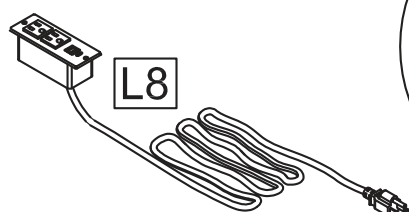


OPTION 2

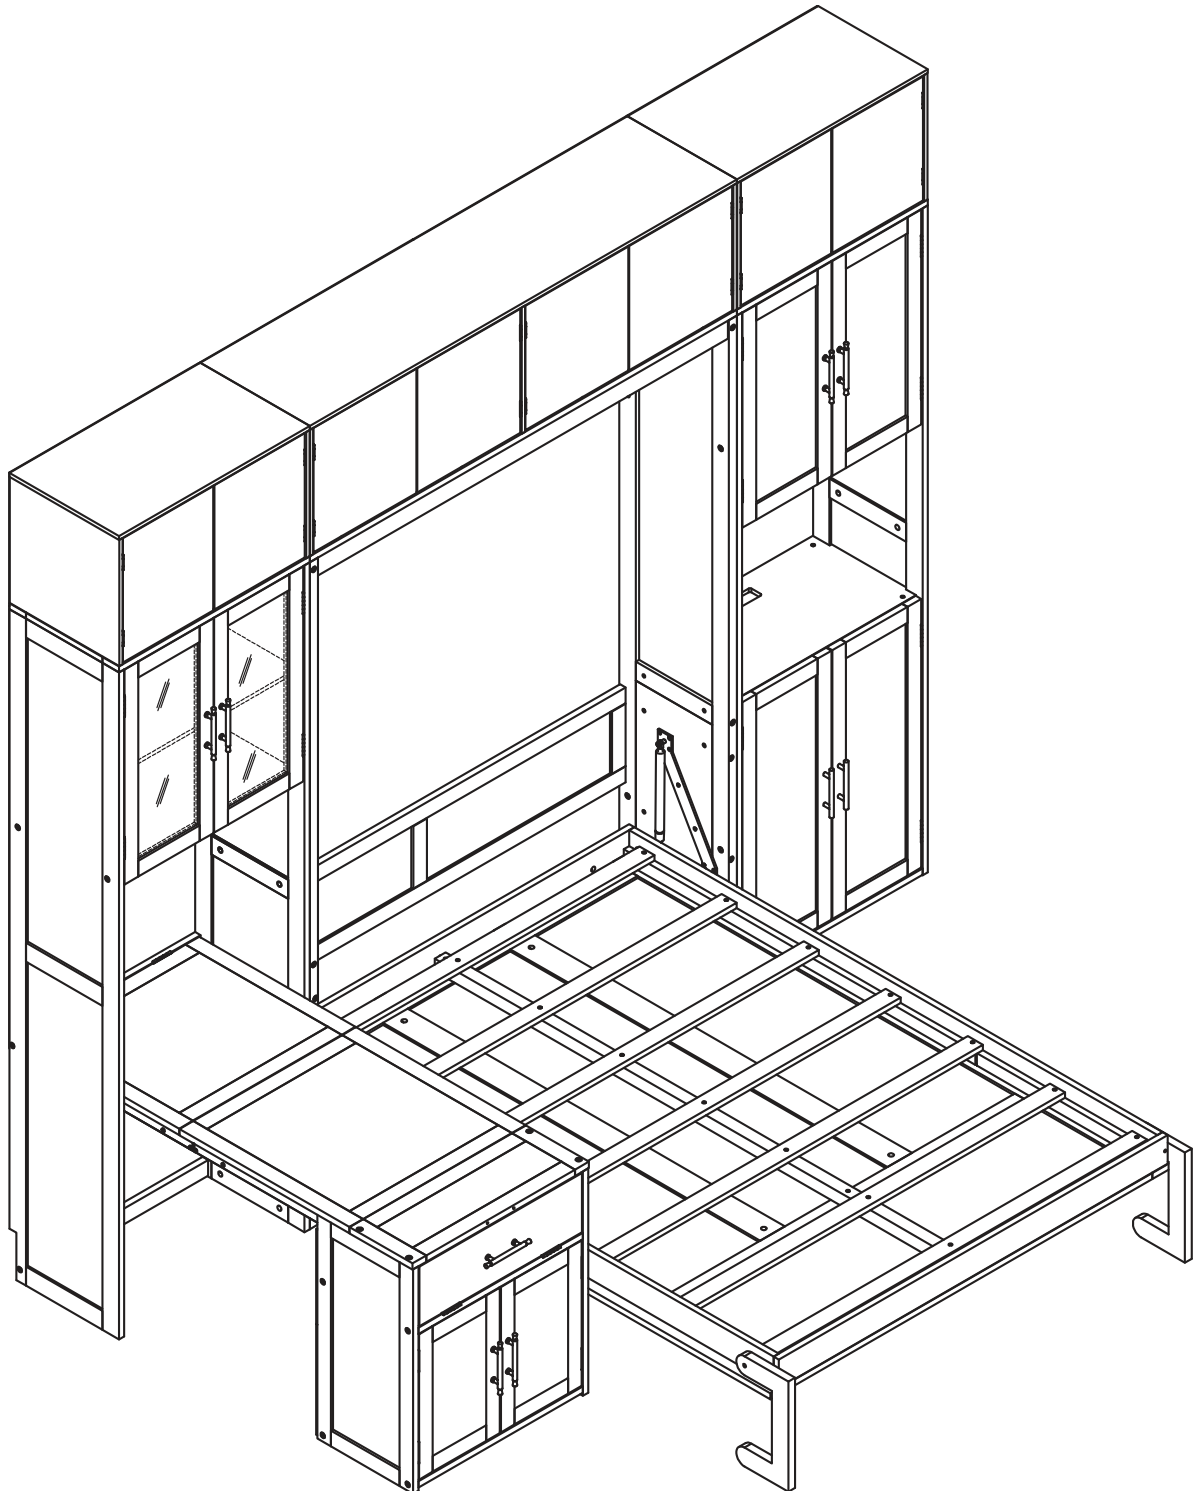

21






8(pcs)

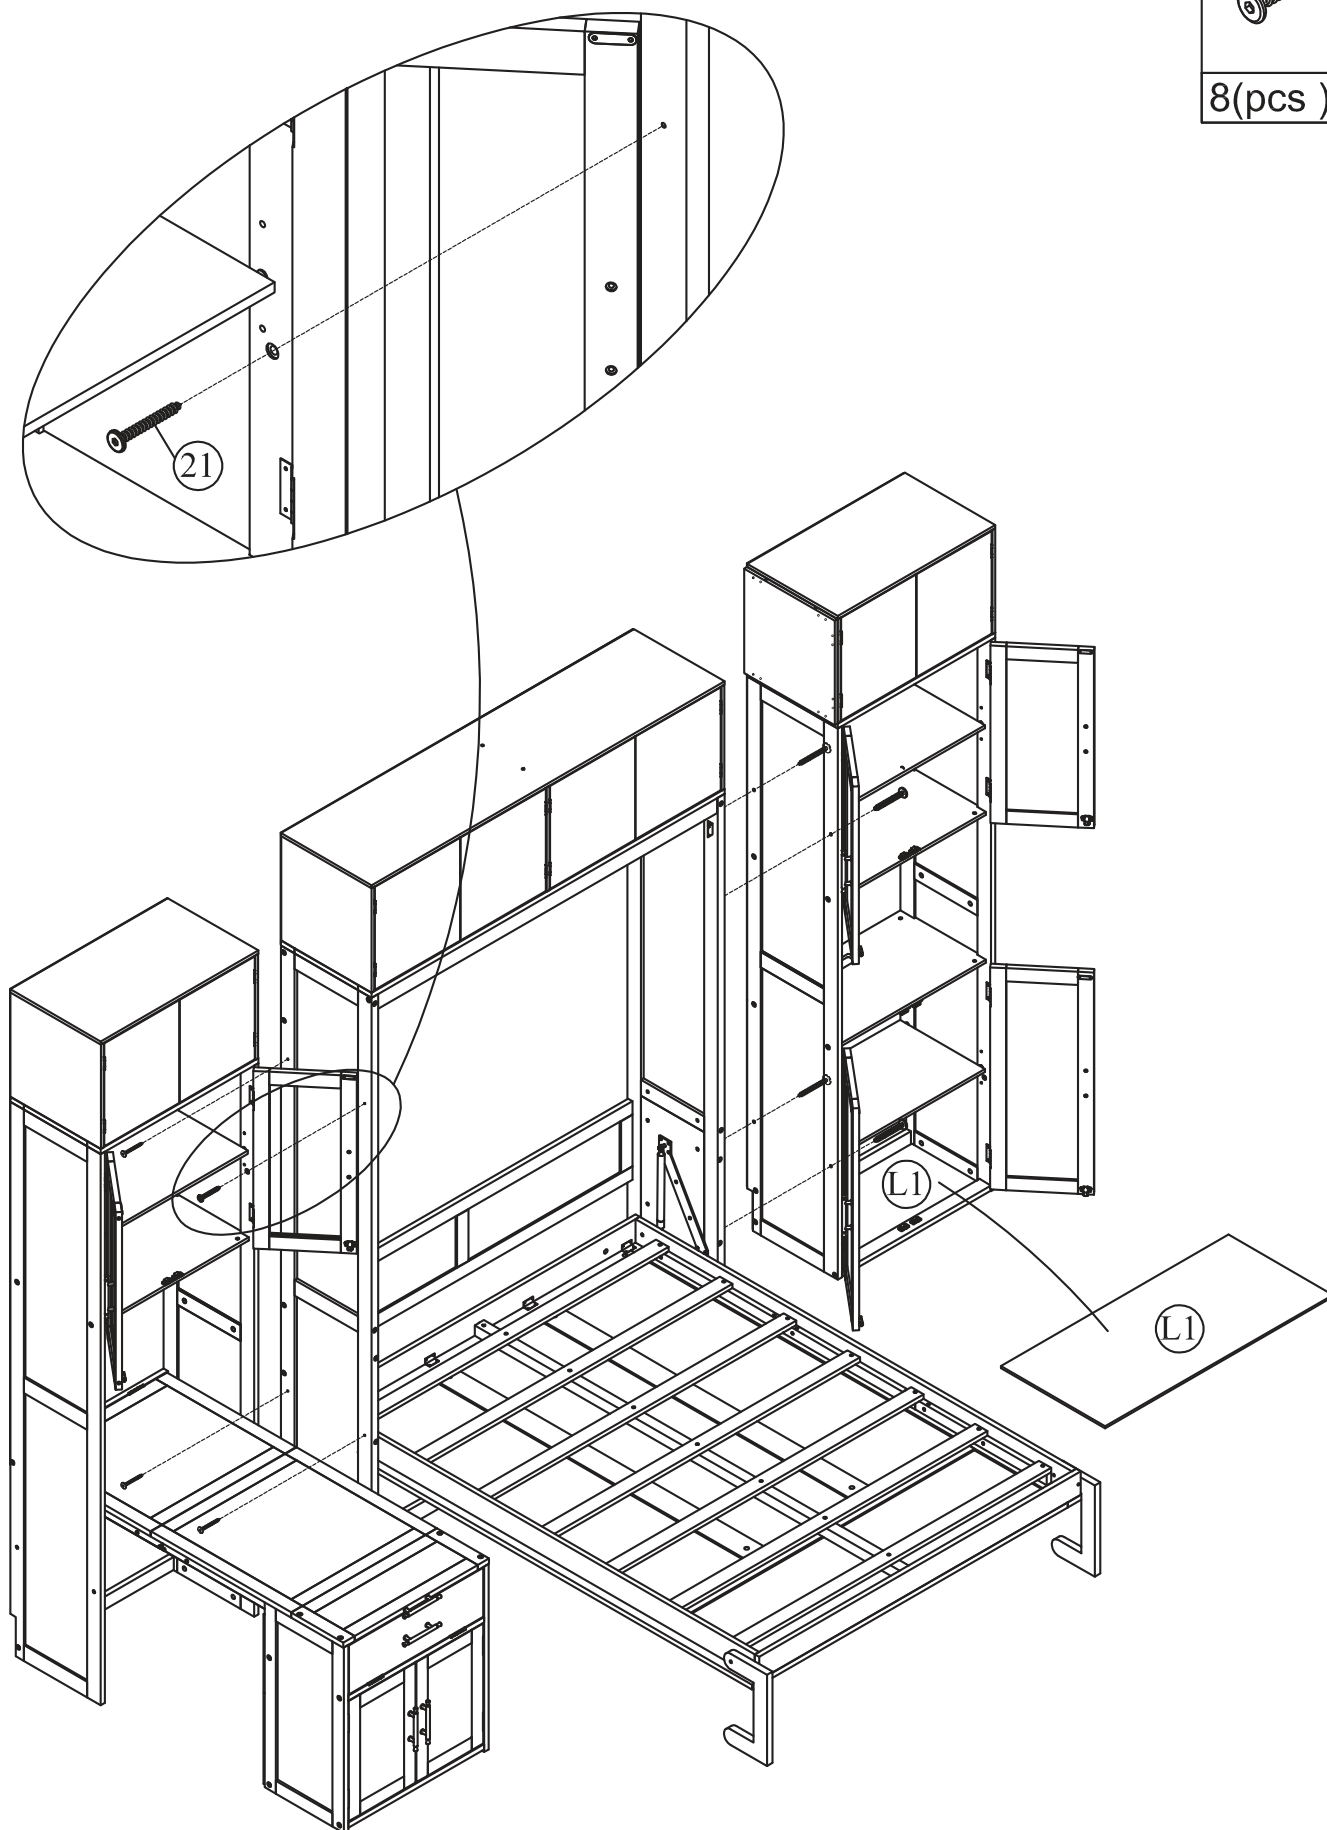


24




1(set)

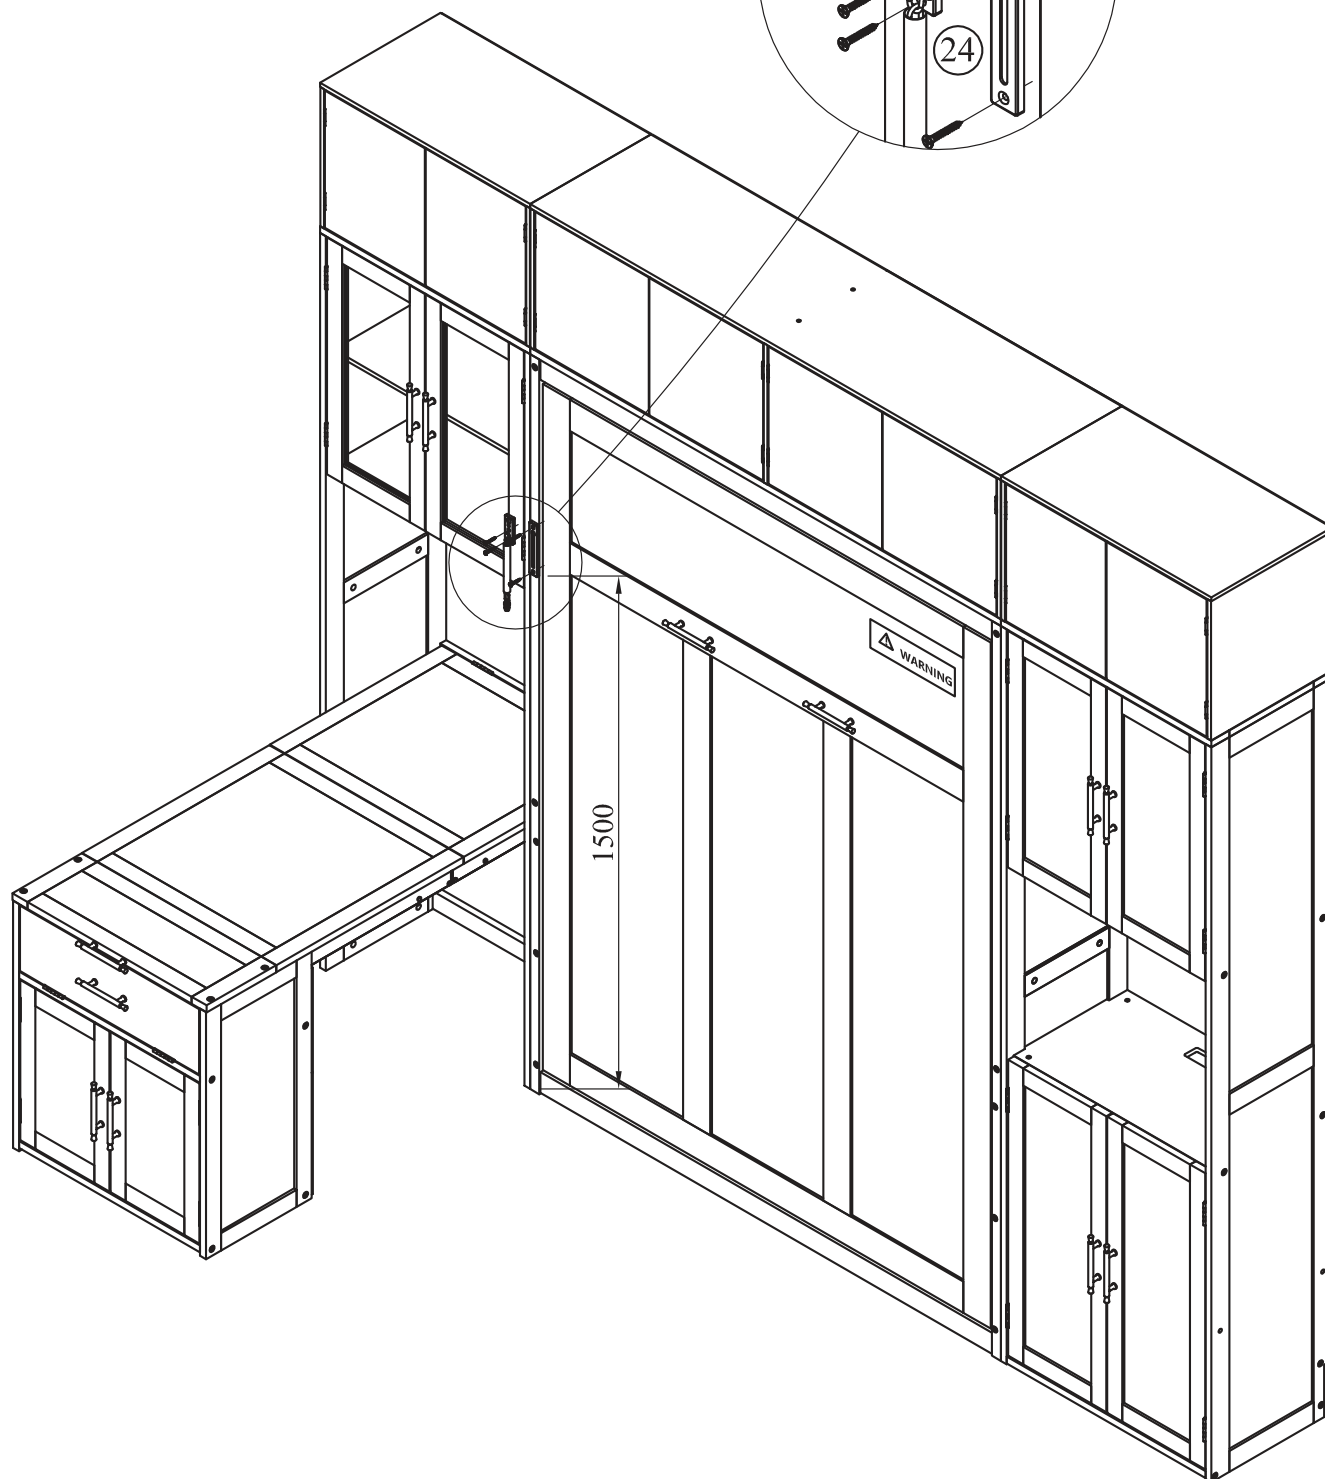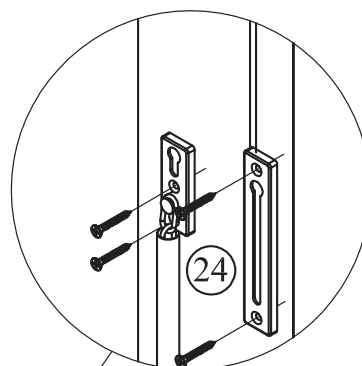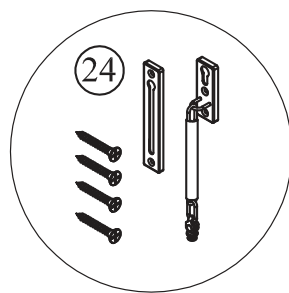


OPTION 4

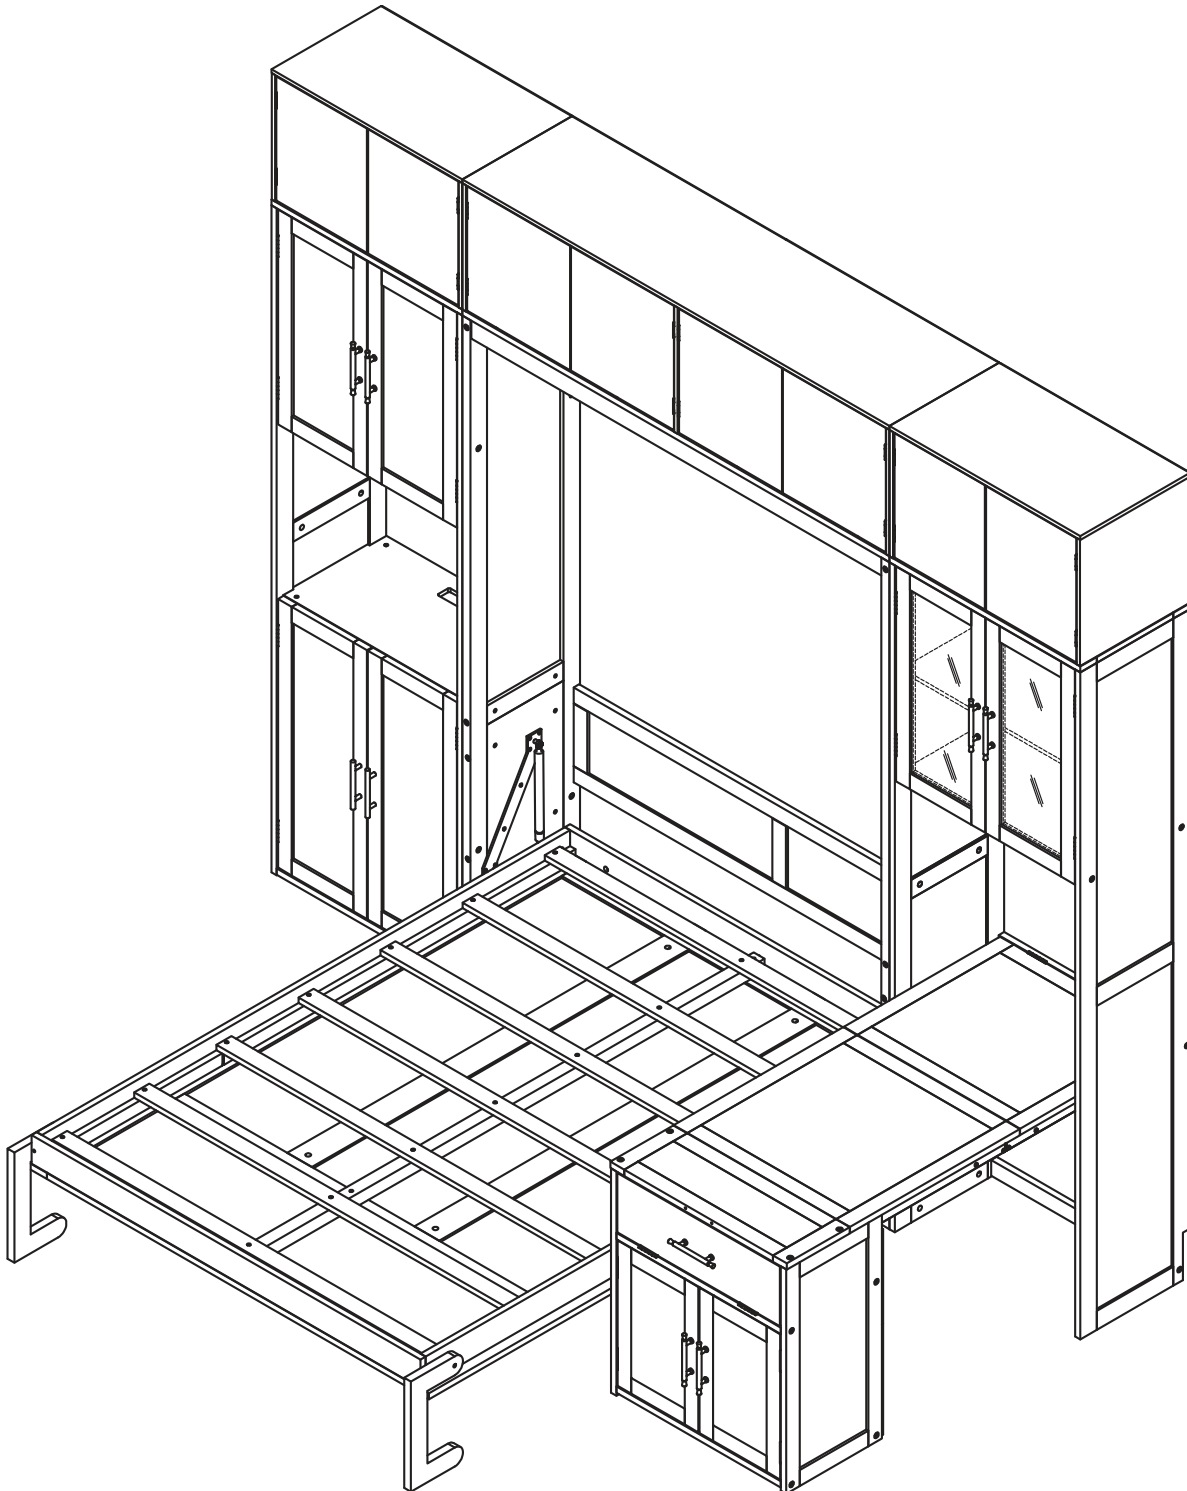

21




8(pcs)

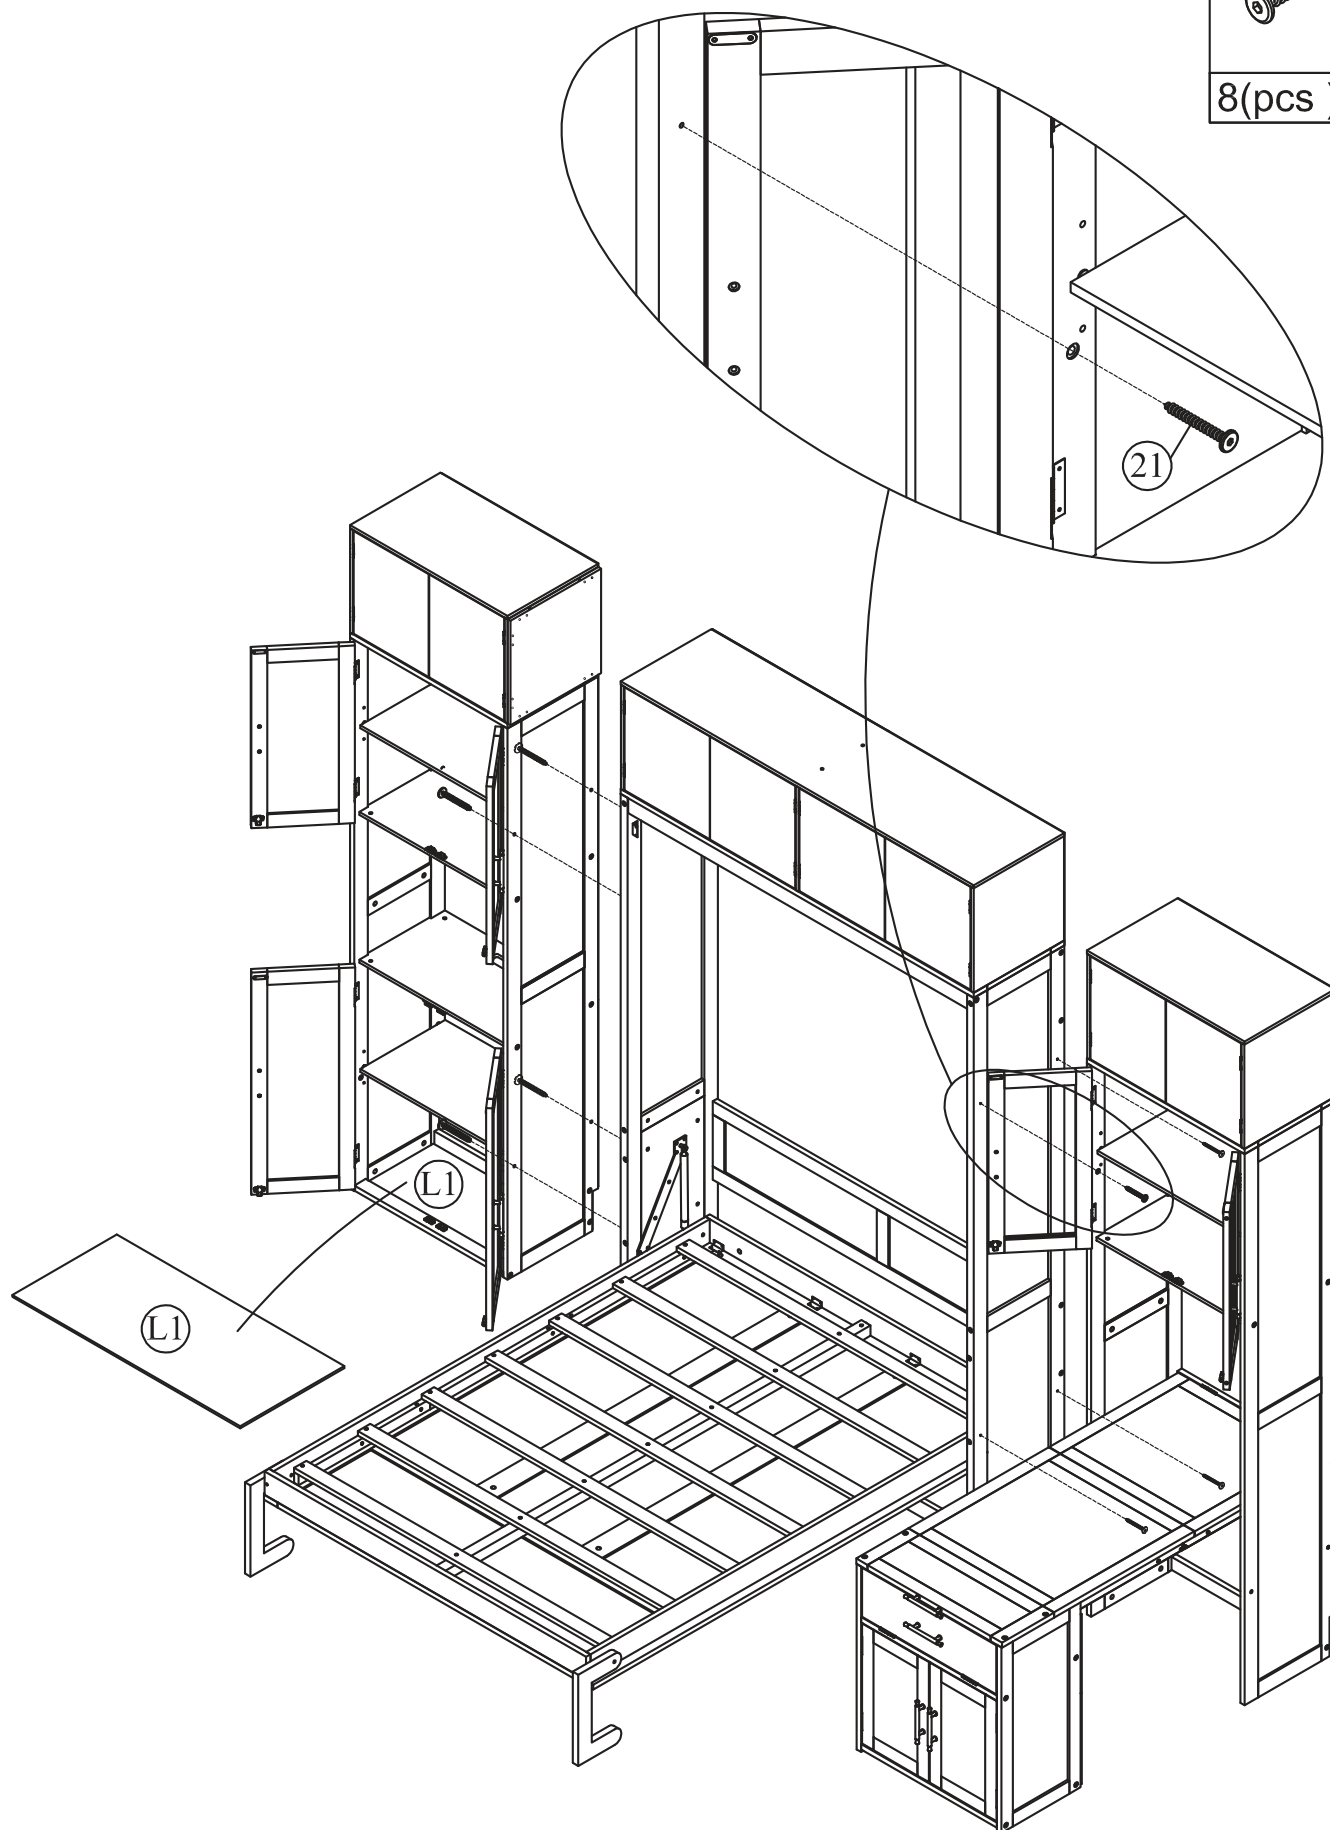



24



1(set)

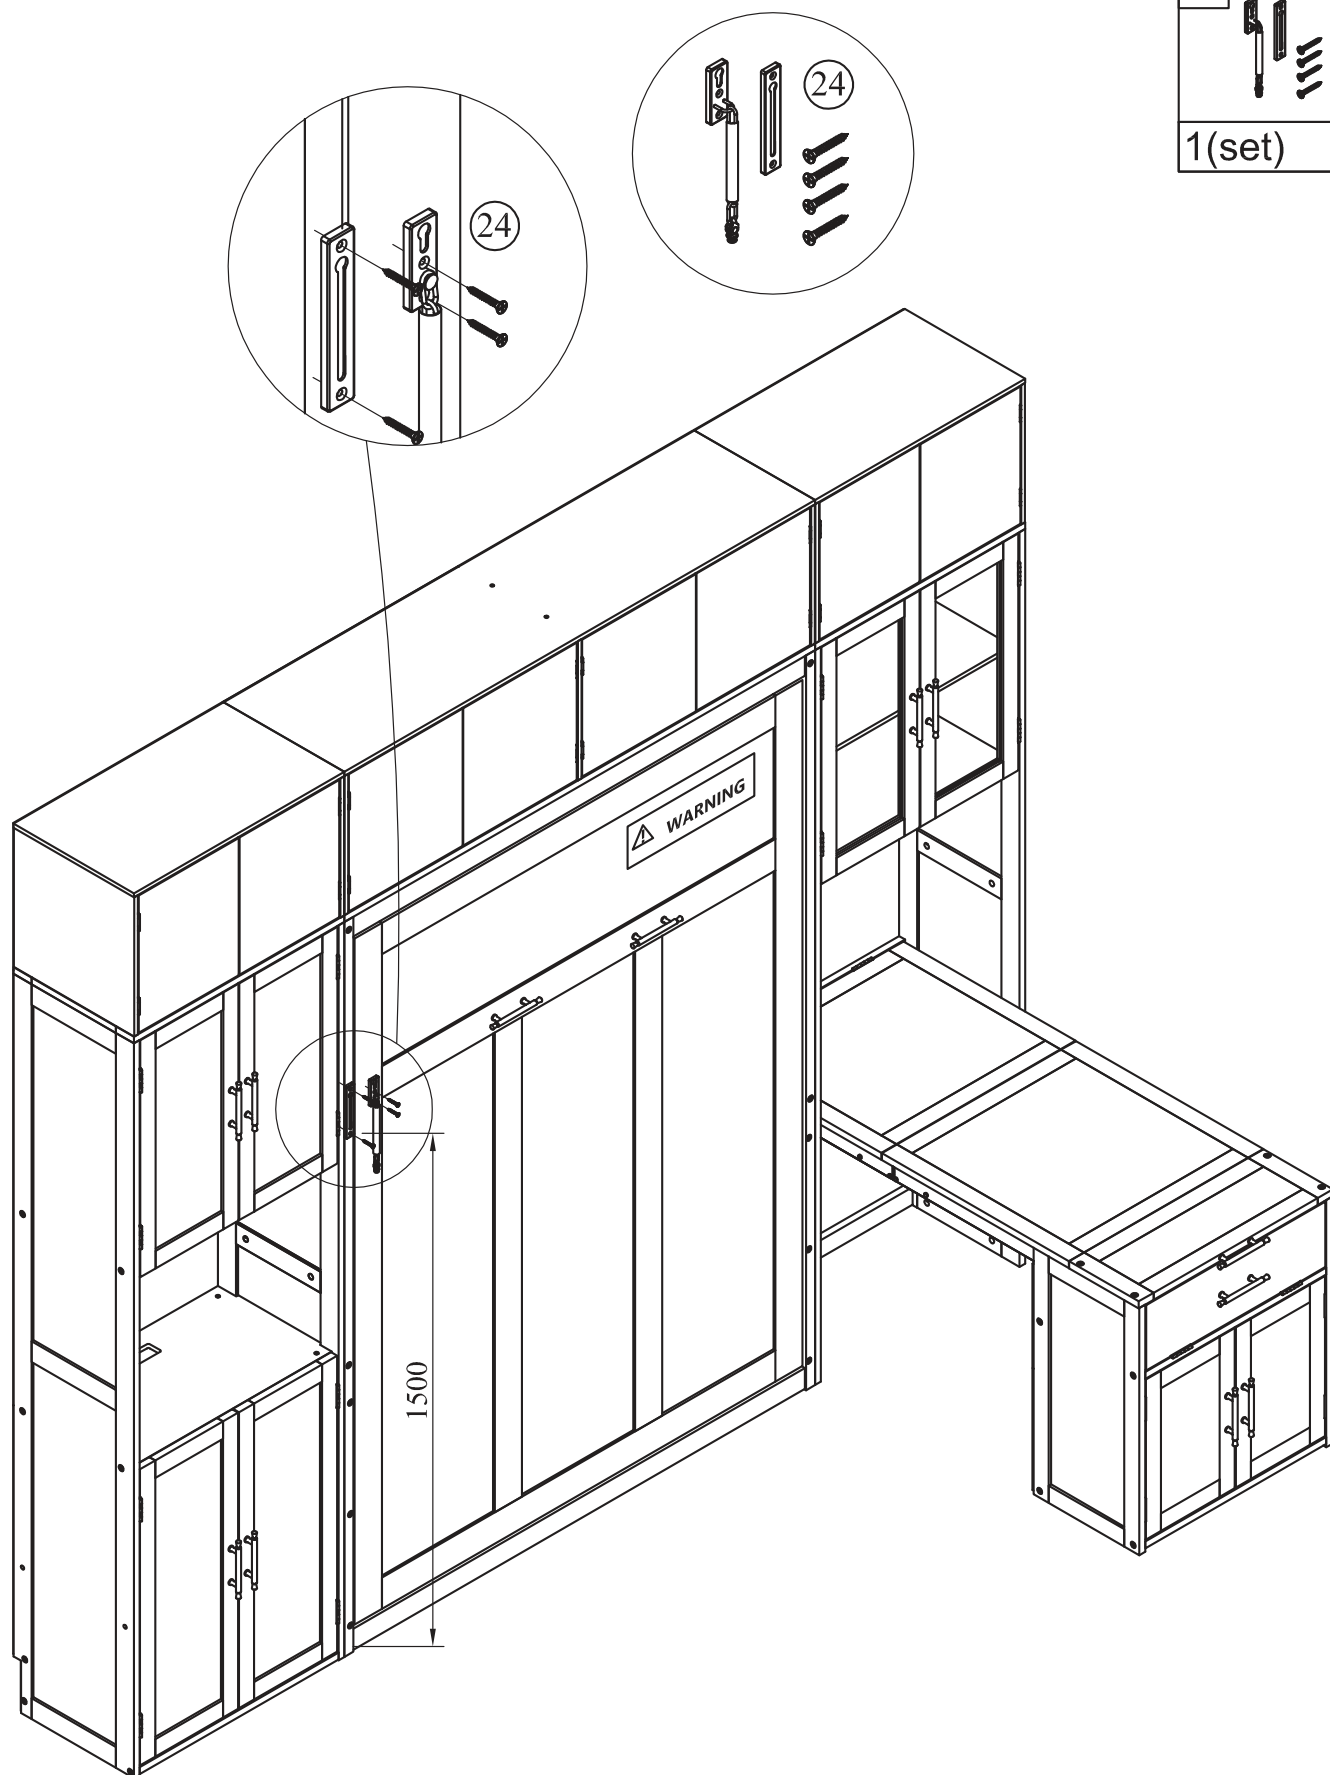

OPTION 2

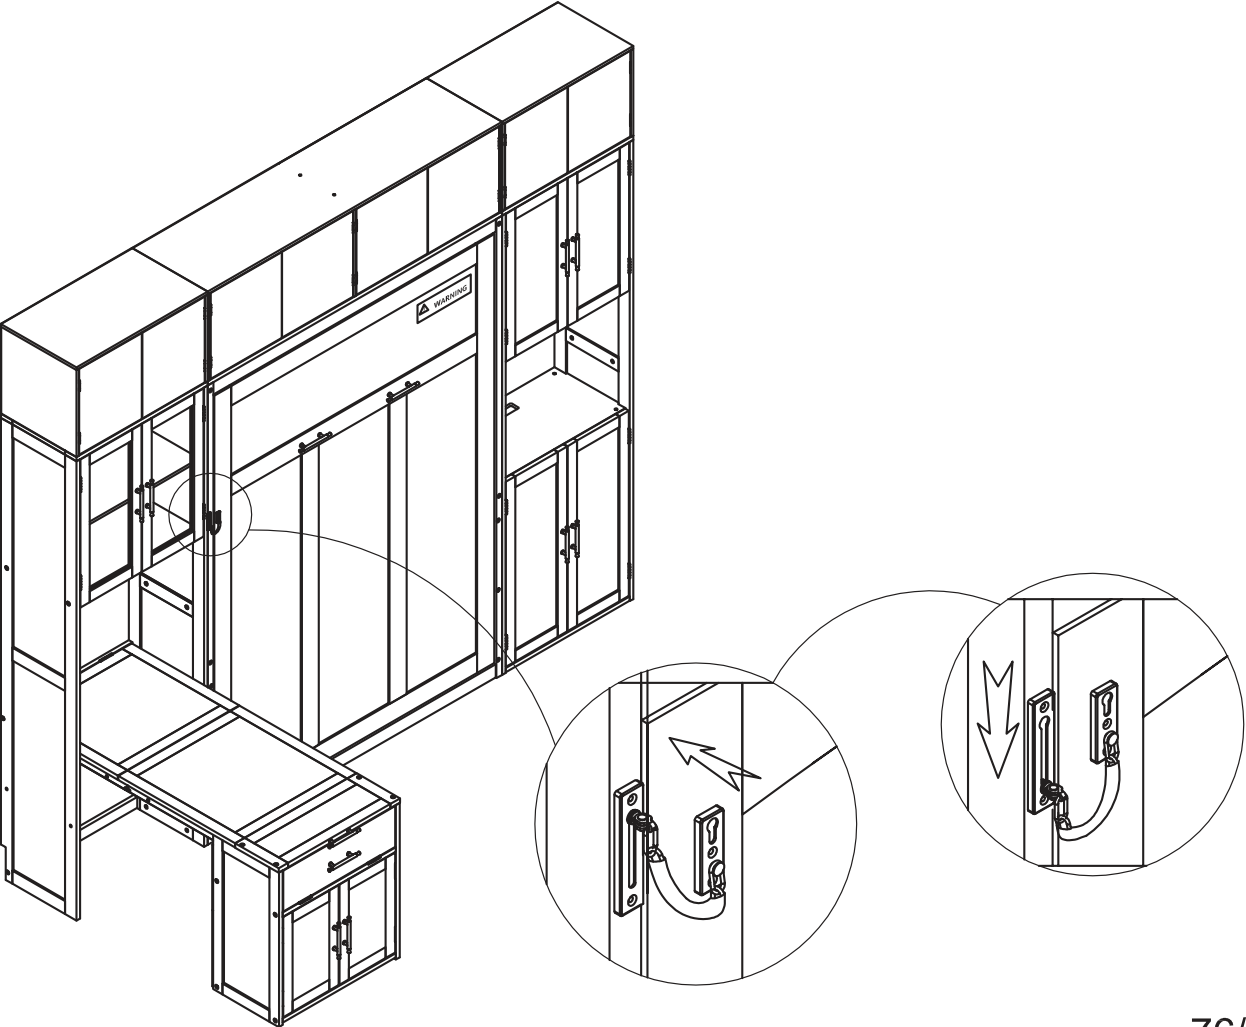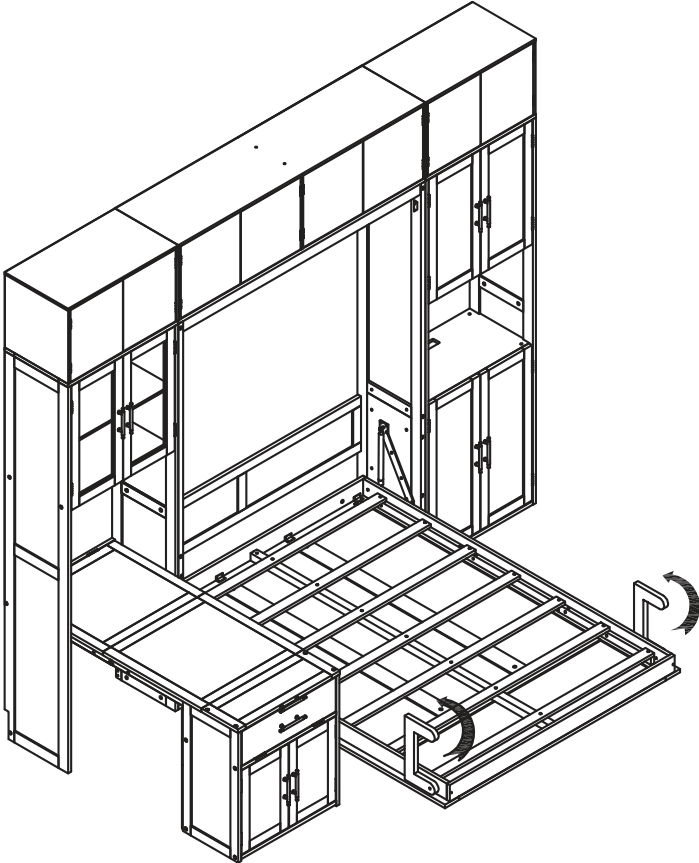



SAFETY FIRST: WALL ANCHORING IS NON-NEGOTIABLE

MURPHY BEDS MUST BE SECURELY ANCHORED TO STRUCTURAL MEMBERS. NEVER MOUNT SOLELY TO DRYWALL. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY OR DEATH.


ABSOLUTELY FORBIDDEN HARDWARE



PLASTIC ANCHORS - WILL FAIL

A. WOOD STUD WALL


HOW TO IDENTIFY



KNOCK ON A
HOLLOW WALL



STUD FINDER
TOOL




STUDS SPACED
IS 16" STUD

REQUIRED HARDWARE



HEAVY-DUTY SCREWS (MIN. 5/32" DIA., 2.5" LONG)

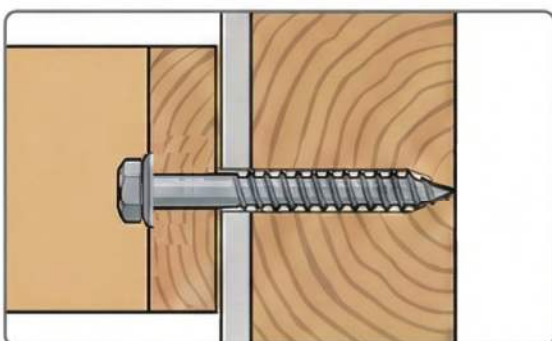

MUST PENETRATE WOOD STUD CENTER AT LEAST 2.5"

B. MASONRY/CONCRETE WALL

HOW TO IDENTIFY



KNOCK ON A
SOLID WALL




DRILL BIT CREATES
GREY/RED DUST

REQUIRED HARDWARE



ALL-METAL EXPANSION BOLTS
(MIN. 5/32" DIA., 2.5" LONG)

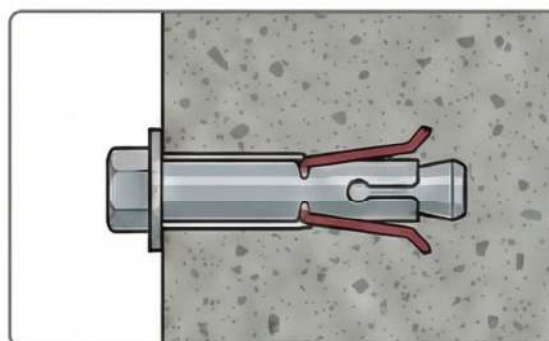

CLEAN HOLE OF DUST. **DO NOT** USE PLASTIC.

FINAL SAFETY CHECKLIST



VERIFY STUD CENTER BEFORE DRILLING



ENSURE FLUSH WALL FIT (ADJUST BASEBOARD)



PERFORM PULL TEST BEFORE MATTRESS LOAD



AVOID HIDDEN WIRES/PIPES BEFORE DRILLING



REGULARLY INSPECT AND MAINTAIN WALL ANCHORS



CONSULT A PROFESSIONAL FOR WALL ASSESSMENT
AND OPTIMAL HARDWARE; CUSTOMER ASSUMES
ALL INSTALLATION LIABILITY

IMPORTANT INFORMATION PACKAGE.



**THIS INFORMATION PACKAGE CONTAINS WARNING AND
PRODUCT SAFETY INFORMATION. DO NOT PROCEED
WITHOUT REVIEWING THOROUGHLY.**

A.) WARNING LABELS.

The Murphy Bed you purchased is delivered to you with **WARNING LABELS** to constantly remind you to adopt Safety Measures throughout the entire assembly and mounting points of the Bed to the walls.

DO NOT REMOVE these labels.


These Warning Labels serve as a Reminder Tool for visiting friends and relatives when using the Murphy Bed to ensure Safety Precautions are taken.

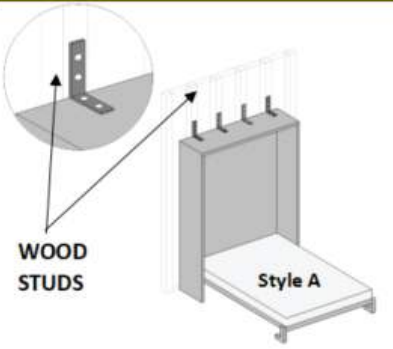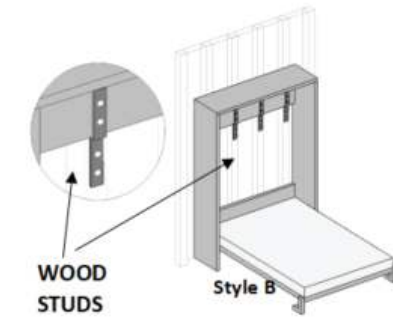 WARNING.	
<u>IMPORTANT SAFETY REQUIREMENTS - Bed Attachment to Wall.</u> <u>For Your Safety, the Murphy Bed MUST BE ATTACHED to the Wall.</u> Seek Certified Professional Consultant / Contractors for their Services to: 1.) DETERMINE the WALL Type in Your Home; 2.) PRECISE HARDWARE that suits to the Wall Type in Your Home; 3.) INSTALL / ATTACH of the Murphy Bed to the Wall in Your Home; 4.) VALIDATE the Murphy Bed is appropriately and securely installed/attached. The choice of wall anchoring hardware depends on the type of wall. This Murphy Bed is delivered with HARDWARE SCREWS suited for attachment to WOOD STUDS in walls and hardware fittings suitable for fixing on CONCRETE SOLID walls. Please select the correct wall-fixing hardware. Any STUDS type detected with your Consultant-Contractors to be NOT WOOD STUDS or CONCRETE SOLID WALLS - DISCARD and DO NOT USE these SCREWS. Use the hardware suitable for your wall material. Seek the professional advice of your Consultant-Contractor and procure the appropriate hardware and brackets for the attachment of the Murphy Bed to the Wall. <u>FAILURE TO ADHERE TO THE ABOVE INSTRUCTIONS MAY RESULT IN SERIOUS and/or SEVERE INJURIES or Death caused by the detachment of the Murphy Bed from the Wall.</u> <u>SAFETY PRECAUTION :</u> 1.) MAXIMUM Mattress Weight suited to your Murphy Bed : __lbs (__kg); MAXIMUM mattress thickness: __ inches (__ cm); 2.) ENSURE ADULTS ONLY throughout the entire assembly and attachment. 3.) KEEP ALL Children, Non-Ambulatory persons and Pets at bay during the entire assembly and attachment.	 WOOD STUDS Style A  WOOD STUDS Style B WOOD STUDS walls - Locking wall illustration LINE ART for Reference only and NOT DRAWN TO SCALE.

CAUTION : Homes are renovated differently. There are CONCRETE walls and "hollow walls". Hollow walls are reinforced with STUDS of Wooden or Steel Materials. Seek advice from professionals.

Style A - VERTICAL Murphy Bed with SEALED/CLOSED Back board.

Style B - VERTICAL Murphy Bed with OPEN STYLE Back board.

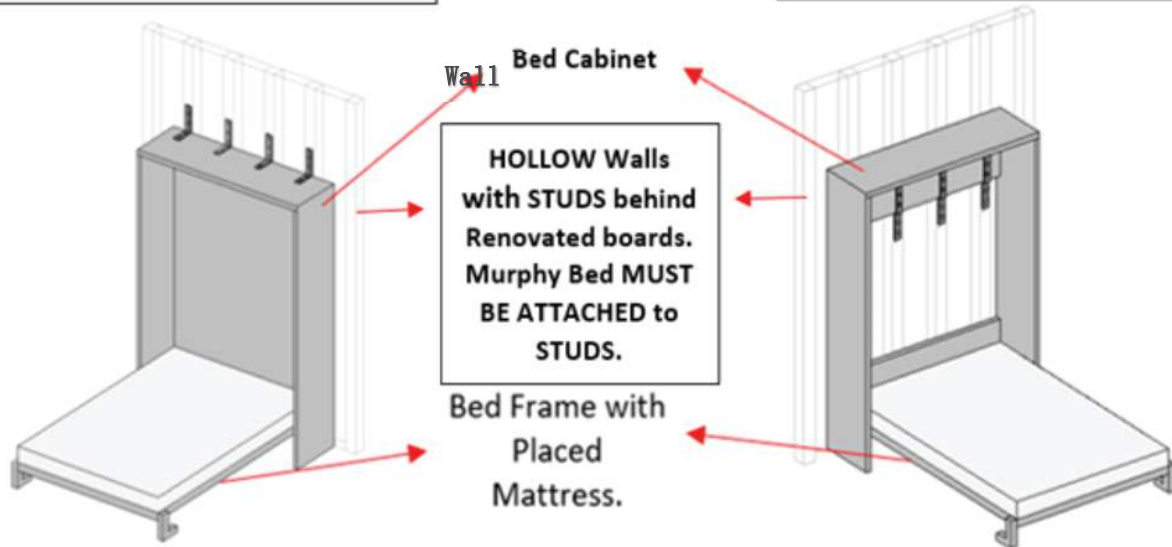

B.) SAFETY REMINDERS.

MARKINGS in WALL – WHERE TO ATTACH the MURPHY BED.

Irrespective of the wall type, whether Solid Concrete Walls OR Decorative Walls with WOODEN Studs OR Decorative Walls with Metal Studs, ensure that

-) you choose a professional installer who has a good understanding of the wall structure where the Murphy Bed is anchored, including the position of the wall studs and structural components in the case of a wood or metal structure.**
-) precise markings of the positions of the anchor points are to be made on the wall for easy identification during the Murphy Bed attachment to the wall.**
-) the relevant and appropriate Hardware with Metal Brackets is READY for this attachment and easily accessible for prompt and efficient attachment.**

This product requires Professional Consultation and Installation*.

* When you choose the professional installer, make sure to comply with all applicable laws, regulations and rules in the city, state or country where the Murphy Bed is installed.

To have your Murphy Bed fully assembled and to achieve its intended functionality – you **MUST READ** through this entire Assembly Instructions Manual before you start the assembly of the bed

1.) **There are numerous Safety Issues and Safety Precautionary Actions that you MUST KNOW before you start the Assembly.**

2.) **CAUTION - Failure to FOLLOW / ADHERE to the GUIDE, WARNING AND REMINDERS here, may result in serious / severe injuries or death.**

3.) **PRECAUTION : For the assembly, Adult Partners only, to assist in the entire assembly. Ensure **NO LESS THAN 2** ABLE BODIED PERSONS ONLY in the entire assembly and attachment of this Murphy Bed to the walls of your home.**

4.) **CAUTION : During the entire assembly process and attachment of the Murphy Bed to the walls of your home, Keep ALL Children, Non-Ambulatory Persons and Pets completely away.**

5.) **SAFETY REMINDER on / to : Personal, Family Members and Pets.** The Murphy Bed may be shipped to you in 3 to 5 packages and are **HEAVY**. Each carton holds many parts and components. Some of these components eg., bolts and screws are relatively small* in size.

***. During the assembly process, ensure that any misplaced bolts and nuts are picked up so that Children and / or Pets do not play or ingest these.**

6.) **This Murphy Bed is intended for ADULT USE ONLY.**

7.) This Murphy bed is delivered with pre-installed hardware for the wood studs and the concrete solid wall - **please choose the appropriate hardware according to the type of the wall.**

8.) **Your Home's Wall Type** - Every home is renovated differently with different wall(s) type / finishes. Before you proceed to assemble your Murphy Bed :

- a.) **SEEK and CONSULT Professional Services** to ascertain the wall type in the designated location where you intend to attach the Murphy Bed;
- b.) **ENSURE** the Consultant-Contractor specifically **INFORMS** you of the **WALL TYPE** in the designated spot where you intend to attach the Murphy Bed.
- c.) **ENSURE** the Consultant **INFORMS** you specifically on the matching and relevant Hardware / Brackets to secure and attach the Murphy Bed to the wall.


9.) **WARNING – YOU MUST HEED THE INSTRUCTIONS** given by your appointed Consultant-Contractor on the :

- a.) Mounting Hardware Type that suits the wall(s) type - where / when it is NOT WOOD STUDS or NOT CONCRETE SOLID WALL, the **pre-packed hardware not match/ not fit.**
- b.) Number of Mounting Points for the Murphy Bed to the Wall.

CAUTION : Homes are renovated differently. There are CONCRETE walls and "hollow walls". Hollow walls are reinforced with STUDS of Wooden or Steel Materials. Seek advice from professionals.

Style A - VERTICAL Murphy Bed with SEALED/CLOSED Back board.

Style B - VERTICAL Murphy Bed with OPEN STYLE Back board.

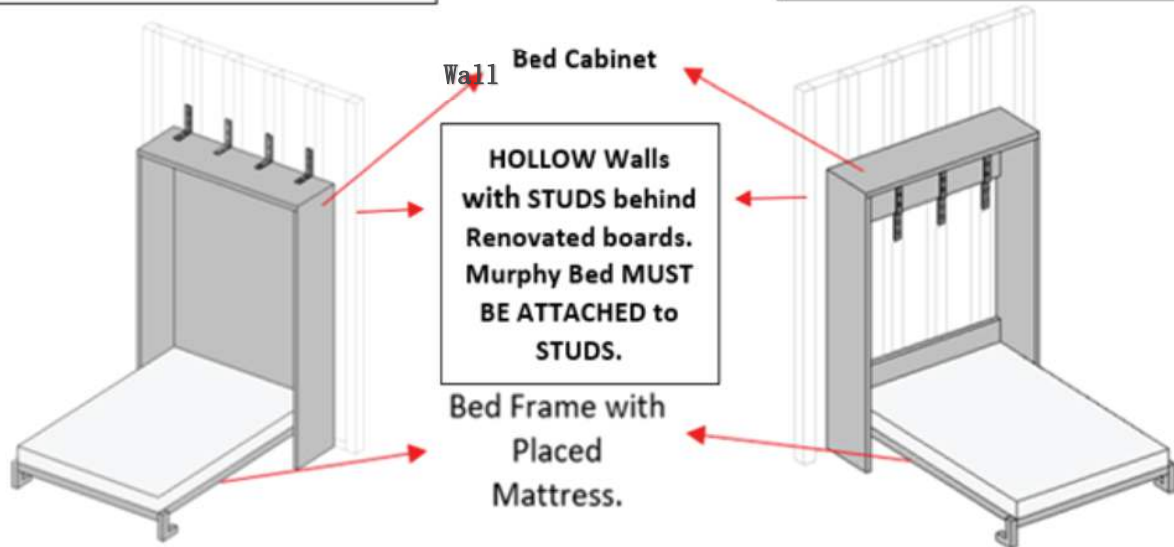

10.) This Murphy Bed is designed for home use and not intended for commercial use.

11.) This Murphy Bed is not intended to be moved, modified, uninstalled or disassembled once professionally installed.

C.) MOUNTING INFO & HARDWARE.



1.) REMINDERS :

- a.) In the event, that this pre-packed Screws Set does not match to the walls in your home – **DO NOT USE / DISCARD these hardware.**
- b.) **ADHERE** to the **Professional Consultant-Contractor** instructions and information on the **RELEVANT** mounting hardware that suits your wall.
- c.) Procurement of these **RELEVANT** hardware is an arrangement made between your Consultant-Contractor and you.



2.) A step ladder (not provided) is needed to attach the L-Brackets to the wall, at the Top of the Murphy Bed. **DO NOT** lean against the Top of the Murphy Bed, it may cause sagging.

Murphy Bed Style A

L-Bracket Fixture to Wood Studs

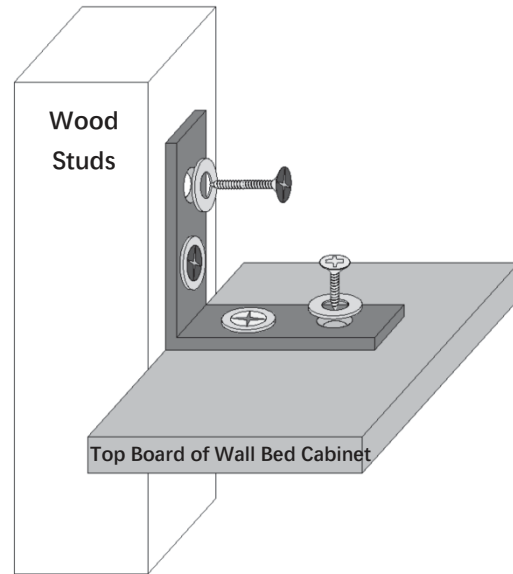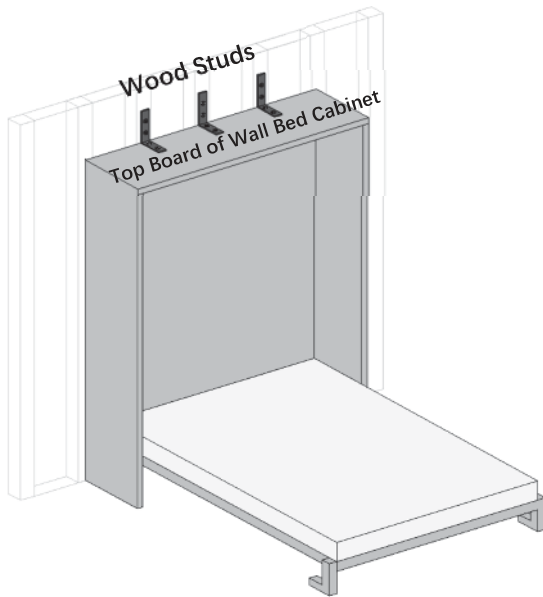

Z-Bracket Fixture to Wood Studs

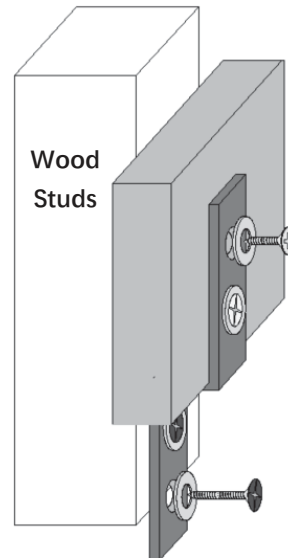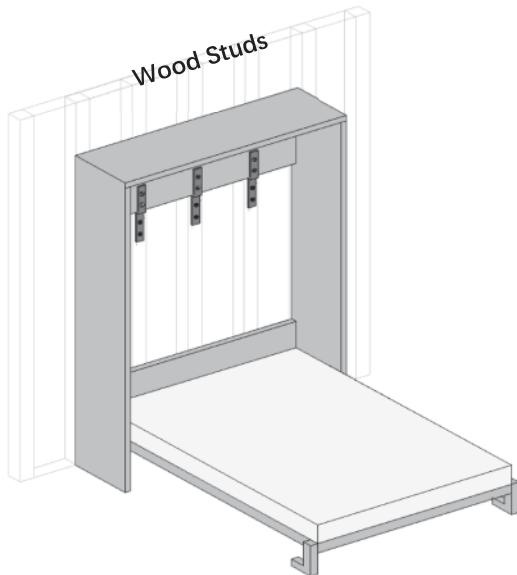

D.) IDENTIFICATION of TOOLS and ATTACHMENT SKILL.

The parts and components to assemble the Bed Frame are stated in the Assembly Instructions. Follow the instructions carefully.

For an efficient assembly, after opening the cartons shipped to you :

- a.) open and lay out all parts and components in sequence;
- b.) account for every part, hardware and component;
- c.) then lay out the parts close to each other;

Assemble and tighten each bolt / nut / screw up to 80% to allow for the Wall Bed Frame and Shelving/Storage Cabinet to be HELD together.

Upon FINAL assembly where all the parts and components are FITTED precisely, in a sequential manner – proceed to tighten each bolt & nut & screw gradually.

CAUTION :

- 1.) The METAL PLATES to the sides of the Side Rails – MUST BE FULLY and SECURELY SECURED to the SIDE RAILS.
- 2.) The Piston L-Brackets that are attached to the INNER WALL of the Wall Bed Cabinet – MUST BE FULLY and SECURED to these Inner Walls.
- 3.) These Metal Plates and the L-Brackets – are the components that are holding the Pneumatic Pistons that allow your Bed to “travel” to an OPEN or CLOSED position.
- 4.) Frequent Inspections of these Metal Plates / Brackets and Pneumatic Pistons Bolts, up to Once a Month – to ascertain these DO NOT BECOME LOOSE. For if these bolts to the Wall Bed Frame , Shelving/Storage Cabinet Pneumatic Pistons are loose, may cause the BED FRAME to become DISLODGED and cause injuries.

REMINDER : NEVER FULLY TIGHTEN any screw / nut or bolt in one session. If you DO TIGHTEN the hardware all the way into the core of the wood, this cause the parts to become skewed that would impact other parts of the item not being able to be aligned to its mounting points for assembly.

E.) ALL ASSEMBLY WORK REQUIRES A TEAM OF **NO LESS THAN 2 ADULTS.**

Reminder : Per above info, the cartons and products are heavy – therefore exercise CAUTION at all times and ENSURE YOUR TEAM OF **NO LESS THAN 2** for the entire ASSEMBLY.

F.) ASSEMBLY OF WALL BED CABINET.

Identify all parts and components for the Wall Bed Cabinet.
Assemble the Wall Bed Cabinet according to the Assembly Instructions.

Upon the completion assembly of the Wall Bed Cabinet, make a final inspection that all joints and parts are fully and securely attached.

CLEAR all debris in the area where your Murphy Bed is going to be attached to the wall.

Move this FULLY ASSEMBLED WALL BED CABINET and position this WALL BED CABINET some 2 feet to 3 feet away from the designated Wall, where you have previously made markings.

SAFETY REMINDER – YOU MUST HAVE 2 ADULTS to HOLD and STABILISE this WALL BED CABINET, Only after the Murphy Bed is FULLY SECURED to the wall, the 2 adult persons who are holding down the entire Murphy Bed, can now be released for this action.

G.)THE FIXATION OF THE WALL BED CABINET.

Fix the wall bed cabinet to the wall using wall-mounted hardware, and check to ensure that the wall bed cabinet is securely fastened to the Wood Studs or Concrete Solid Wall.

REMINDER : FOLLOW the INSTRUCTIONS from your Professional Consultant / Contractor.

SEQ	Bed Description	Bed Size	Details.
1	Single/Twin(XL)	~38*75/80~ inches	Attach at least 2 pieces of L or Z Hardware onto the Wall or Studs;
2	Full	54*75inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
3	Queen	60*80inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
4	King	76*80inches	Install at least 4 pieces of L or Z Hardware onto the Wall or Studs;
5	Other Bed Size		Other Bed Sizes - seek advice from your Contractor

H.) ASSEMBLY of BED FRAME.

Identify all parts and components for the Bed Frame.

Assemble the Bed Frame according to the Assembly Instructions.

Upon completion of assembly of the Bed Frame, make a final inspection that all joints and parts are fully and securely attached.

I.)ATTACHMENT OF BED FRAME TO WALL BED CABINET.

Using the lifting hardware (compressed pneumatic/hydraulic piston and other hardware fitting), follow the installation instructions to securely connect the bed frame and the wall bed cabinet together. This process requires **NO LESS THAN 2** adults.

You may need to – LIGHTLY slide forward-backward to adjust and create gap space so as to enable the Pneumatic Pistons to be hooked to both ends of the hanging bolts in the Inner Wall of the L-BRACKET

Fully Secure and Tighten these Bolts at each end of the Pneumatic Pistons.

J.) Attachment of Safety Latches.

Upon completion of Step I above, ensure the entire structure of Bed Frame to Wall Bed Cabinet is fully and securely attached as ONE UNIT – affix the Safety Latches.

These Latches are to be reachable by Adults Only. Thus, the minimum height shall be no less than 5 feet (1.5m) from ground.

K.) Warning for Selecting a Mattress

Recommended Mattress weight ()lb or ()kg / Recommended Mattress thickness ()in or ()cm - Your Murphy Bed is engineered based on the bed frame weight, mattress weight, and the Neptune force system.

Therefore, load your bed with the RECOMMENDED MATTRESS Weights, Size and Thickness as stated in the assembly instructions.

DO NOT LOAD any heavier or LARGER or LIGHTER Mattress than what is recommended here.

L.) MATTRESS PLACEMENT.

Have 1 to 2 persons – place equal strengths to the handles and gently and securely, PULL DOWN the Bed Frame until the Bed Frame is horizontally and level to the ground.

Have the other 2 persons – carry and place the Mattress (**within the recommended weight and thickness**) and gently place the Mattress on to the Bed Frame.

M.) PNEUMATIC PISTON NEWTON-LOAD STRENGTH.

You are hereby reminded that when the BED FRAME is EMPTY OF MATTRESS, the Bed Frame may NEED a FULL force to be pulled down before you can place the Mattress.

This PULLED DOWN RESISTANCE is a normal feature, as the Newton-Loaded Piston Force is in action.

N.) BED STRAP – GUIDE STRAP

Your Murphy Bed may or may not equipped with a Bed Strap.

This Bed Strap serves as a GUIDE STRAP to help you lift the Bed Frame approximately 6 inches

from its resting position. Then use both hands to FULLY LIFT the Bed Frame to its closed position.

SAFETY REMINDER :

1.) **DO NOT USE THE BED STRAP to PULL DOWN AND OPEN the BED FRAME from its CLOSED POSITION.**
2.) **DO NOT USE THE BED STRAP to PULL-LIFT-HOIST the BED FRAME from the OPEN-HORIZONTAL position to the CLOSED POSITION.**

Both of the above may cause injury or unnecessary strain to your arms.

O.) USING YOUR MURPHY BED.

For EVERY USE – follow Safety Precaution Measures to ensure the safety of your family members and pets is IMPORTANT.

Therefore, PRIOR TO OPENING / PRIOR TO CLOSING OF YOUR MURPHY BED - Make sure all Children / Non Ambulatory Persons and Pets are away.

KEEP CHILDREN and NON-AMBULATORY persons from Unlatching the Safety Latches.

P.) CAUTION : DO NOT BE DISTRACTED During EVERY OPENING and CLOSING of your Murphy Bed.


Every time you Pull to **OPEN** the Murphy Bed from its closed position OR **Lift-Pull to CLOSE** the Murphy Bed to stow it into the Wall Bed Cabinet -

- give these actions your focused and dedicated attention.
- **DURING EVERY OPENING and CLOSING of your Murphy Bed** - always ensure you have an Adult Partner close by for added assistance, where necessary.
- **DO NOT OVER EXERT ADDED FORCE to OPEN the Bed or to CLOSE the Bed frame.** For if you do, the resistance of the Pneumatic Piston will only make it harder for you to complete the task.
- **TO CLOSE the Murphy Bed** : depending on your height – stand some 6inches to 10inches away from the Foot Board edge. Use both your hands and place both hands at about equal distance from the middle of the Bed Frame, spaced at 2 to 3 feet between your hands - GENTLY LIFT-PULL to Close your Murphy Bed.
- **TO OPEN the Murphy Bed** : using equal force – **place your hands to the installed grab handle** and GENTLY PULL towards you to Open. **As you pull Open the Murphy Bed – proceed to move backwards, slowly and steadily, so as to give way to the Murphy Bed's OPEN Position.**
- During **EVERY OPENING or CLOSING** of the Murphy Bed - at about your hip level - you may find that you need to rotate your hand / wrist - take caution here to prevent injury.
- During EVERY OPENING and CLOSING, keep Children and Pets and Non Ambulatory Persons away.
- **NEVER** allow your children to treat this Murphy Bed as a Hide and Seek place of fun or

jump on the bed.

- **Care & Maintenance** - Depending on the frequency of use of your Murphy Bed, it is recommended that you take precautionary Care and Maintenance. It is advisable to conduct NO LESS THAN 2 to 3 checks annually on these mounting points & pneumatic pistons to ensure that these are securely bolted. Where necessary, use a vacuum cleaner to clear all dust and then wipe down with a damp cloth, then proceed with your maintenance work.

Safety Latches - Your Murphy Bed comes with the Safety Latch. These are to be attached at, both the TOP LEFT and TOP RIGHT hand upper portion, **minimum of 5 feet (1.5m) from ground**, of the Bed Frame / Wall Bed Cabinet. Monitor and Inspect these frequently.

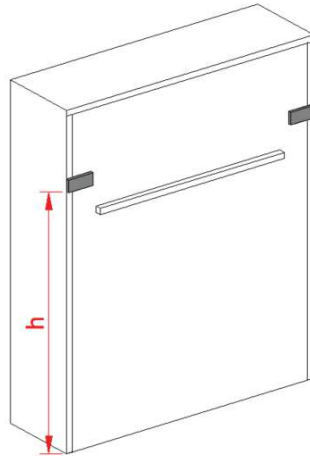

- Whenever NOT in use and after the Murphy Bed has been LIFTED and stowed in its **CLOSED POSITION - ALWAYS LATCH UP.**

Frequently Asked Questions. **Malfunctioned Pistons.**

How do you know when the Murphy Bed's Piston has malfunctioned?
It would be quite evident in that :

- a.) the Bed Frame may become LOPSIDED and
- b.) the Lift-PULL force to CLOSE may be "heavier" than before.

IMMEDIATELY - STOP USING YOUR MURPHY BED.

SEEK and CONSULT professional maintenance service to ascertain the problem and repair and or have the pneumatic pistons changed.