

Assembly Instruction Sheet

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (1) B10 Candelabra Base Bulb 60W Maximum or

(1) Candelabra Base T8 Vintage Bulb is recommended but not supplied.

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

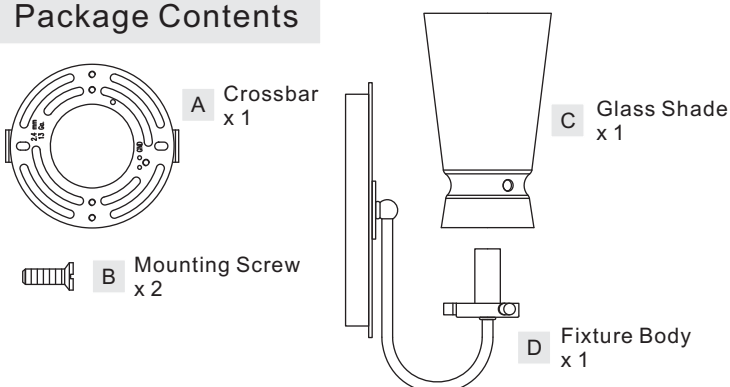


(Step 2 Continued)

B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.


STEP 3 - Install Fixture Body

A. Attach the Fixture Body (D) over the Crossbar (A) and secure with Mounting Screws (B). Tighten until snug with screwdrivers.

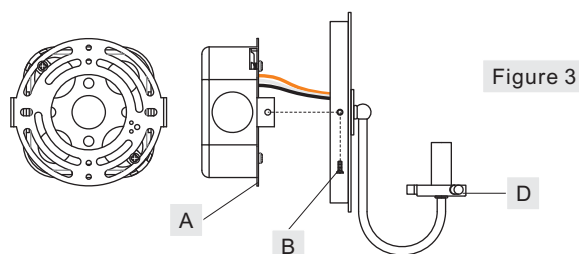


STEP 1 - Install the Crossbar to the junction box

A. Pass the supply wires and ground wire through the Crossbar (A). Attach the Crossbar (A) to the Outlet Box with the head of Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug with screwdrivers.

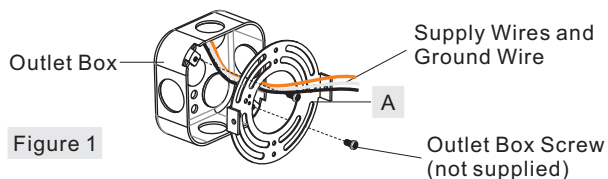

STEP 2 - Wire Connections


A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.

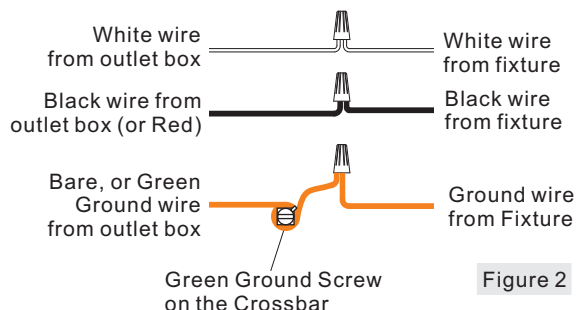

STEP 4 - Install Glass Shade and Bulb

A. Remove lock screws and rubber washers from the Fixture Body (D).
B. Place the Glass Shade (C) onto the Fixture Body (D). Align holes on the Glass Shade (C) to mounting holes on the Fixture Body (D). Secure the Glass Shade (C) by threading lock screws with rubber washers back into mounting holes. Hand tighten until snug.
C. Insert the bulb onto the socket and screw snugly into place.





Your fixture is now assembled and ready to use. Enjoy!

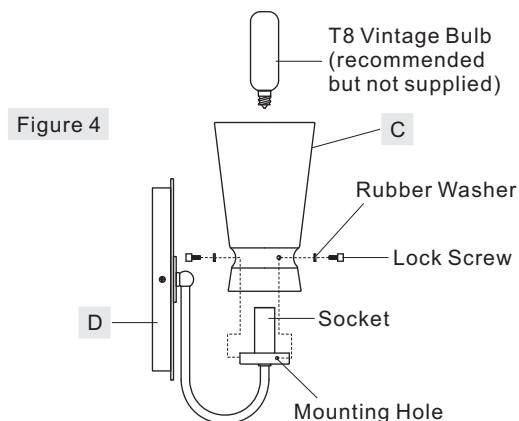

Thank you for purchasing this product.

FINISH: WESTERN BRONZE

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

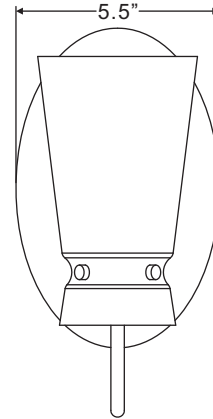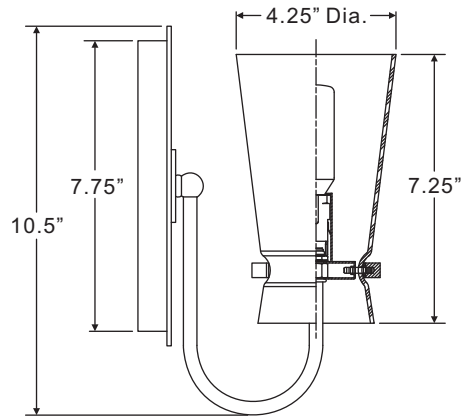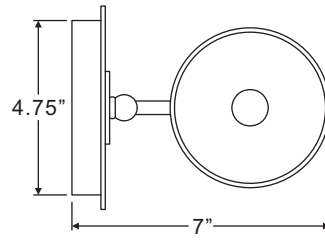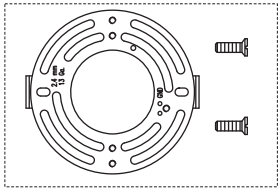

Thank you for purchasing this product.