Thank you for Shopping with us!

We hope we were able to provide your home with the perfect vanity. This vanity has been constructed with design, quality and functionality in mind. We hope you enjoy this new addition!

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.

Have a Question?


Scan for easy installation video

Questions regarding your order?
Parts missing or broken?

Contact us at: info@sudiodesign.com


Want to learn more about your purchase?
Visit our website at www.sudiodesign.com/faq

We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

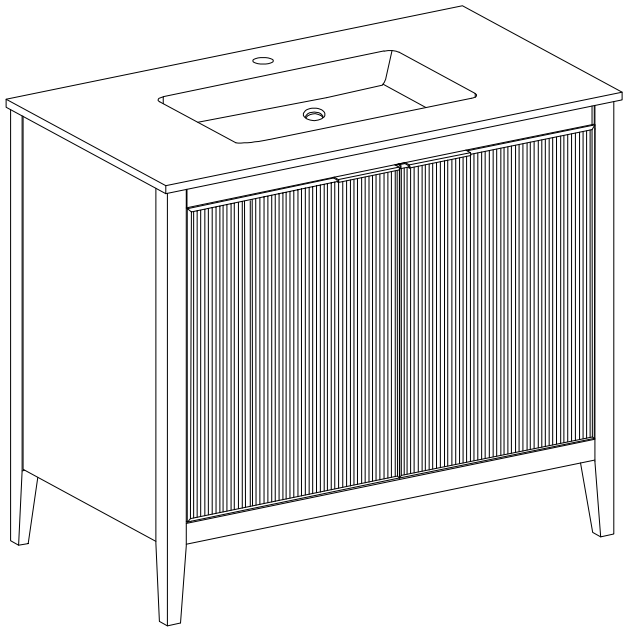

Emma 30/36” Bathroom Vanity












Vanity Components

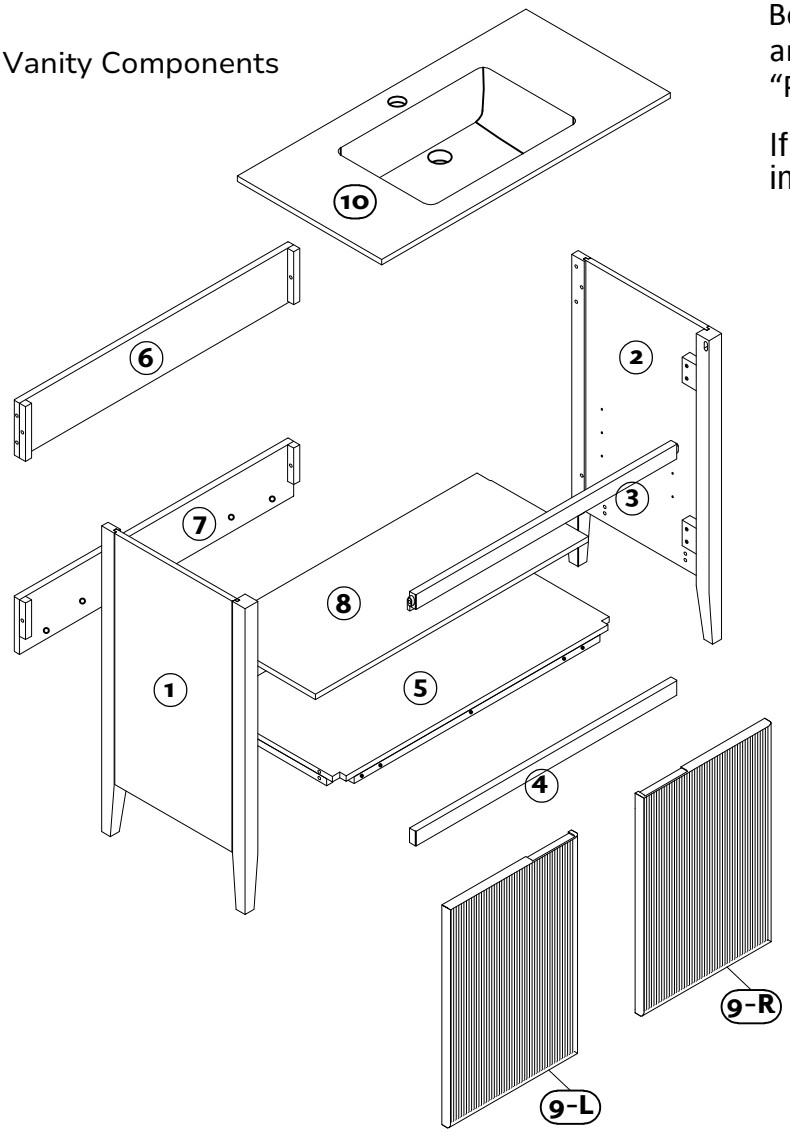


Before assembly and installation, please check and ensure you received the items in the below “Parts and Hardware List”.

If any items are missing, please report to us immediately within 30 days of purchase.

Parts List

1  Left side board Qty: 1Pc	2  Right side board Qty: 1Pc	3  Front upper frame board Qty: 1Pc
4  Front lower frame board Qty: 1Pc	5  Bottom board Qty: 1Pc	6  Rear upper frame board Qty: 1Pc
7  Rear lower frame board Qty: 1Pc	8  Shelf Qty: 1Pc	9-L  Left door Qty: 1Pc
9-R  Right door Qty: 1Pc	10  Countertop Qty: 1Pc	


Hardware List

A  Flat Washers Ø1/4" x16mm Qty: 14Pcs	B  Split Lock Washers Ø1/4" Qty: 14Pcs	C  Allen Bolts 1/4"* 32mm Qty: 14Pcs	D  Allen Wrench M4 Qty: 1Pc	E  Wooden Dowel Ø8* 30mm Qty: 12Pcs	F  Hinge Qty: 4Pcs	G  Screws F3.5*15mm Qty: 24Pcs
H  Silicone Bumper Ø10*2mm Qty: 4Pcs	I  Shelf L-Bracket Qty: 4Pcs	J  Handle L165mm Qty: 2Pcs	K  Screws F3.5*12mm Qty: 6Pcs	L  Three in one bolts M6*51mm Qty: 2Pcs	M  Barrel Nut Ø15* 13mm Qty: 2Pcs	

Required Tools (Not Included)

 Screwdriver	 Tape Measure	 Leveler	 Pencil
 Stud Finder	 Drill	 Silicone Sealant	 Wall Mounting Hardware

Step: 1

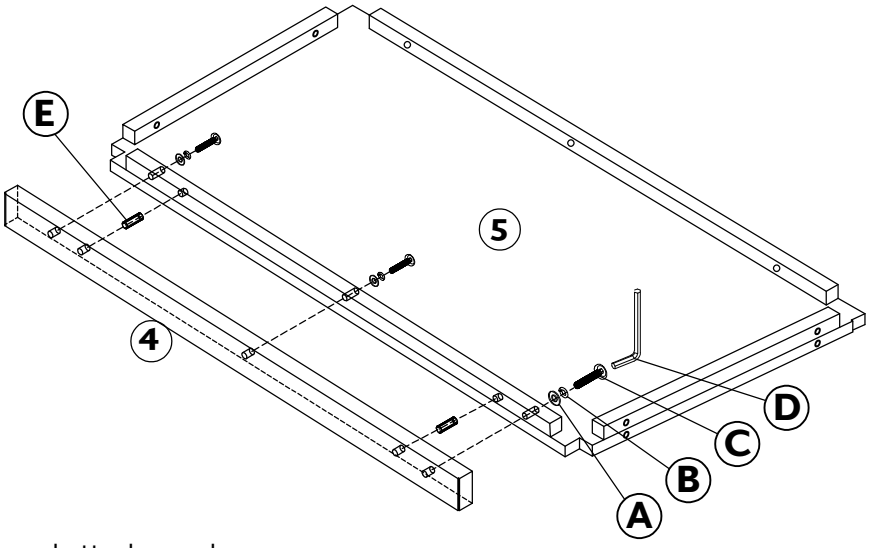



Insert wooden dowels and attach panels.
Then secure with bolts using an Allen wrench.

Hardware

A		Flat Washers Ø1/4" *16mm	3pcs	D		Allen Wrench M4	1pc
B		Split Lock Washers Ø1/4"	3pcs	E		Wooden Dowel Ø8*30mm	2pcs
C		Allen Bolts 1/4" *32mm	3pcs				

Step: 2

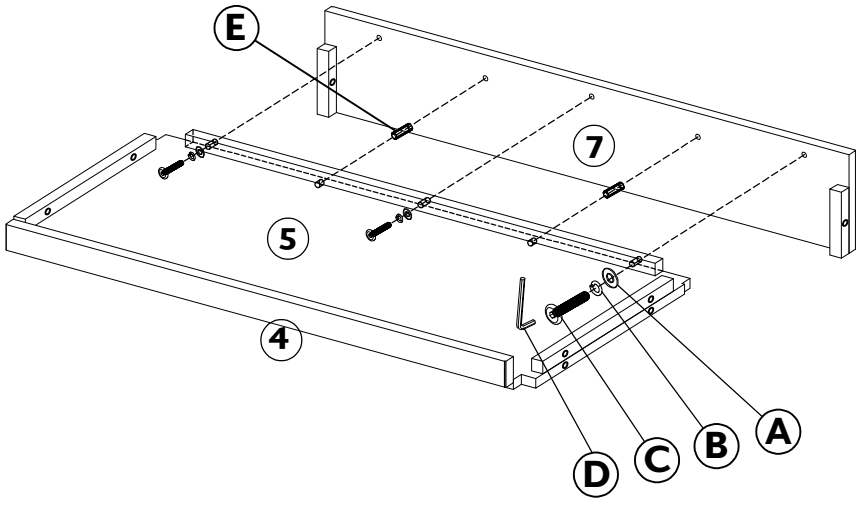


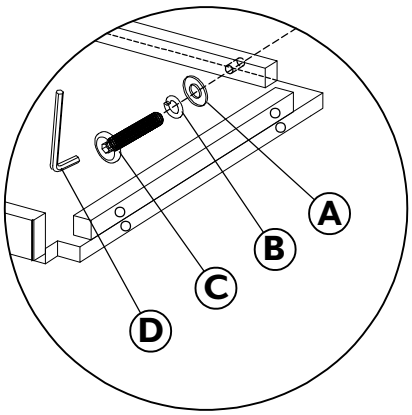

Hardware

A		Flat Washers Ø1/4" * 16mm	3pcs	D		Allen Wrench M4	1pc
B		Split Lock Washers Ø1/4"	3pcs	E		Wooden Dowel Ø8*30mm	2pcs
C		Allen Bolts 1/4" *32mm	3pcs				


Step: 3

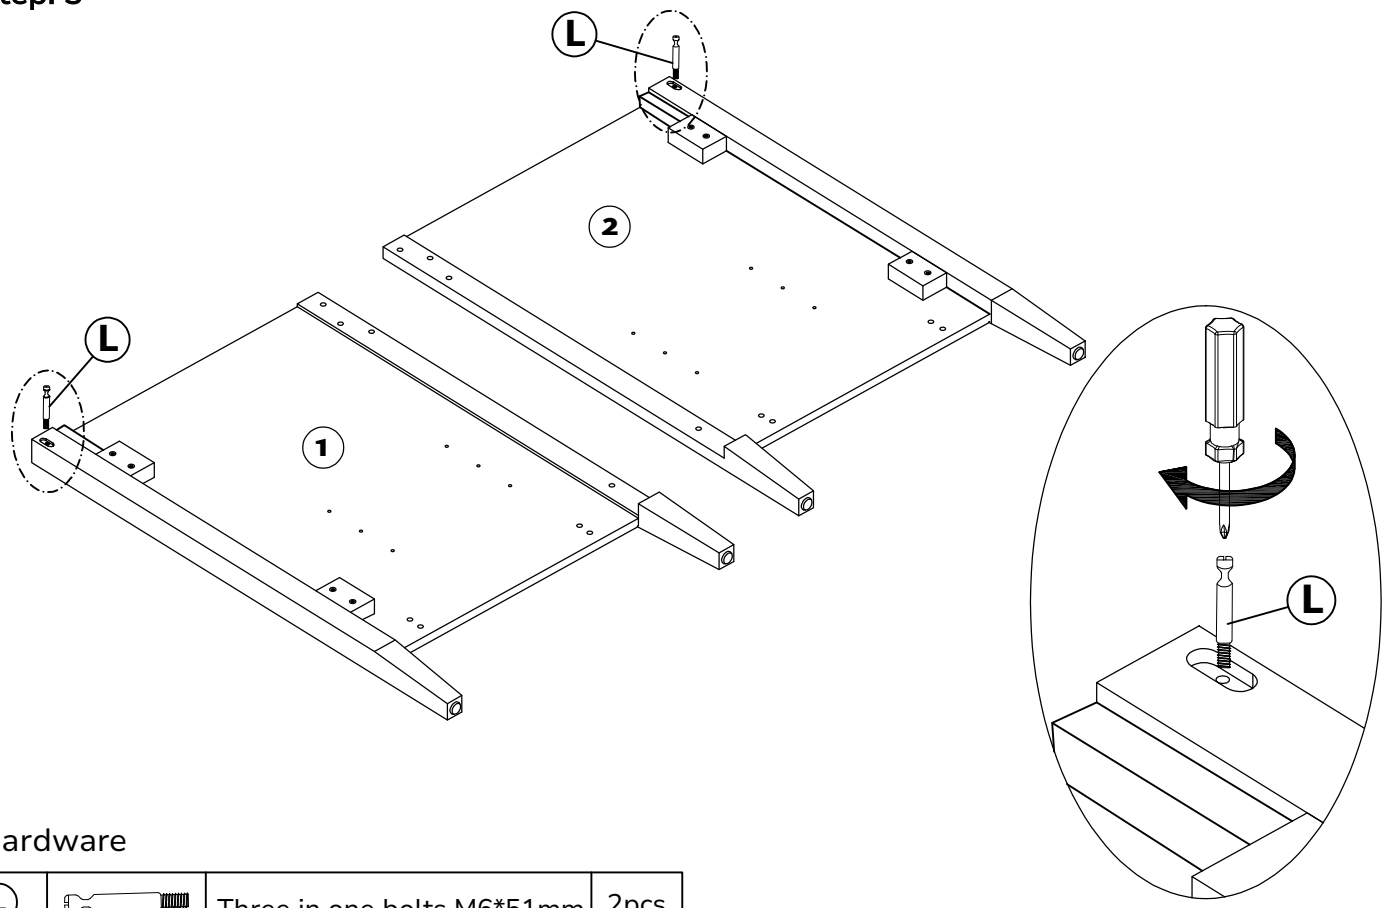


Hardware

L		Three in one bolts M6*51mm	2pcs

Step: 4

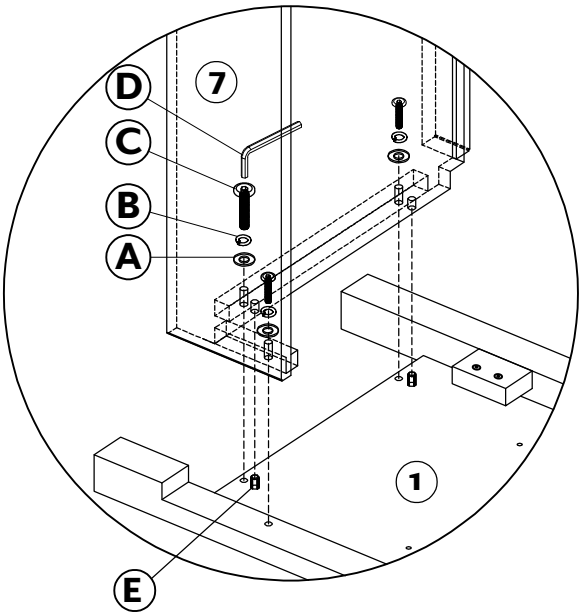


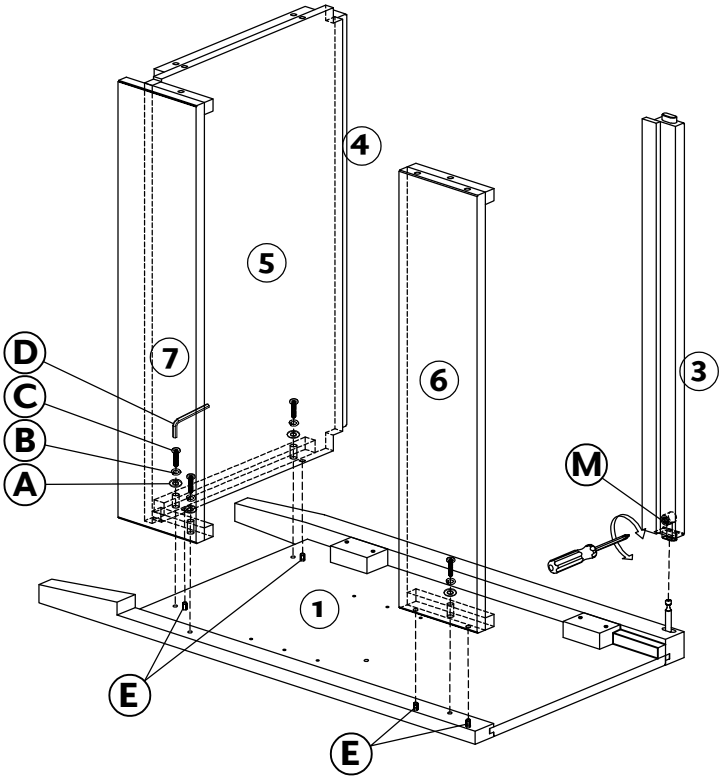


Hardware

A		Flat Washers Ø1/4" *16mm	4pcs	D		Allen Wrench M4	1pc
B		Split Lock Washers Ø1/4"	4pcs	E		Wooden Dowel Ø8*30mm	4pcs
C		Allen Bolts 1/4" *32mm	4pcs	M		Barrel Nut Ø15 *13mm	1pc

Step: 5

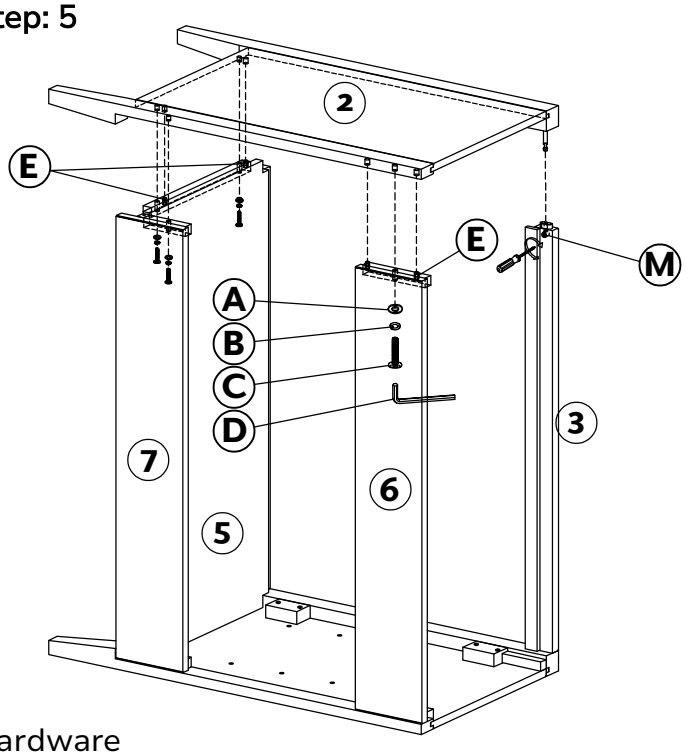


Insert wooden dowels and attach panels.
Then secure with bolts using Allen wrench.

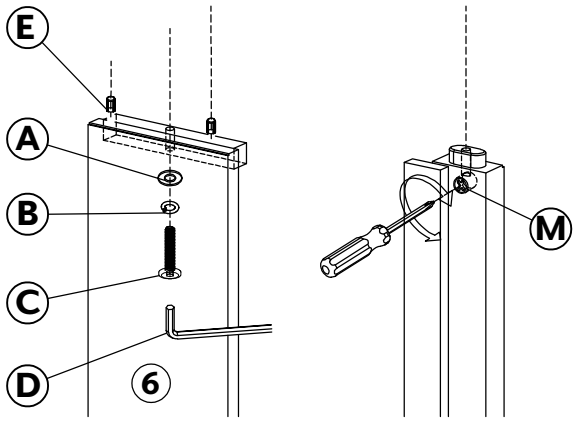

Hardware

A		Flat Washers Ø1/4" *16mm	4pcs	D		Allen Wrench M4	1pc
B		Split Lock Washers Ø1/4"	4pcs	E		Wooden Dowel Ø8*30mm	4pcs
C		Allen Bolts 1/4" *32mm	4pcs	M		Barrel Nut Ø15 *13mm	1pc

Step: 6

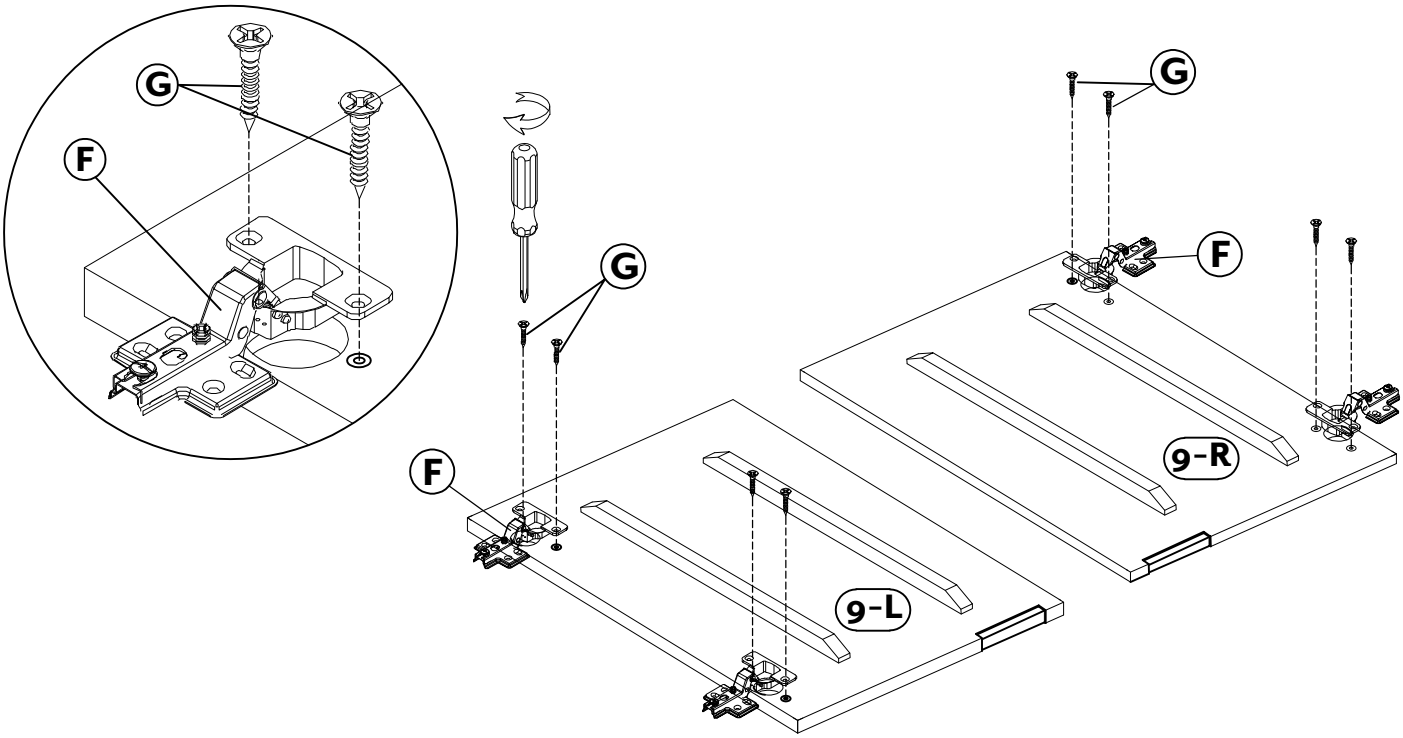



Hardware


F		Hinge	4pcs
G		Screws F3.5*15mm	8pcs

Step: 7


Install the left and right doors onto the cabinet by following steps 1,2 and 3 in order.

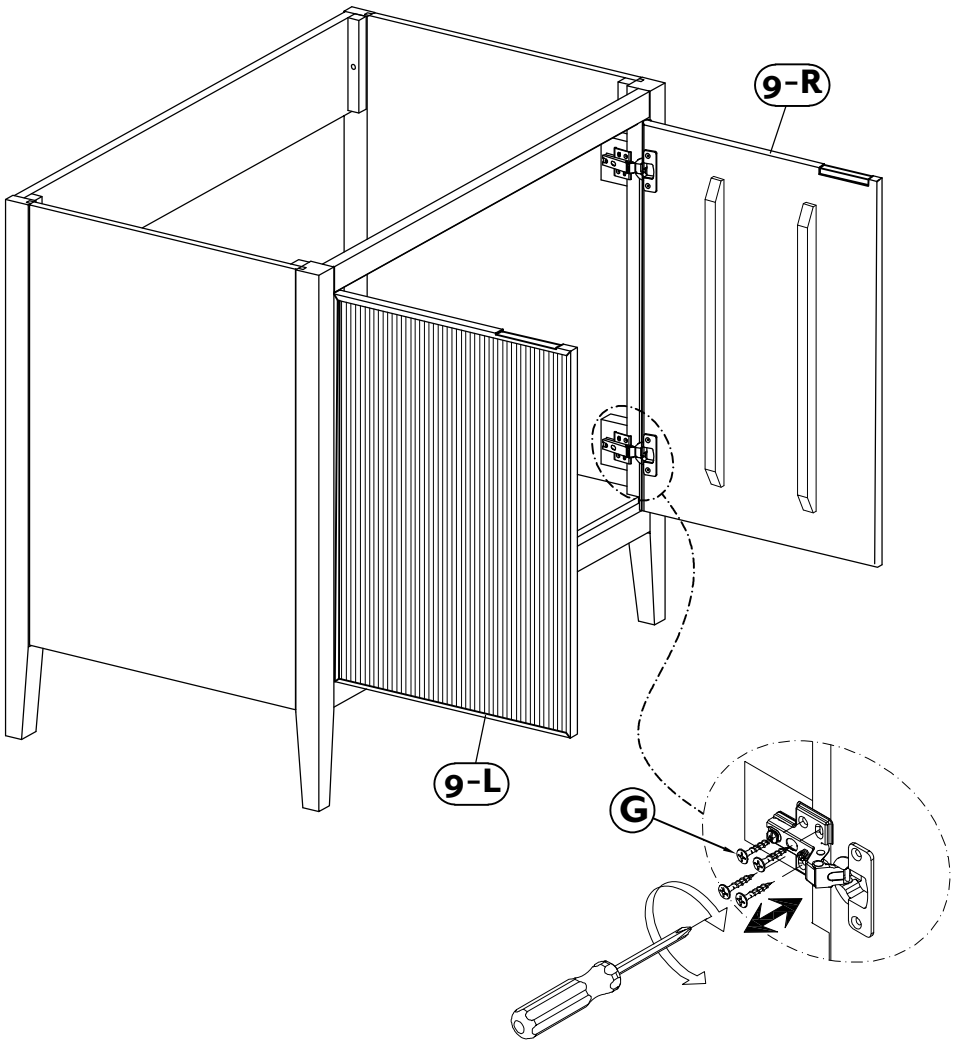

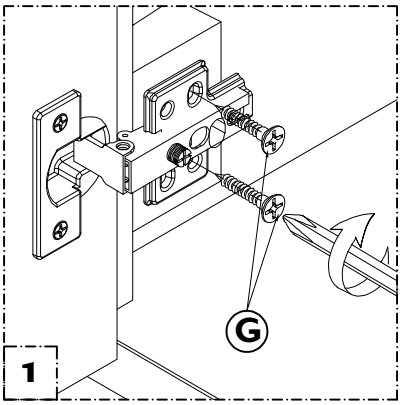

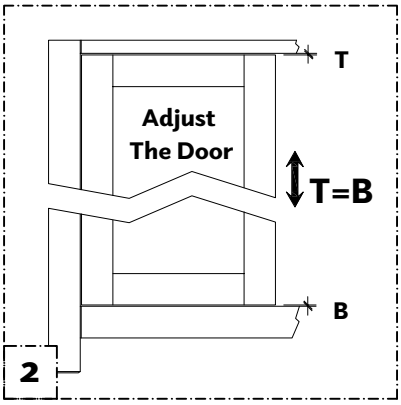


Adjust the gap between the top (T) and bottom (B) of the door to be consistent.

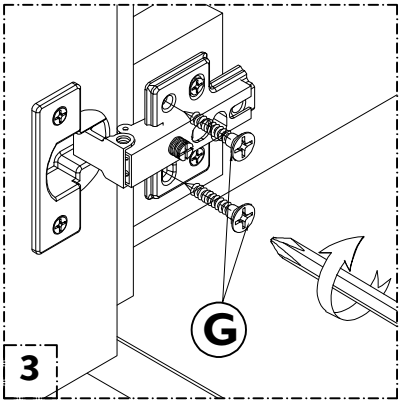


Hardware

G		Screws F3.5x15mm	16pcs

How to adjust your hinges to better align your doors

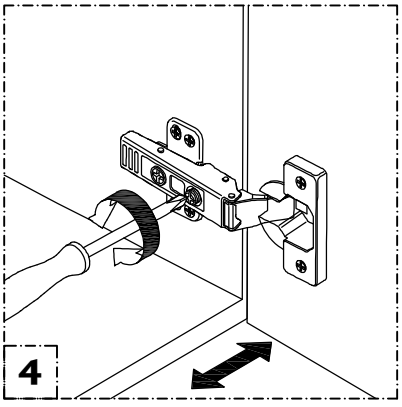


Adjust Laterally

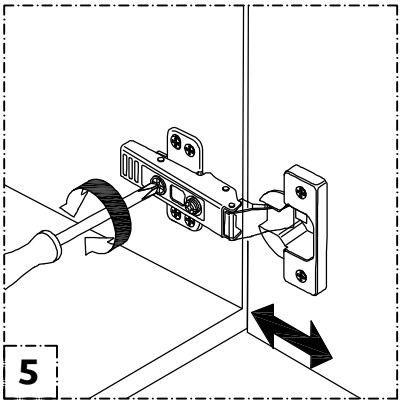

Adjust Depth

Step: 8

Attach the handles, and silicone bumpers

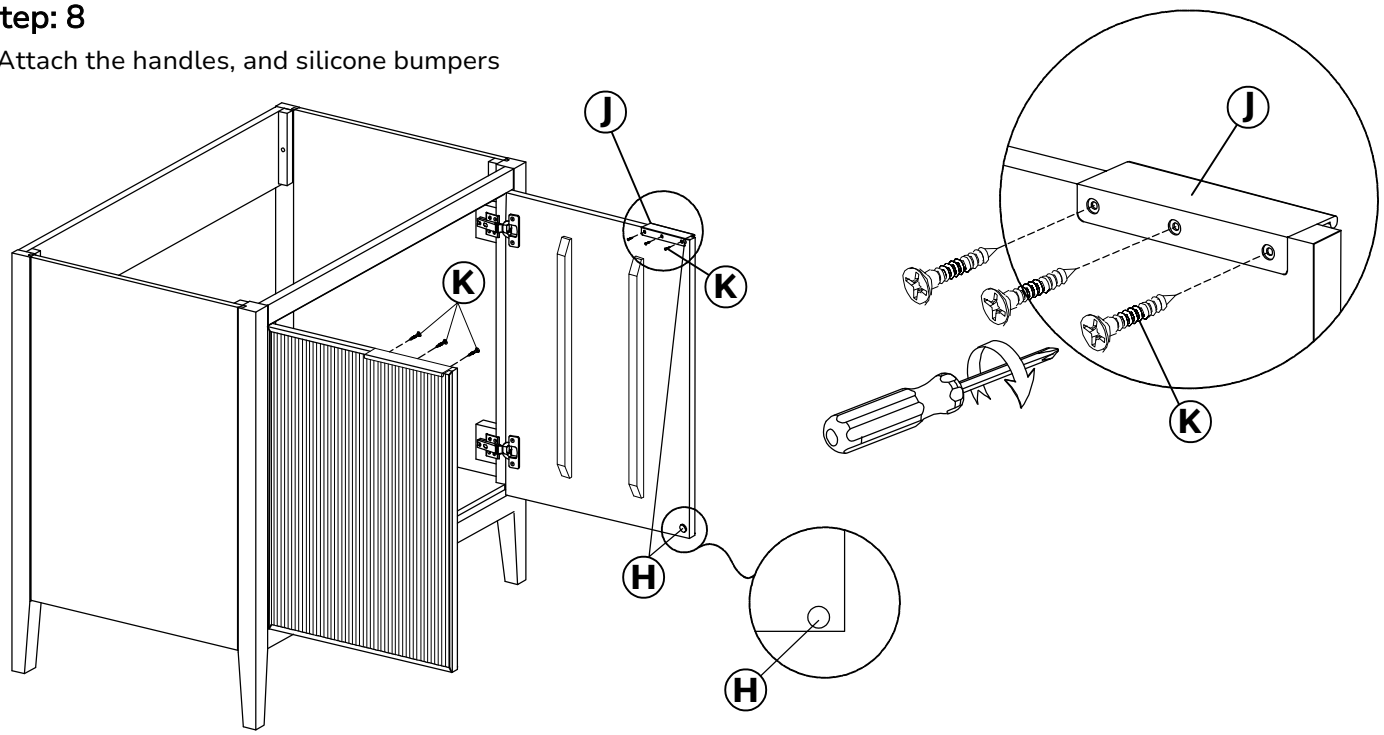


Hardware

H		Silicone Bumper Ø10*2mm	4pcs
J		Handle L165mm	2pcs
K		Screws F3.5*12mm	6pcs

Step: 9

Attach shelf L-brackets and insert shelf.

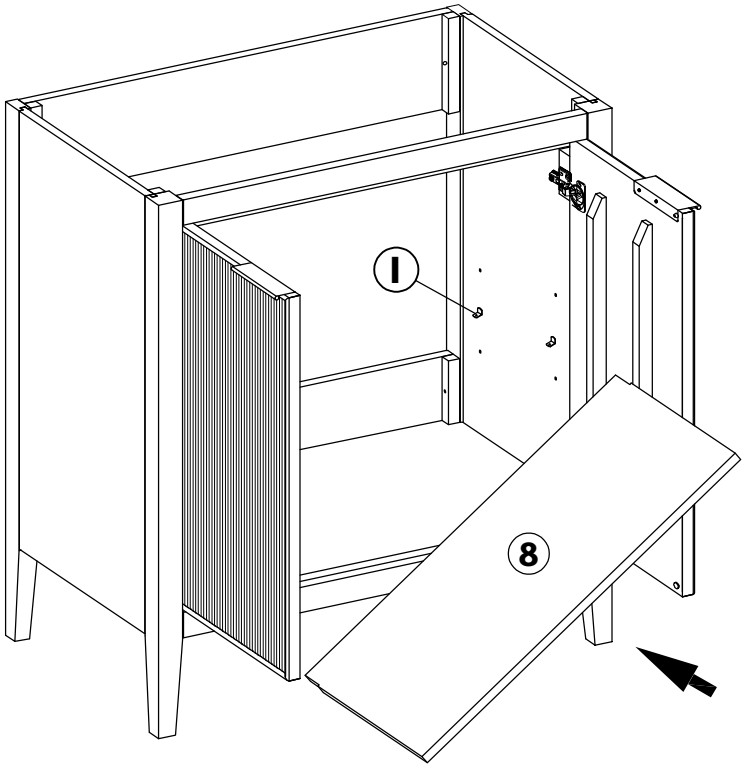


Hardware


I		Shelf L-Bracket	4pcs

Step: 10


Level the Vanity
Position the vanity in its final location, then install it on a level floor. An uneven surface can misalign or twist the cabinet. Use the adjustable foot levelers to correct any unevenness.


To check alignment, place the countertop on top of the cabinet, then place a level on the countertop and adjust the foot levelers until the vanity is level.

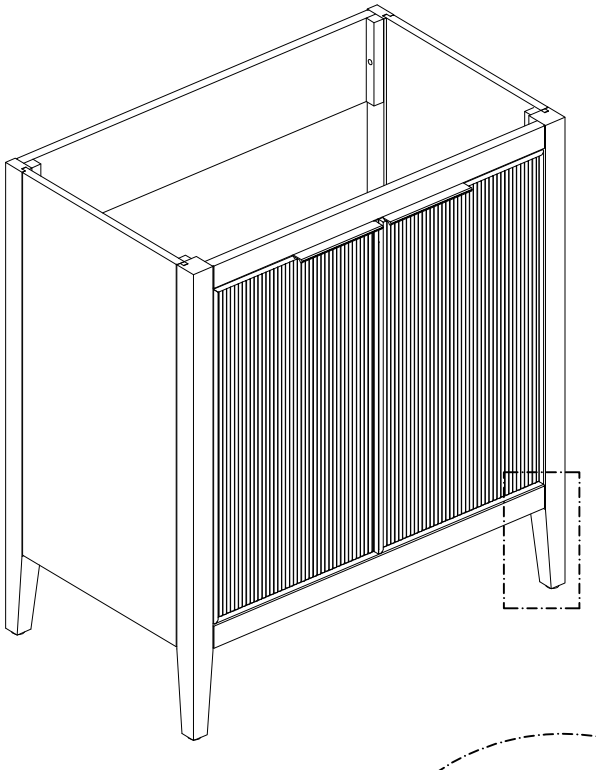

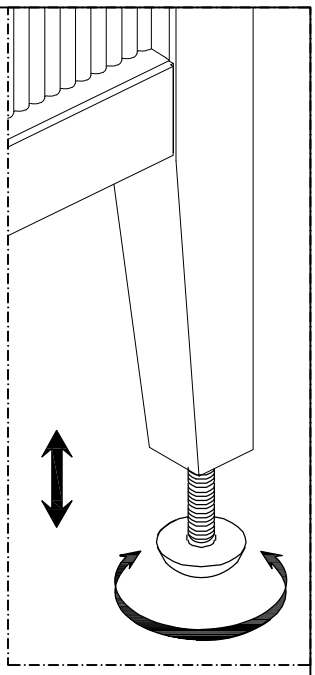

Step: 11

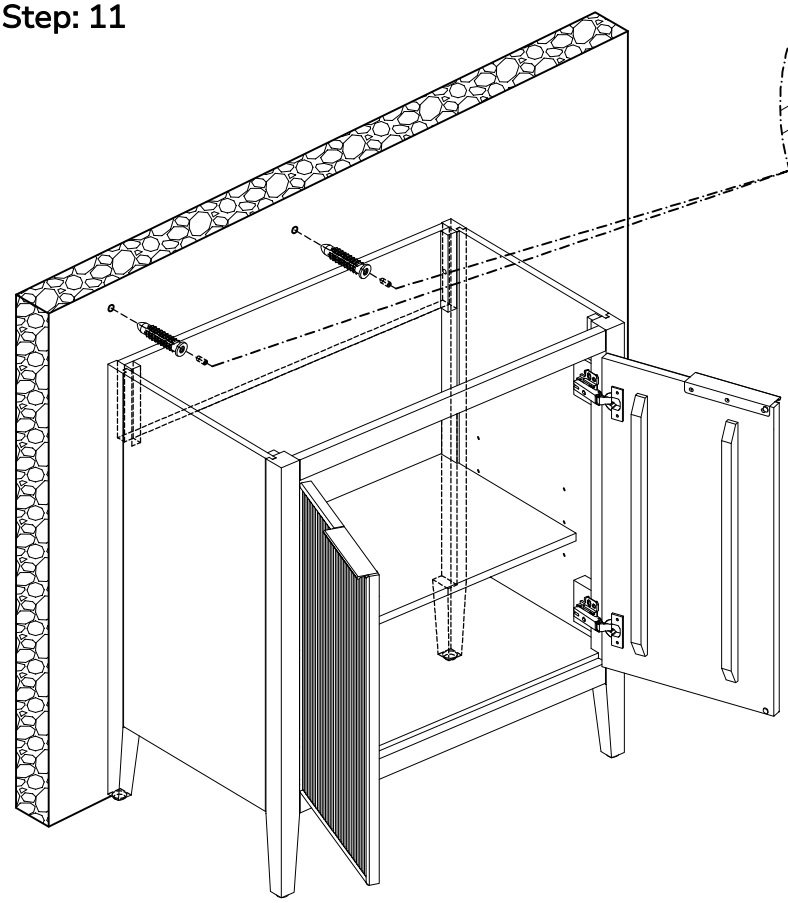

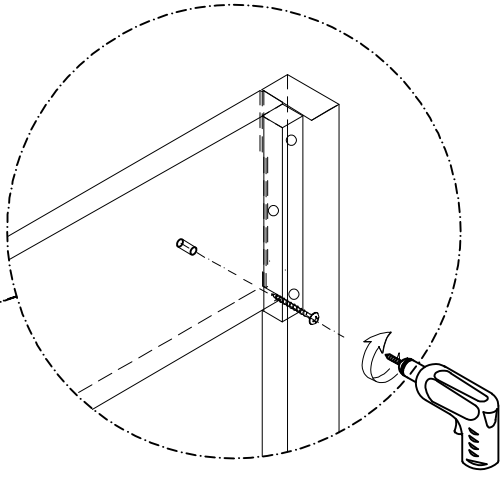


Secure Vanity to Wall
(Recommended - Hardware Not Included, select hardware appropriate for your wall type)

Once the vanity is level, use a stud finder to locate the wall studs behind the cabinet and mark their positions on the rear panel.

Drill through the rear panel at each marked stud and secure the vanity to the wall with screws suitable for your wall and stud material. If a mounting point does not align with a stud, use a wall anchor rated for the load.

Step: 12

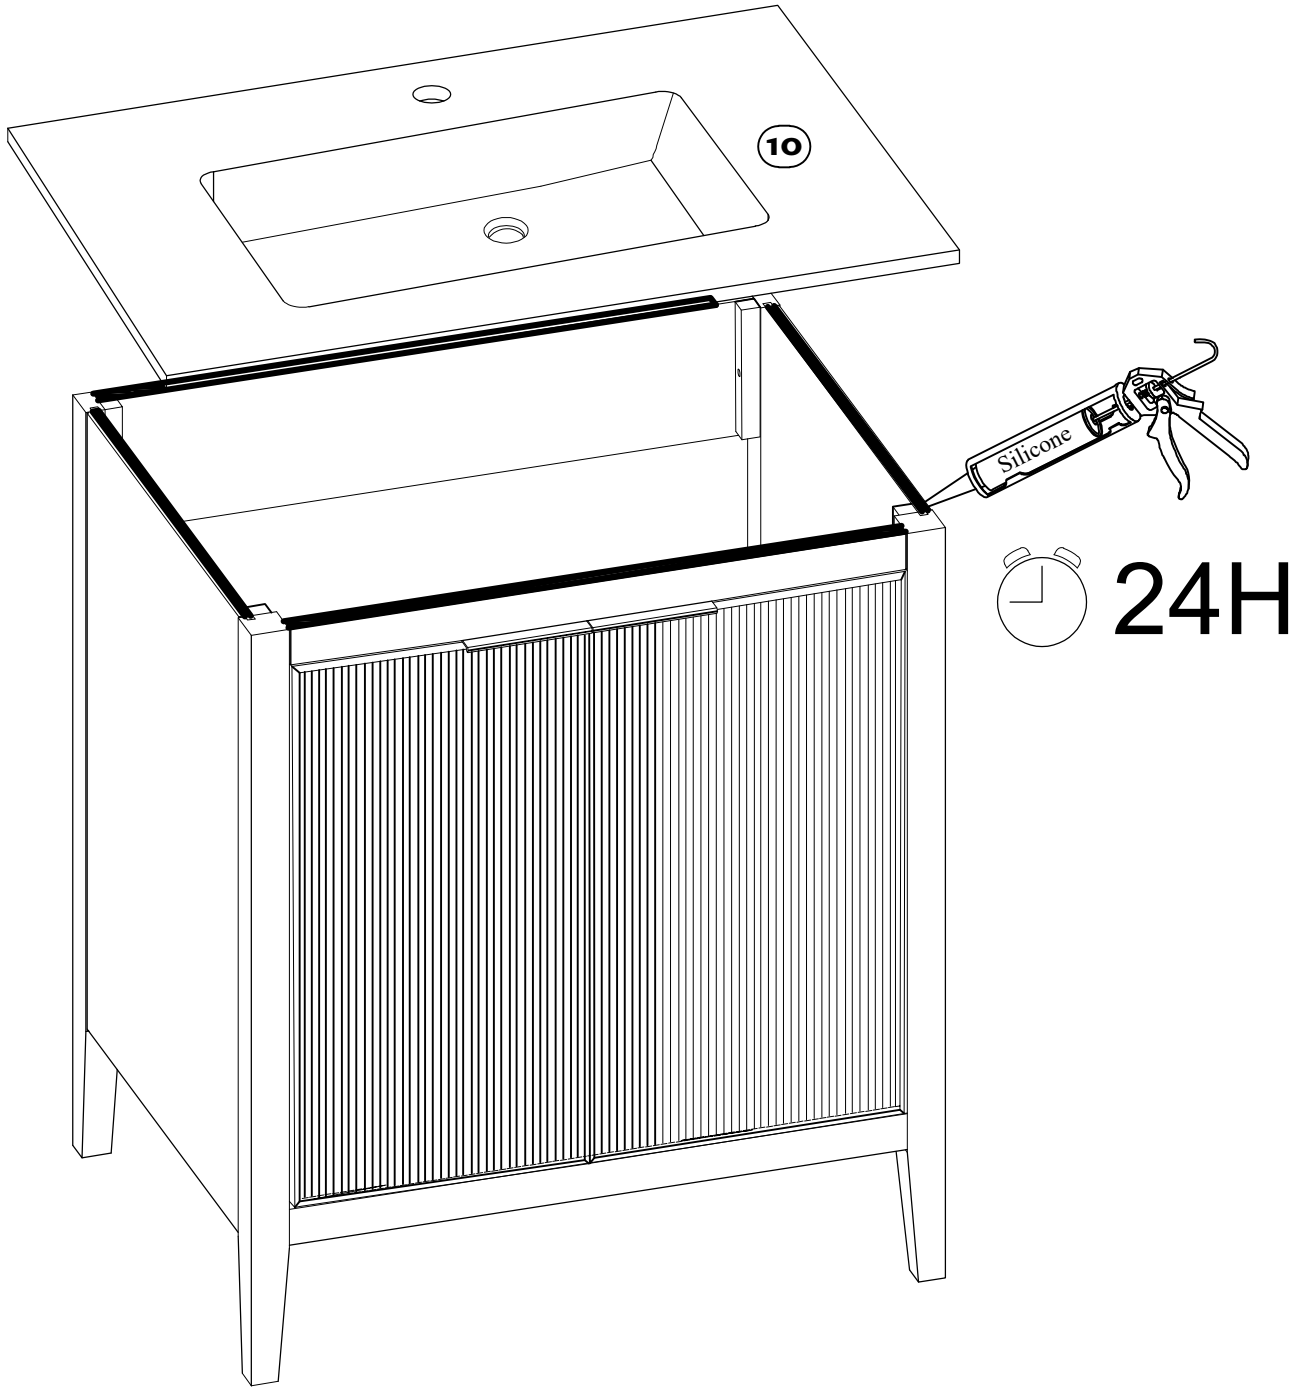


Apply a bead of silicone around all four sides of the top of the cabinet.
After installing the countertop, allow at least 24 hours for the silicone to cure.


Dimensions

Emma 30”

TOP VIEW

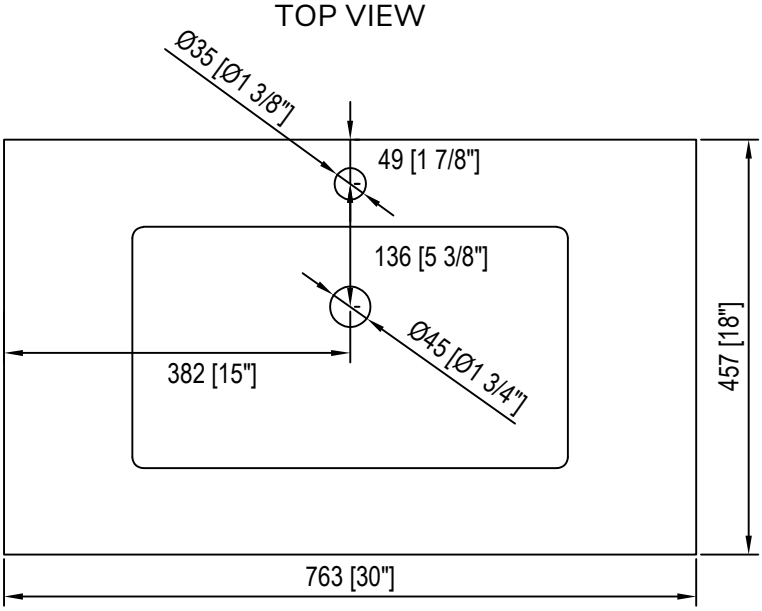


BACK VIEW

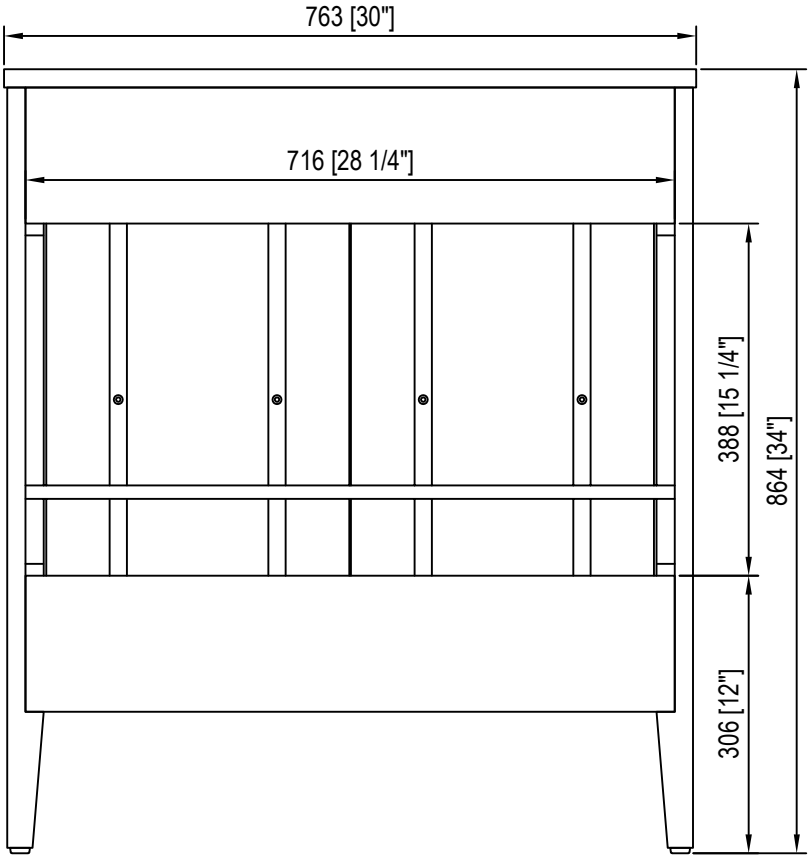


Dimensions

Emma 36”

TOP VIEW

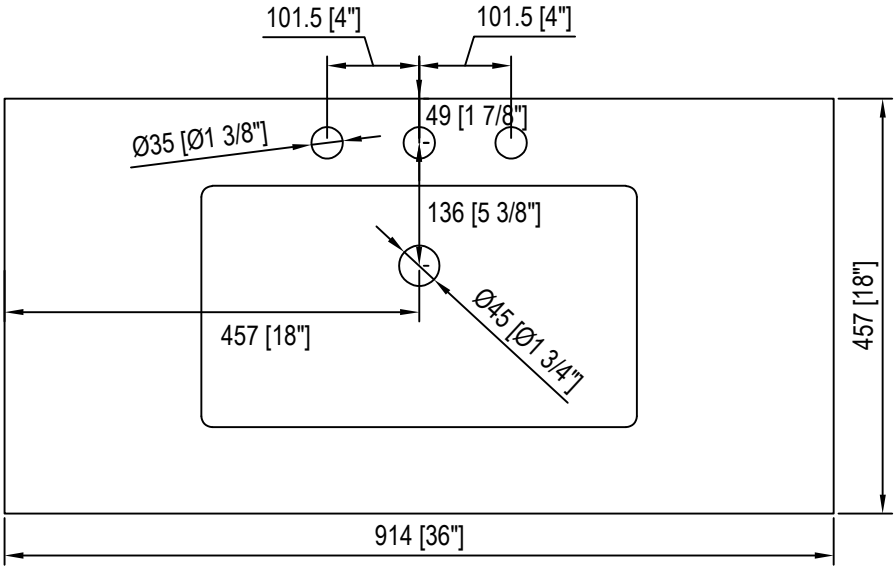

BACK VIEW

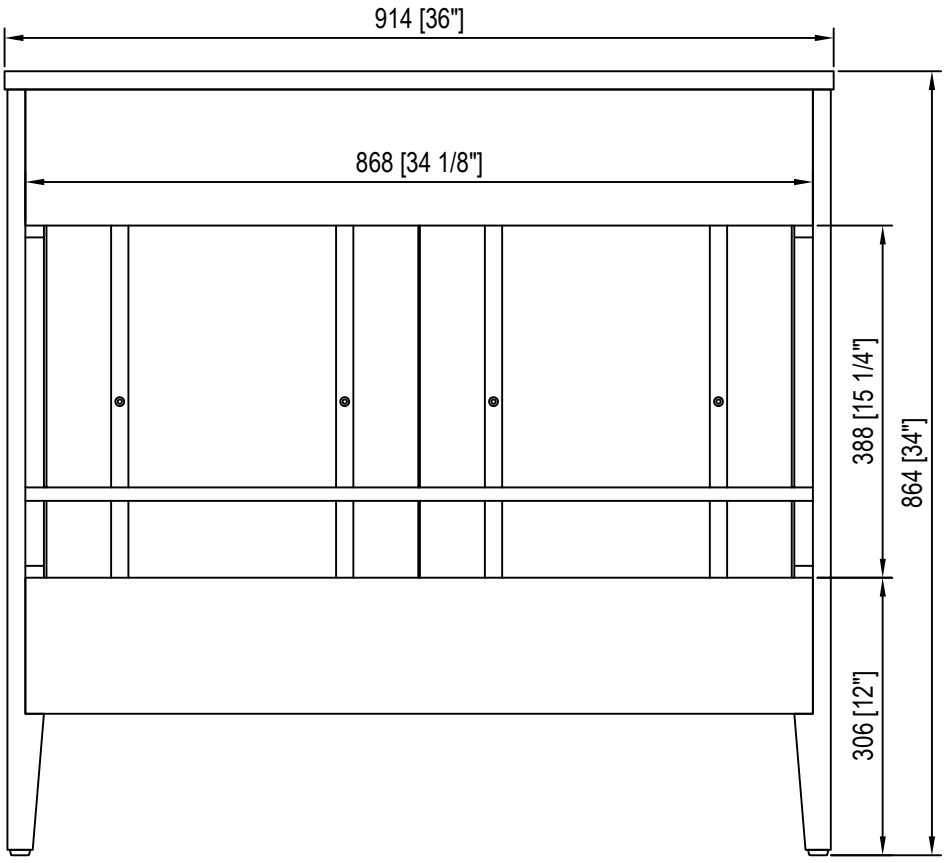

General Cleaning & Daily Care

- Dust regularly with a soft, dry cloth.
- Avoid the use of all chemicals, household cleaners and abrasives that may damage the cabinet finish.
- Avoid prolonged exposure to hydrogen peroxide, bleach, or other strong oxidizing agents and high-pH alkaline substances, as they may erode the surface over time, causing discoloration or an uneven, degraded finish. Wipe and rinse immediately if contact occurs.
- Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.

Countertop Usage & Protection

- Avoid placing hot appliances, such as curling or flat irons directly on the countertop.
- Avoid placing extremely heavy items on countertop.
- Avoid letting liquid or stains such as oil-based stains, hair dye, coffee, wine, juice and water spots/rings sit on the countertop for prolonged periods of time. They should be wiped up immediately.

Removing Stains

- For daily cleaning, use a mild neutral detergent or alcohol-based cleaners. However, avoid letting the detergent remain on the countertop surface for prolonged periods.

Removing Scratches, Chips & Repairs

- Larger scratches, chips, and resilient stains may require professional help. Please contact your local stonemason for details.