

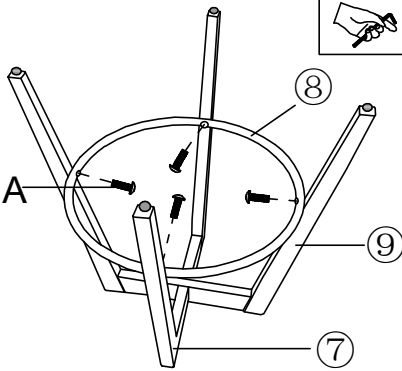
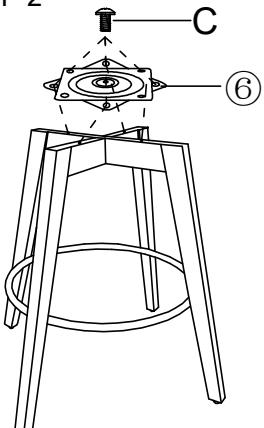
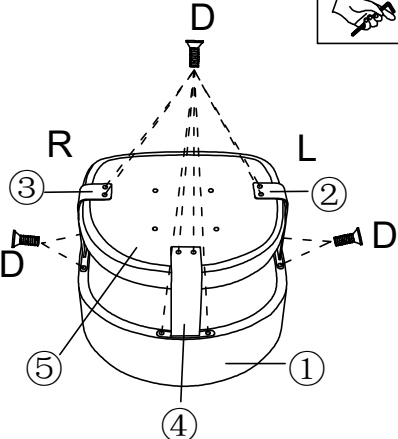
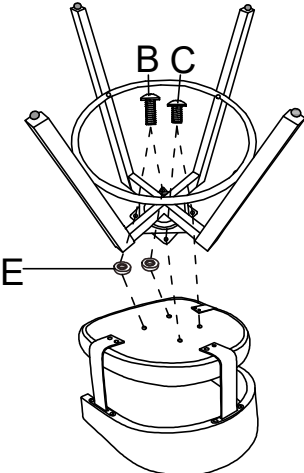


Assembly Instruction

①*1pc		A*4+1EXT	 M6*30MM
②*1pc		B*2+1EXT	 M6*20MM
③*1pc		C*6+1EXT	 M6*16MM
④*1pc		D*12+1EXT	 M6*18MM
⑤*1pc		E*2	
⑥*1pc		G*1	 M4-M6
⑦*1pc			
⑧*1pc			
⑨*1pc			

STEP 1 	STEP 2  Fasten All screws indicate on Step 1& Step2.	STEP 3 
STEP 4 	STEP 5 