

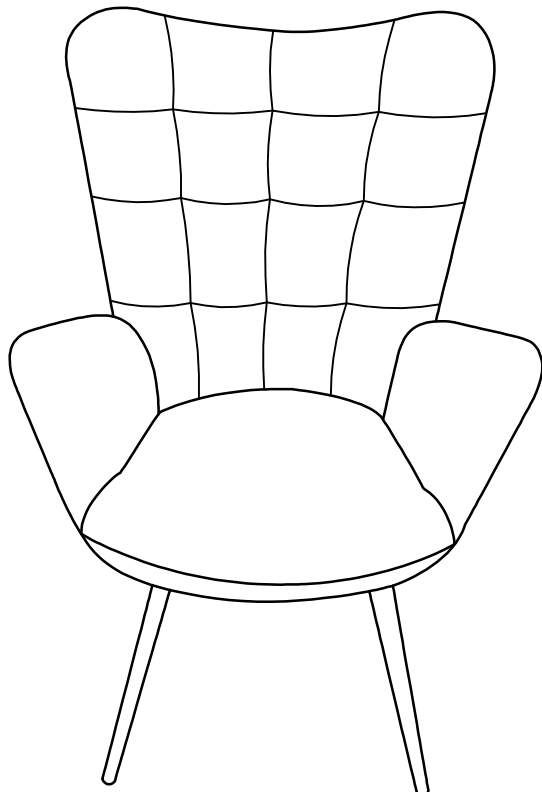
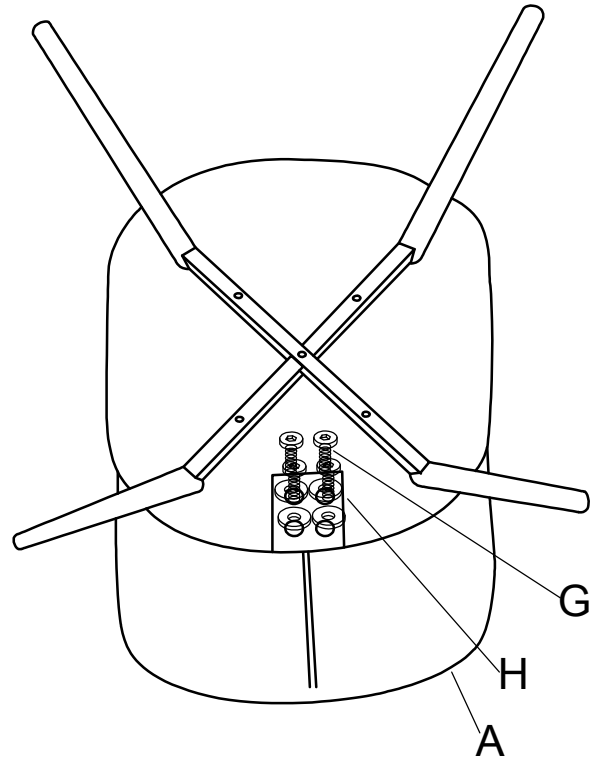


Einzelne Schrauben locker anziehen(ca.75%),
erst dann alle festziehen(100%).

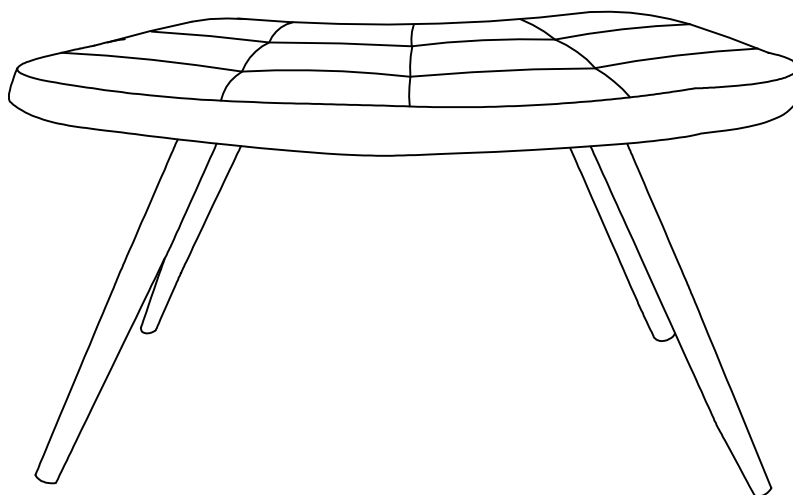

A	X1	B	X1
C	X1	D	X1
E M6x75mm X4		F M6x30mm X1	
G M6x25mm X4		H M6x16mm X8	
I	M5 X1		

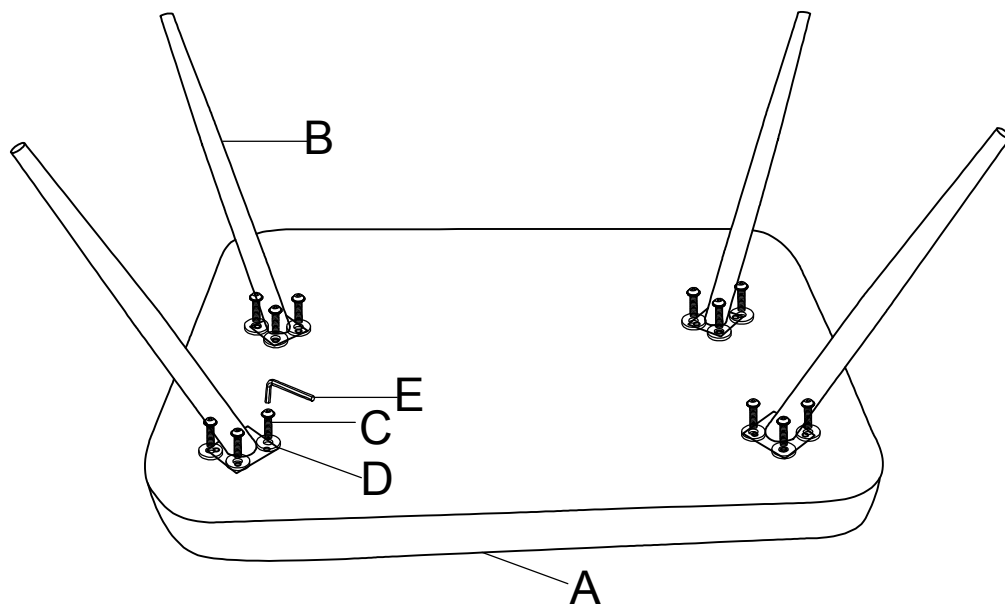

Ax1

Bx4

C M6X16mmX12

D M6X16mmX12

Ex1

