

ASSEMBLY INSTRUCTION

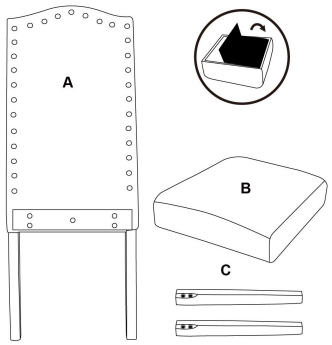


① Insert the screws in the holes, tighten the screws, but not too tight, 90% is OK.


Aline the screw holes for part A and part B. (The edges of part A and B should be flush with each other)

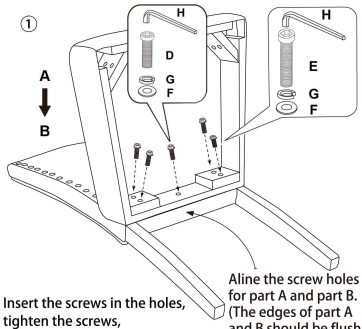


② Insert the screws in the holes, tighten the screws, but not too tight, 90% is OK.

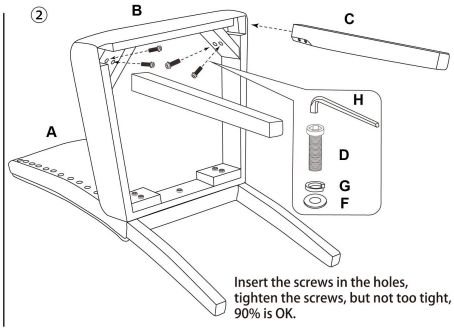


③ Use body weight to adjust balance of chair then tighten all the screws all the way.

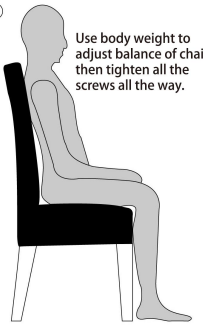


④ Tighten all the screws to 100%.

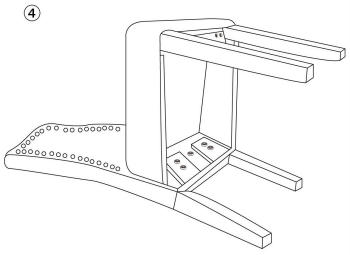

⑤ Fasten underseat cover.

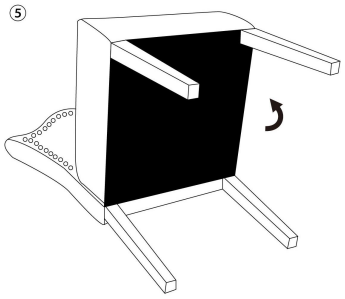

⑥ A few days after initial assembly, the product may acclimate to its new environment. Please ensure all screws are still securely tightened.

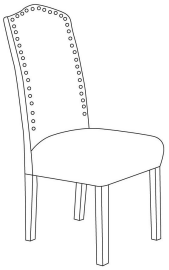

HARDWARE LIST

CODE	PARTS	QTY.
A	BACK	1
B	SEAT	1
C	FRONT LEG	2

HARDWARE LIST

CODE	PARTS	QTY.
D	M8X60MM	5
E	M8X80MM	4
F	FLAT WASHER	9
G	SPRING WASHER	9
H	ALLEN KEY	1

* Tool kit is in the seat *