

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com.

PREPARATION

* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

* If any part is missing or damaged, do not attempt to assemble the product.

* Estimated Assembly Time: 10 minutes.

* Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

OUTDOOR FURNITURE CARE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water.

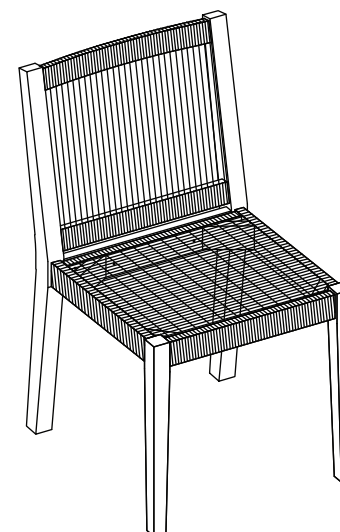
Dust regularly with small brush or vacuum.

Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.



Model# PAT7107

Product Dimensions: 19.69" W x 24.8" D x 35.0" H





Weight Capacity : 275 lbs

Warning : Do not stand on chair



Warning : Do not over torque bolts / screws

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Backrest Panel		1X
B	Seat panel		1X
C	Right Front Leg		1X
D	Left Front Leg		1X
HW1	Long Bolt:M6x0.5x95		4X
HW2	Medium:M6x0.5x50		4X
HW3	Short Bolt:M6x0.5x40		2X
HW4	Spring Washer:ø 6.5/14x2		10X
HW5	Flat Washers :ø 6.5/20x2		10X
HW6	Allen key		1X

PREPARATION

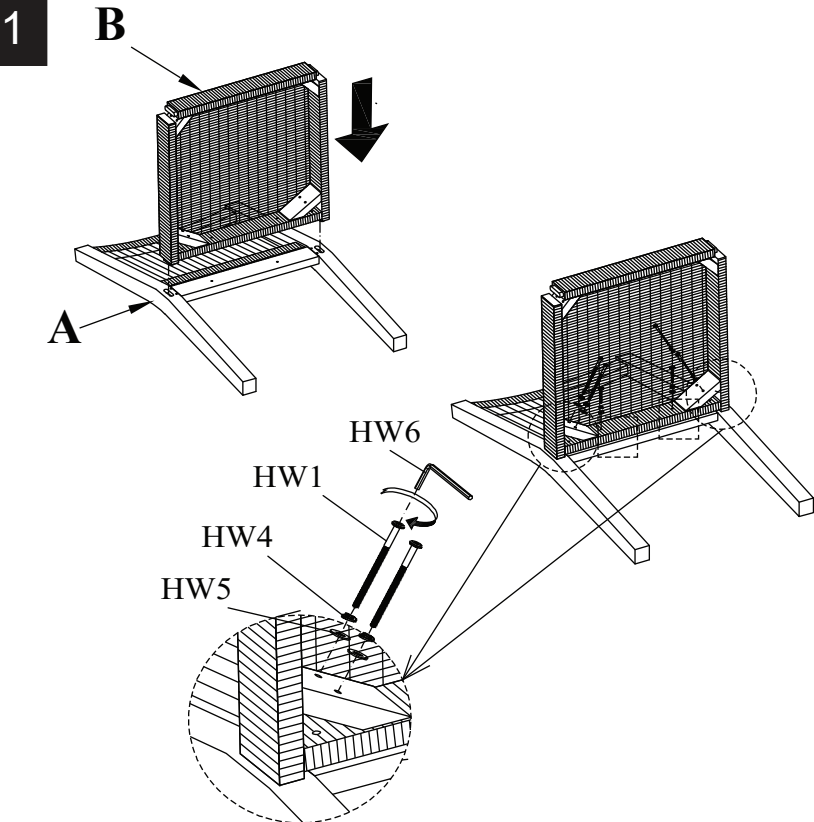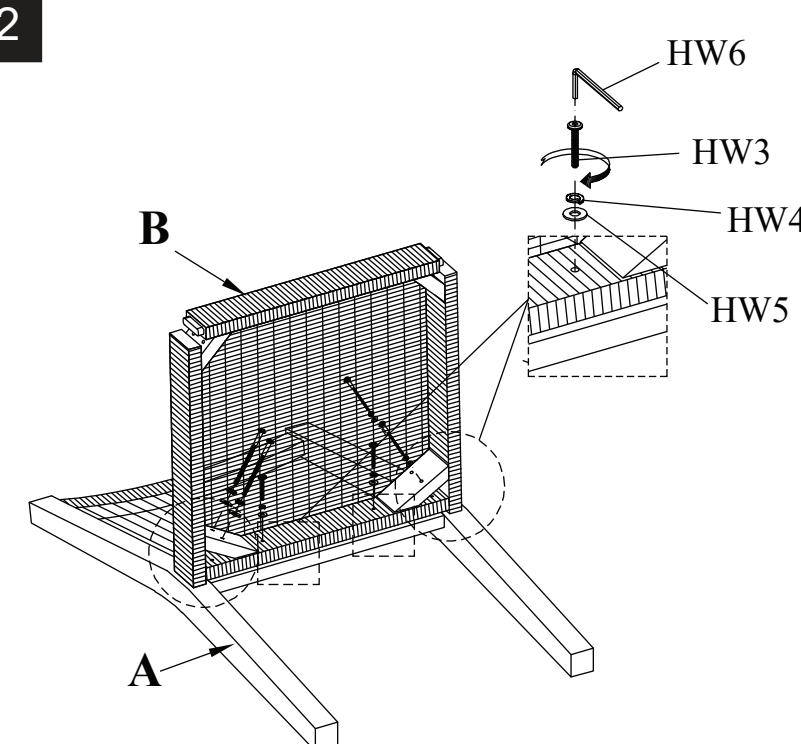
- *Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time : 10 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer care team is always here to help. Please email customersupport@safavieh.com

1 	2 
Step 1 Attach the Backrest Panel (A) to the Seat Panel (B) Place the Spring Washers (HW4) and the Flat Washers (HW5) onto the Bolts (HW1) in the order shown below. Attach them together by using the Allen Key (HW6) to screw in the Bolts (HW1) with the washers on it.	Step 2 Attach the Backrest Panel (A) to the Seat Panel (B) Place the Spring Washers (HW4) and the Flat Washers (HW5) onto the Bolts (HW3) in the order shown below. Attach them together by using the Allen Key (HW6) to screw in the Bolts (HW3) with the washers on it.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time : 10 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer care team is always here to help. Please email customersupport@safavieh.com

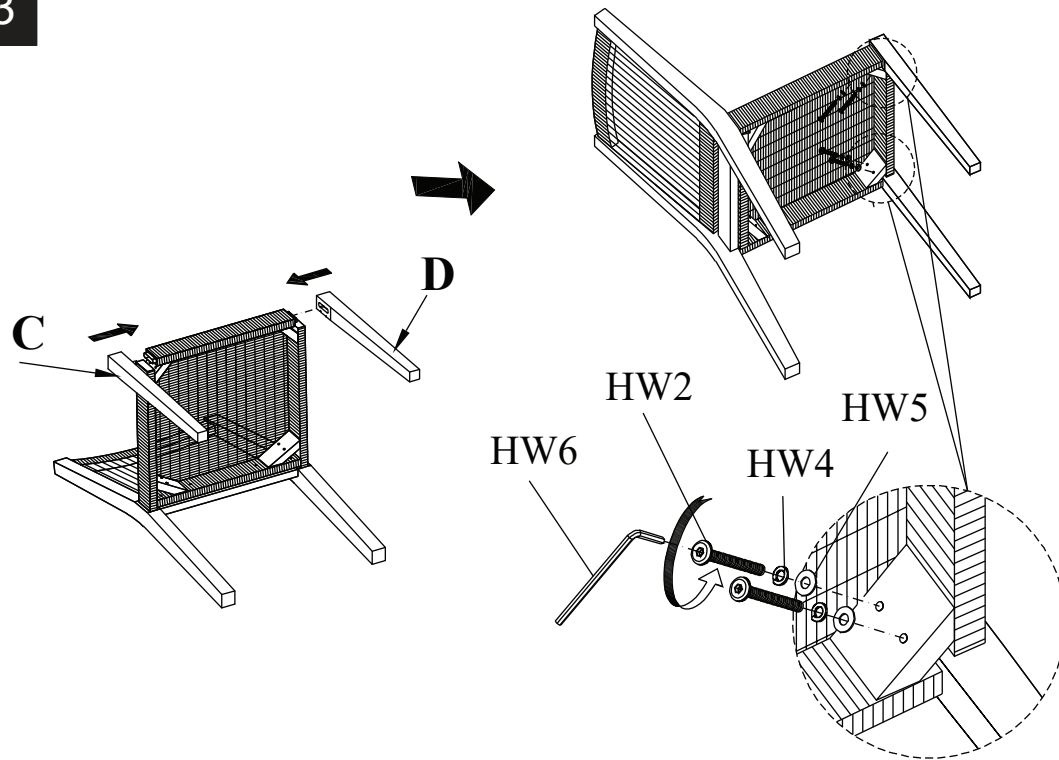
3



Step 3

Attach the Right Front Leg (C) and Left Front Leg (D) to the Seat Panel (B). Place the Spring Washers (HW4) and the Flat Washers (HW5) onto the Bolts (HW2) in the order shown below. Attach them together by using the Allen Key (HW6) to screw in the Bolts (HW2) with the washers on it.

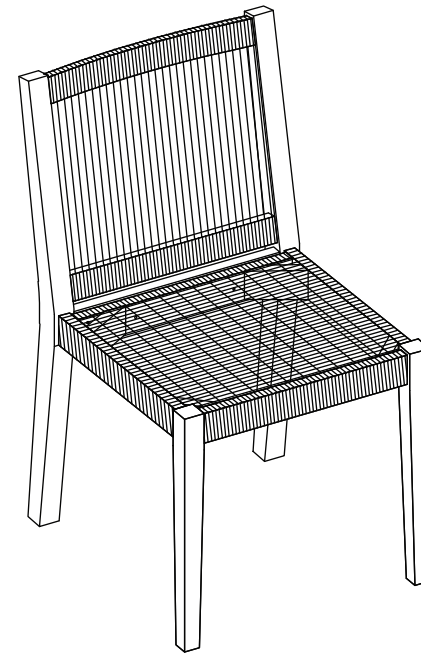4



Step 4

Turn the Chair right side up. Inspect the Chair and make sure all parts are adequately connected. In a sequential manner, tighten all Screws and Bolts at all joints.