


MEASURING GUIDE

To measure the entire width of your corner sofa, simply add the width of both sides together


135" - 198" wide overall

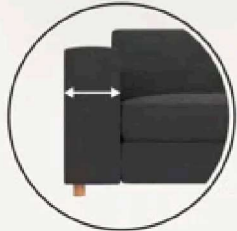

The armrest width is 10" max



There is enough room for the cardboards

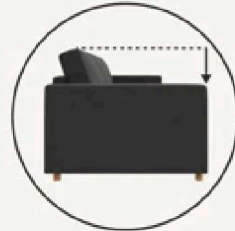

Armrests are lower than the back