


GA7009

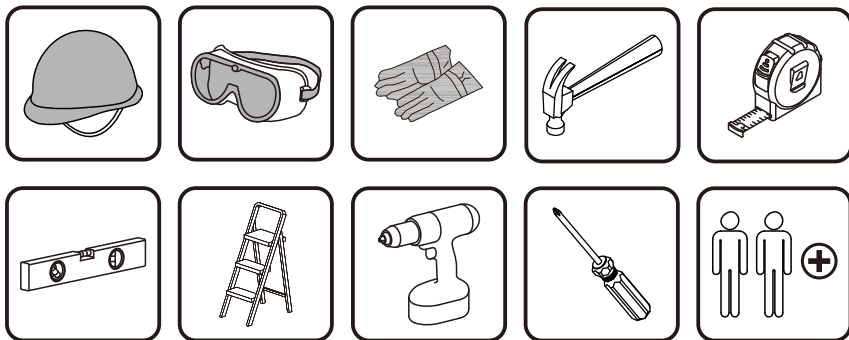


Tools Recommended


PART LIST (BOX 3)

PLATES


13 X4

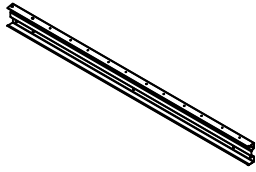



14 X4

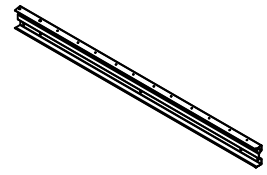


21L X2




21R X2

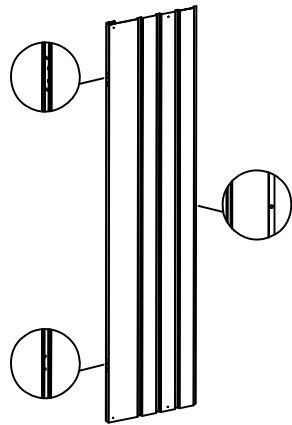


DLA X1

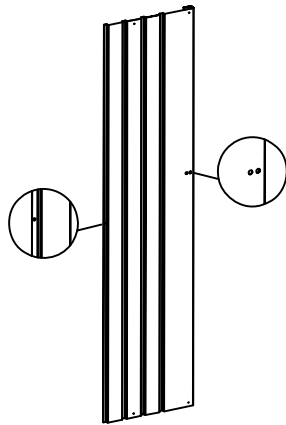

DLB X1

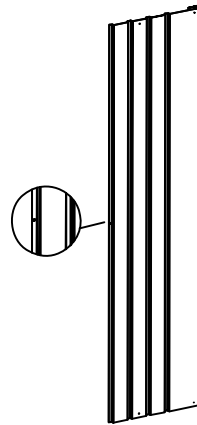


DRA X1

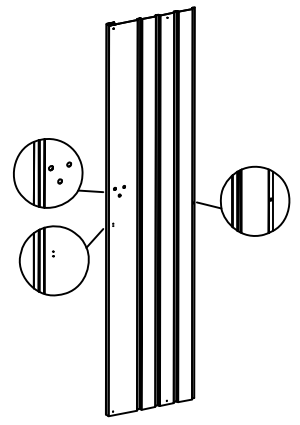


DRB X1


17 X4

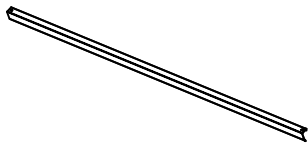


DX2 X4

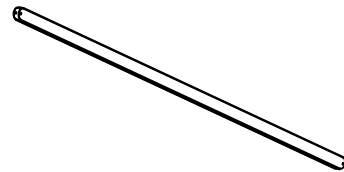


P1 X2

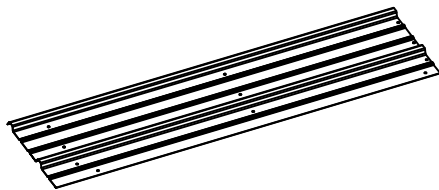


P2 X2

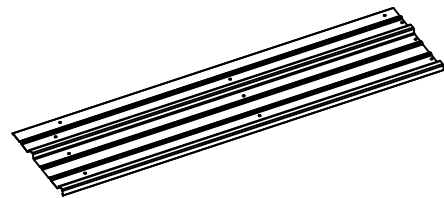

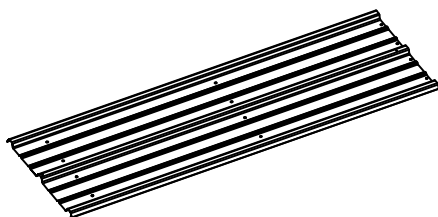


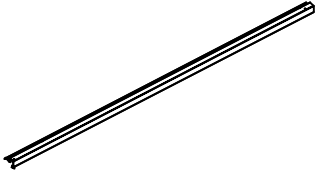








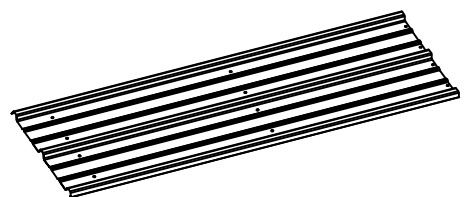


P3 X8









P3A X2




PLATES

		 19 X2	
 C4L X2	 C5 X4	 15 X2	
 20 X4	 C4R X2	 16 X2	
 DG X1	 DF X1	 DC X2	 DH X4
 V1 X108	 V2 X185	 GC X4	 GE X2

STANDARD

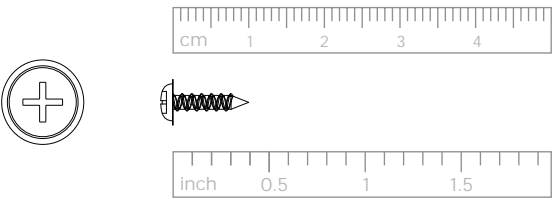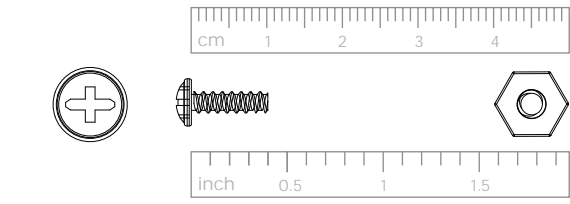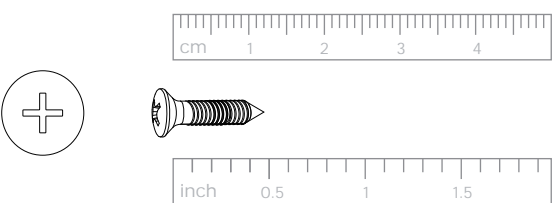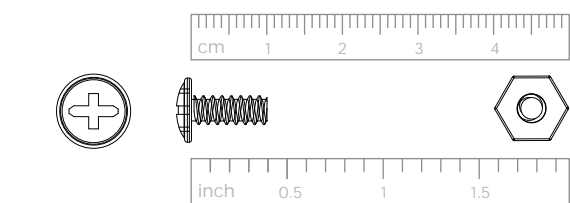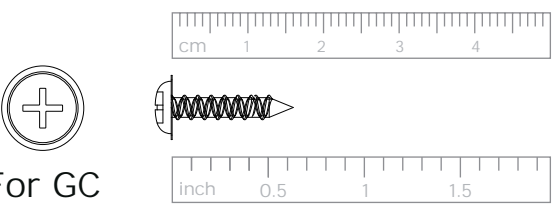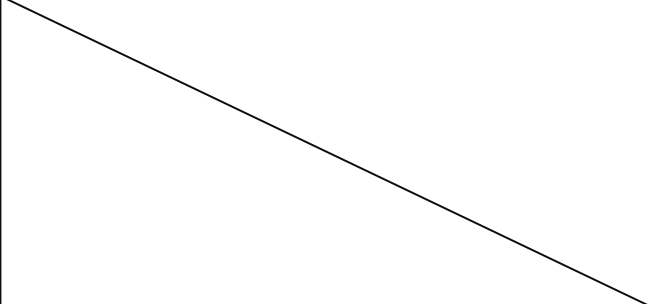
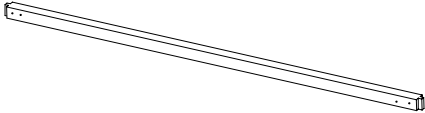


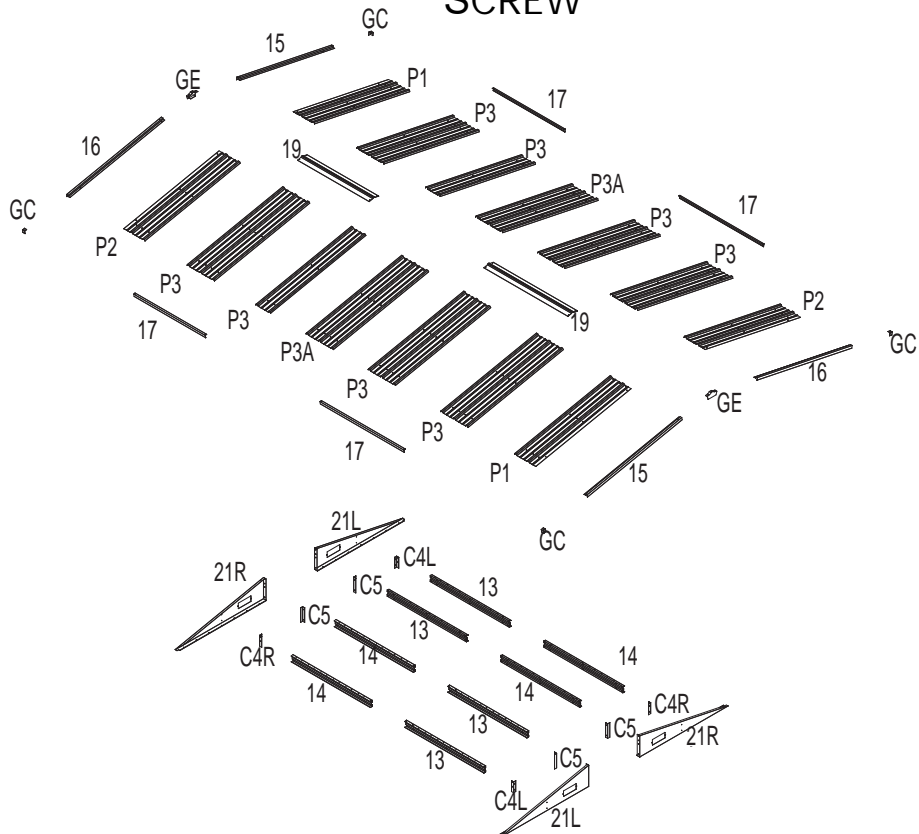




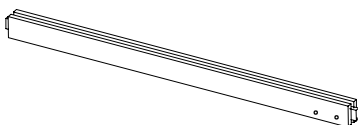
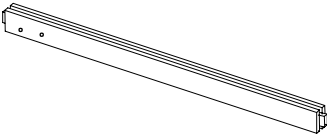

 <p>F1(X247) M4*10</p>	 <p>F2(X50) M4*10</p>
 <p>F3(X24) M5*12</p>	 <p>F4(X5) M6*10</p>
 <p>For GC F5(X4) M4*16</p>	







SCREW










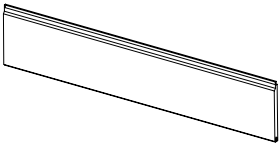

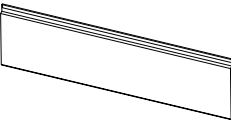

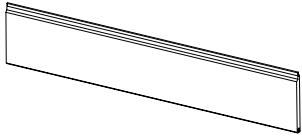
Please remove the shipping protective film of the product before installation


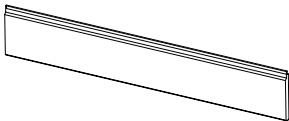






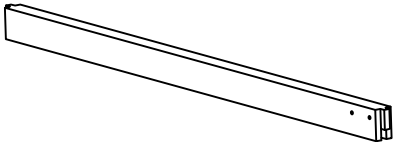
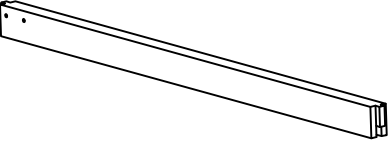
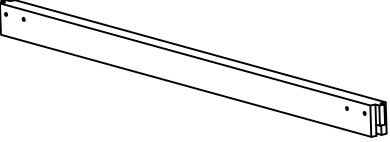
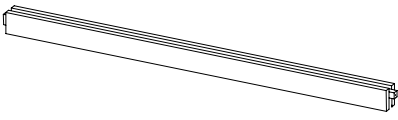
PART LIST (BOX 2)

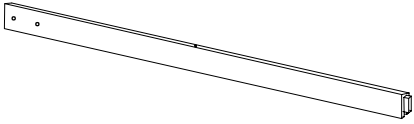
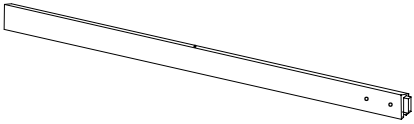
 1657*45*45mm	① X4	 1156*30*30mm	② X2	 1657*40*30mm	⑤ X1
 1657*40*30mm	AA X1	 1657*40*30mm	⑩ X2	 1672*40*30mm	⑪ X2
 1595*40*30mm	⑫ X2	 1680*40*30mm	⑳ X1	 1680*40*30mm	㉓ X1
 830*40*30mm	㉔ X2	 830*40*30mm	㉕ X2	 830*40*30mm	㉖ X2

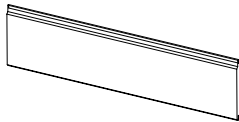





<div data-bbox="448 226 572 282" data-label="Text"> <p>④④ X1</p> </div>  <div data-bbox="129 624 331 667" data-label="Text"> <p>1680*65*30mm</p> </div>	<div data-bbox="895 226 1019 282" data-label="Text"> <p>④⑤ X1</p> </div>  <div data-bbox="576 624 778 667" data-label="Text"> <p>1680*65*30mm</p> </div>	<div data-bbox="1342 226 1466 282" data-label="Text"> <p>④⑥ X1</p> </div>  <div data-bbox="1023 624 1214 667" data-label="Text"> <p>830*65*30mm</p> </div>
<div data-bbox="448 672 572 728" data-label="Text"> <p>④⑦ X1</p> </div>  <div data-bbox="129 1070 320 1113" data-label="Text"> <p>830*65*30mm</p> </div>	<div data-bbox="895 672 1019 728" data-label="Text"> <p>④⑧ X4</p> </div>  <div data-bbox="576 1070 767 1113" data-label="Text"> <p>830*40*30mm</p> </div>	<div data-bbox="1342 672 1466 728" data-label="Text"> <p>②⑤ X84</p> </div>  <div data-bbox="1023 1070 1198 1113" data-label="Text"> <p>829*97*9mm</p> </div>

PART LIST (BOX 3)

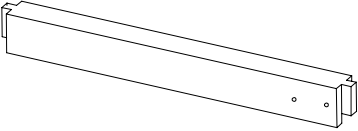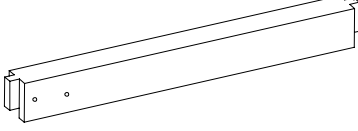
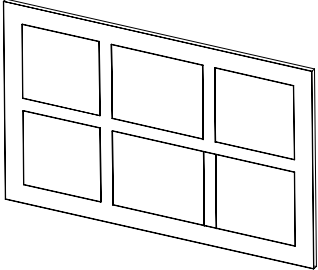
<p style="text-align: right;">③ X1</p>  <p>869.5*40*30mm</p>	<p style="text-align: right;">④ X1</p>  <p>869.5*40*30mm</p>	<p style="text-align: right;">⑥ X1</p>  <p>965*40*30mm</p>
<p style="text-align: right;">⑦ X4</p>  <p>965*40*30mm</p>	<p style="text-align: right;">⑧ X1</p>  <p>965*40*30mm</p>	<p style="text-align: right;">⑨ X2</p>  <p>827*318mm</p>
<p style="text-align: right;">⑳ X2</p>  <p>868.5*65*9mm</p>	<p style="text-align: right;">㉓ X32</p>  <p>868.5*97*9mm</p>	<p style="text-align: right;">㉔ X6</p>  <p>829*65*9mm</p>
<p style="text-align: right;">㉕ X4</p>  <p>829*97*9mm</p>	<p style="text-align: right;">㉖ X3</p>  <p>964*65*9mm</p>	<p style="text-align: right;">㉗ X48</p>  <p>964*97*9mm</p>

<p style="text-align: right;">②⑧ X2</p>  <p>868.5*67*9mm</p>	<p style="text-align: right;">②⑨ X6</p>  <p>829*67*9mm</p>	<p style="text-align: right;">③⑩ X3</p>  <p>964*67*9mm</p>
<p style="text-align: right;">③③ X1</p>  <p>830*40*30mm</p>	<p style="text-align: right;">③④ X1</p>  <p>830*40*30mm</p>	<p style="text-align: right;">③⑤ X1</p>  <p>965*40*30mm</p>
<p style="text-align: right;">③⑥ X1</p>  <p>965*40*30mm</p>	<p style="text-align: right;">③⑦ X1</p>  <p>965*40*30mm</p>	<p style="text-align: right;">③⑧ X1</p>  <p>965*50*30mm</p>
<p style="text-align: right;">③⑨ X1</p>  <p>965*50*30mm</p>	<p style="text-align: right;">④⑩ X1</p>  <p>965*50*30mm</p>	<p style="text-align: right;">④⑨ X2</p>  <p>869.5*40*30mm</p>



⑤① X1	⑤② X1
	
869.5*50*30mm	869.5*50*30mm

A x22+ (1) M4*50mm 	B x138+ (2) M4*20mm 	C x18 	D x4 
E x4 ø8*180mm 	F x8 		



Box 1		Box 1		Box 3	
Part#	Qty	Part#	Qty	Part#	Qty
13	4	F1	247	3	1
14	4	F2	50	4	1
21L	2	F3	24	6	1
21R	2	F4	5	7	1
DLA	1	F5	4	8	1
DLB	1			9	2
DRA	1			22	2
DRB	1			23	32
17	4			24	6
DX2	4			25	4
P1	2			26	3
P2	2			27	48
P3	8			28	2
P3A	2			29	6
19	2			30	3
C4L	2			33	1
C5	4			34	1
15	2			35	1
20	4			36	1
C4R	2			37	1
16	2			38	1
DG	1			39	1
DF	1			40	1
DC	2			49	2
DH	4			50	1
V1	108			51	1
V2	185			A	23
GC	4			B	140
GE	2			C	18
				D	4
				E	4
				F	8

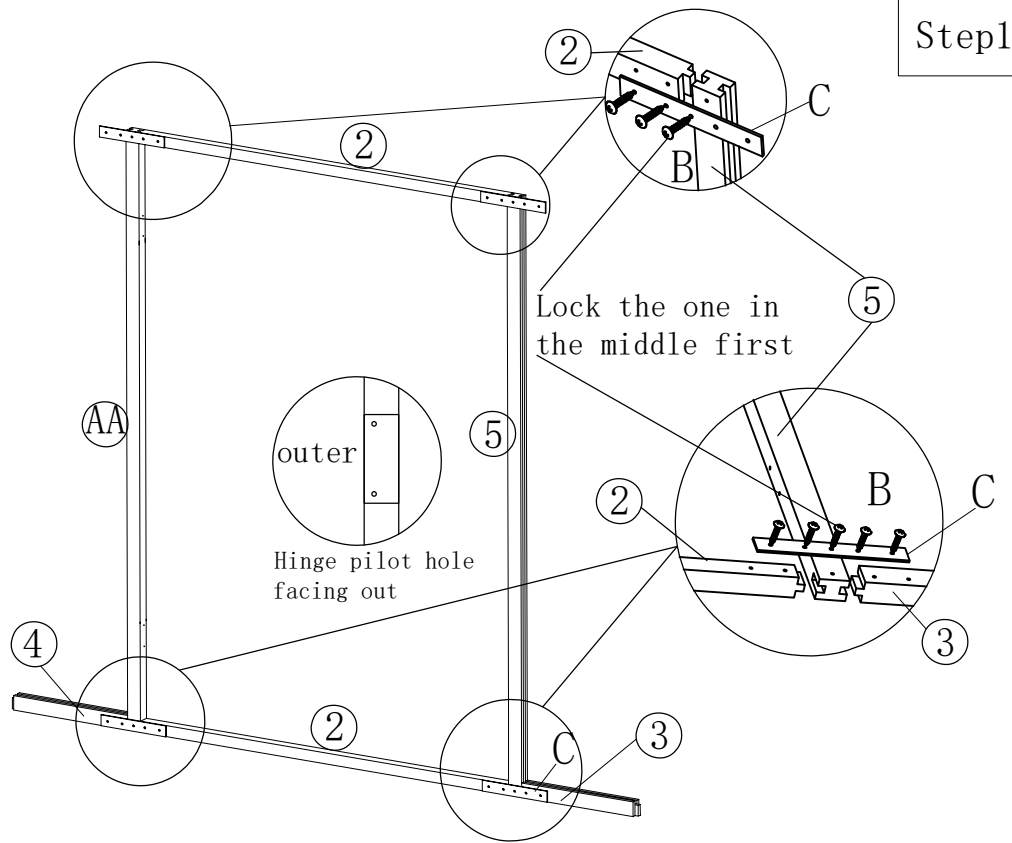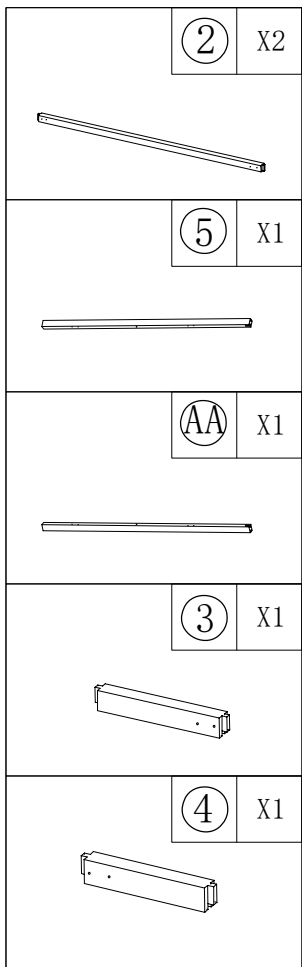


B		M4*20mm	x16
C		/	x4

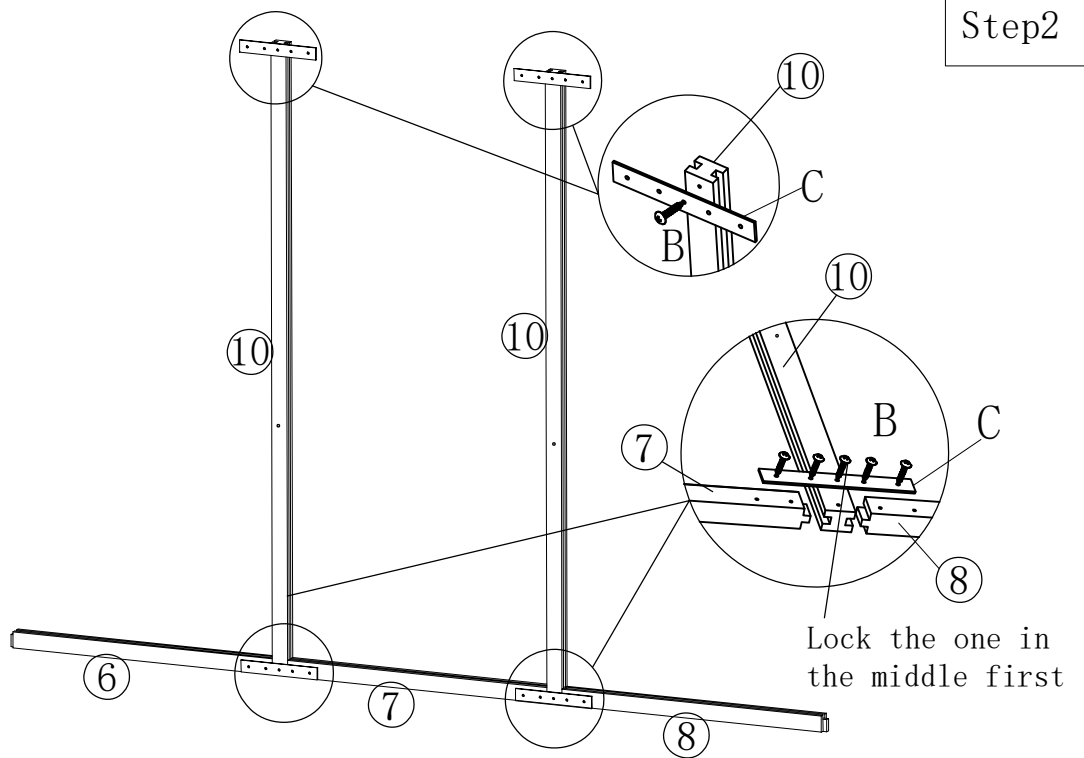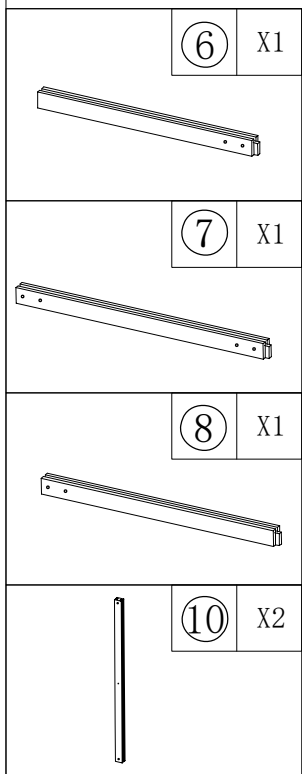

B		M4*20mm	x12
C		/	x4

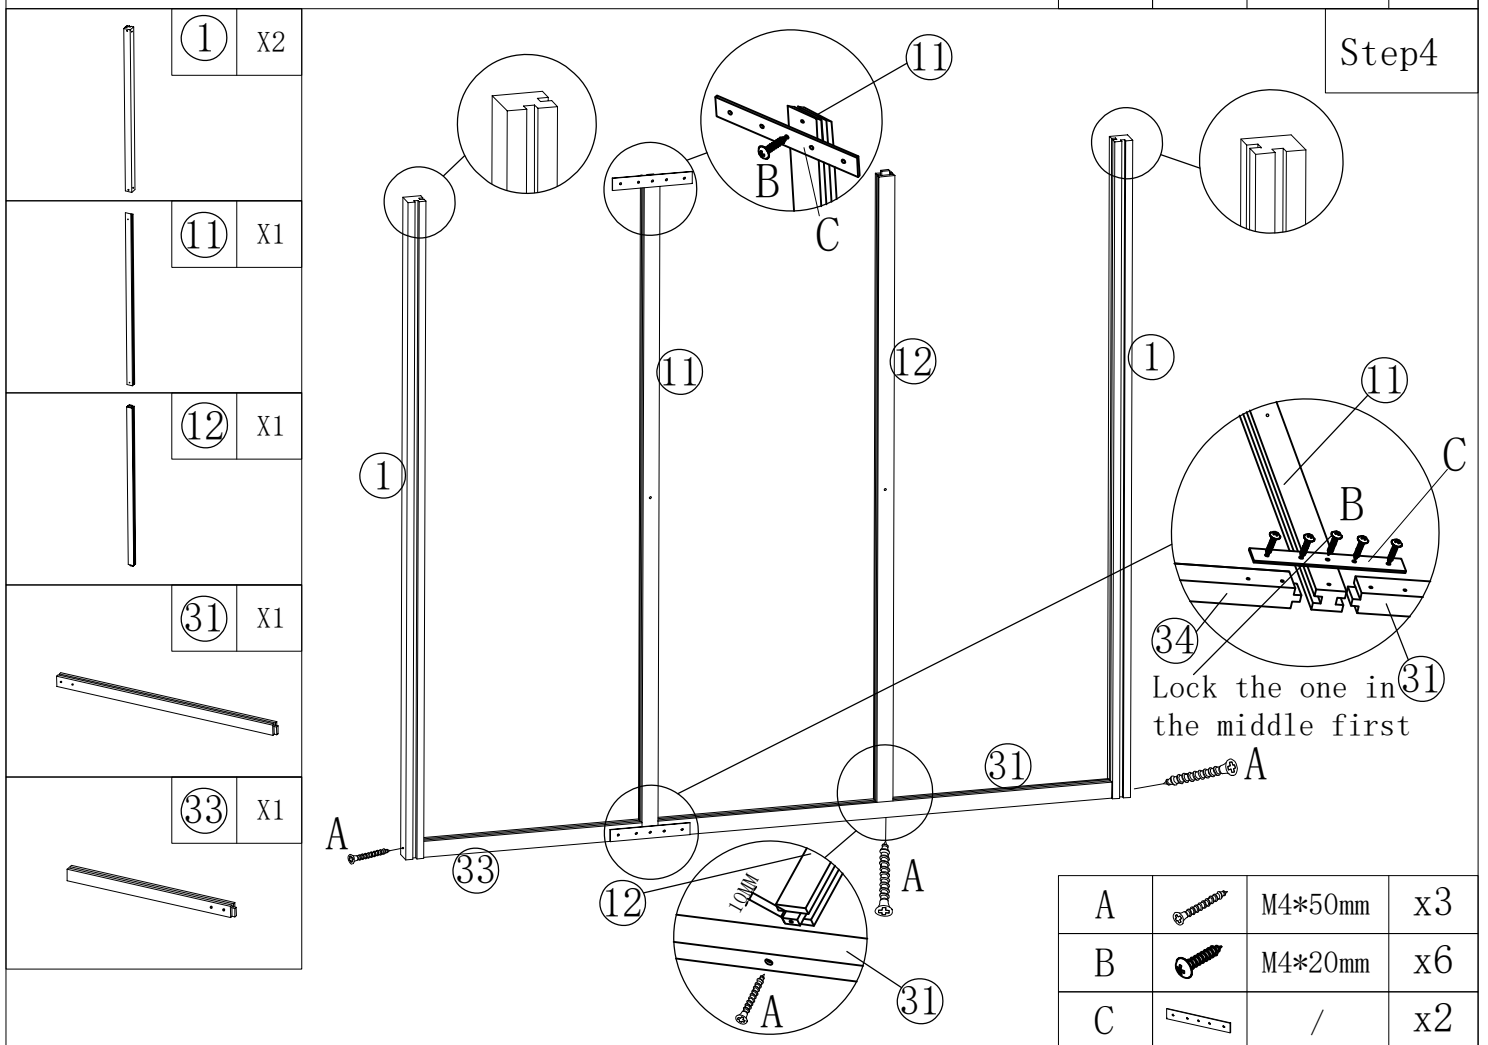
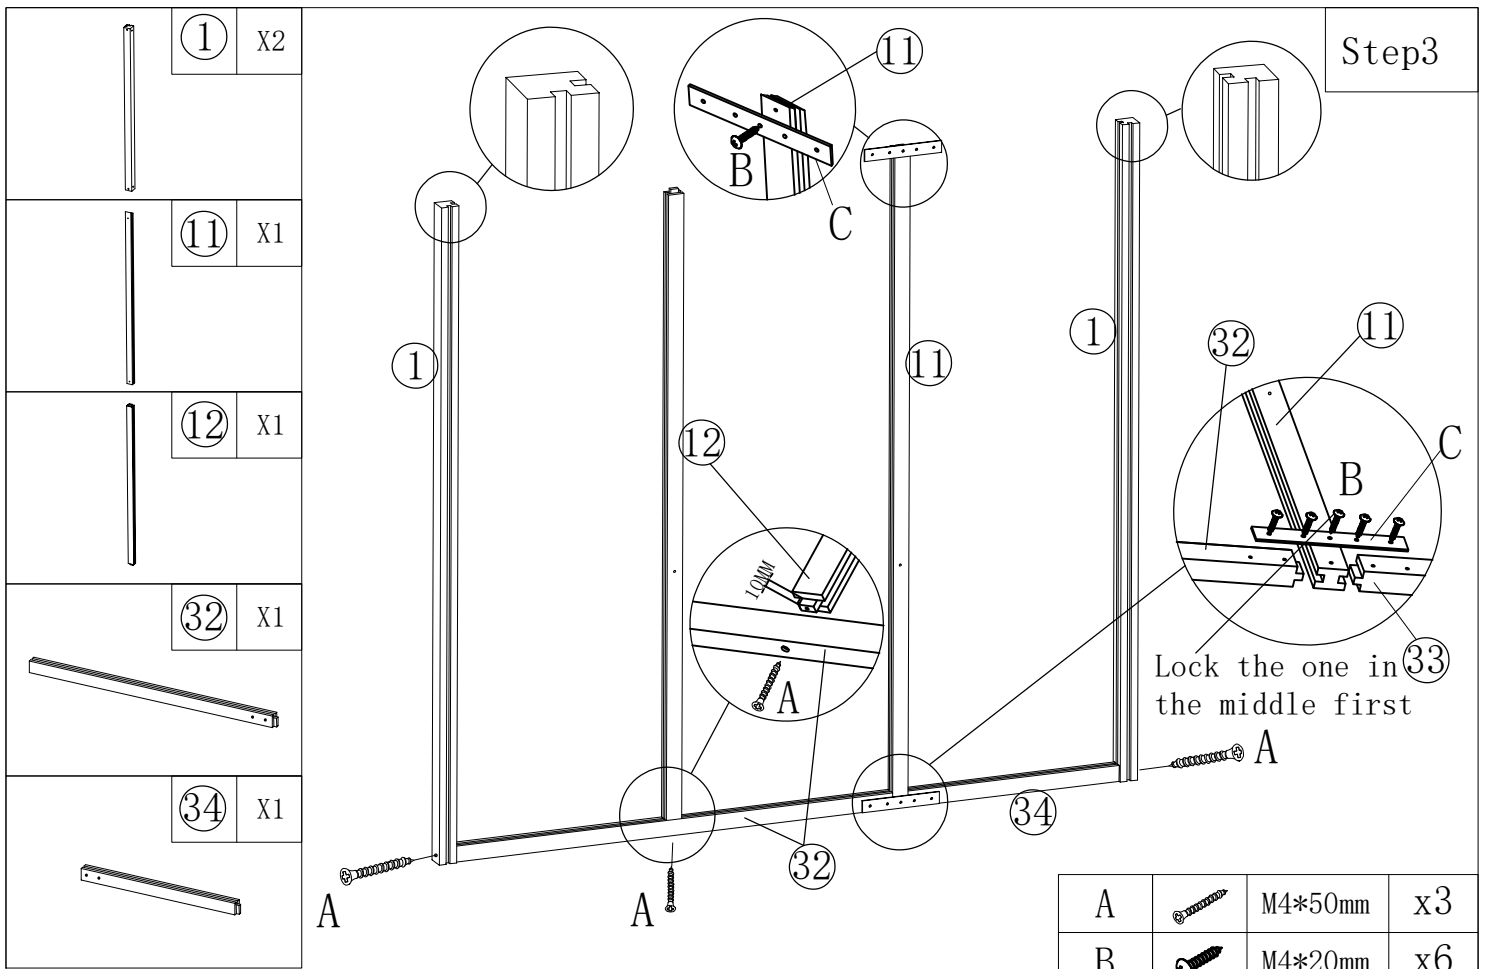


Step5

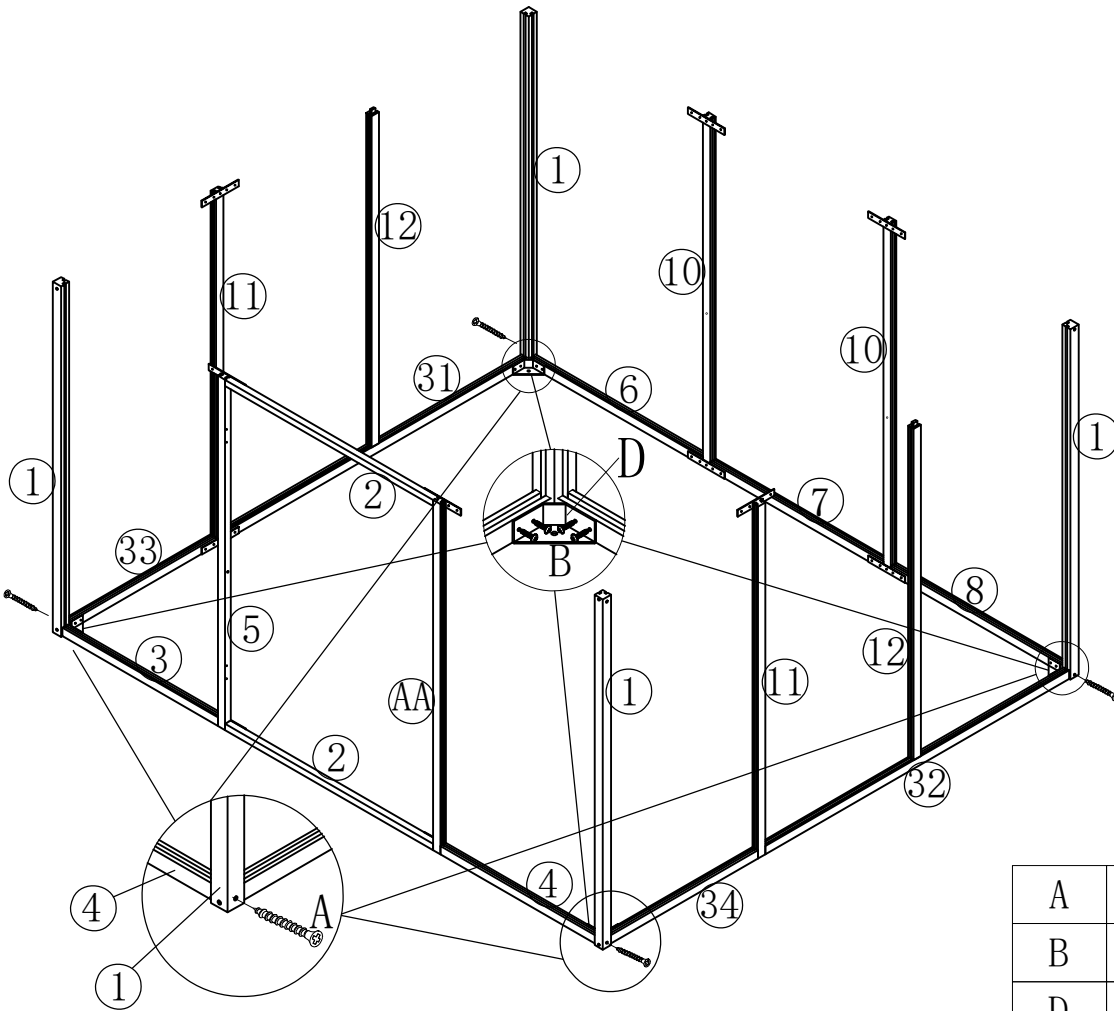

A		M4*50mm	x4
B		M4*20mm	x16
D		/	x4

Step6

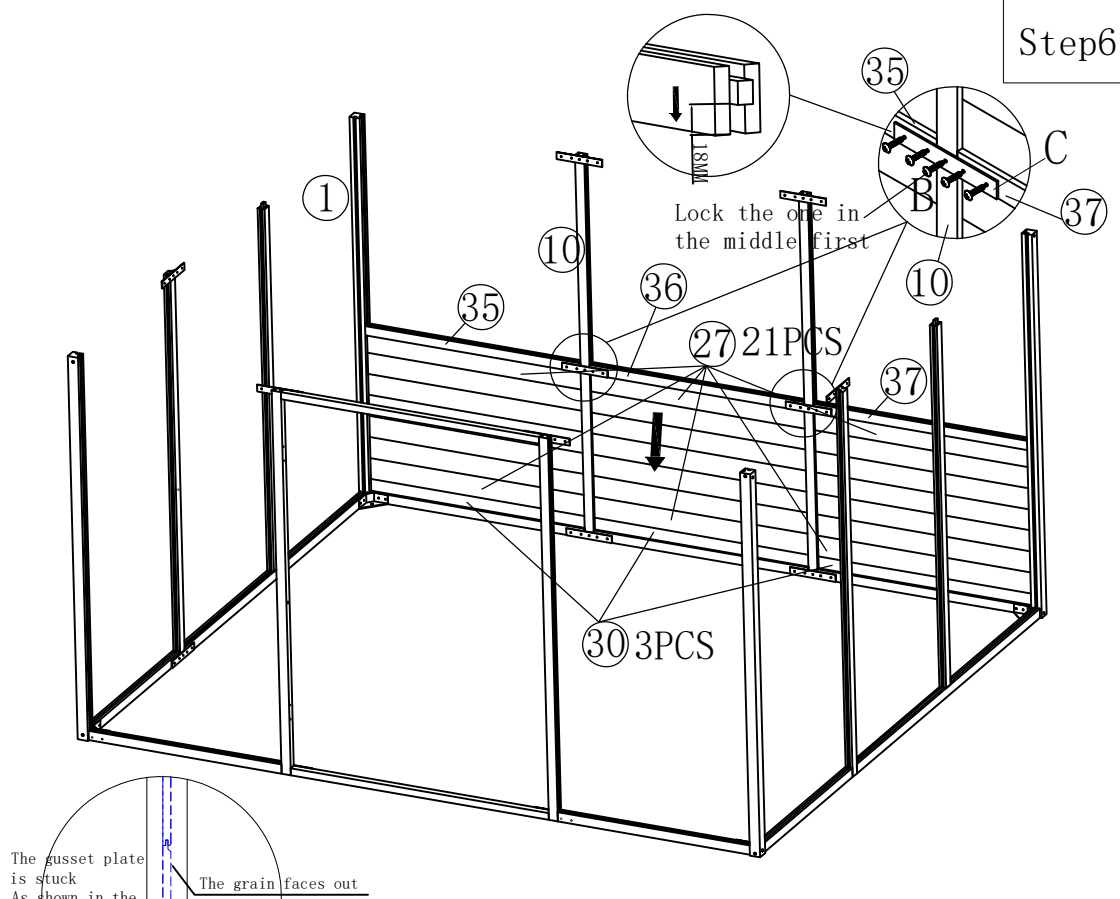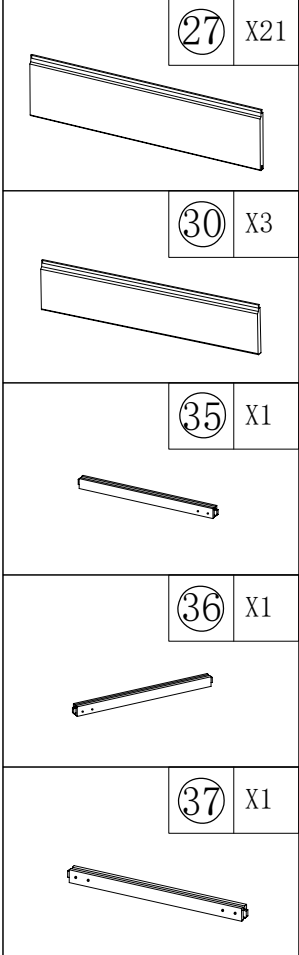

step1: insert 30 1PCS X3
 step2: insert 27 7PCS X3

B		M4*20mm	x10
C		/	x2

Step7


25 X42




29 X6




41 X2




42 X2



43 X2




step1: insert 29 1PCS X6
step2: insert 25 7PCS X6

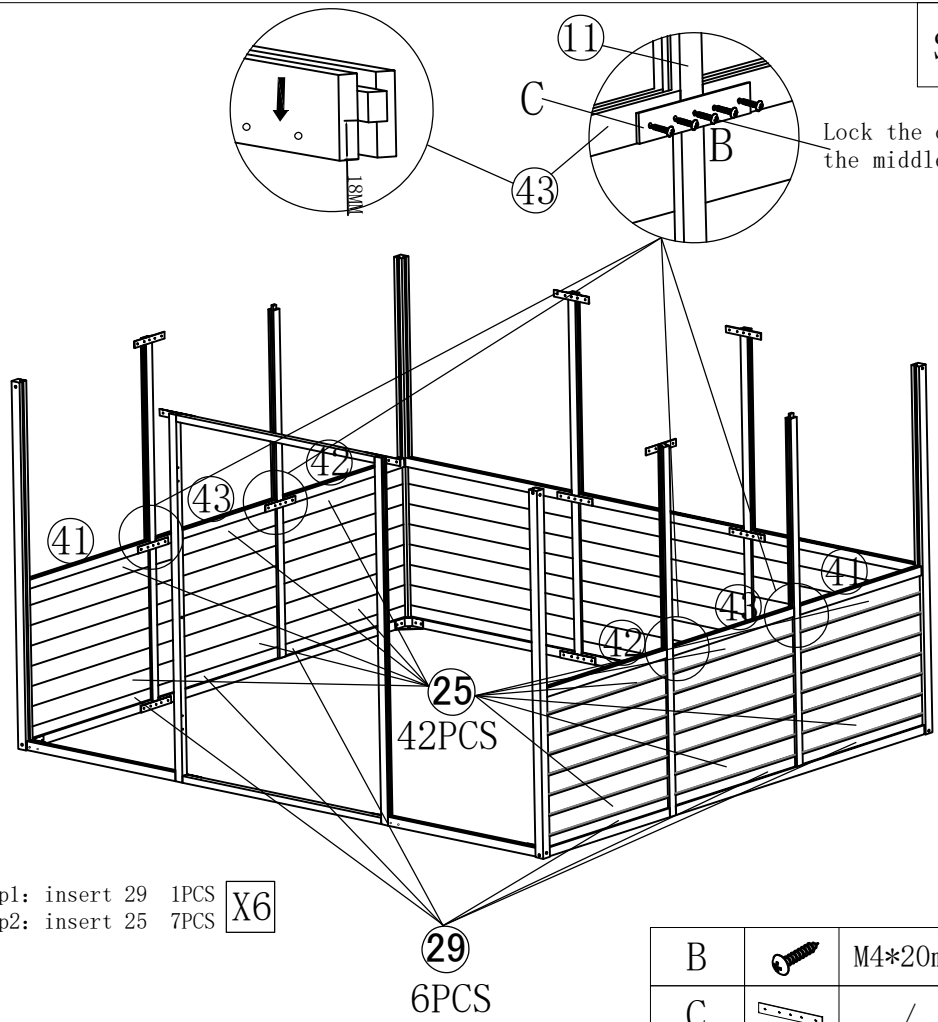

B		M4*20mm	x20
C		/	x4


Step8

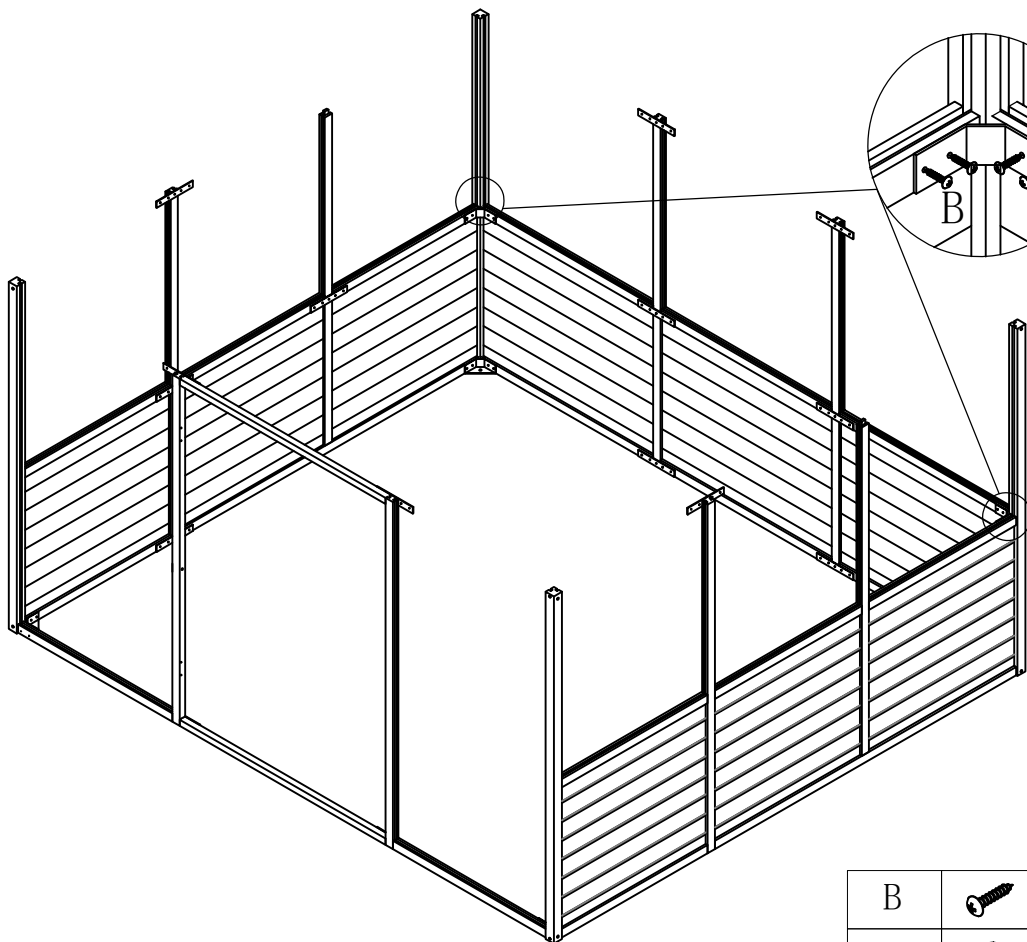

B		M4*20mm	x8
F		/	x2

Step9



23 X14

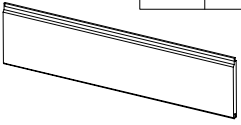

28 X2



49 X2

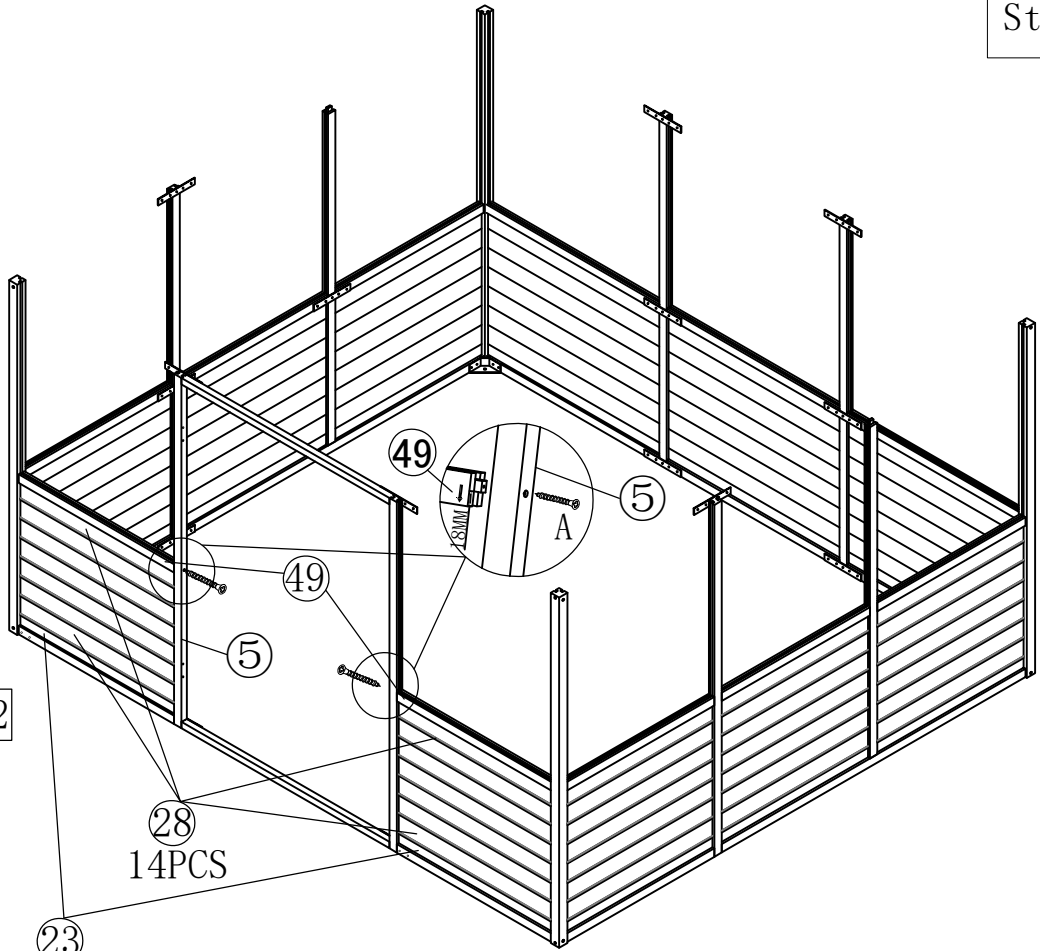


step1: insert 28 1PCS X2
step2: insert 23 7PCS

23 2PCS



28 14PCS



A		M4*50mm	x2
---	--	---------	----



Step10

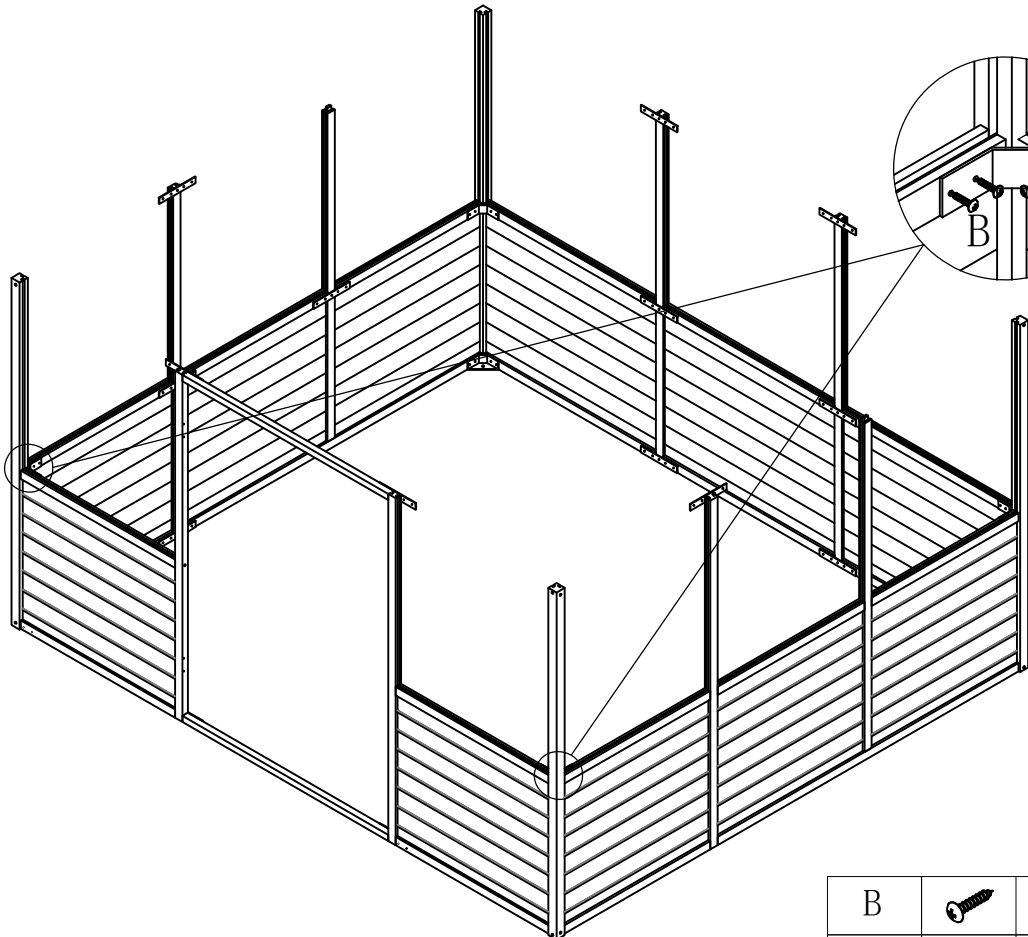


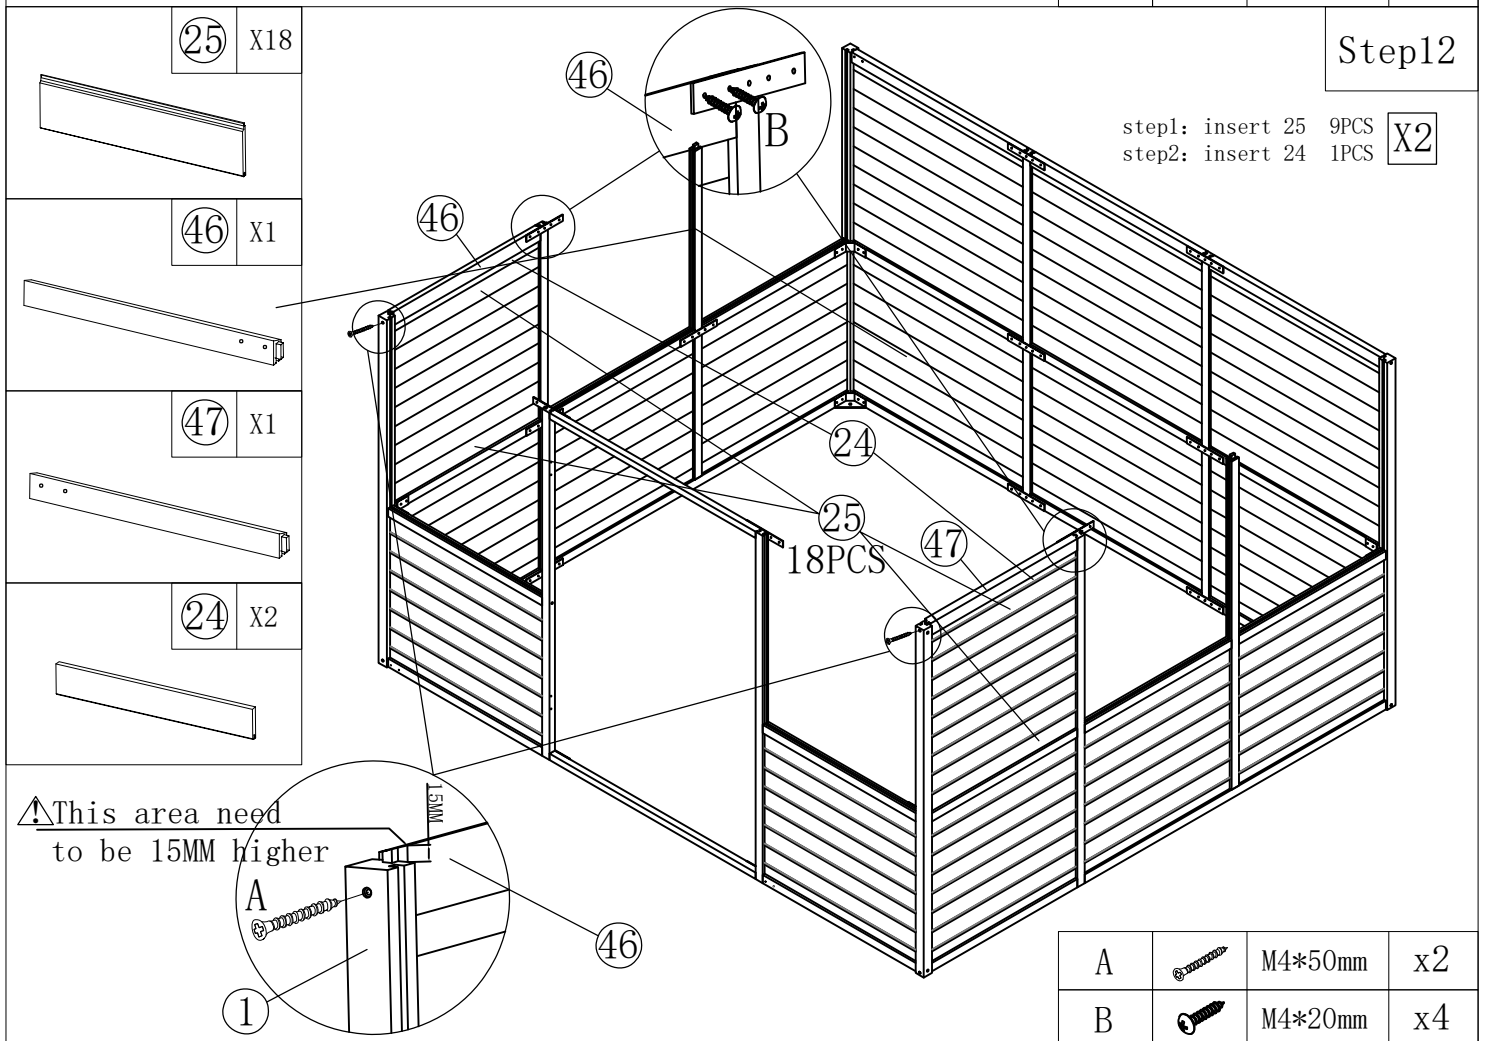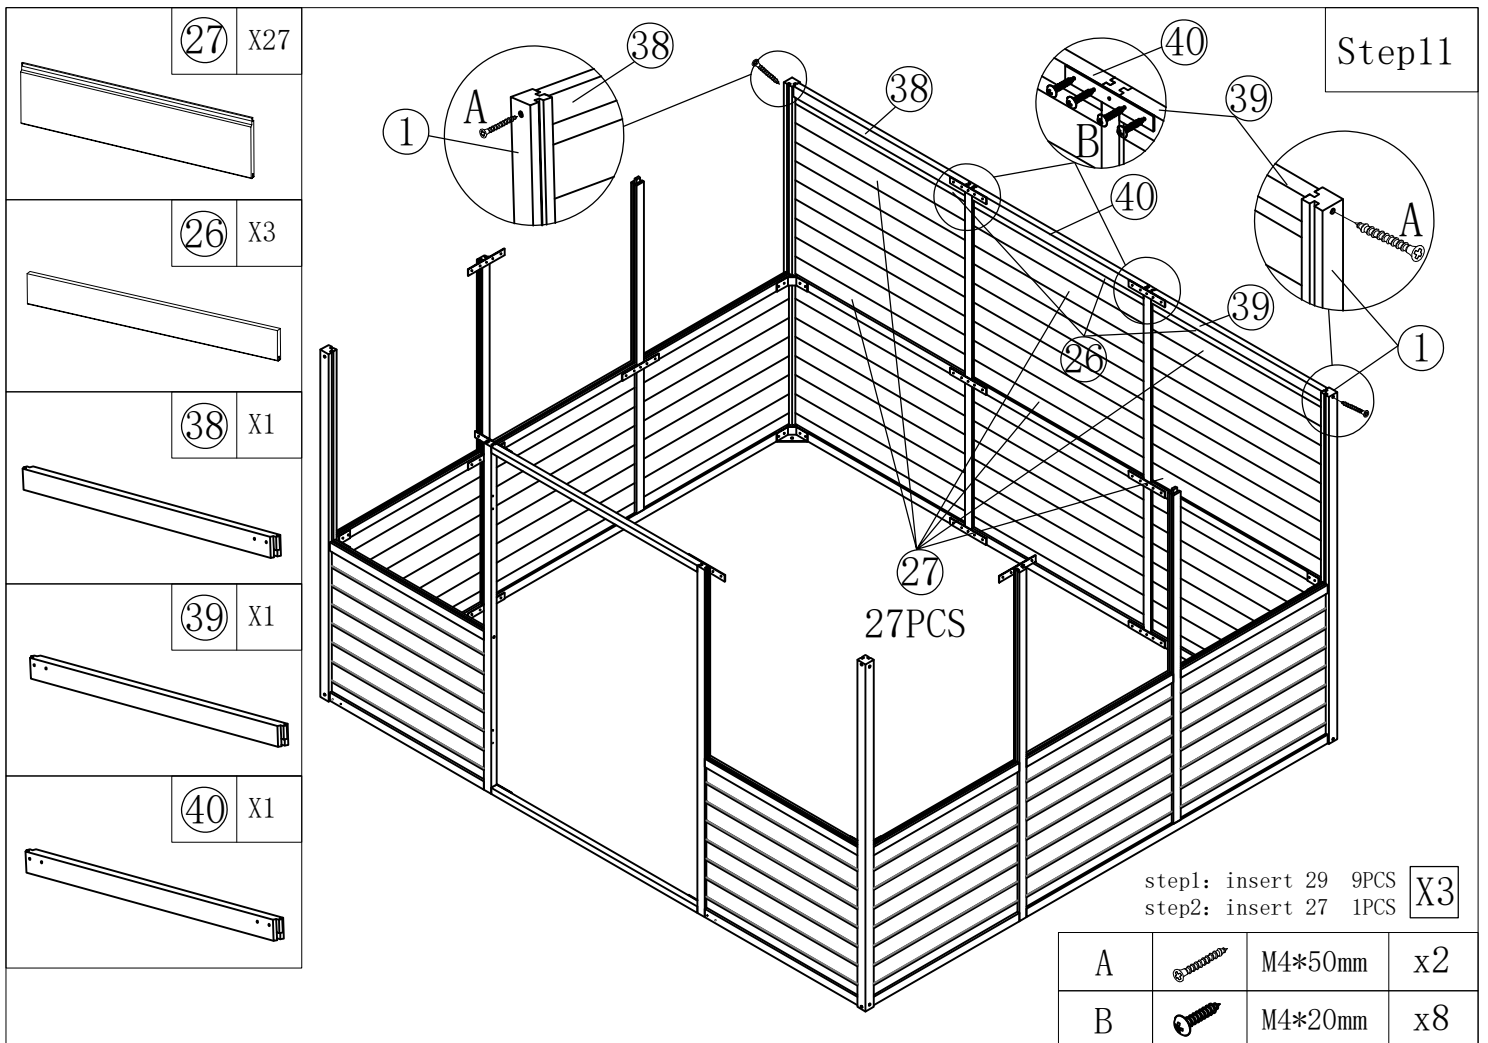


B		M4*20mm	x8
F		/	x2

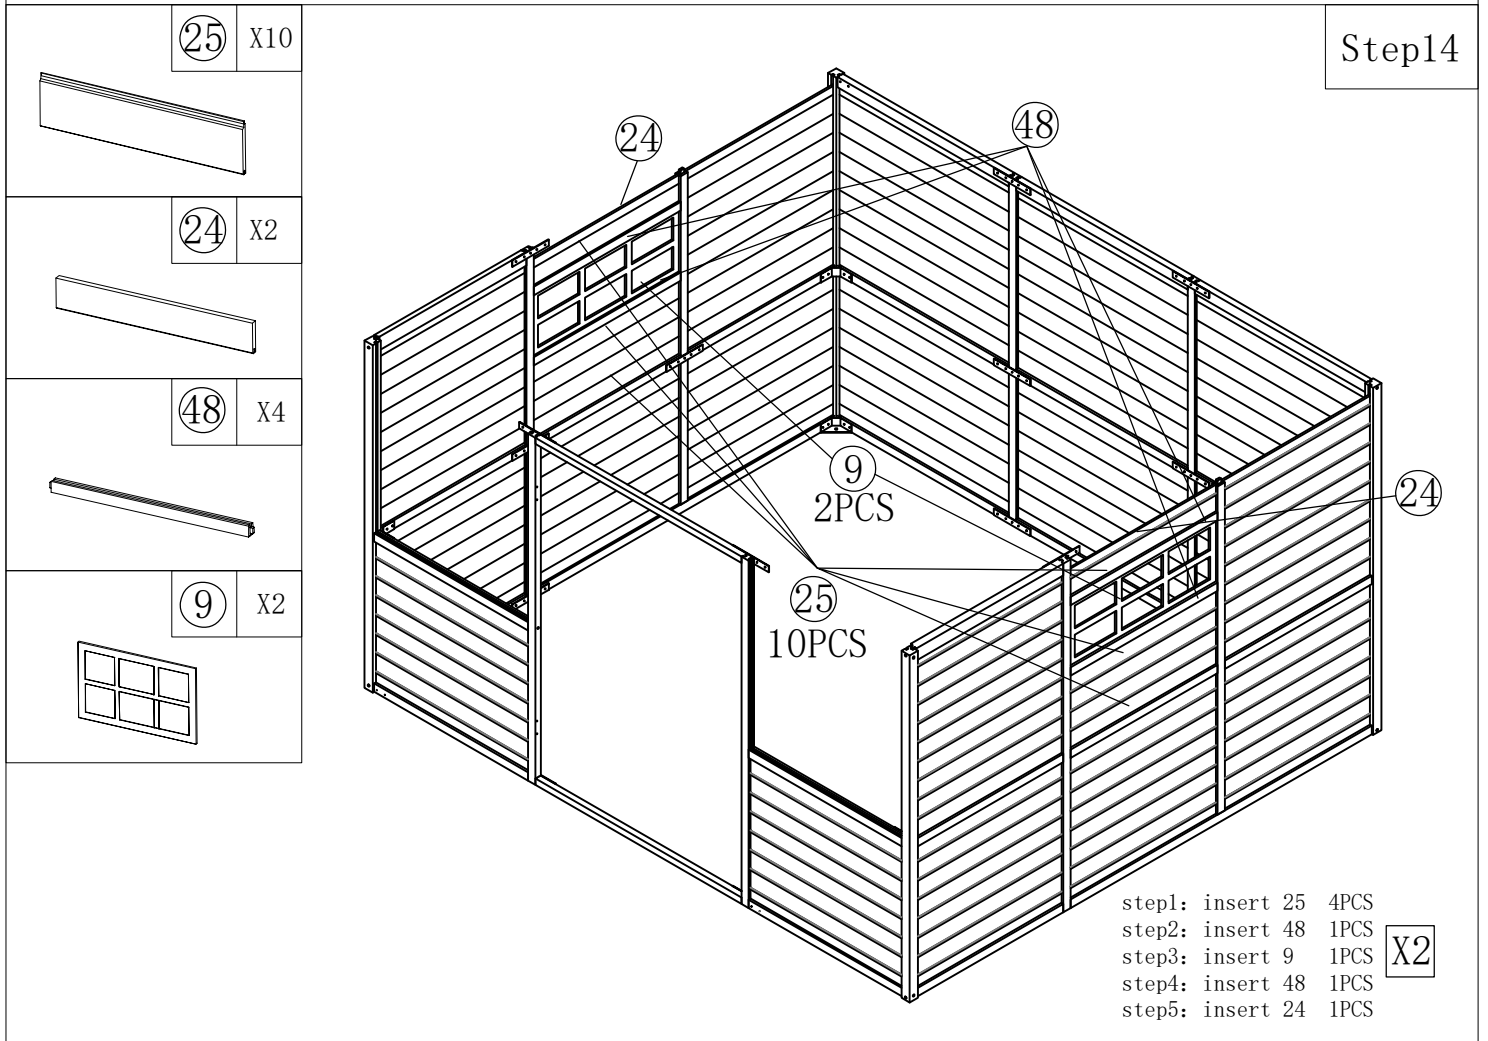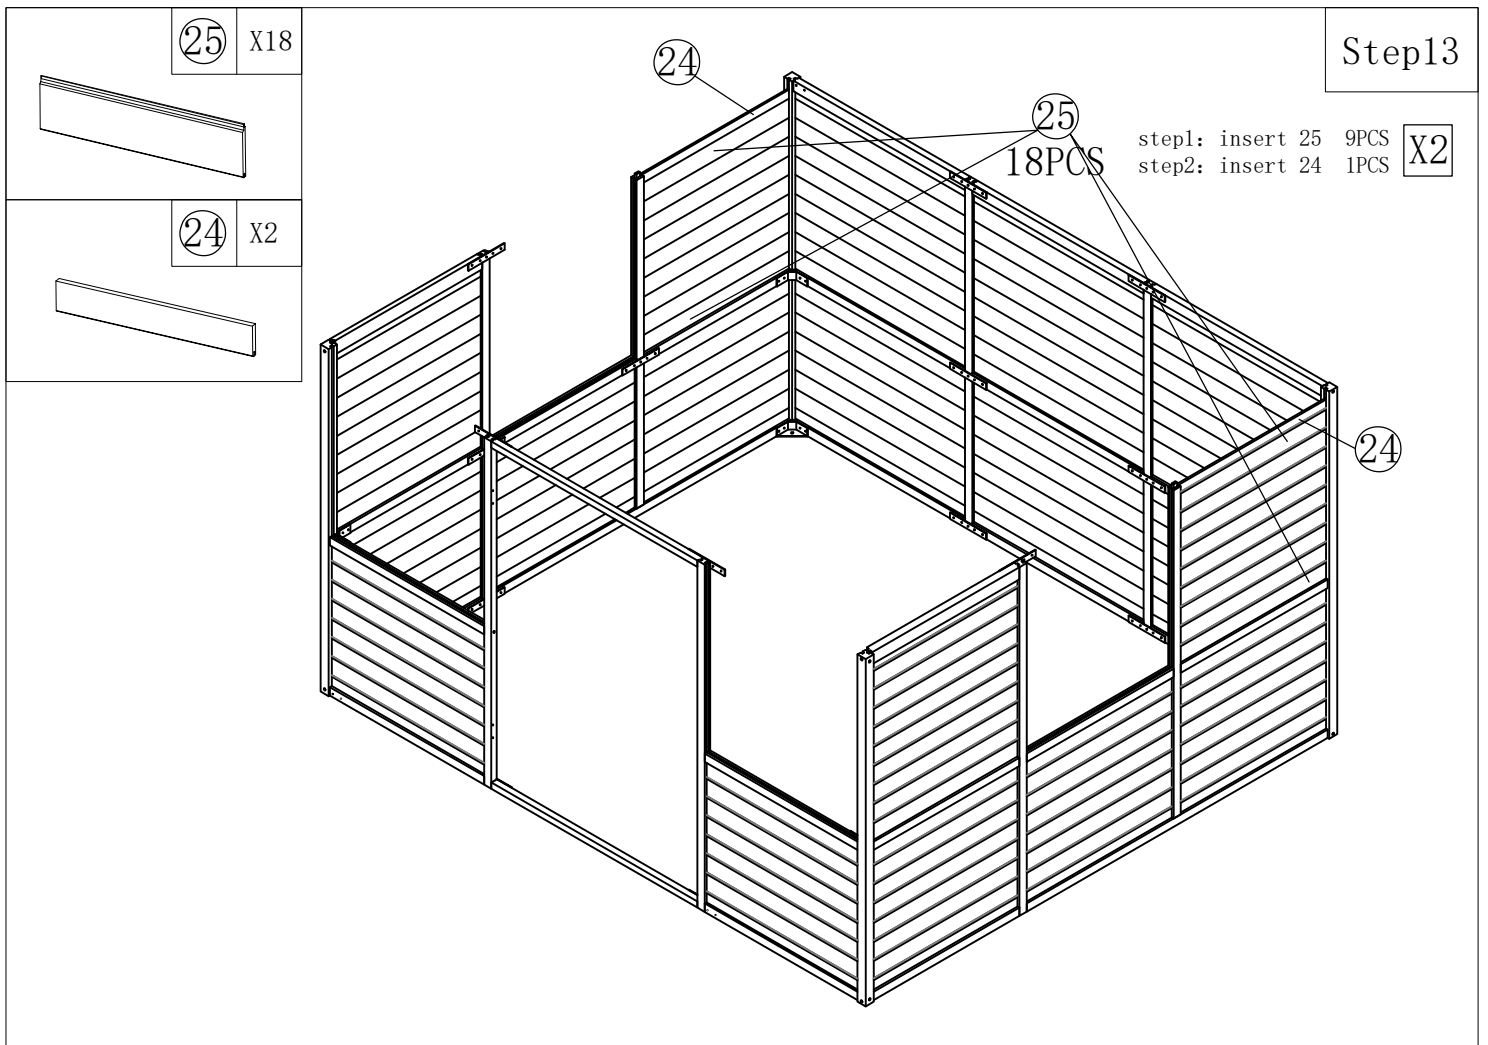

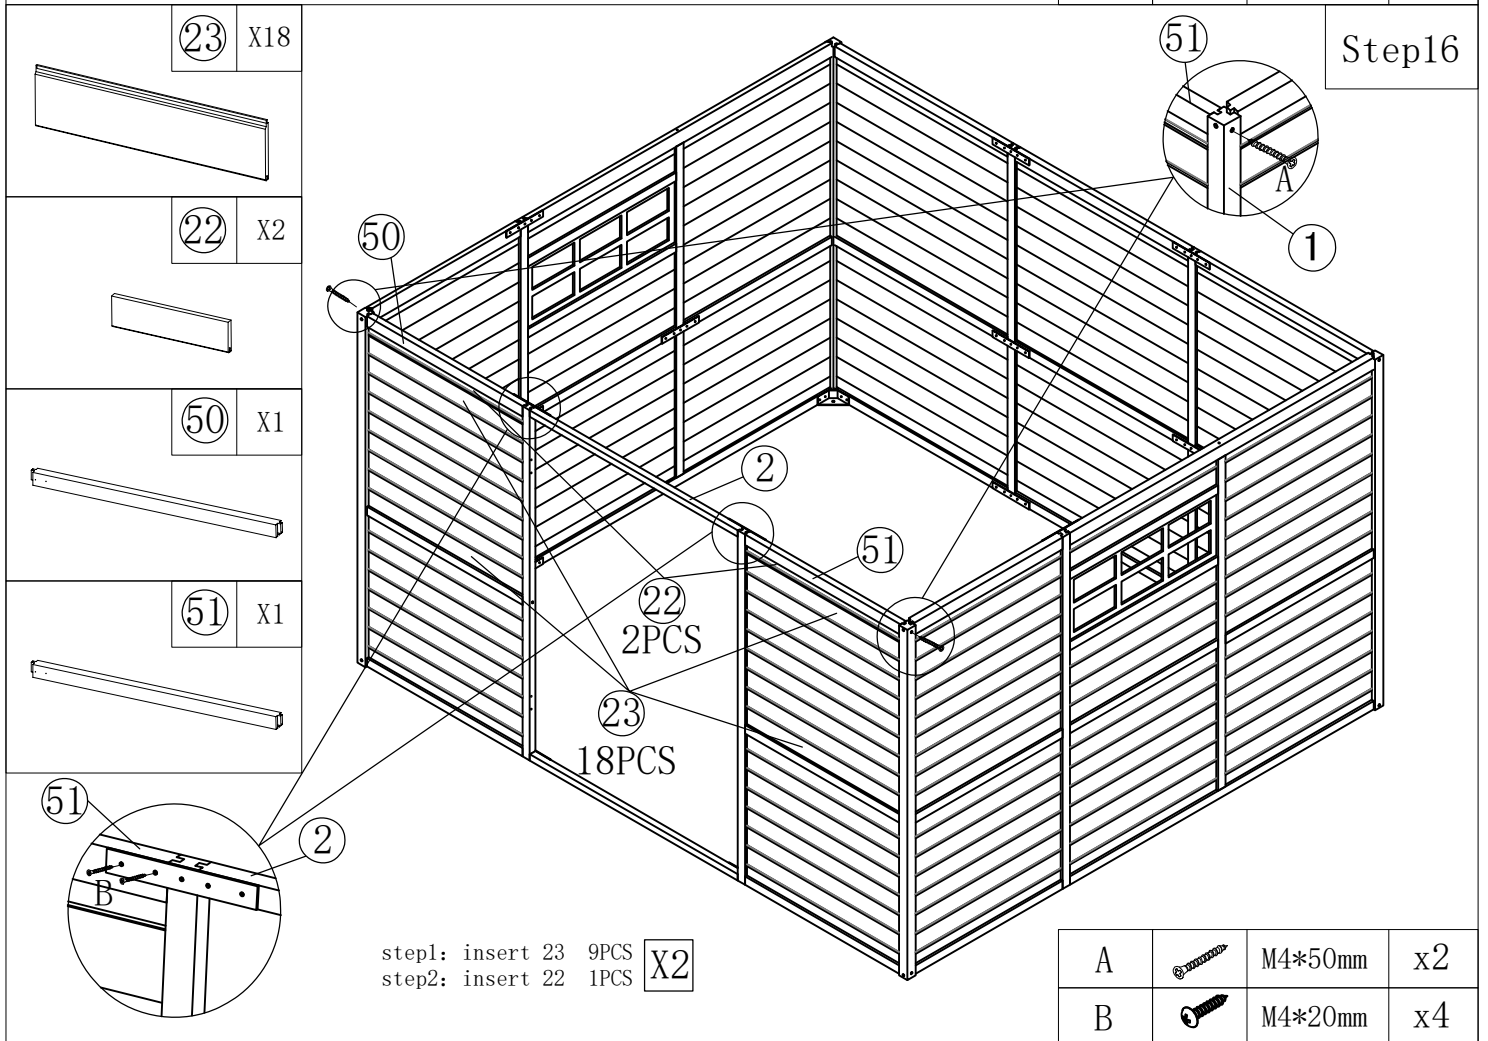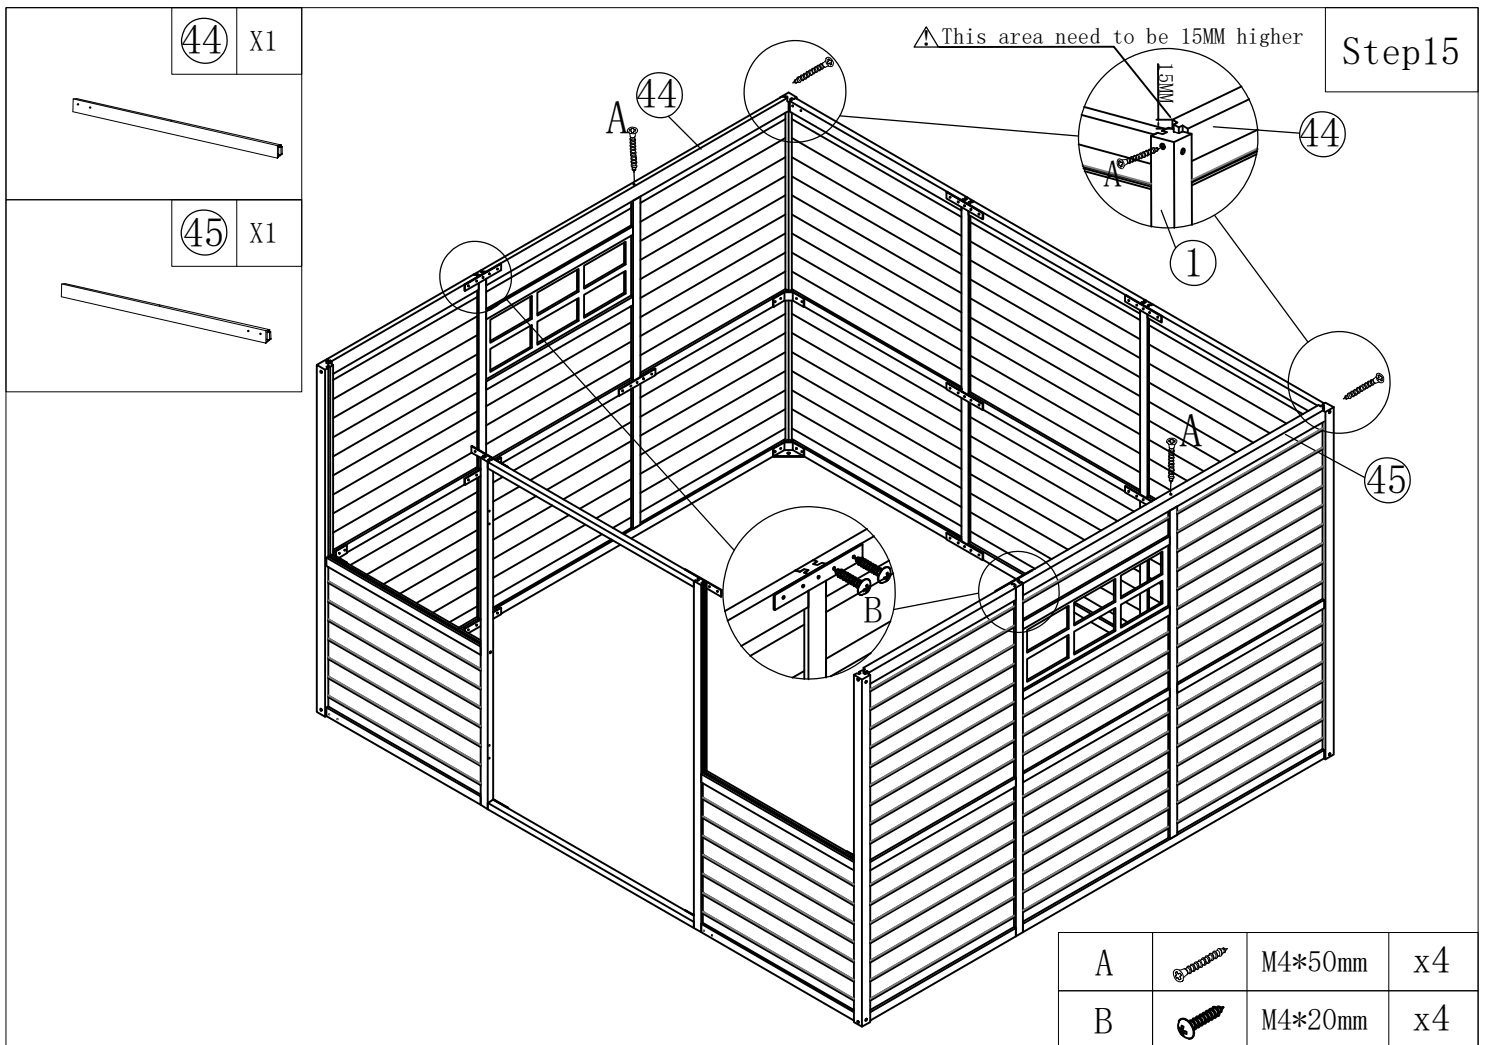


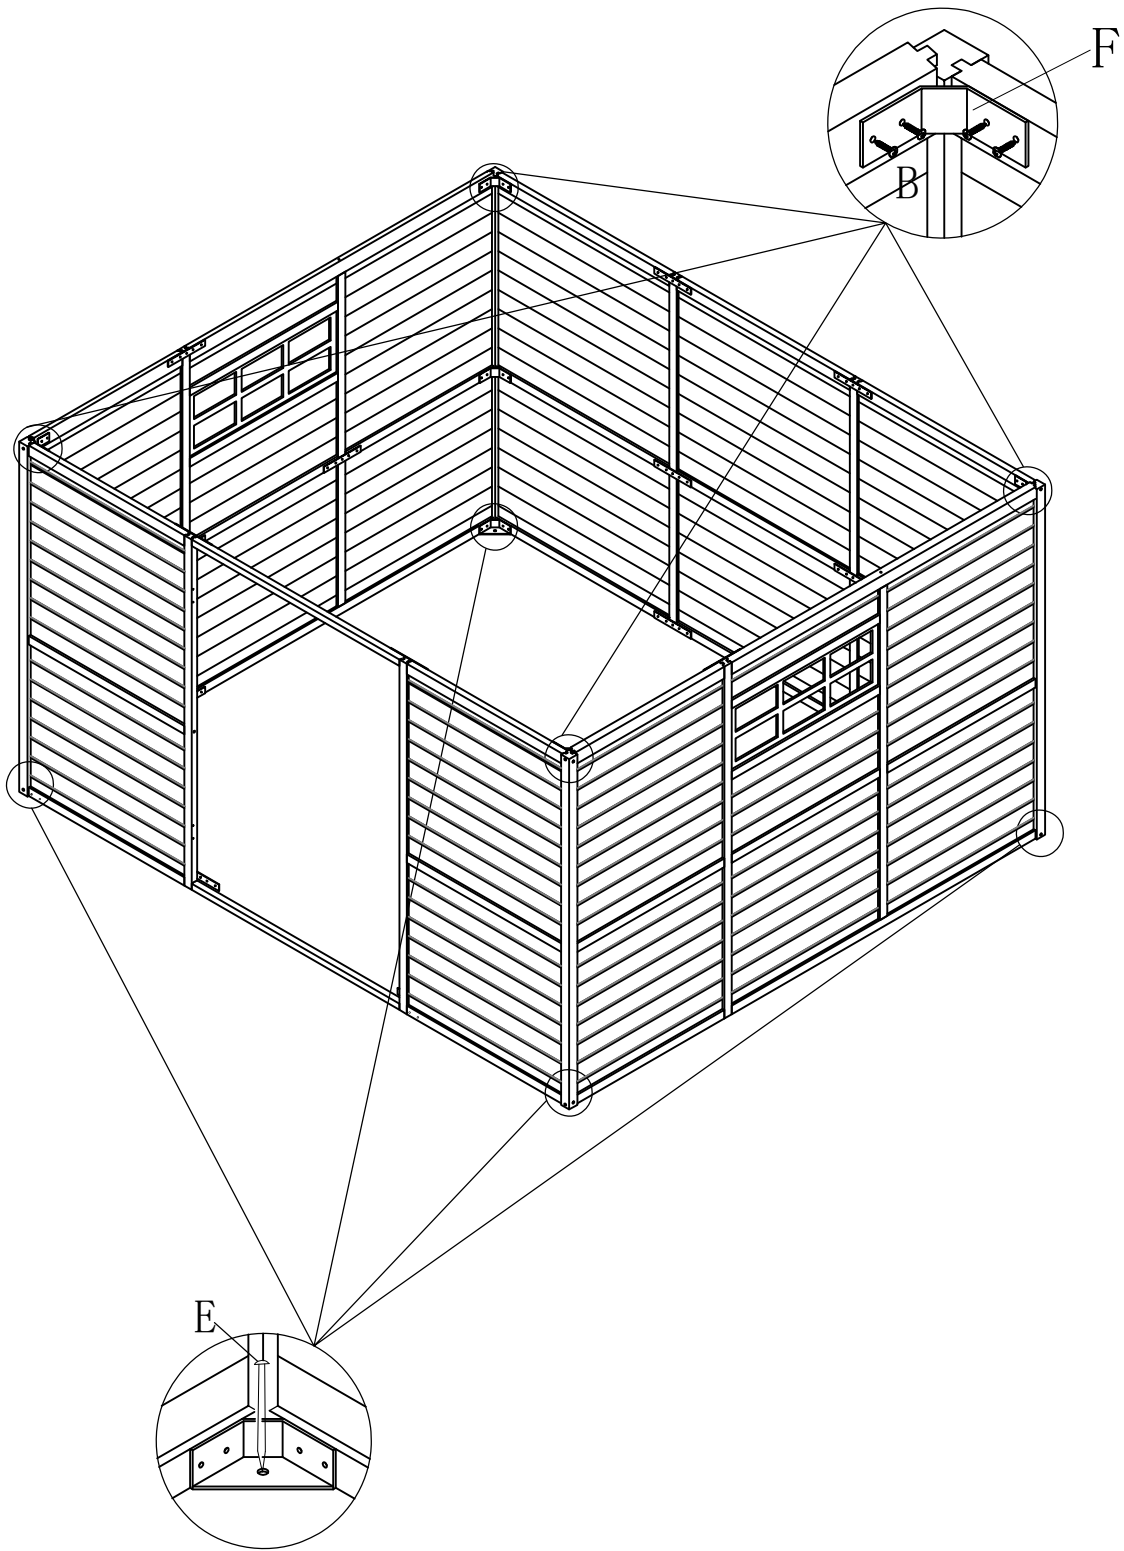




E		/	x4
B		M4*20mm	x16
F		/	x4


Step18

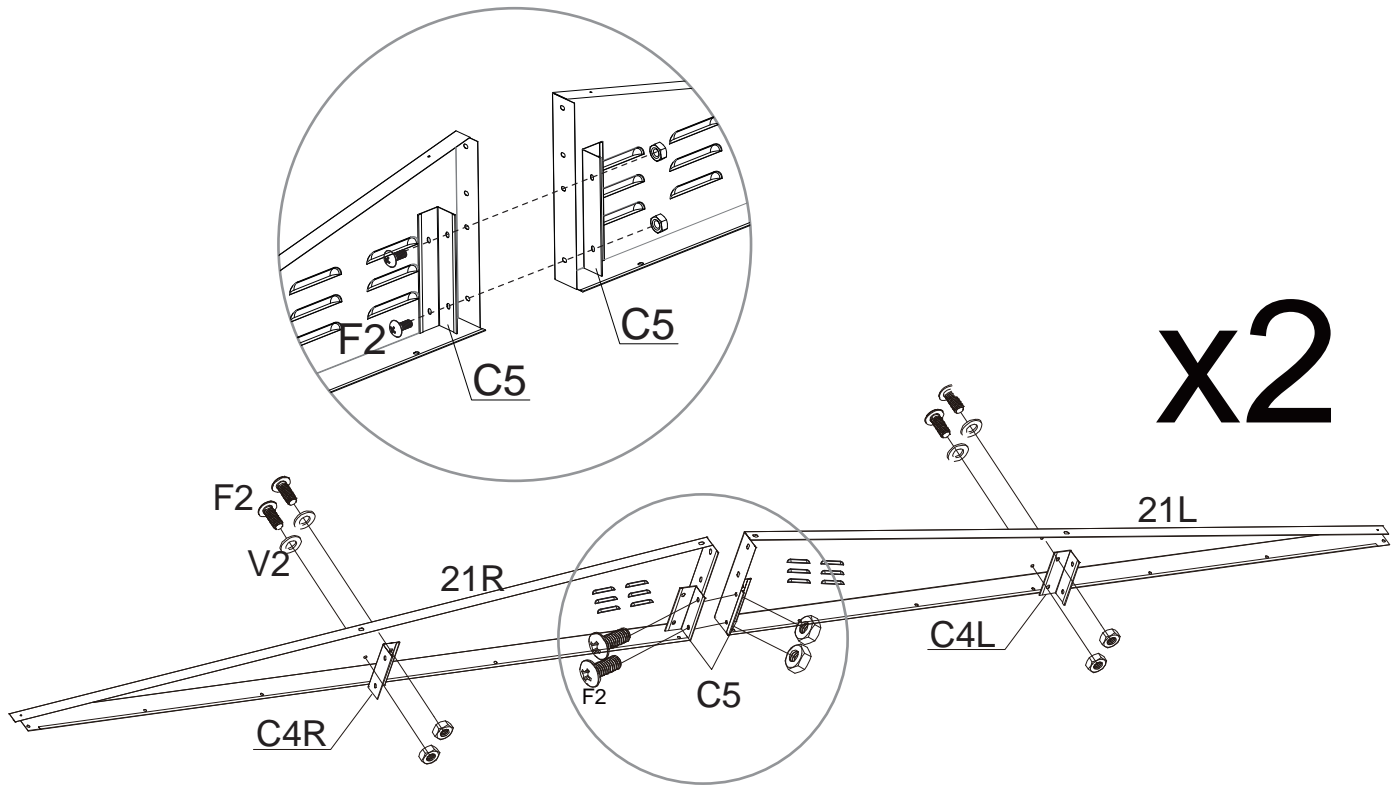

Step19

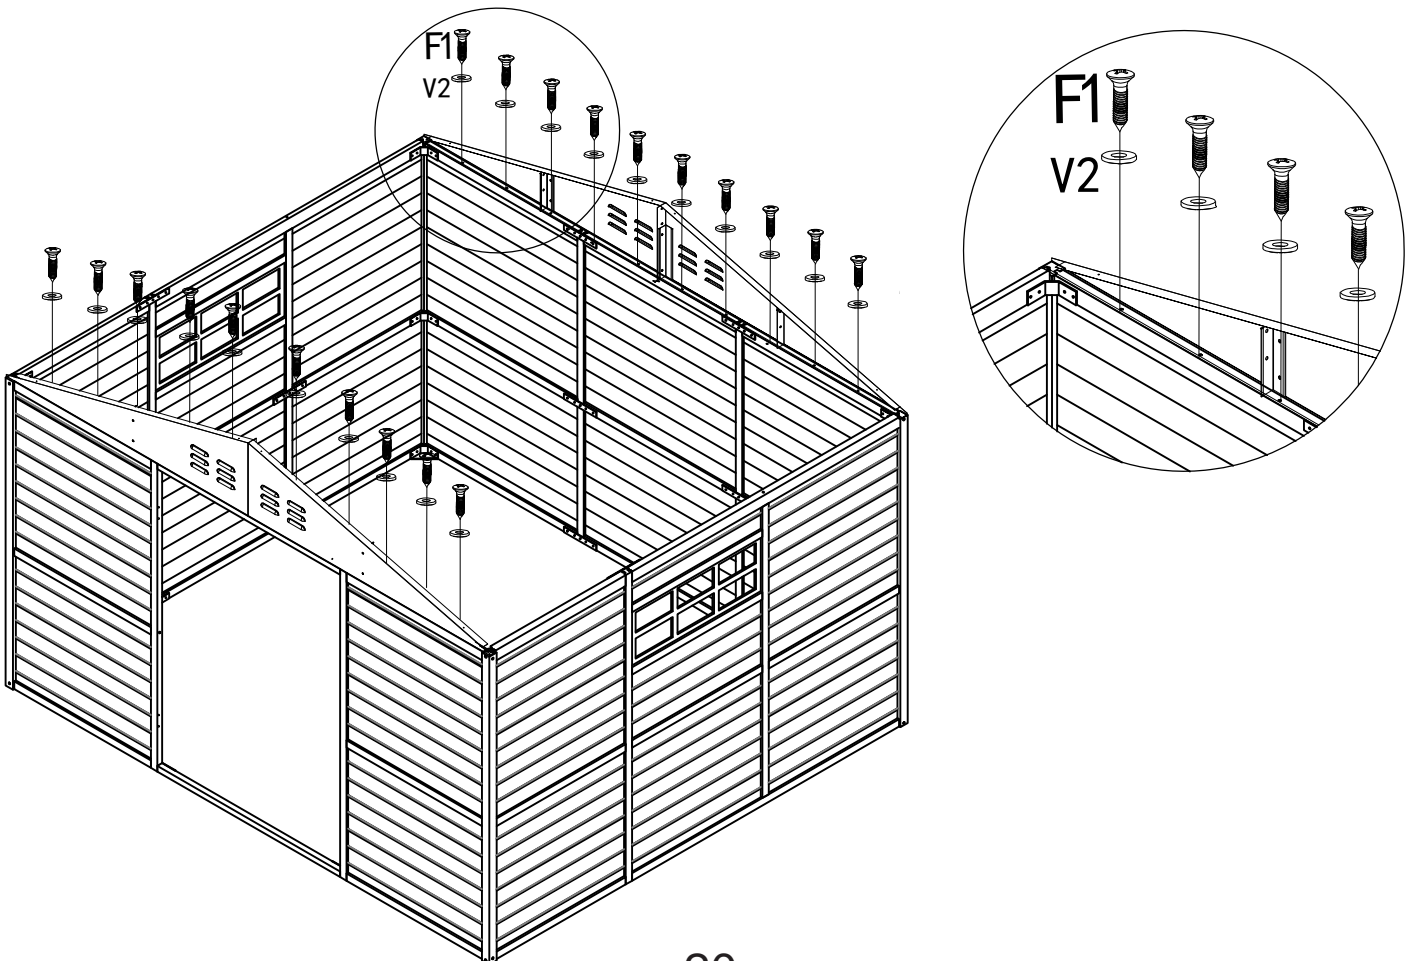


Step20

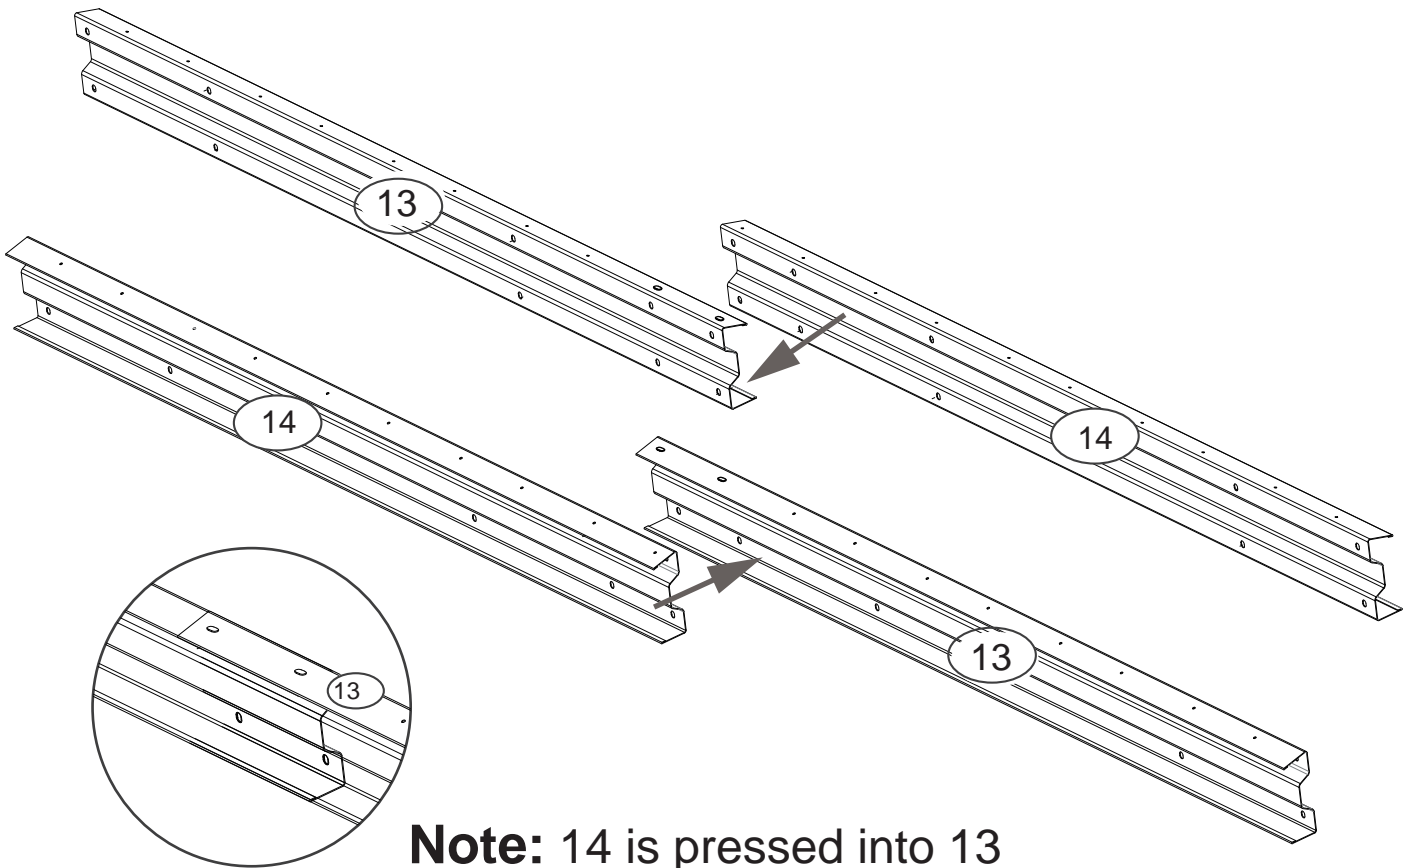

Note: 14 is pressed into 13


Step21

Don't tighten these two screws too tightly.

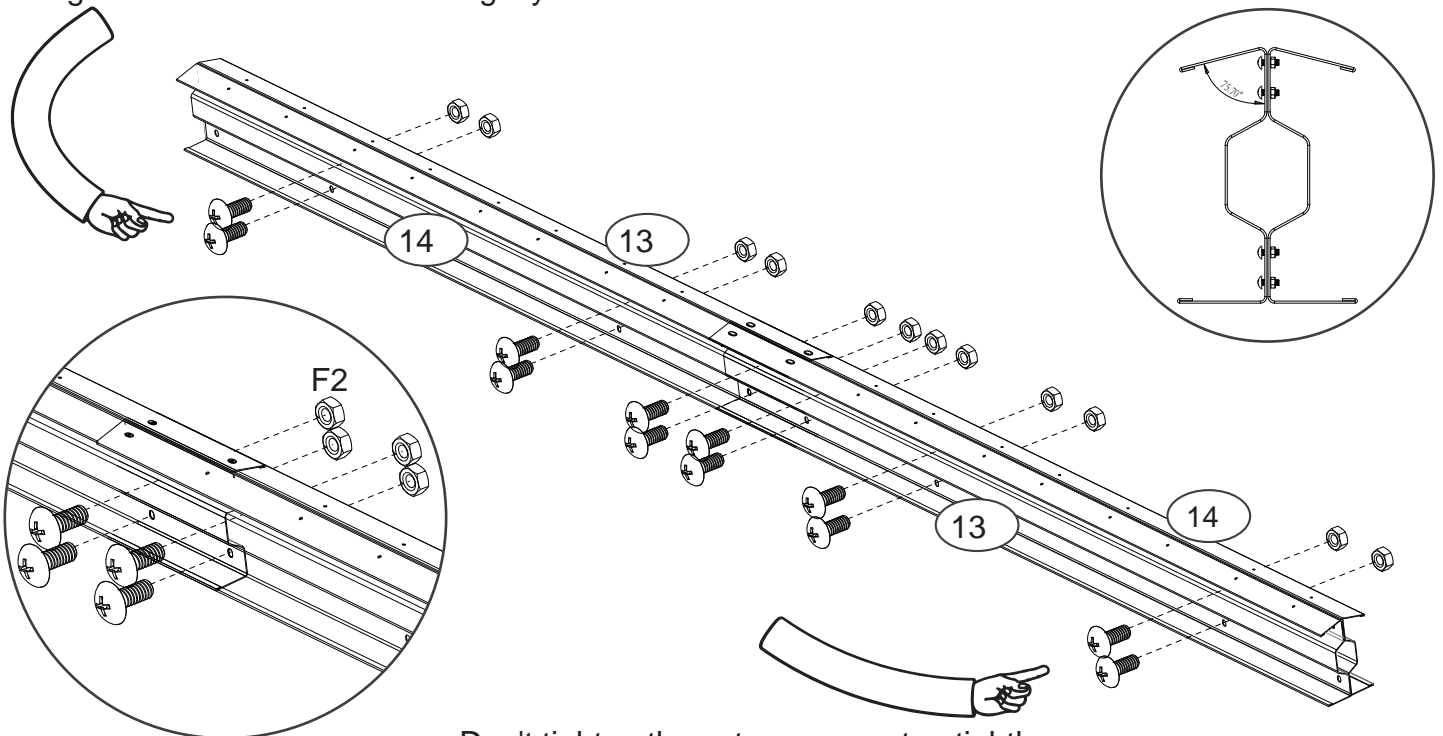


Don't tighten these two screws too tightly.




Step22

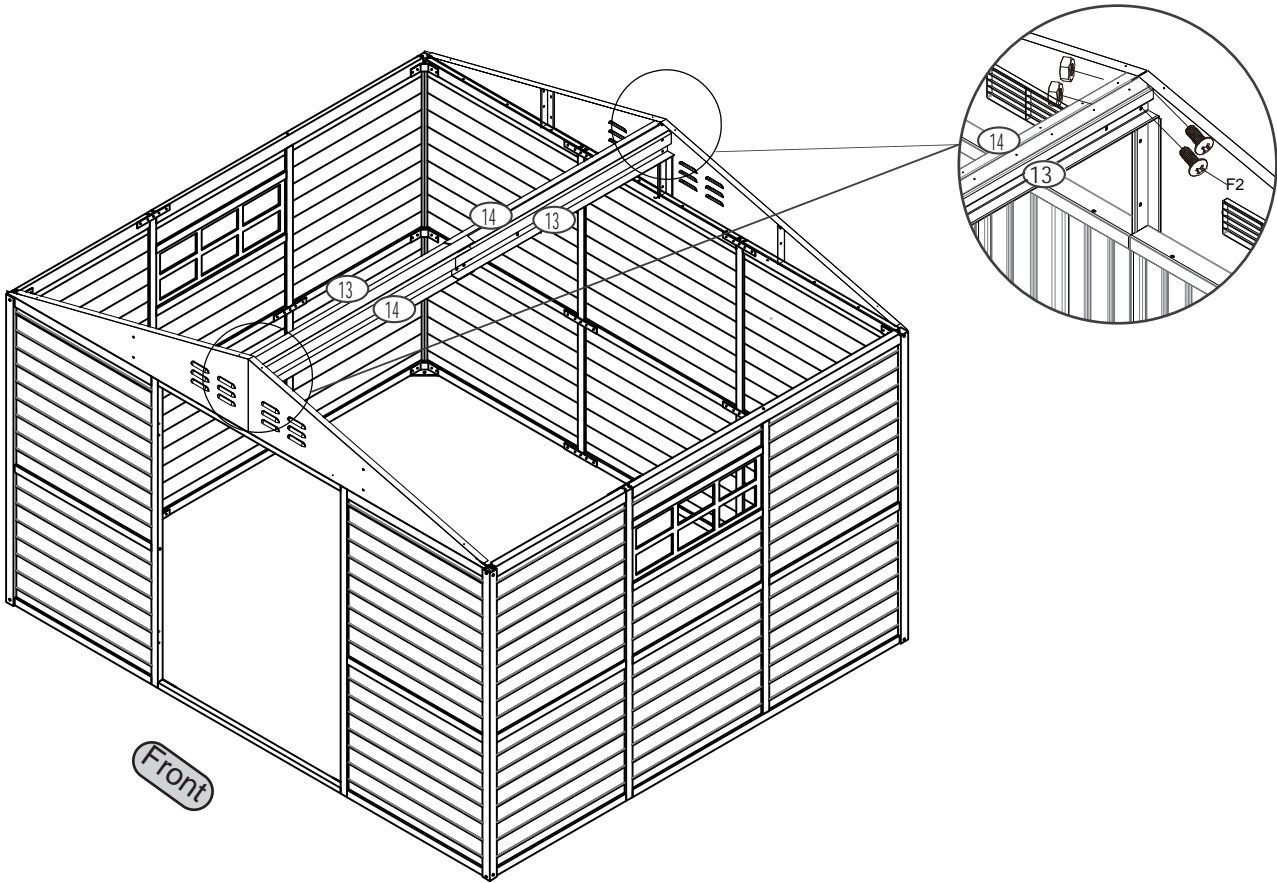



Step23

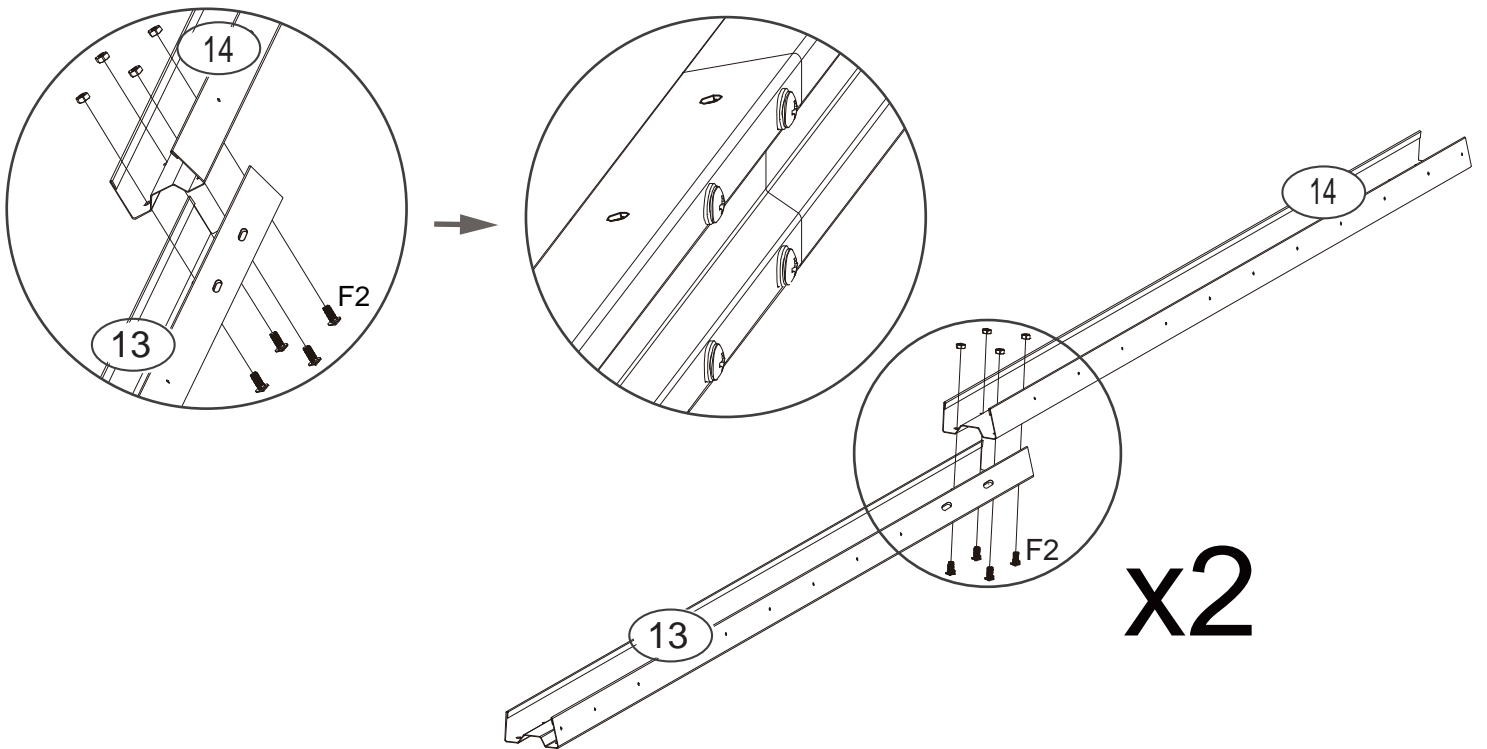


Step 24

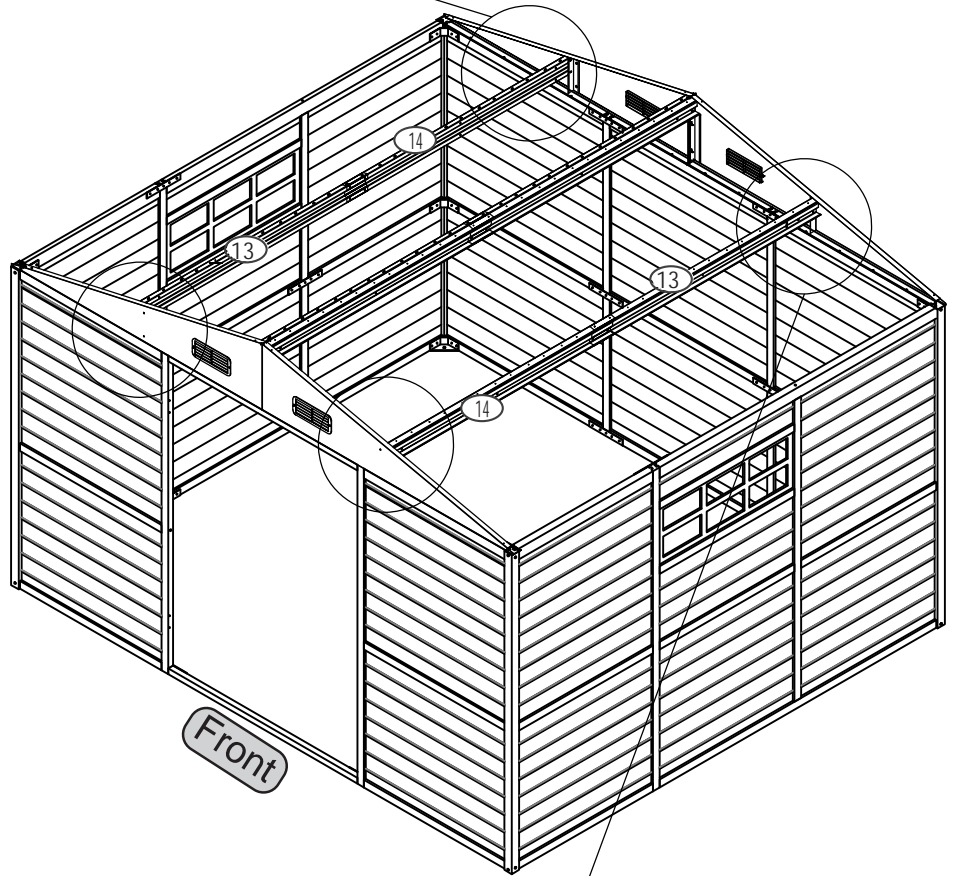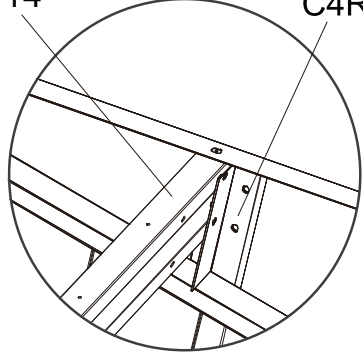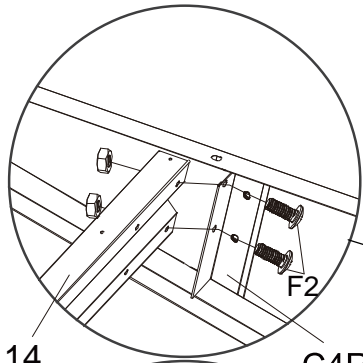


Tighten all screws.

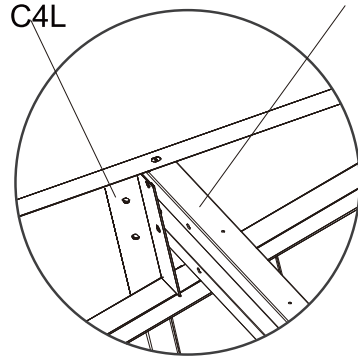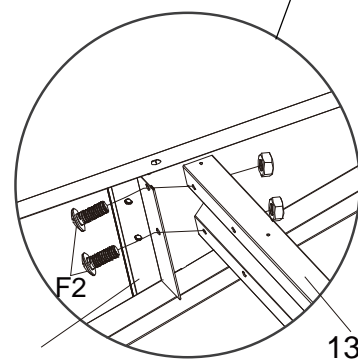

Step25

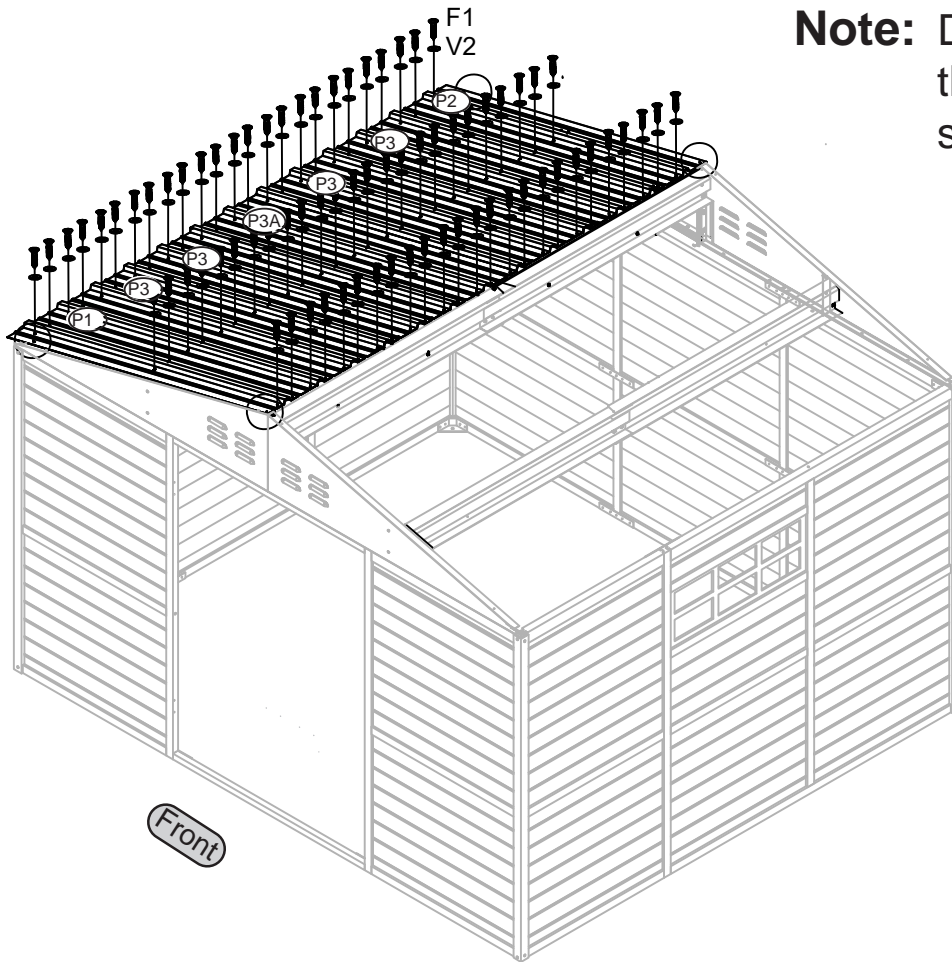


Note: Do not install F1 and V2 in the holes near the outer side of P1, P2

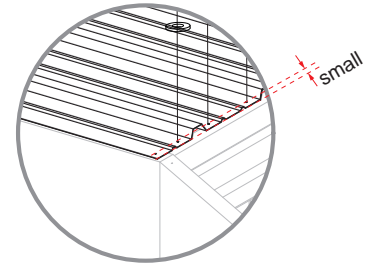


Short distance from the edge at the top.


Step26

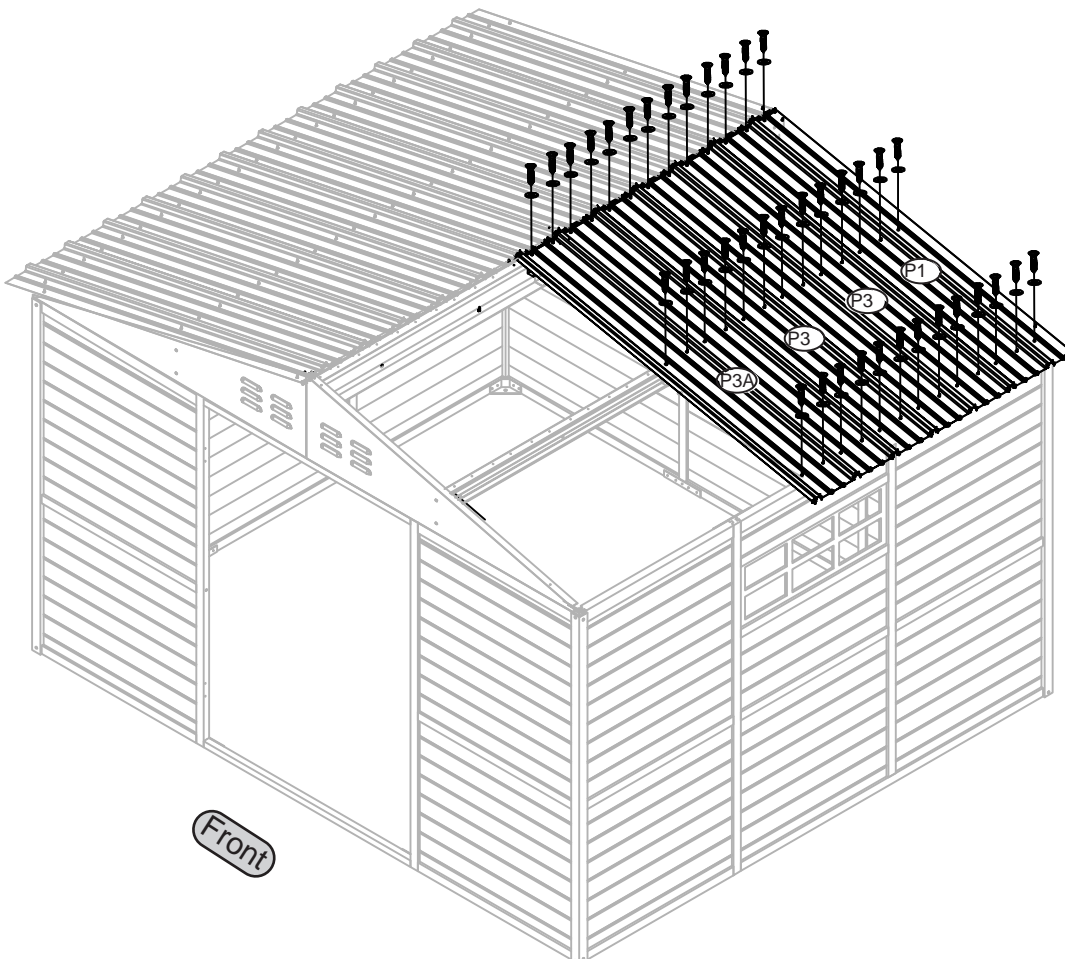

Step27

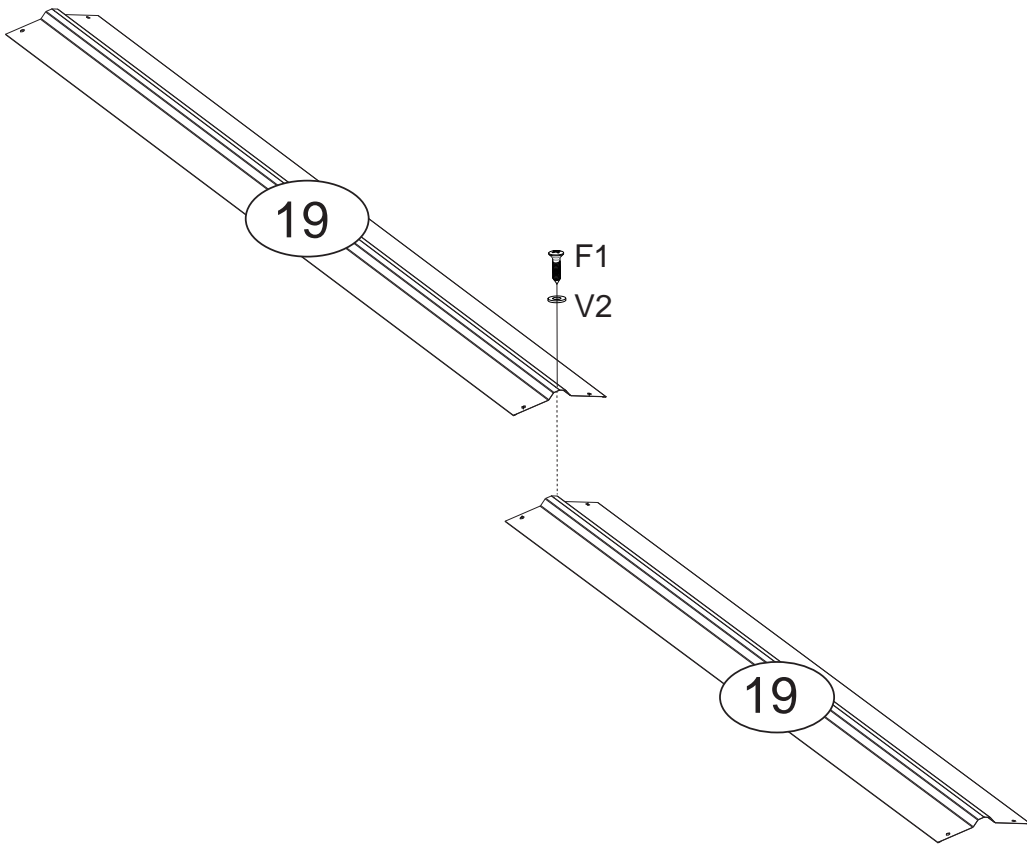


Step28


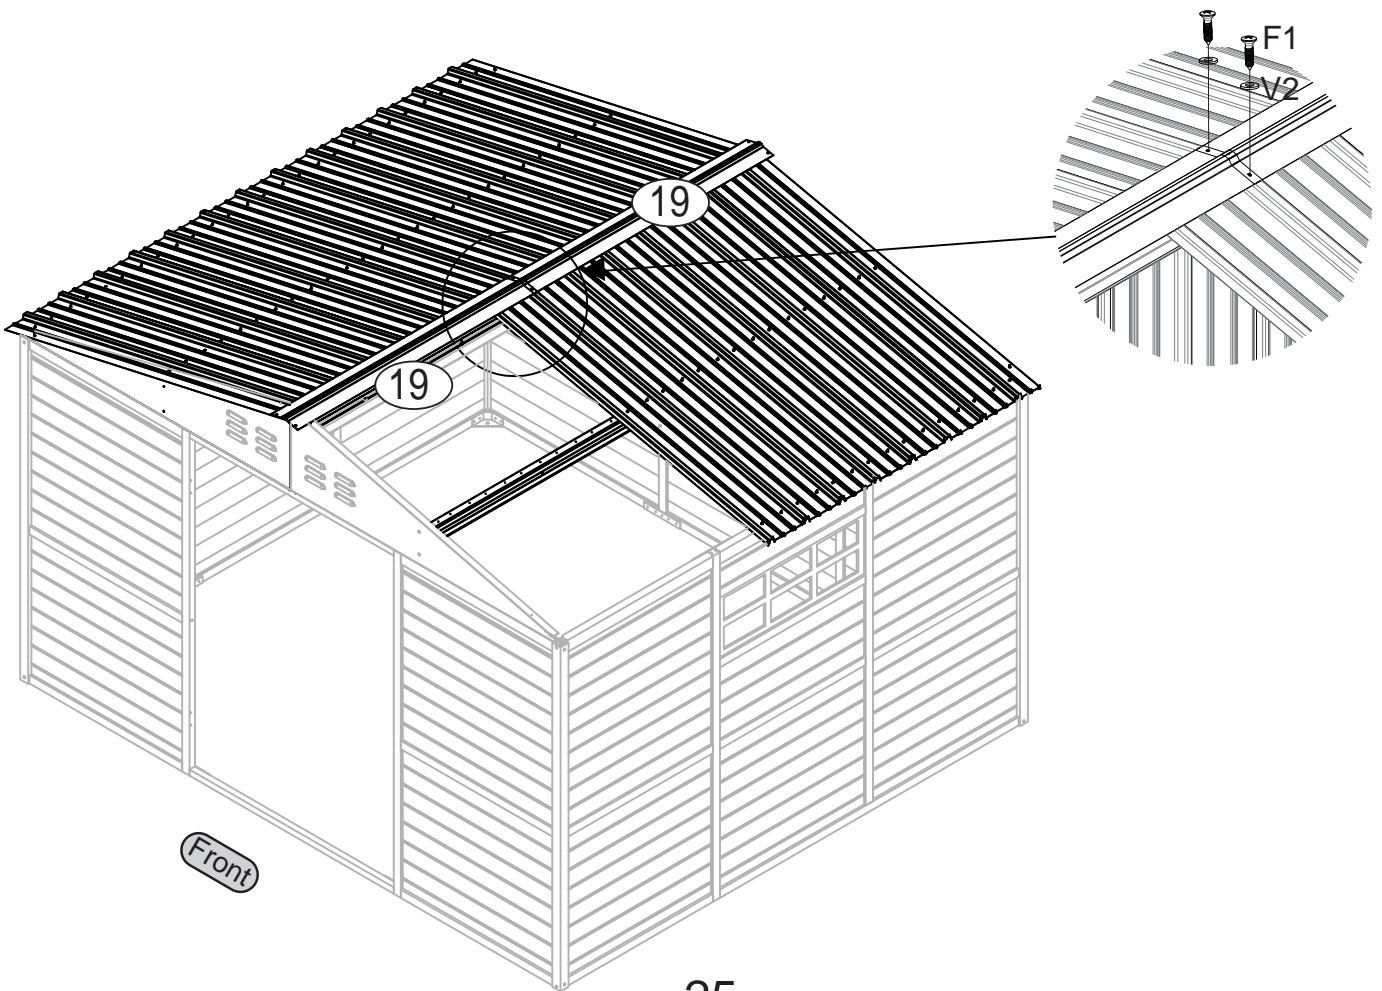


Step29



Installation tips: You need to gently lift the 19 and then screw it.

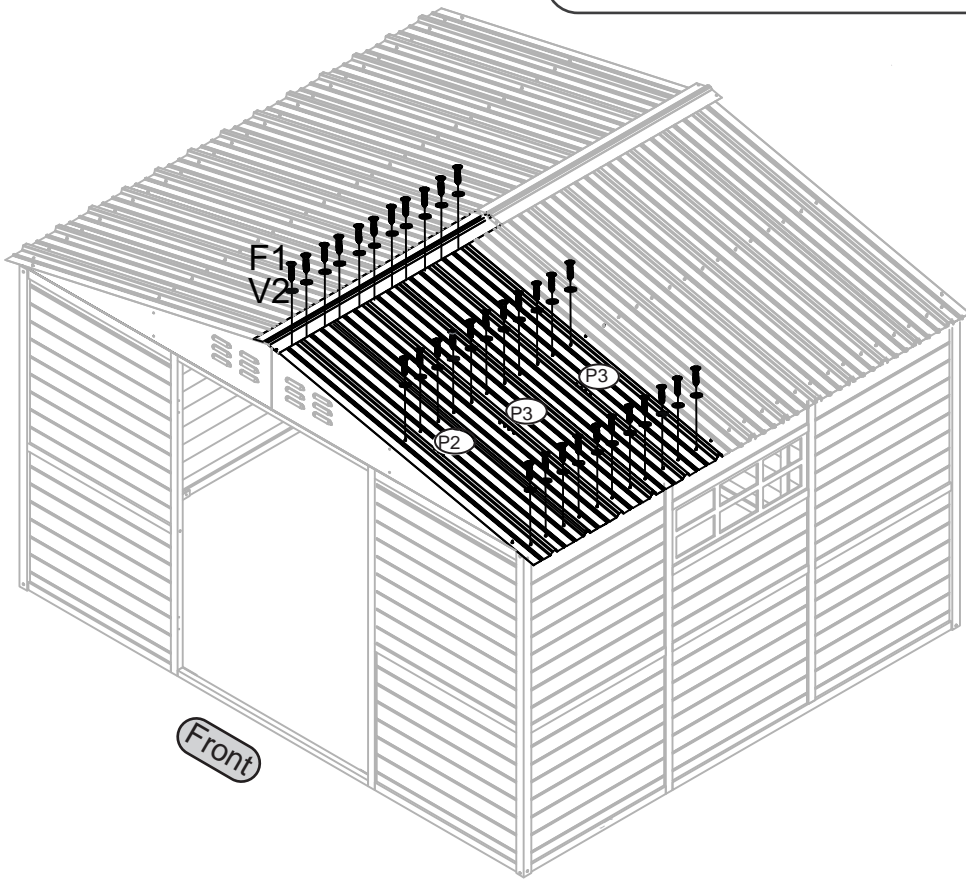

Step30

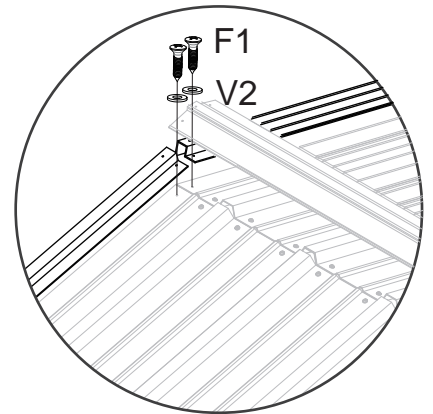
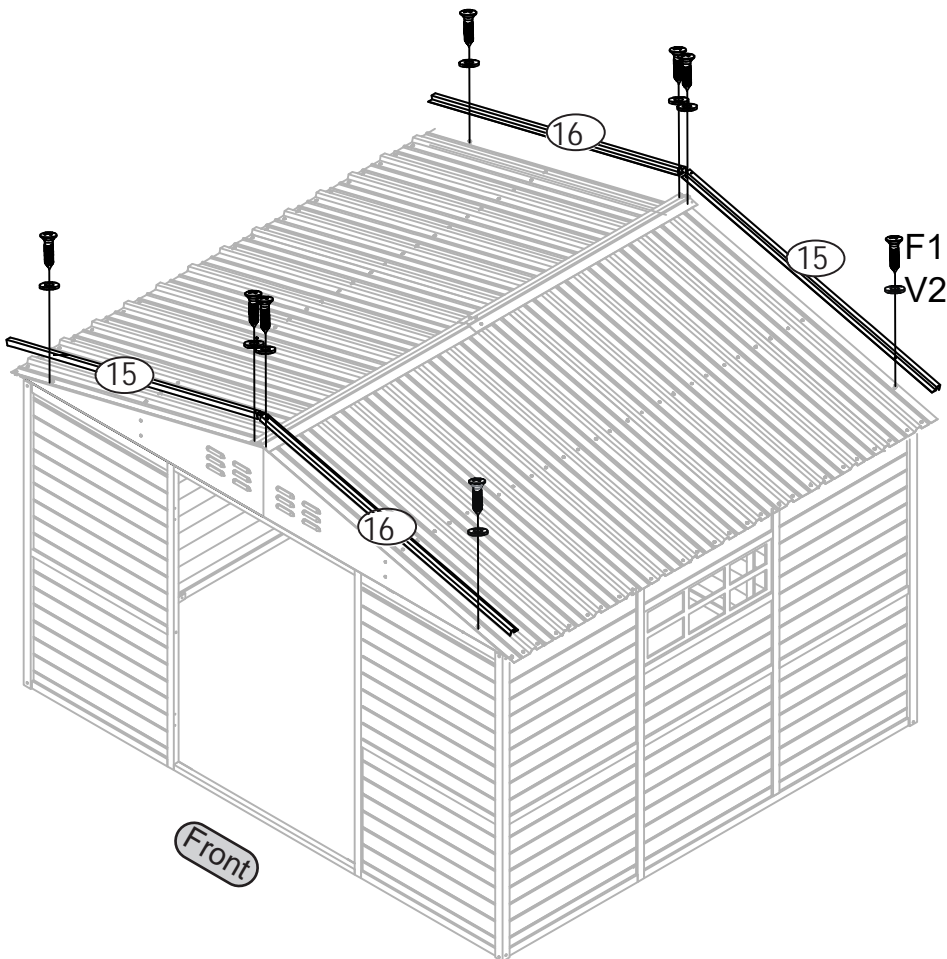


Step31

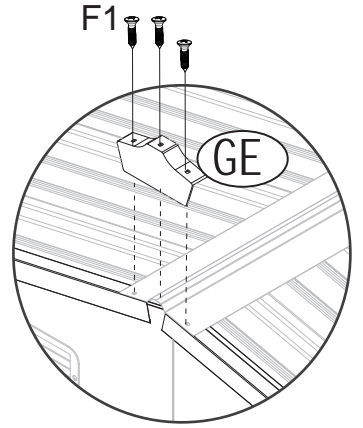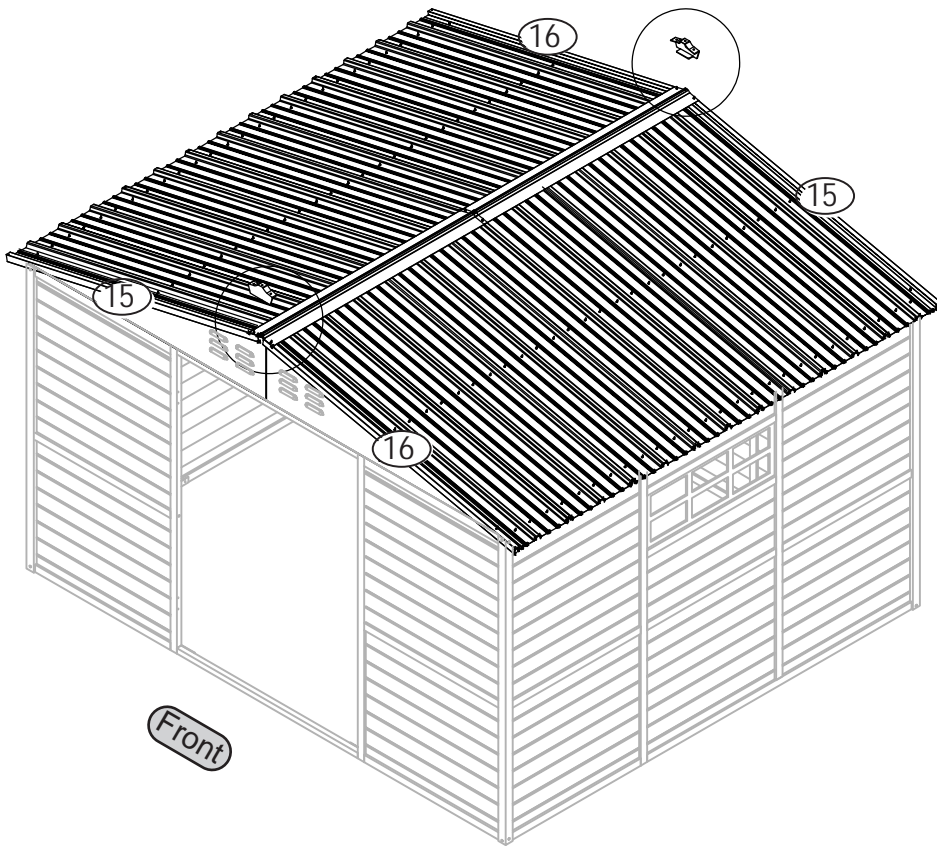


x2

Step32

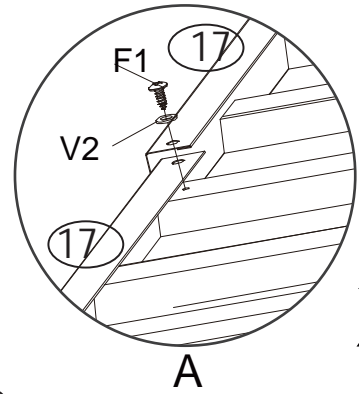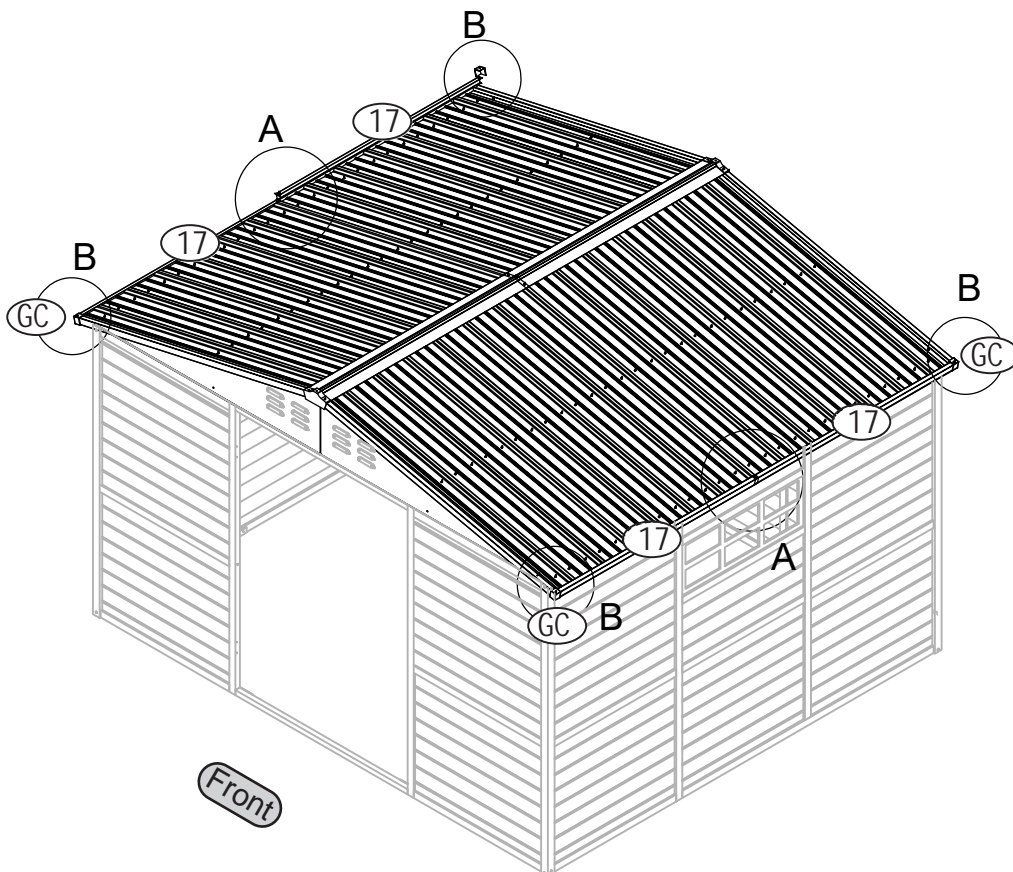


x2

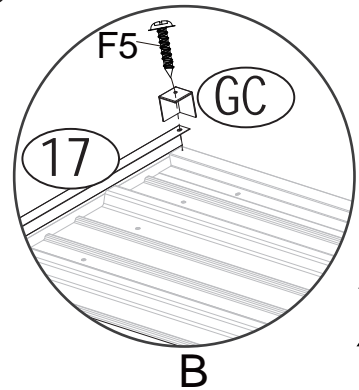


x4

Step33

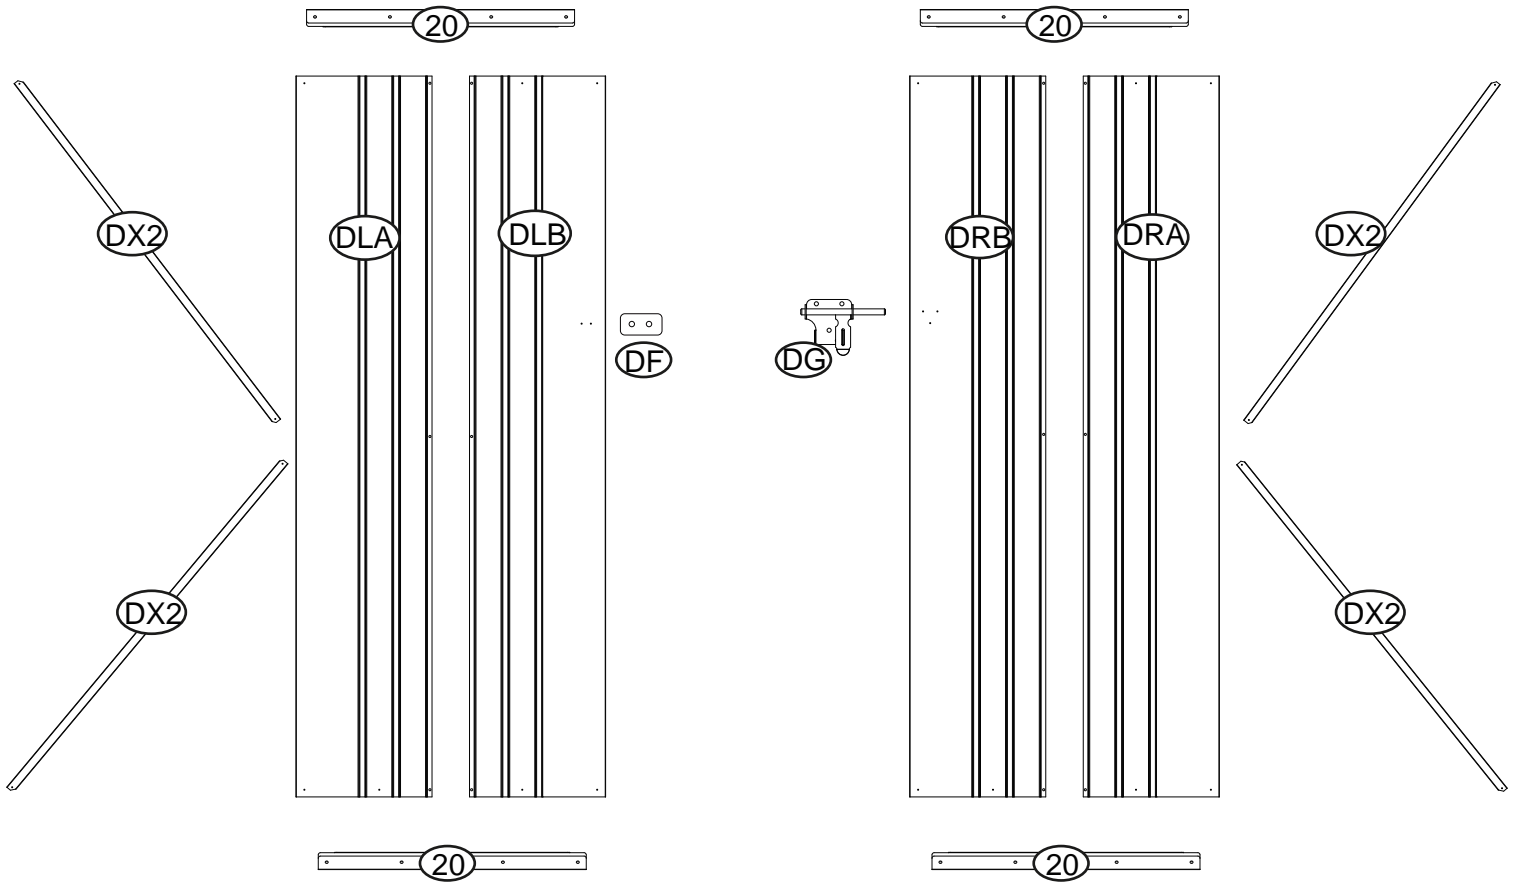


Step34

The other door operates the same way

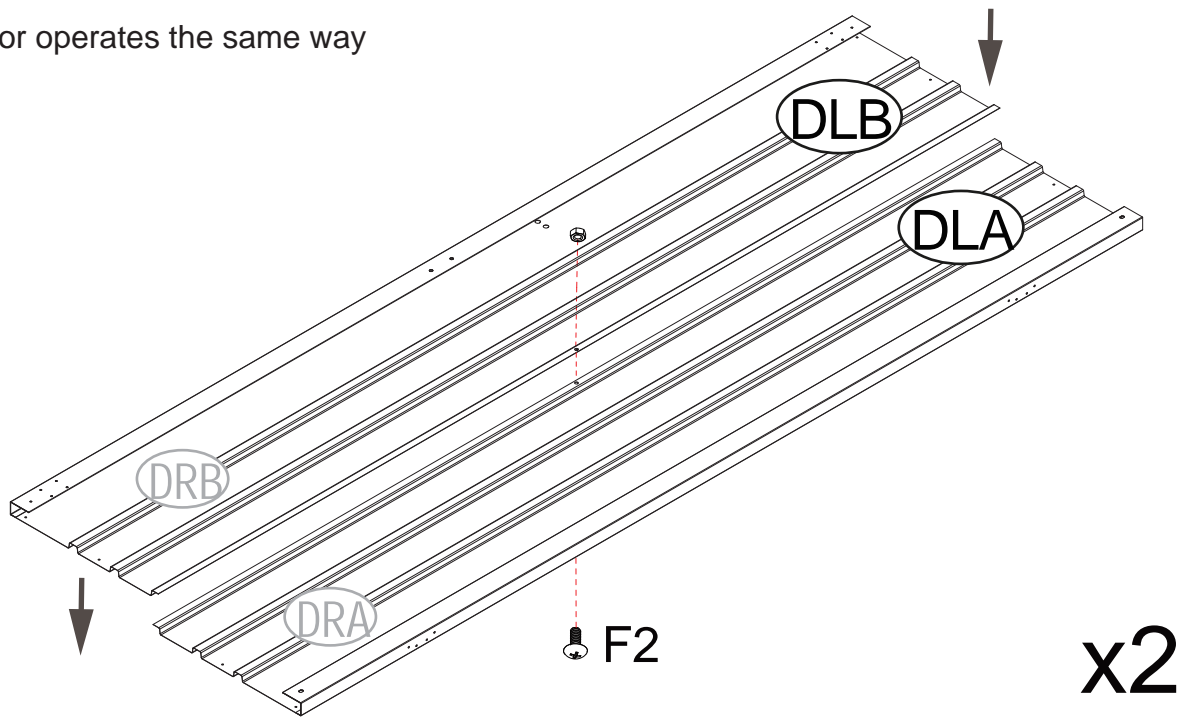



Step35

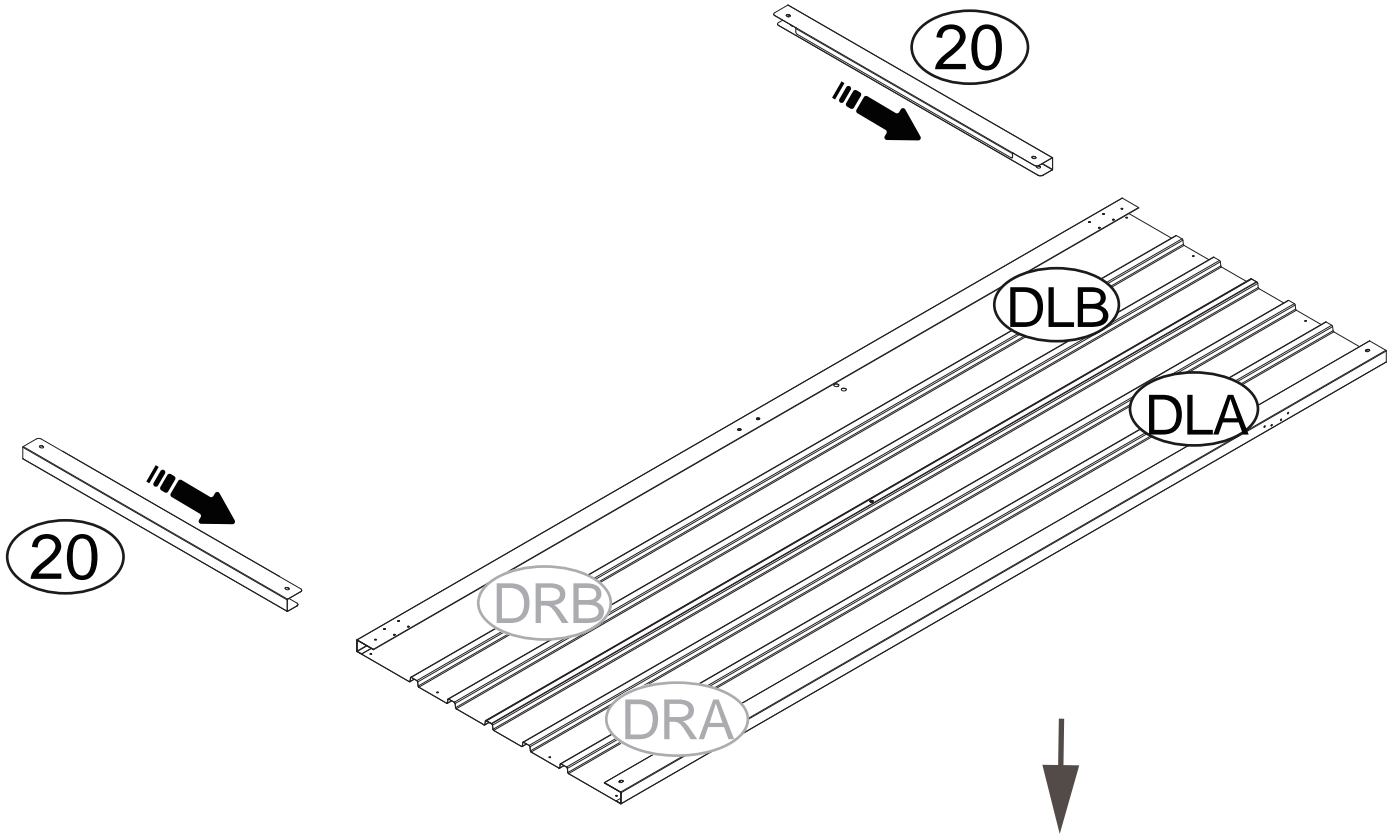


Step36





The other door operates the same way

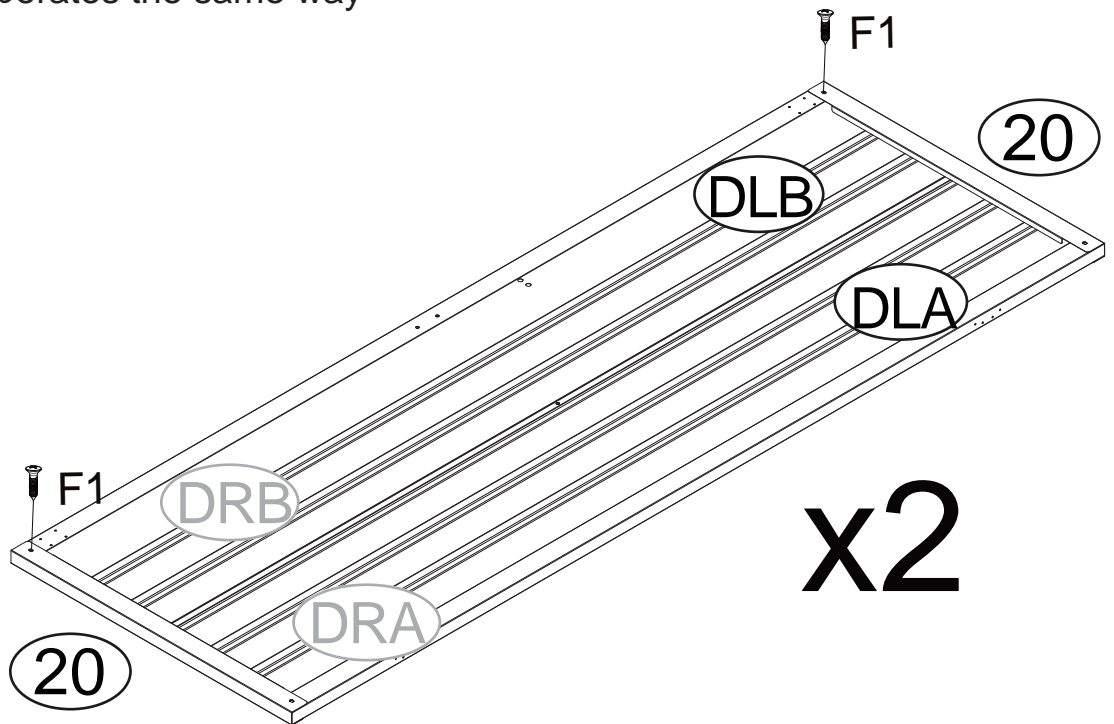


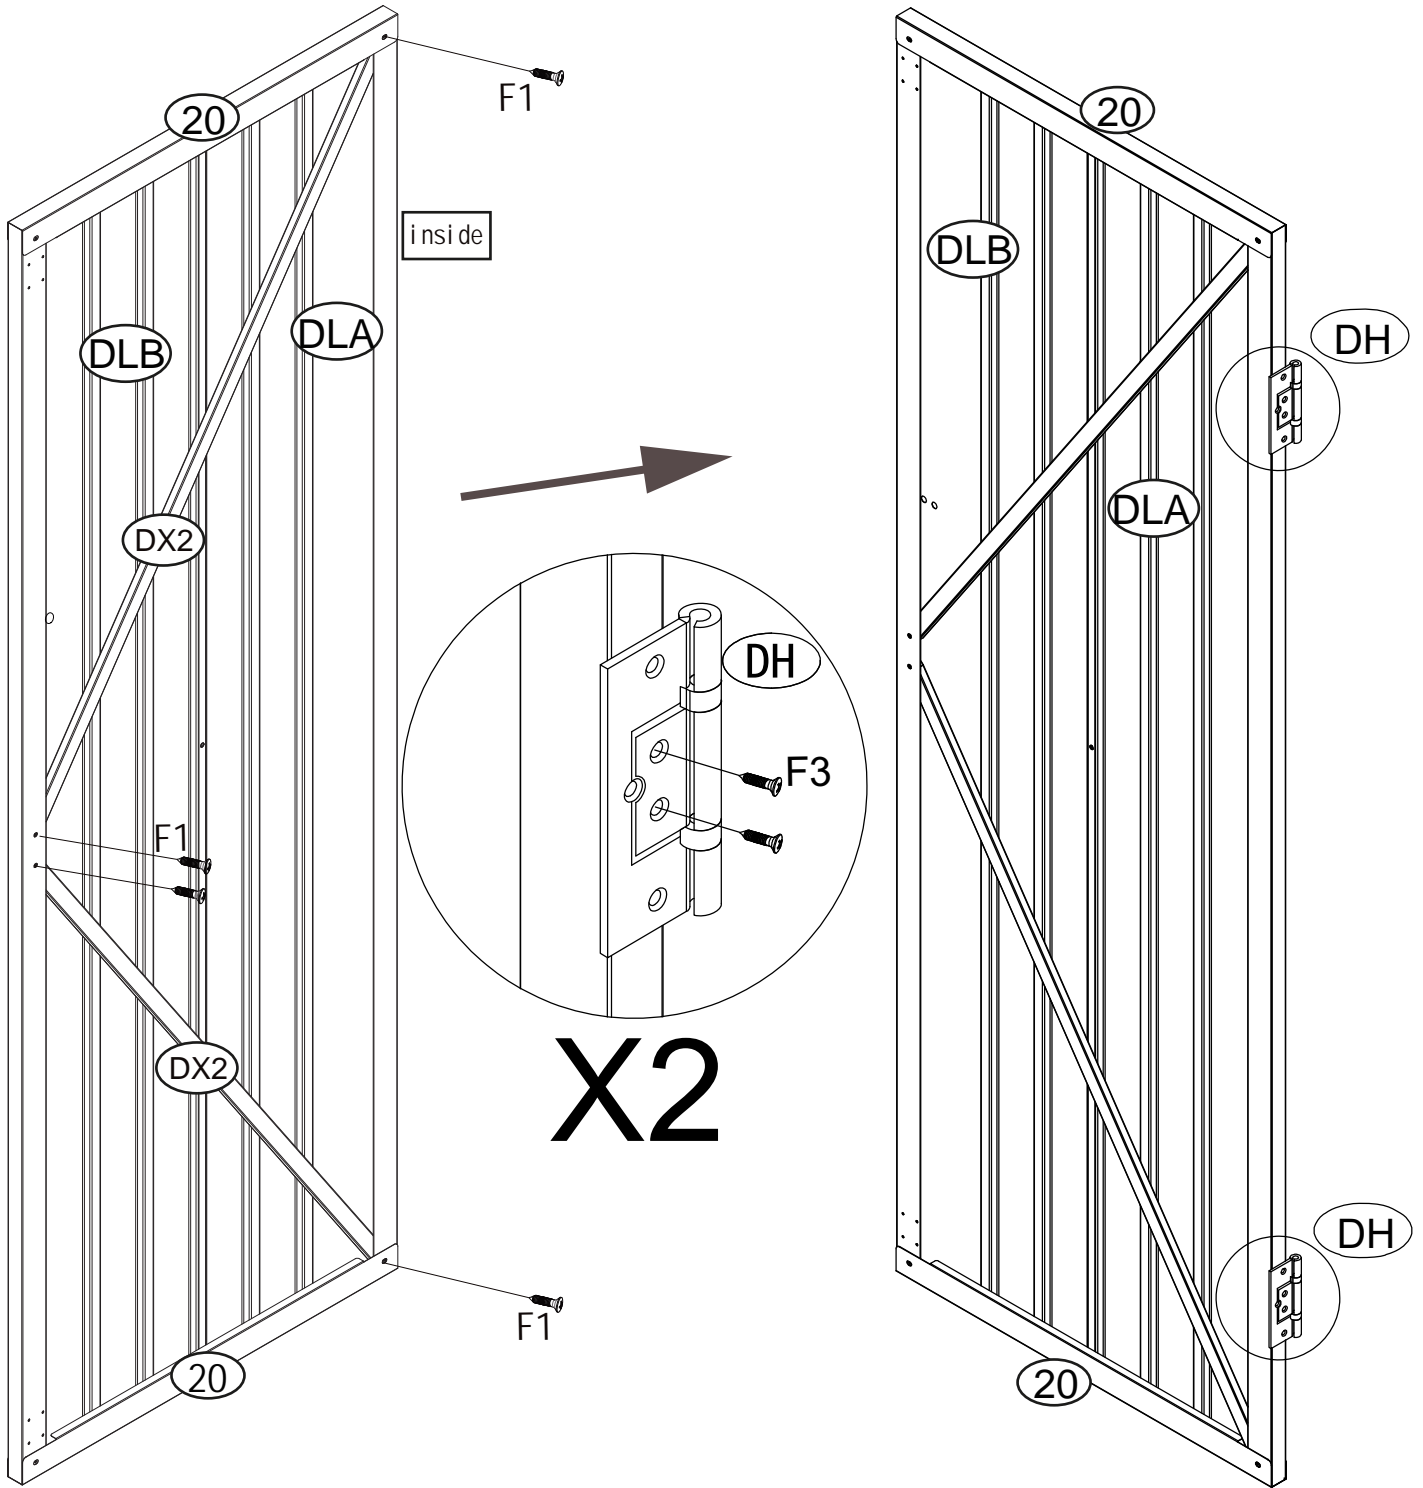


Step38


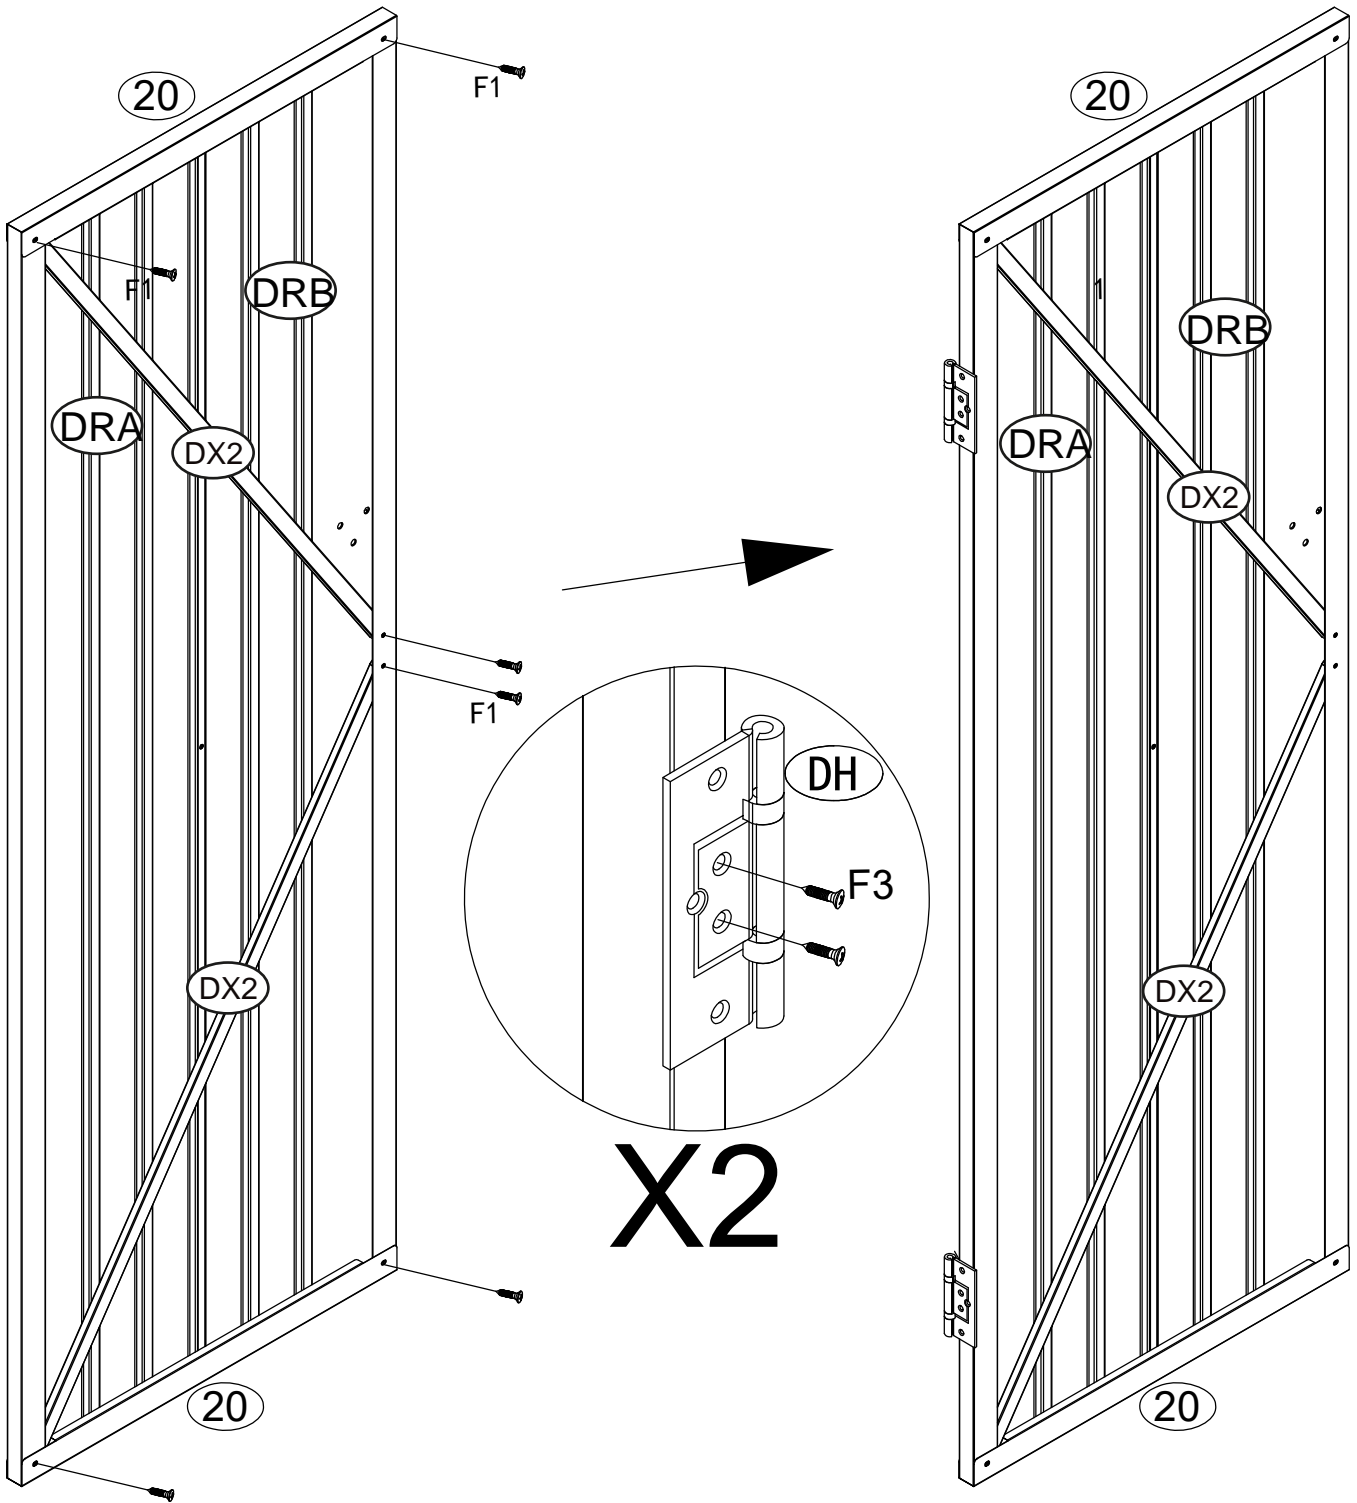


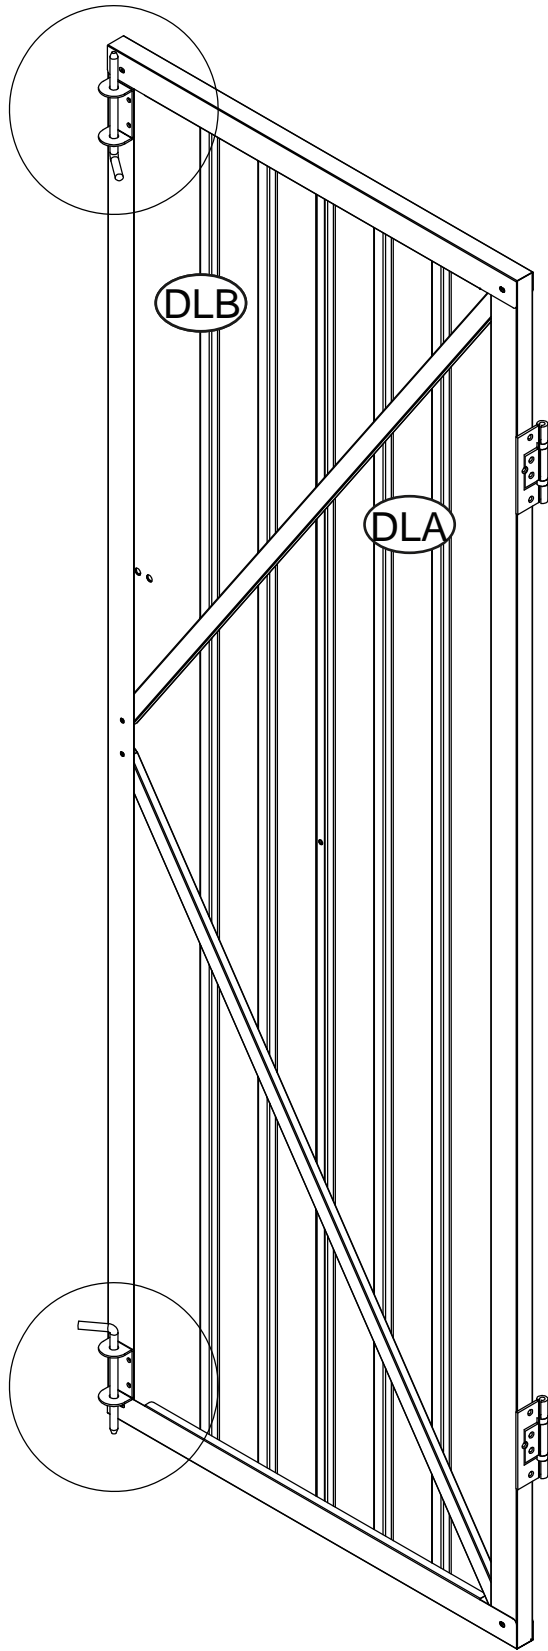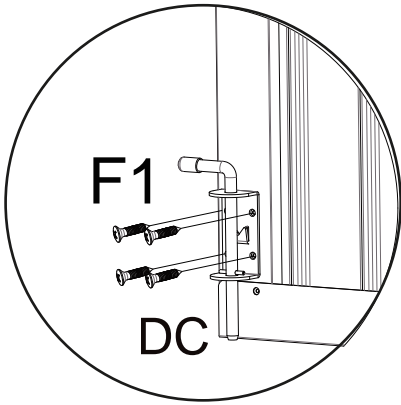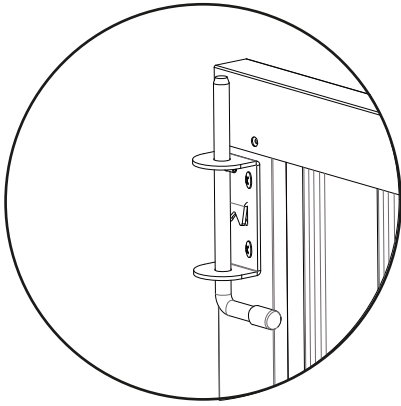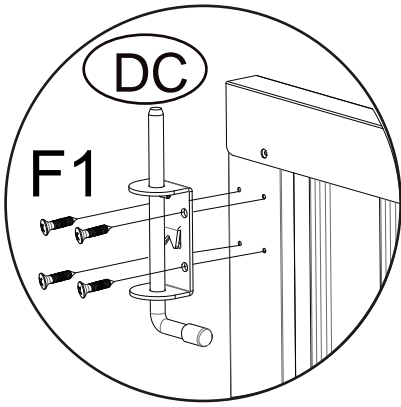


Step40

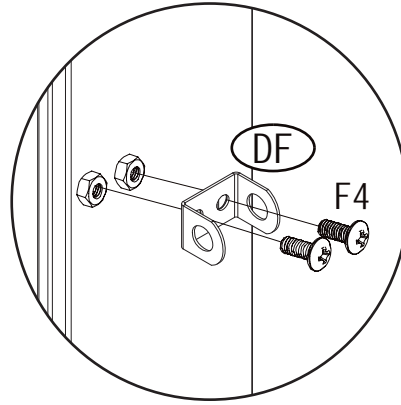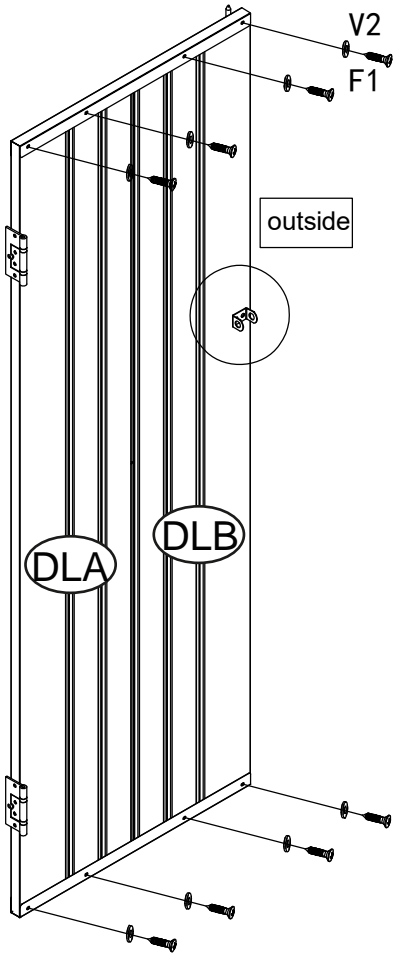


Step41

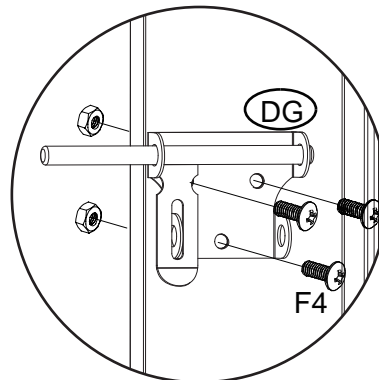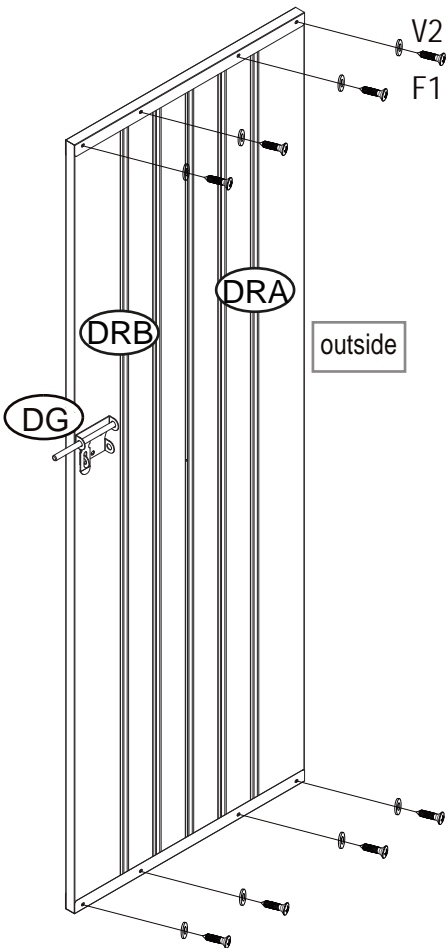

Step42

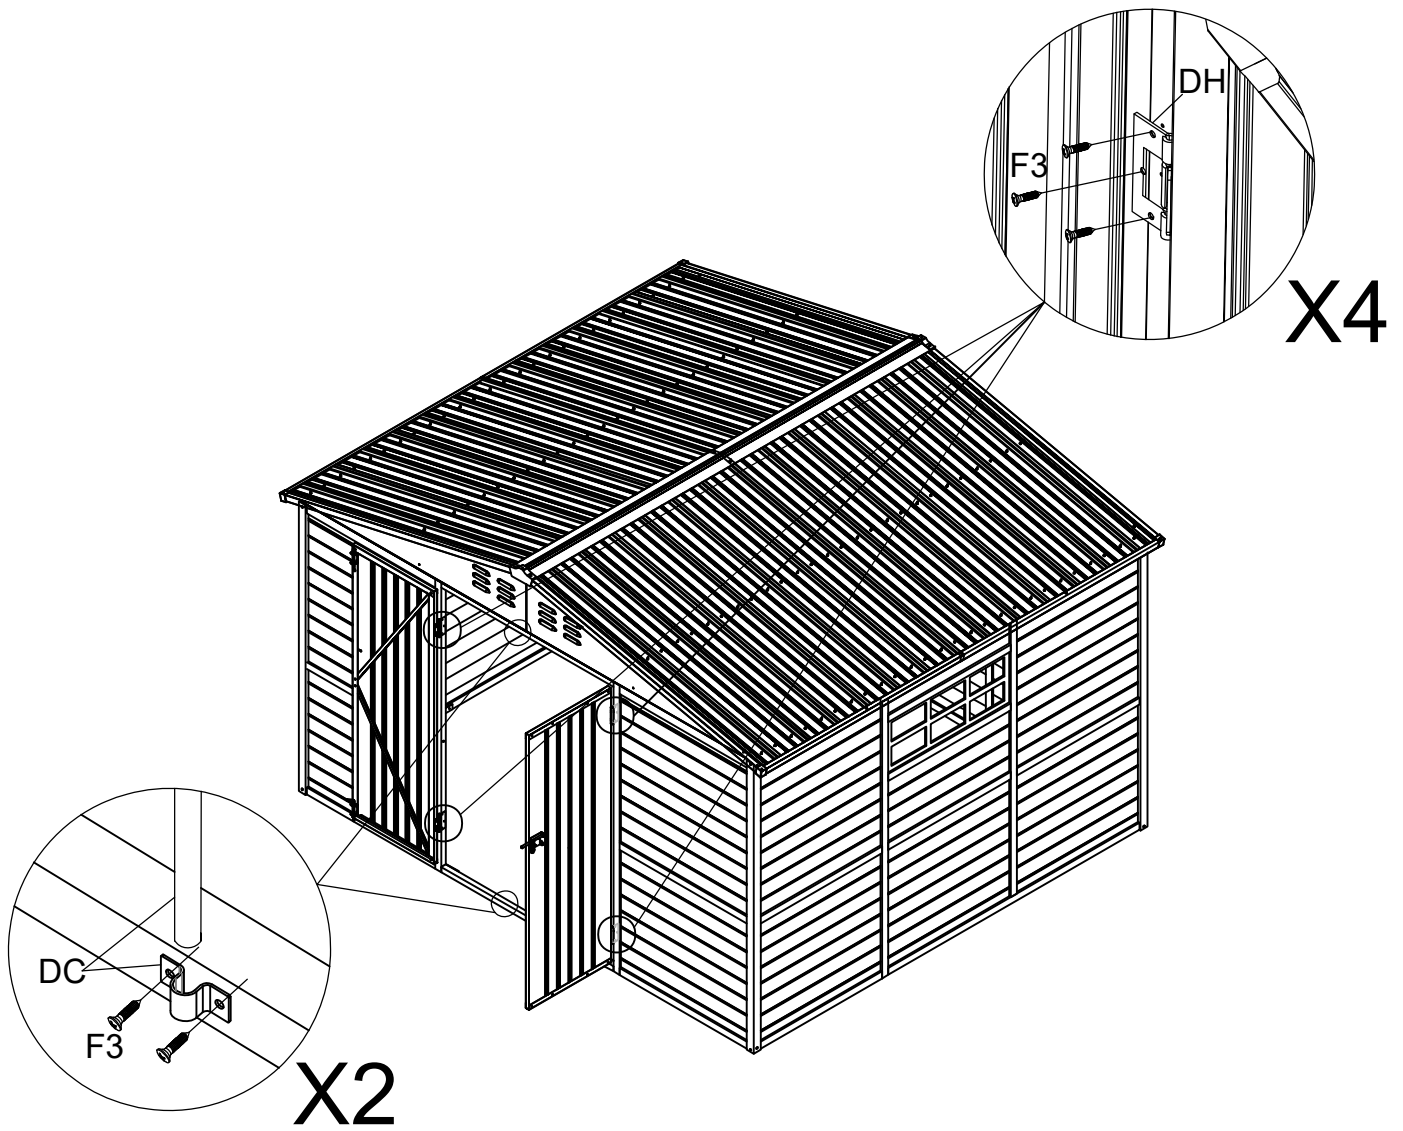

Step43

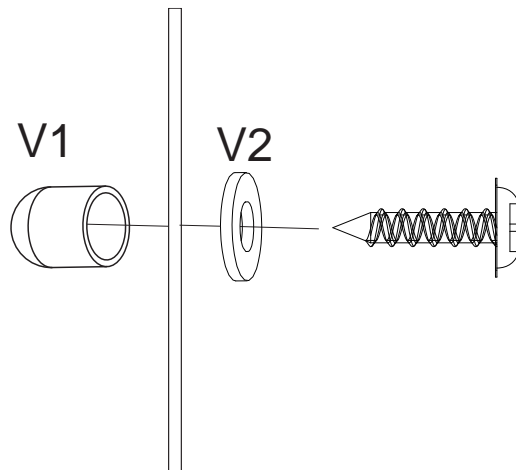

Put it on the screw tip to prevent injury.