


ASSEMBLY INSTRUCTIONS

36 INCH-BATH VANITY-CABINET


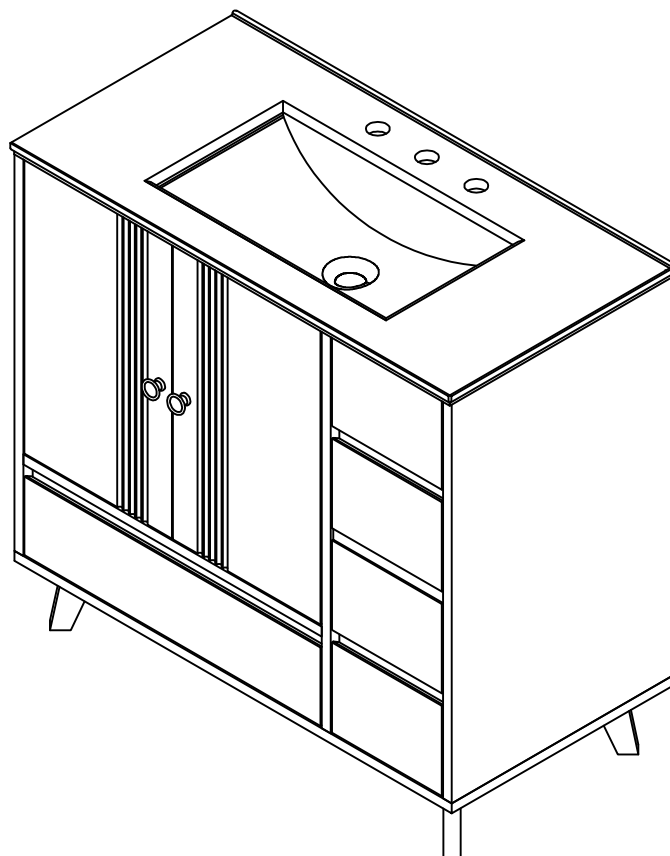


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED



*Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.

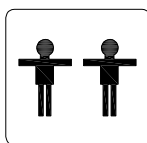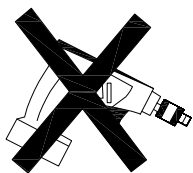


+

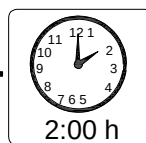

Tools Required




(Not included)



(Not included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

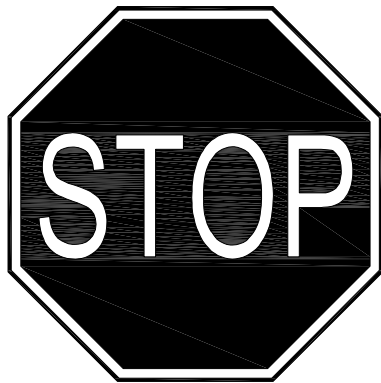

**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.










Before Installation


Important- Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


Cam Lock Assembly Instructions

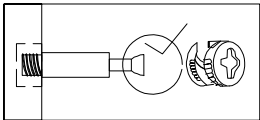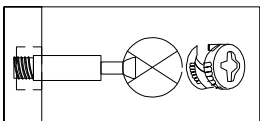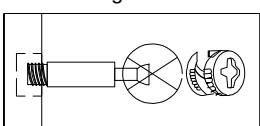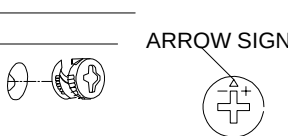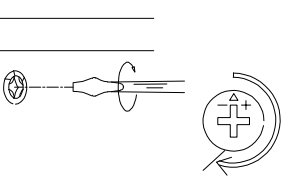		Diagram A Insert Cam Ball into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

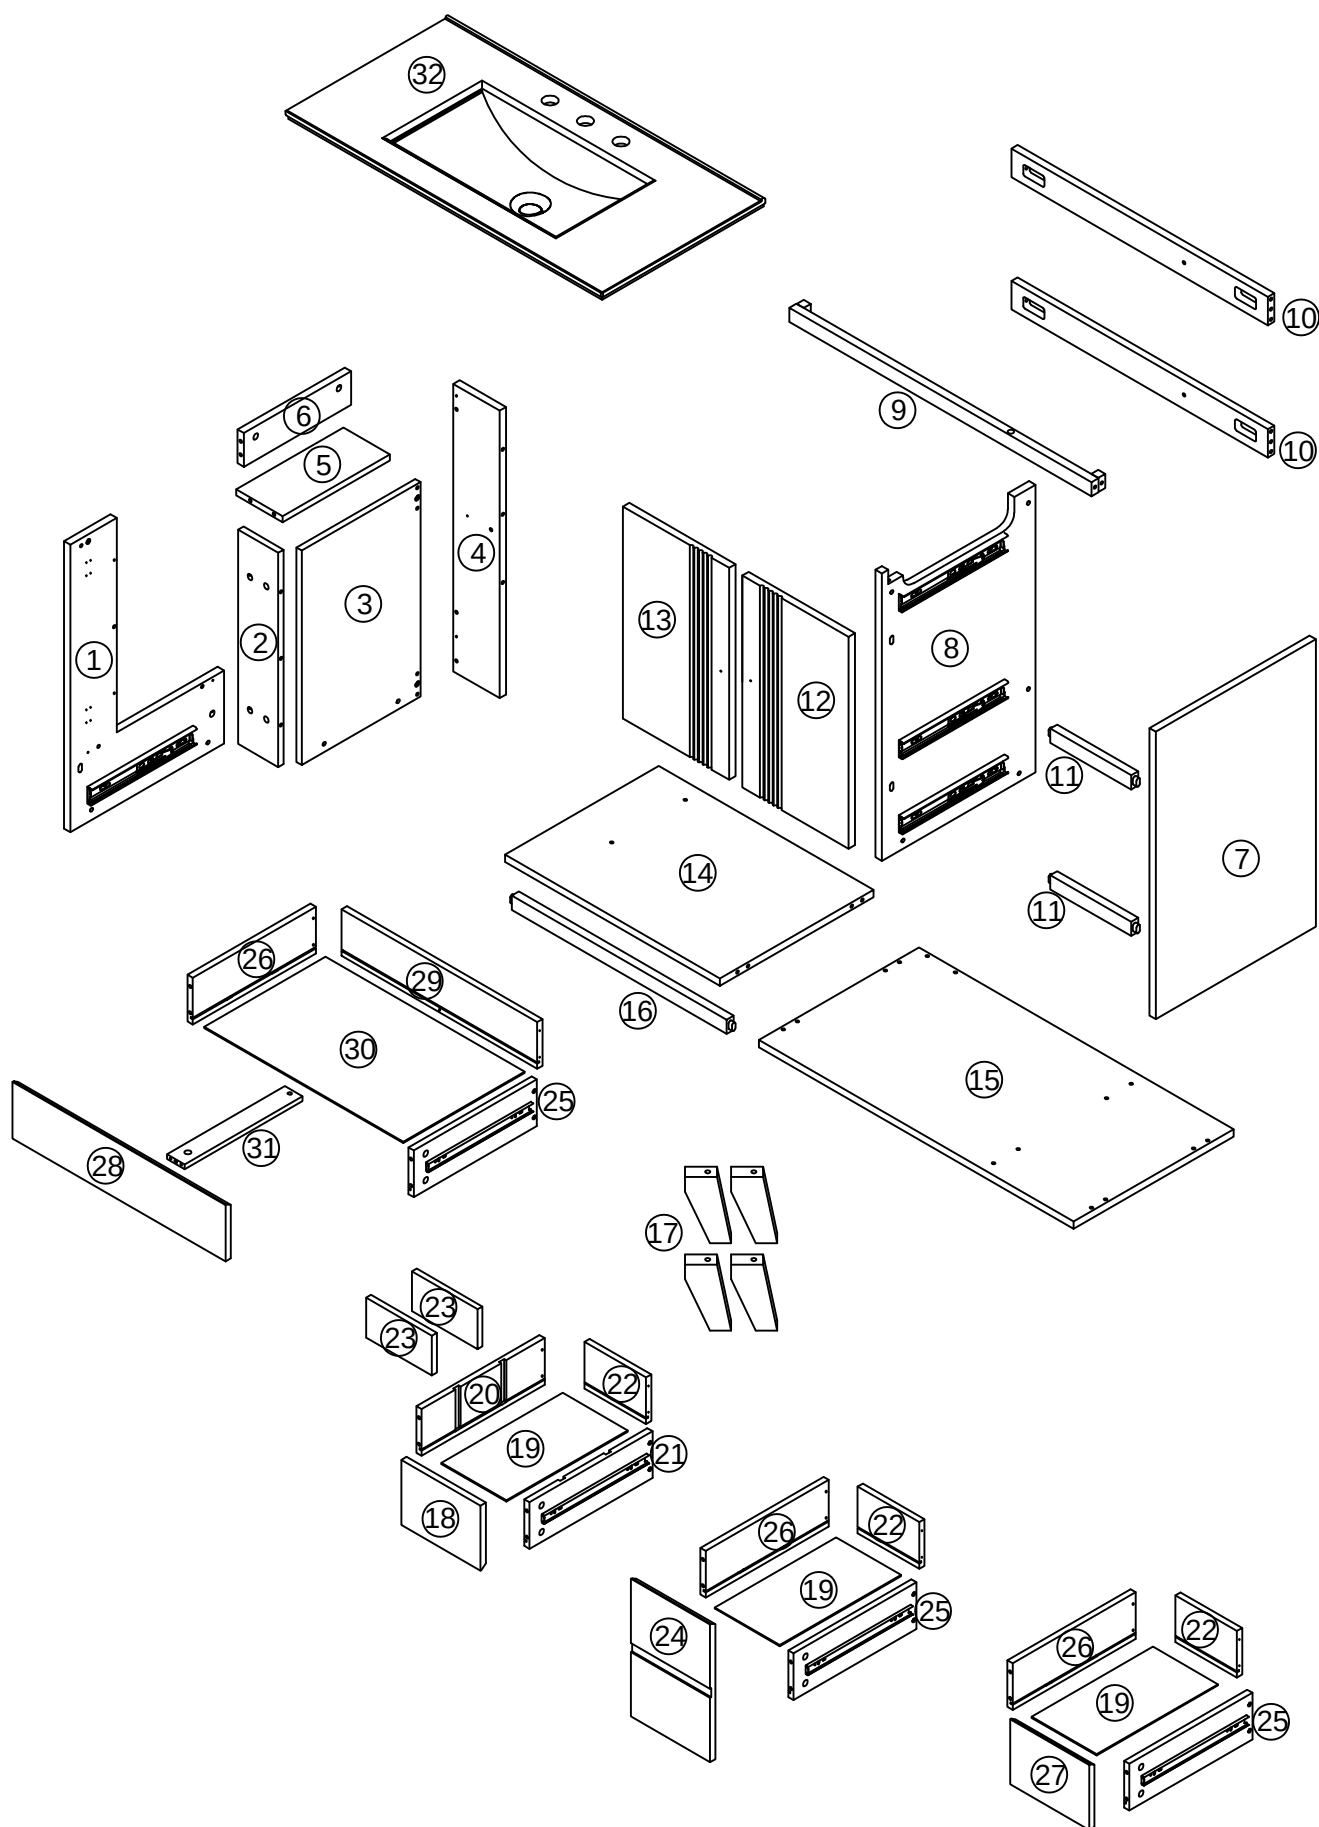

Part Lists

1

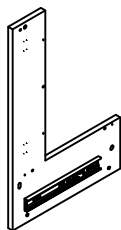


Side Panel (L) - 1 Pc

2




Front Panel of Storage - 1 Pc

3




Back Panel of Storage - 1 Pc

4




Side Panel of Storage - 1 Pc

5




Middle Panel of Storage - 1 Pc

6




Top Panel of Storage - 1 Pc

7




Side Panel (R) - 1 Pc

8




Panel Mid - 1 Pc

9

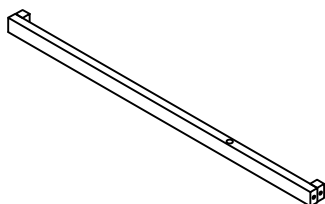

Crossbar Top - 1 Pc

10

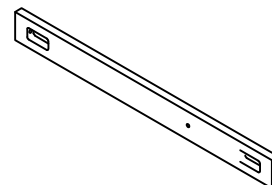


Rear Panel - 2 Pcs

11




Short Front Bar - 2 Pcs

12




Right Door (R) - 1 Pc

13



Left Door (L) - 1 Pc


14

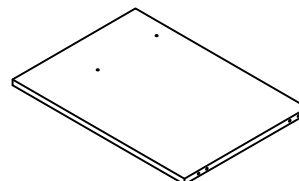

Fix Panel - 1 Pc


Part Lists

15

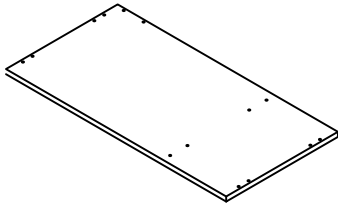

Bottom Panel - 1 Pc

16

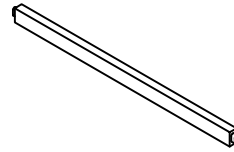


Long Front Bar - 1 Pc

17




Foot Cabinet - 4 Pcs

18

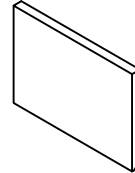


Upper Drawer Face - 1 Pc

19

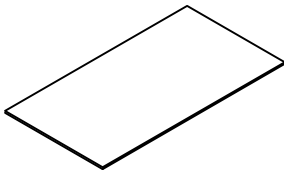


Drawer Bottom Panel - 3 Pcs

20

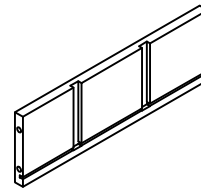


Upper Drawer Side (L) - 1 Pc

21

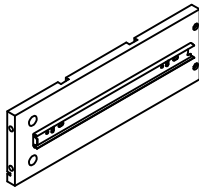


Upper Drawer Side (R) - 1 Pc

22

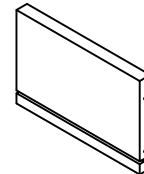

Drawer Rear Panel - 3 Pcs

23

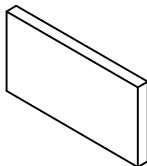


Divice Drawer Box - 2Pcs

24




Double Drawer Face - 1 Pc

25

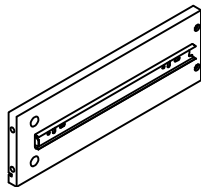


Drawer Side panel (R) - 3 Pcs

26

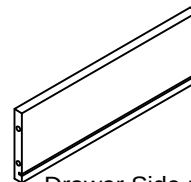


Drawer Side panel (L) - 3 Pcs

27

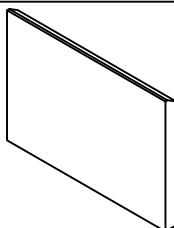

Bottom Drawer Face - 1 Pc


28

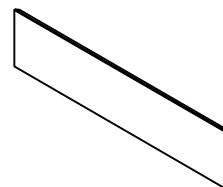

Long Drawer Face - 1 Pc


Part Lists

29

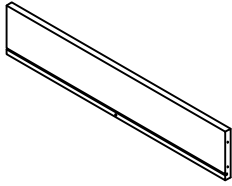


Long Drawer Rear Panel - 1 Pc

30

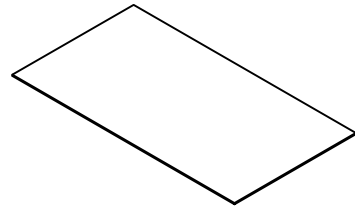


Long Drawer Panel Bottom - 1 Pc

31

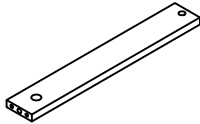










Support Drawer Bottom Panel - 1 Pc

32

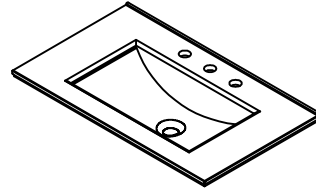


36" Sink - 1 Pc

Hardware Lists

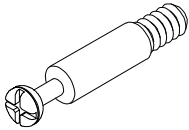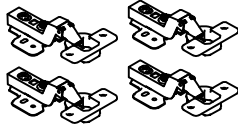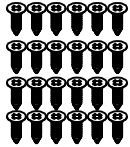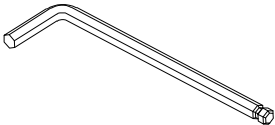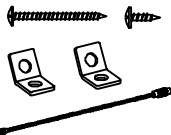A  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (35pcs)	B  $\varnothing 6 \times 32 \text{mm}$ Three in one bolts (32pcs)	C  $\varnothing 14.5 \times 9.5 \text{mm}$ Three in one locks (32pcs)
D  $\varnothing 8 \times \varnothing 4 \times 30 \text{mm}$ Round head screw (17pcs)	E  $\varnothing 10 * 10 \text{mm}$ Plasstic Nut (17Pcs)	F  4set  $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$ 24 Pcs Damping hinge (4sets)
G  Knob(2Pcs)	H  M4*20mm Handle screw (2Pcs)	K  K4mm Allen key (1pc)
M  $\varnothing 10 * 12 \text{mm}$ Barrel Nut (11pc)	N  M6 x 45mm Head bolt (15pcs)	P  M6 x 35mm Head bolt (6pcs)
R  $\varnothing 6 \times 20 \text{mm}$ Wood dowel (2pcs)	S  Anti fall Hardware (2sets)	


STEP 1:

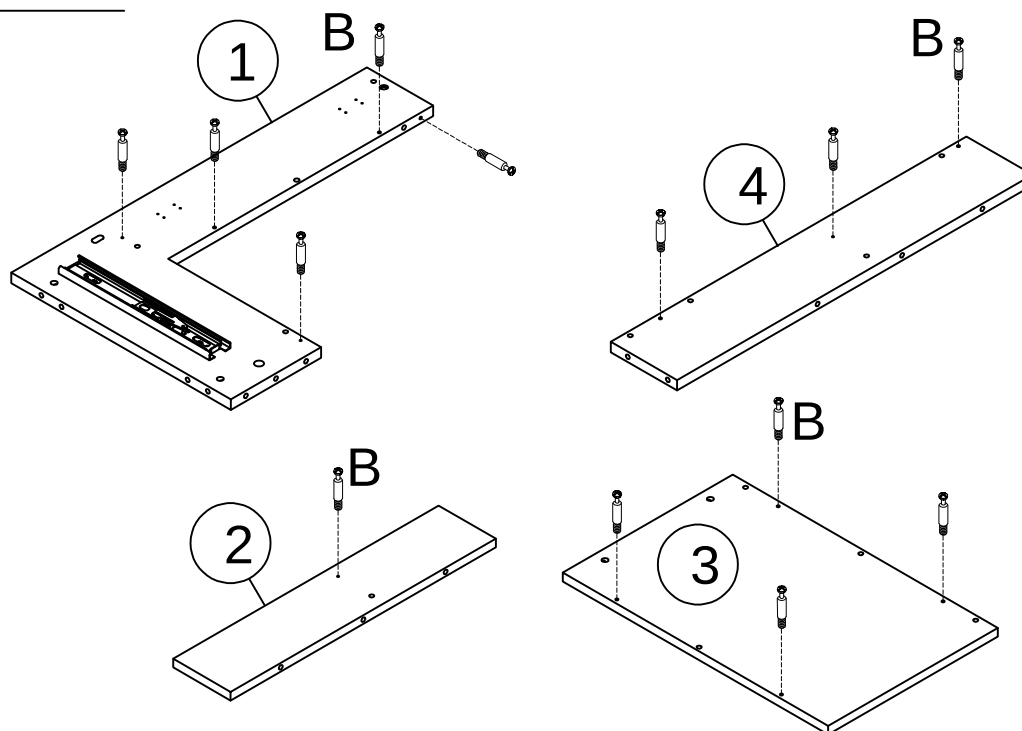

13 Pcs

B

STEP 2:

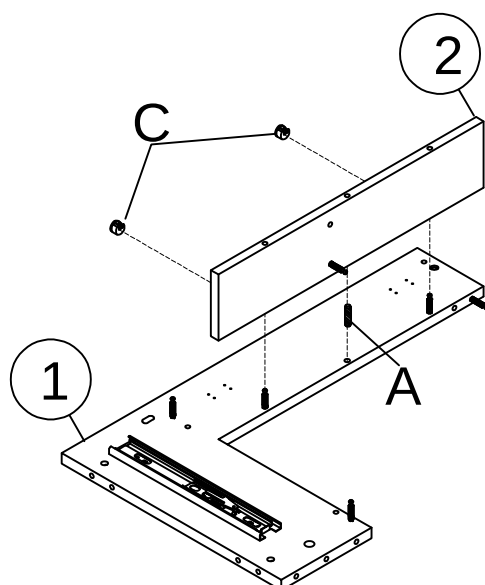

1 Pc


A



2 Pcs

C

STEP 3:

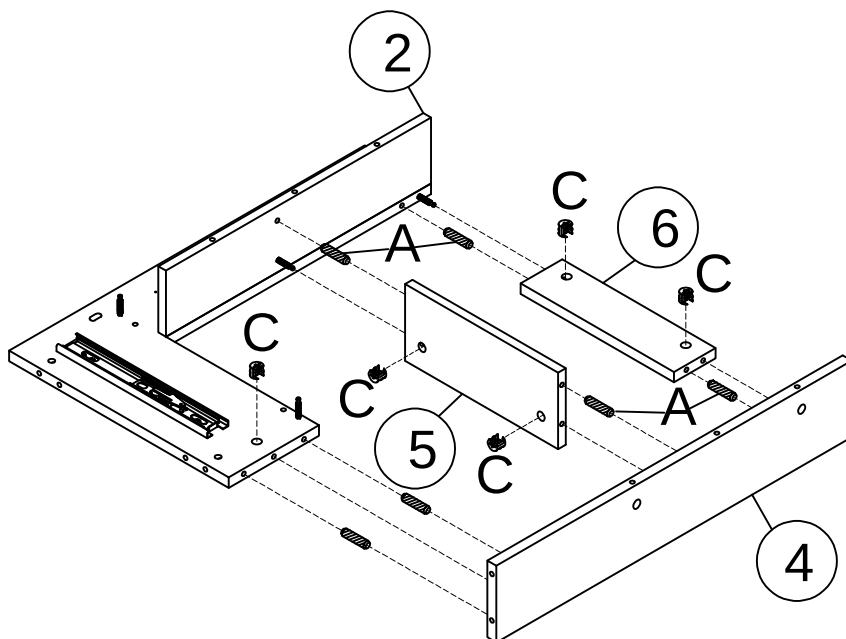

A




6 Pcs

C



5 Pcs

STEP 4:

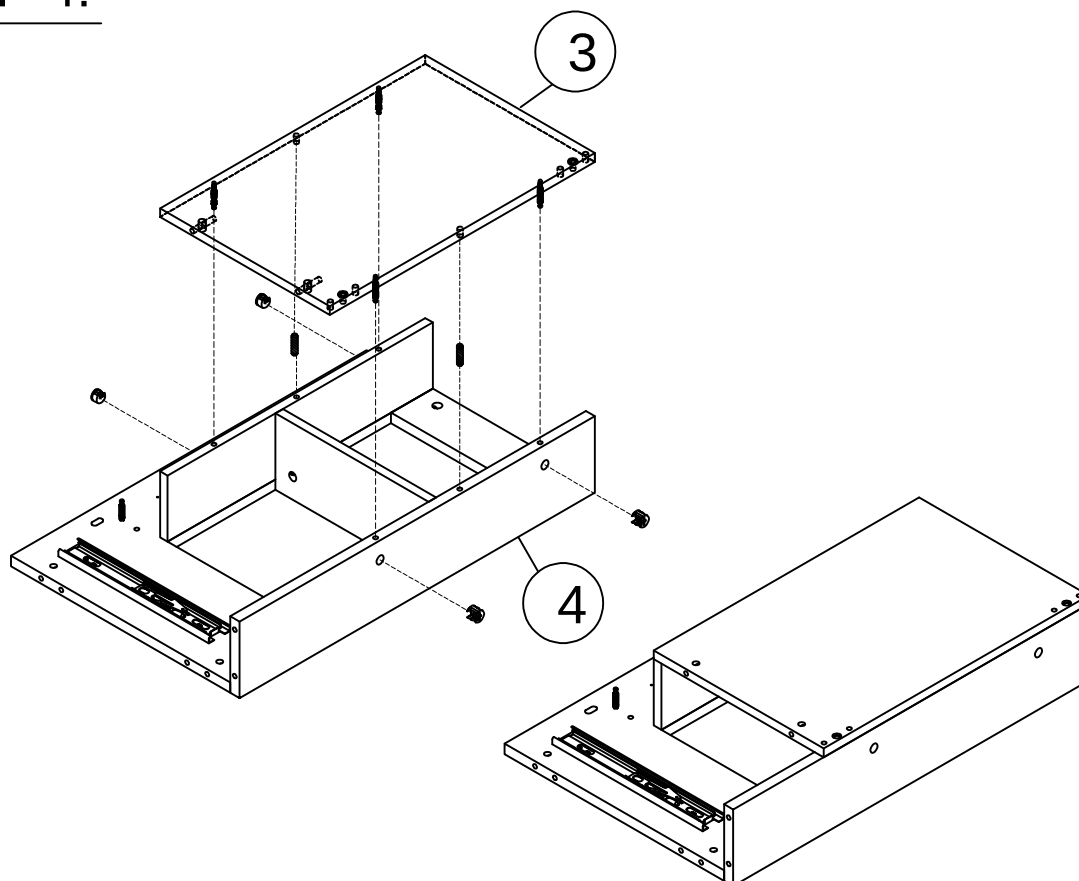

A




2 Pcs

C



4 Pcs

STEP 5:

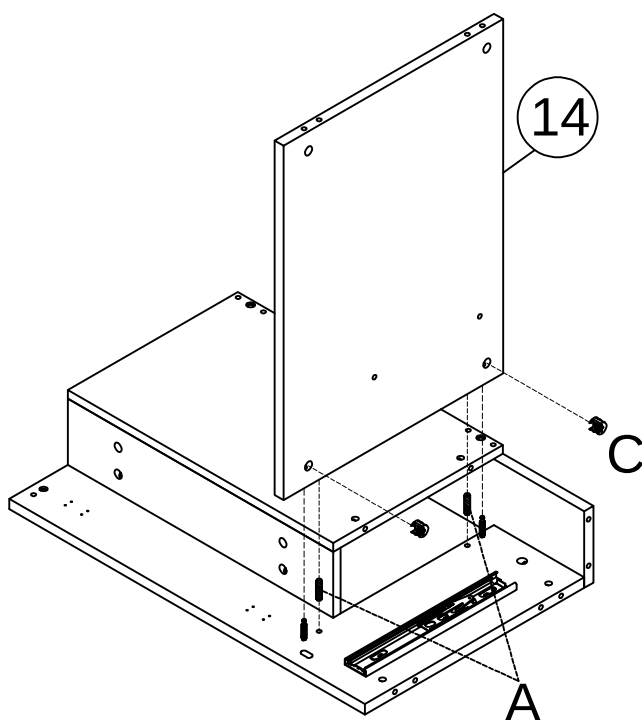

A




2 Pcs

C



2 Pcs

STEP 6:

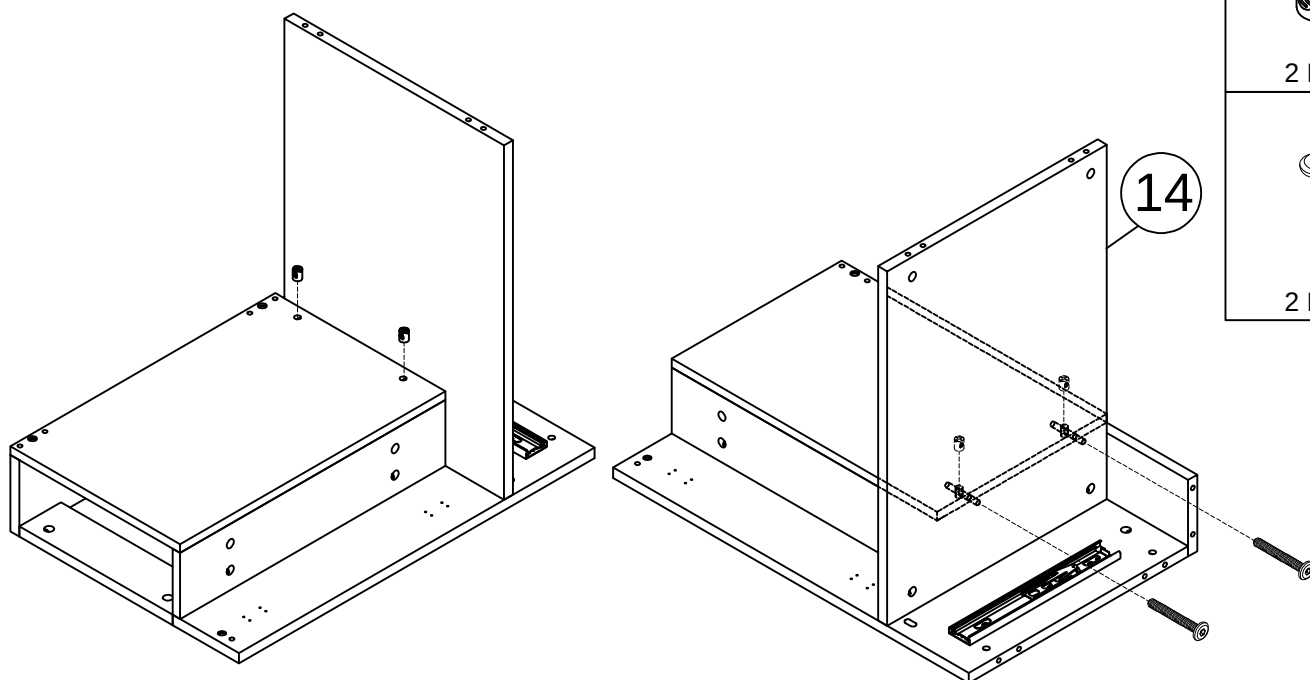


M




2 Pcs

N




2 Pcs


STEP 7:

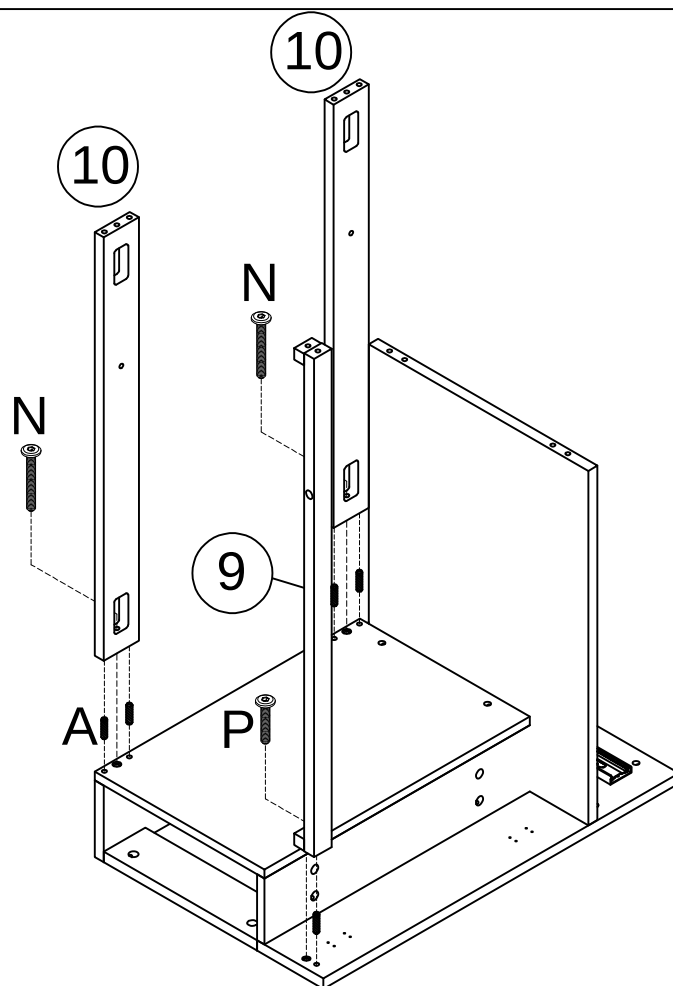


A




N





P




STEP 8:

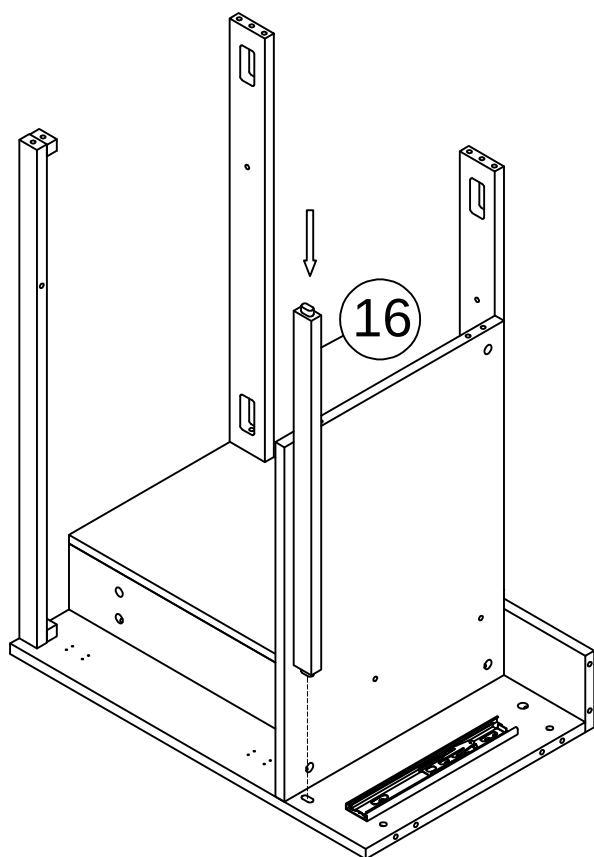

B

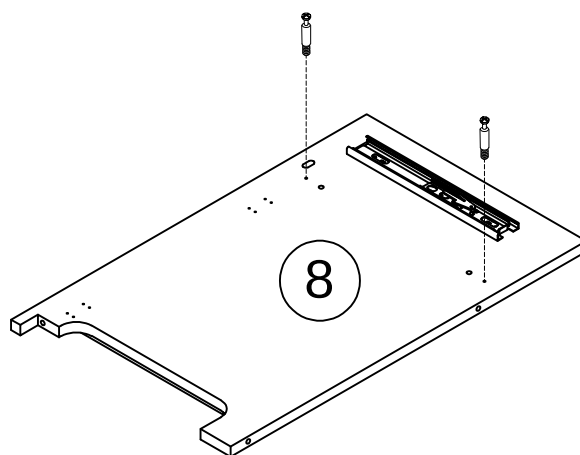

STEP 9:

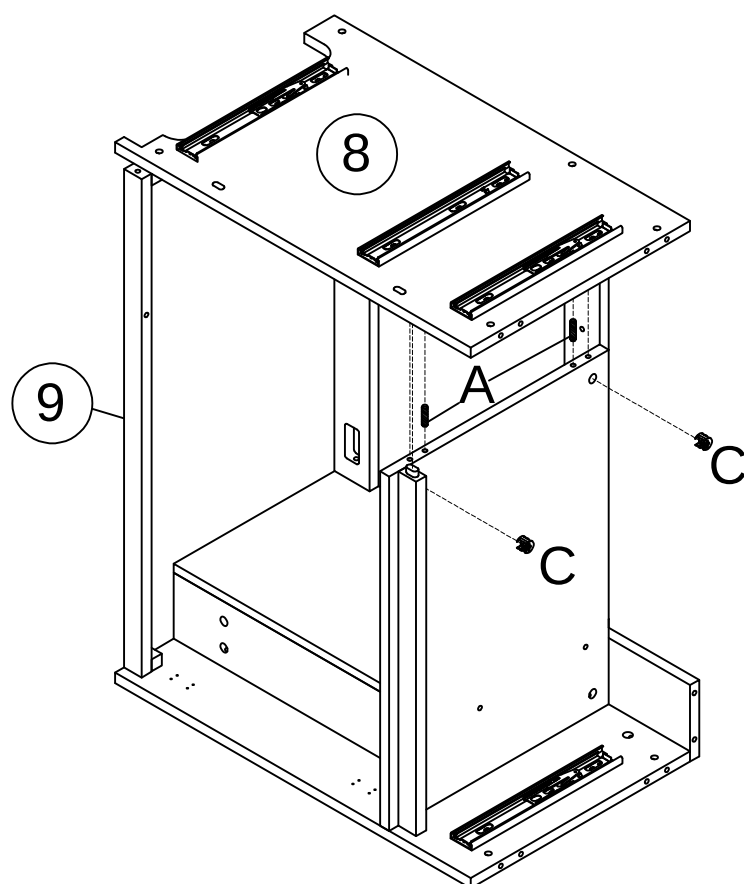


A



C




STEP 10:

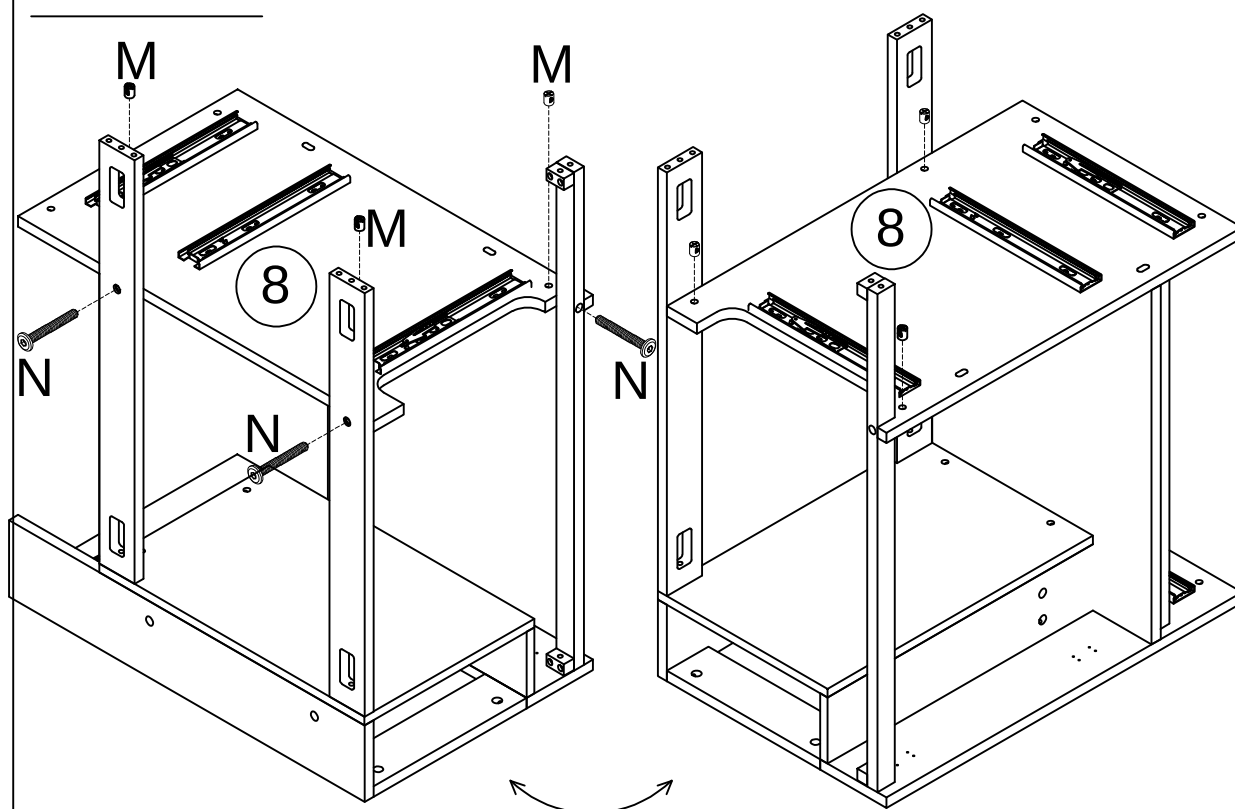


M



N



STEP 11:

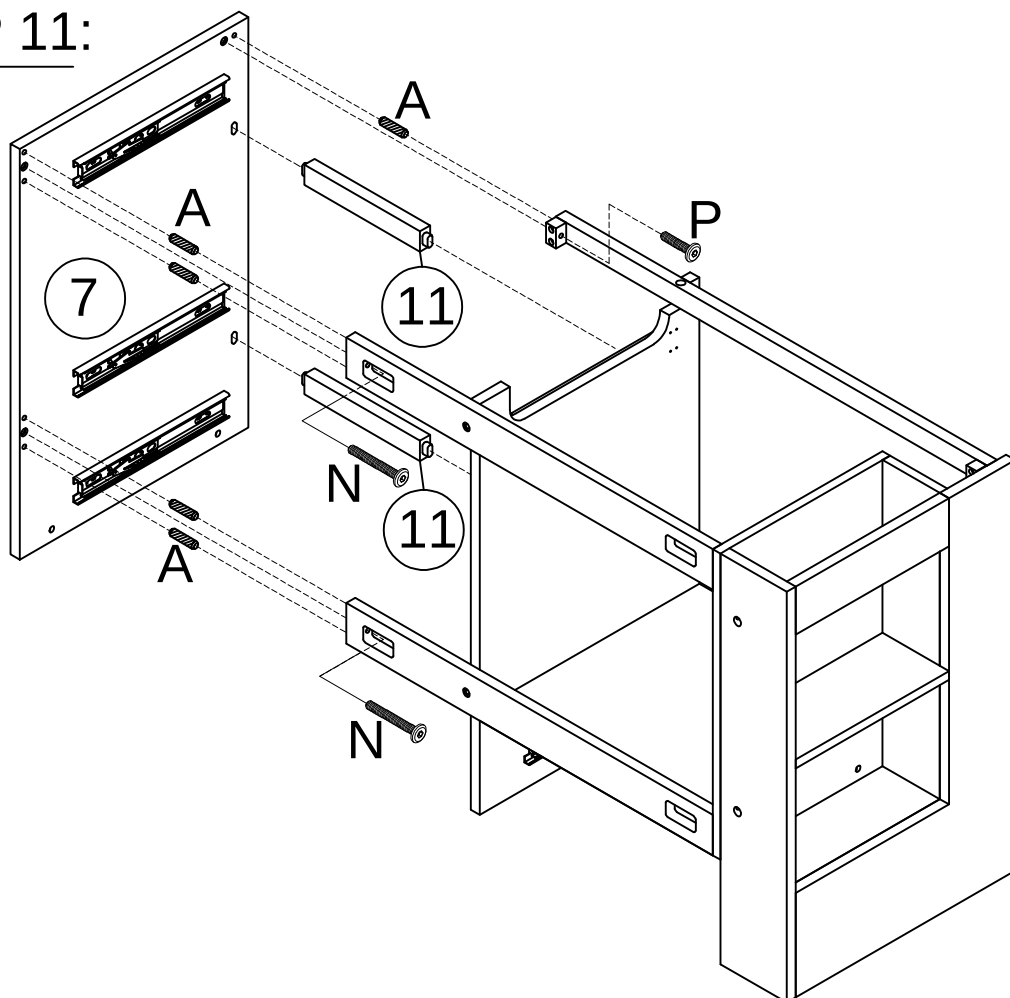

A




5 Pcs

N




2 Pcs

P



1 Pc

STEP 12:

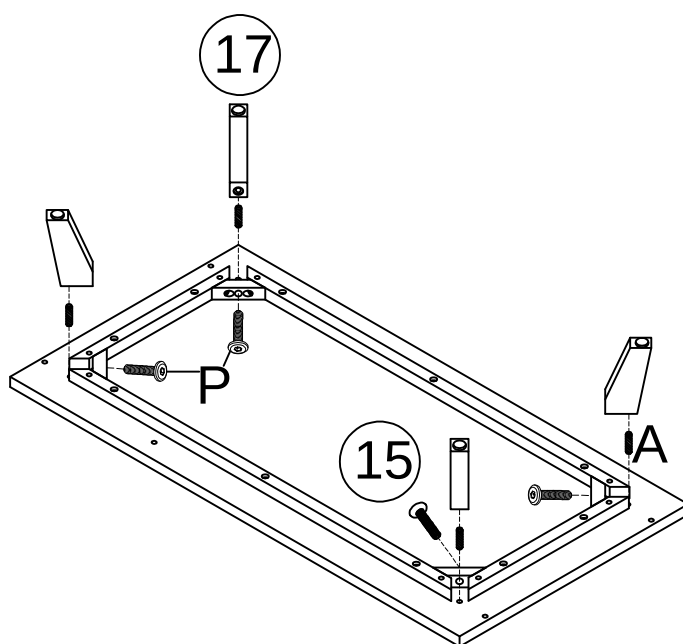


A




4 Pcs

P



4 Pcs

STEP 13:

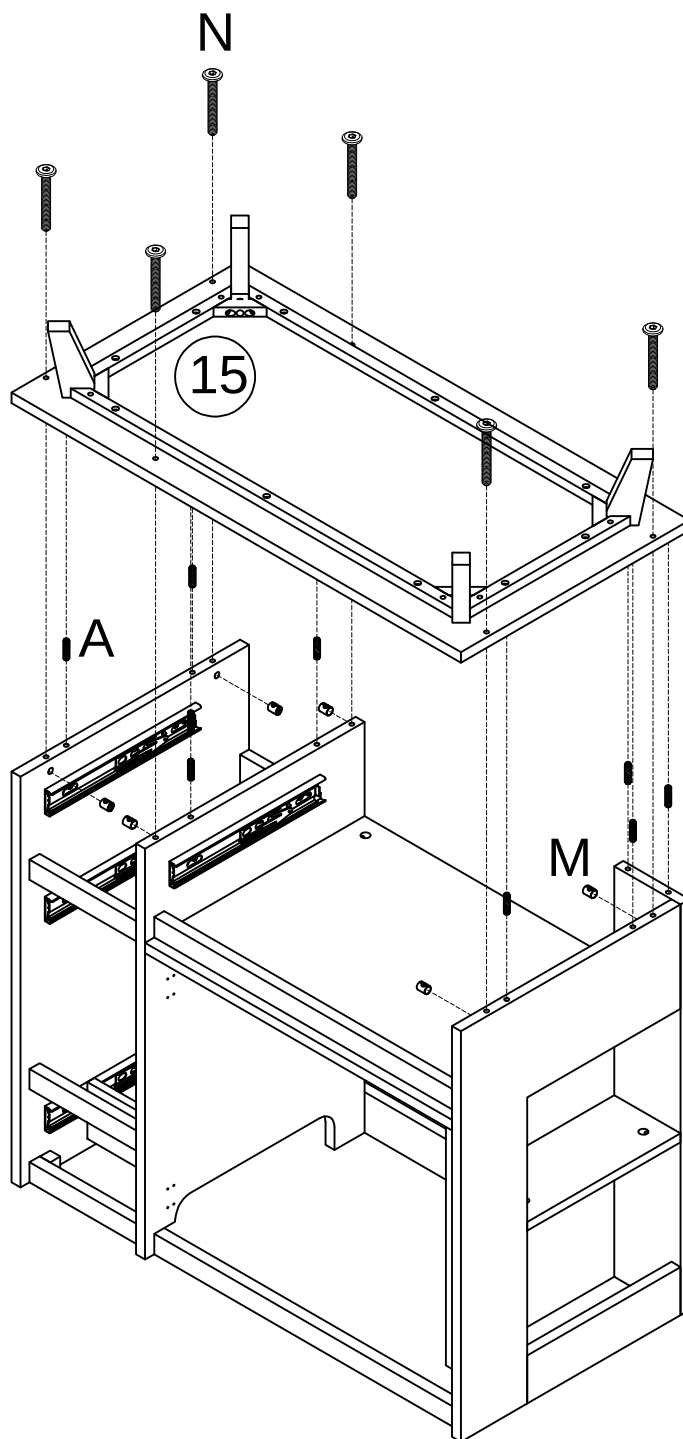

A




8 Pcs

M




6 Pcs

N




6 Pcs





STEP 14 :

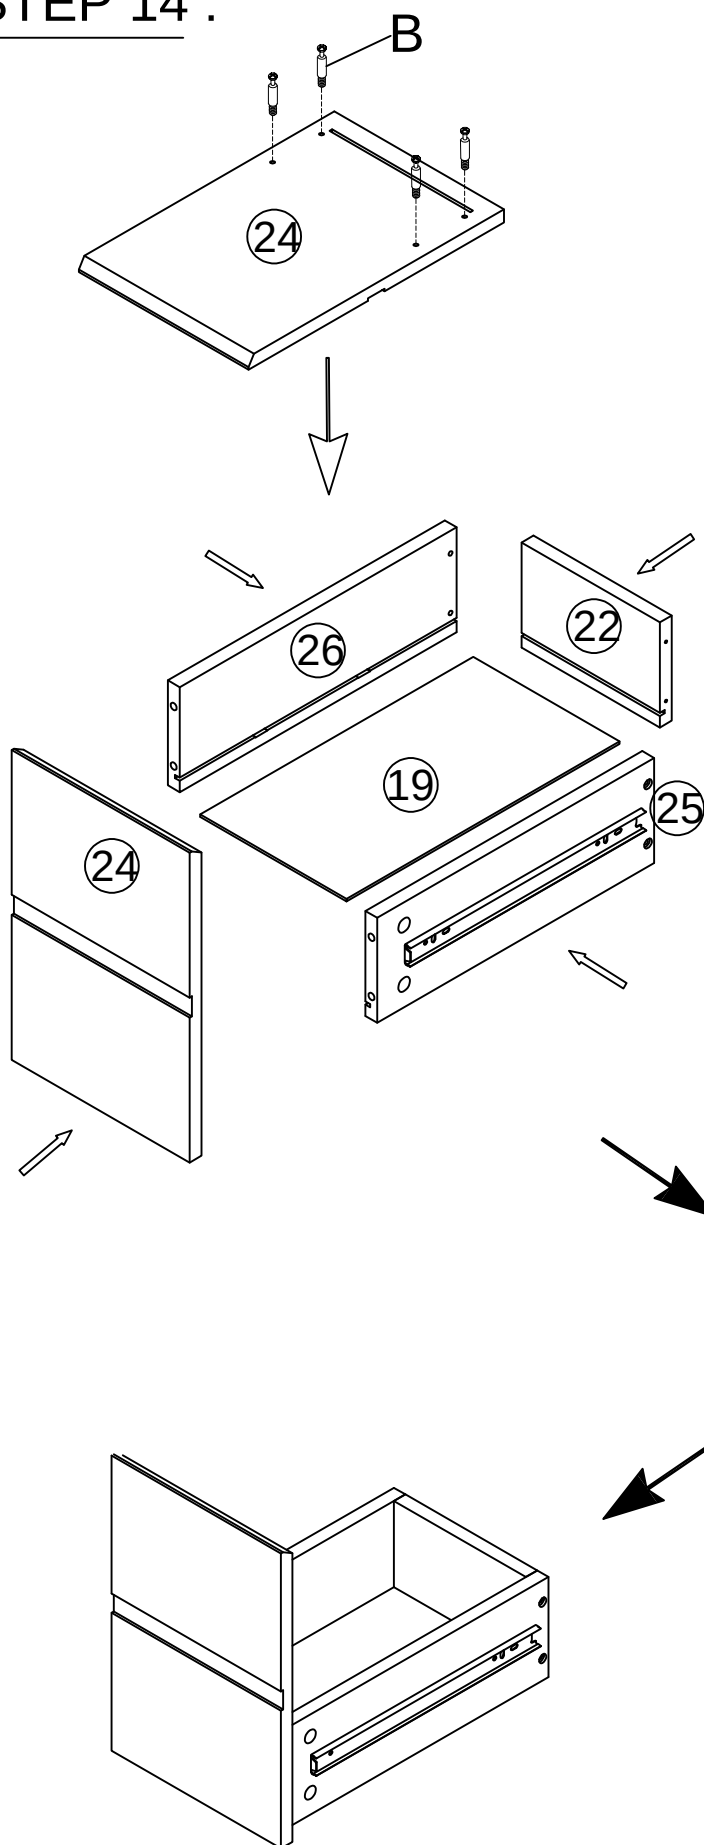

B  4 Pcs	C  4 Pcs
D  4 Pcs	E  4 Pcs





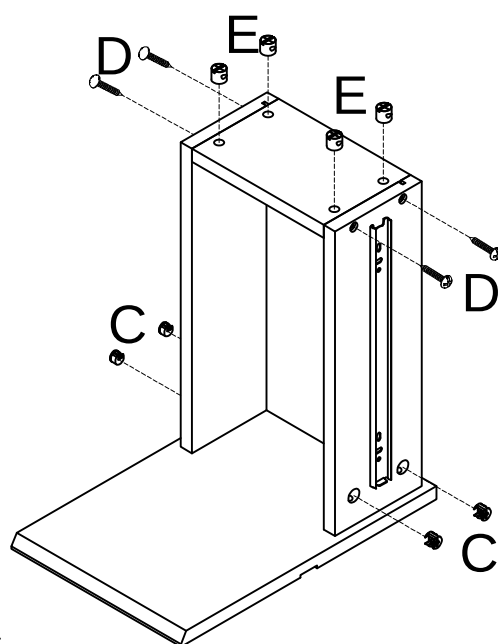


STEP 15 :

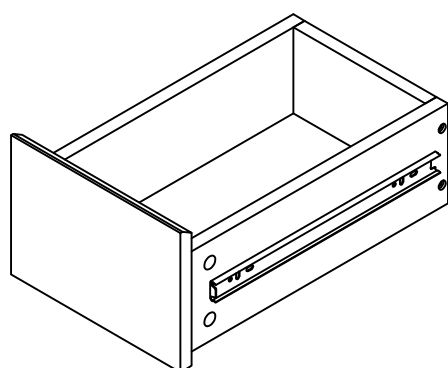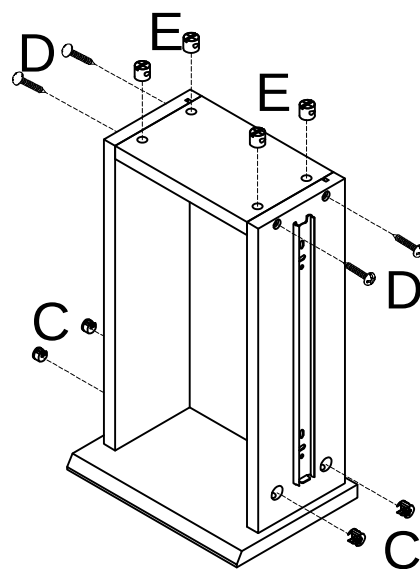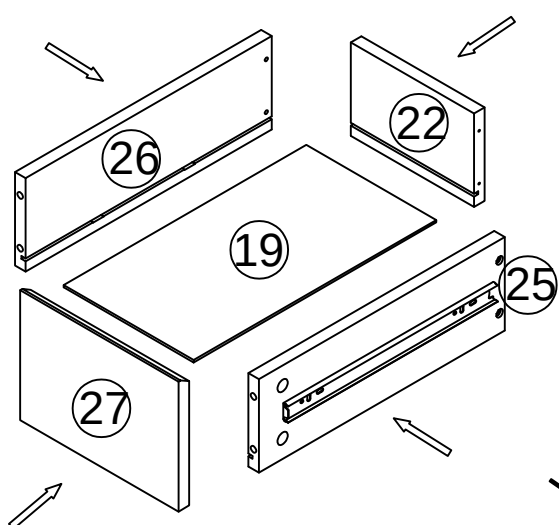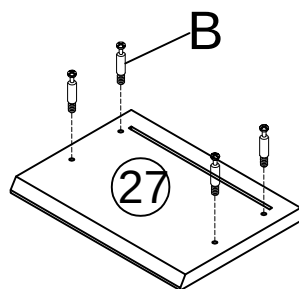


B  4 Pcs	C  4 Pcs
D  4 Pcs	E  4 Pcs

STEP 16 :

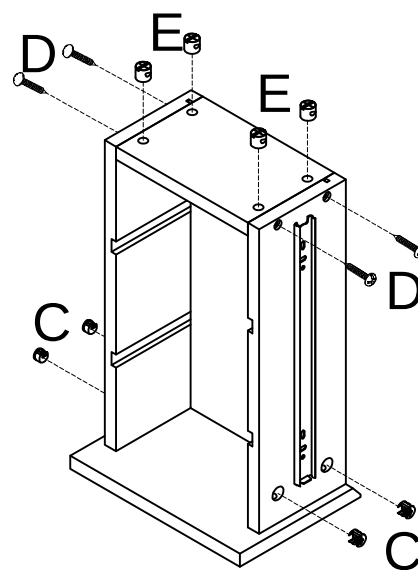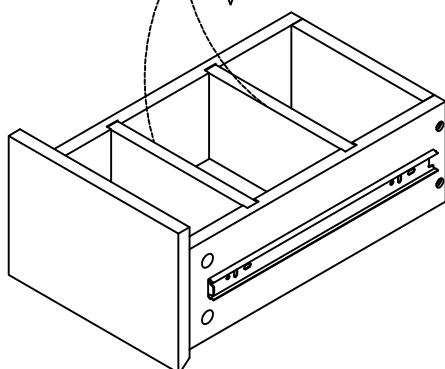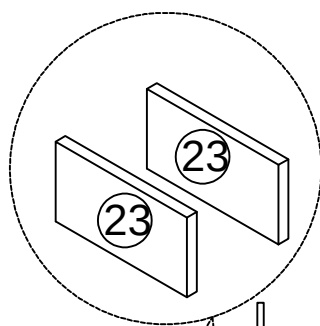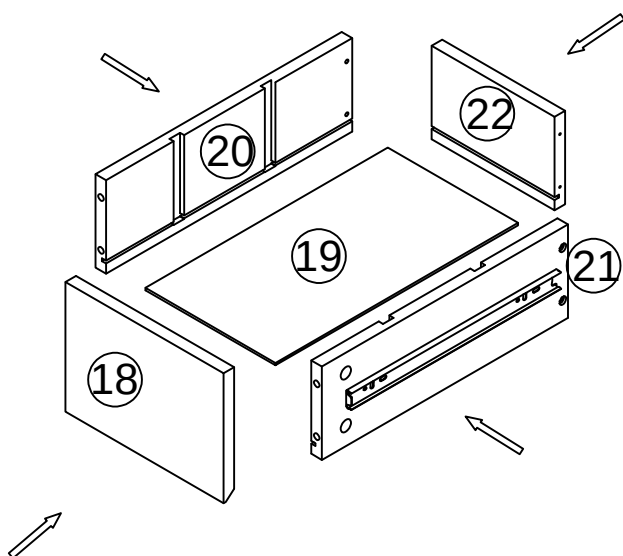
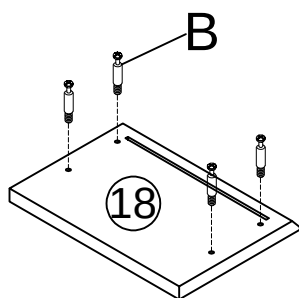


B  4 Pcs	C  4 Pcs
D  4 Pcs	E  4 Pcs


STEP 17 :

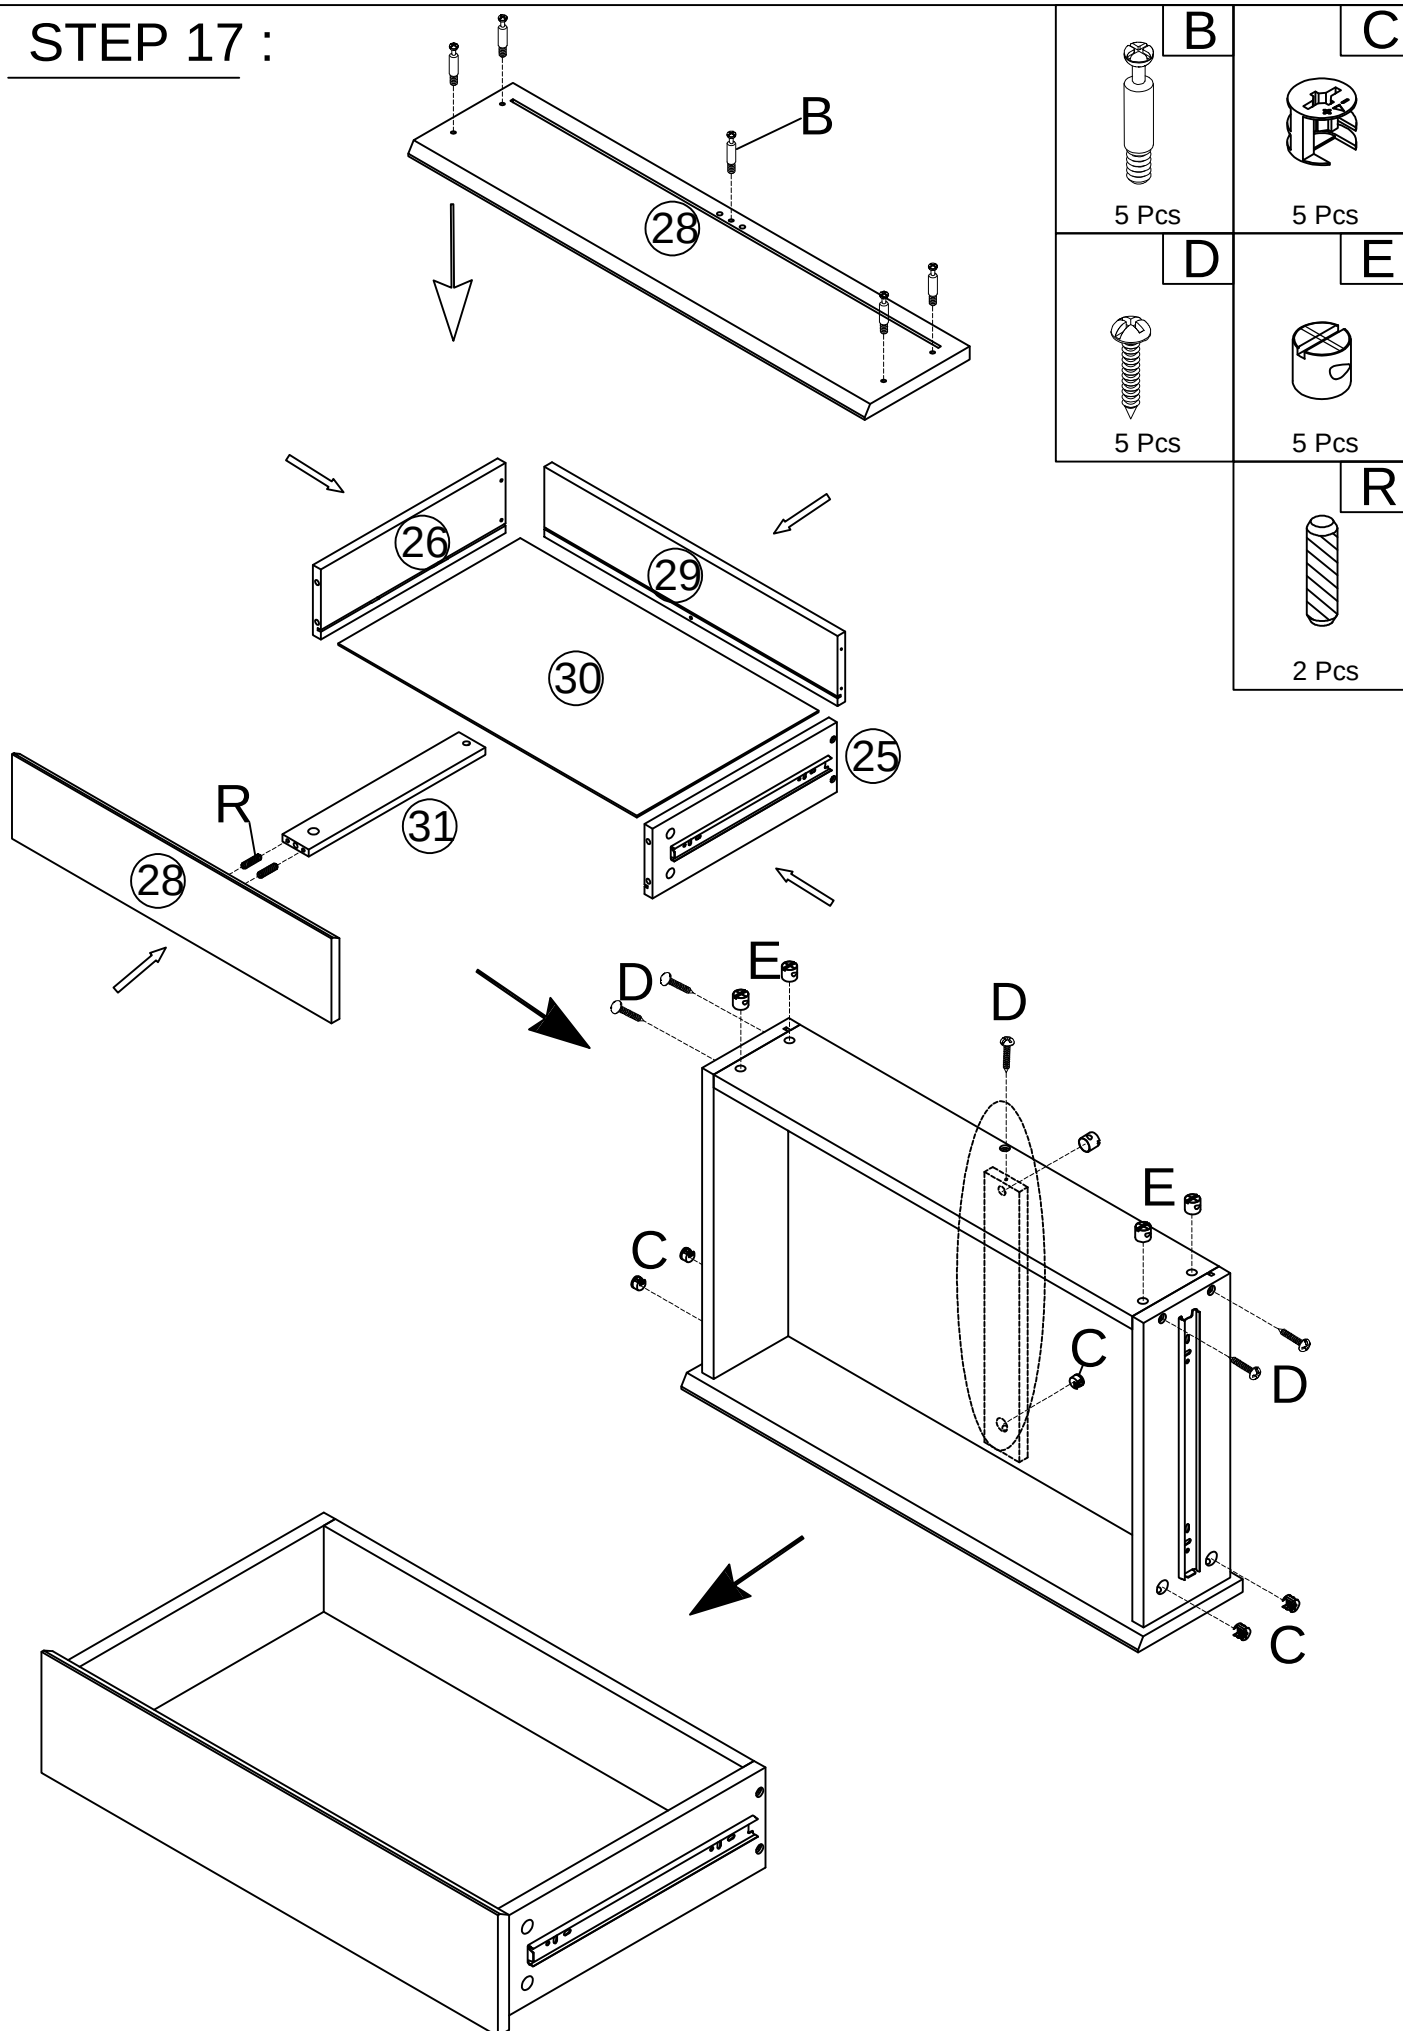


STEP 18 :

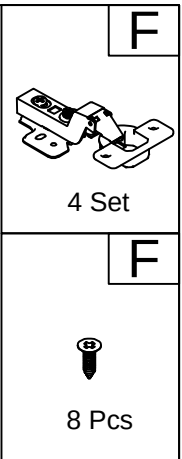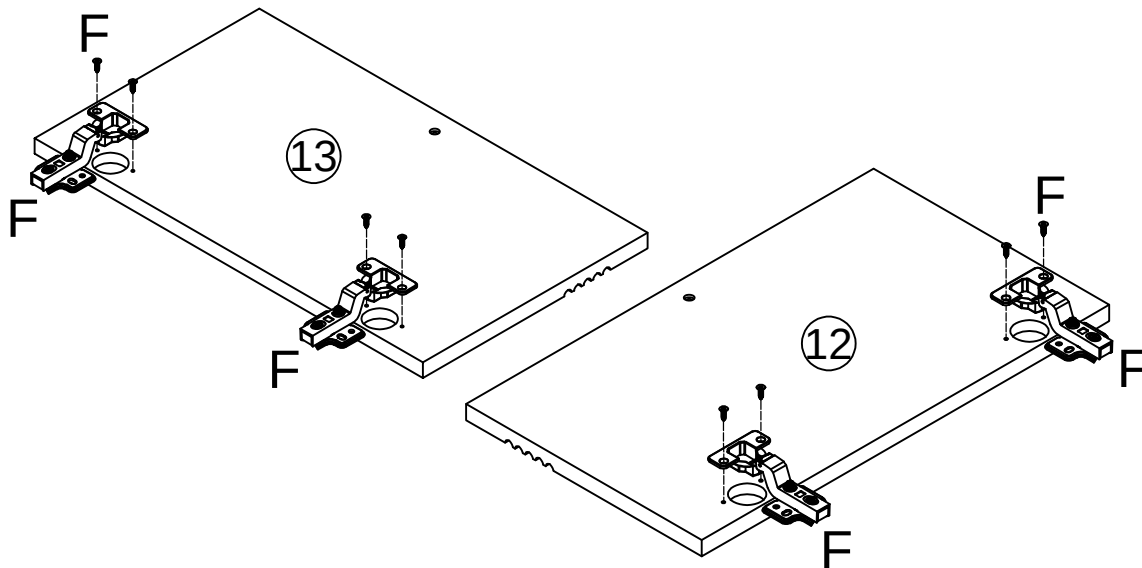

STEP 19 :

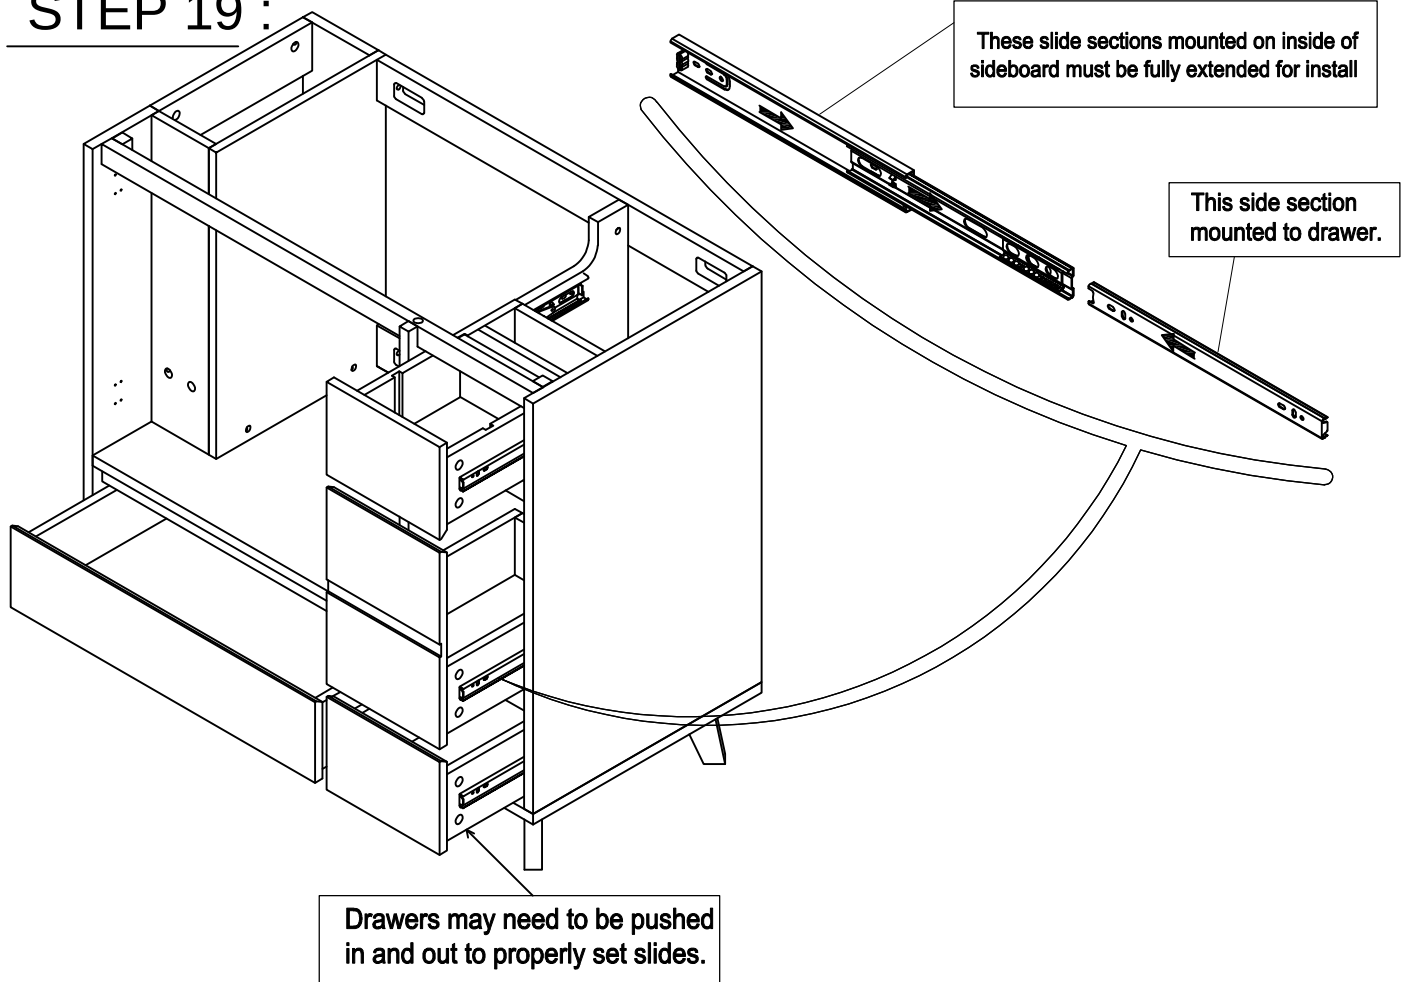

STEP 20 :

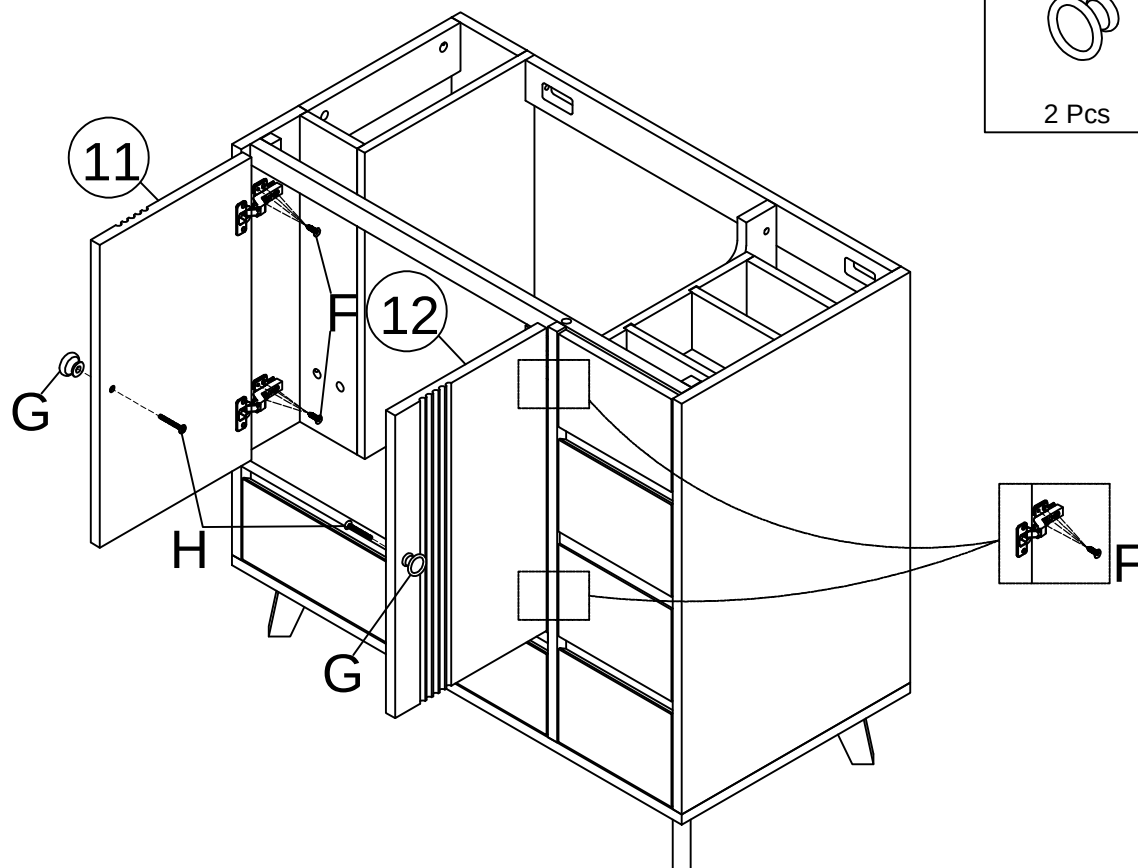

G



2 Pcs

H




2 Pcs

F





16 Pcs




F

STEP 21 :

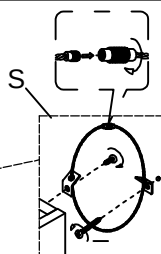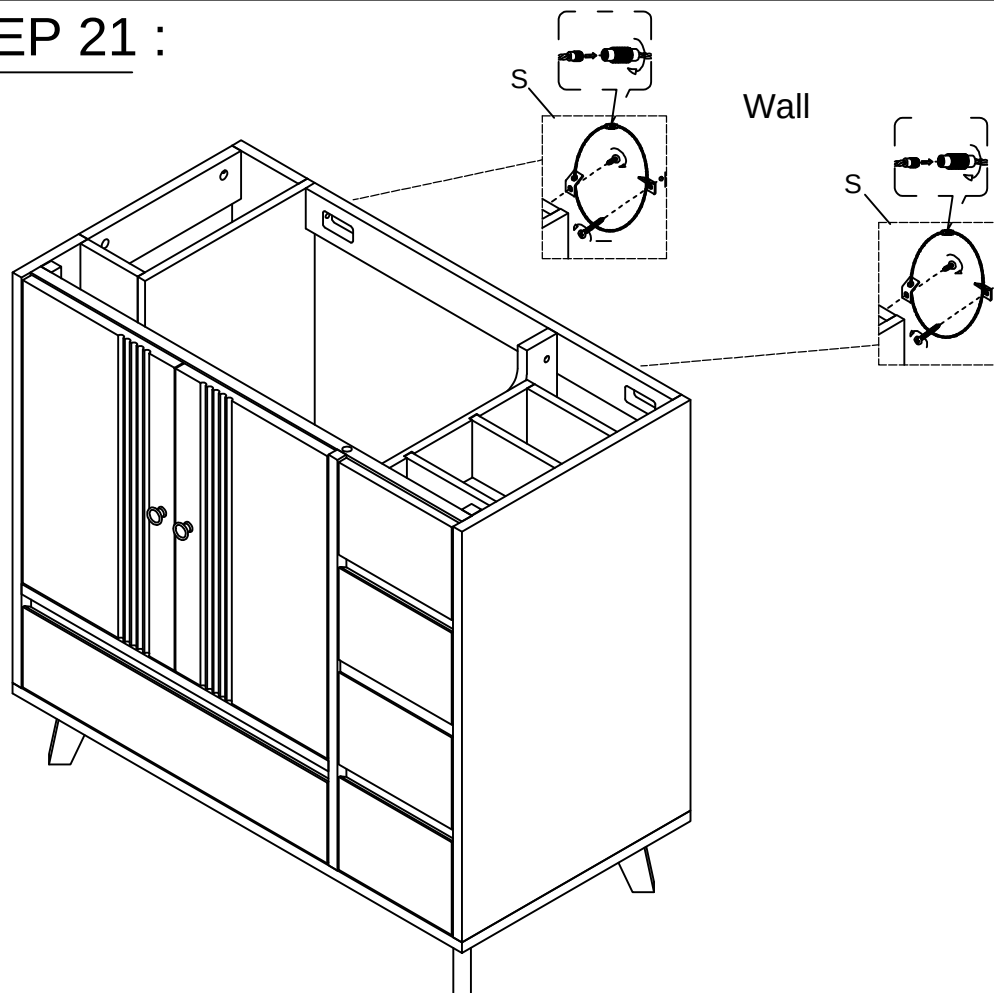


S

Wall

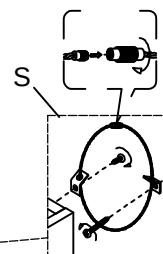


S

S




2 Set

STEP 22 :

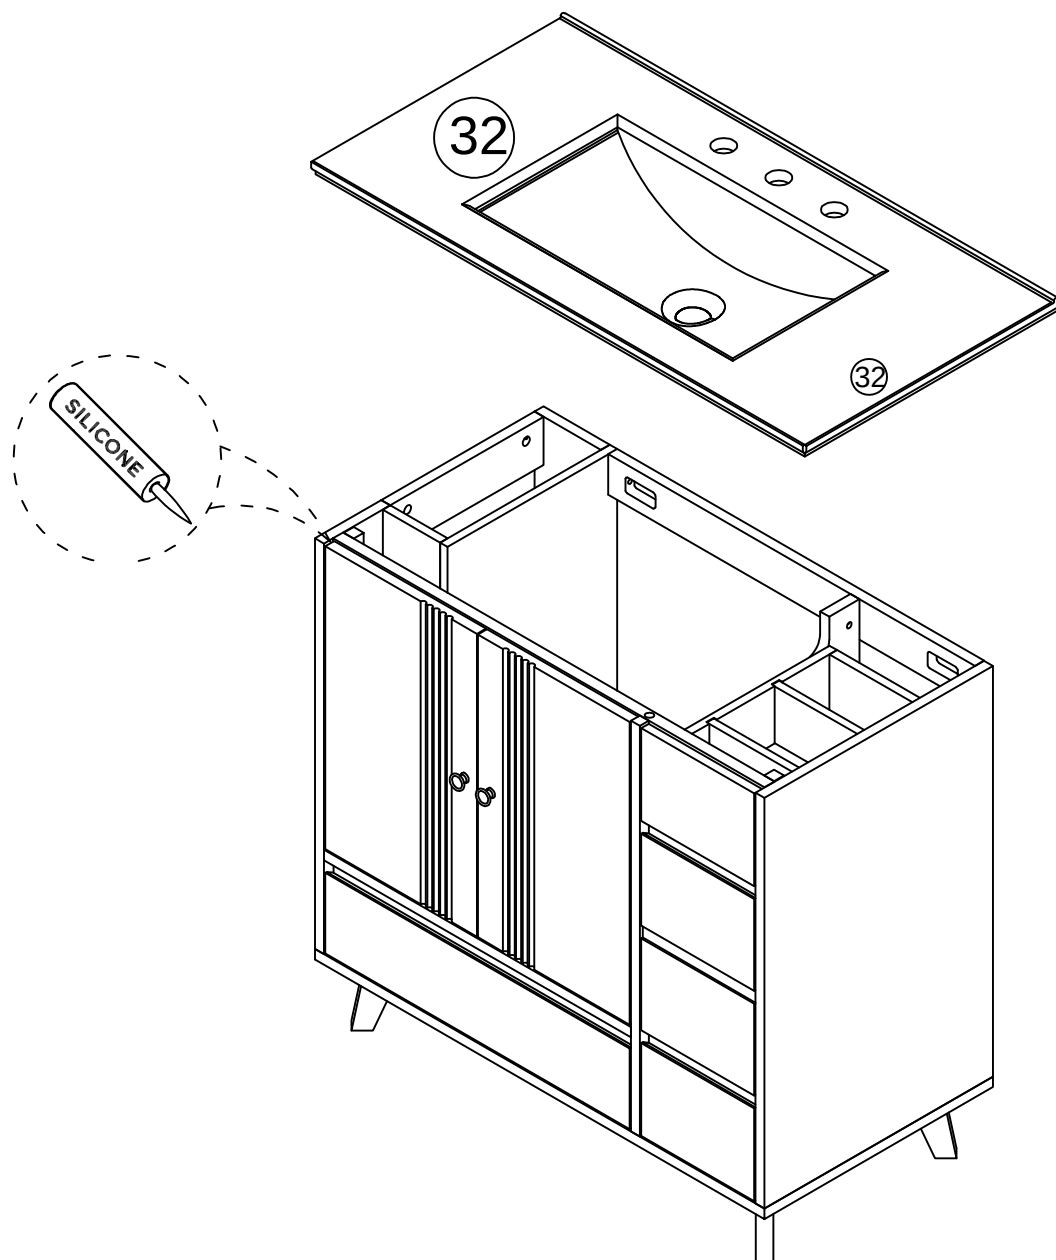


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP 23 :

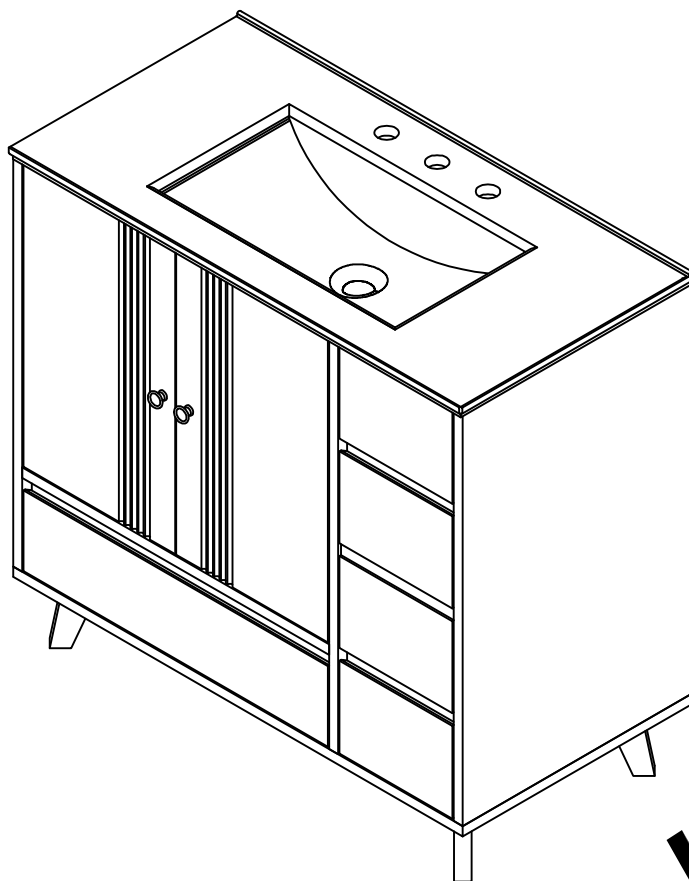


HINGE ADJUSTMENTS

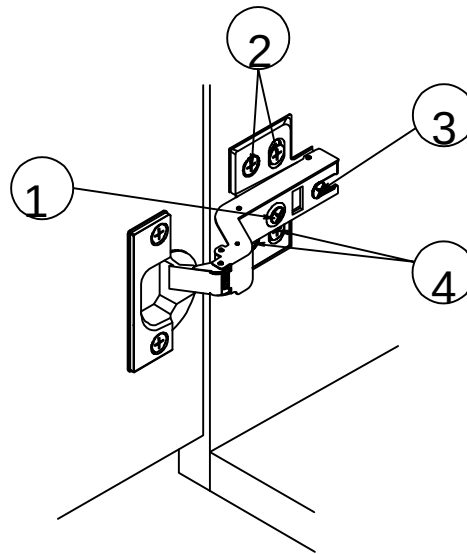


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

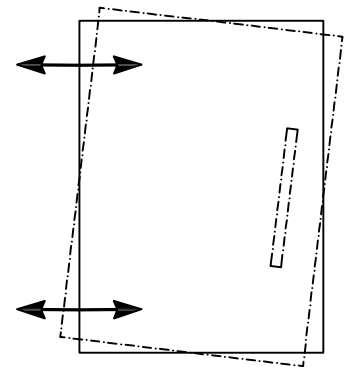

② ④ Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

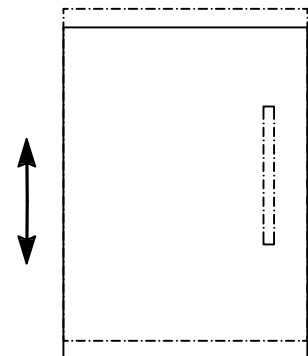

③ Forward and back adjustment

