

SLATTED ACOUSTIC PANEL INSTALLATION



Two recommended installation methods that can be used for walls and ceilings are:

1. Direct Glue Method:

This method involves applying a layer of adhesive directly onto the wall or ceiling surface and then affixing the sound-absorbing or sound-insulating materials to it. It's a simple and quick process that works well for both new constructions and retrofits.


2. Mechanical Fastening Method:

This method uses mechanical fasteners such as screws, nails, or clips to secure the materials to the wall or ceiling. It provides a more robust attachment and is particularly useful when dealing with heavier materials or when a higher level of security is required.

Tools Required:



1、 Direct Glue Method:

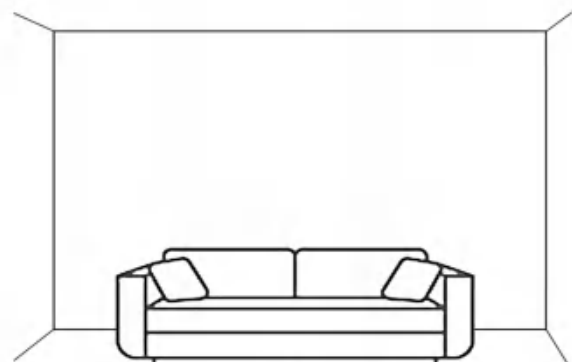


STEP 1

Select the Wall for Installation



STEP 2

Measure the wall and mark on the slat wood panel

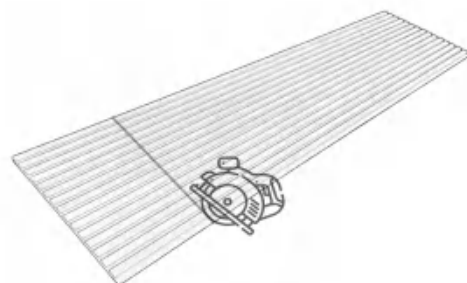


STEP 3

Cut the Slat wood panel




STEP 4

Apply glue evenly to the back of the slat wood panel

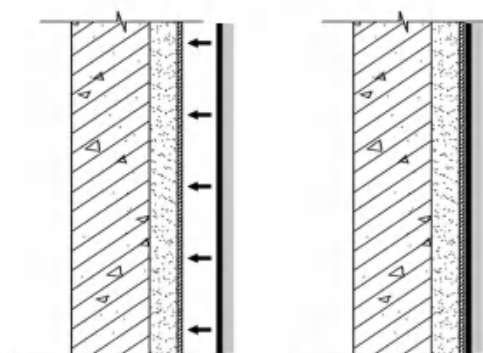


STEP 5

Attach the slat wood panel with the glue applied to the back to the wall

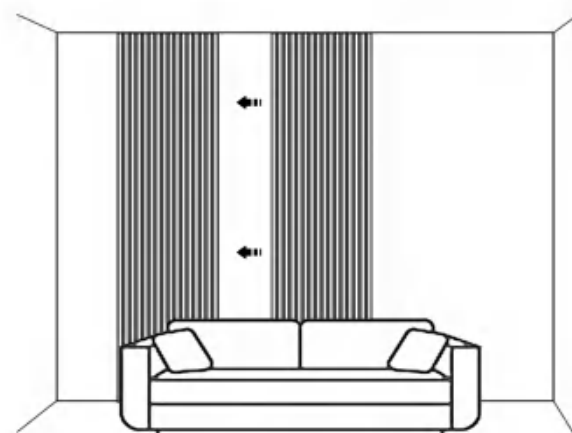

STEP 6

Sequentially join and paste the subsequent slats onto the wall

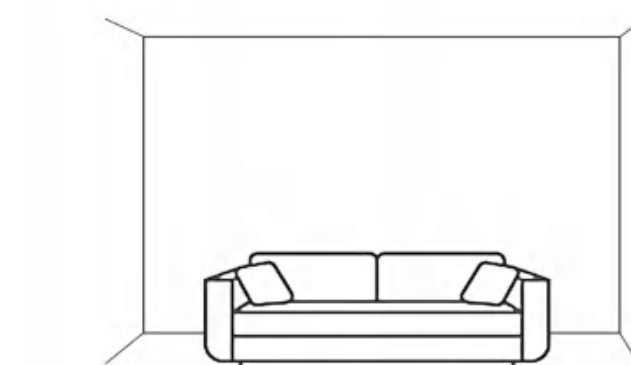


STEP 1

Select the Wall for Installation




STEP 2

Measure the wall and mark on the slat wood panel

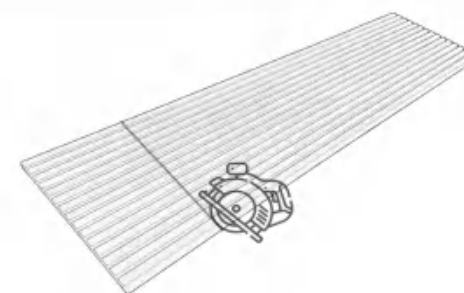


STEP 3

Cut the Slat wood panel

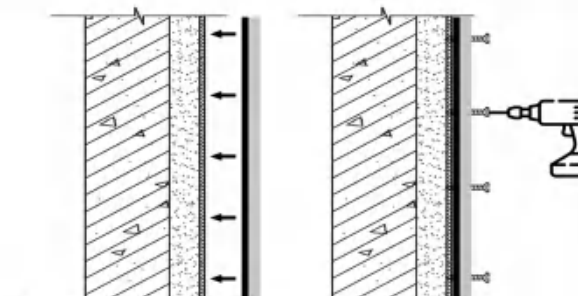


STEP 4

Affix the slats to the wall and fasten them with screws

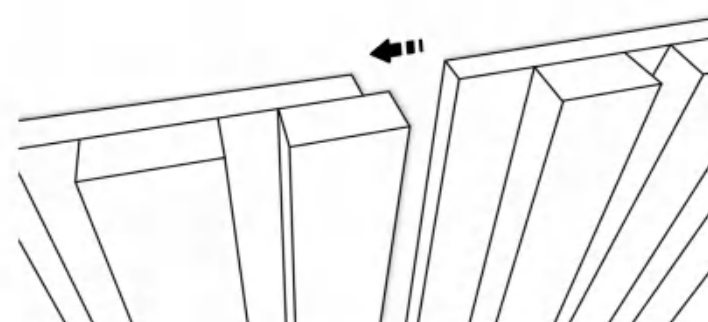

STEP 5

Join the subsequent slats together and fix them to the wall

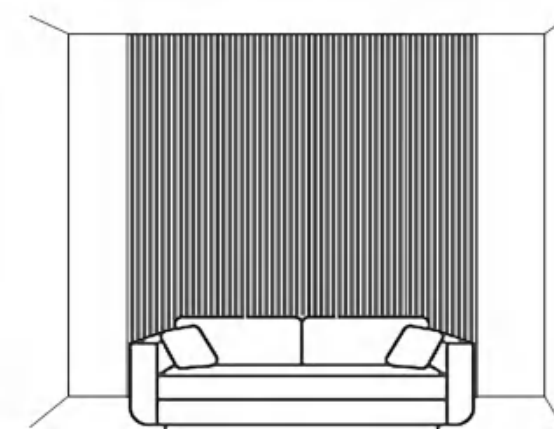

STEP 6

Complete your project and admire your work !