

assembly

SOFA





30mn

4x

1x

12x 6x35

4 1x

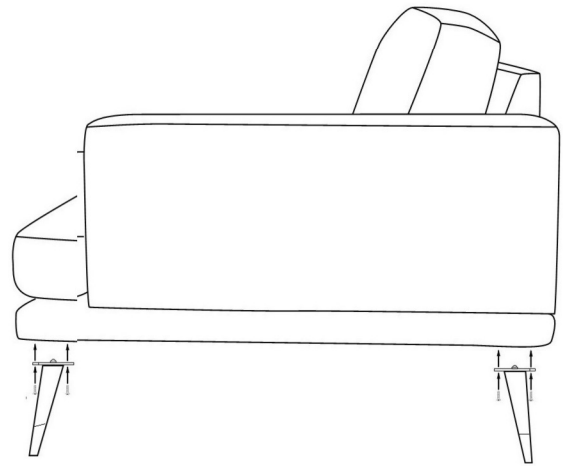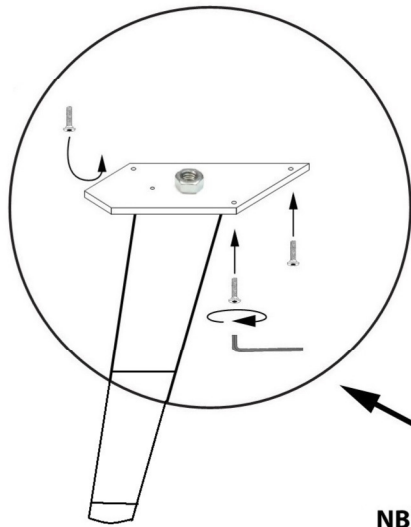

NB! First turn all 3 screws half way by hand and then continue with the Allen key.

