


installation manual

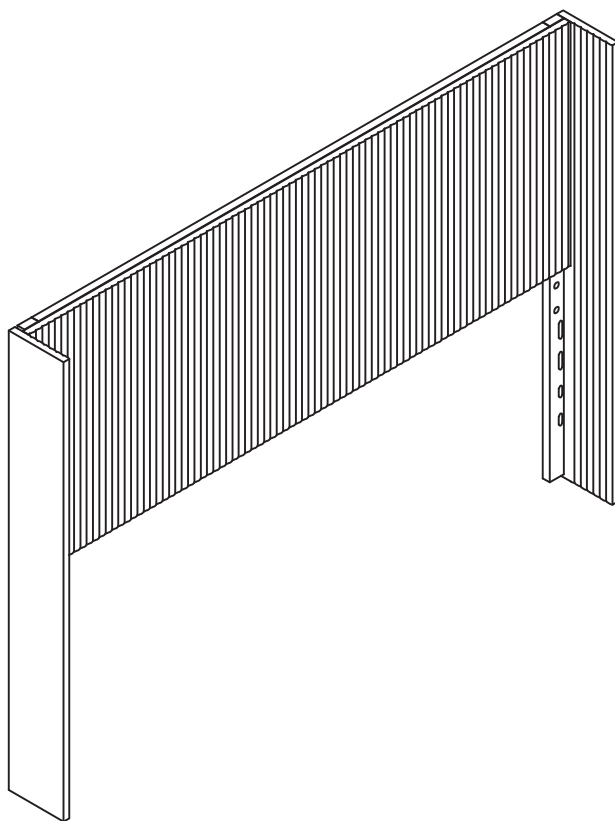

WARNING!!


Furniture Tipping Risk.

Serious risk of severe or fatal crush injuries can occur from furniture tipping over if not secured.


















Children like to climb on furniture and Unsecured furniture can pose a serious danger.

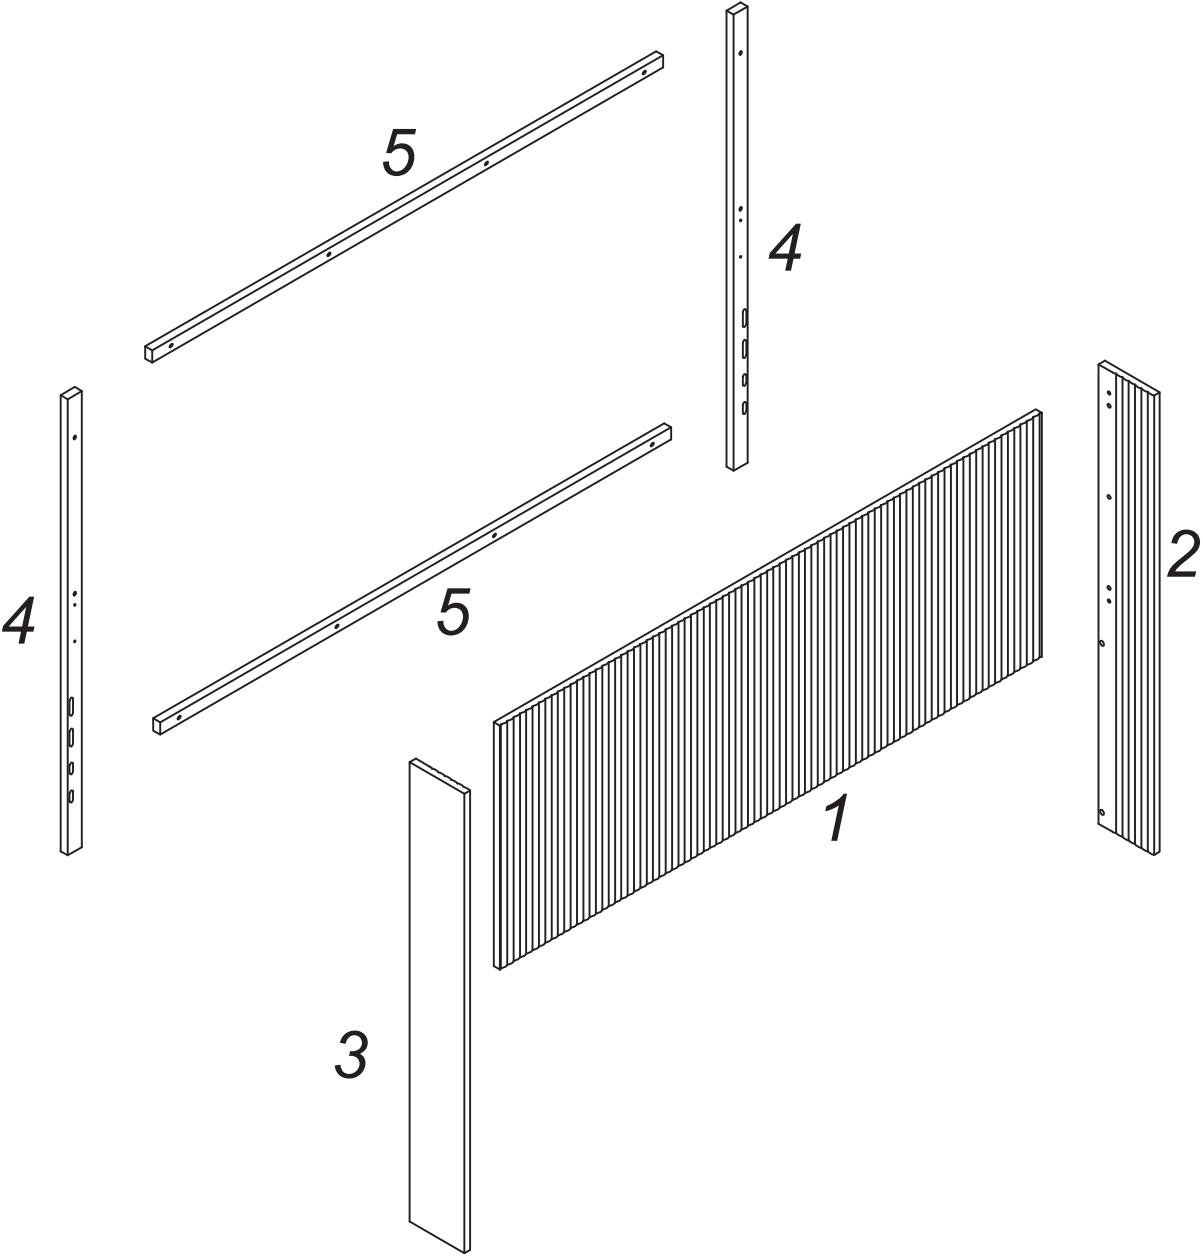Please follow all instructions and install the tip-over restraints provided.




Components

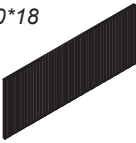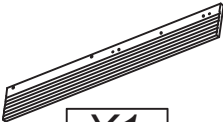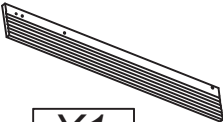



Hardware



1				
1539*600*18				
				
X1				
2				
1130*156*18				
				
X1				
3				
1130*156*18				
				
X1				
4				
1130*20*40				
				
X2				
5				
1460*20*30				
				
X2				
A				
				
X6				
B				
				
X6				
C				
				
Φ8x30				
X4				
D				
				
X1				
E				
				
X4				
F				
				
M3.5x50				
X4				
G				
				
M6x30				
X13				
H				
				
M6x50				
X4				
V				
				
M8x60				
X4				
W				
				
X1				
X				
				
M8				
X4				
Y				
				
X4				


01

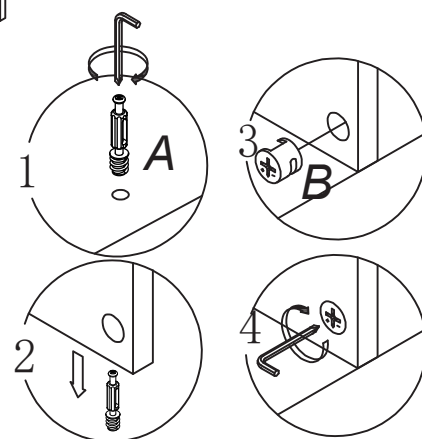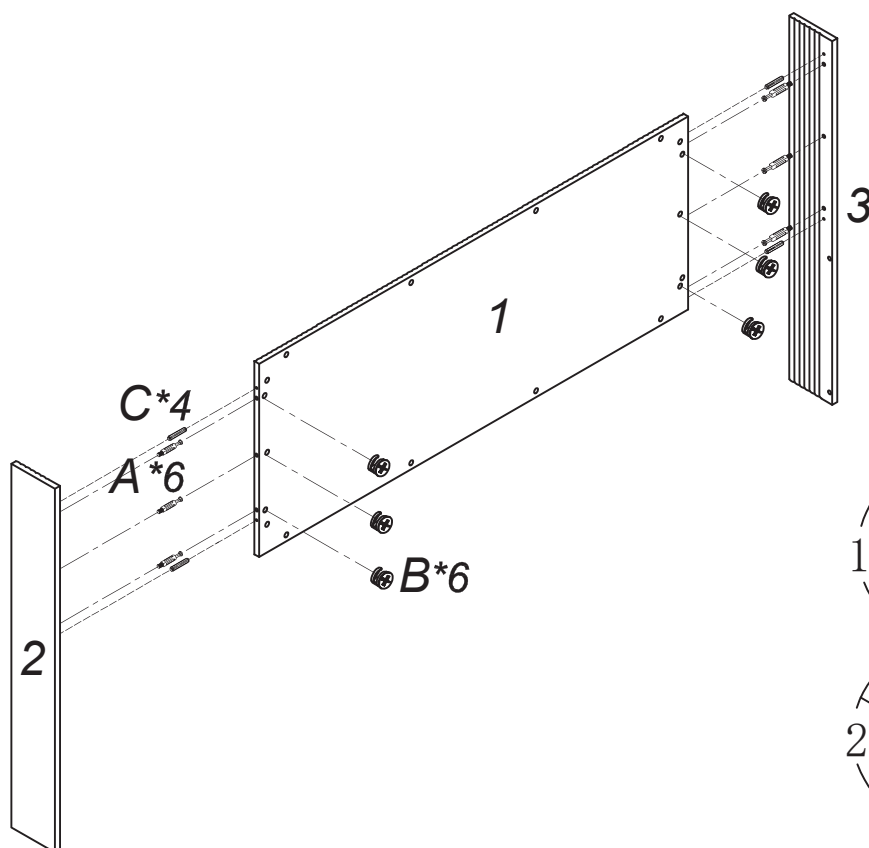B	A	C
		
6PCS	6PCS	4PCS



02

G	H
	
4PCS	4PCS

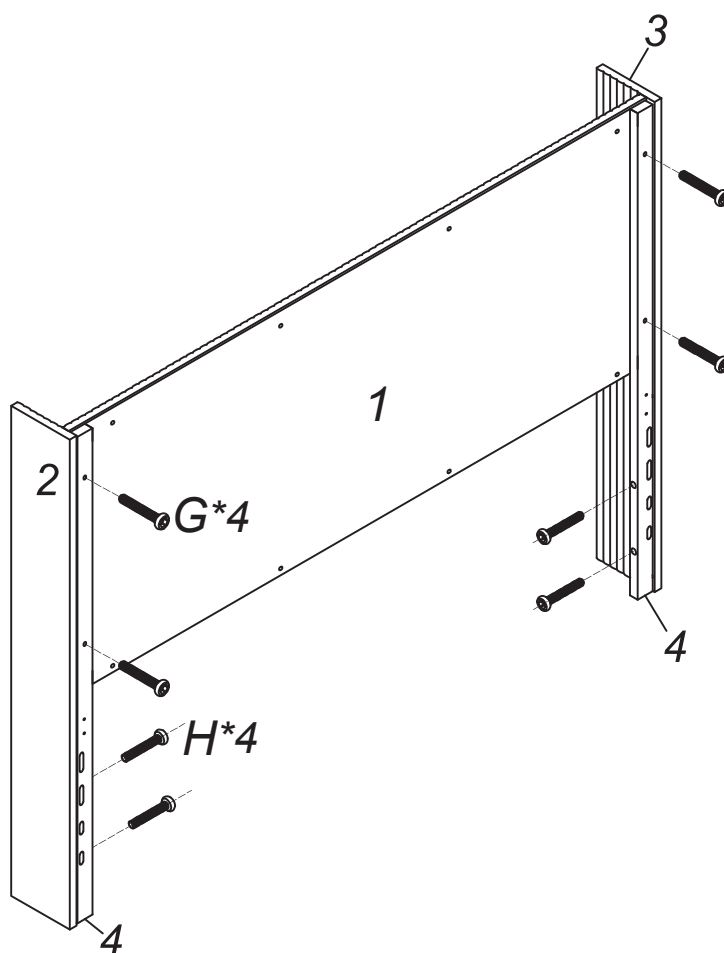


03


G





8PCS

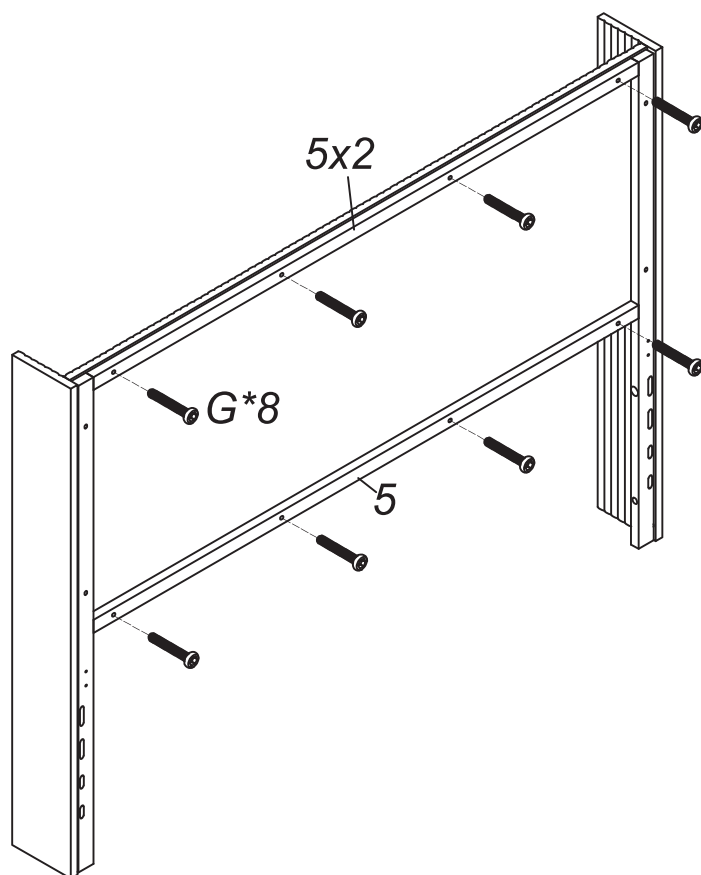


04

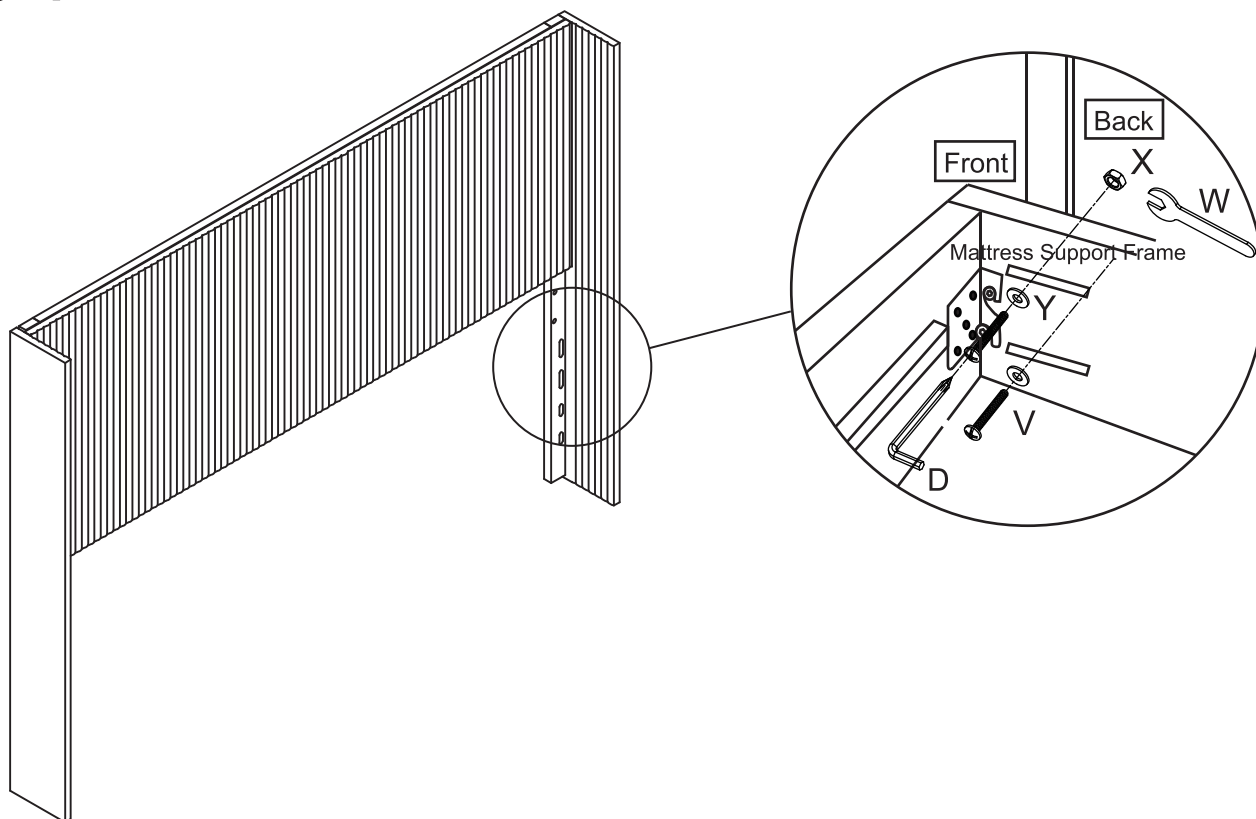

05

F	E
	
4PCS	4PCS

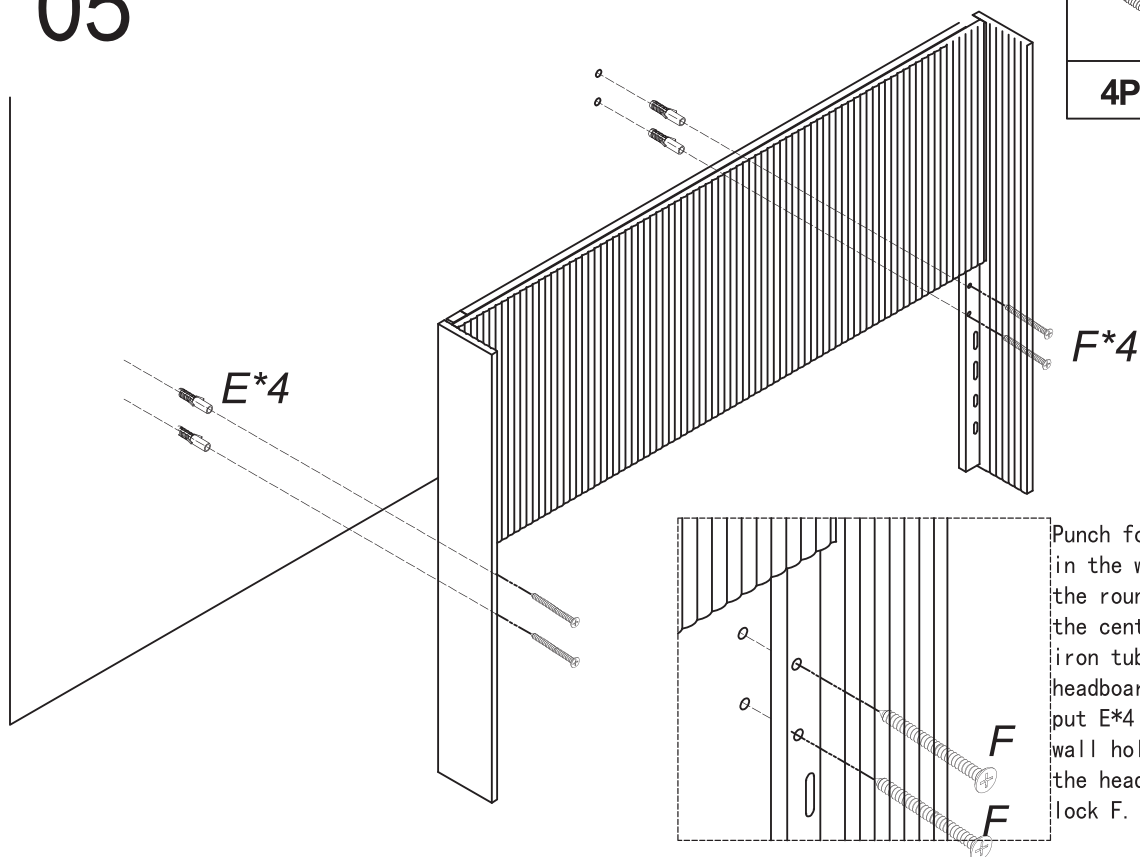

Punch four 6mm holes in the wall where the round hole is in the centre of the iron tube of the headboard (4). Then put E*4 into the wall holes and move the headboard to lock F.