
ASSEMBLY INSTRUCTIONS

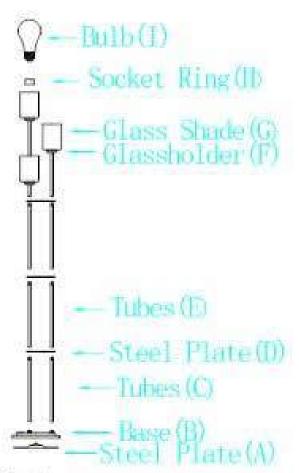

- Carefully unpack and identify all parts.
- Place the base(B) on floor and then screw tube(C) on the base, then
 put the steel plate(D) and screw tube(E) with tube(C). Repeat others.
- Unscrew steel plate(A) from base(B) pull excess wiring through steel plate(A), then screw steel plate(A) back on to base(B).
- 4. Place the glass shade(G)on the glassholder(F) and secure with socket ring(H).
- Use 60 watt(maximum) incandescent A type bulb(H) to install. (bulbs not included)
- 6. Plug into outlet, turn on lamp and enjoy.

IMPORTANT SAFTY INSTRUCTIONS

This portable lamp has a polarized plug(one blade is wider than the other), as a feature to reduce the risk of electric shock. This plug will fit in a polarzied outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully

- * PERSE PRINTER TOUR DEMLER IMMEDIATELY IN CASE OF ANY PARTS SHORTAGE
- * SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.